

# ASSEMBLY INSTRUCTION


---

## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.


Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

ITEM#:223111 263507 263508

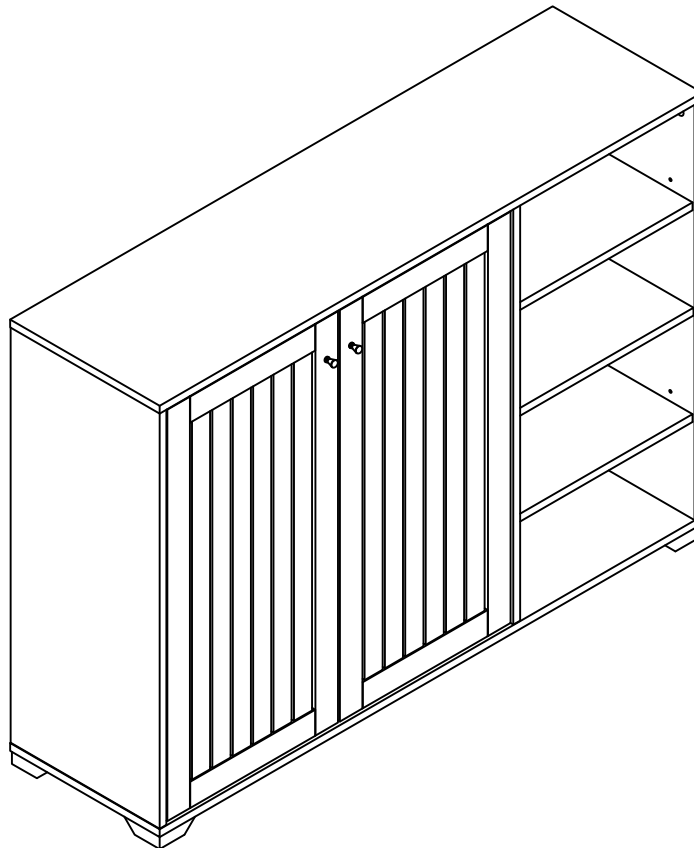

# PARTS IDENTIFICATION





ITEM#:223111 263507 263508

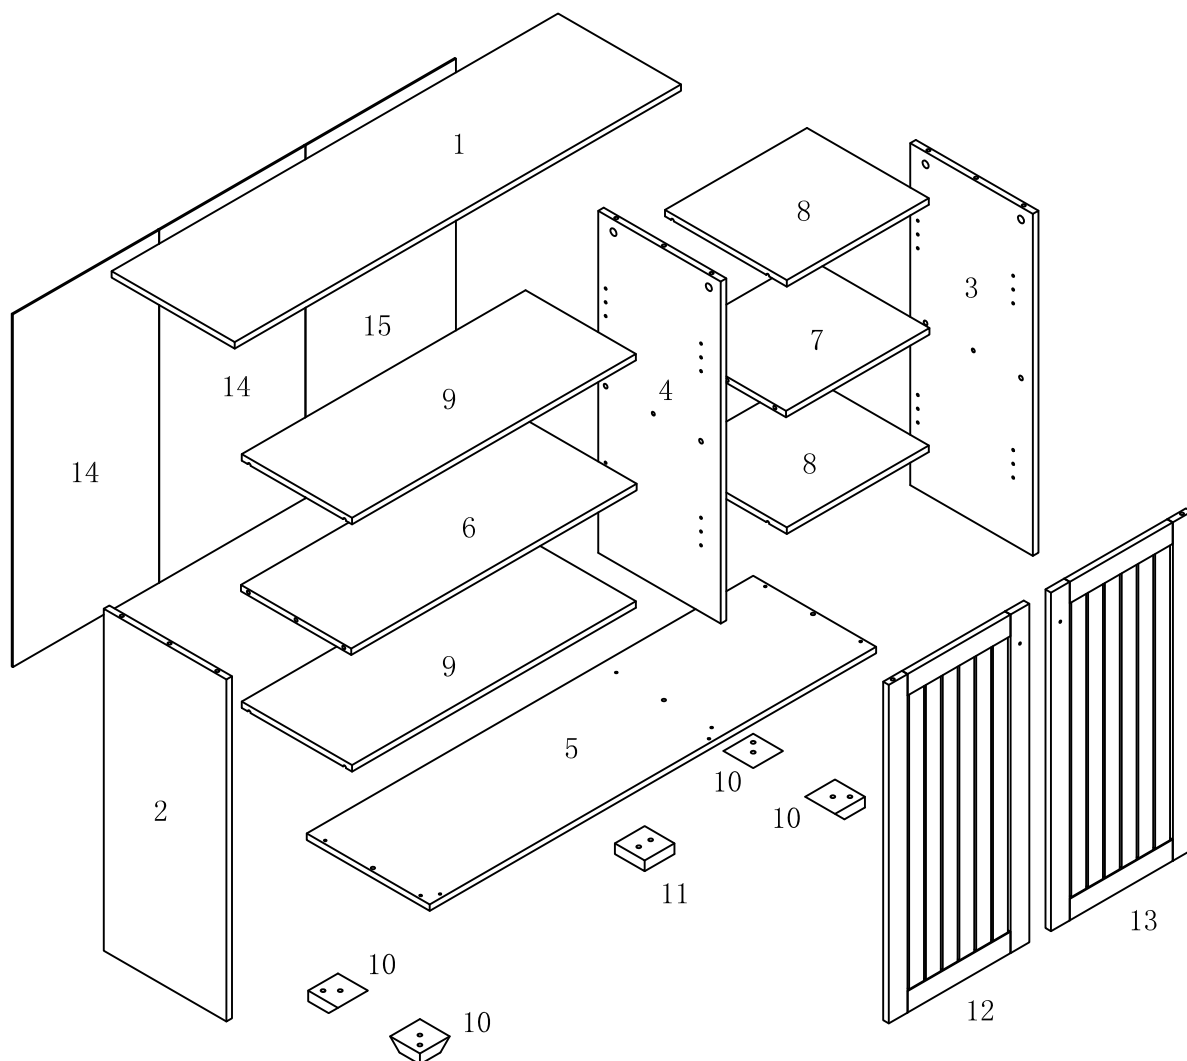

|     |      |      |      |      |     |
|-----|------|------|------|------|-----|
| (1) | 1pc  | (8)  | 2pcs | (15) | 1pc |
| (2) | 3pcs | (9)  | 2pcs |      |     |
| (3) | 1pc  | (10) | 4pcs |      |     |
| (4) | 1pc  | (11) | 1pc  |      |     |
| (5) | 1pc  | (12) | 1pc  |      |     |
| (6) | 1pc  | (13) | 1pc  |      |     |
| (7) | 1pc  | (14) | 2pcs |      |     |



# HARDWARE IDENTIFICATION


ITEM#:223111 263507 263508

|   |                                                                                     |                         |       |
|---|-------------------------------------------------------------------------------------|-------------------------|-------|
| A |    | L29                     | 14PCS |
| B |    | $\Phi 15$               | 14PCS |
| C |    | $\Phi 8 \times 25$      | 10PCS |
| D |    |                         | 2SET  |
| E |    | $\Phi 4 \times 40$      | 6PCS  |
| F |    | $\Phi 4 \times 35$      | 10PCS |
| G |    |                         | 2PCS  |
| H |    |                         | 40PCS |
| I |    | $\Phi 3 \times 16$      | 8PCS  |
| J |    | $\Phi 16$               | 5PCS  |
| K |    |                         | 2PCS  |
| L |    | $\Phi 4 \times 20$      | 2PCS  |
| M |  | $197 \times 5 \times 1$ | 1PC   |
| N |  | $\square 4 \times 25$   | 1PC   |
| O |  | $\square 5 \times 40$   | 1PC   |
| P |  | $\square 8 \times 40$   | 1PC   |
| Q |  | $12 \times 12 \times 1$ | 2PCS  |
| R |  | $\Phi 22$               | 6PCS  |
| S |  | $\square 5 \times 15$   | 16PCS |
| T |  |                         | 2PCS  |

# HARDWARE IDENTIFICATION


ITEM#:223111 263507 263508
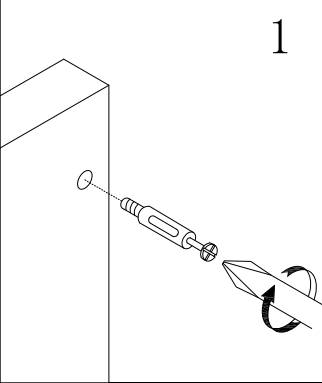
| HOW TO                                                                                        | 1                                                                                 | 2                                                   | 3                                      | 4                                                   |
|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------|----------------------------------------|-----------------------------------------------------|
| <br>Cam Bolt  |  |                                                     |                                        |                                                     |
| <br>Cam Lock | 1. Screw Cam Bolt into panel.                                                     | 2. Insert Cam Bolt into bolt hole of joining panel. | 3. Insert Cam Lock. arrow facing bolt. | 4. Gently turn Cam Lock clockwise to lock position. |

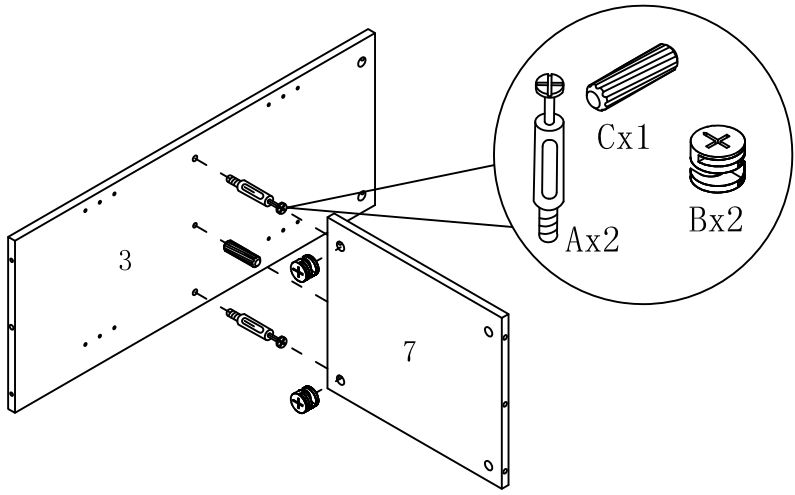


STEP1

STEP2

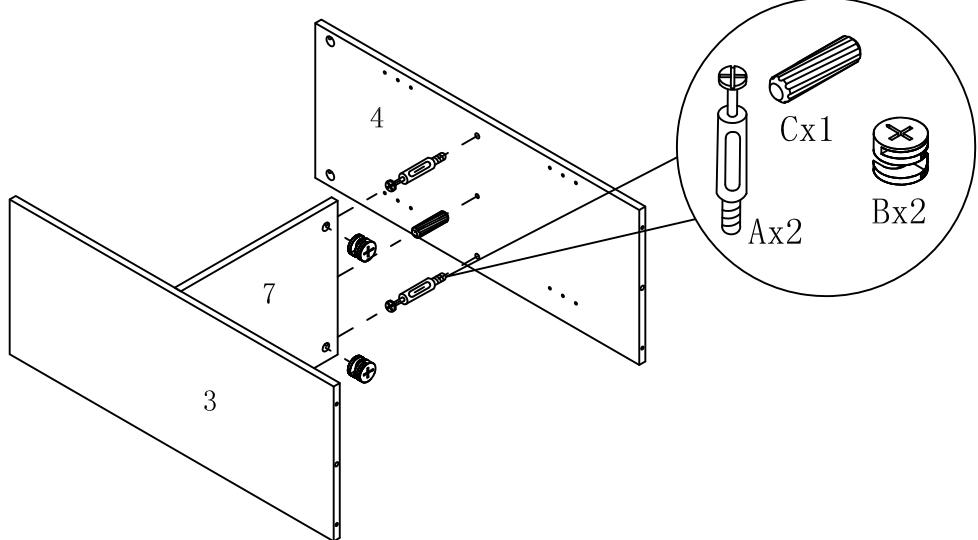


# HARDWARE IDENTIFICATION

ITEM#:223111 263507 263508

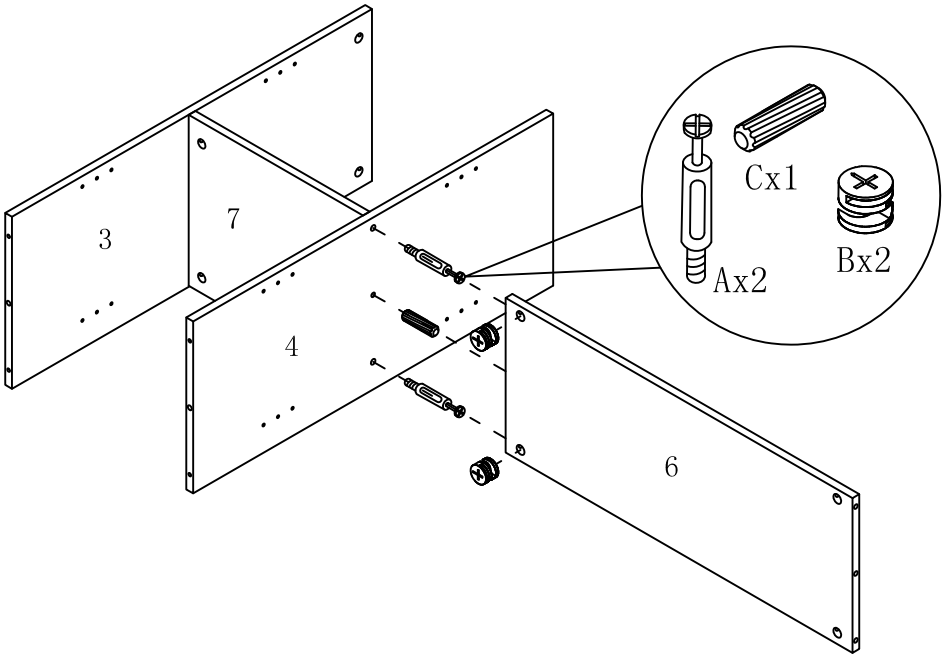


STEP3

STEP4

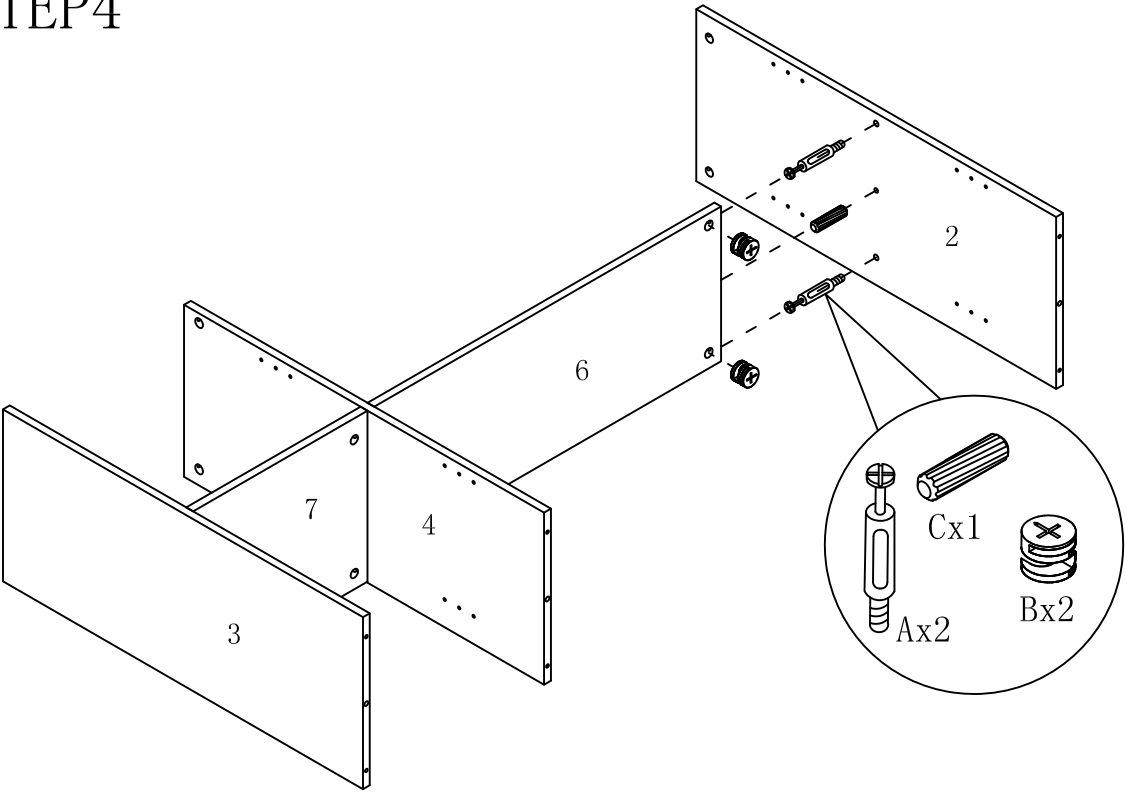


# HARDWARE IDENTIFICATION

ITEM#:223111 263507 263508

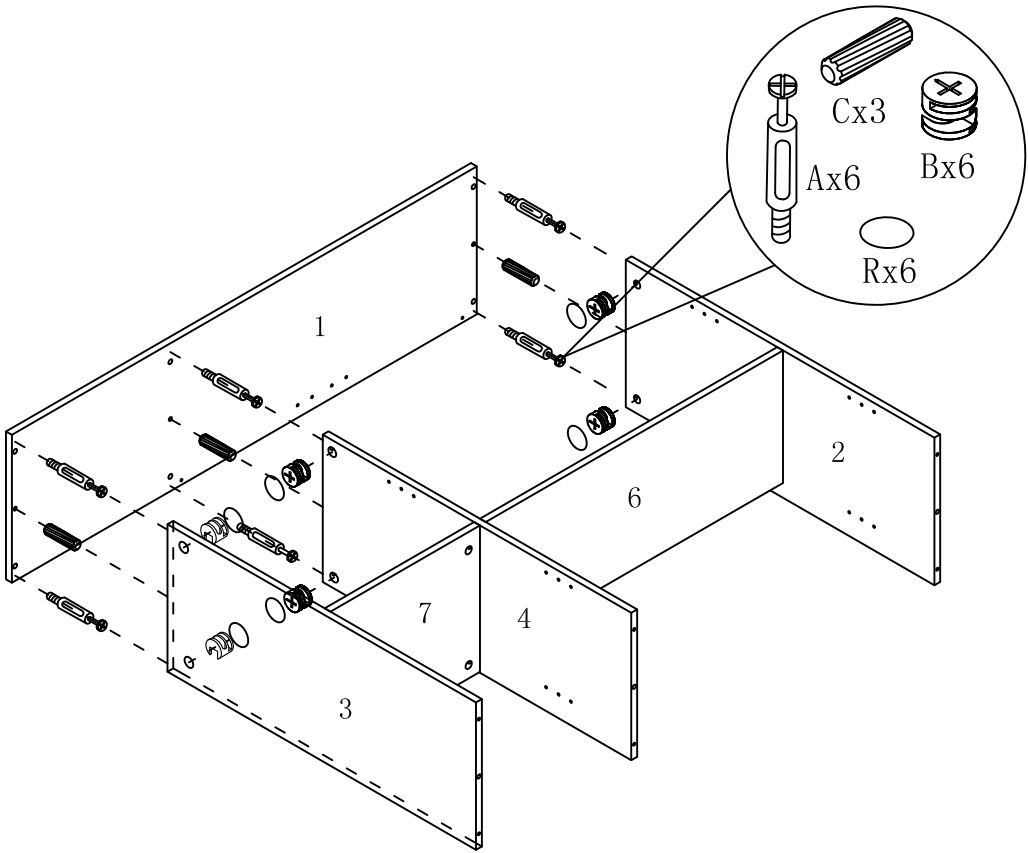


STEP5

STEP6

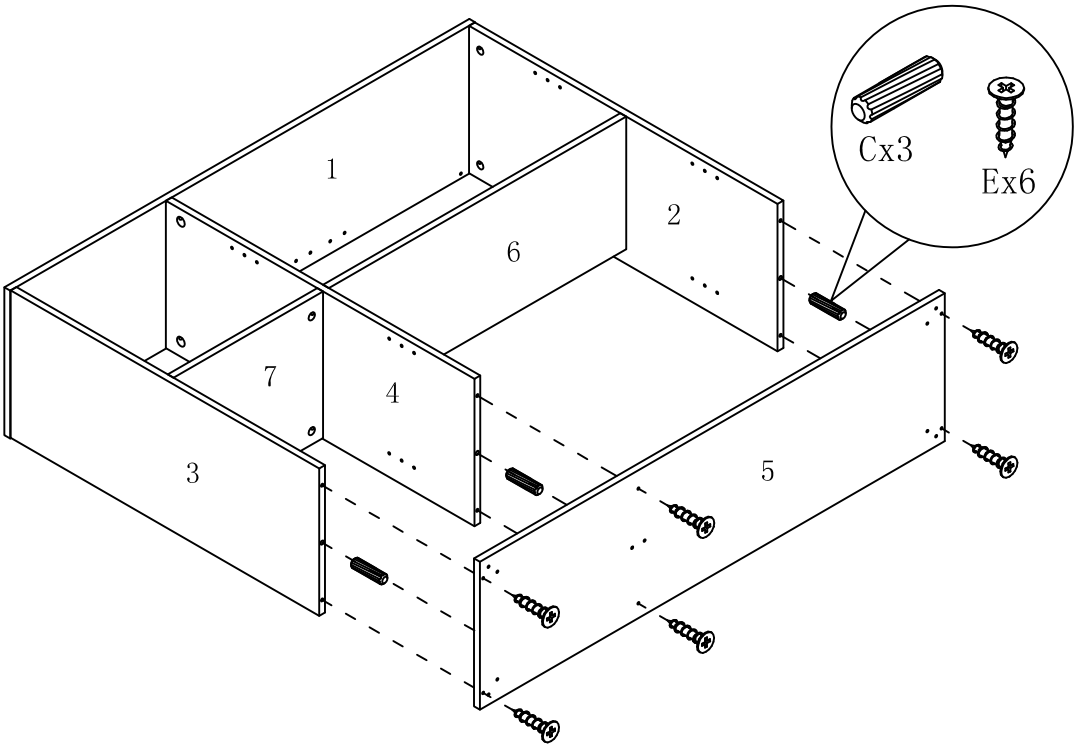



# HARDWARE IDENTIFICATION

ITEM#:223111 263507 263508

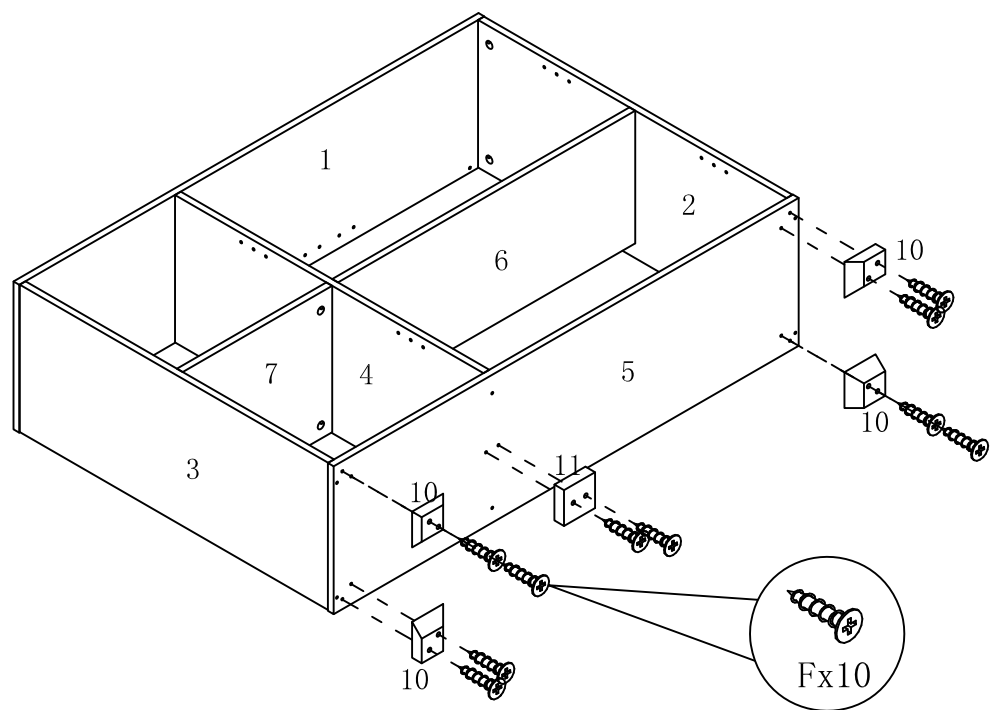


STEP7

STEP8

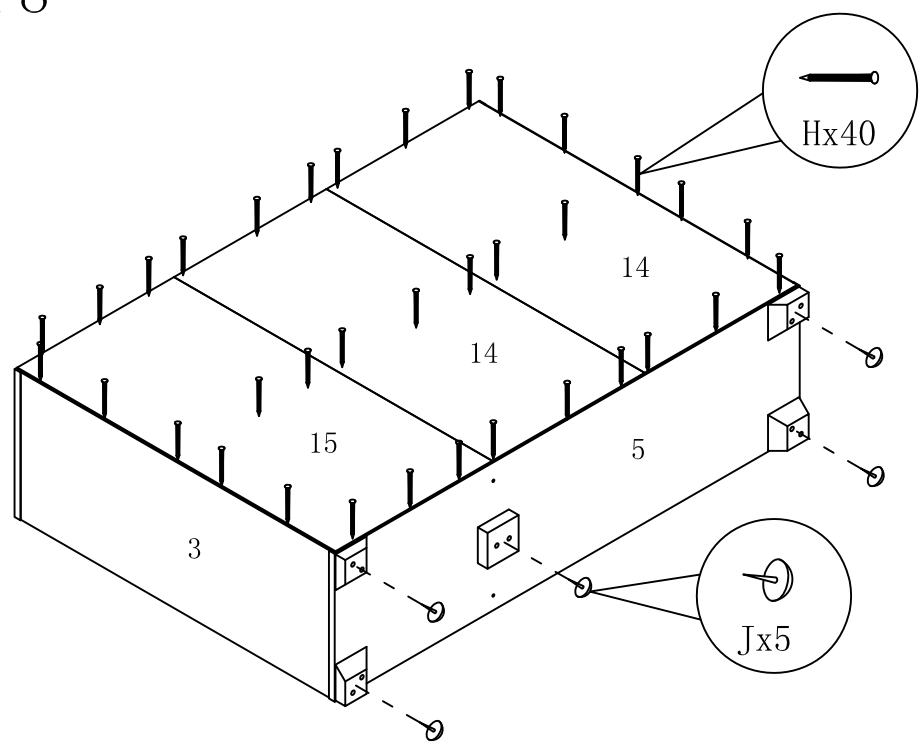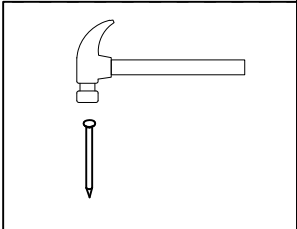


# HARDWARE IDENTIFICATION

ITEM#:223111 263507 263508

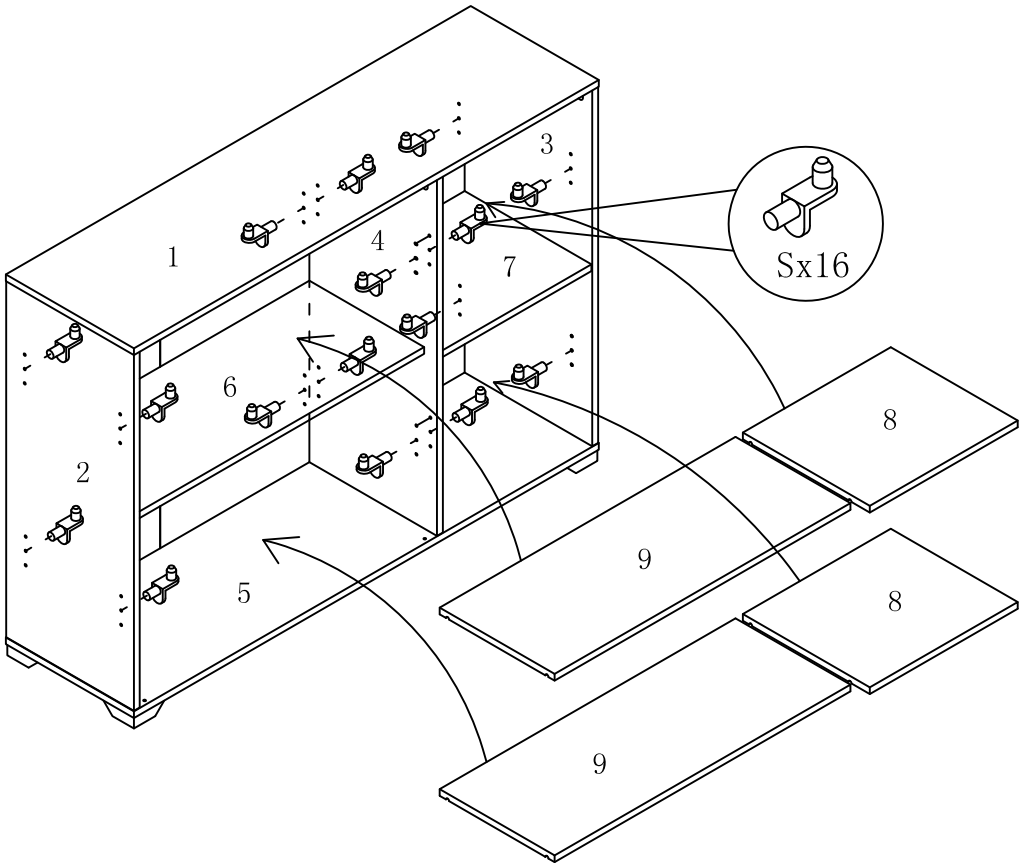


STEP9

STEP10

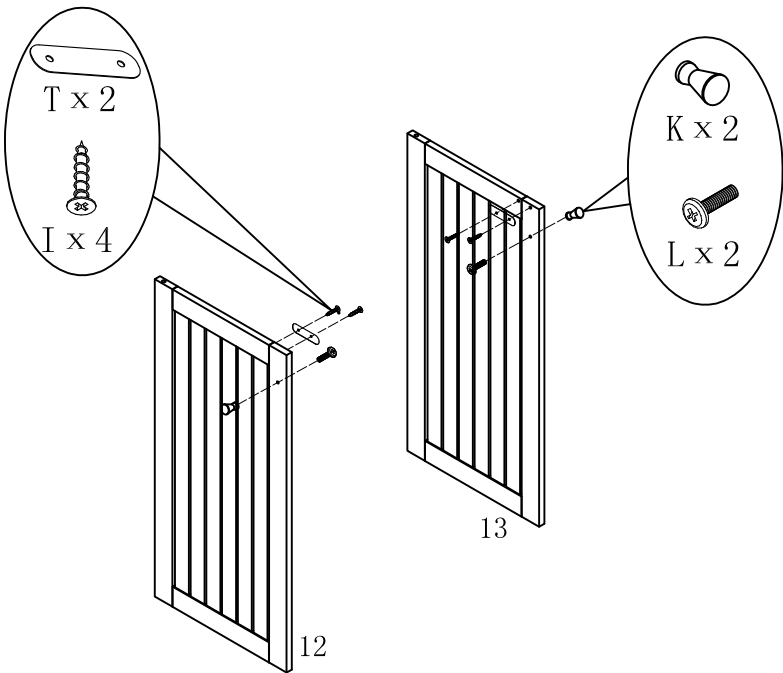


# HARDWARE IDENTIFICATION

ITEM#:223111 263507 263508

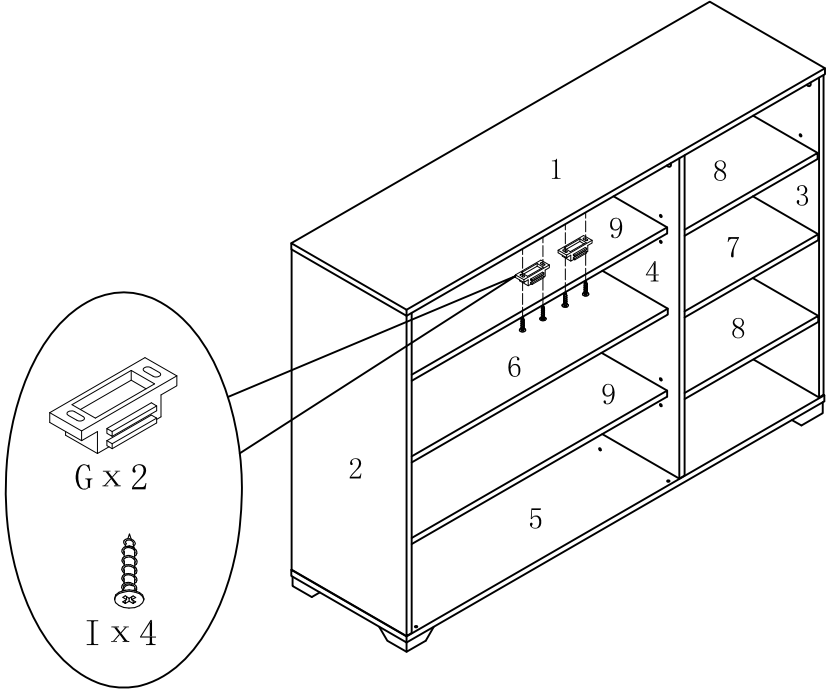

STEP9

STEP10

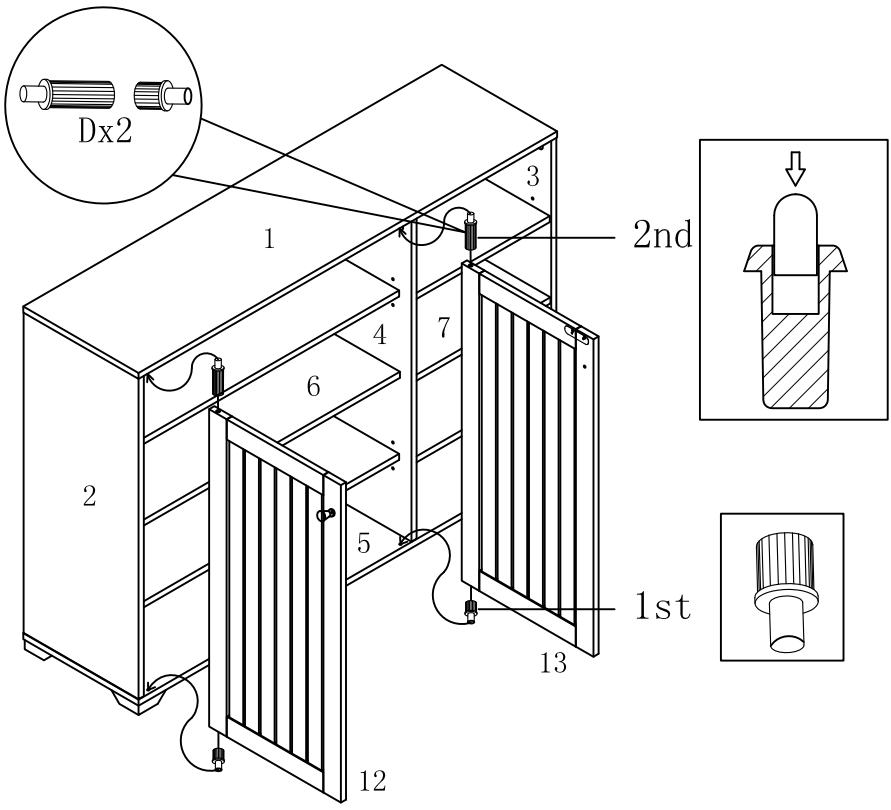


# ANTI-TIPPING STRAP INSTRUCTION


## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :

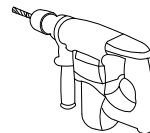


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

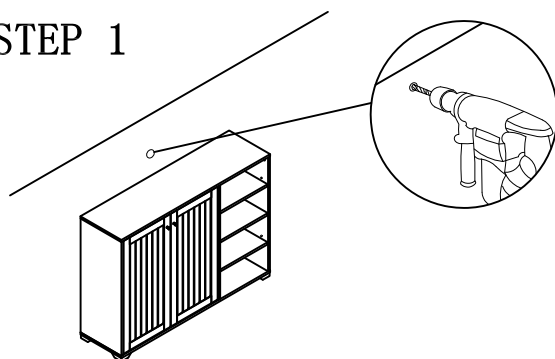


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

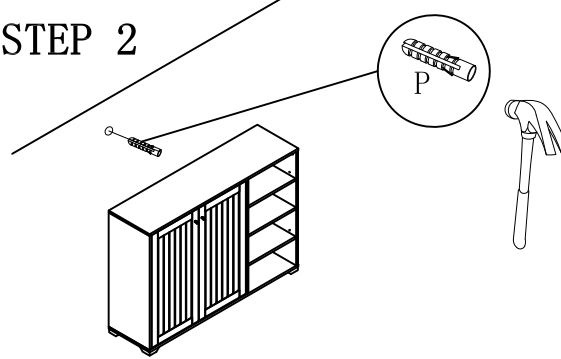


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

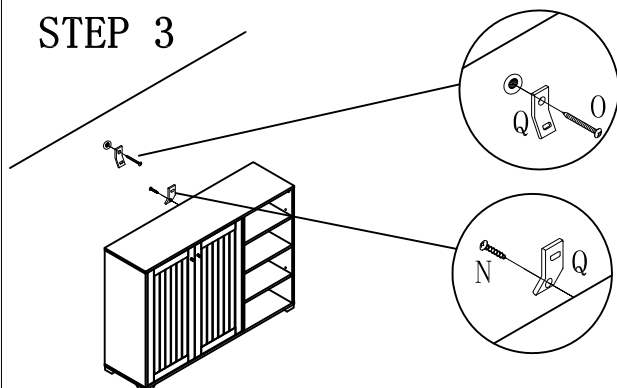

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

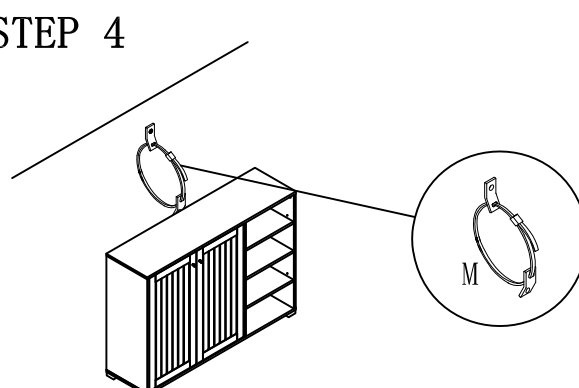

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.