












Queen Headboard

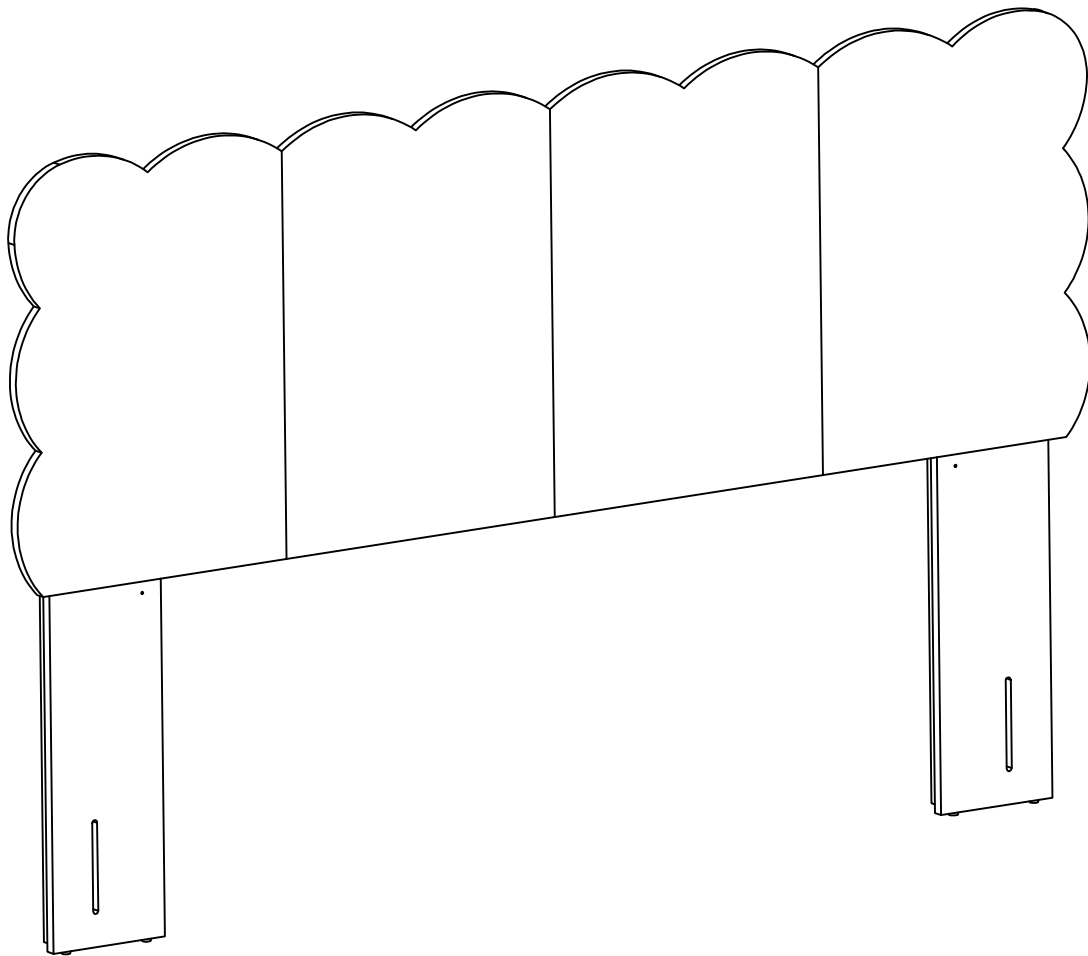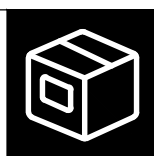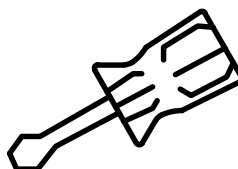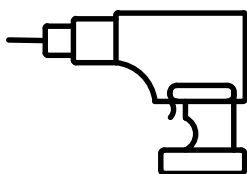

If you encounter any issues during assembly or use,
please feel free to contact us

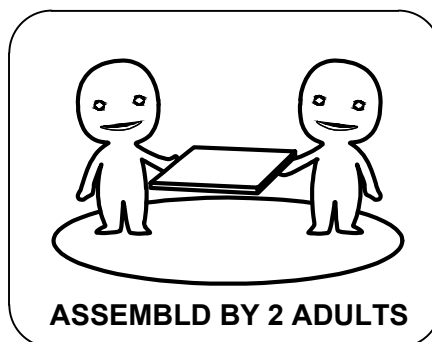


A×8PCS	B×4PCS	C×6PCS	D×28PCS	E×4PCS
 6mm	 M6mm	 Ø6×30mm	 M6×25mm	 M6×50mm
F×PC	G×1PC	H×20PCS	I×2PCS	J×2PCS
 M4mm	 	 Ø4×28mm	 	 Ø4×14mm
K×2PCS	L×2PCS			
 Ø4×35mm	 Ø6×30mm			

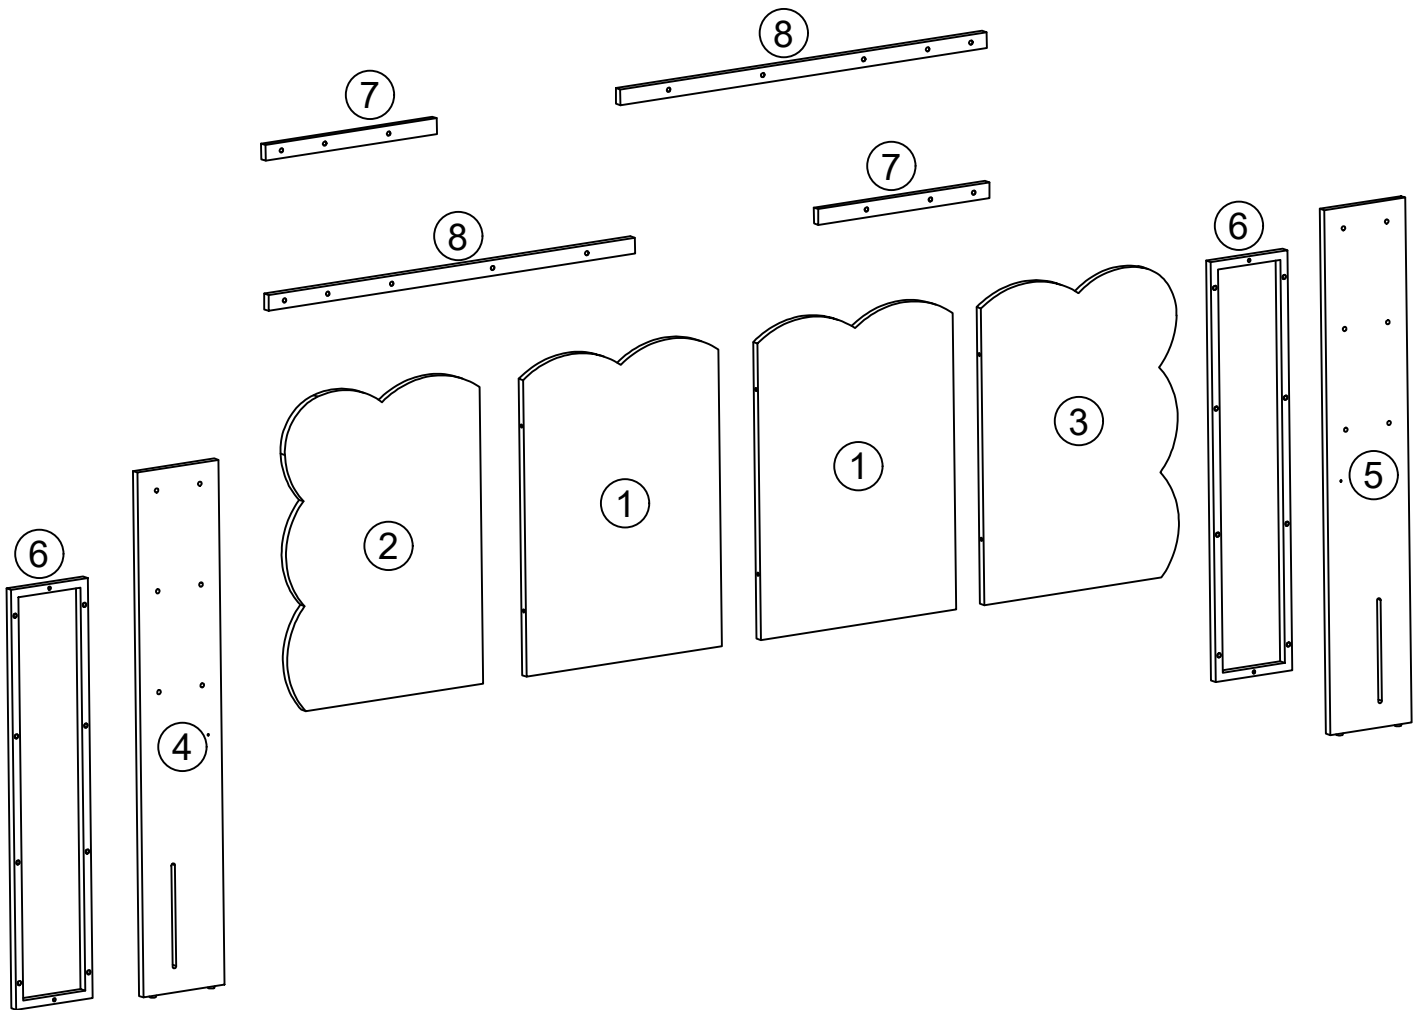

C×6PCS

Ø6×30mm


1.

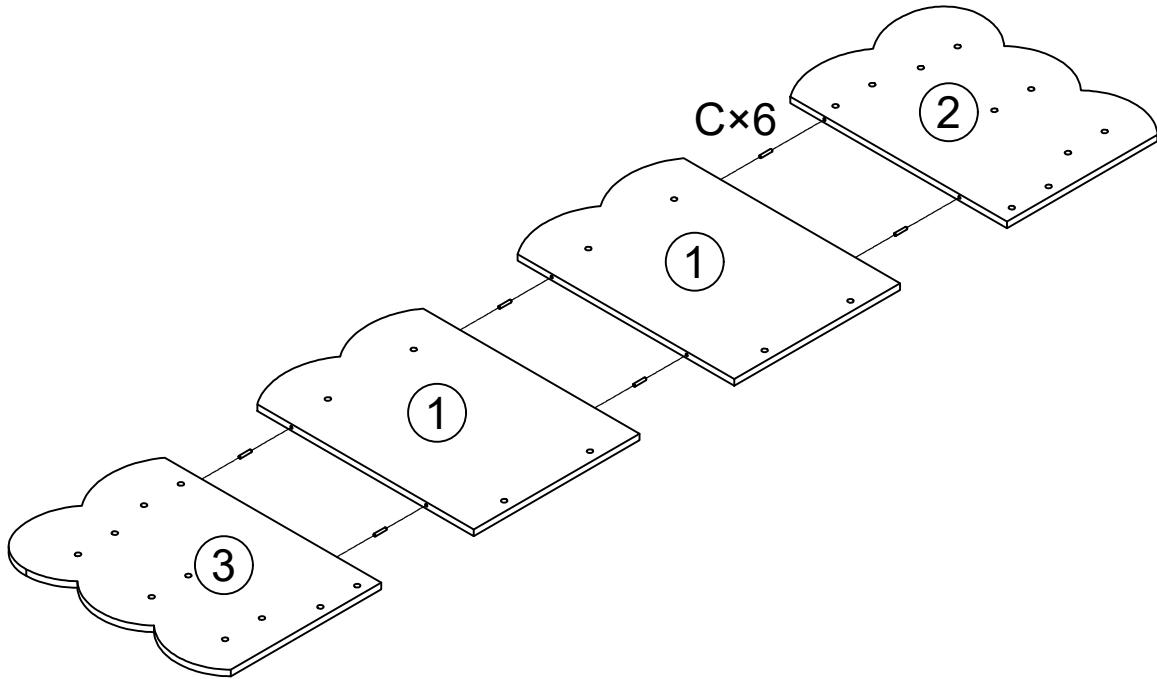

D×16PCS	F×1PC
	
M6×25mm	M4mm

2.

Tips:All D screws are used here. The length of the D screws is 25mm. If E or H screws are used, it will cause damage to the wooden board.

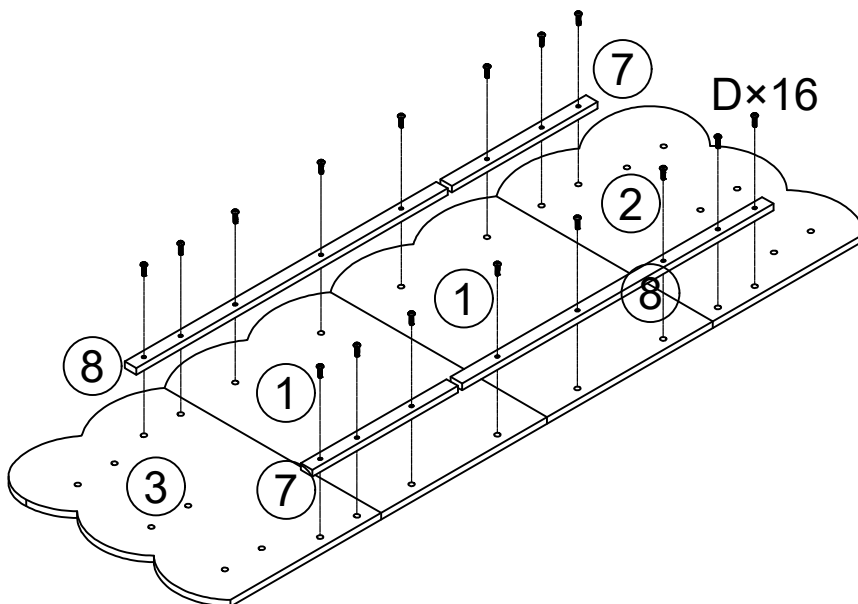

3.

Tips:All D screws are used here. The length of the D screws is 25mm. If E or H screws are used, it will cause damage to the wooden board.

D×12PCS


F×1PC



M6×25mm



M4mm

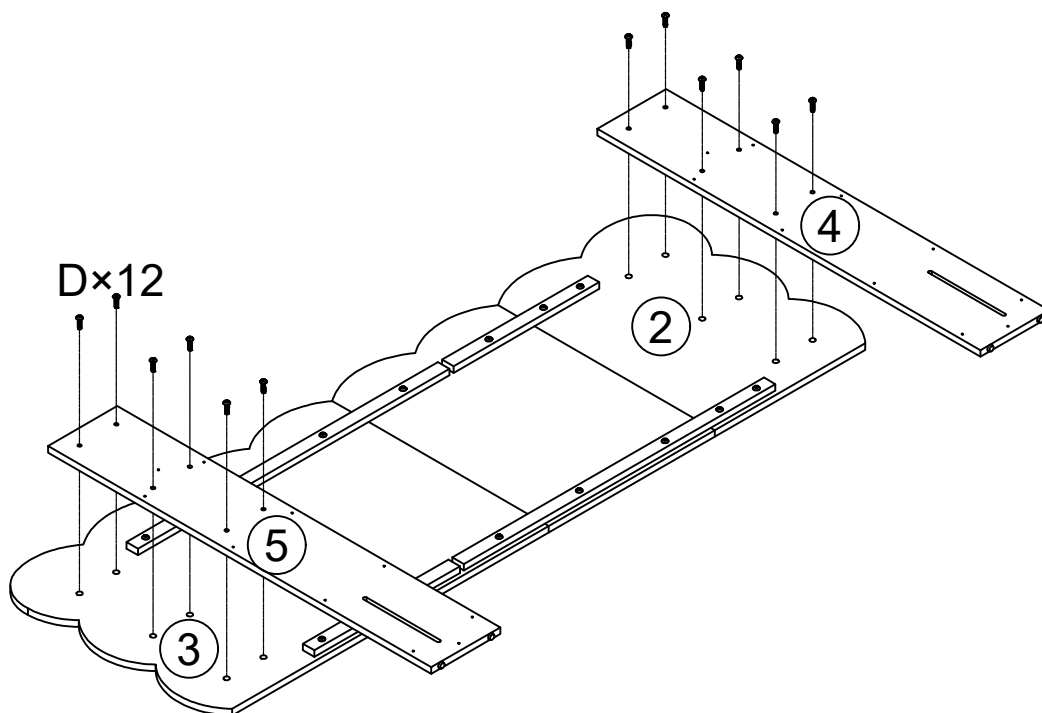


4.

Tips:All H screws are used here. The length of the H screws is 28mm.

H×20PCS




Ø4×28mm

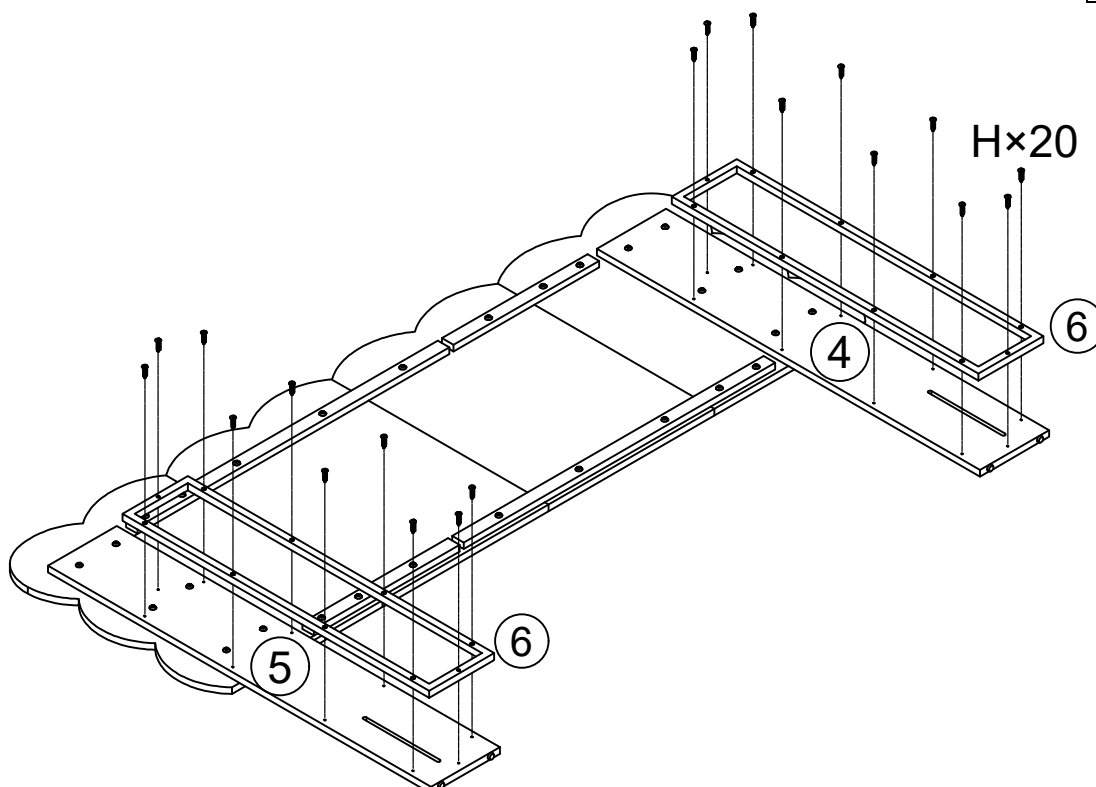


A×8PCS	B×4PCS	E×4PCS	F×1PC	G×1PC
				
6mm	M6mm	M6×50mm	M4mm	



5.

Tips: This product does NOT include a bed frame. Only the hardware shown is provided. Please use the included screws to attach the headboard brackets to your existing bed frame via the pre-drilled holes, then tighten firmly.

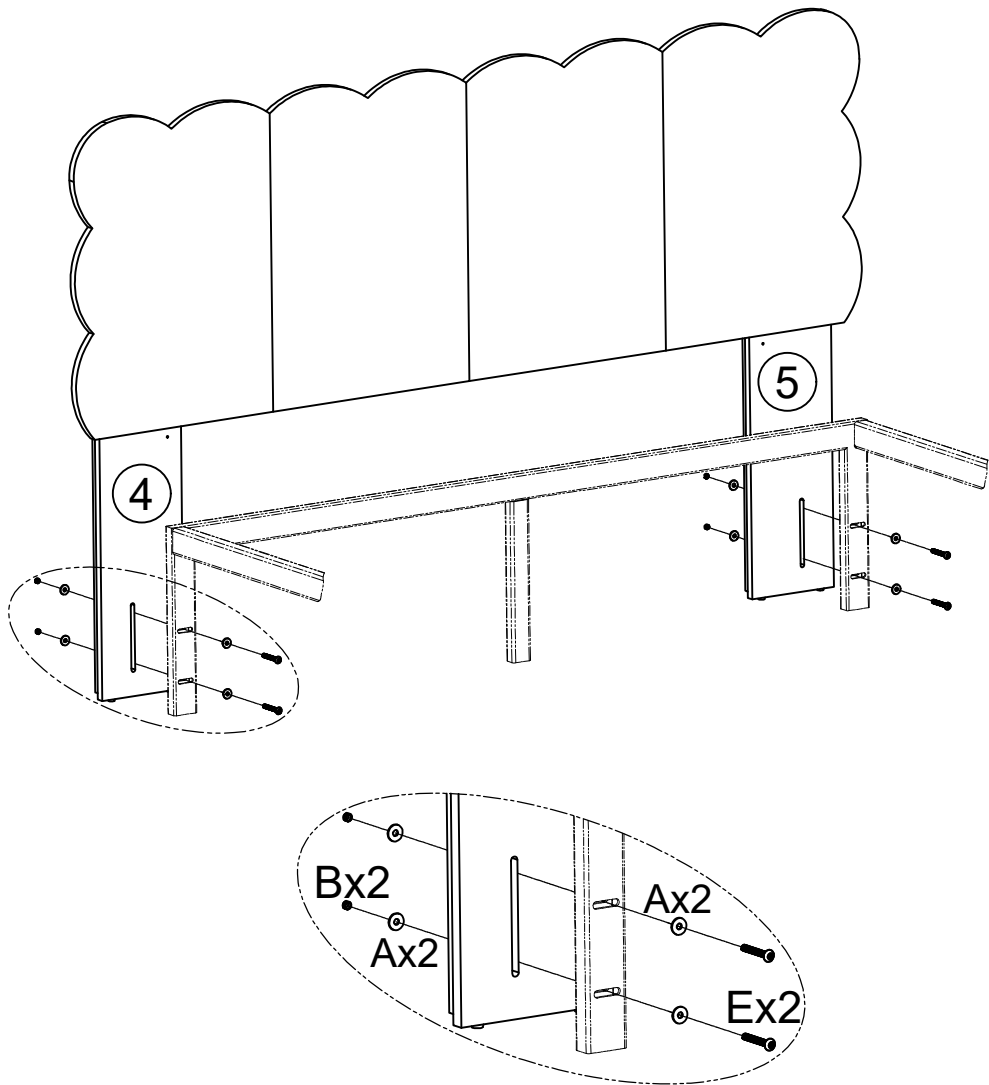

6.

I×2PCS	J×2PCS
	 Ø4×14mm

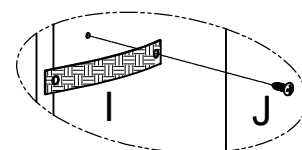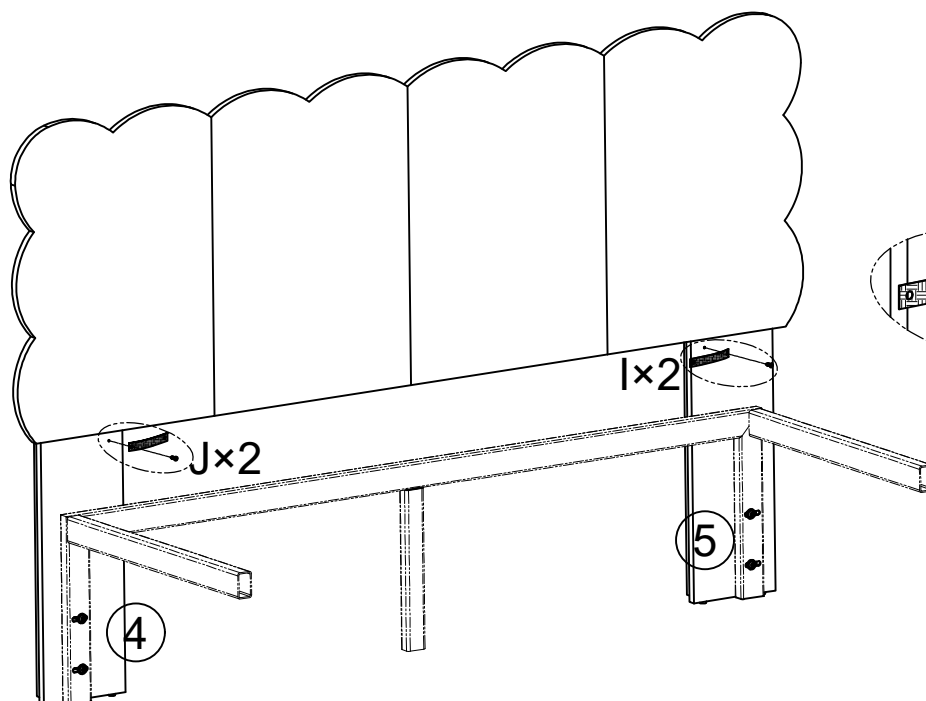

7.

K×2PCS	L×2PCS
 Ø4×35mm	 Ø6×30mm

