


ENCLO

HIDE IT WITH STYLE

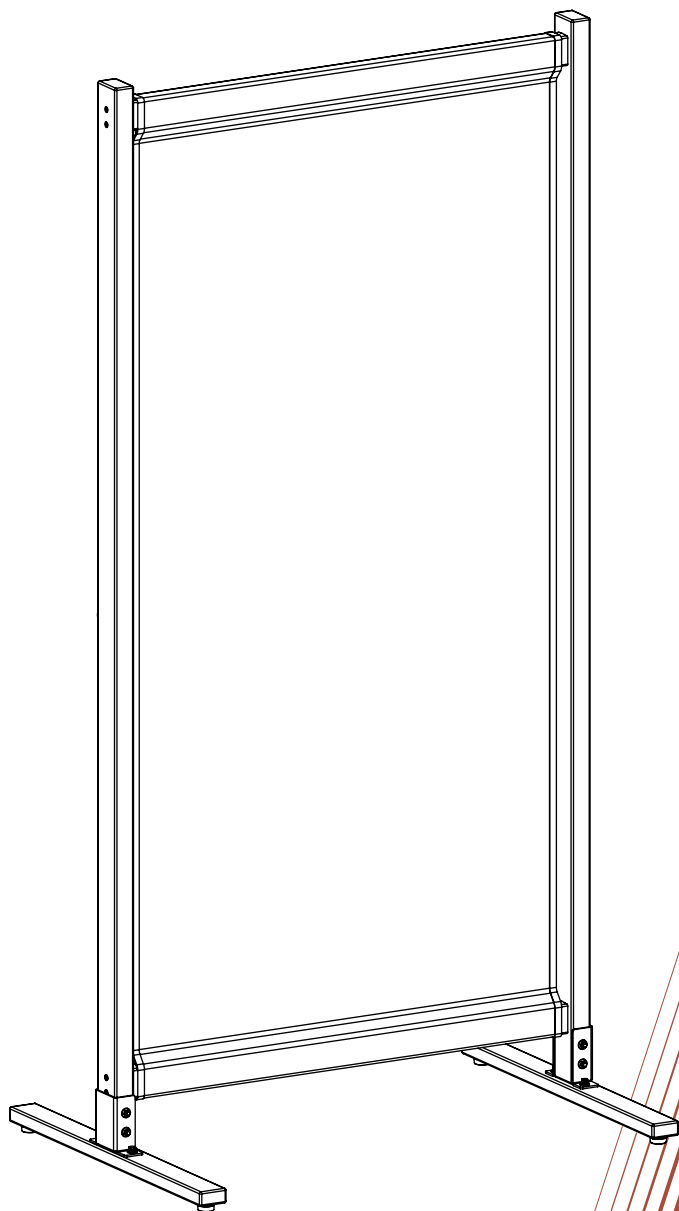

Haven Fabric

Freestanding Privacy Screen

36"W x 73 1/2"H

30 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below




ASSEMBLY
INSTRUCTIONS
EC18051

www.encloscreens.com

VER. 033126

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

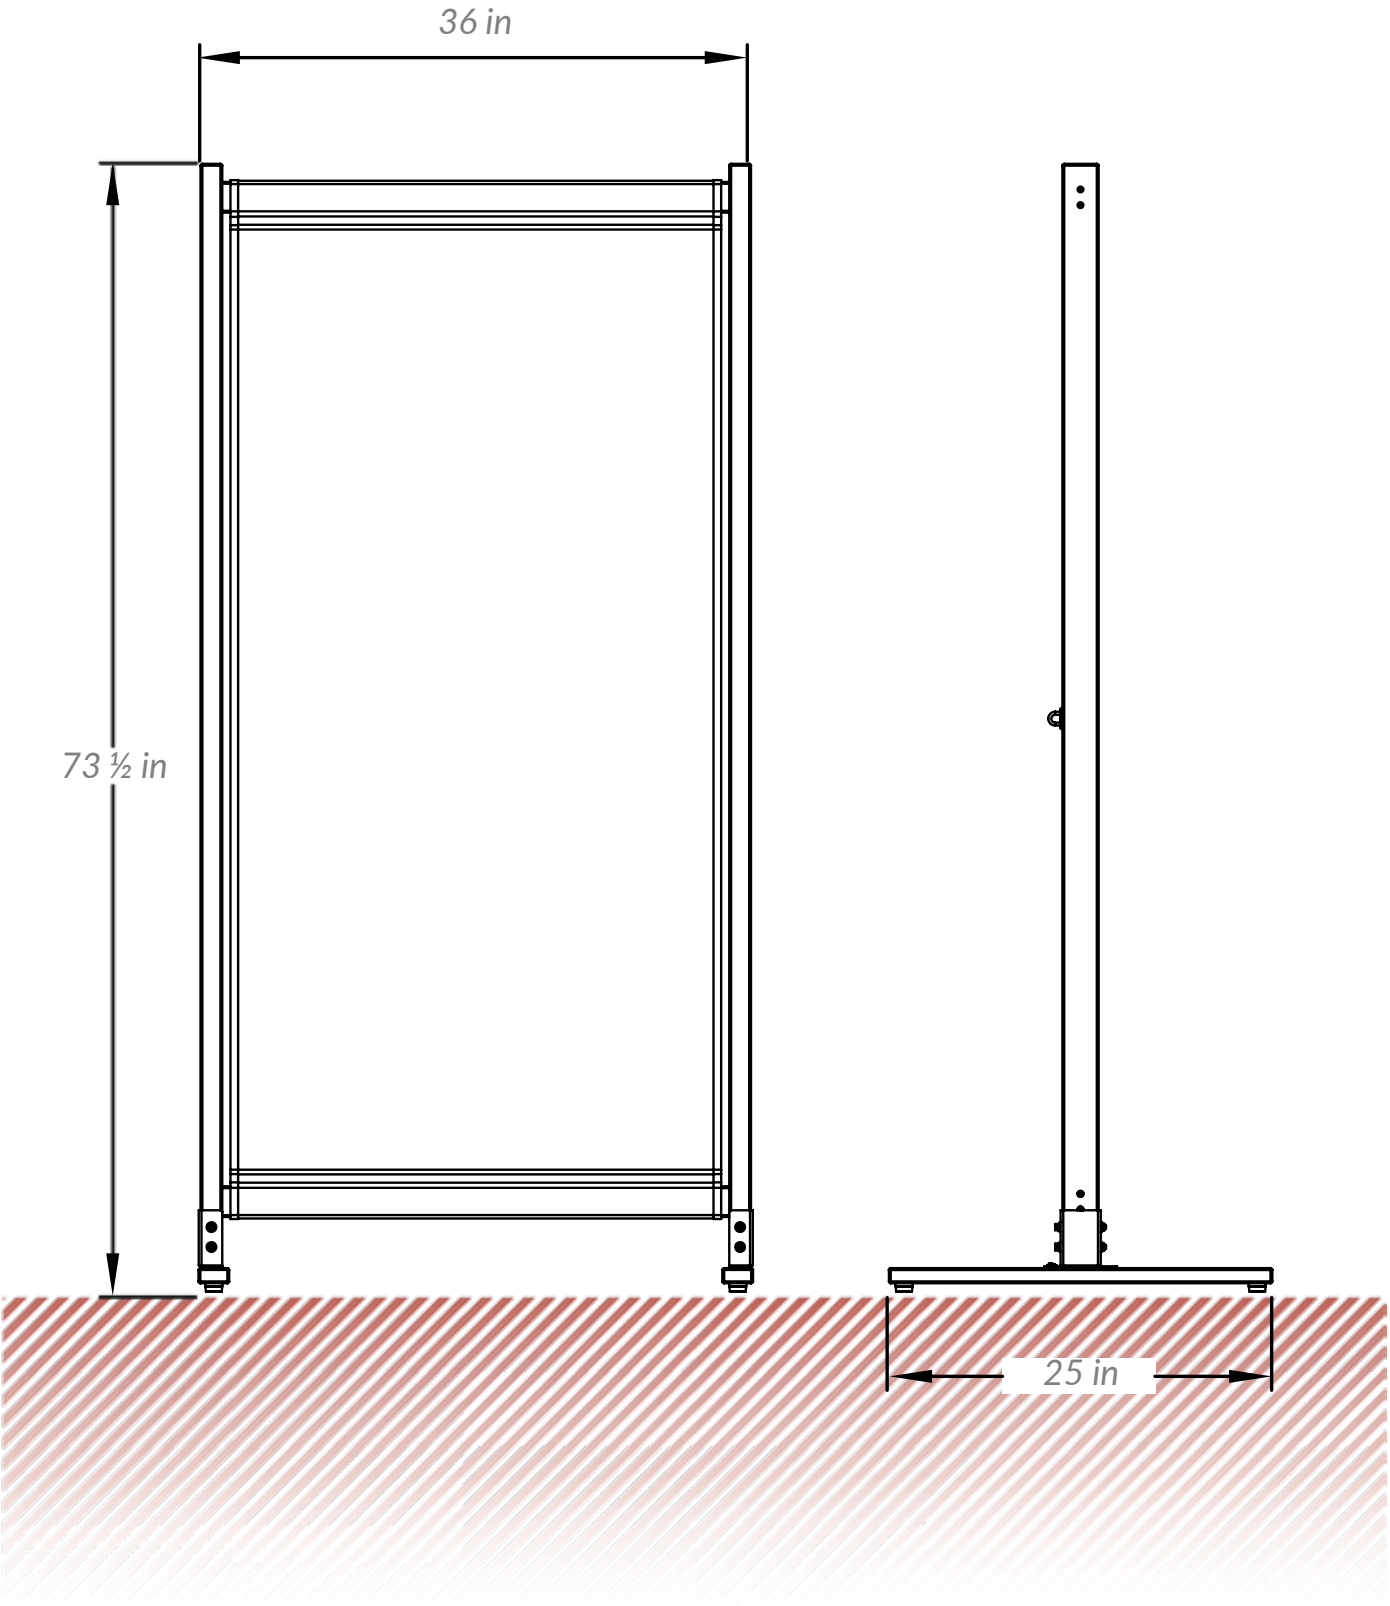

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18051**)
- Your affected part letters (**pages 4**)
- Your original product box

NEED ASSEMBLY HELP?

If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**


LAY OUT MATERIALS

SCREEN PARTS




A

Post (2)
1 3/8" x 2 3/8" x 72"

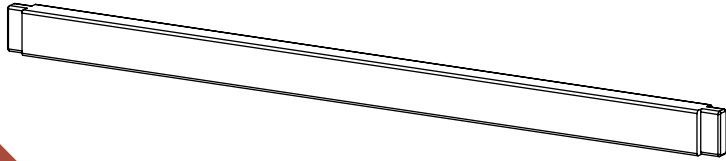


B

Rail (2)
1 1/4" x 2" x 34 7/8"

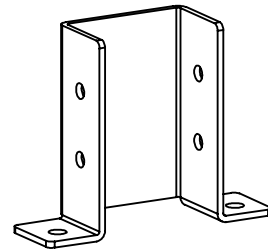


C

Joiner Bracket (2)

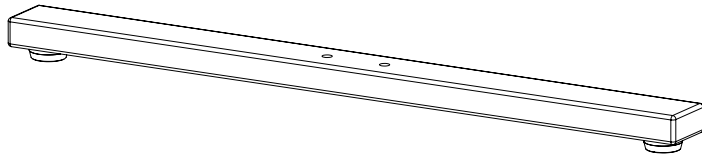

D










Feet (2)
1 1/2" x 2" x 25"

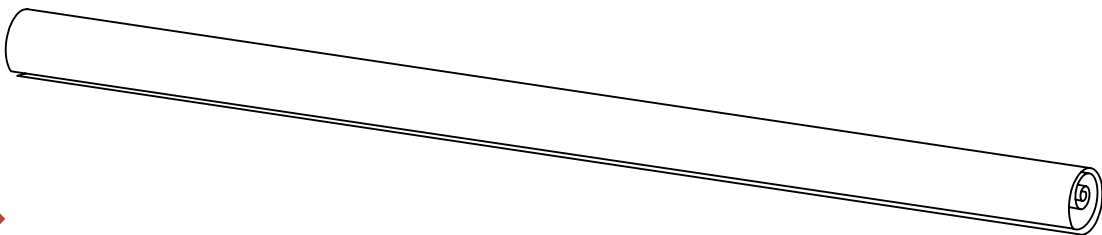

E

Fabric (1)


LAY OUT MATERIALS

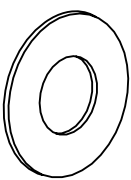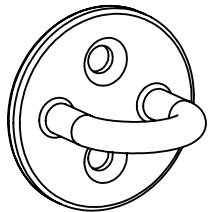HARDWARE		
 F 1 5/8" Wood Screw (8)	 G 1 1/8" Black Bolt (4)	 H 3 1/8" Black Bolt (4)
 I Nut (4)	 J Washer (12)	 K Lock Washer (8)
 L Wrench (2)	 M Pad Eye Plate (2)	 N 5/8" Wood Screw (4)
 O 27 1/2 in Removable Zip Tie (2)		


TOOLS AND OPTIONAL HARDWARE

NOT INCLUDED


► We recommend 2 people for a smoother assembly.

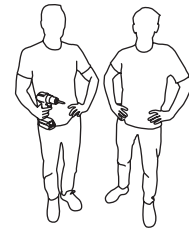


DECK MOUNT

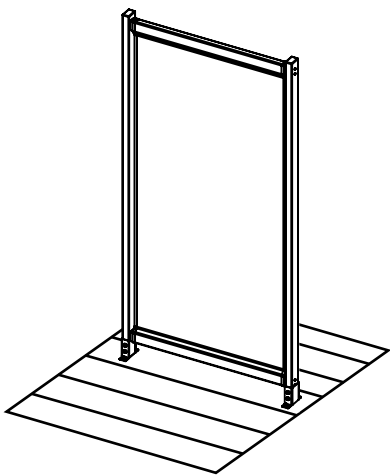

Power Drill

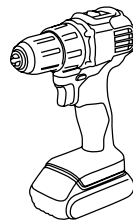


1/4" Wood Drill Bit




1/4" Lag Screws 3" Length (4)




Matching Driver Bit



PATIO MOUNT

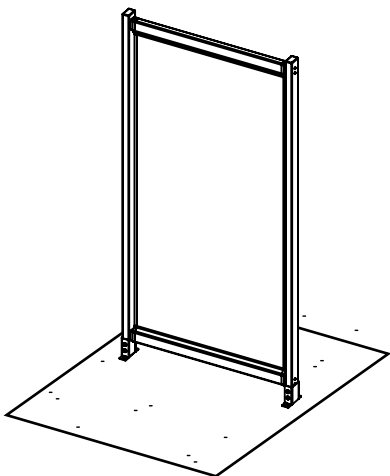


Hammer Drill

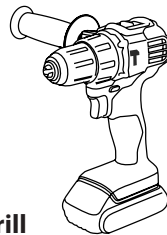


1/4" Concrete Drill Bit




Hammer




1/4" Concrete Wedge Anchor 2 1/4" Length (4)



Matching Wrench

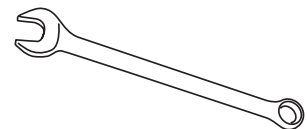


ASSEMBLING

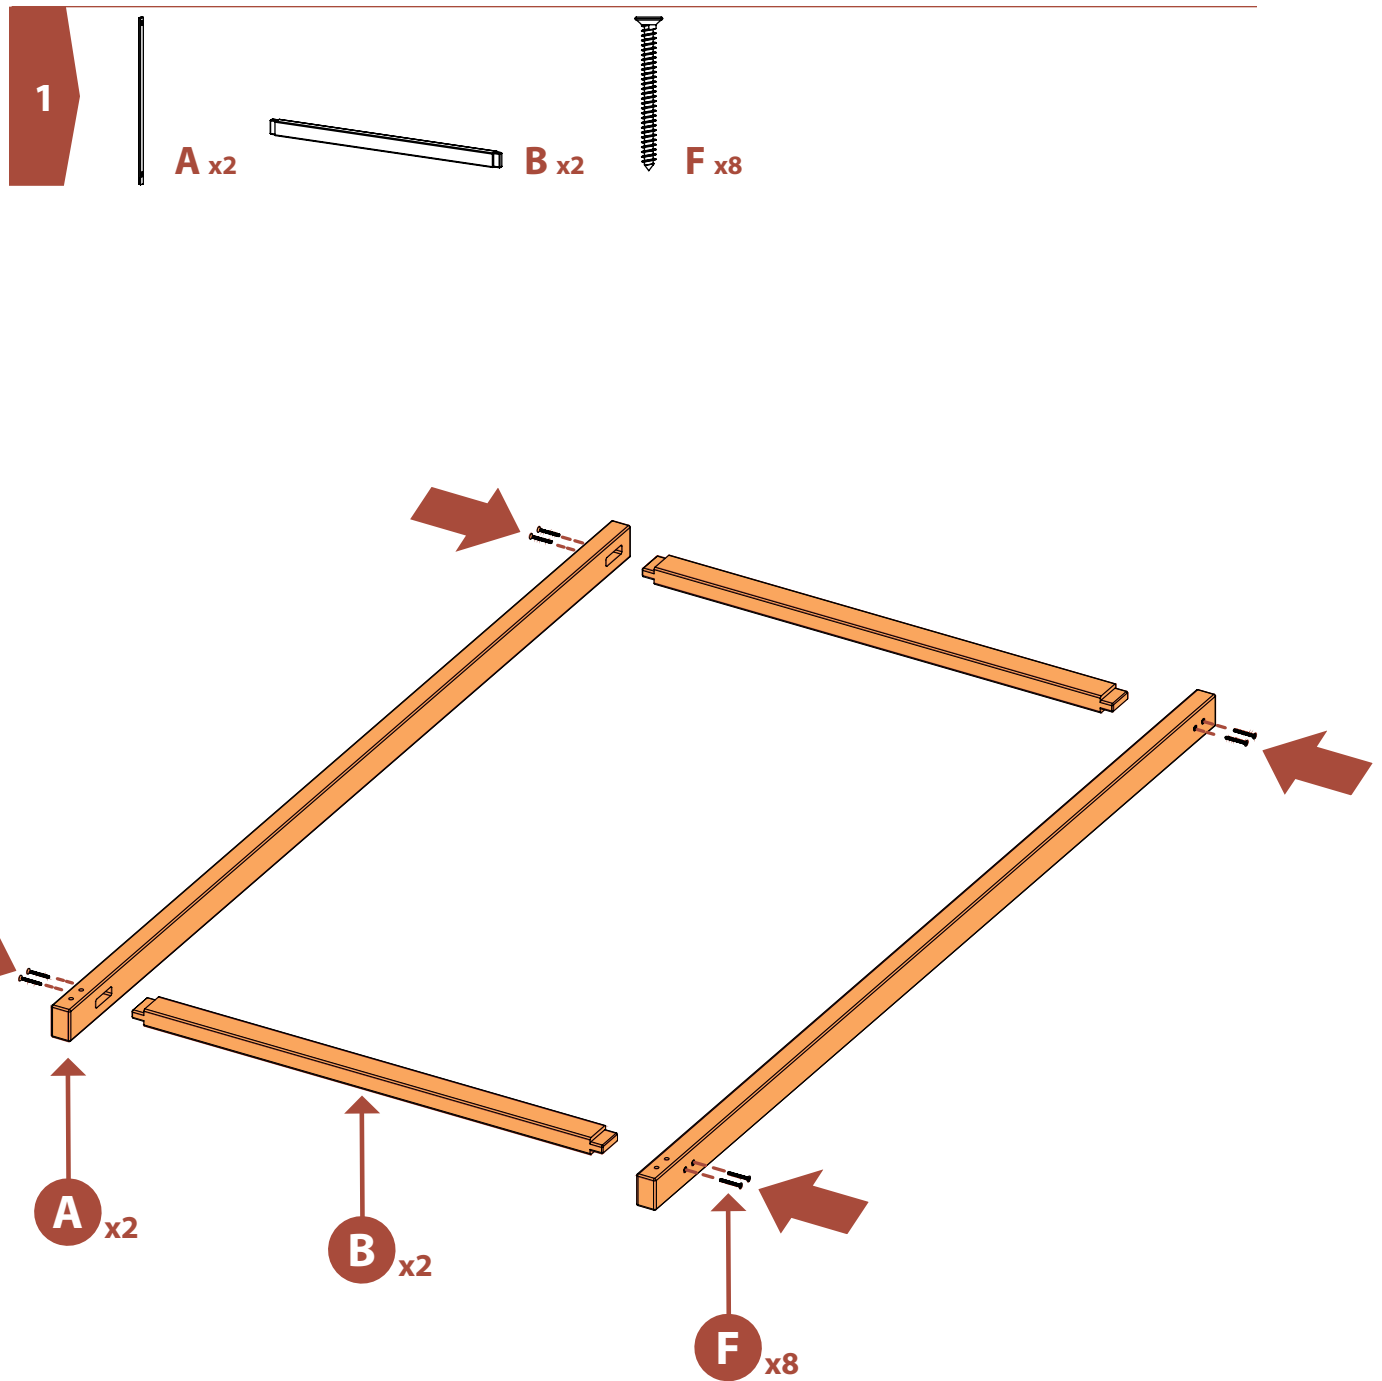

FREESTANDING


FREESTANDING

1

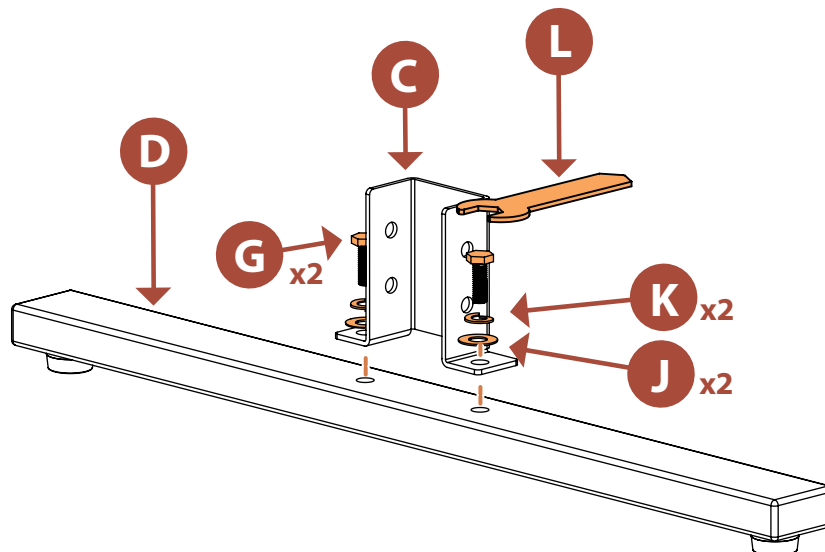

FREESTANDING

2

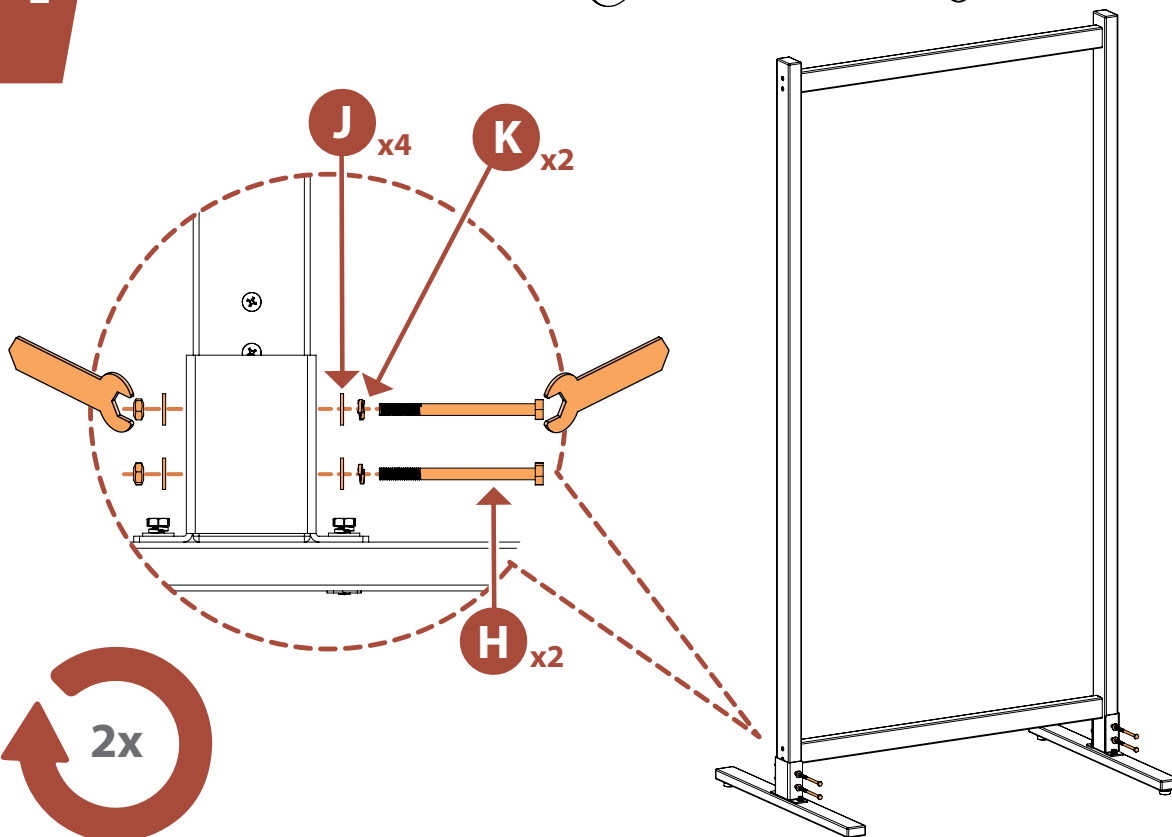


FREESTANDING

FREESTANDING

1




E x1

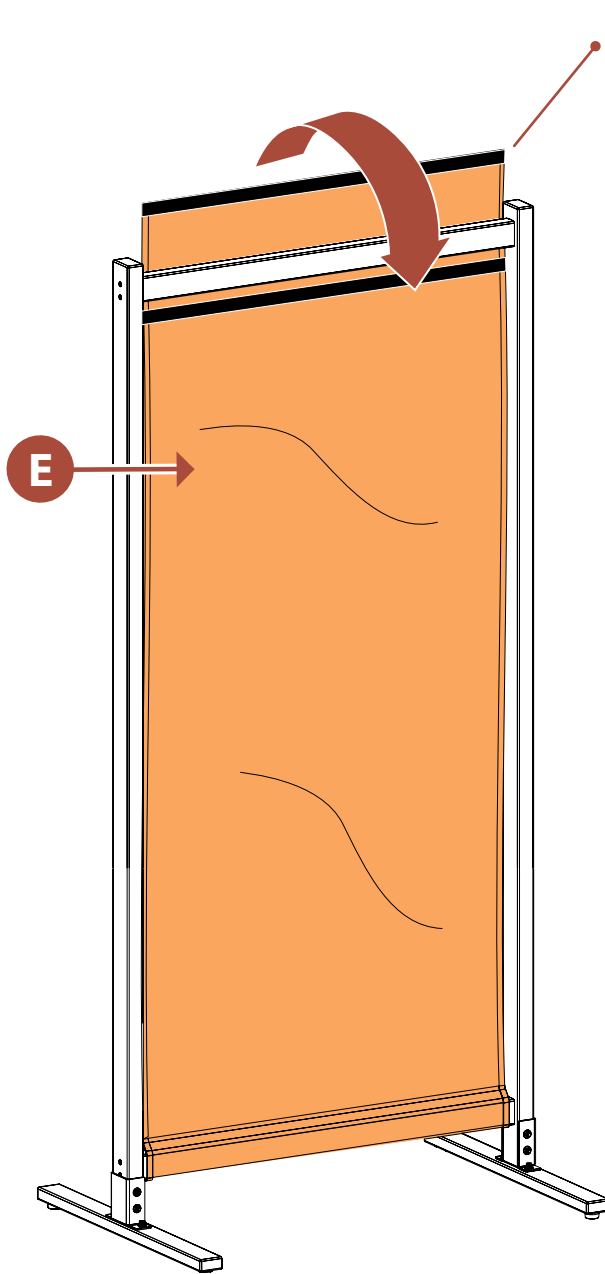

! Start by adhering your velcro to the bottom rail. Align velcro as evenly as possible.

Then pull your fabric up and over your top rail. Pull taut and velcro around your top rail.

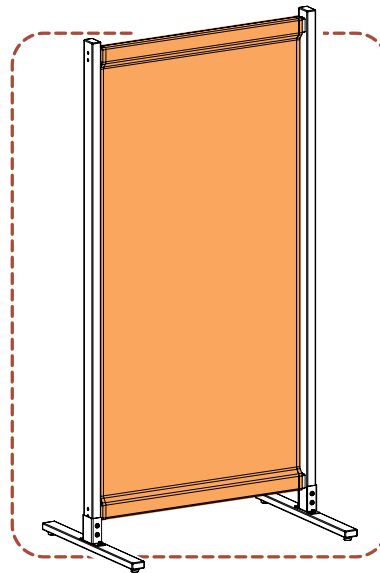

! **Pro Tip:** If your fabric is wrinkled, hang it in the sun to remove wrinkles.

FREESTANDING - OPTIONAL ZIP TIE

FREESTANDING


2



M x2





N x4




O x2


! Install your Pad Eye Plate (M) based on your needs. Zip Tie (O) it to a fixed object such as a railing for additional stability.

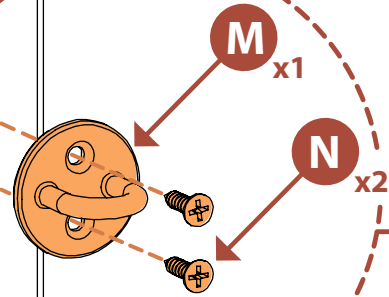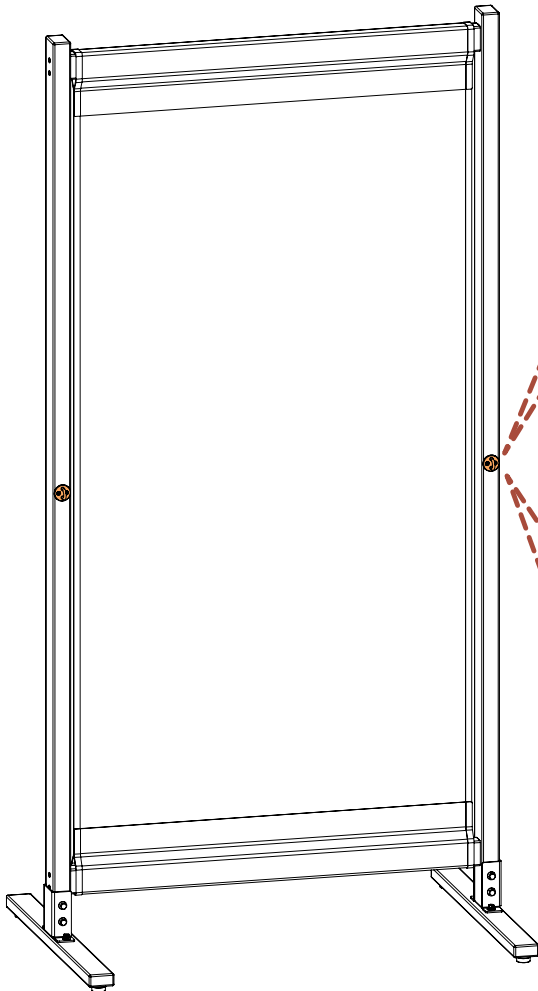

HORIZONTAL APPLICATION

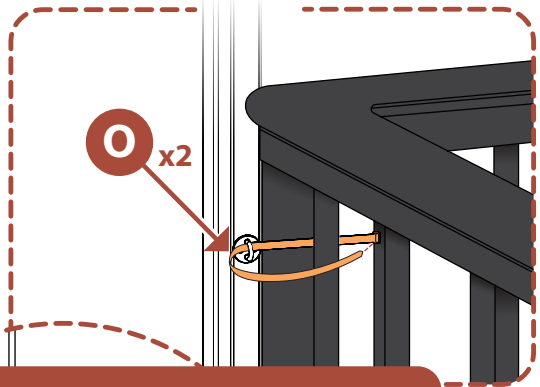

VERTICAL APPLICATION

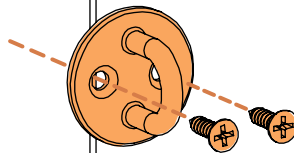


! **Pro Tip:** Lay you screen down to install your Pad Eye Plates more easily.

SURFACE MOUNTED (DECK)

MOUNTED

1

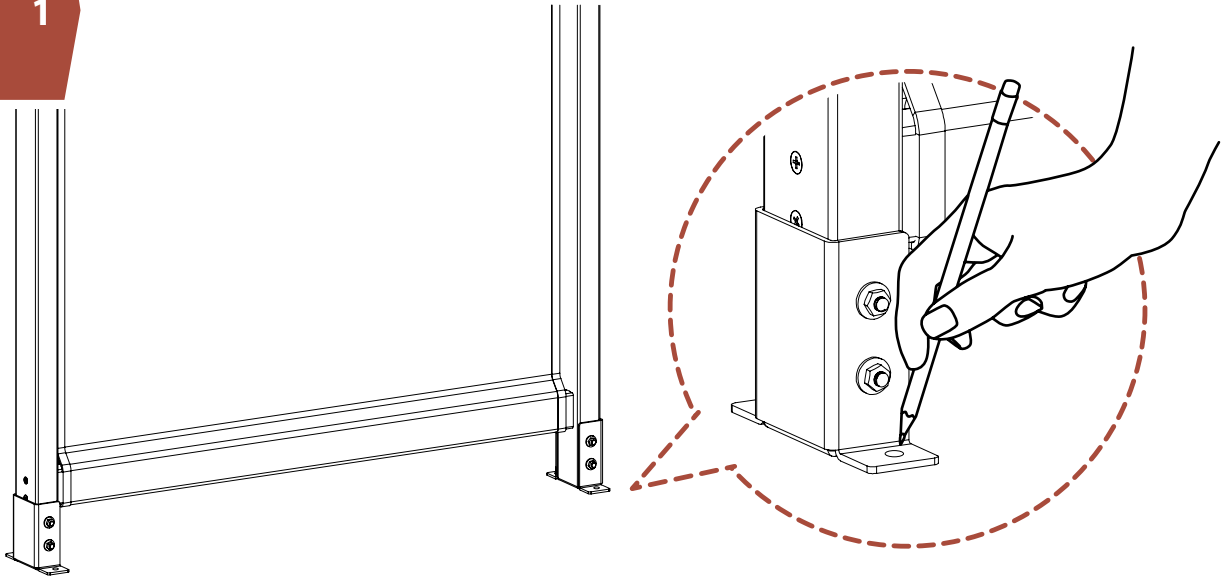

MOUNTED


2




Refer to mounting hardware instructions
to ensure proper installation.

(Surface mounting hardware not included)

! If mounting to deck
boards only, a support
block should be added
underneath

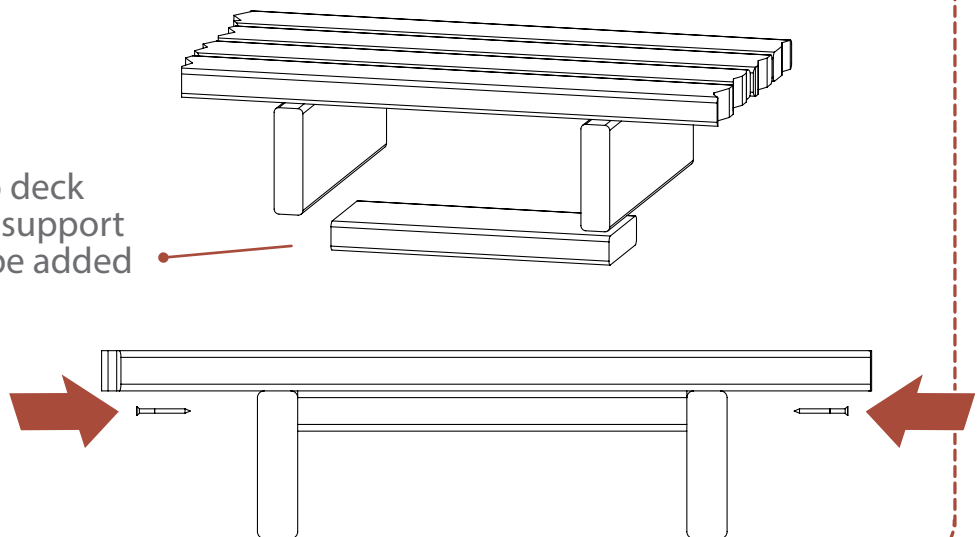


! Pre-drill the holes you previously marked.

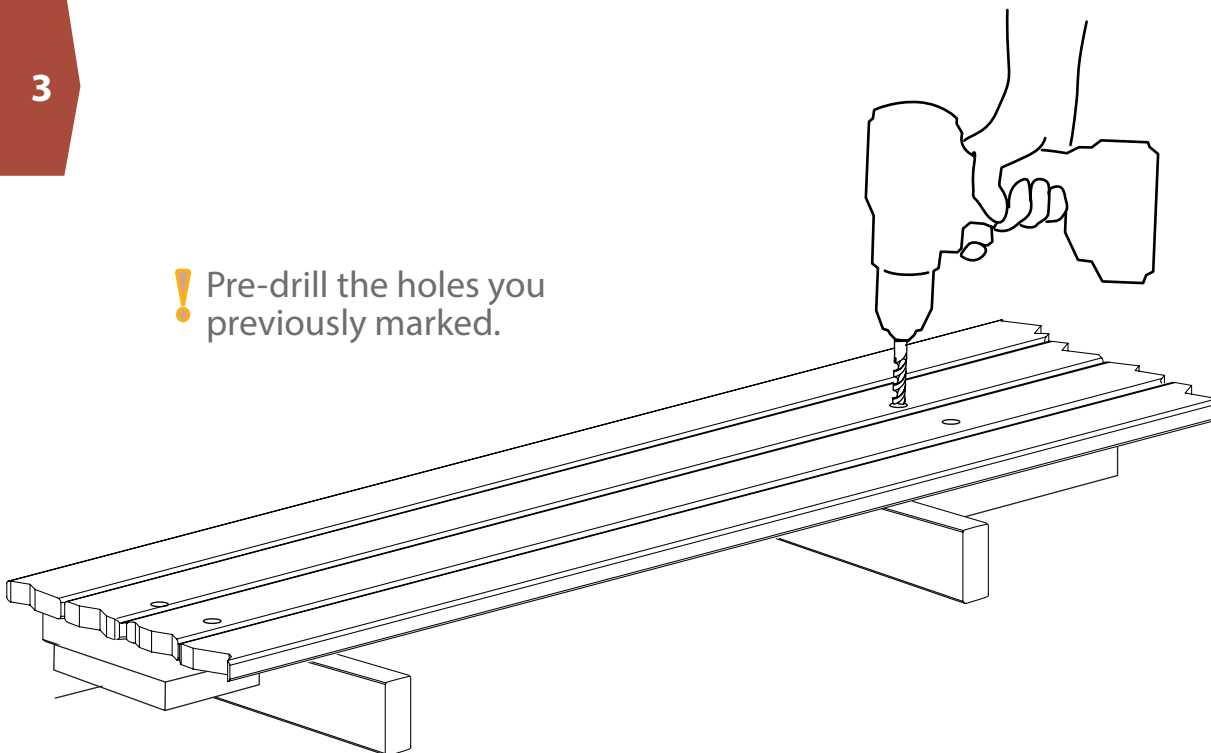

Refer to mounting hardware instructions to ensure proper installation.



(Surface mounting hardware not included)

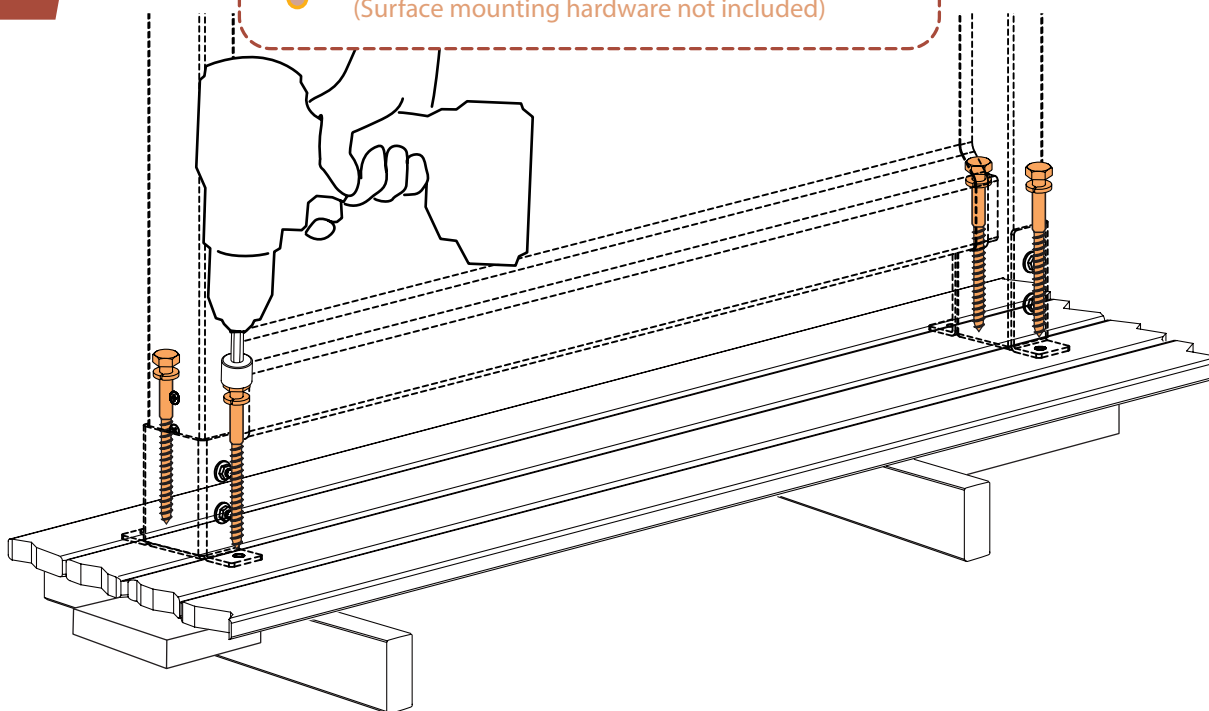



SURFACE MOUNTED (PATIO / CONCRETE)

MOUNTED

1

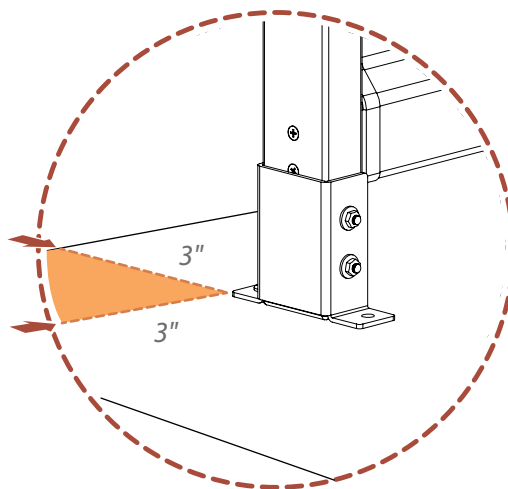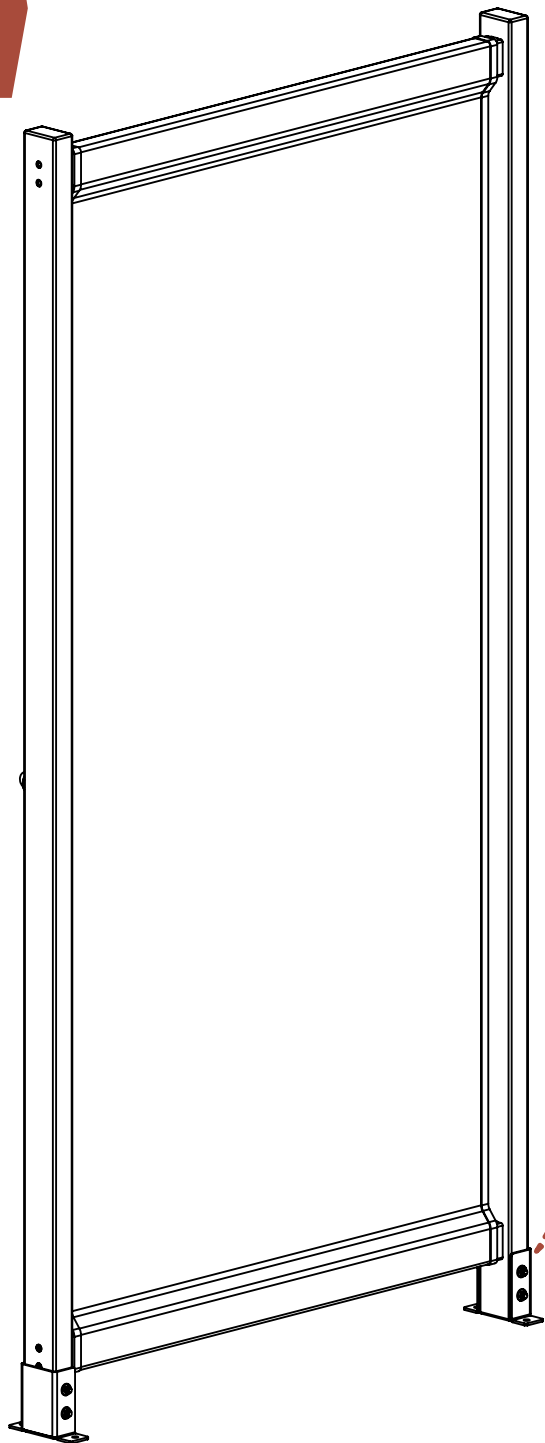

Ensure there is at least **3"** between the edge of the concrete and the surface mount.

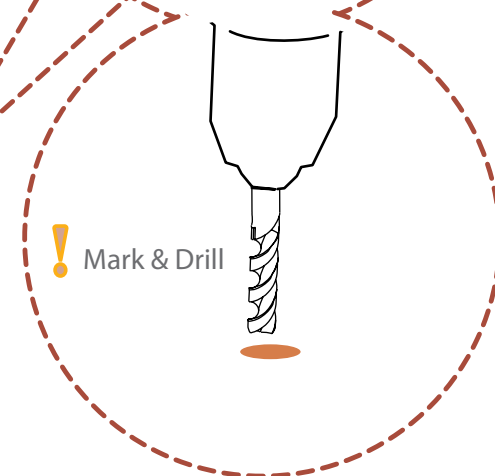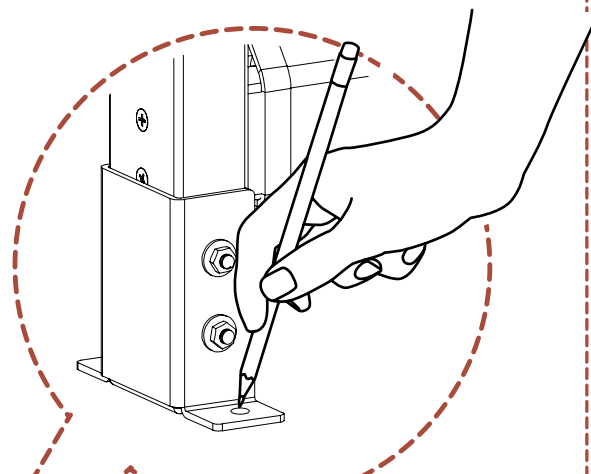





Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)



Using a rubber mallet, lightly tap your
concrete anchors a quarter of the way
in.

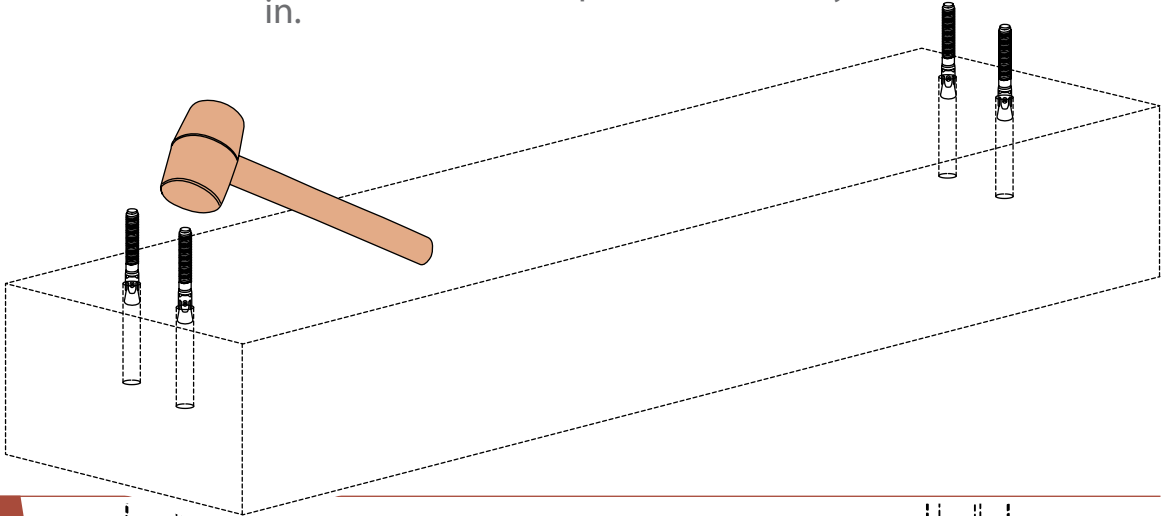


Place your screen over the anchors.

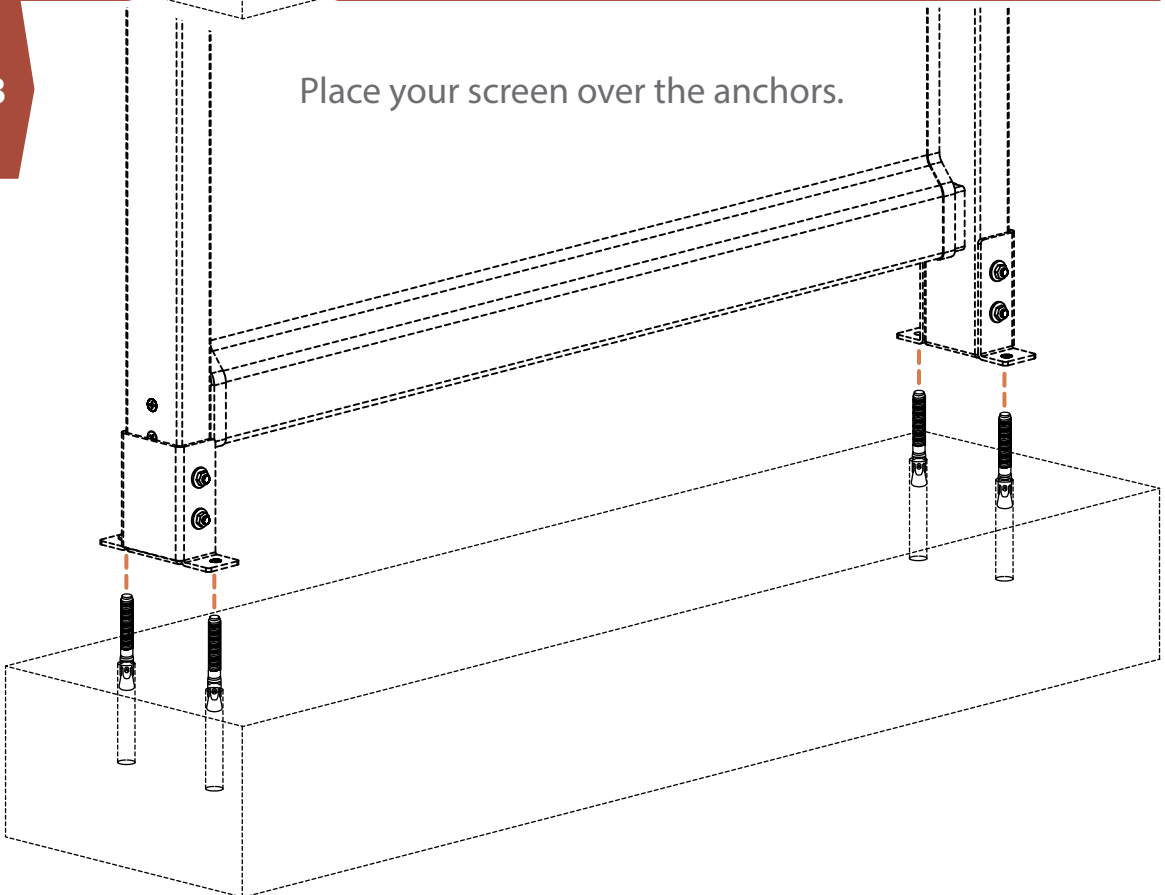




Refer to mounting hardware instructions
to ensure proper installation.
(Surface mounting hardware not included)

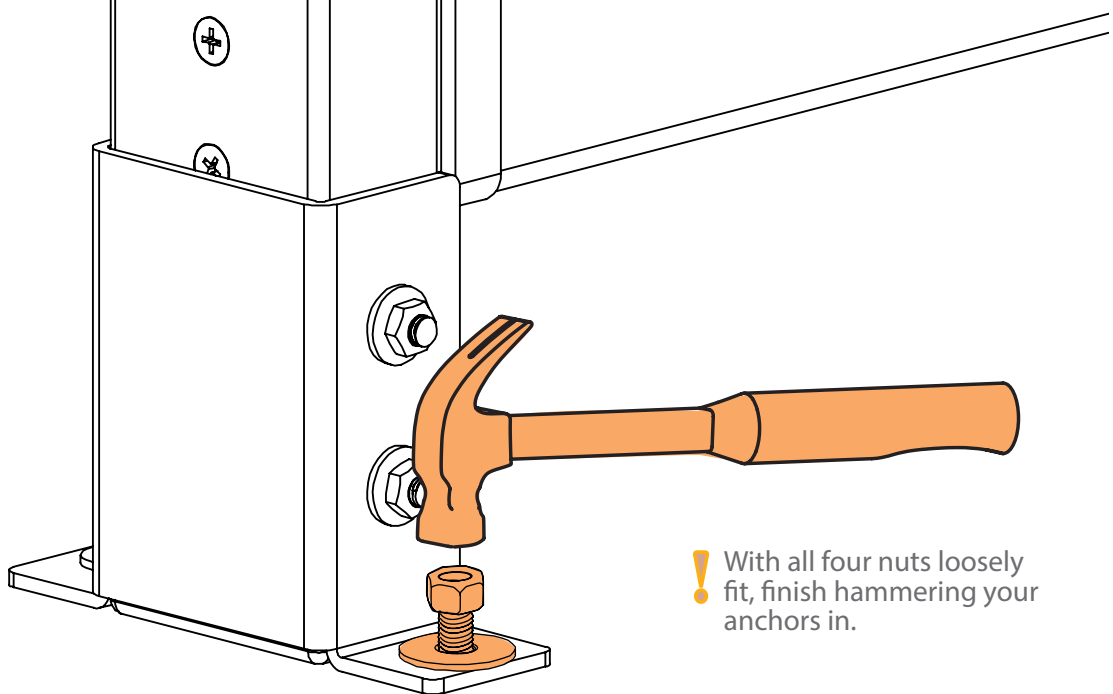

! With all four nuts loosely
fit, finish hammering your
anchors in.

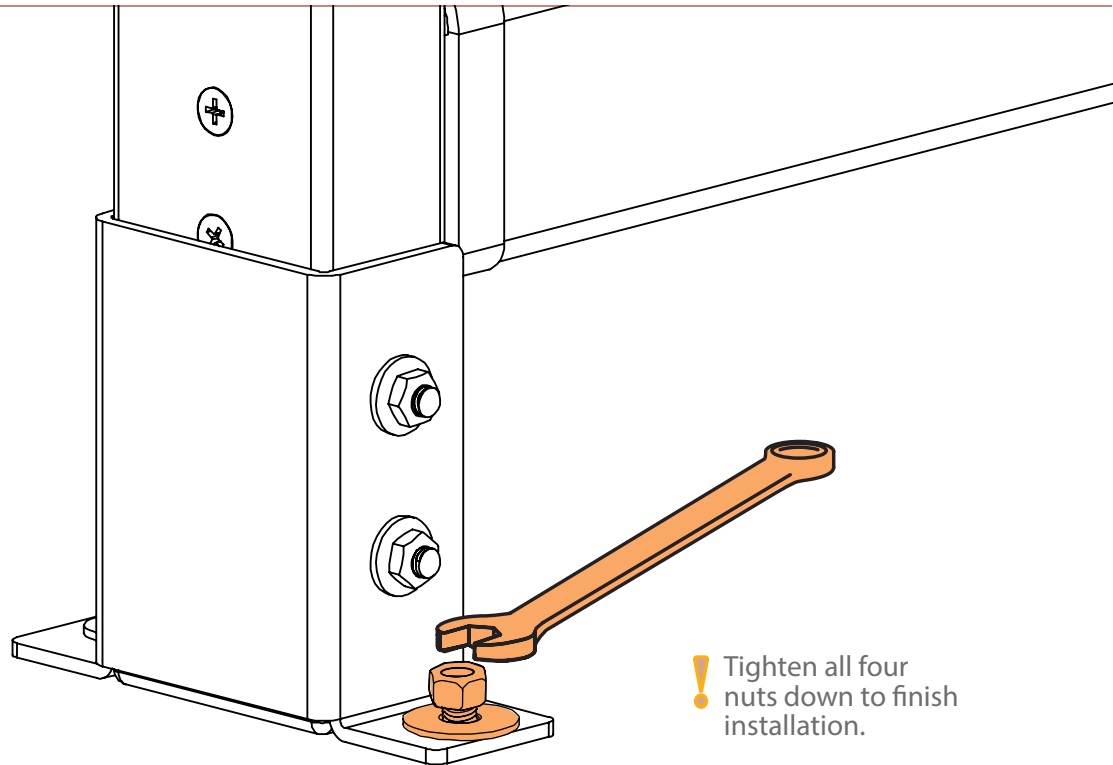

! Tighten all four
nuts down to finish
installation.



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18051