

HAPPINESS INSTALLATION



CAUTION

Parts are placed at the bottom of the product.

- If you have any questions with the product, please contact us by:
- **Email: customerservice@zoy-living.com**
(we will reply to you within 24 hours)

Assembly Instructions






007E






Your chair comes packaged in one box. Carefully remove all of components from the packaging and set aside for assembly.





CAUTION:

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.


Package Contents

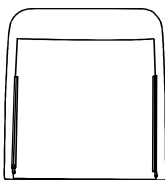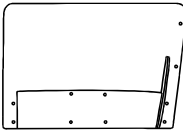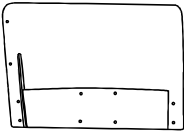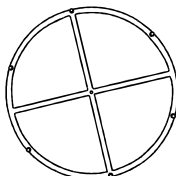					
backrest	armrest	armrest	front fender	back fender	swivel ring base
Ax1	Bx1	Cx1	Dx1	Ex1	Fx1

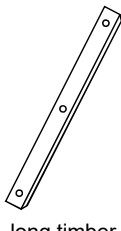						
back cushion	cushion	seat board	iron frame	turntable	short timber	long timber
Gx1	Hx1	Ix1	Jx1	Kx1	Lx2	Mx2

						
angle iron	M6x12MM bolts	M6x16MM bolts	M6x40MM bolts	M8x40MM bolts	M6x55MM bolts	M6 wrench
Nx4	Ox8	Px16	Qx4	Rx4	Sx10	Tx1


Step 1:

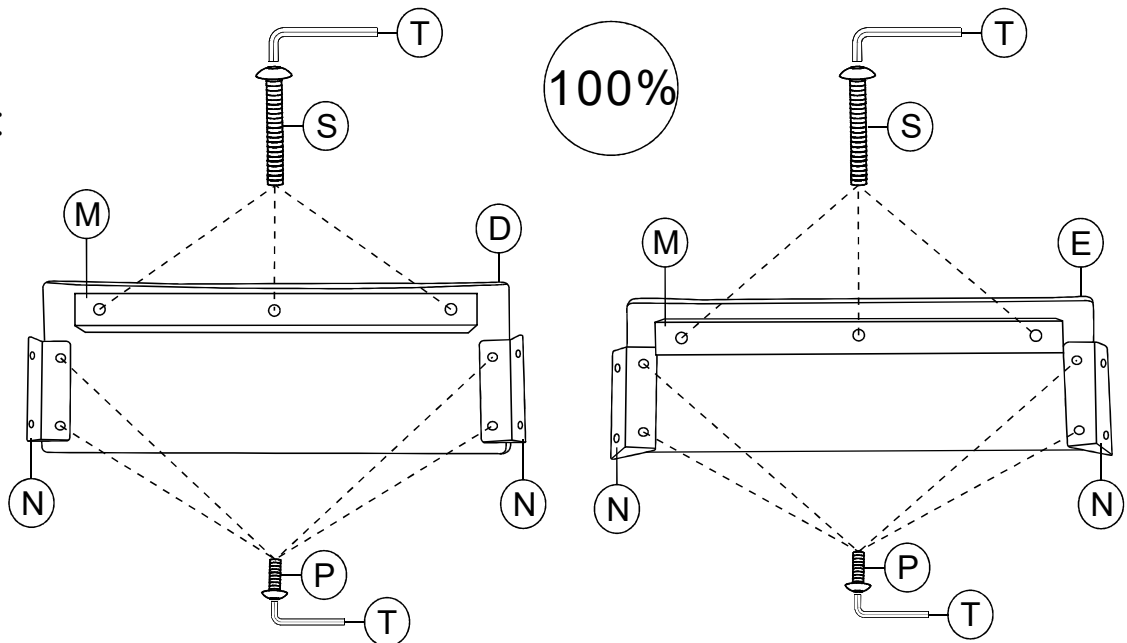

Attach long timber “M” to “D” and “M” to “E” with bolts (S) using the wrench (T). Tighten all bolts to 100%.


Attach “N” to “D” and “N” to “E” with bolts (P) using the wrench (T). Tighten all bolts to 100%.

Step 2:

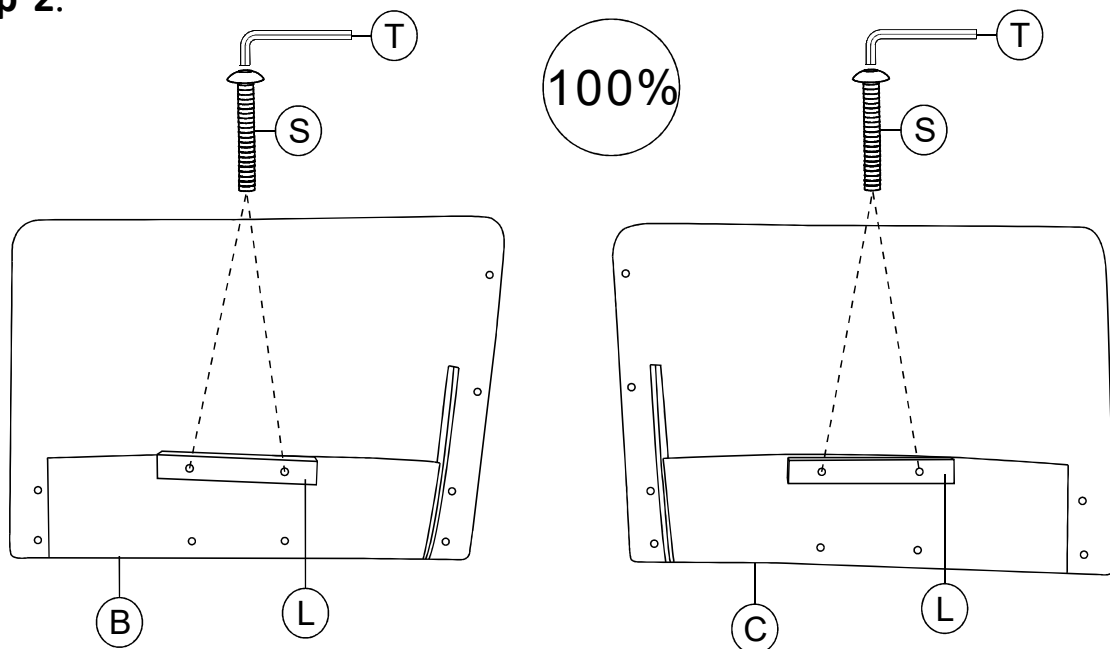


Attach “L” to “B” and “L” to “C” with bolts (S) using the wrench (T). Tighten all bolts to 100%.

Step 3:

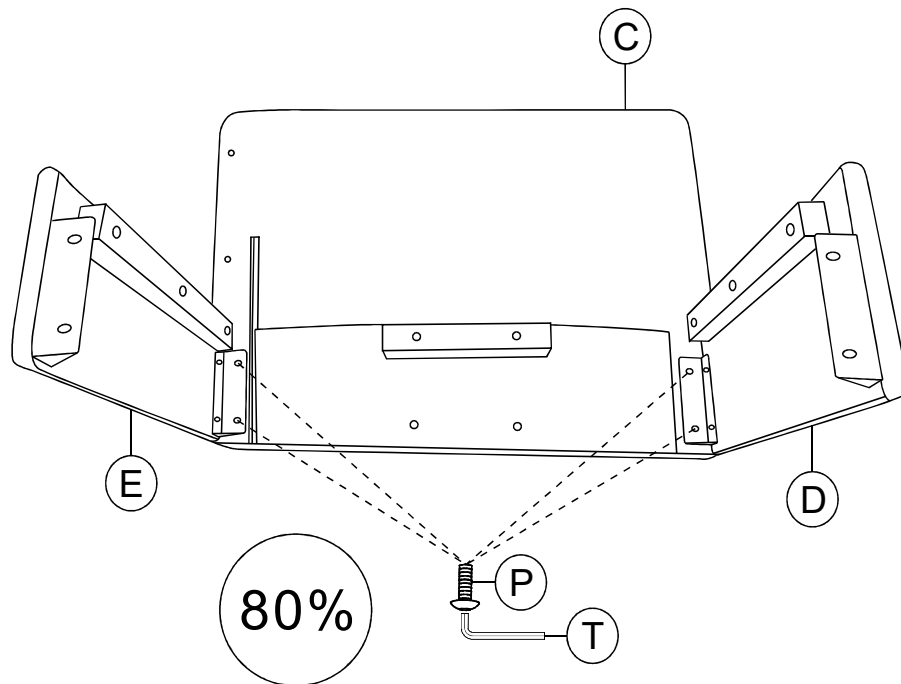


Attach “E” to “C” and “D” to “C” with bolts (P) and tighten all bolts to 80% with wrench (T) first.

Step 4:

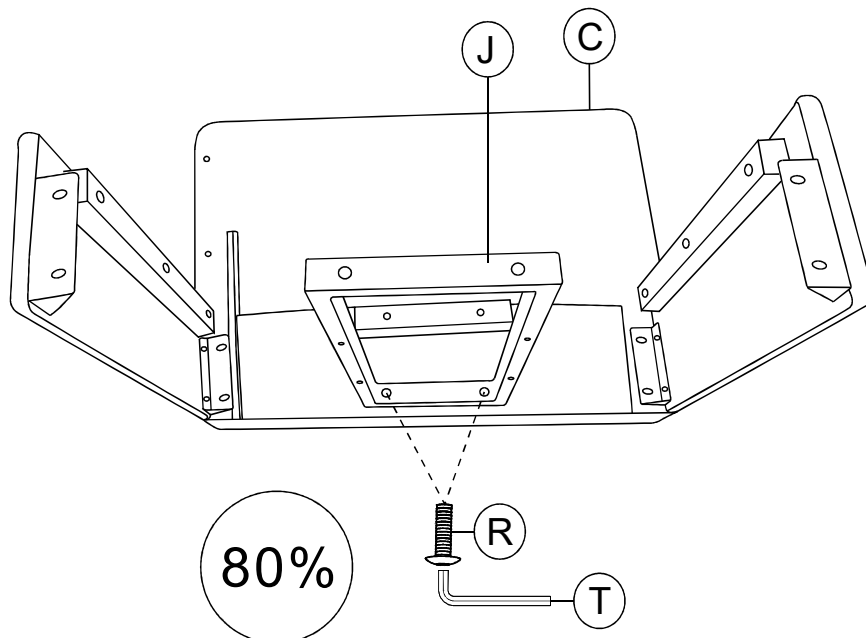


Using bolts (R) to fix “J” and “C”,tighten with wrench (T) to 80% first.

Step 5:

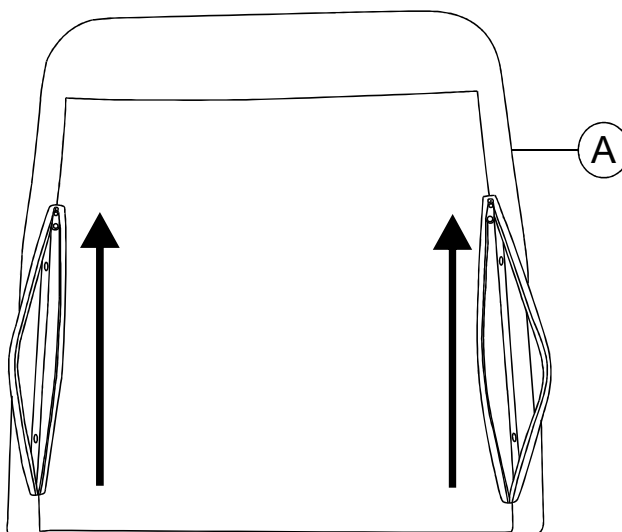


Unzip the zipper of the backrest “A”.

Step 6:

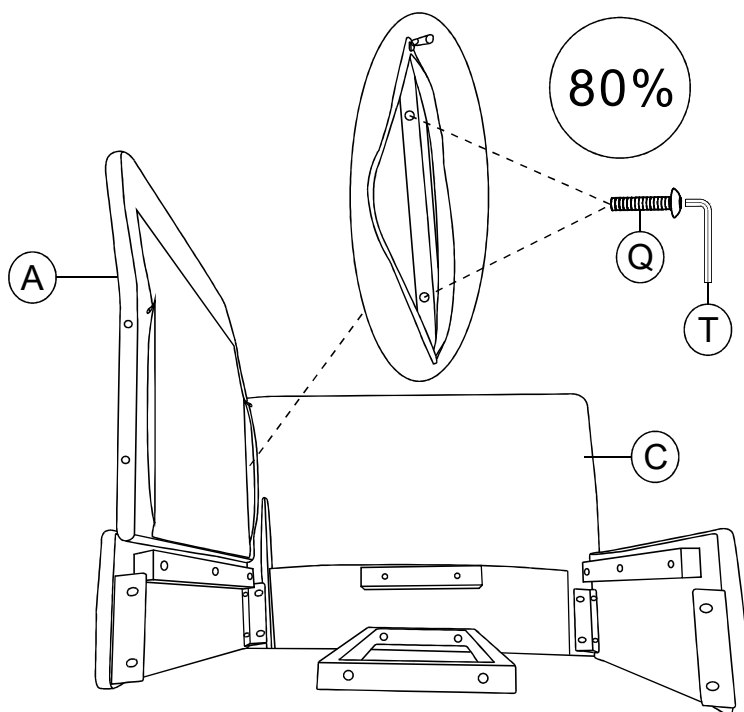


Lock backrest “A” and armrest “C” with the bolts(Q),locking them at 80% first.

Step 7:

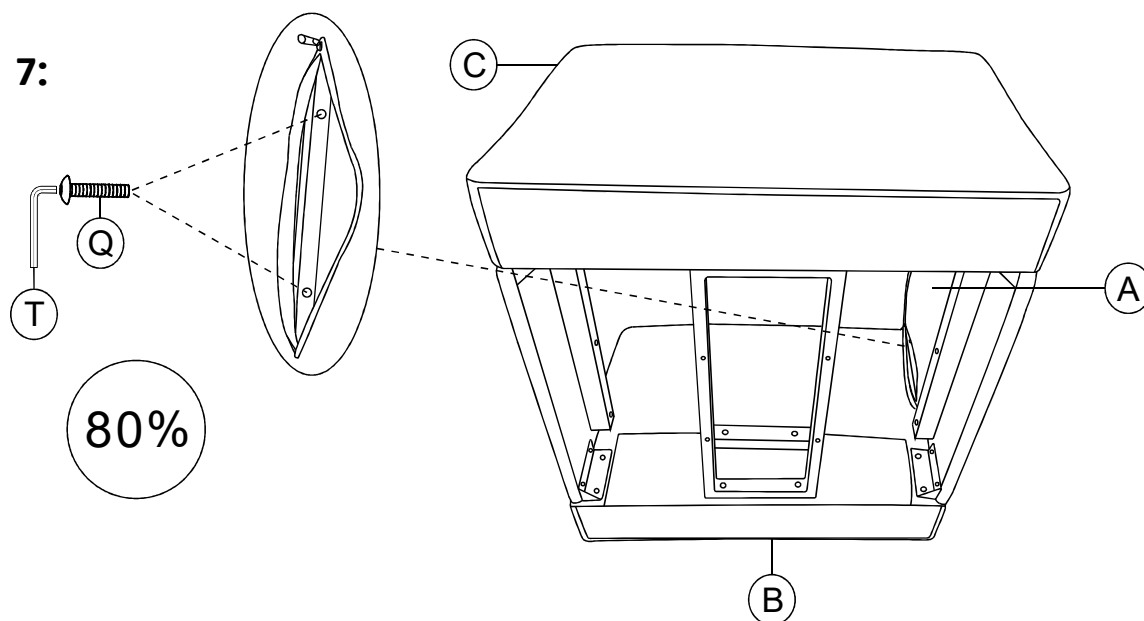


Place the armrest "B" on the floor, Lock the backrest "A" and armrest "B" with bolts (Q), tighten it with wrench (T) to 80%.

Step 8:

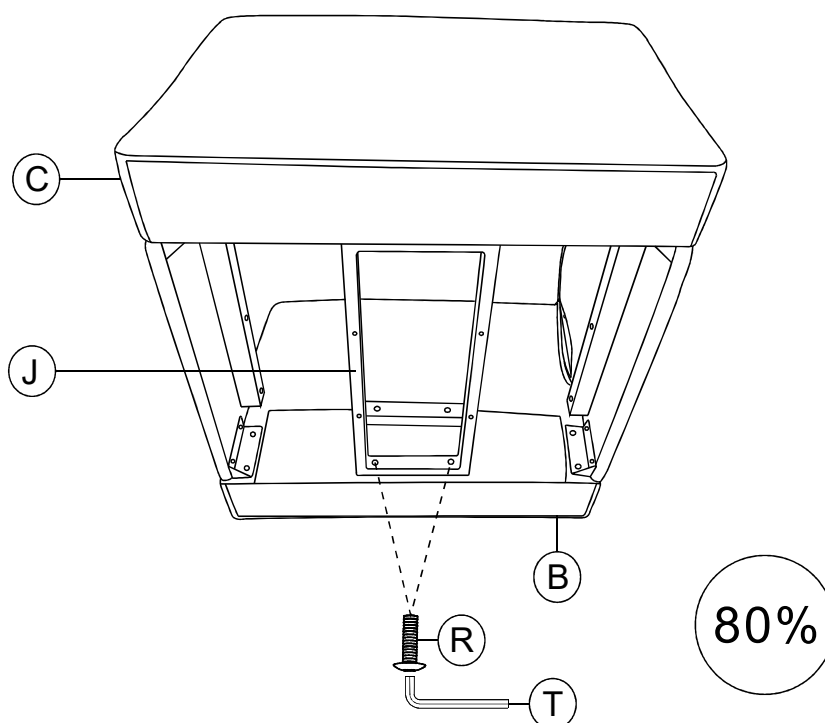


Using the bolts (R) to lock the iron frame "J" to the armrest "B" with the wrench (T) to 80%.

Step 9:

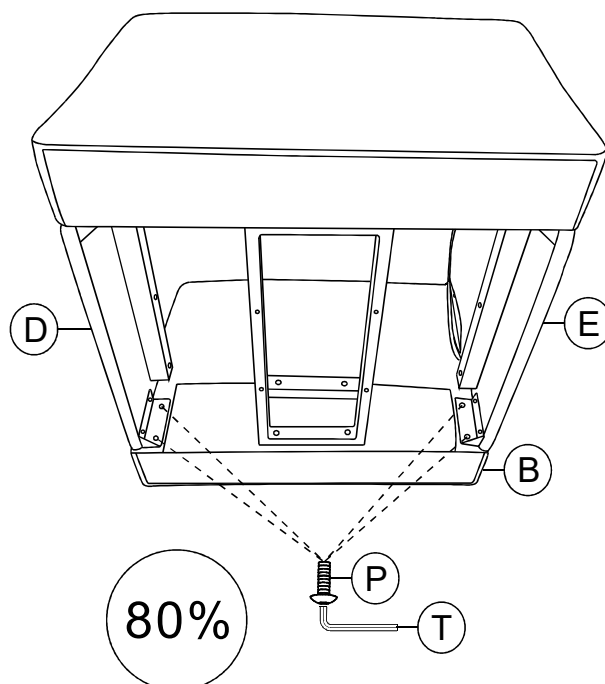


Attach the front fender "D" and the back fender "E" to the armrest "B", with two angle iron "N", using the bolts (P) and the wrench (T) to 80% .

Step 10:

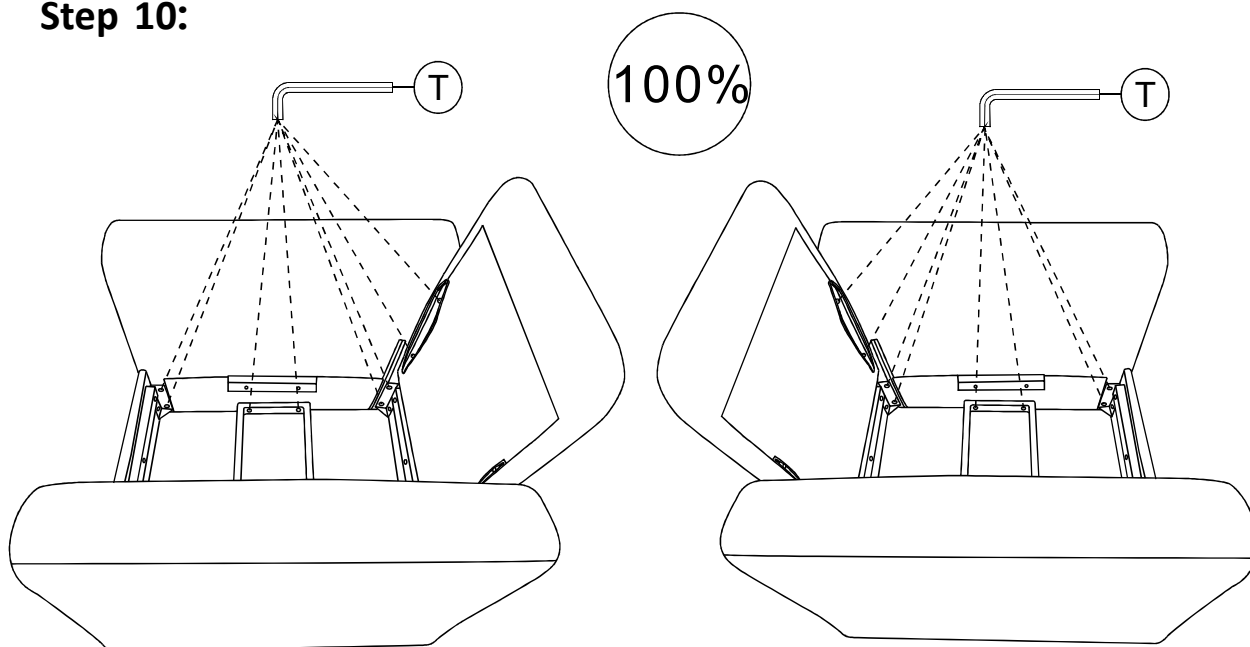


After all bolts are set ,fully tighten to 100%.

Step 11:

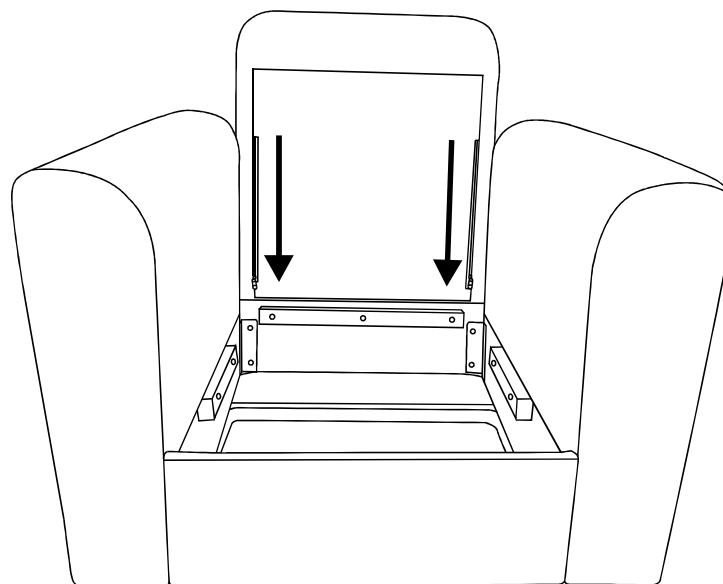


Zip up all the zippers.

Step 12:

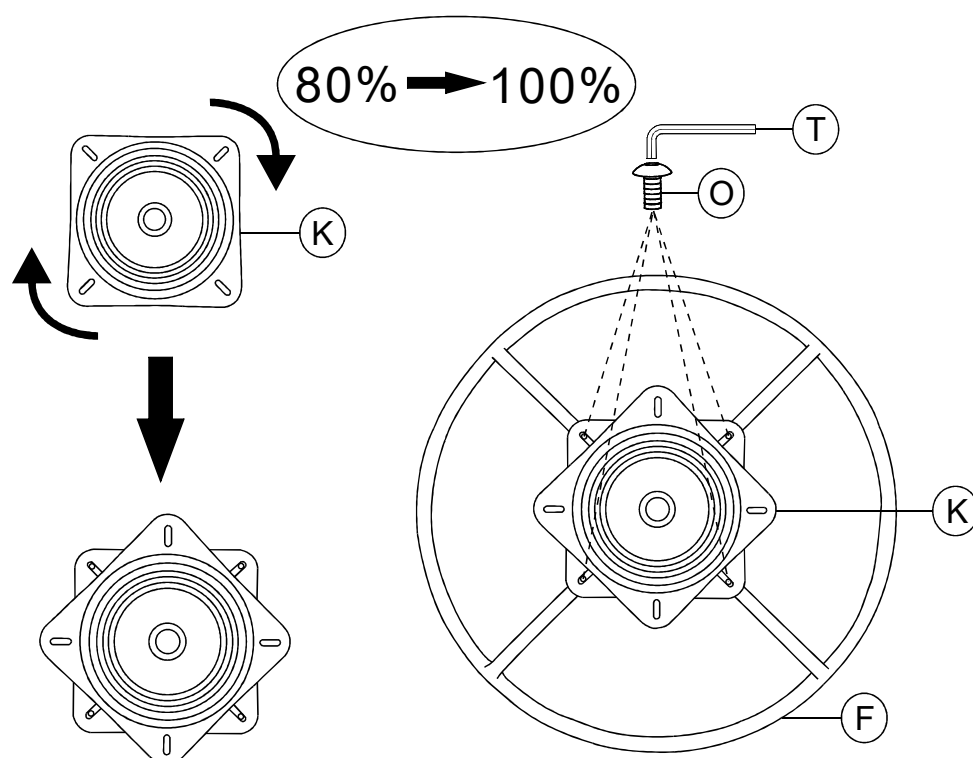


Secure the iron turntable “K” in the swivel base ring “F” with bolts(O),and tighten it with wrench(T) to 80% first and after all bolts are set ,tighten them to 100%.

Step 13:

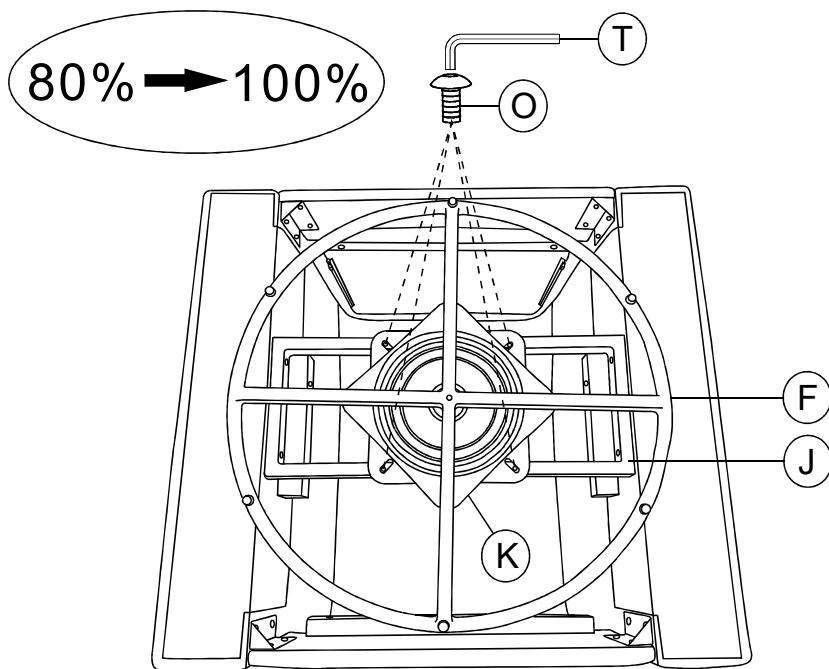


Lock the turntable “K” to the iron frame “J” with bolts (O) and wrench (T), lock them with 80% first and then fully tighten them with 100%.

Step 14:

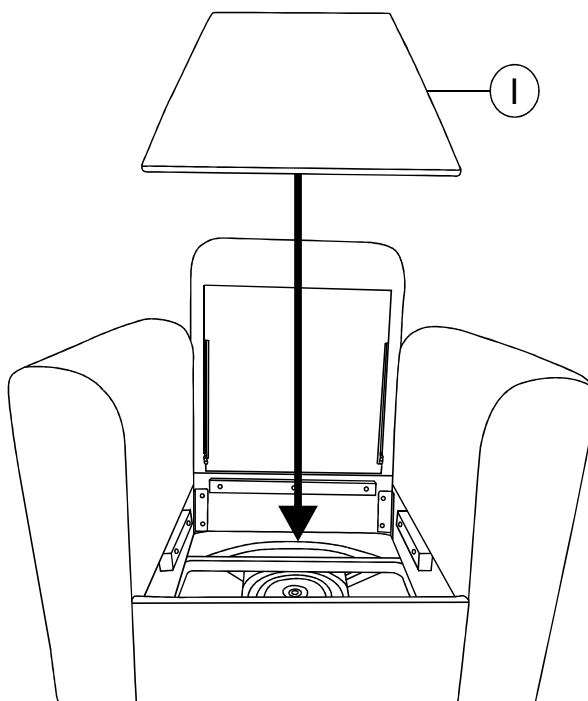


Place the seat board “I” on the chair.

Step 15:

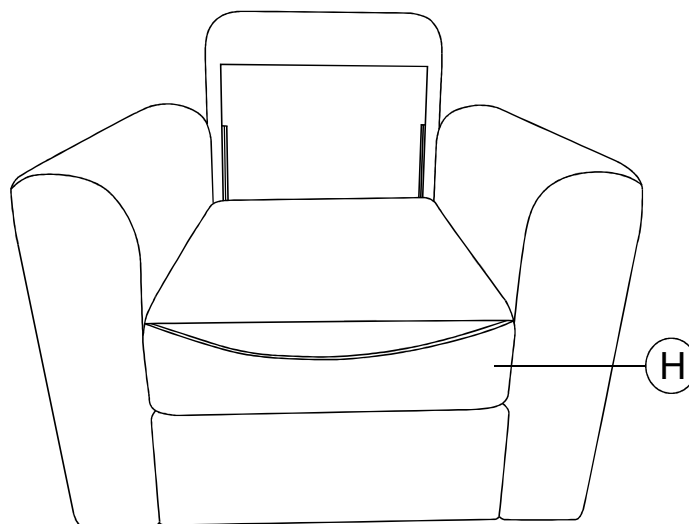

Place the seat cushion “H” to the seat board “I”.

Step 16:

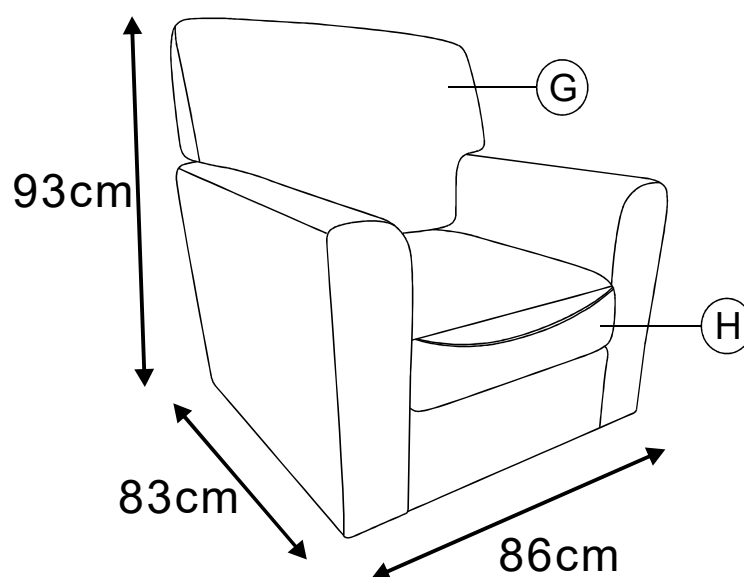

Place the back cushion “G” on the back.

ATTENTION!!

Bolts may loosen during normal everyday use. They should be periodically inspected and re-tightened to prevent damage or injury. Always check to ensure that all hardware is kept tightened.

Warnings

1. Please check if the components of the chair are all included and can be used normally.
2. Please DO NOT sit on the armrests to eliminate the risk of tipping over.
3. If the chair is damaged or doesn't match the website description, please send clear pictures of the product and label of the carton to our service team for further help.
4. If you have any questions with the product, please contact us by:

Email: [**customerservice@zoy-living.com**](mailto:customerservice@zoy-living.com) (we. will reply to you within 24 hours)