


RINALDI 4 DOOR SIDEBOARD

Assembly Instructions

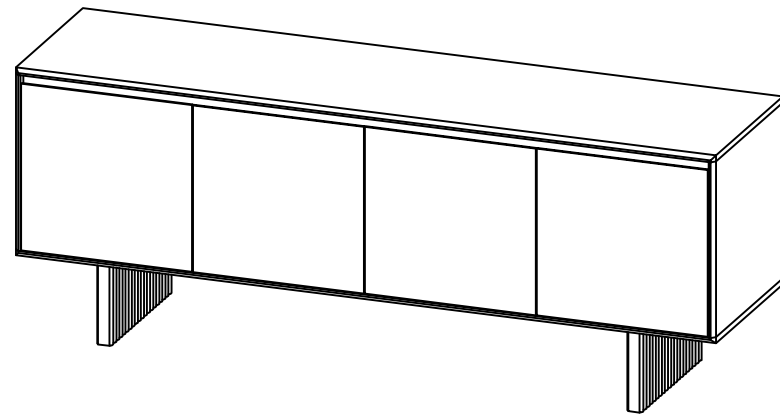

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new sideboard. you won't need any additional tools.

Parts List

A x 1
SIDEBOARD



HW1 x 16
Allen bolt 16x6MM



B x 2
LEG



HW2 x 16
Flat washer 16x8MM




HW3 x 1
Allen Key 4MM



Hardware List




1

Place the Sideboard (A) on its back on a clean surface. Align the screw holes on the legs (B) to the screw holes on the bottom of the sideboard (A).

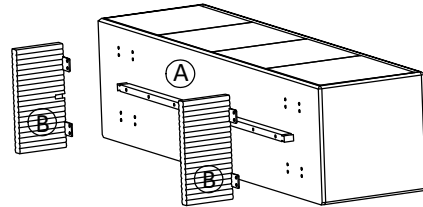


2

Place the flat washers (HW2) on the Allen bolts (HW1). Use the Allen Key (HW3) to screw in the Allen bolts (HW1) with the washers (HW2).

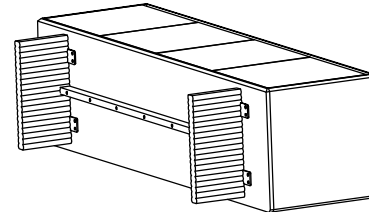

3

Flip the Sideboard upright with help of another person.

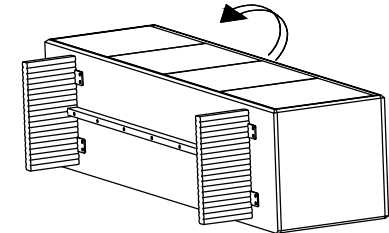

4

Place the sideboard in the position where you will use it.

