
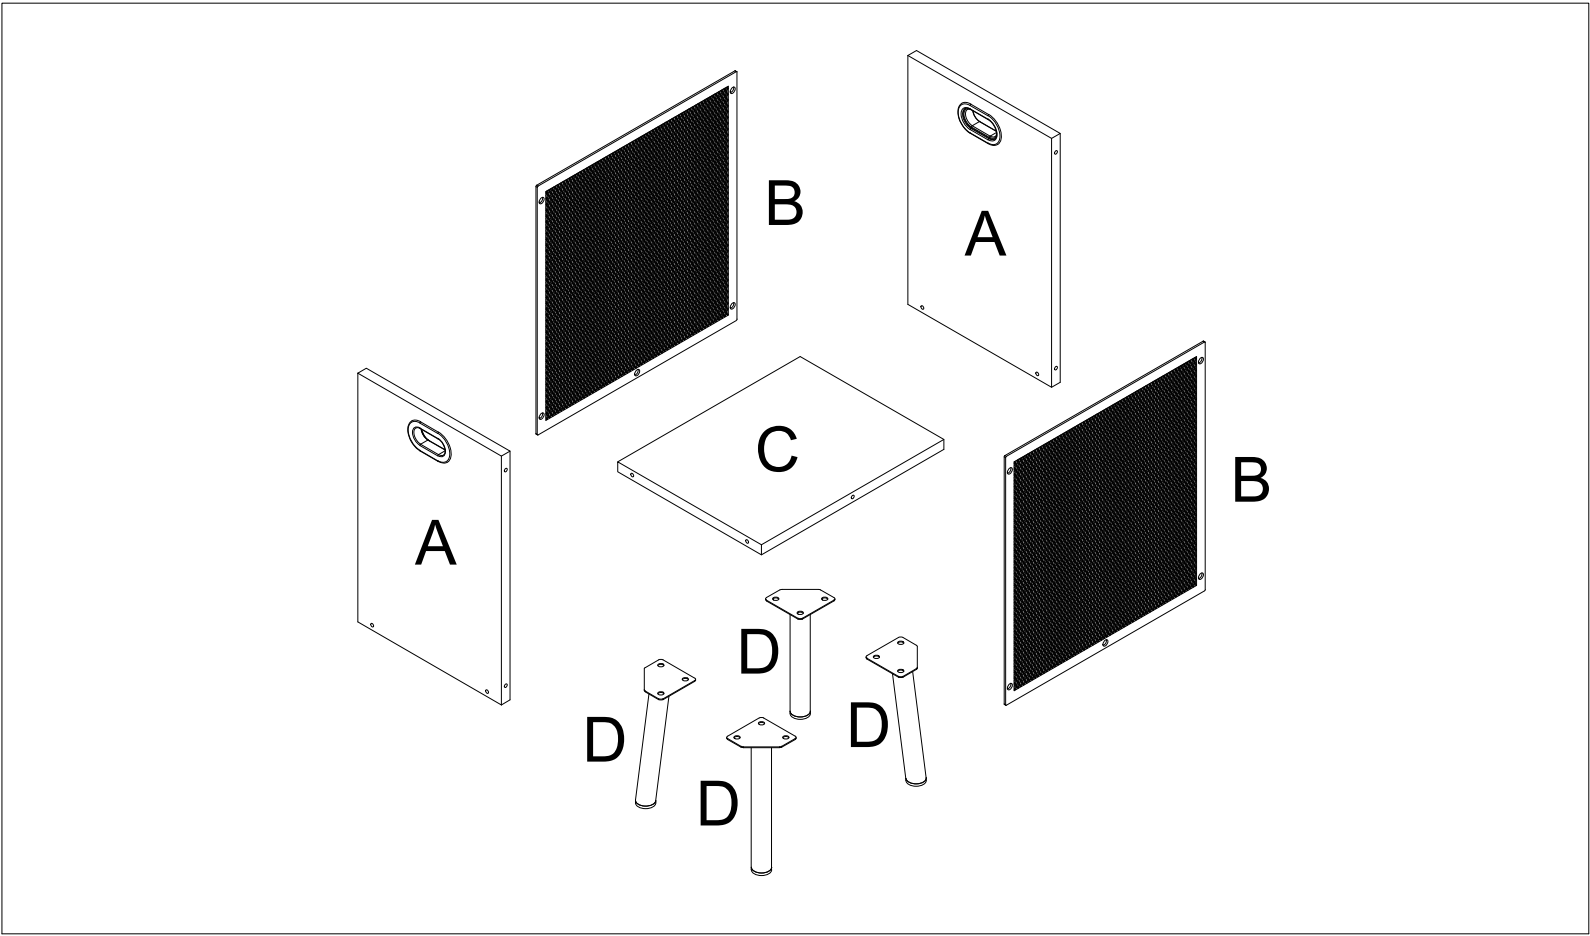
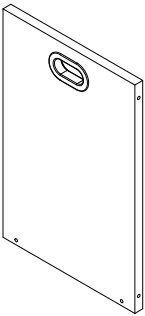
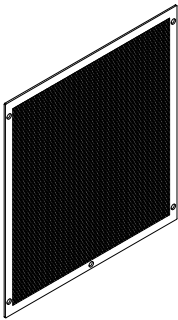
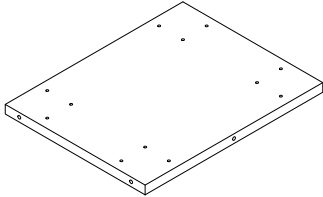
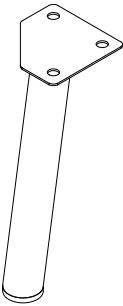
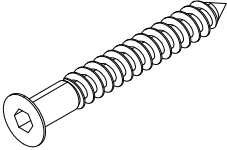


Assembly instructions




Parts included

 A * 2pcs	 B * 2pcs	 C * 1pc	 D * 4pcs
 ① 14pcs	 ② 16pcs	 ③ 1pc	


Installation steps

1.Align the support feet D in the board C in accordance with the pre-treated holes and secure with screws ①.

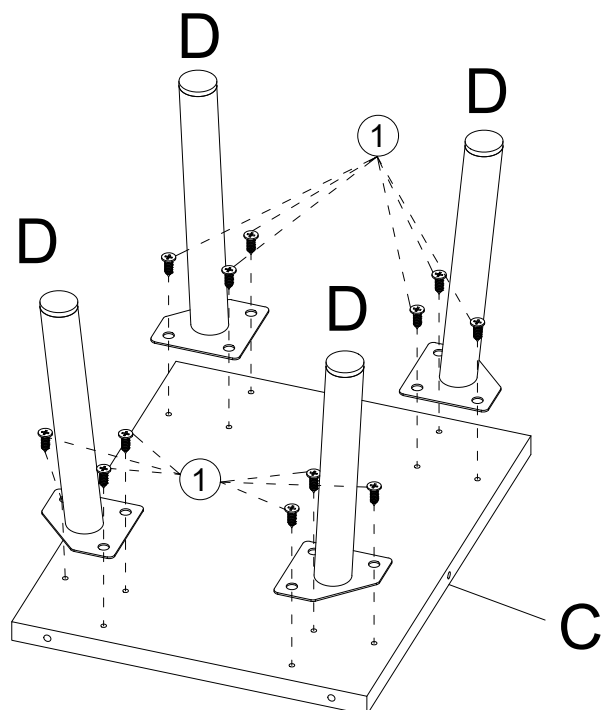


①	x 12
---	------

2.Align board A and board C with the holes (smooth side of the handle on board A facing out, stacked side facing in) and tighten with screws ②. Note: Do not fully tighten the screws yet.

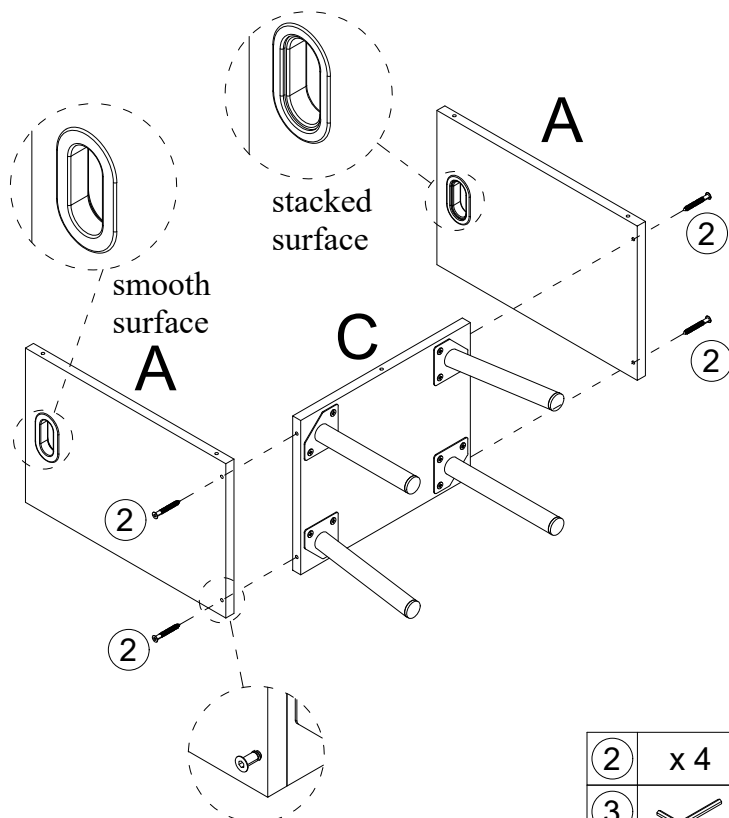

②	x 4
③	

3.Align the iron mesh B with the organized frame in the hole position, and then tighten it with screw ②. Note: After all the screws are screwed into the holes, then tighten them all.

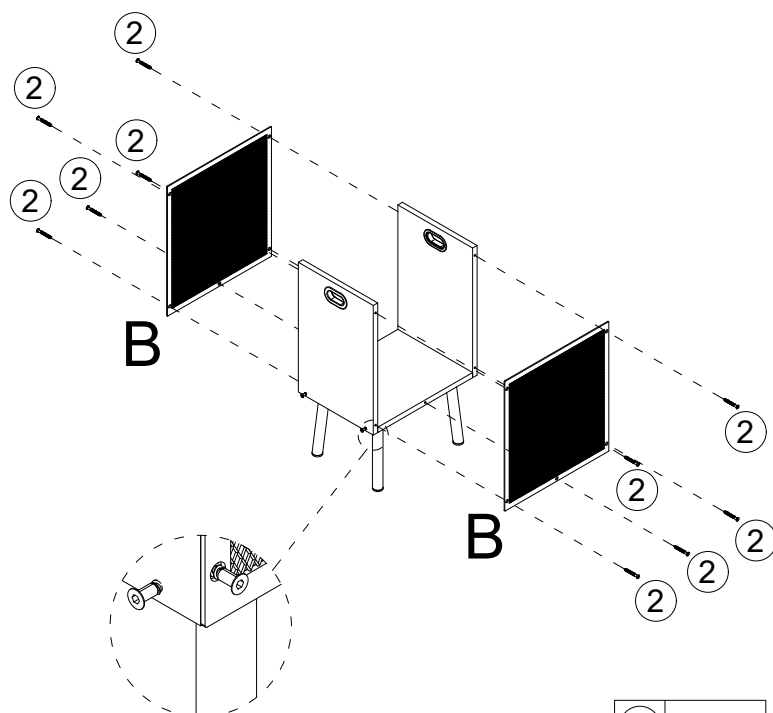

②	x 10
③	

4.The installation is complete.

