


Bamboo Bed Frame Set-up Instruction

Size: Full (8903-16/18)

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!


Components-Parts

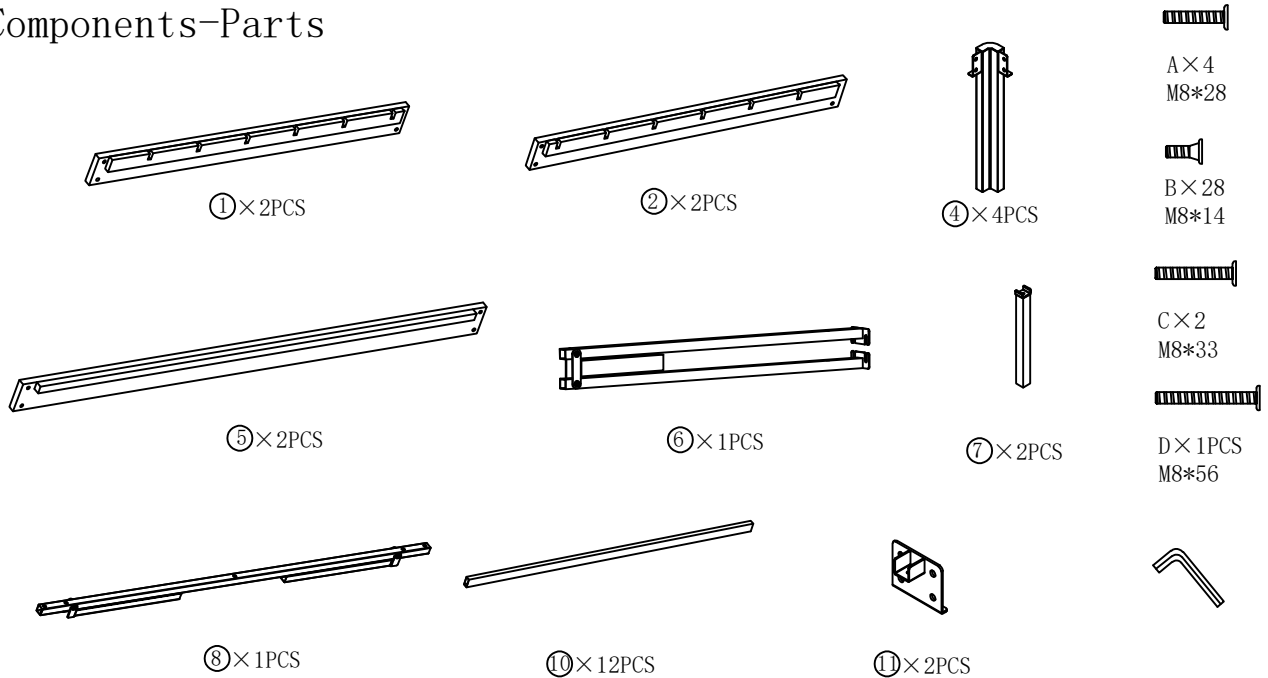



NOTE: The M8*27 for the bolt indicates a diameter of 8 mm (0.315 in) and a length of 27 mm (1.06 in).

Spare: A×1、B×1、C×1、E×1



Component Distribution - Easy Assembly in 7 Steps

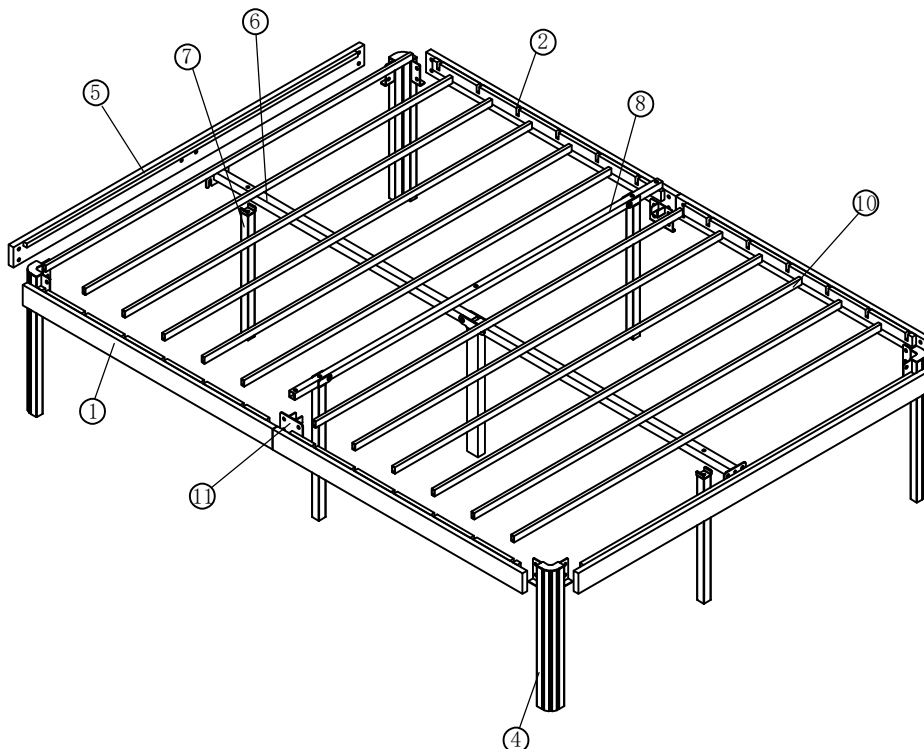



Step1:Take out parts ①&② & ⑪; Joint them with screws as shown

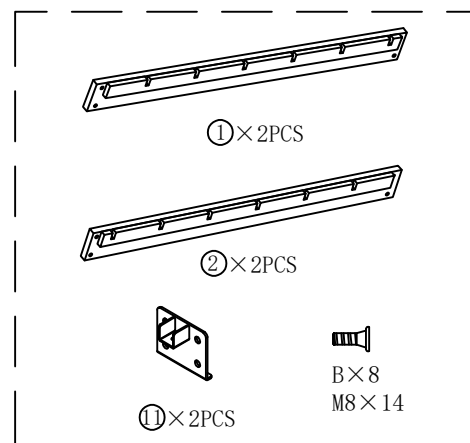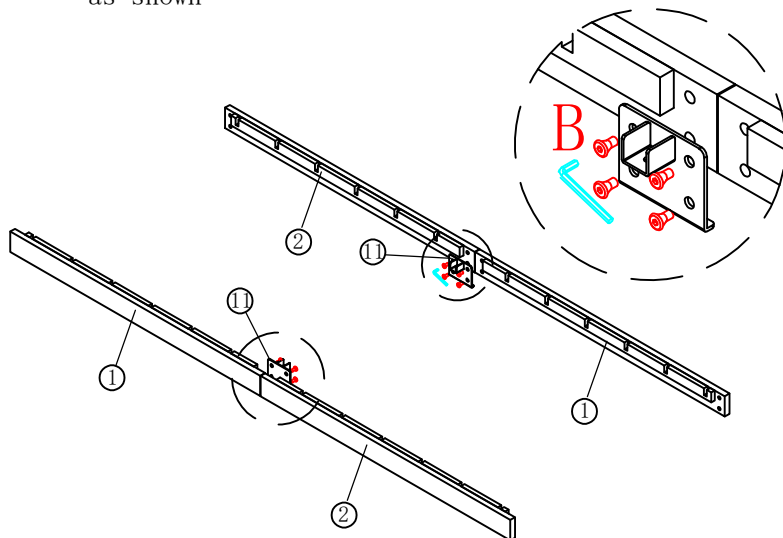



Step2:Joint four corners with screws as shown

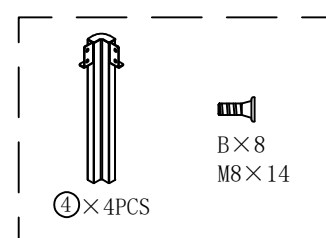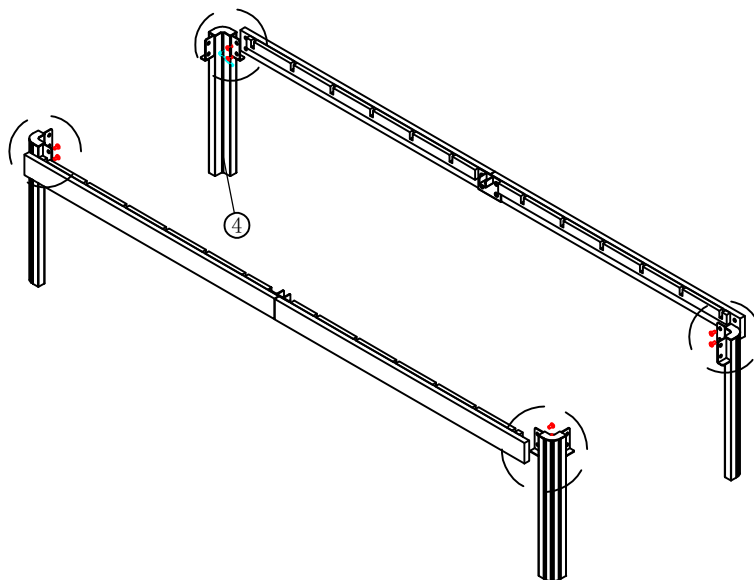

Step3:Joint parts ⑤ with screws as shown

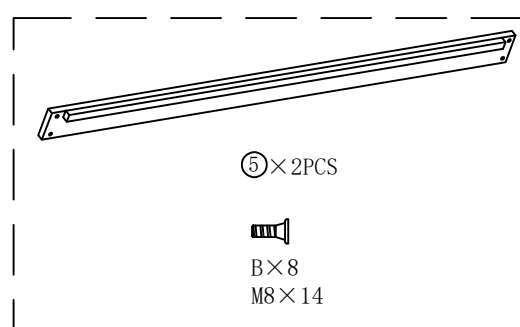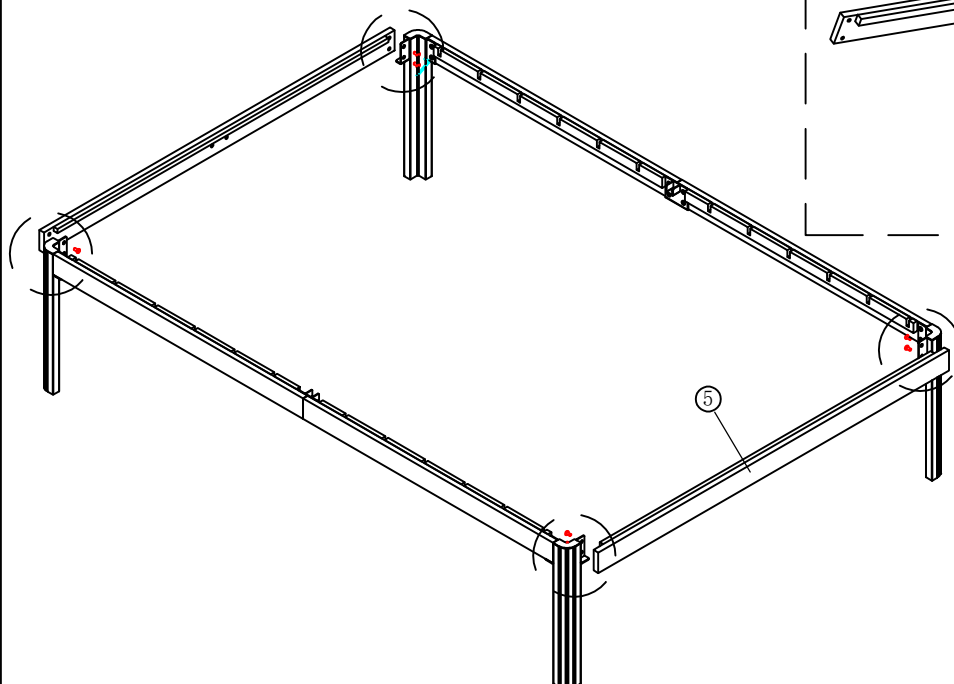


Step4:Joint parts ⑥ with screws as shown

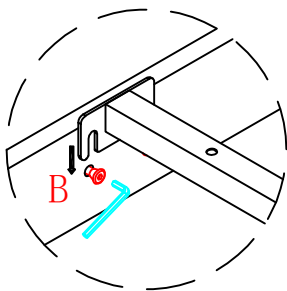


⑥×1PCS



B×4
M8×14

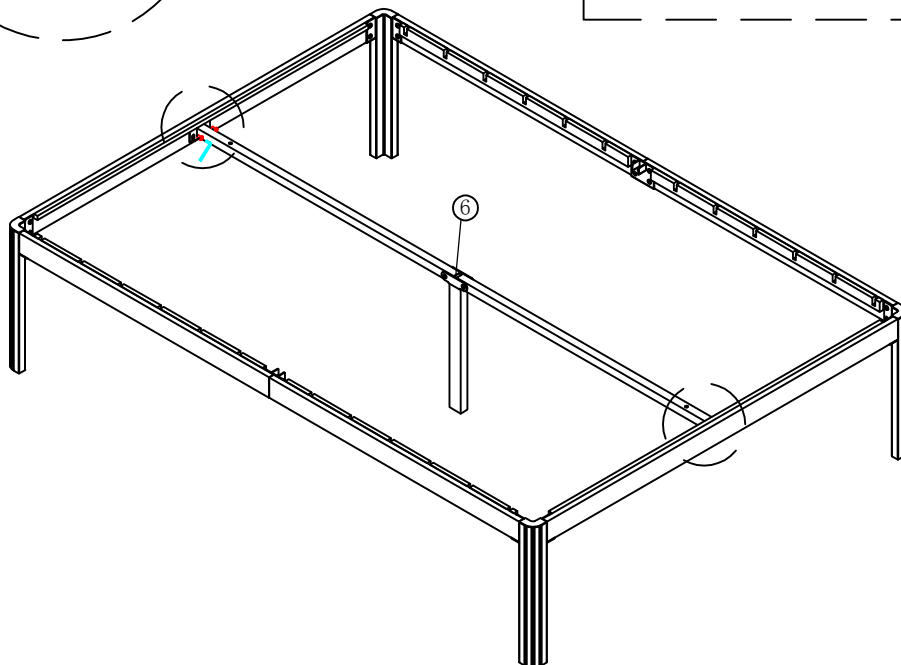


Step5:Joint parts ⑦ with screws as shown

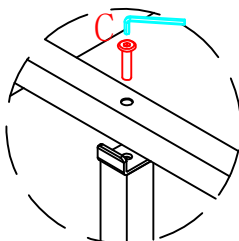


⑦×2PCS




C×2
M8×33

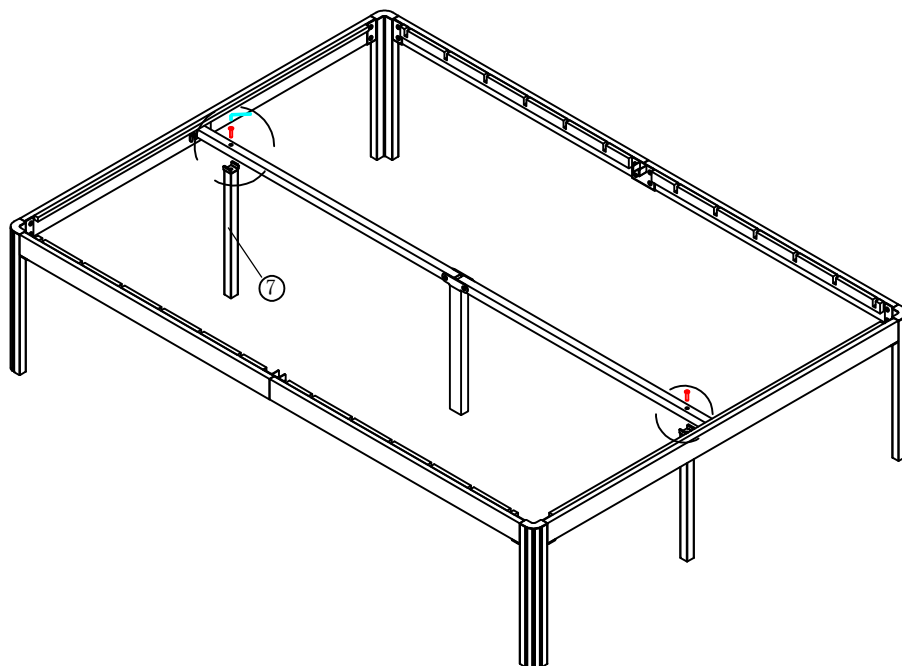

Step6:Joint parts ⑧ with screws as shown

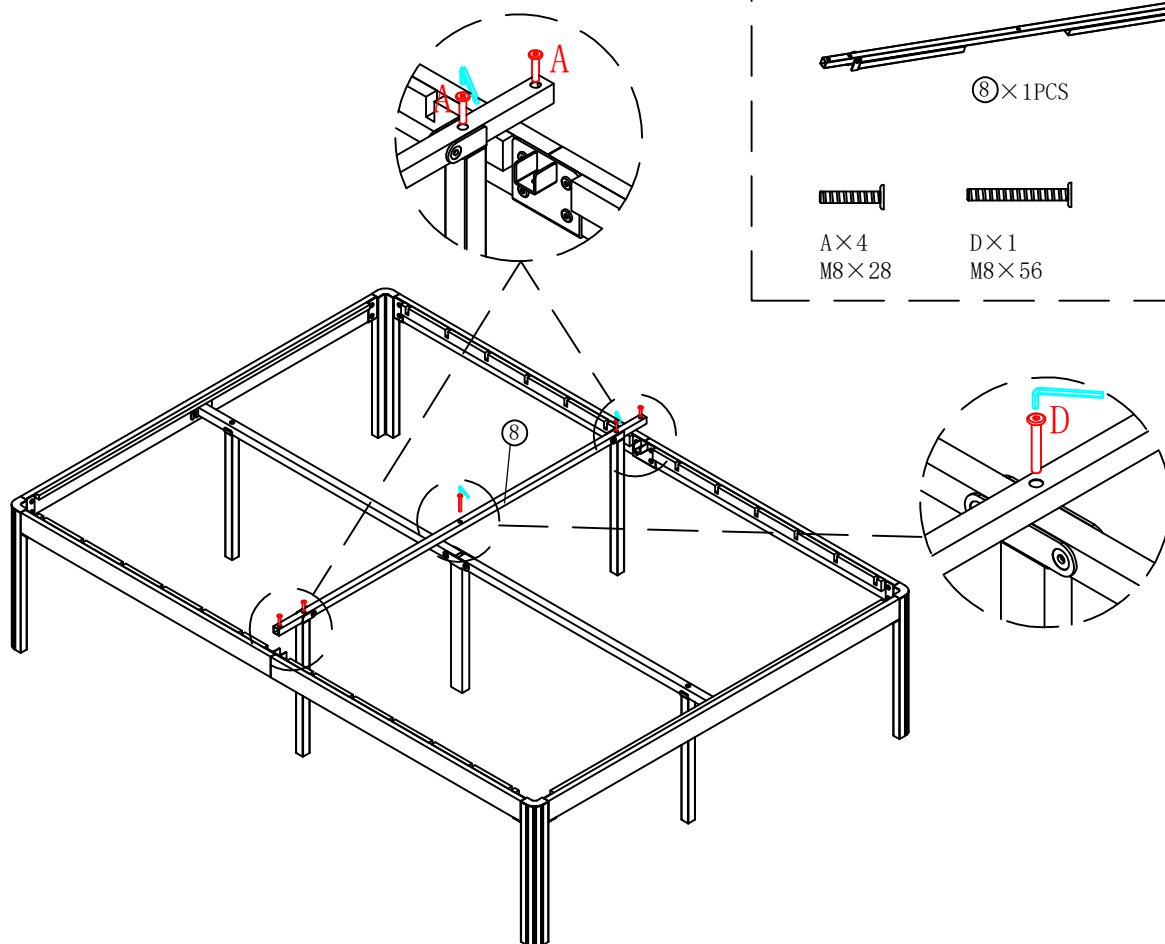

Step7:Insert 12 slats

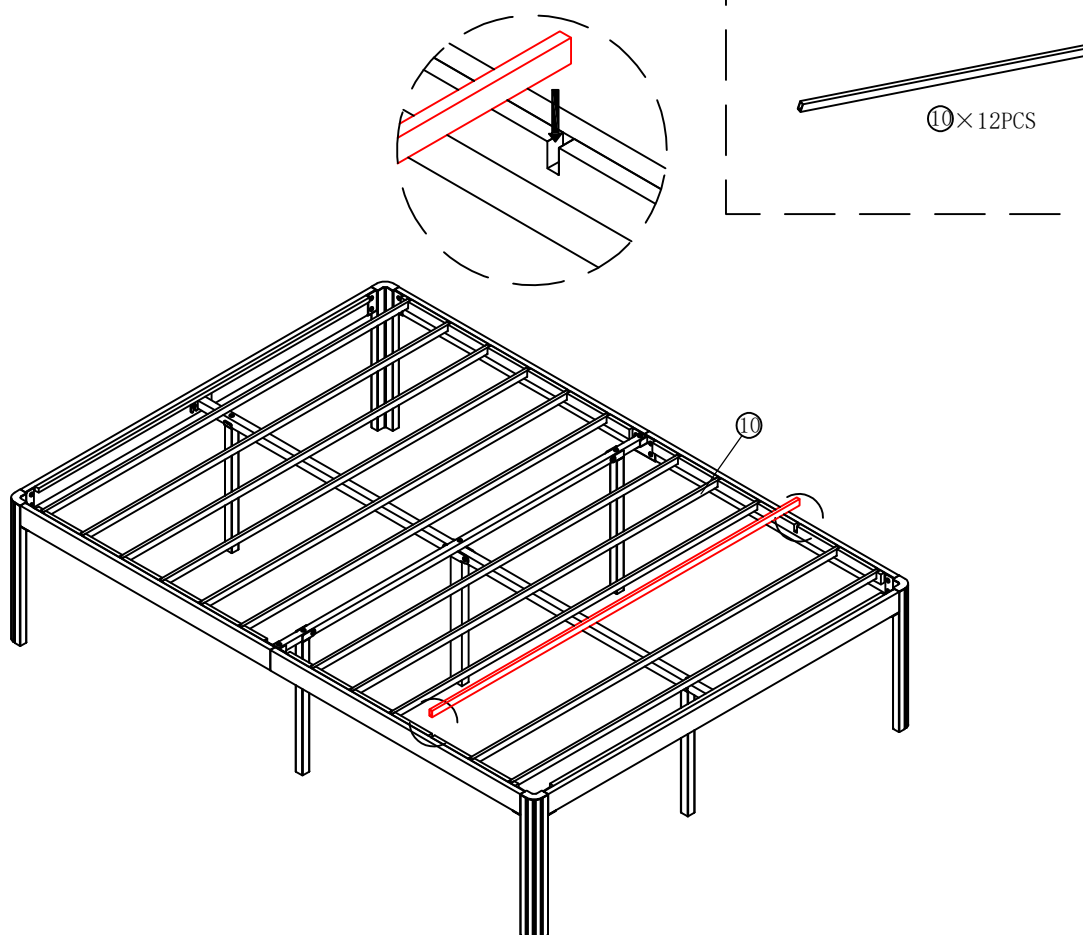

In the last step, please make sure all the screws are tightened.