




Loft Bed

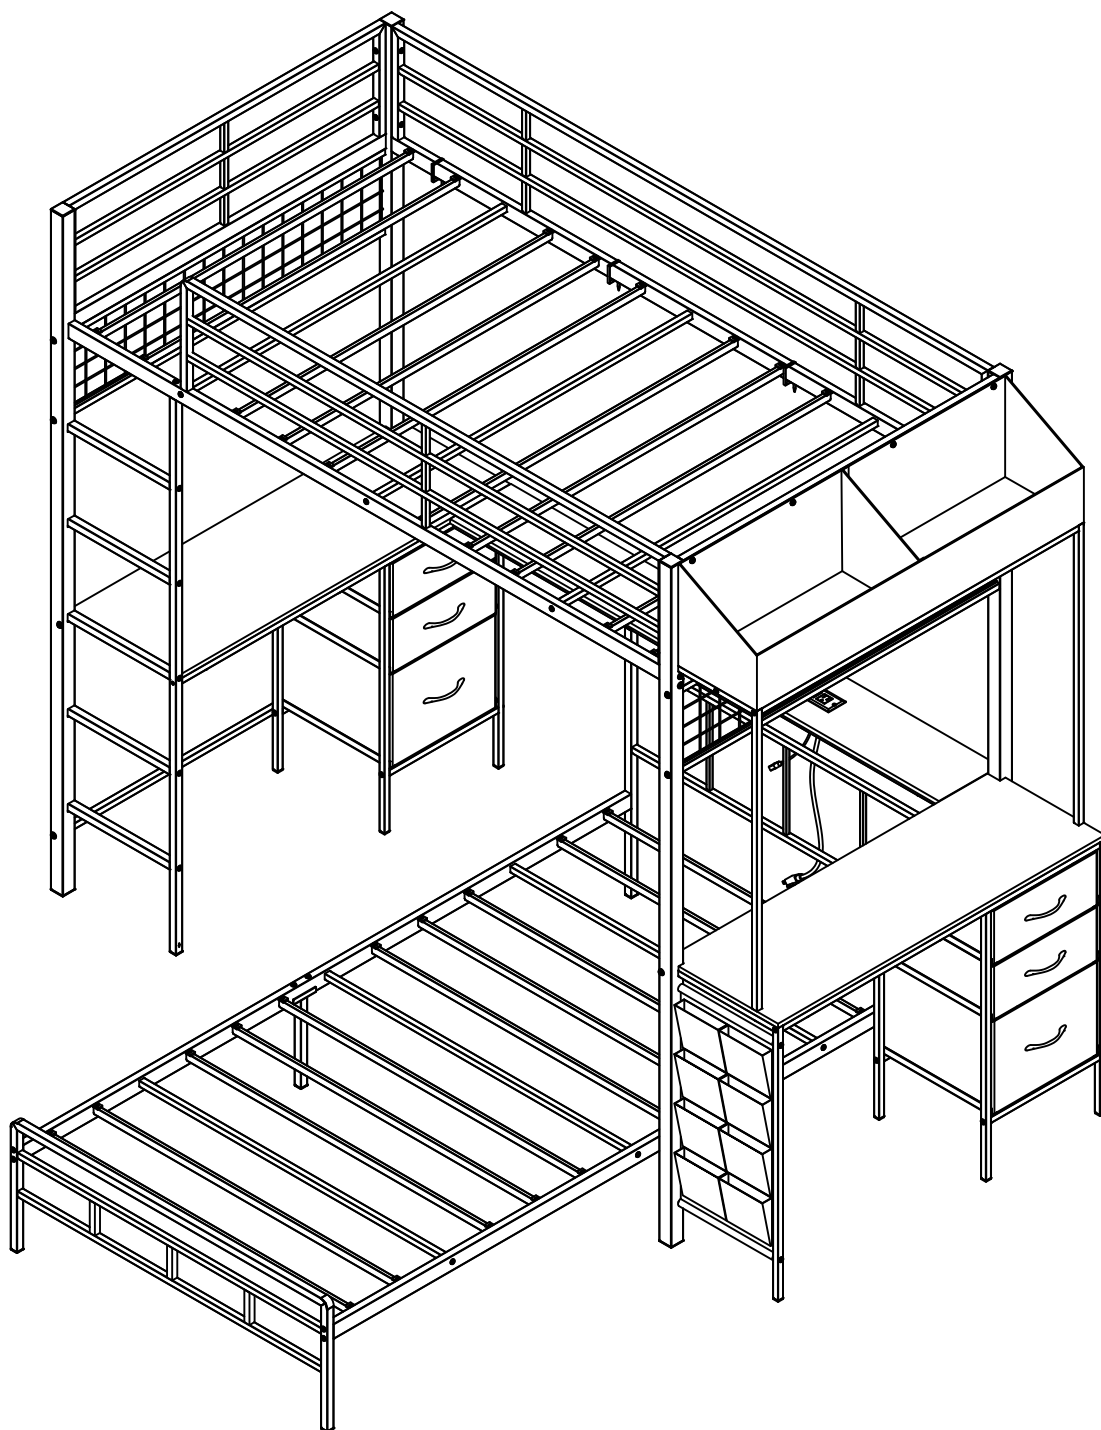

Version 1.0


! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

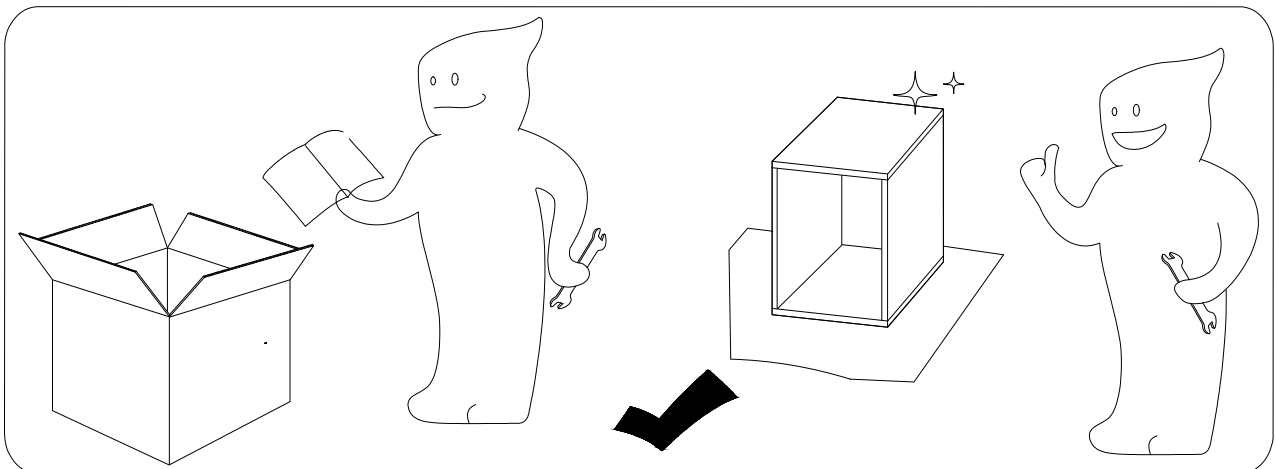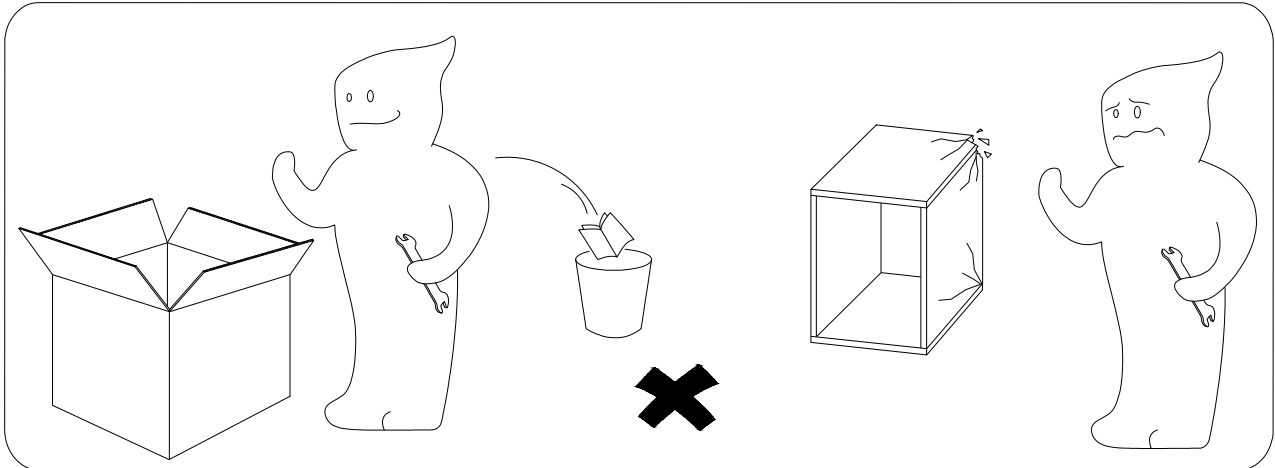

Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

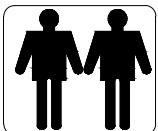


For easier and better assembly, 2 or more adults are required.


PARTS LIST

BOX : A


PACKING DETALS:TOTAL 2 BOXES




1×1




2×1



3×1



4×1

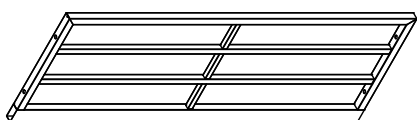


5×1




6×1




7×1

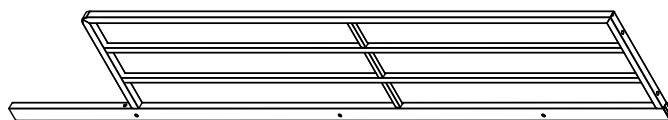

8×1

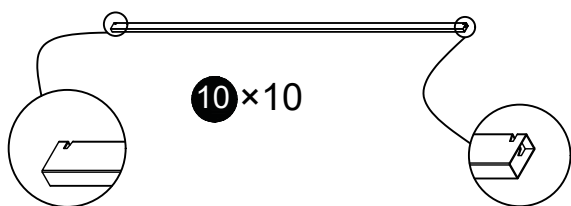


10×10




11×1




14×2



16×1




18×5



20×1



22×1



24×1

Install parts


PARTS LIST

BOX : A

PACKING DETALS:TOTAL 2 BOXES




25×1



26×1



31×5




34×1



35×10




36×2




37×6



38×4



39×6



40×6




44×1



45×42



46×5



47×1



48×1



51×10



52×2

HARDWARE LIST



A

M4*12
x2+1



B

M6*15
x9+1



C

M6*24
x19+1




D

M6*40
x69+3



E

M6*50
x4+1



F

M6*60
x32+3



G

M6 washer
x24+2



H

4#
x1



I

4#
x1



J

x6



K

M6
x2



L

Ø14
x2



M

M4*12
x12+1



N


10#
x1

Install parts


PARTS LIST

BOX : B


PACKING DETALS:TOTAL 2 BOXES



9×6




12×5



13×2




15×2




17×1




19×4




21×1




23×2

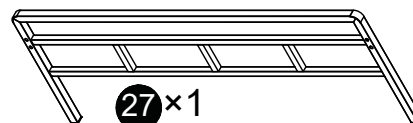

27×1



28×3



29×1



30×1




32×2



33×2




41×1




42×1



43×1



49×1




50×1

Note:

1, Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.

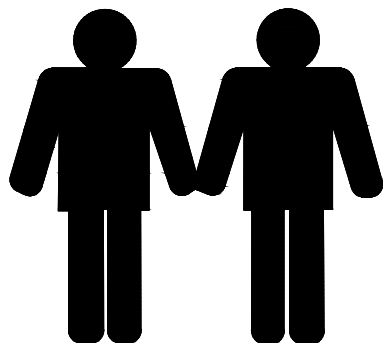

It needs at least two people to install




Before starting the assembly, you must read the whole manual and follow the instructions.

This set comes in 2 boxes. If you


do not receive a full set of 2 boxes, please contact our customer service.

box A: 1-8, 10, 11, 14, 16, 18, 20, 22, 24, 25, 26, 31, 34-40, 44-48, 51, 52 screw pack, instructions;

box B: 9, 12, 13, 15, 17, 19, 21, 23, 27-30, 32, 33, 41, 42, 43, 49, 50 instructions.

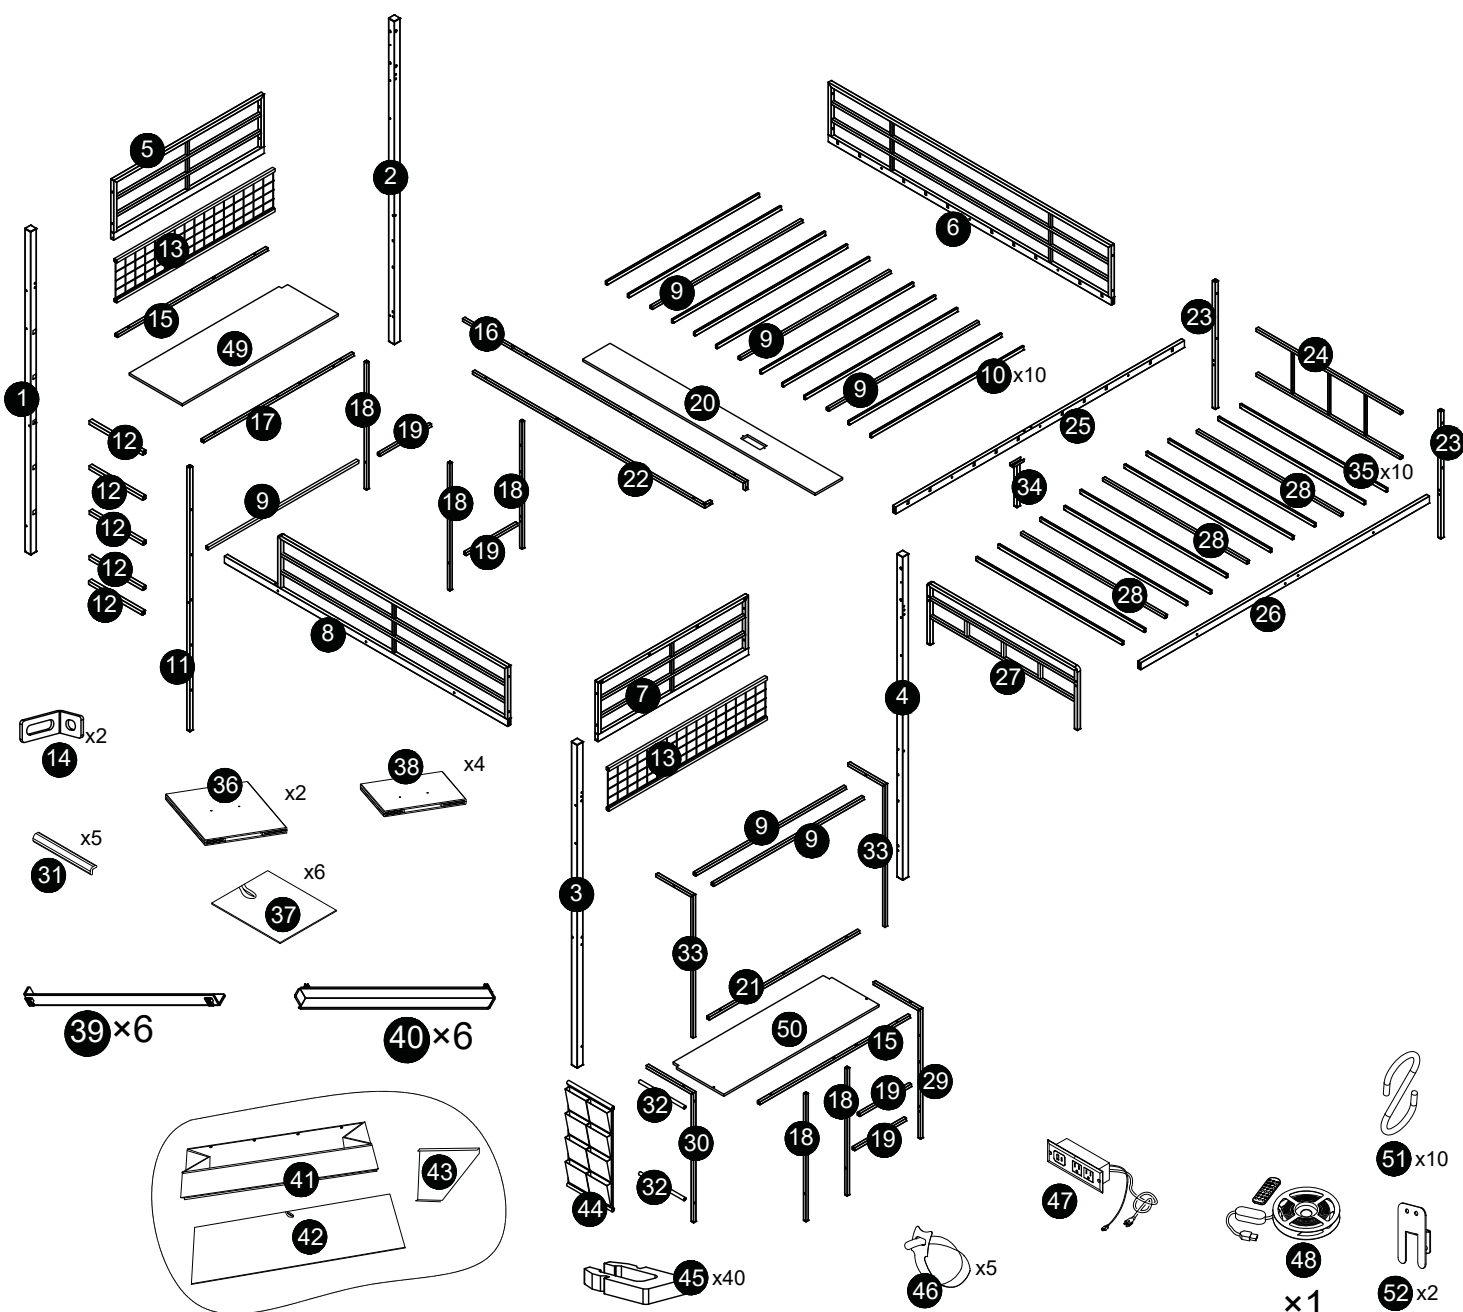

1

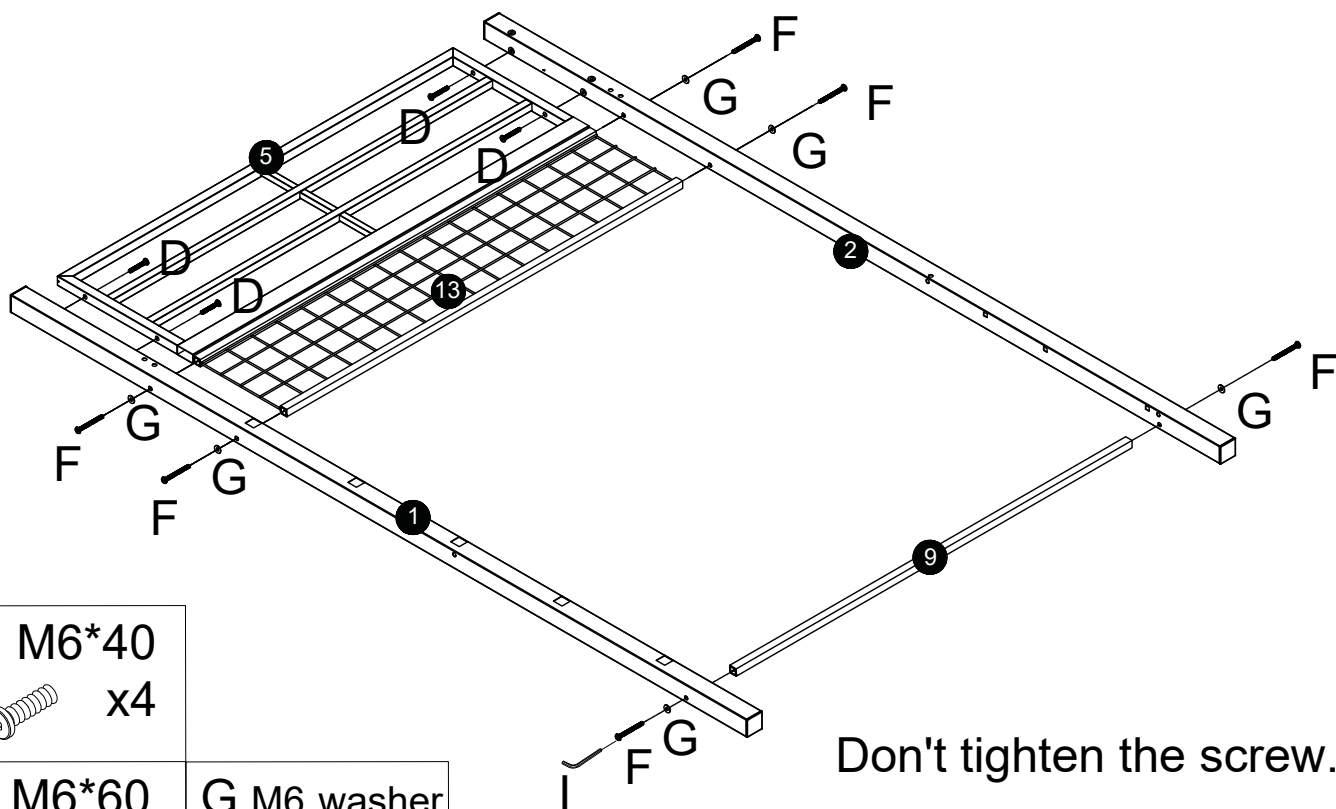


D M6*40
x4

F M6*60
x6

G M6 washer
x6

Don't tighten the screw.

2

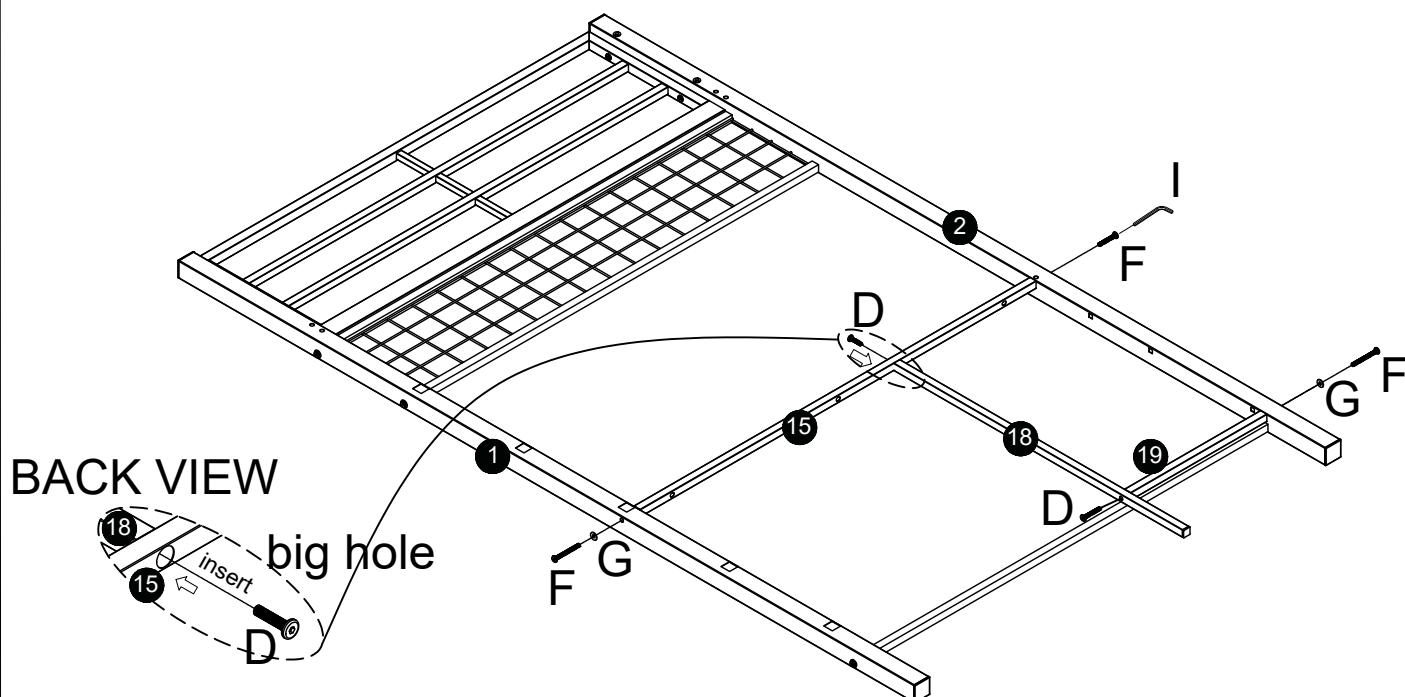

BACK VIEW

big hole
insert


D M6*40
x2

F M6*60
x3

G M6 washer
x2

Tighten all the screws

3

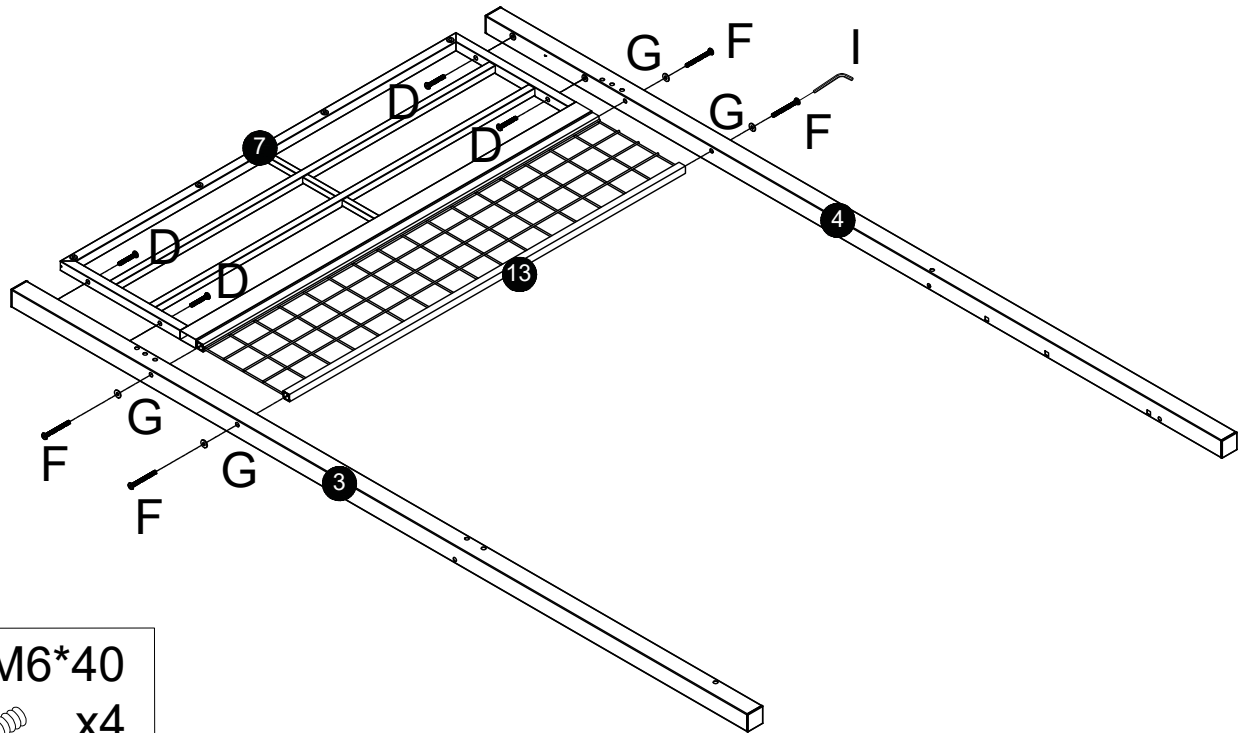


D M6*40
x4

F M6*60
x4


G M6 washer
x4

4

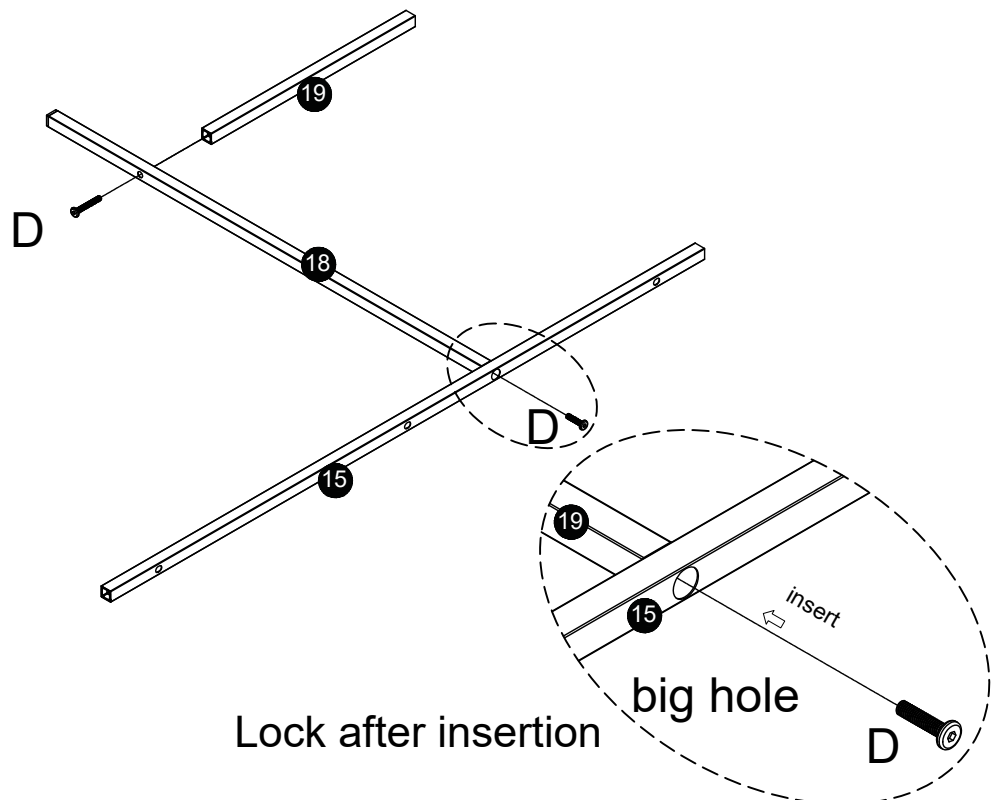


D M6*40
x2

5

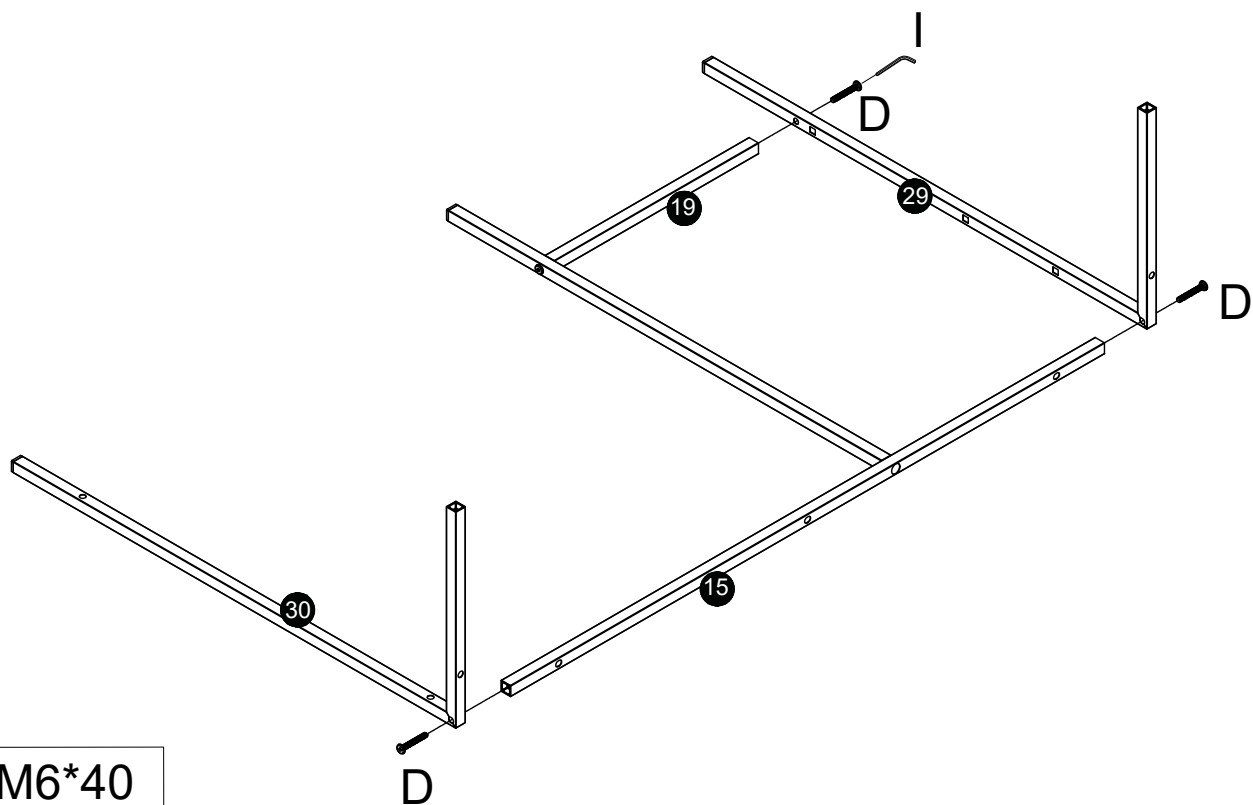


D M6*40
x3

6

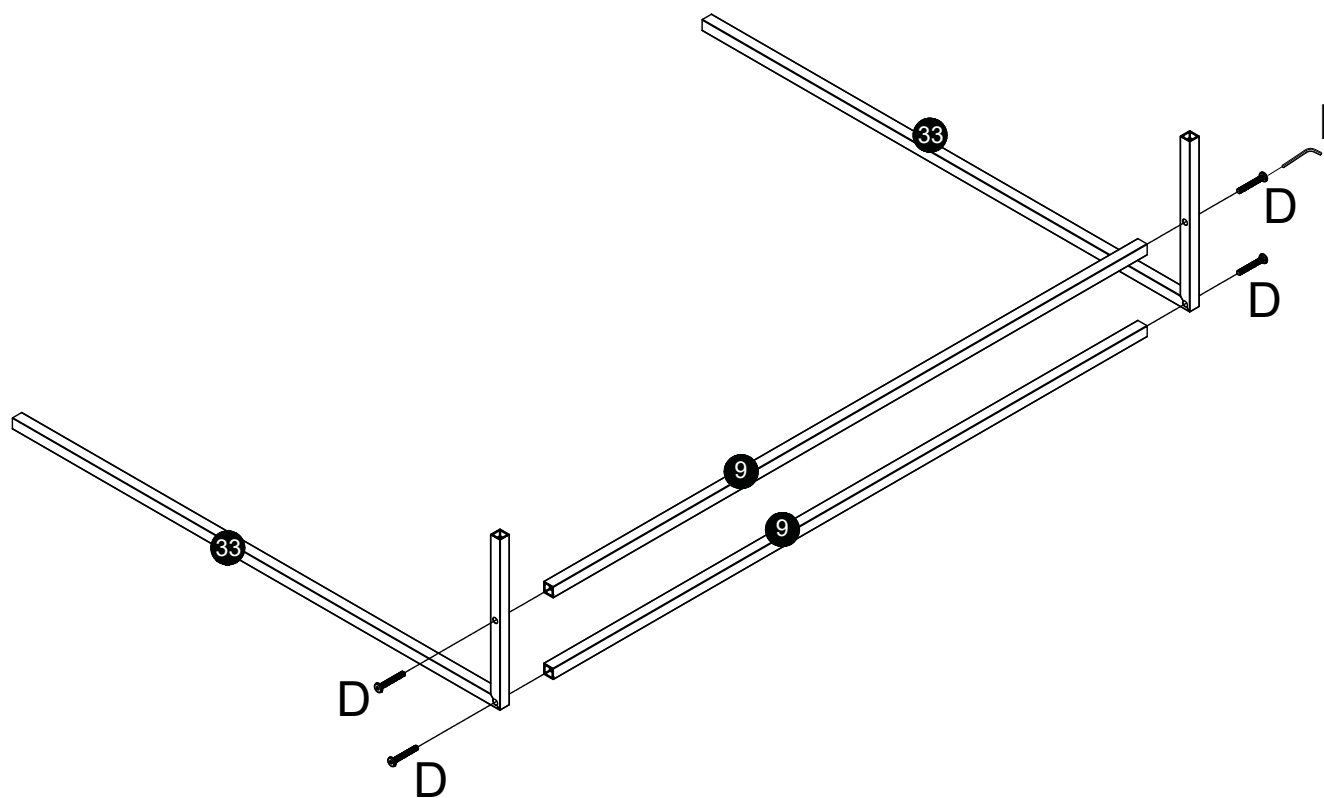


D M6*40
x4


7

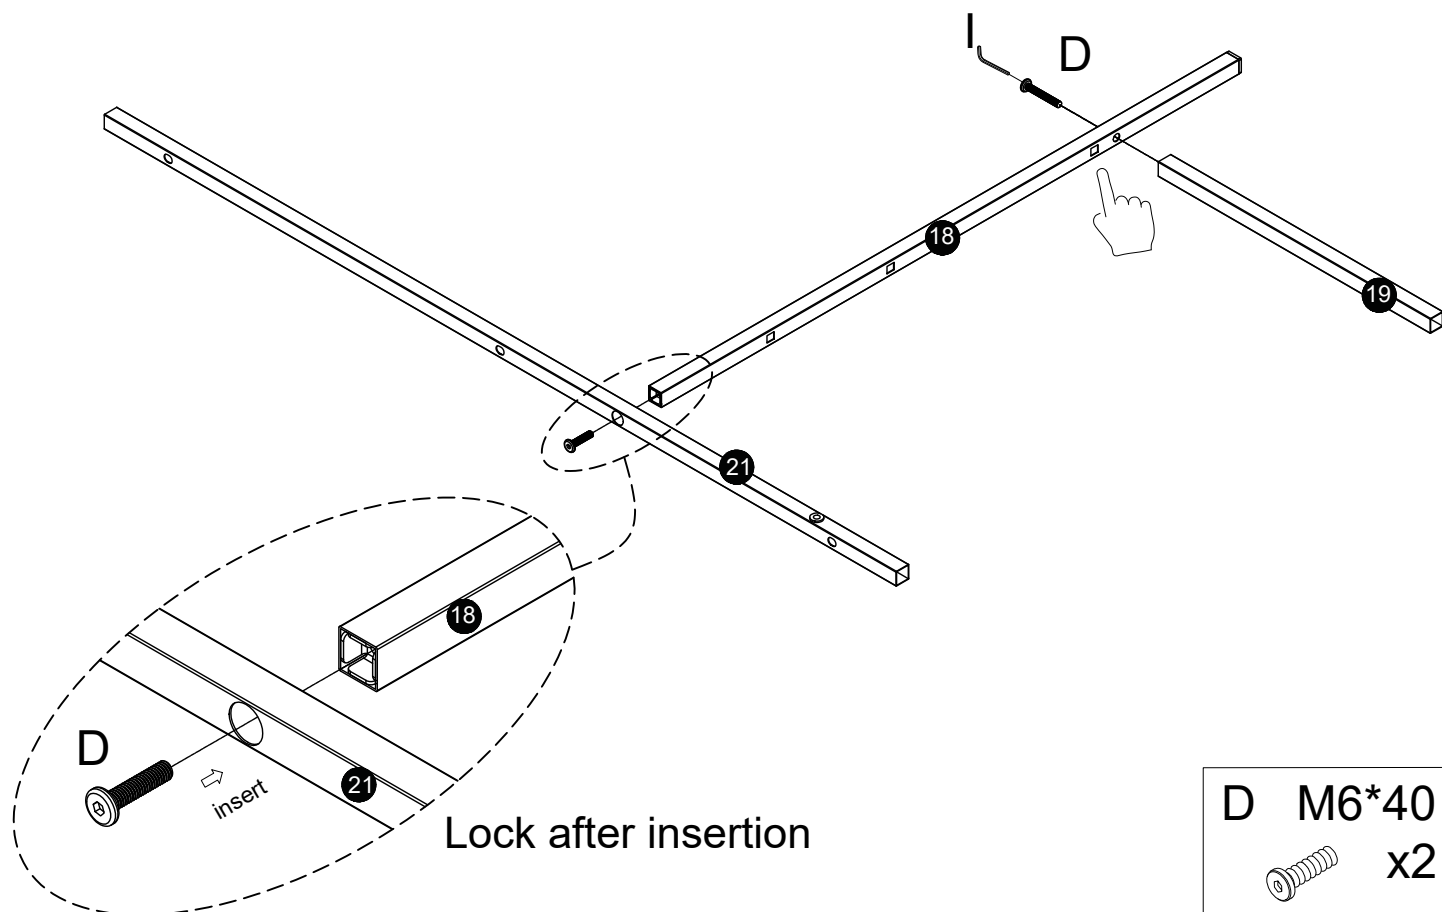

8

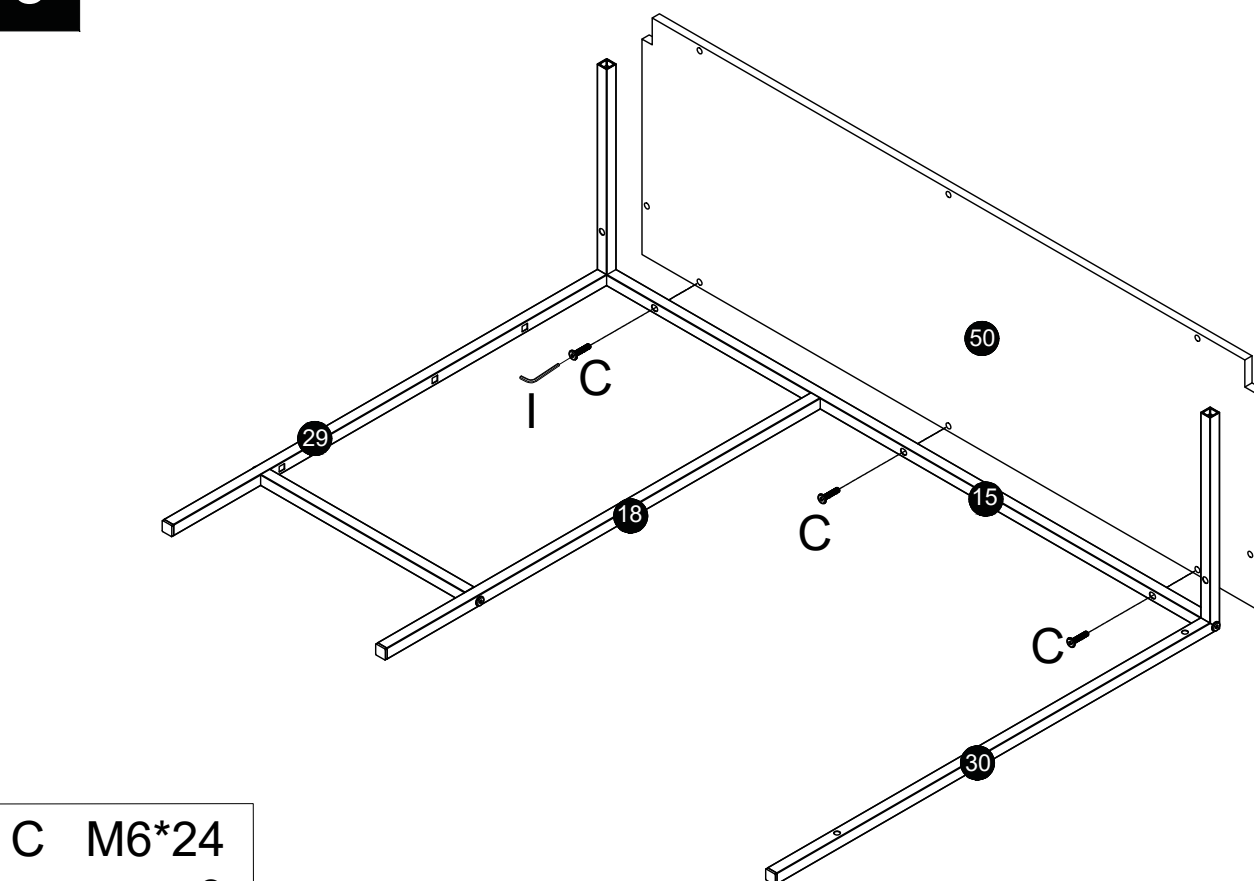


9

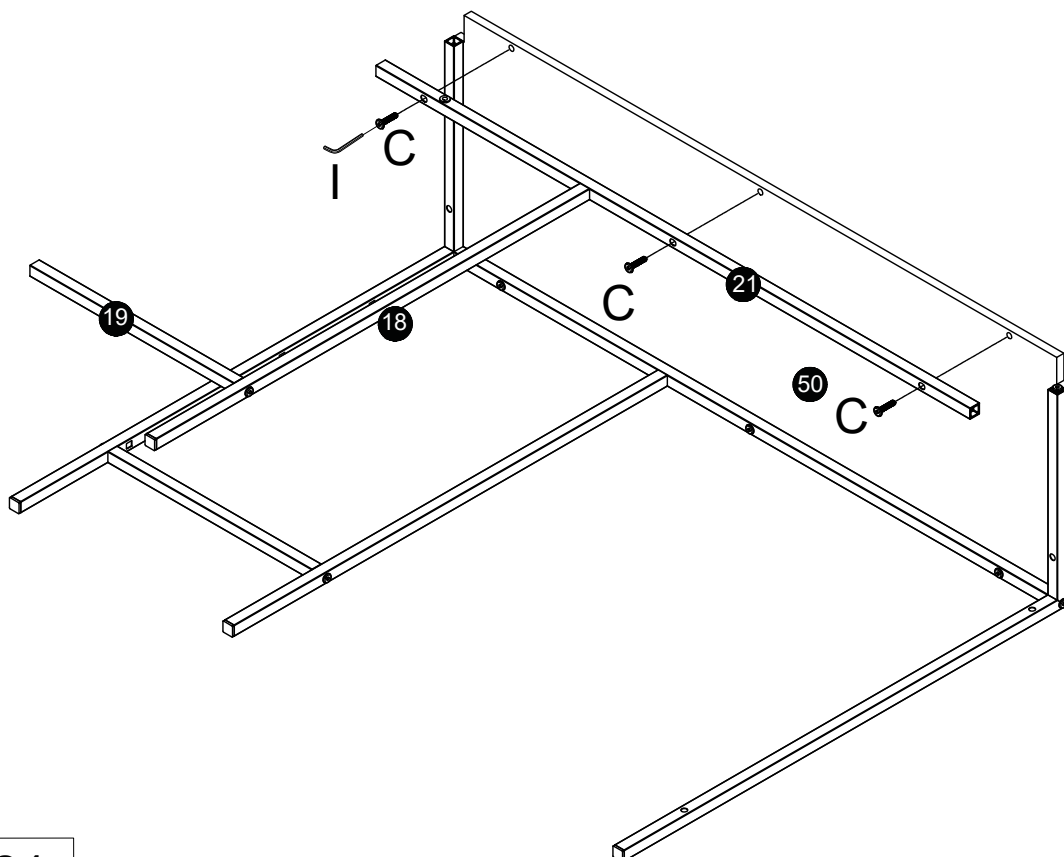

C M6*24
x3




10

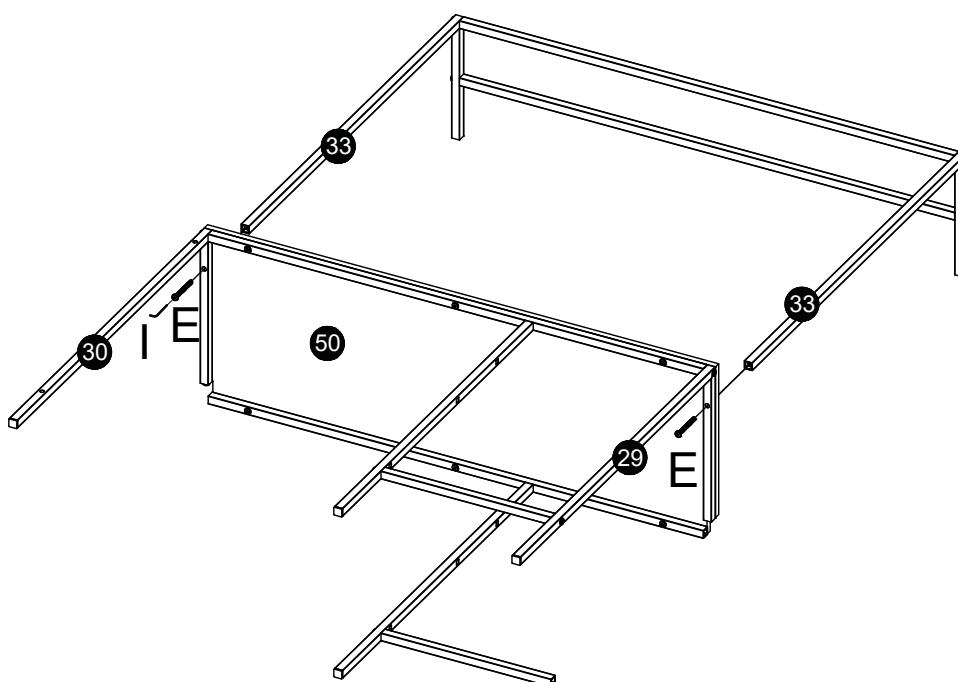


E M6*50
x2




11

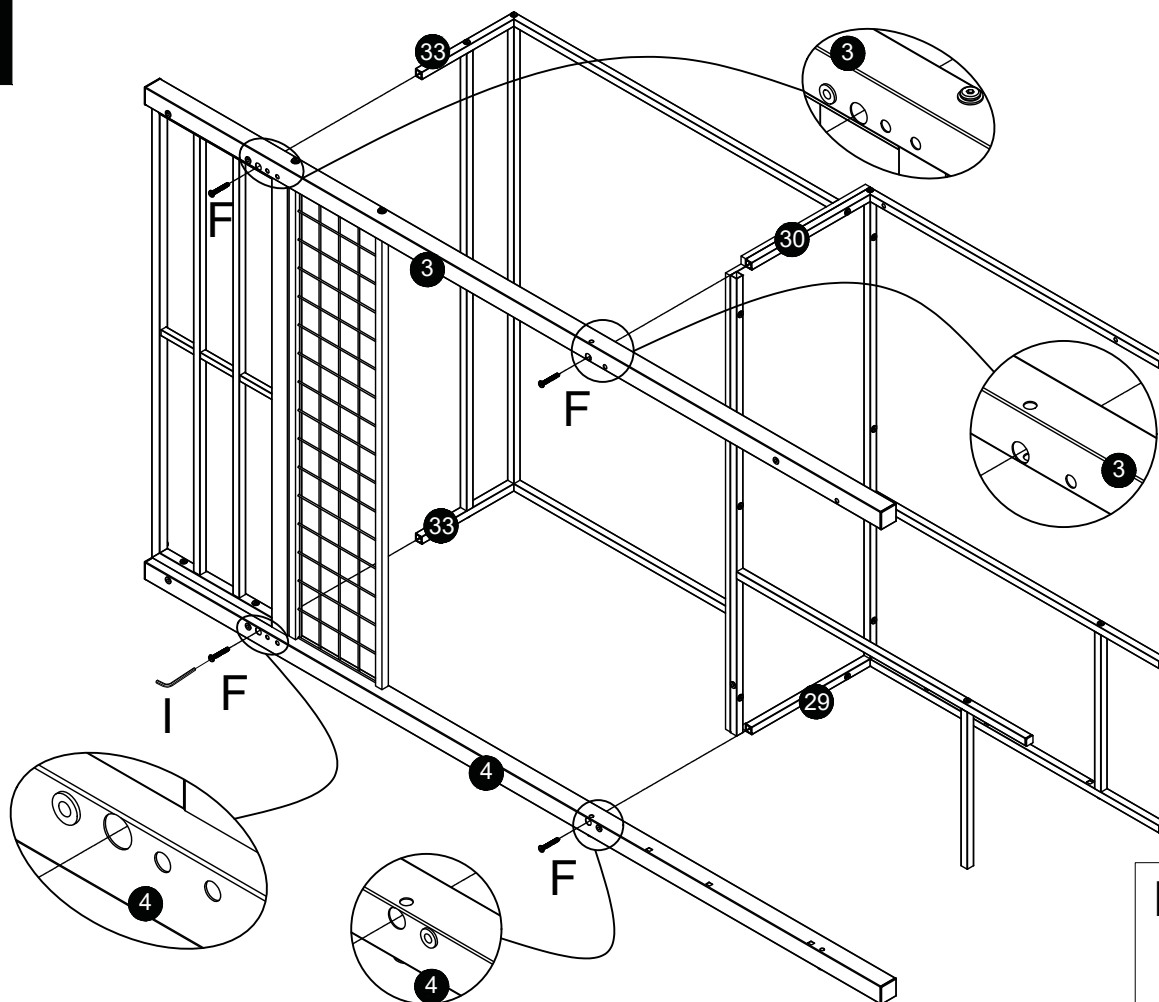


F M6*60
x4



12

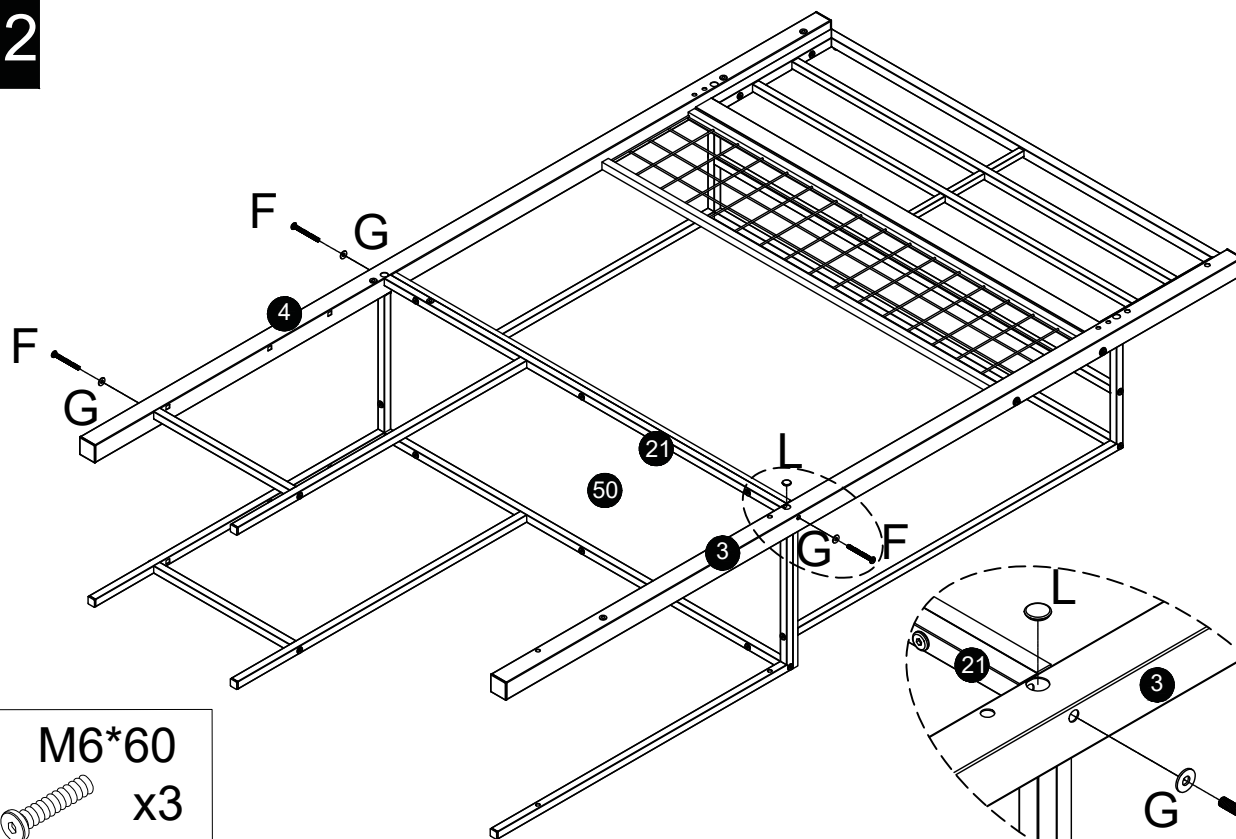


F M6*60
x3



G M6 washer x3
L Ø14 x1




13

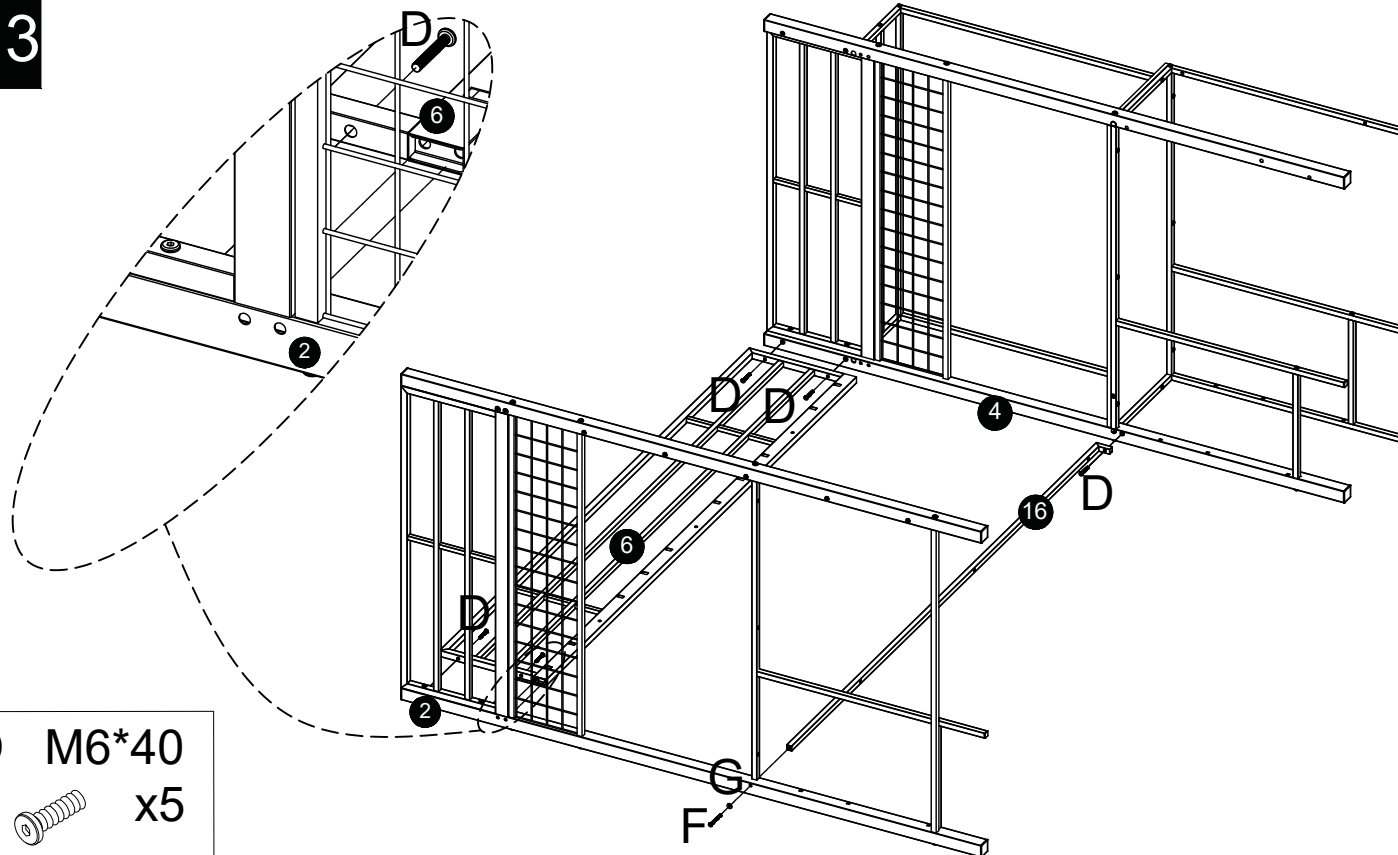


D M6*40
x5

F M6*60
x1

G M6 washer
x1


14

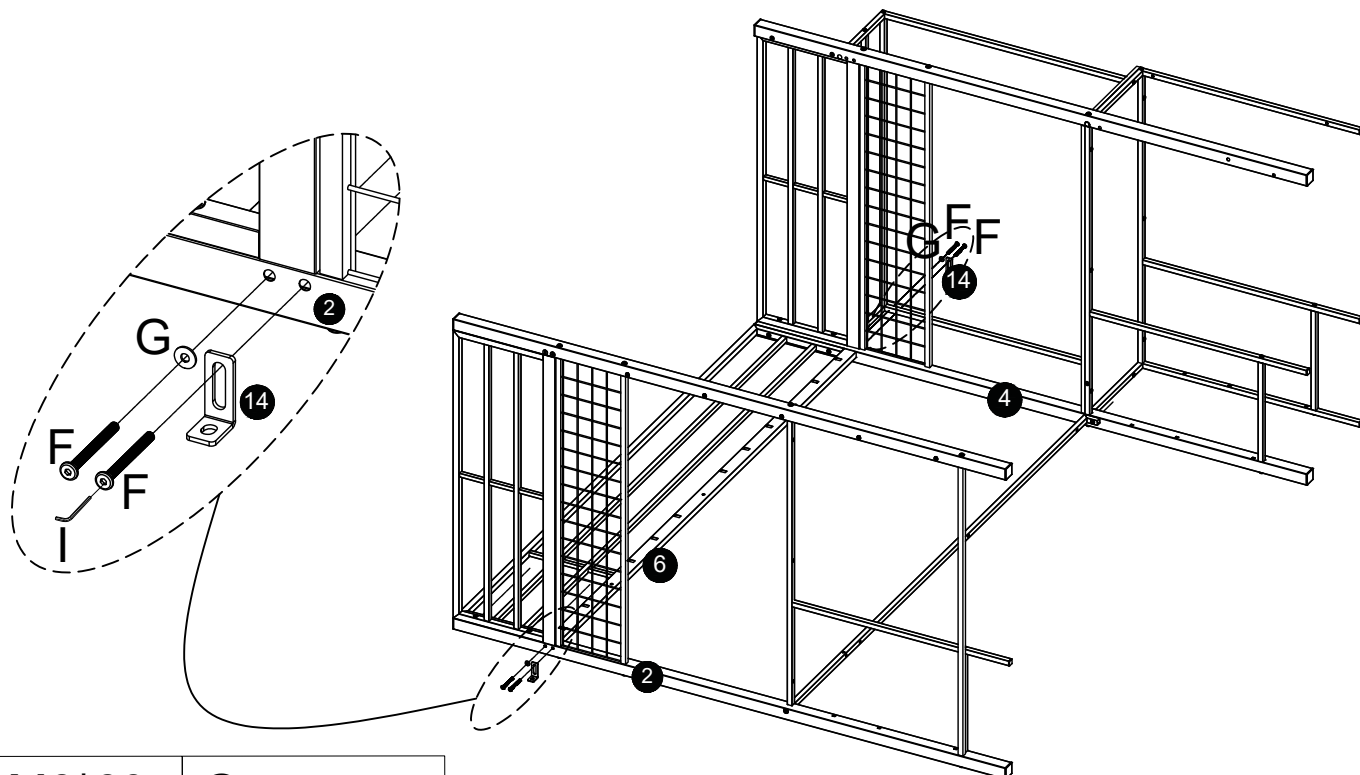

F M6*60
x4

G M6 washer
x2

15

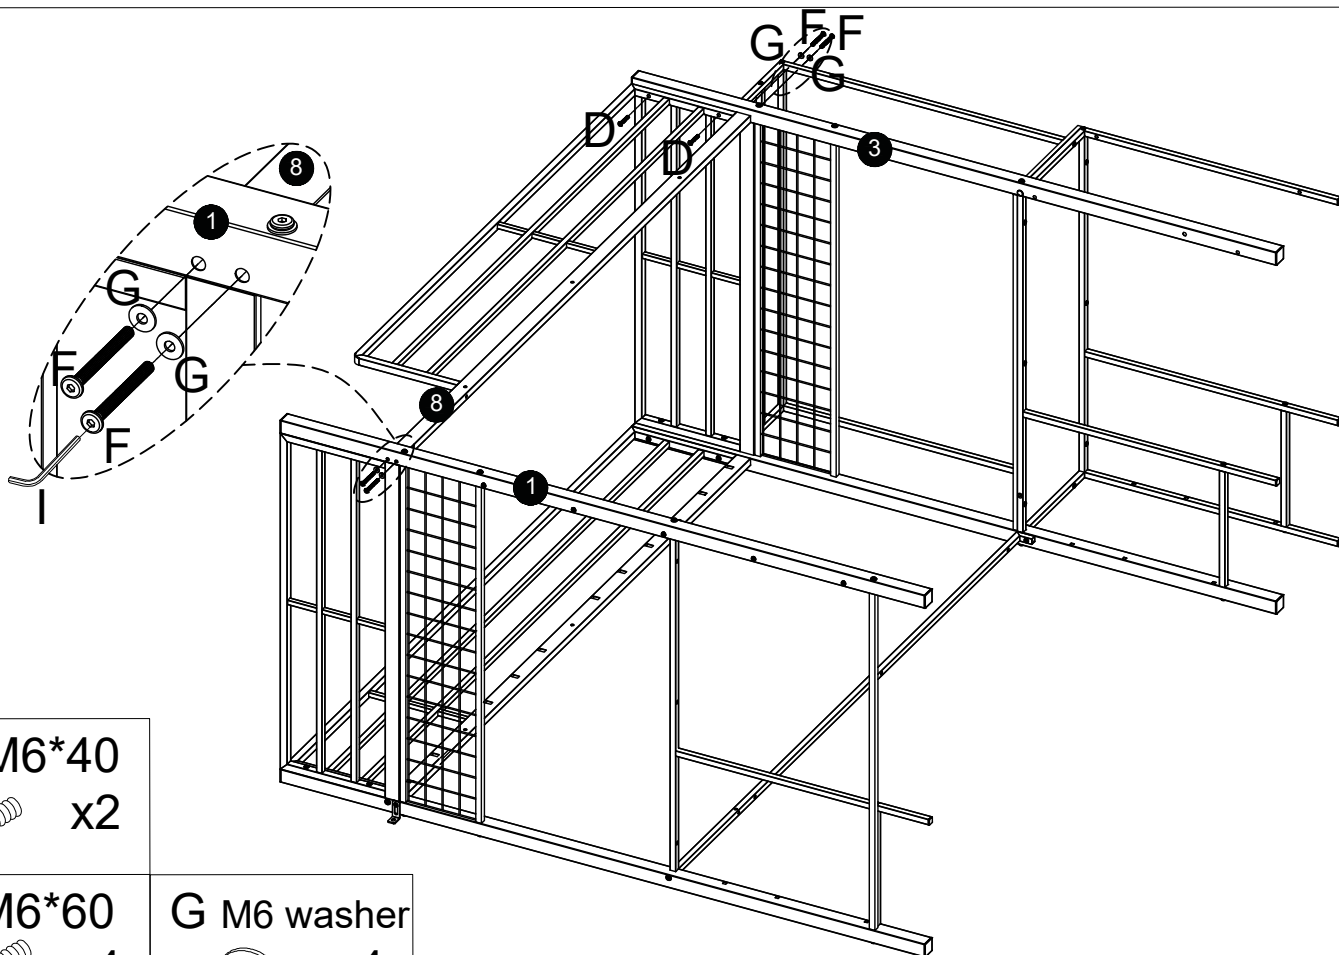


D M6*40
x2

F M6*60
x4

G M6 washer
x4

16

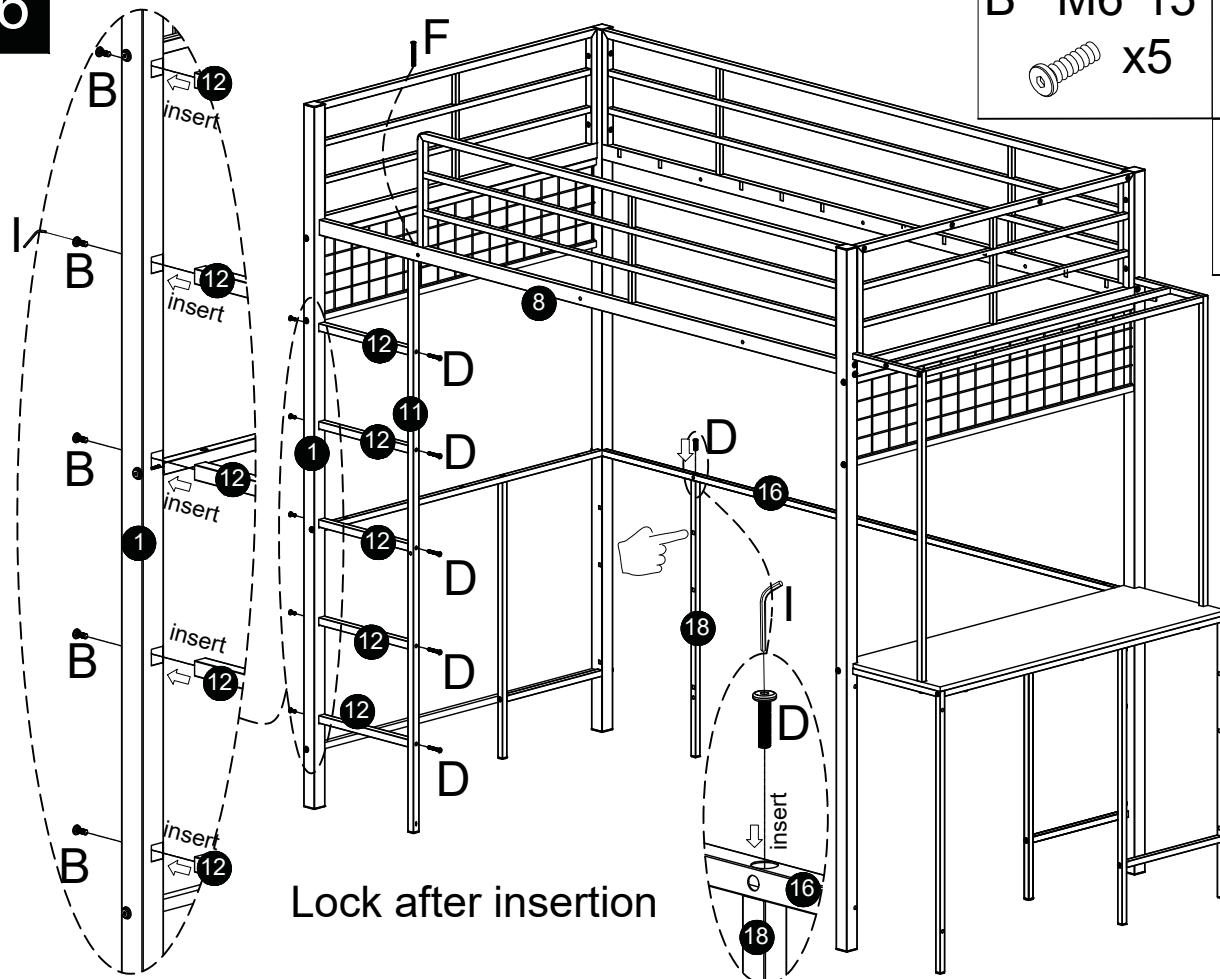



B M6*15
x5

D M6*40
x6

F M6*60
x1

Lock after insertion


17

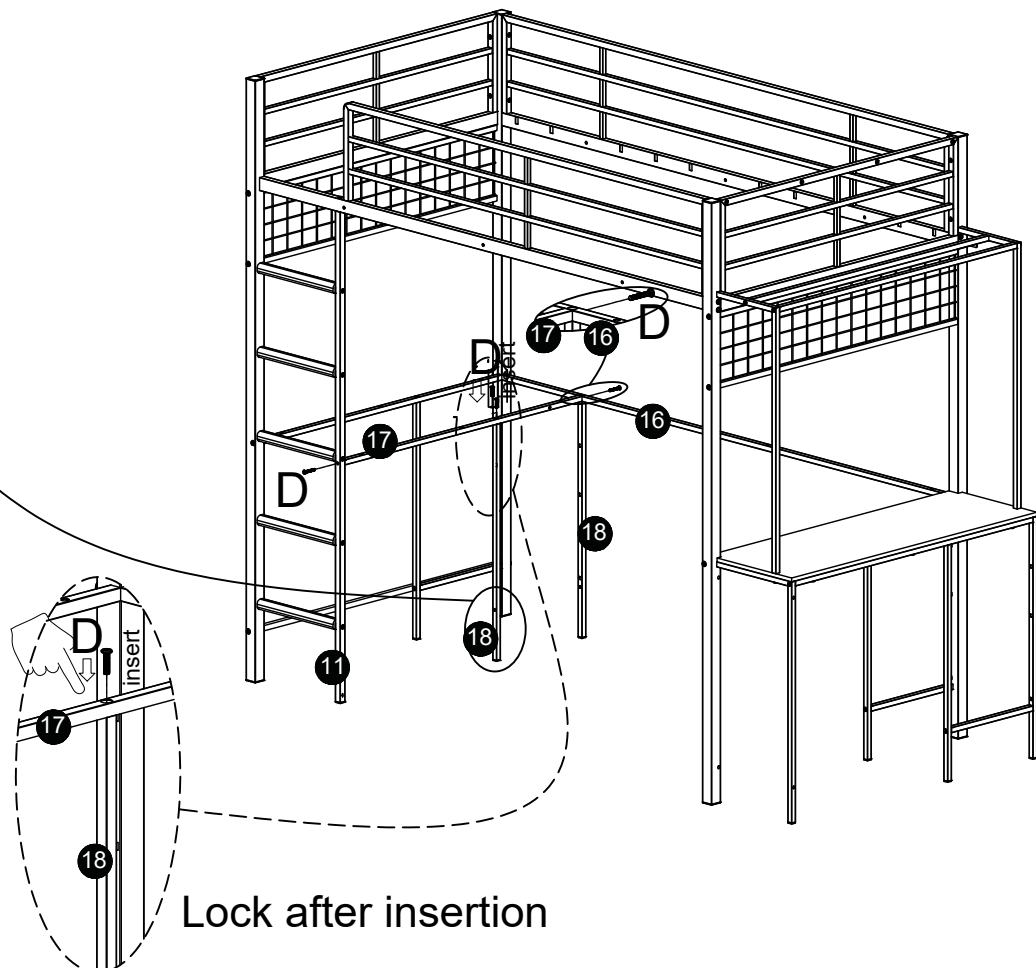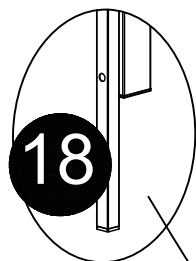


D M6*40
x3

Lock after insertion

18

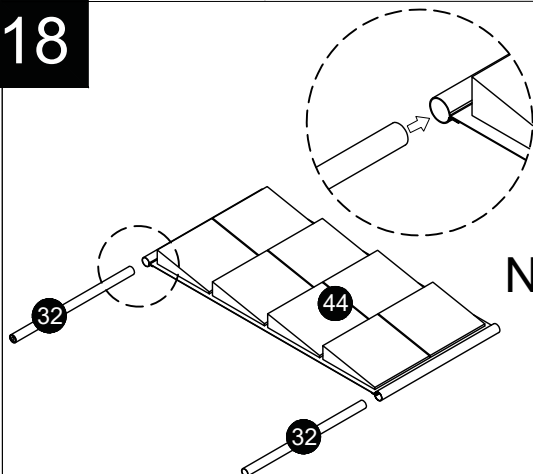

NEXT

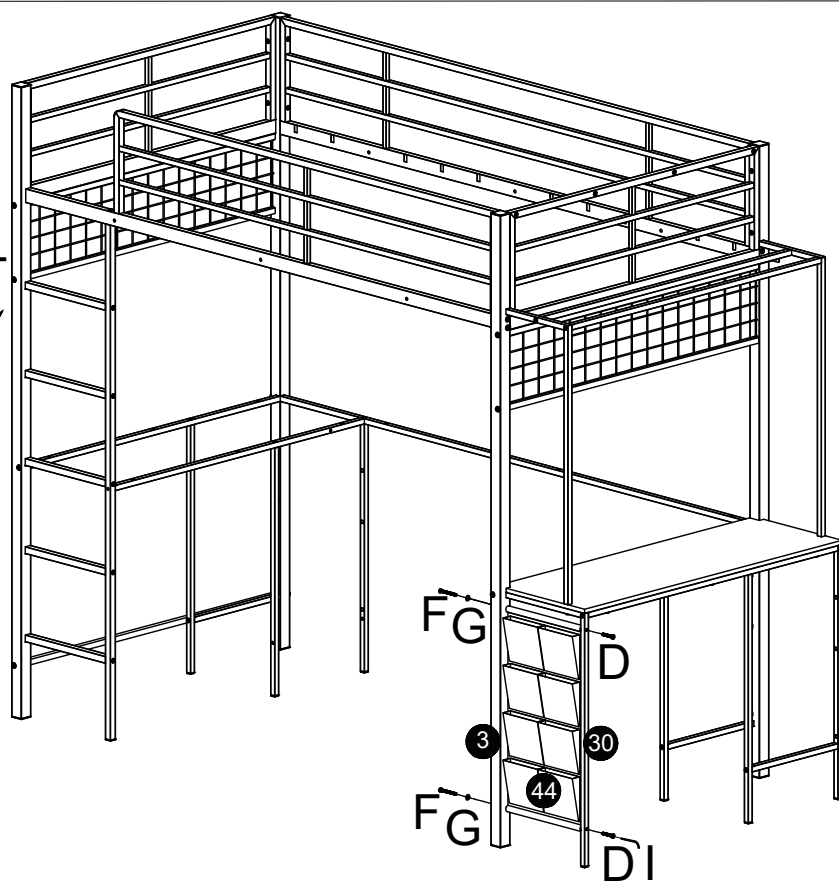


D M6*40
x2

F M6*60
x2

G M6 washer
x2


19

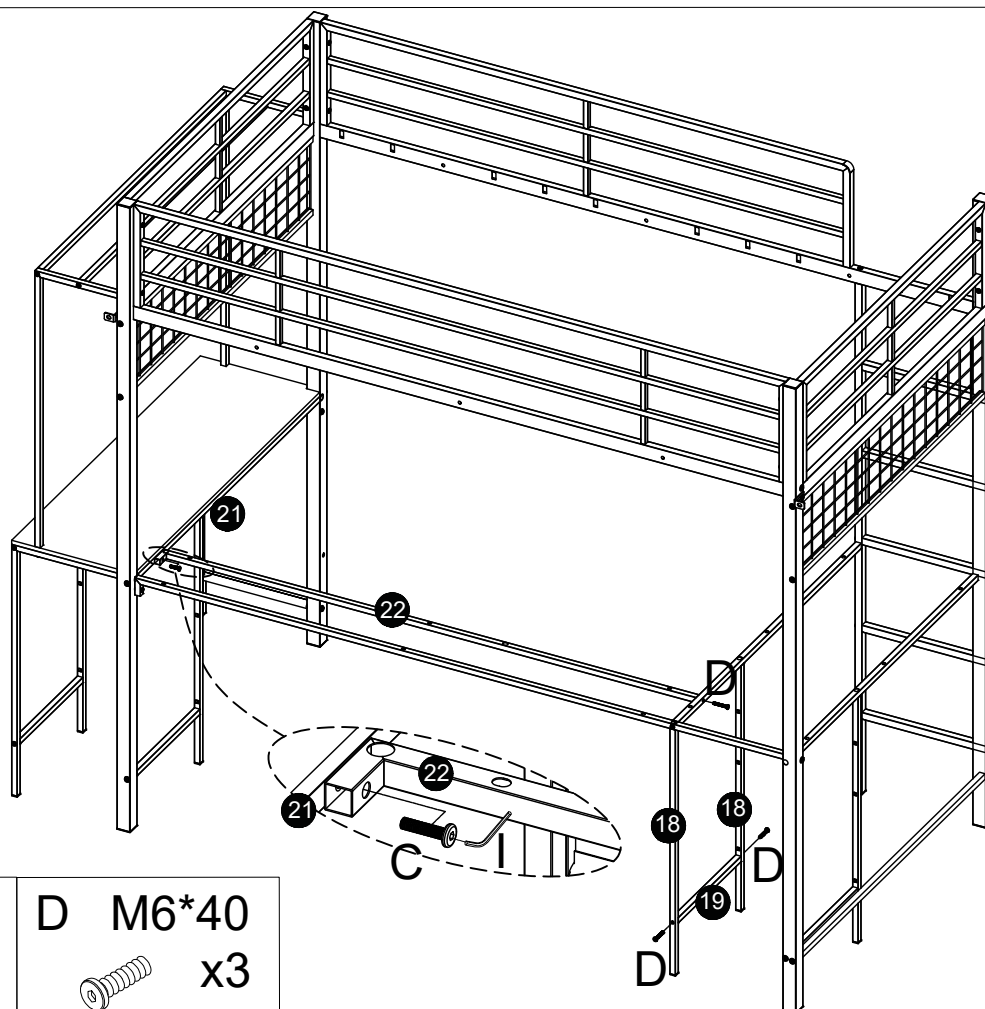

C M6*24
x1


D M6*40
x3

20

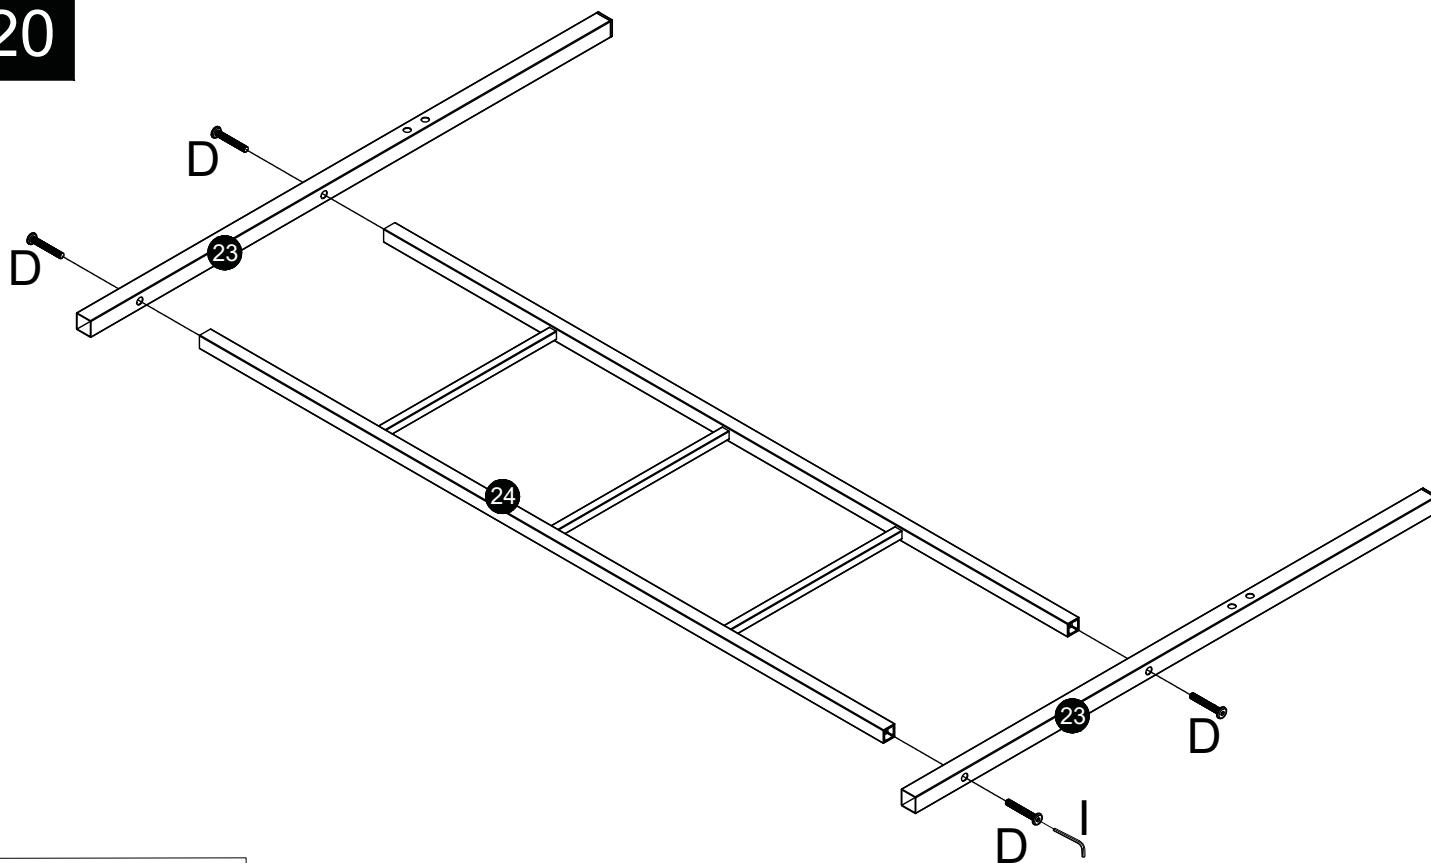


D M6*40
x4

21

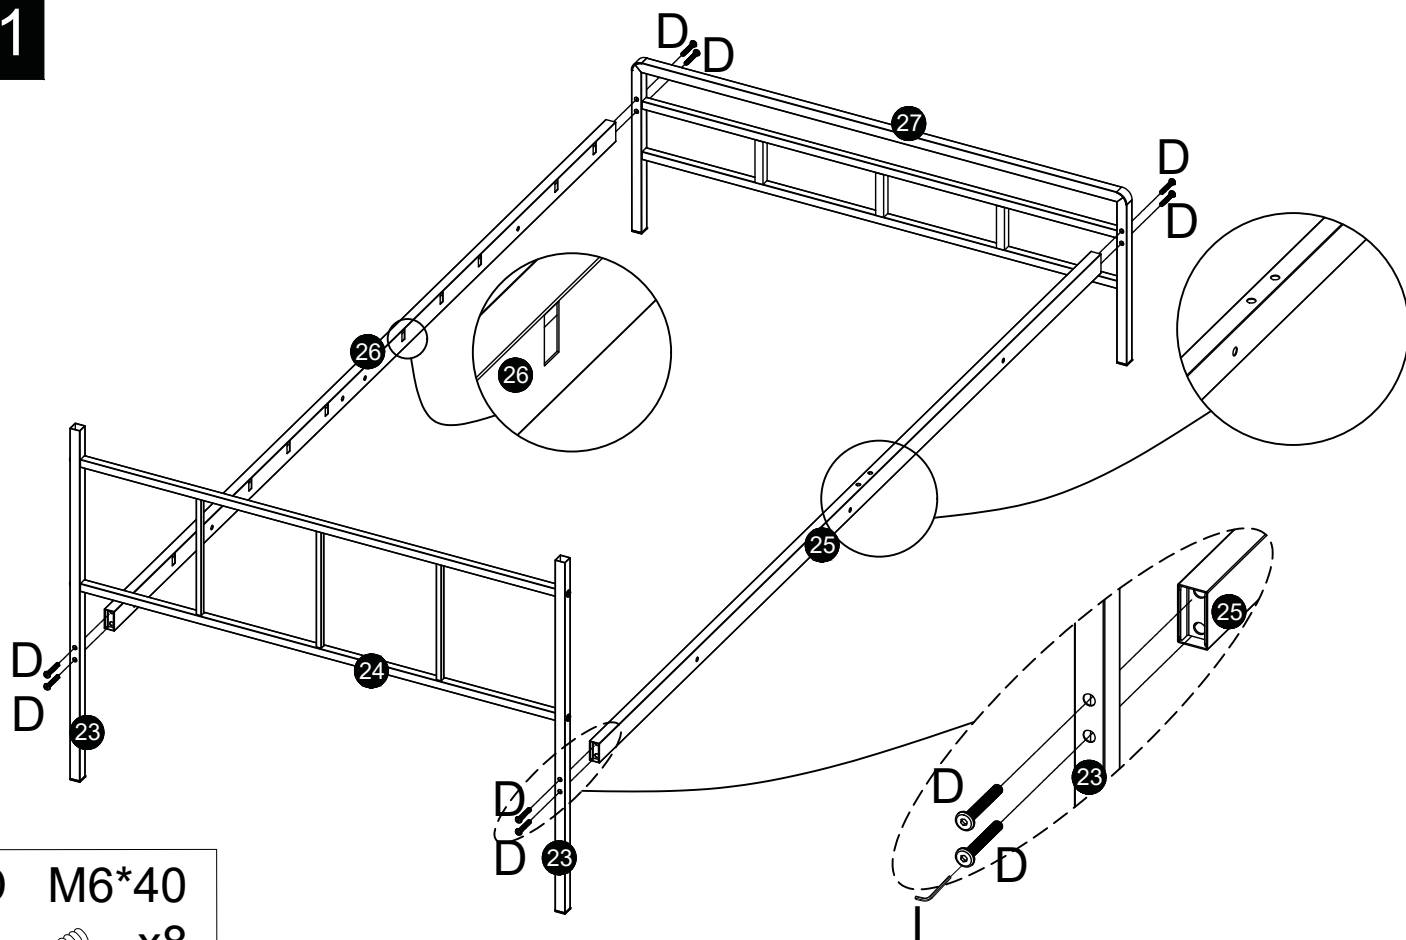

D M6*40
x8



22

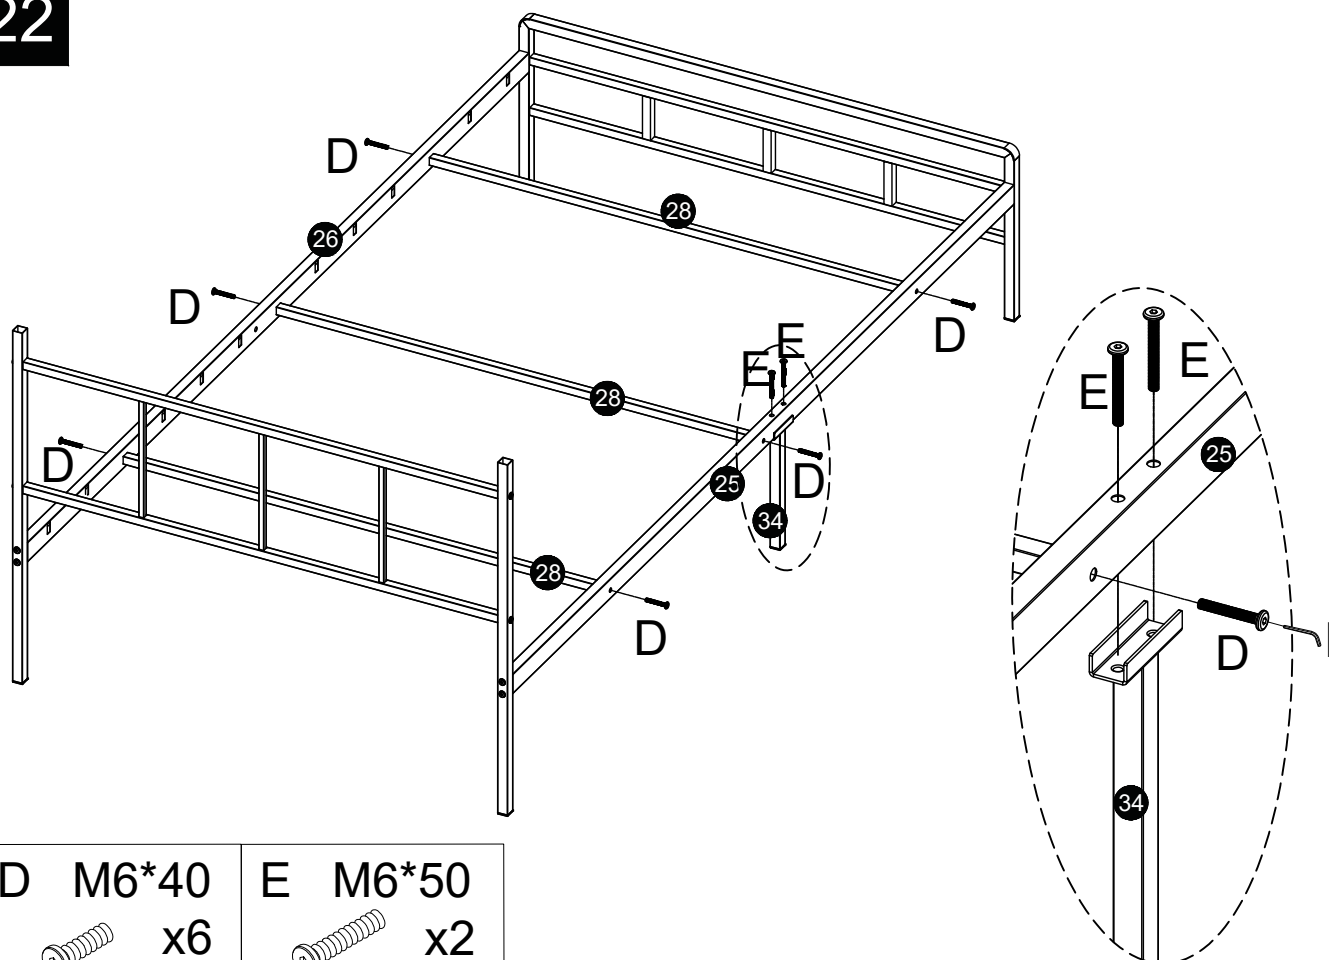


D M6*40
x6

E M6*50
x2


23

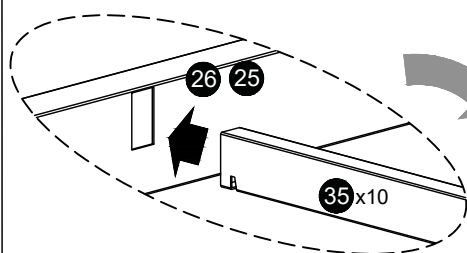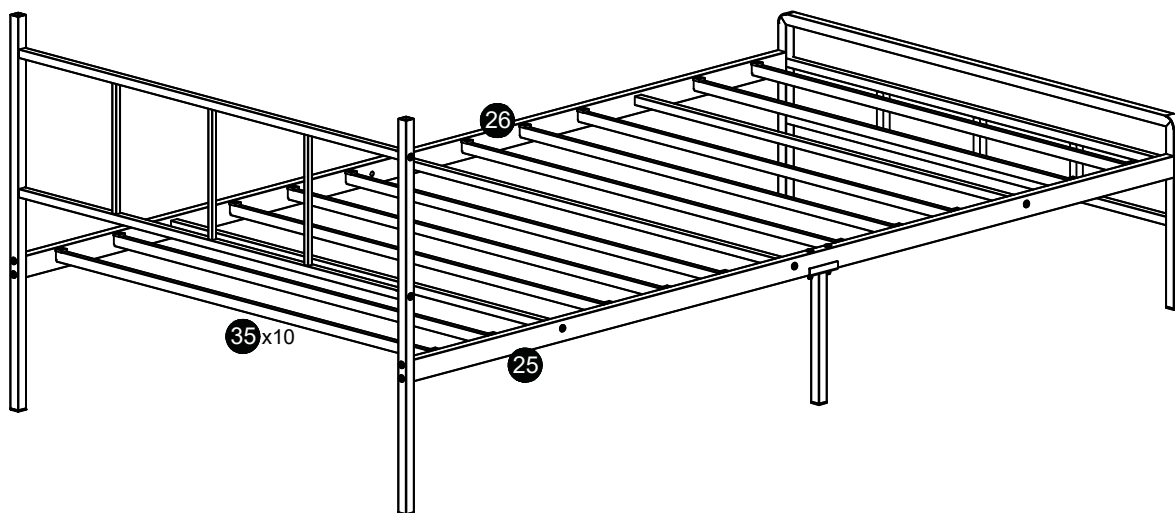


Insert to the bottom

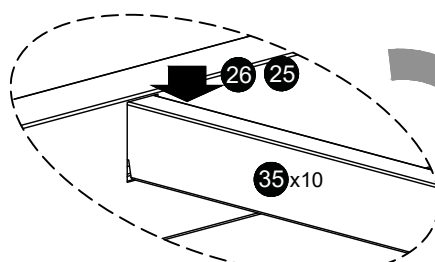


Press down on the gap in the bed slat.

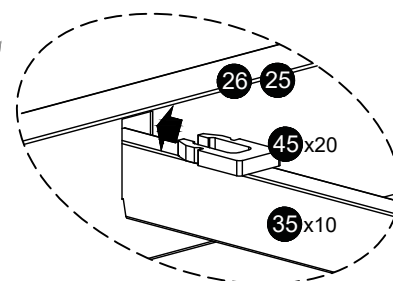



24

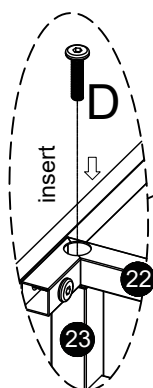

Lock after insertion

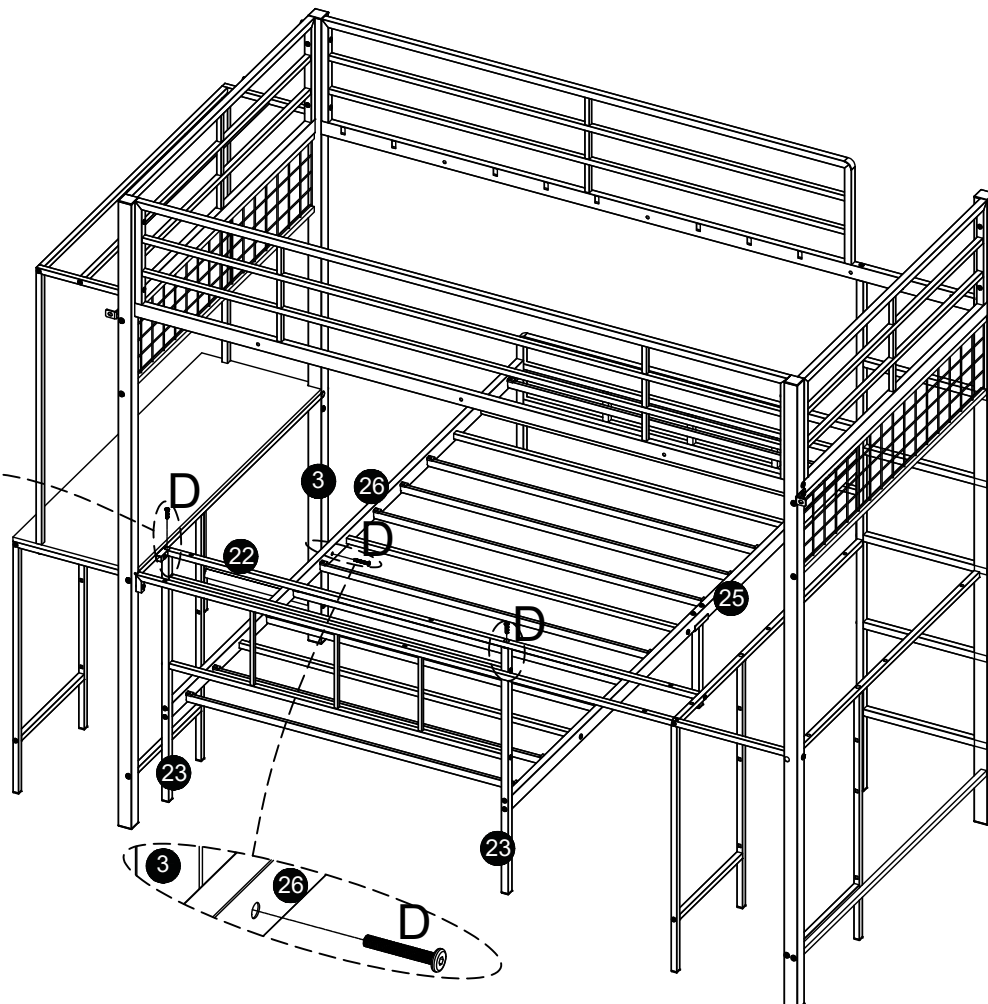


D M6*40
x3

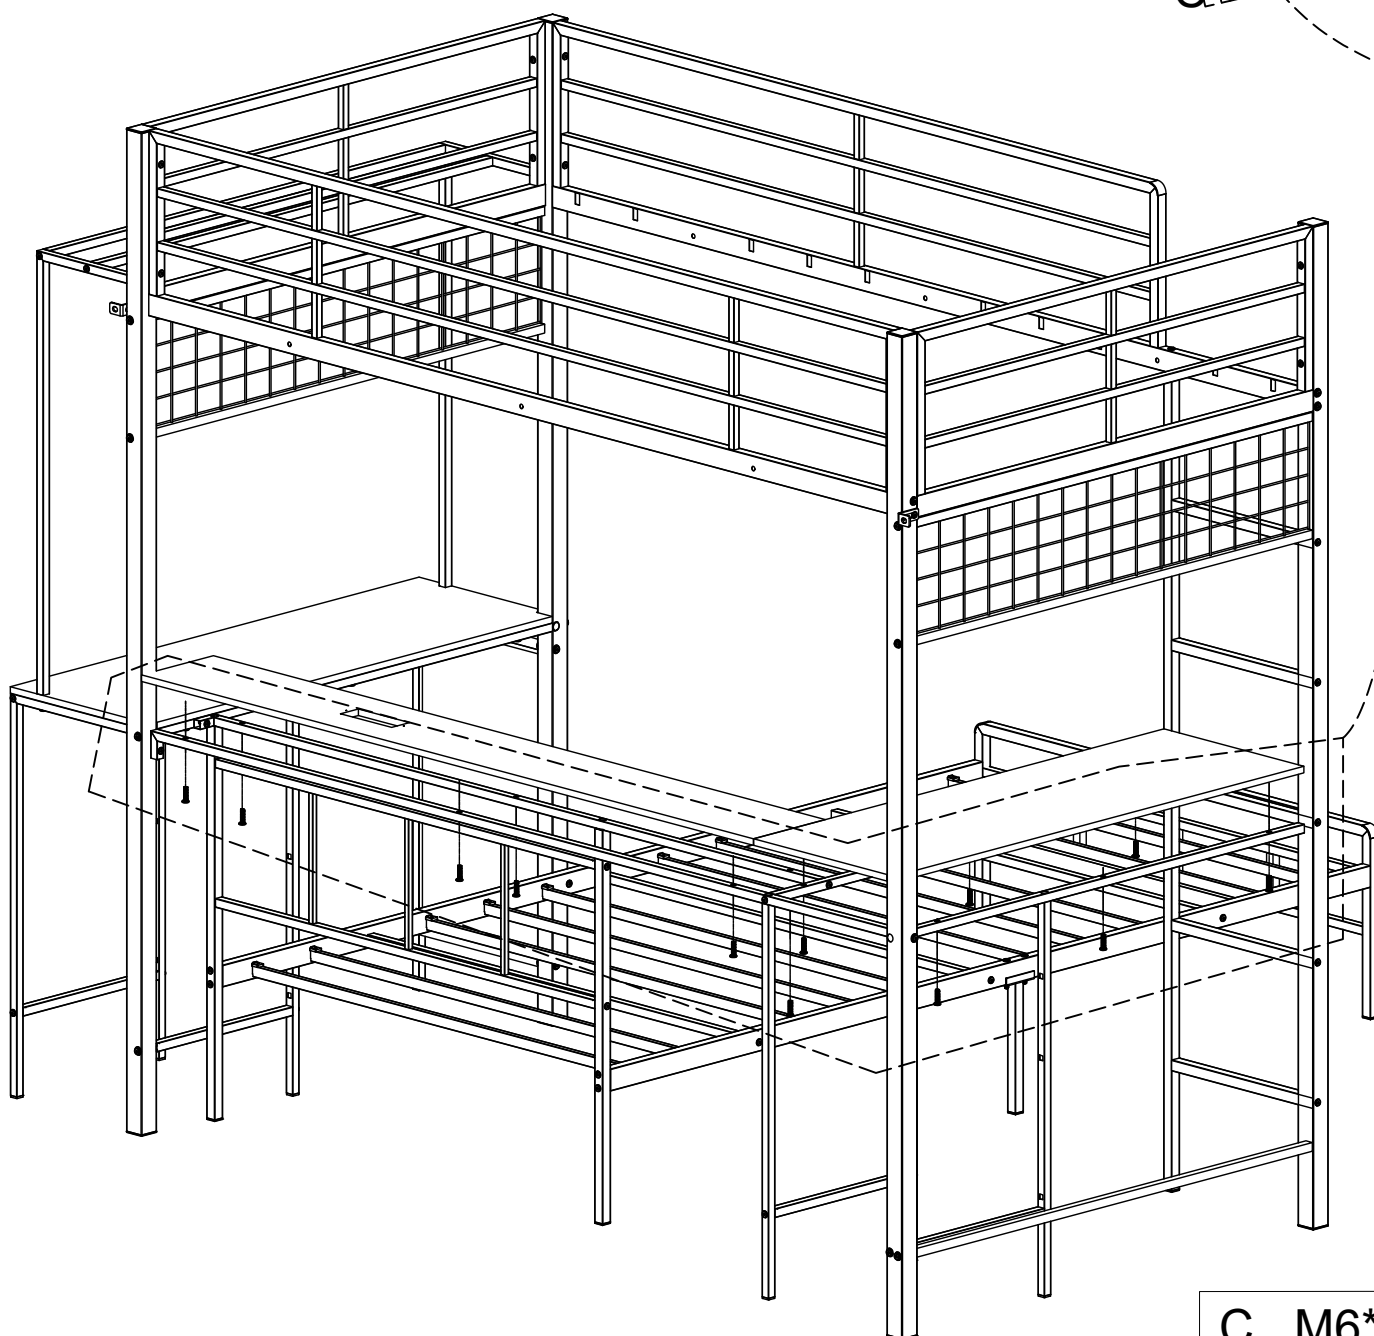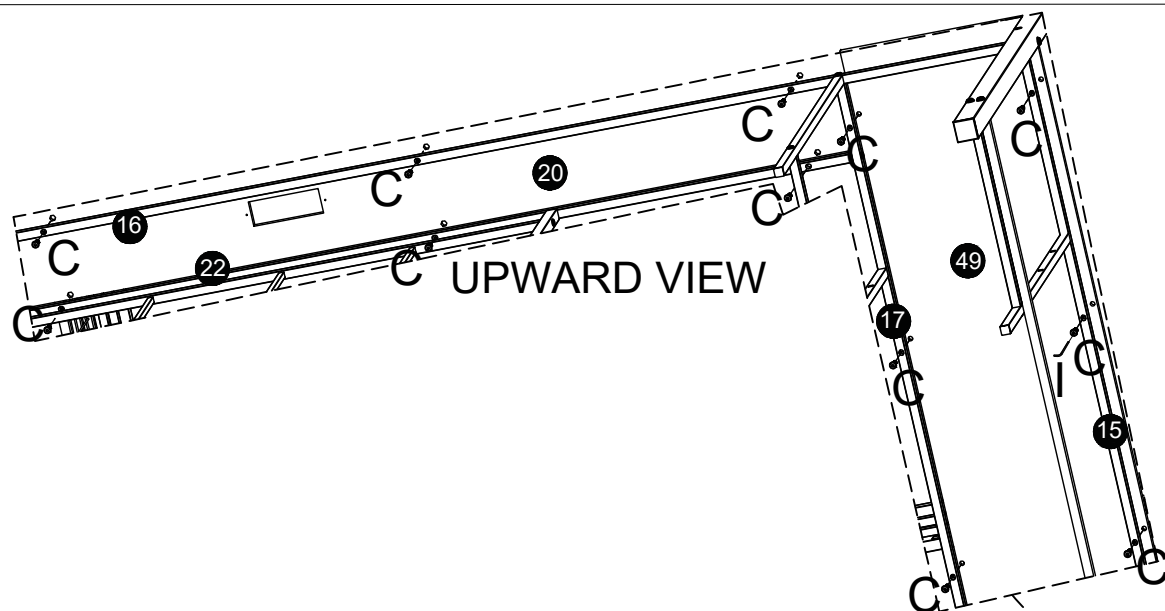

C M6*24
x12



26

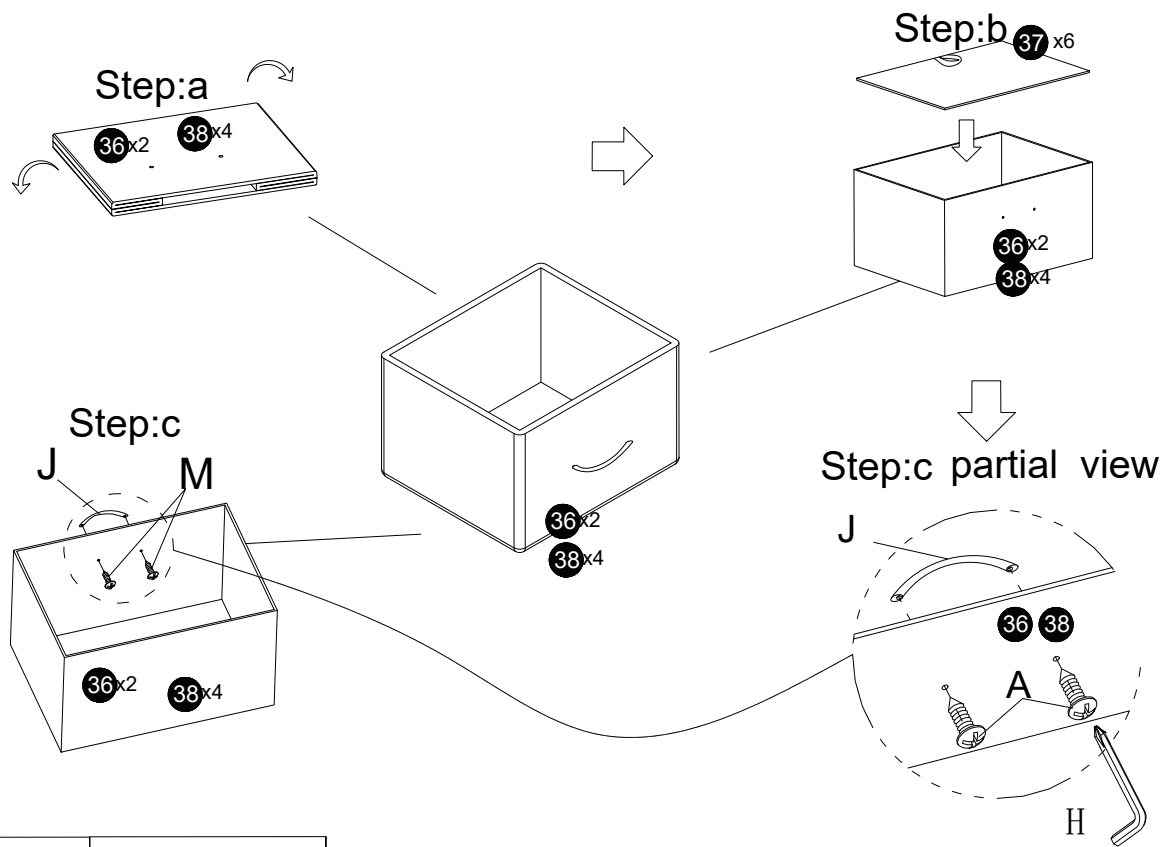

M M4*12




x12



J




x6

27

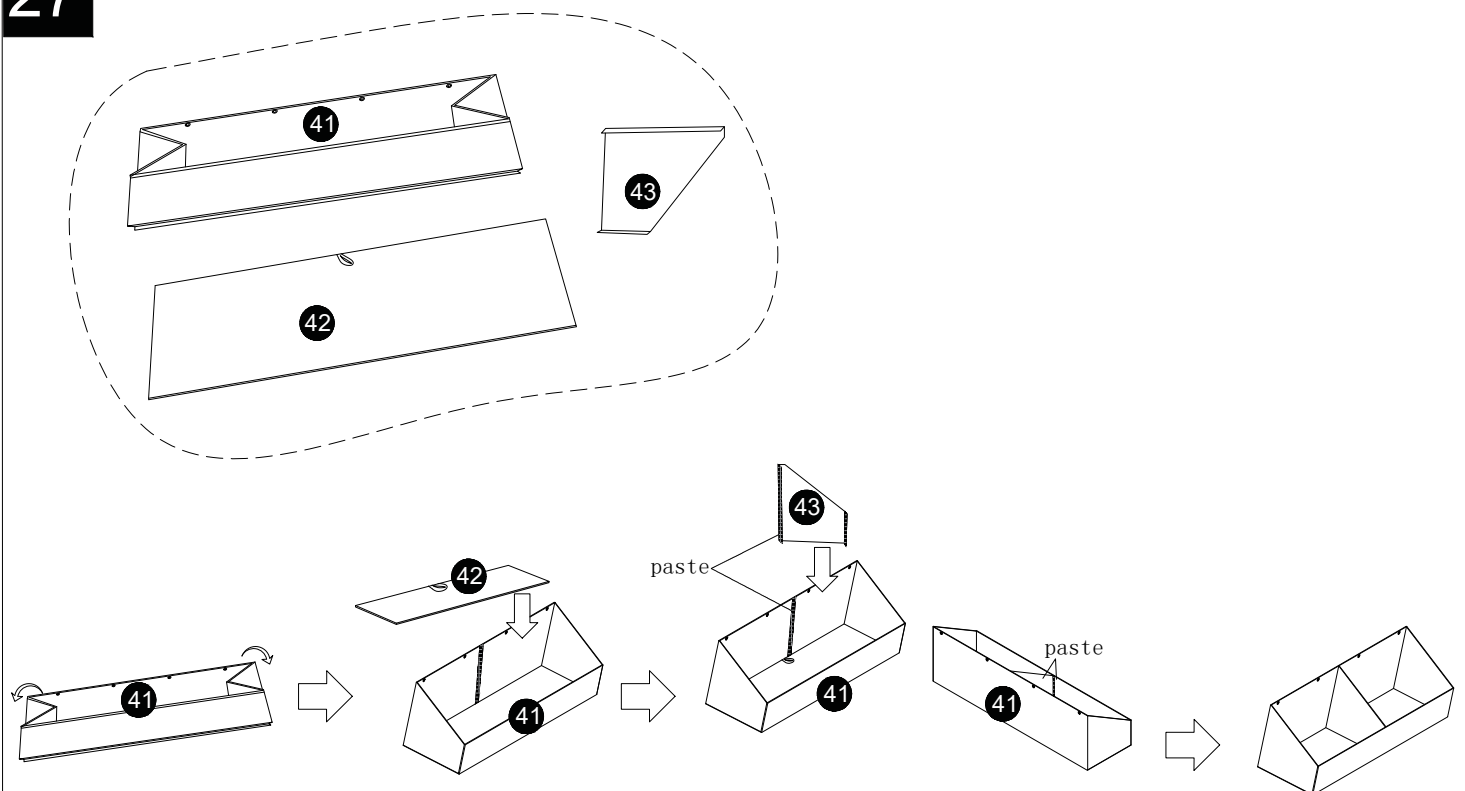


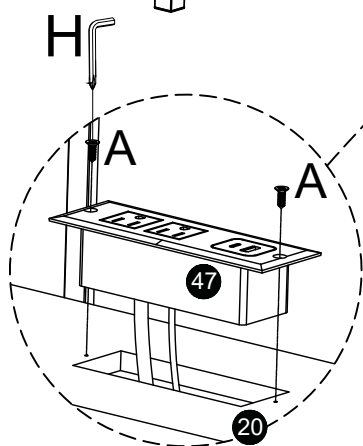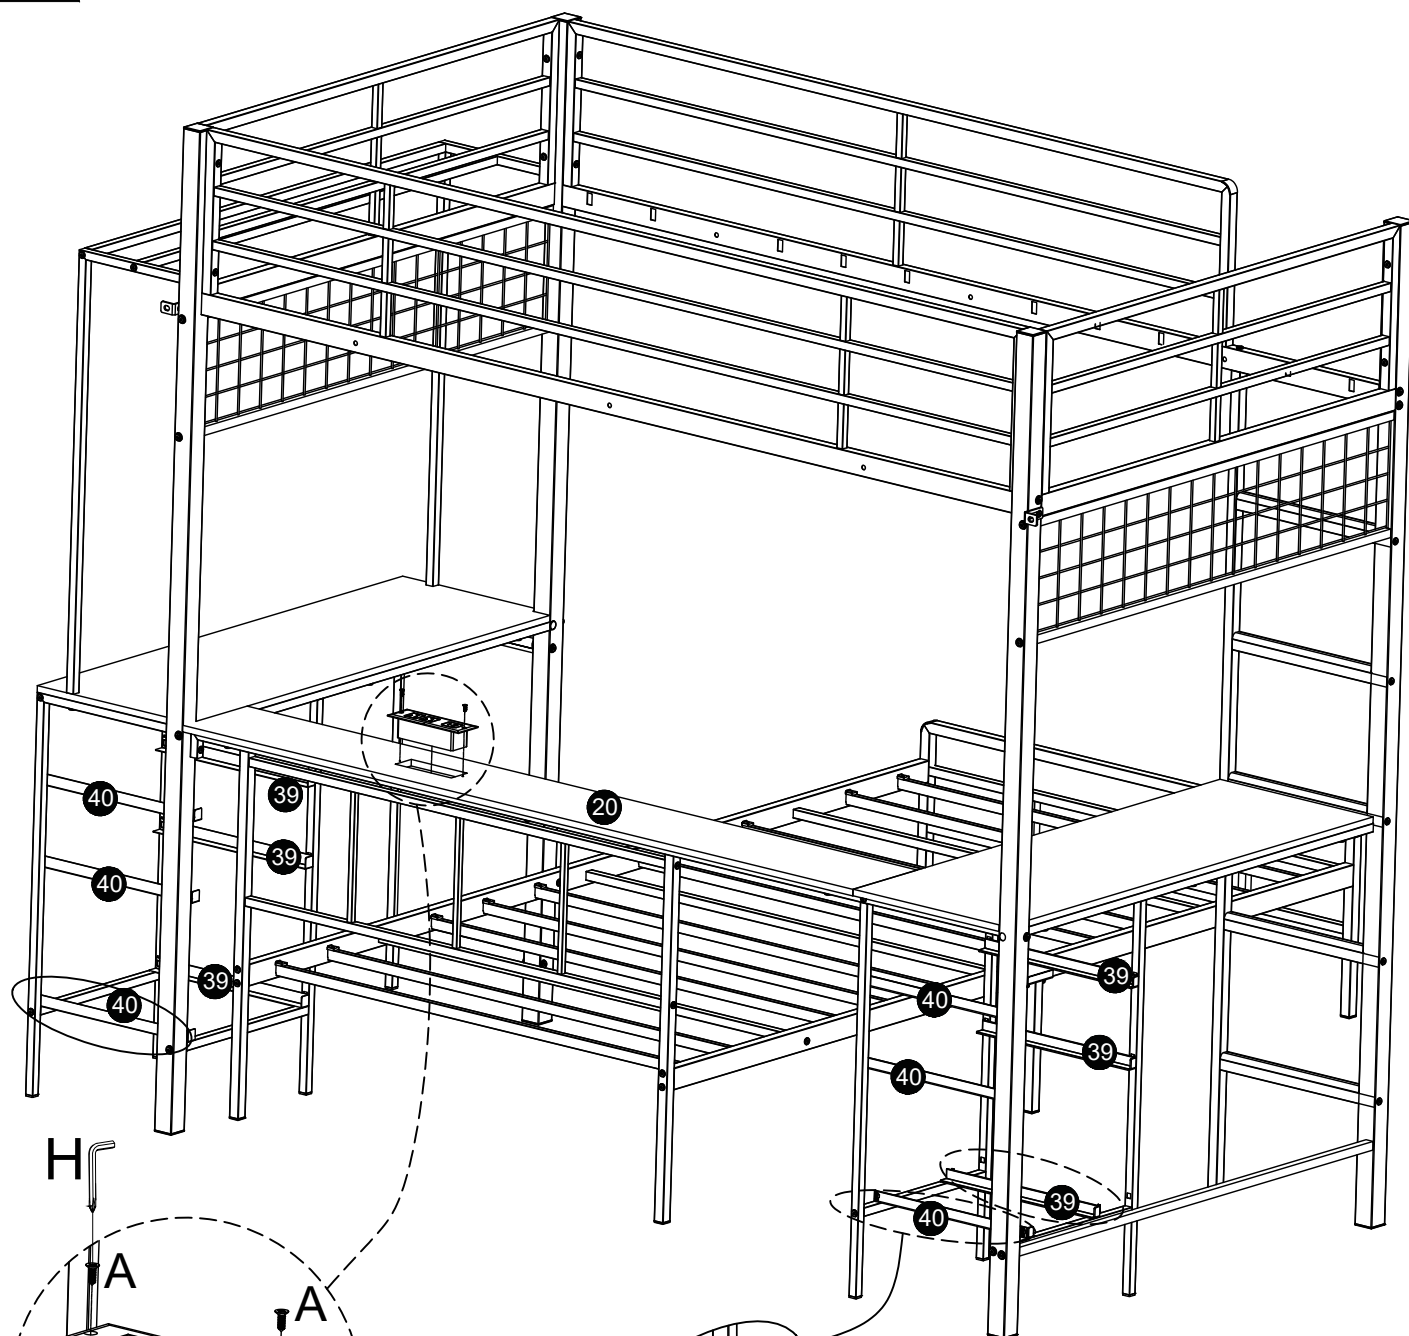


Rotate the track in the direction of the arrow.

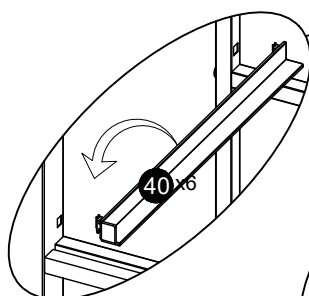

Insert rectangular hole

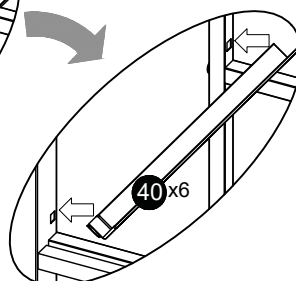


Adjust the alignment and press down

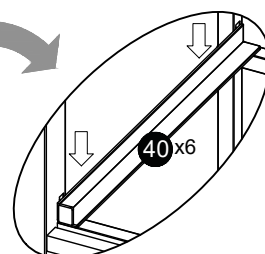


A M4*12
x2




29

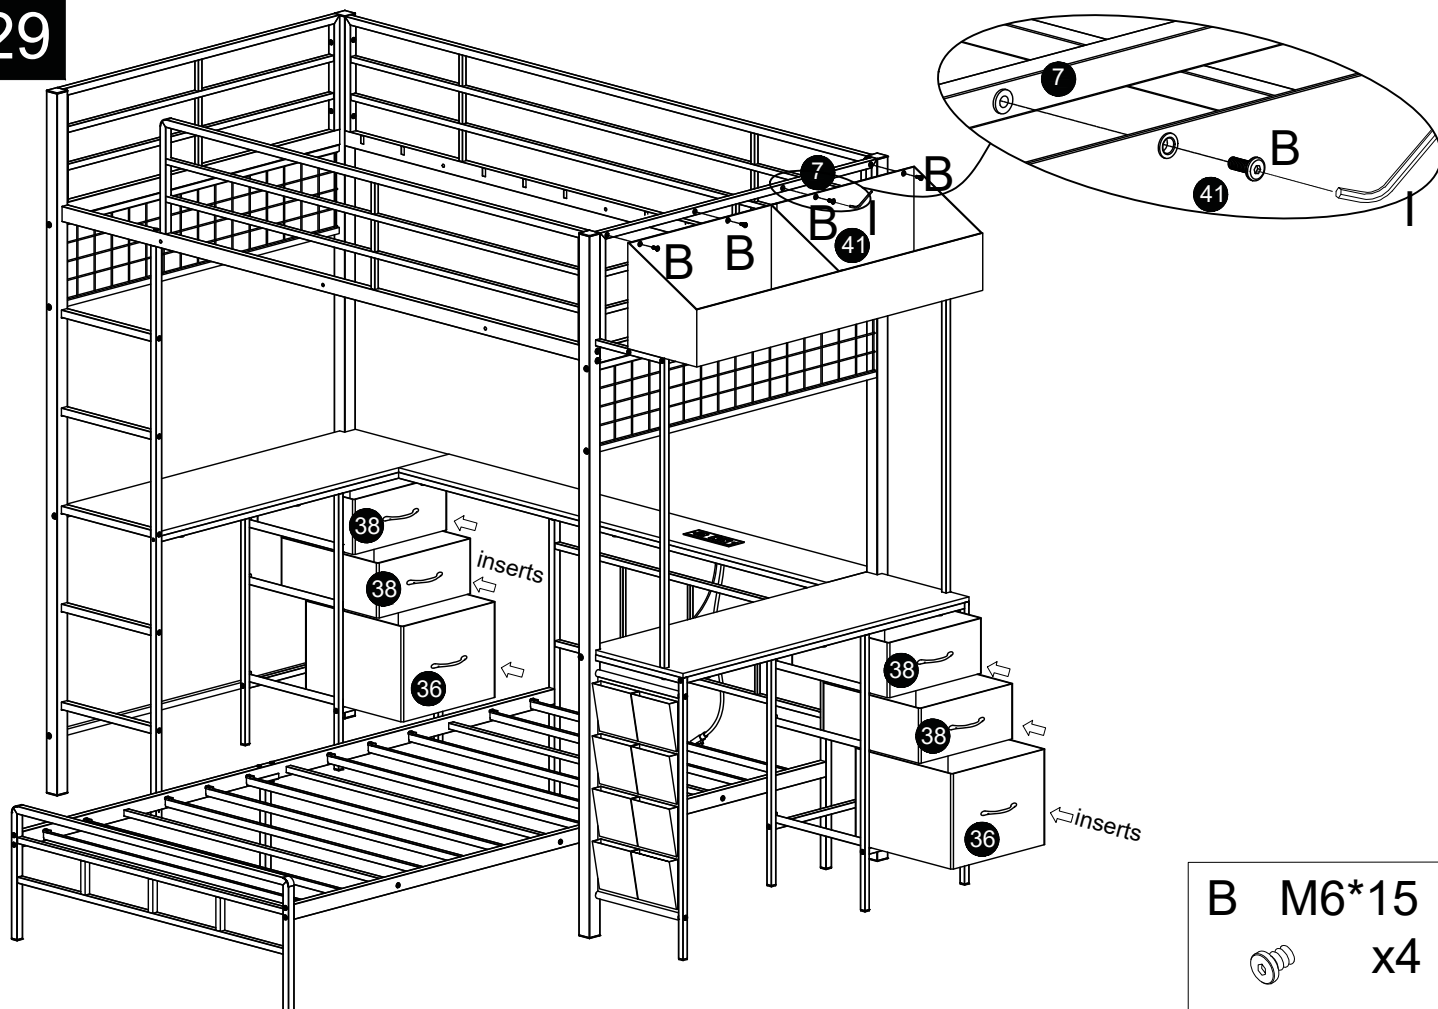


30

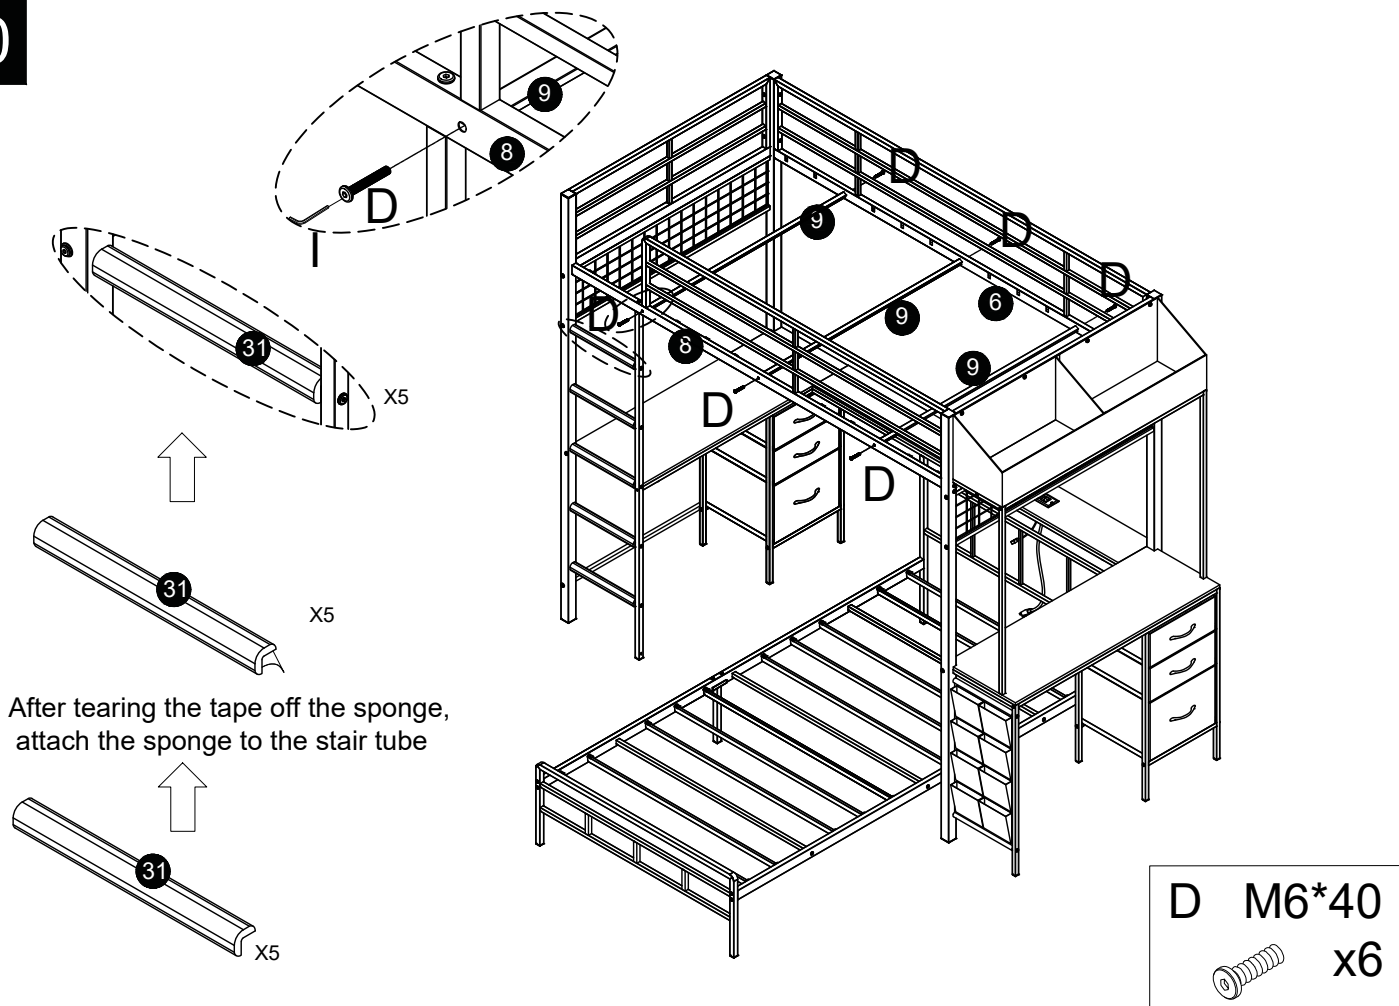


31

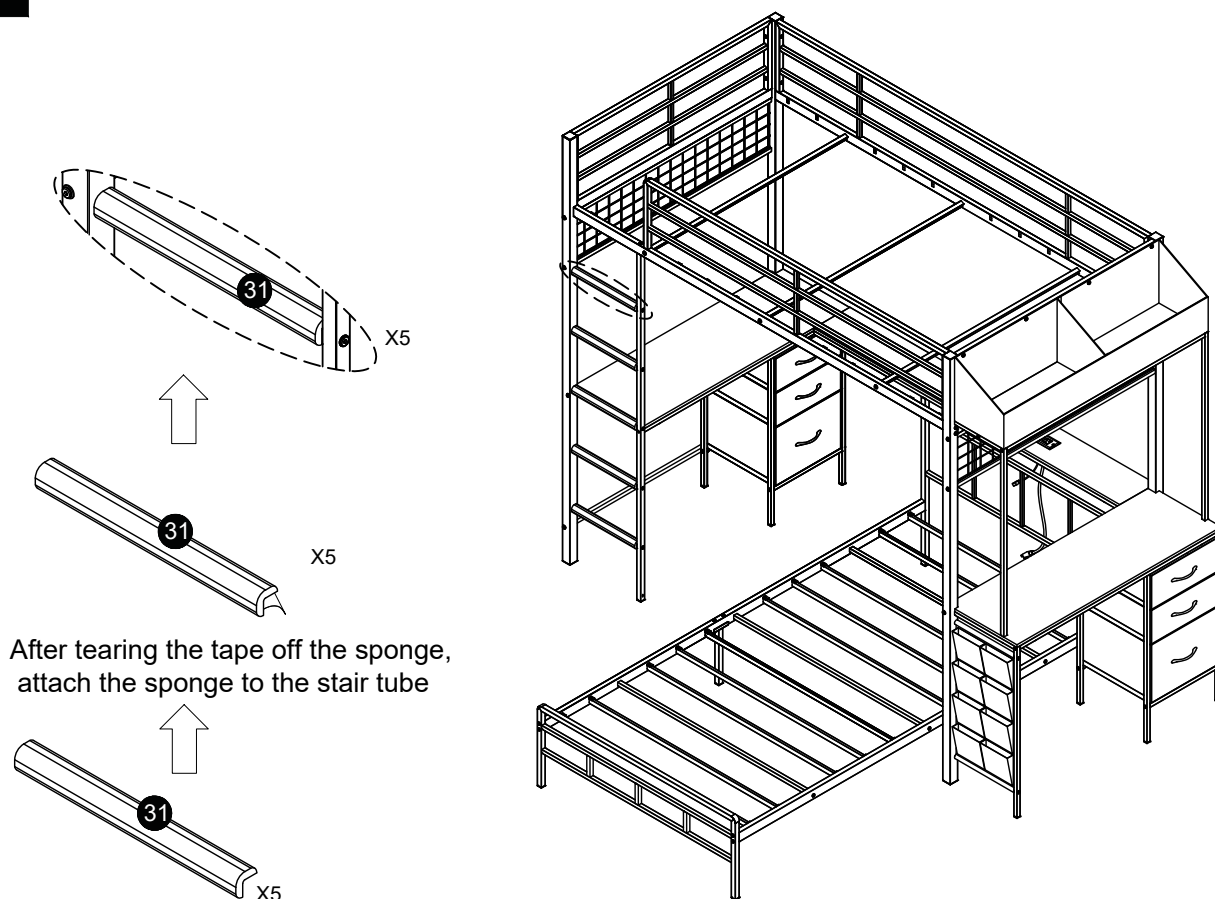


32

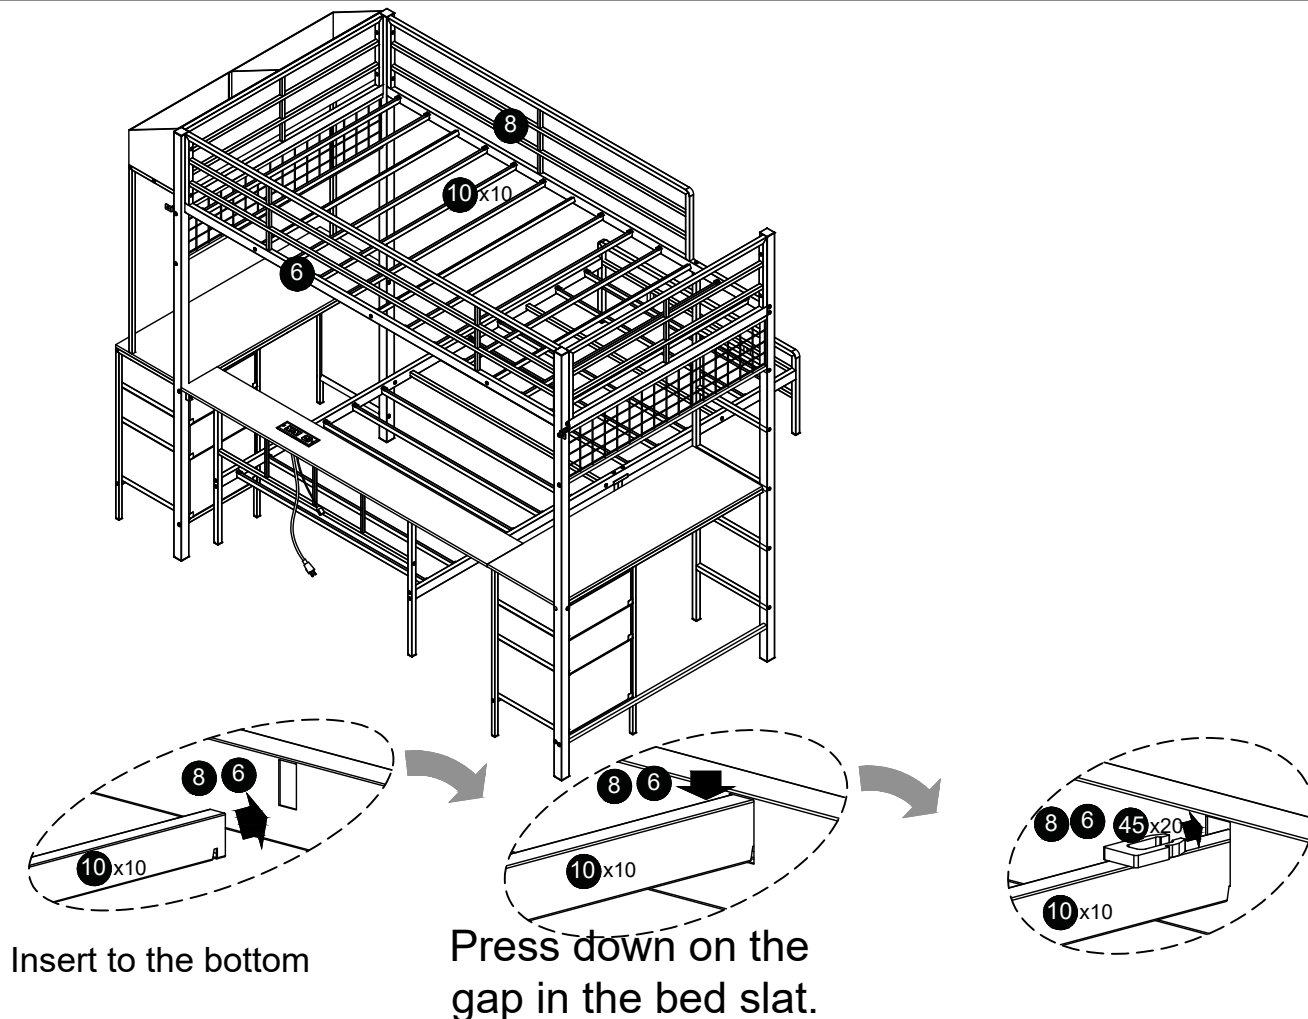

33

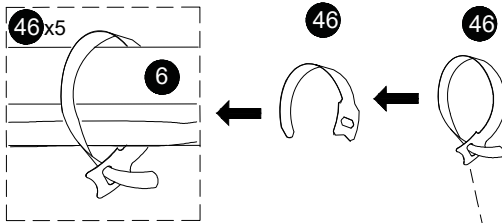



Please loosen the tie and tie it onto the iron pipe. As shown in the figure.

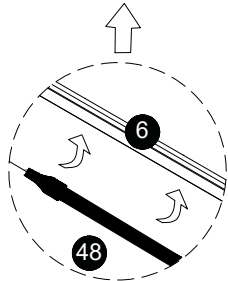

Attach the light strip 48 below the square tube 6.



Peel off the double-sided tape on the light strip

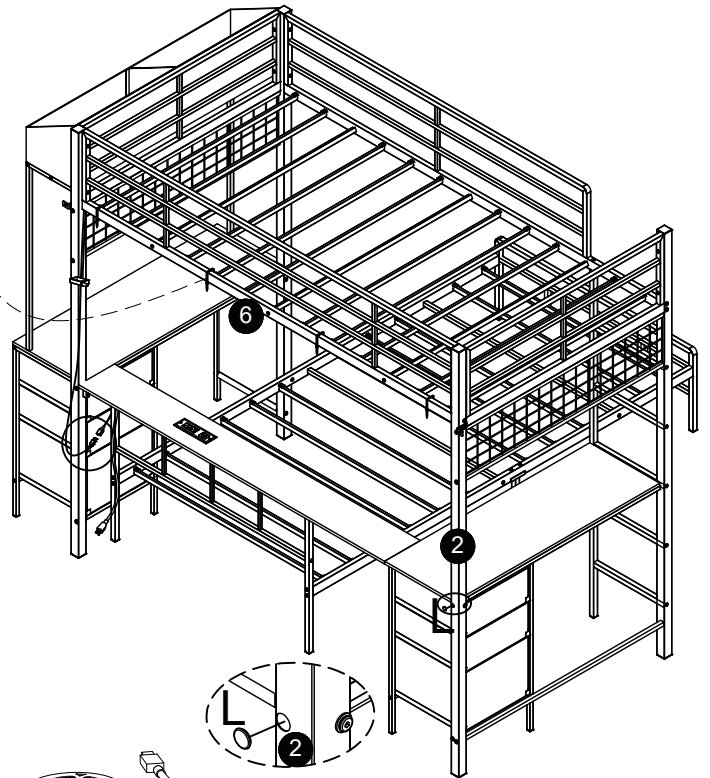
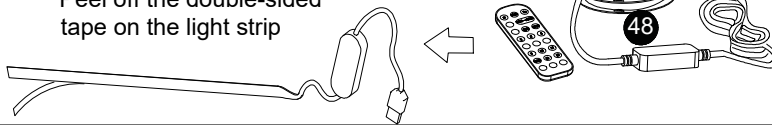


L Ø14
Ø x1


34

Positioning


wall

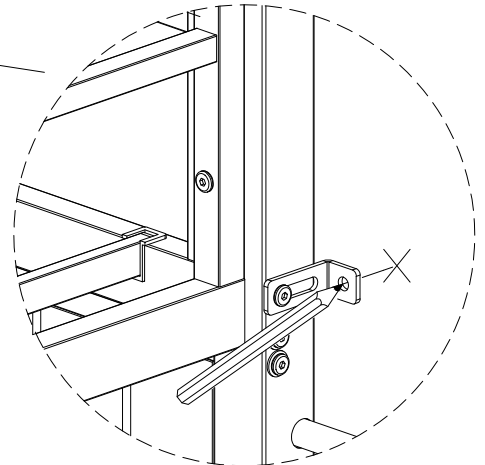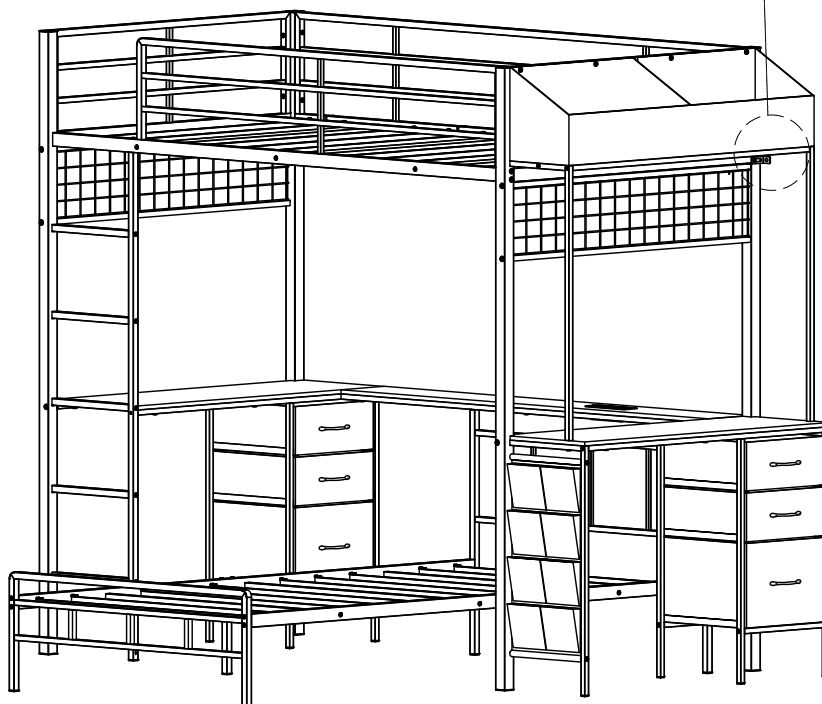

35 Drilling

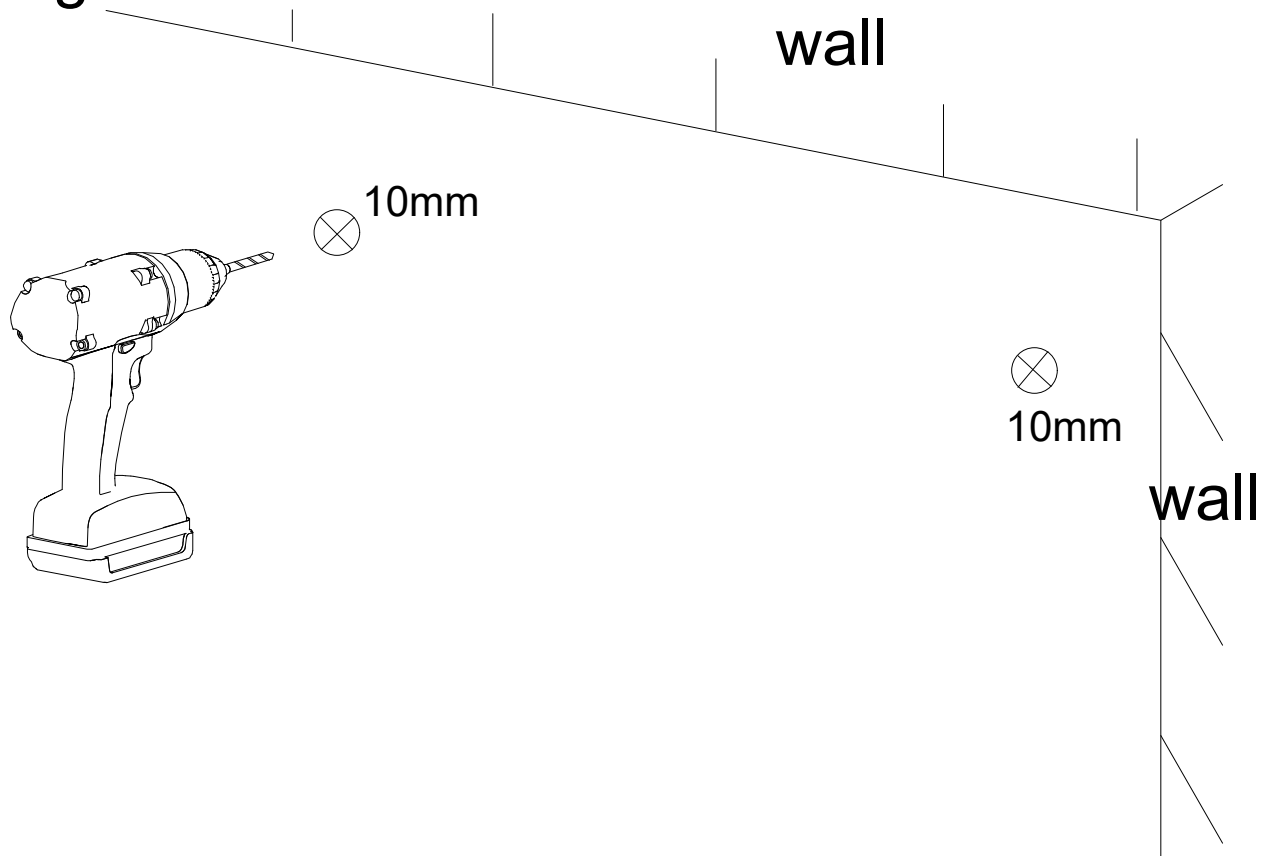


36

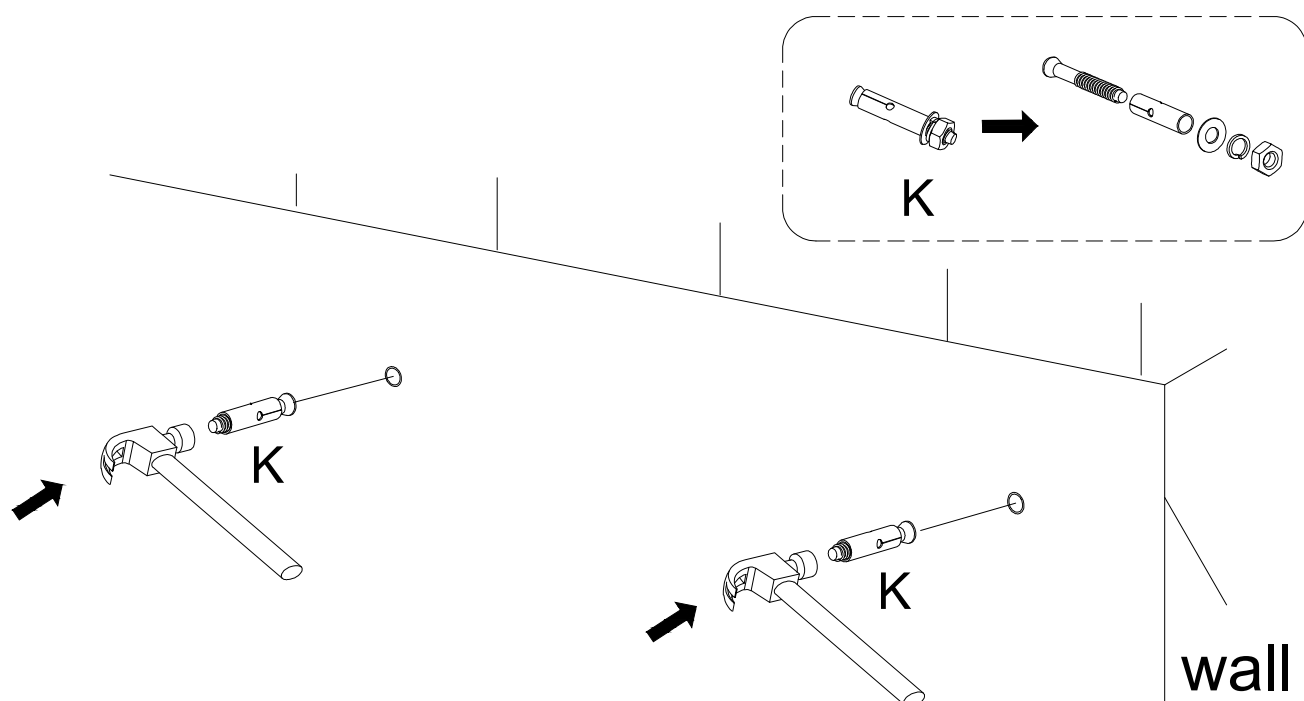

Please lock the expansion screw onto the wall.


K M6




x2

37

wall

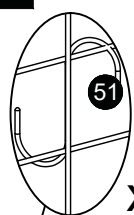


x10

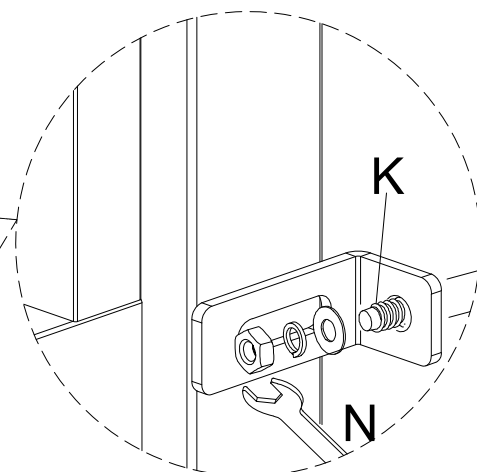

x2

wall



x2

