

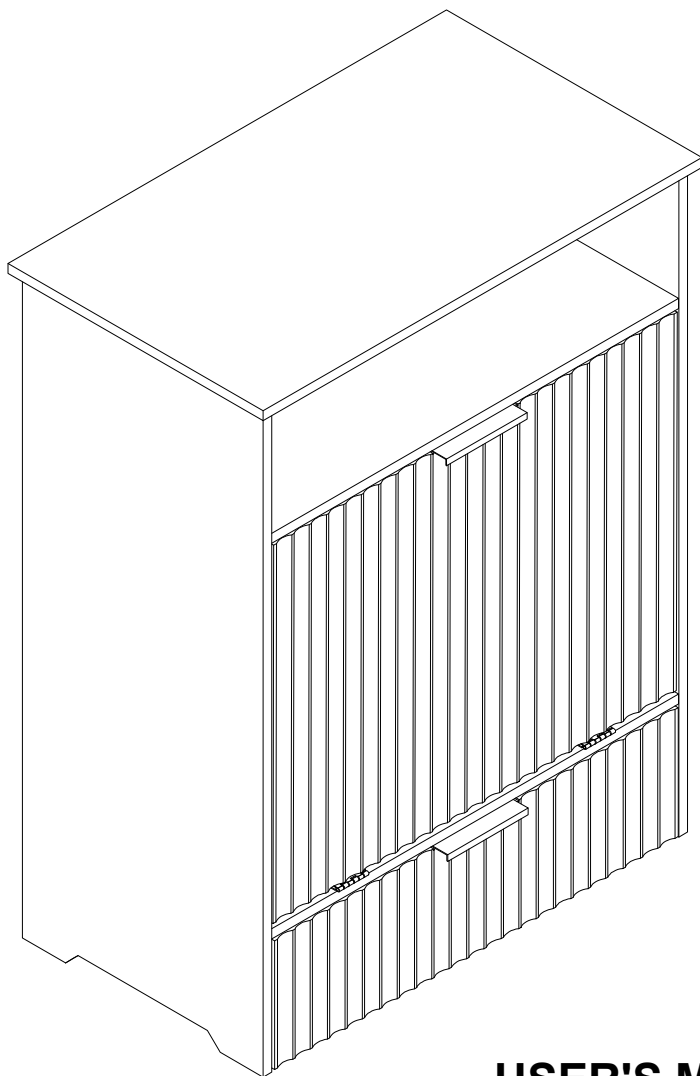




USER'S MANUAL

PXZZPC094MS

Before You Start



1. Read each step carefully and follow the correct order.
2. Separate and count all parts and hardware.
3. Leave enough space for the assembly process.
4. Prepare the following tools: Flat Head Screwdriver, Cross Head Screwdriver and Hammer.
5. Note: If you use an electric drill or electric screwdriver to tighten the screws, please be careful to slow down and stop when tightening the screws. Otherwise, the screws may fall off.
(Using an electric screwdriver can increase assembly speed).

Useful Tips


Assembly Personnel Required: 1-2 People

- Unpack the item in the area where you plan to store it to avoid excessive lifting.
- Identify, sort, and count the parts before attempting assembly.
- Use a hammer to gently tap in the compression pins.
- The sliders are marked with R (right) and L (left) for proper placement.
- Make sure to always point the tip of the top of the cam lock toward the outer edge.
- If there is a back panel in the package, install it to ensure your unit is complete and sturdy.
- Tighten all the screws provided for the back panel, which can enhance the stability of the product. If it is difficult to tighten, you can use a hammer to secure it and then tighten it.
- Do not use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Board Identification


Not actual size

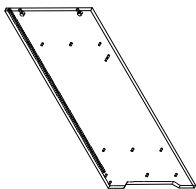

1

800*340mm


Qty: 1

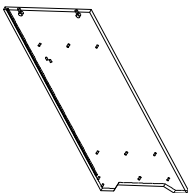

2

800*340mm

Qty: 1

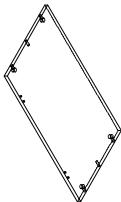

3

566*322mm


Qty: 1



4

566*70mm


Qty: 1

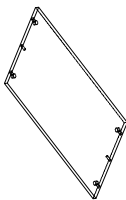

5

566*322mm


Qty: 1



6

740*288mm


Qty: 2

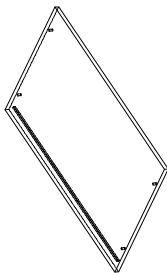

7


610*355mm

Qty: 1

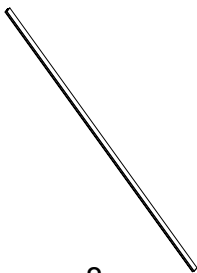

8

Qty: 1

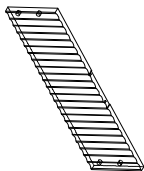


9

561*155mm


Qty: 1

Board Identification


Not actual size




10
290*250mm
Qty: 1




11
290*250mm
Qty: 1

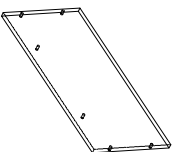


12
511*240mm
Qty: 1

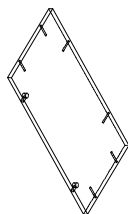


13
487*250mm
Qty: 1

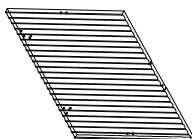


14
561*456mm
Qty: 1




15
517.5*85mm
Qty: 1



16
300*85mm
Qty: 1




17
300*85mm
Qty: 1




18
541.5*300mm
Qty: 1

Board Identification


Not actual size

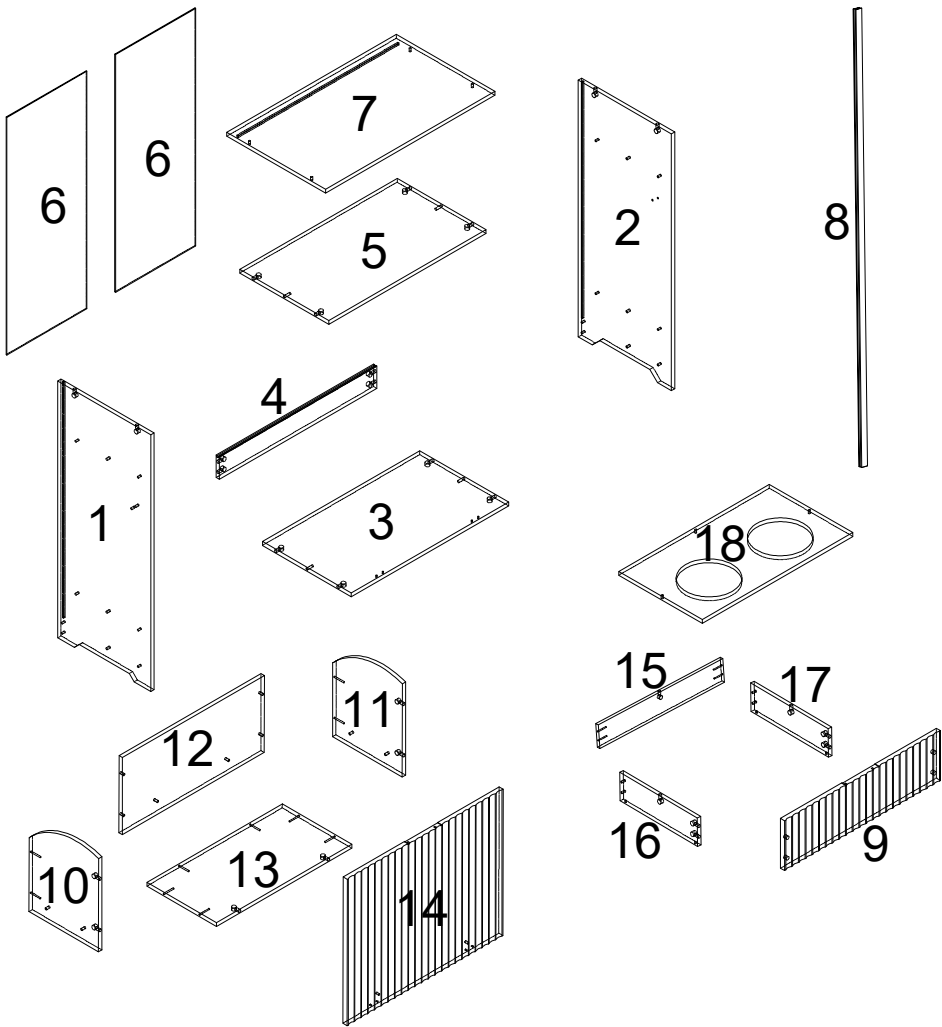


Parts List

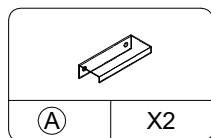


HANDLE

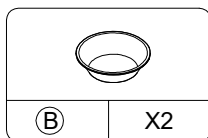


DOG BOWEL

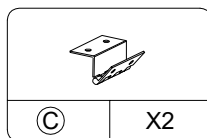



3-FOLD HINGE

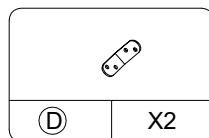


ANGLE BRACKET

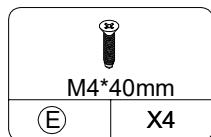


SCREW

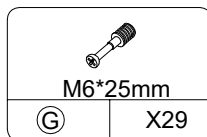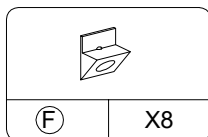


CAM BOLT
spare:2

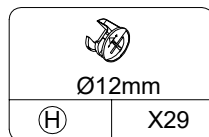


CAM LOCK
spare:2

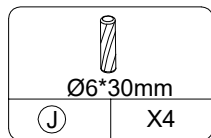


WOOD DOWEL

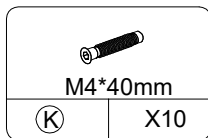


SCREW
spare:1

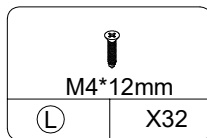


SCREW
spare:2

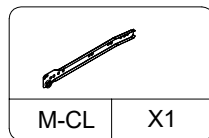


LEFT CABINET MEMBER

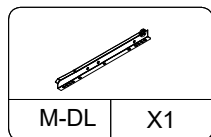



LEFT DRAWER RUNNER

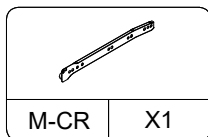

RIGHT CABINET MEMBER

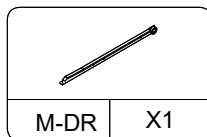


RIGHT DRAWER RUNNER

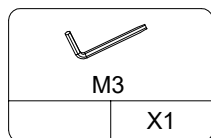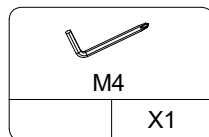


Installation Steps

Step 1

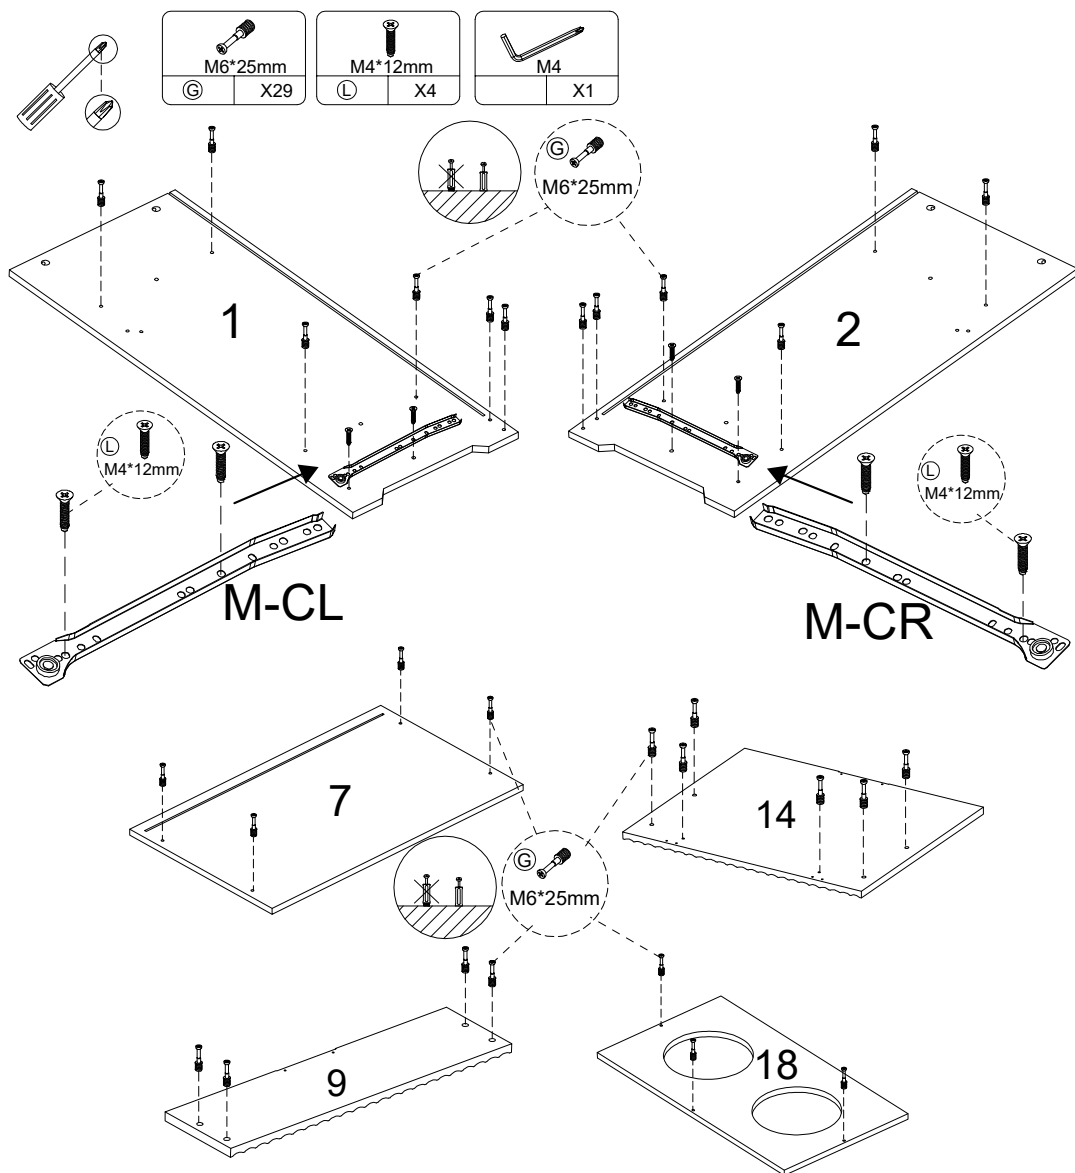


Step 2




 Ø12mm	
(H)	X12

 M6*30mm	
(J)	X4

 M4	
	X1


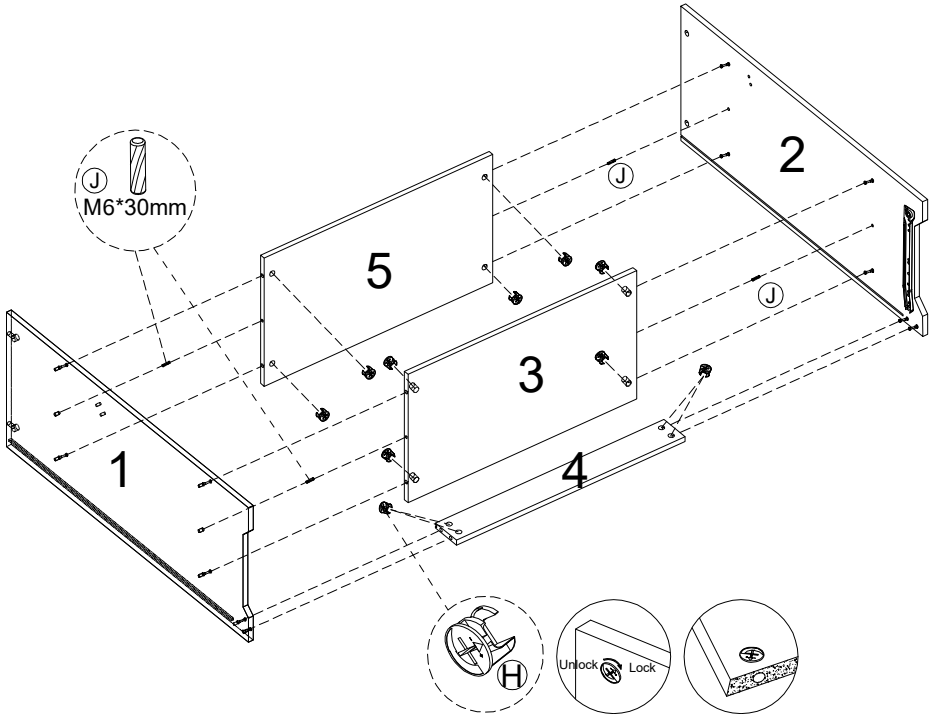


Step 3




 Ø12mm	
(H)	X4

 M4	
	X1

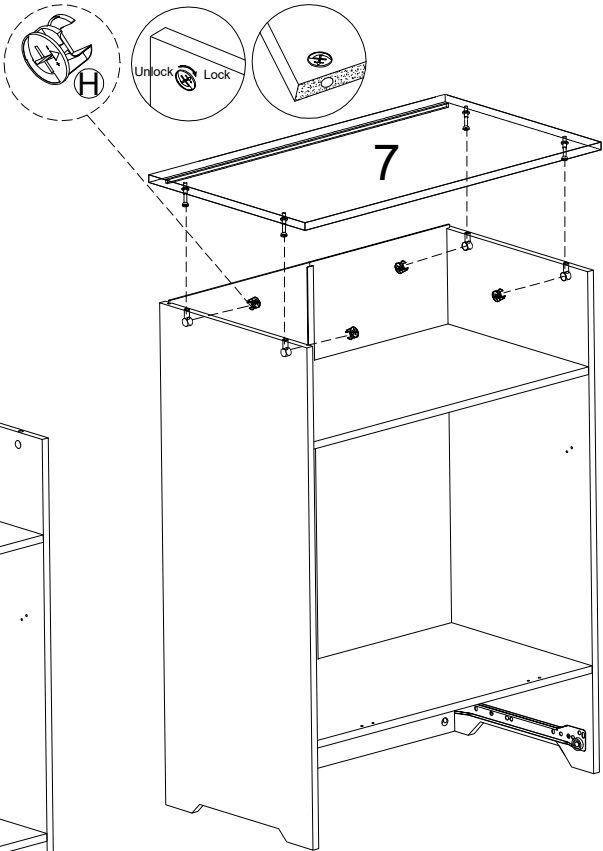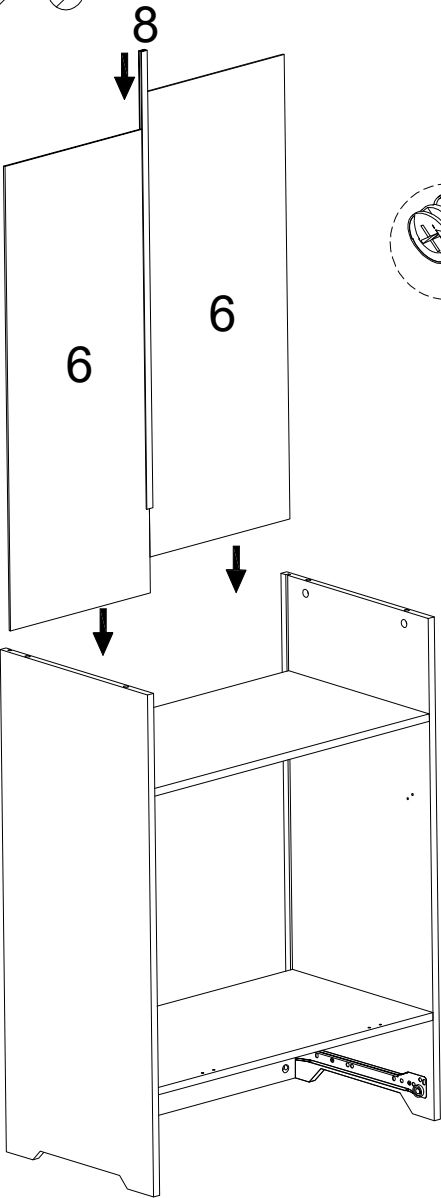

Step 4




	Ø12mm
(H)	X6

	M4*40mm
(K)	X10





	M4*12mm
(L)	X4

	M4
	X1


	M3
	X1

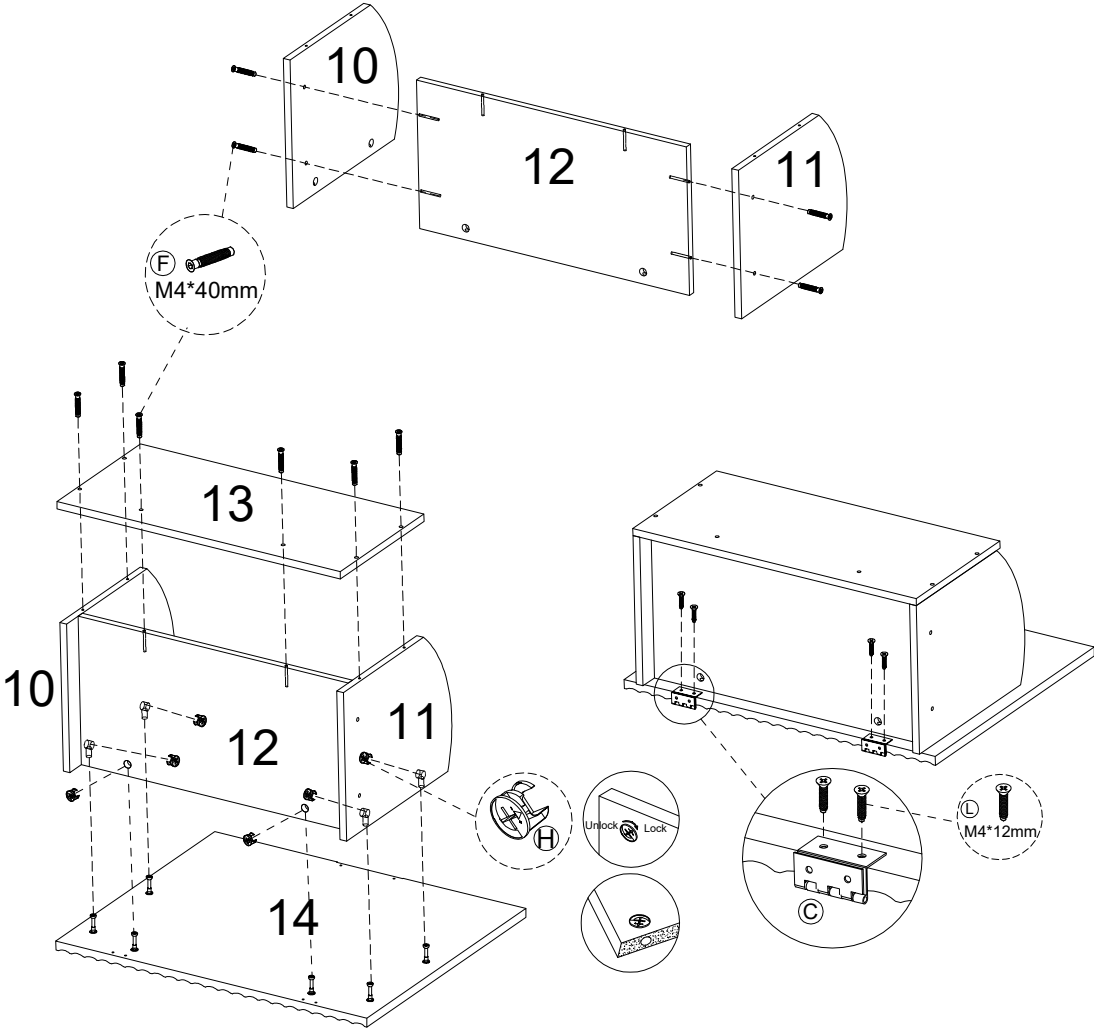



Step 5

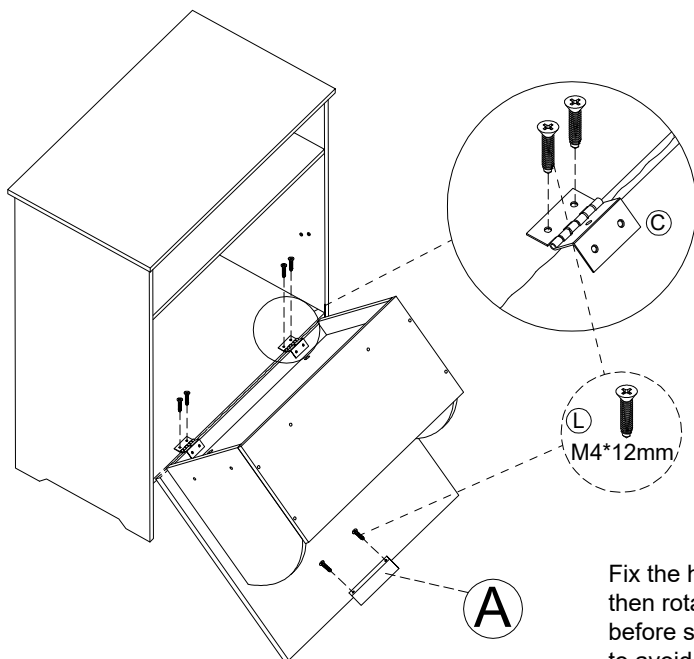

Fix the hinge © first,
then rotate the panel
before securing the limiter ©
to avoid blockage.

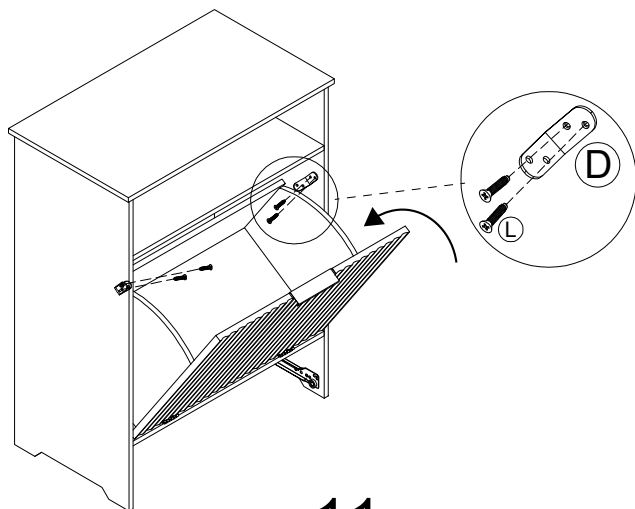

Step 6

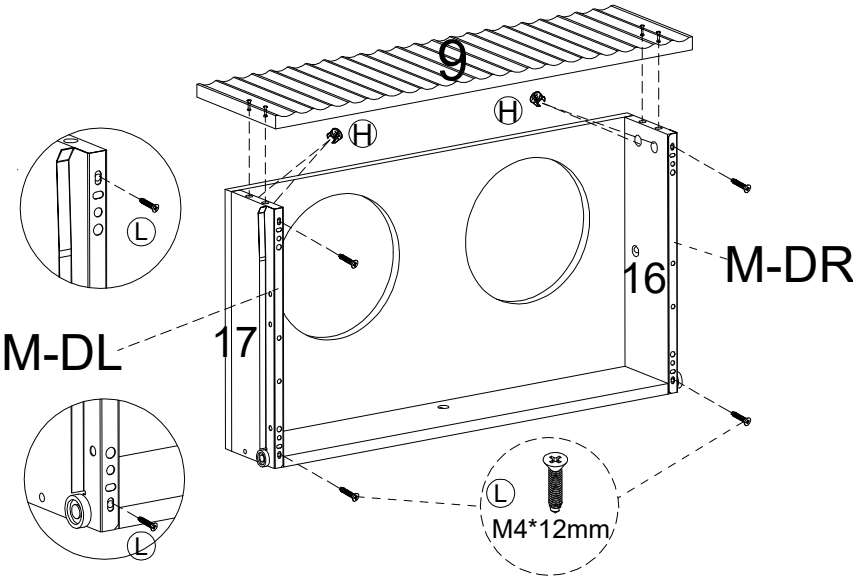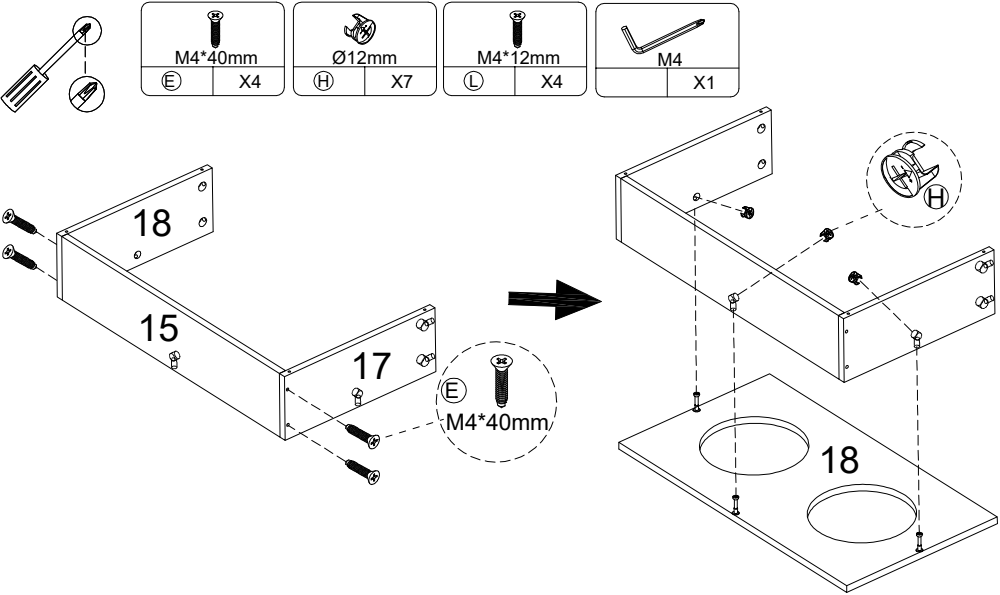

Step 7

