



# GOOD DIRECTIONS, INC.


## ASSEMBLY INSTRUCTIONS

### FULL SIZE WEATHERVANES

COPPER SPACER BALL (SMALL)




BRASS DIRECTIONALS

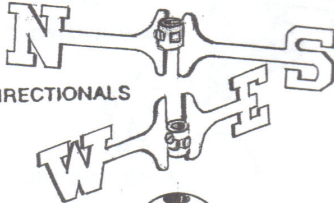

COPPER BALL (LARGE)



SMALL ROD

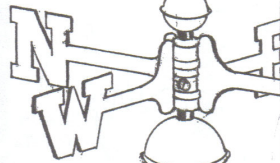

BRASS RING


LARGE ROD (18")

ASSEMBLED VIEW

**YOUR PACKAGE INCLUDES THE FOLLOWING PIECES:**


- 1 FIGURE
- 1 Small Copper Ball
- 1 Large Copper Ball
- 1 Set of Brass Directionals
- 1 Brass Ring
- 1 Small Steel Threaded Rod
- 1 Large Steel Rod (18")
- 1 Tube of Loctite®

1




POSITION BRASS RING OVER LARGE ROD. TIGHTEN SET SCREW

2

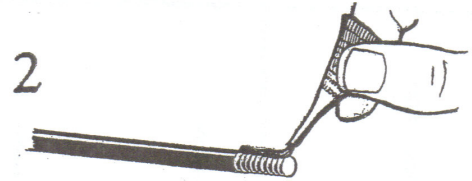

APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)


THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

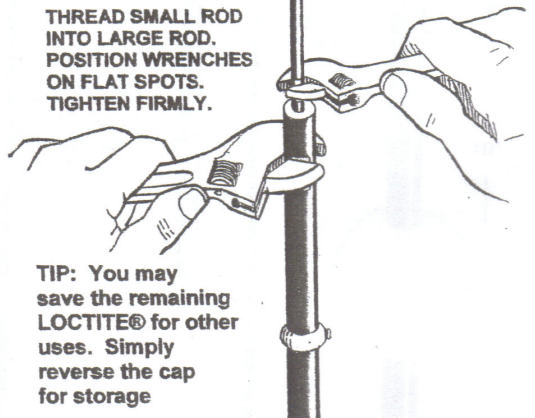

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage


3

SLIDE LARGE BALL DOWN ROD TO BRASS RING.

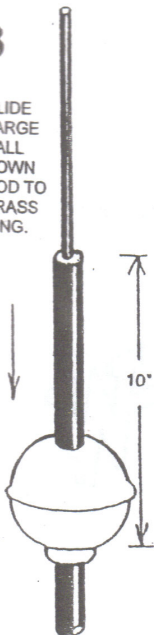


4

INTERLOCK DIRECTIONALS. SLIDE ONTO ROD. TIGHTEN SET SCREWS

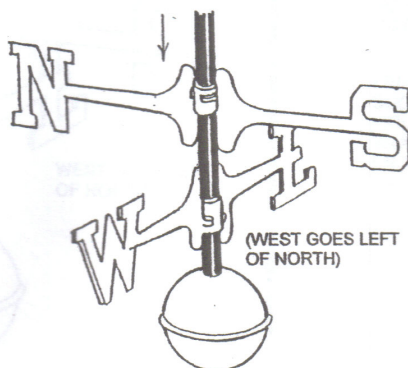

5

BRASS BOTTOM OF WEATHERVANE TUBE SLIDES OVER SMALL ROD.

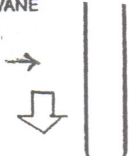

APPLY COMMON GREASE TO ROD SO VANE WILL ROTATE FREELY.

FINAL STEP... SLIDE WEATHERVANE FIGURE ONTO SMALL ROD... ENJOY!

