


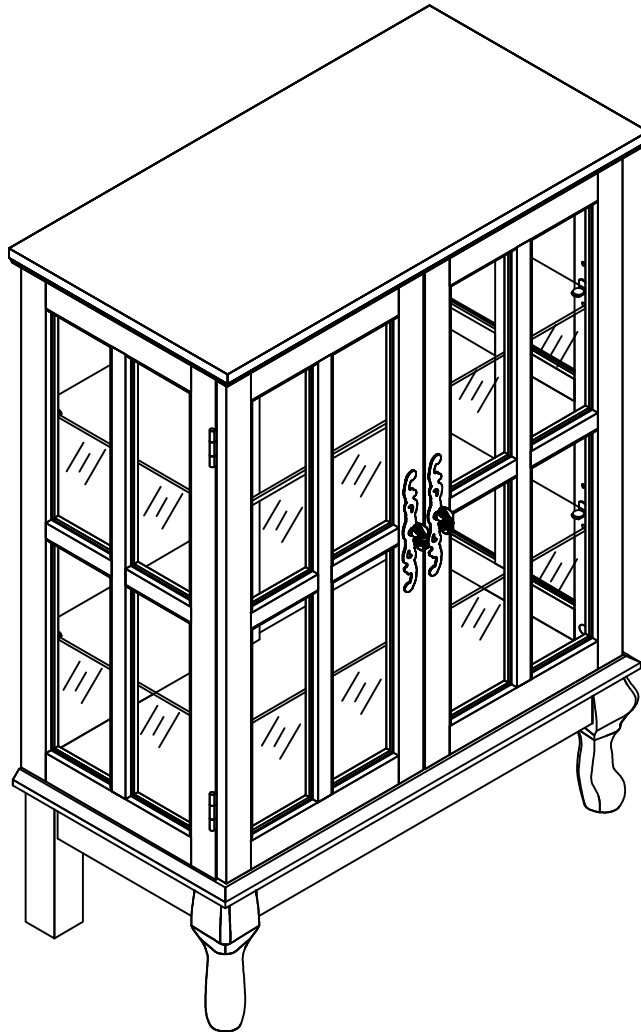


TWO DOORS GLASS CABINET

Item: MD004










Assembly Instruction

NOTE: This instruction manual contains IMPORTANT safety information. Please read carefully before assembling the product

List of Parts

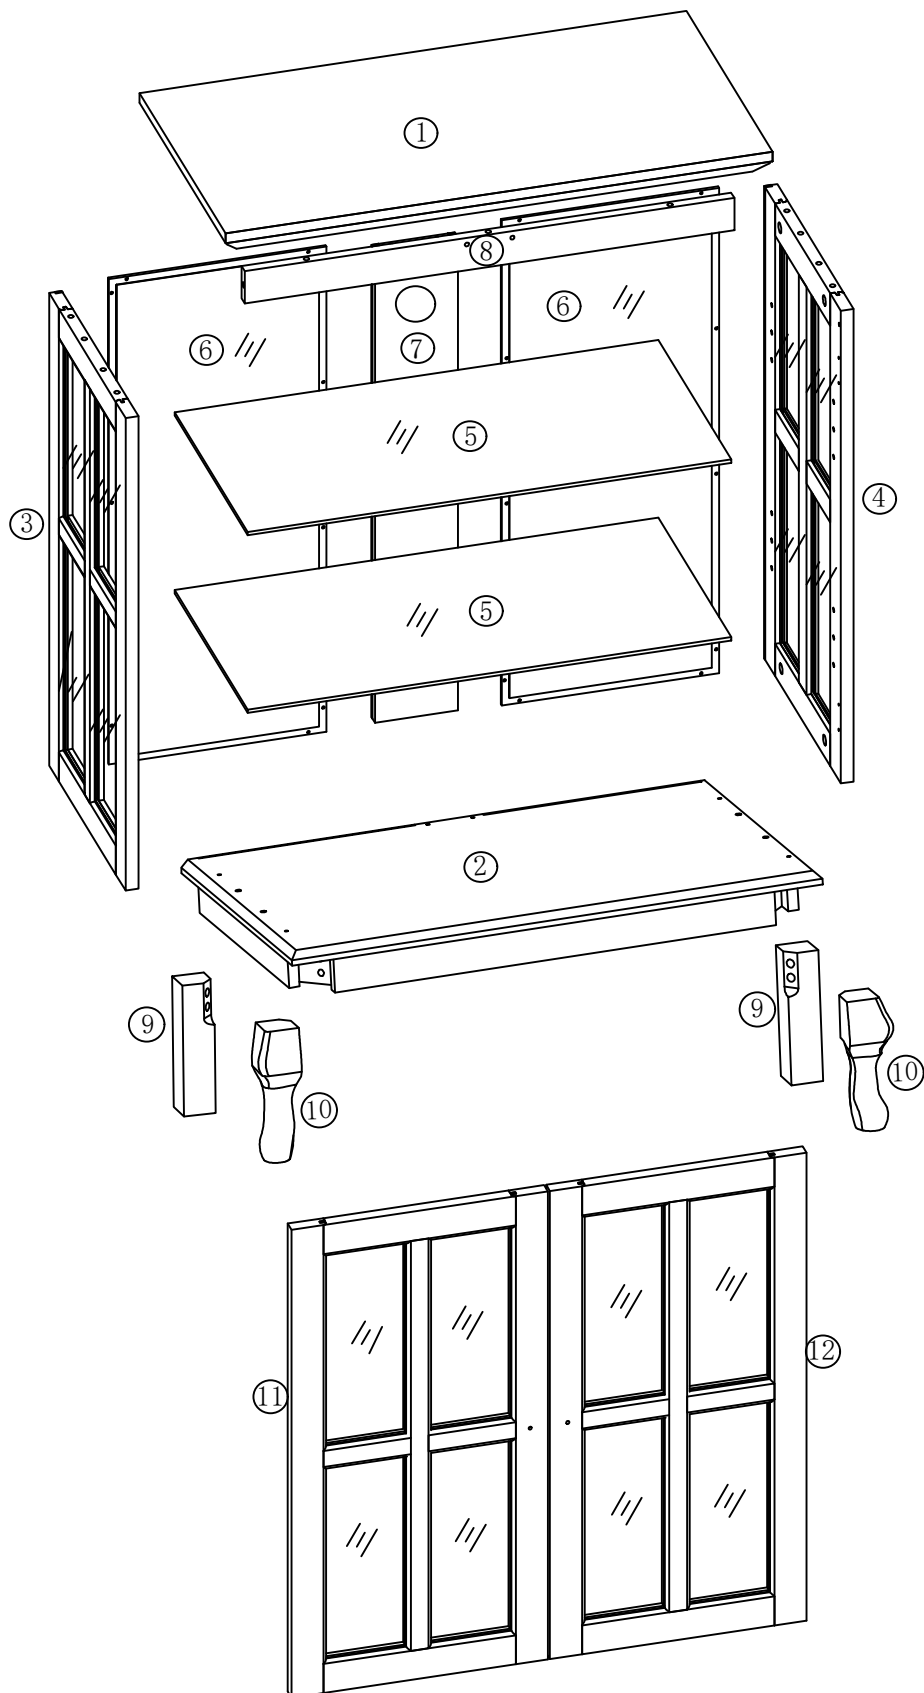

Hardware

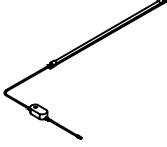A x 17+3  Ø6 x 34mm	B x 17+3  Ø15 x 10mm	C x 8+2  Ø8*30mm	D x 4+1  Ø3*12mm	E x 2 
F x 2 	G x 2  Ø4*25mm	H x 12+2  Ø20mm	I x 26+4  Ø3.5*14mm	K x 8+1 
L x 24+2  Ø3*12mm	M x 4 	N x 2 	O x 1 	P x 1 
Q x 1 	R x 4+1  M8*45mm	S x 4+1  M8*35mm	T x 8+1 	U x 8+1 

STEP1


R x 4

Ø8*45mm
T x 8


U x 8


S x 4

M8*35mm

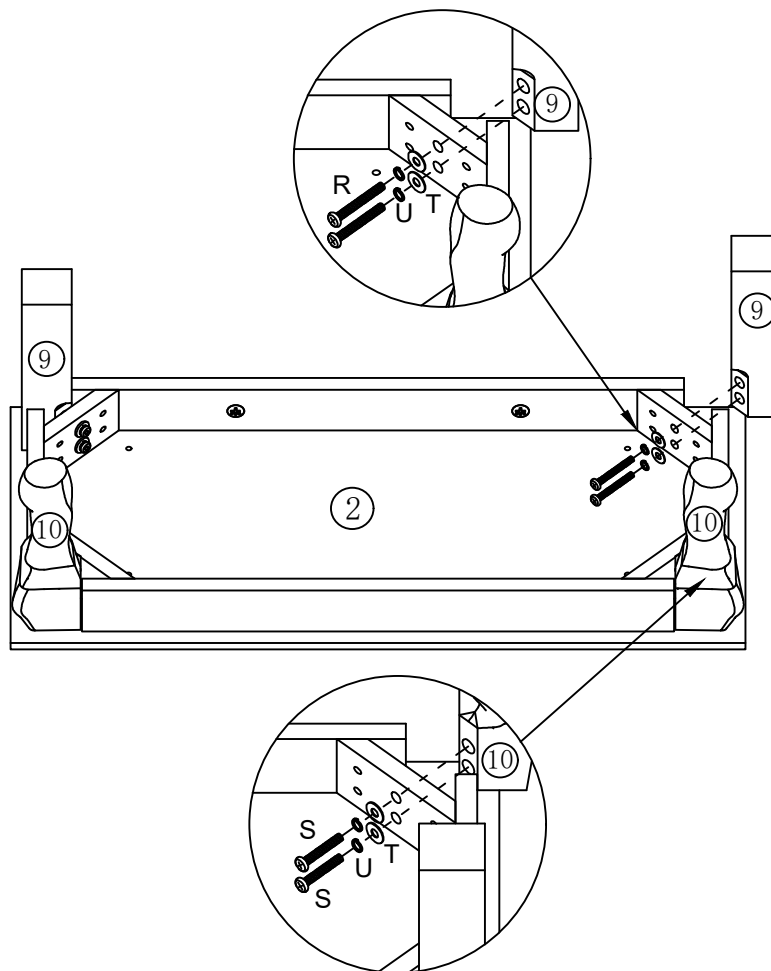


STEP2

A x 6

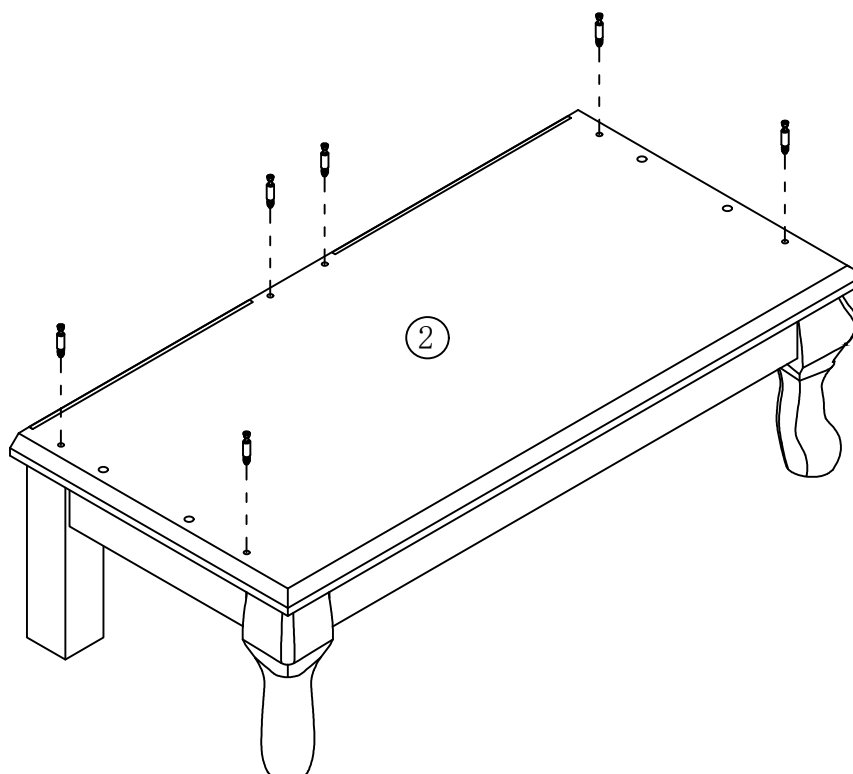Ø6 x 34mm




STEP3

A x 2



Ø6 x 34mm

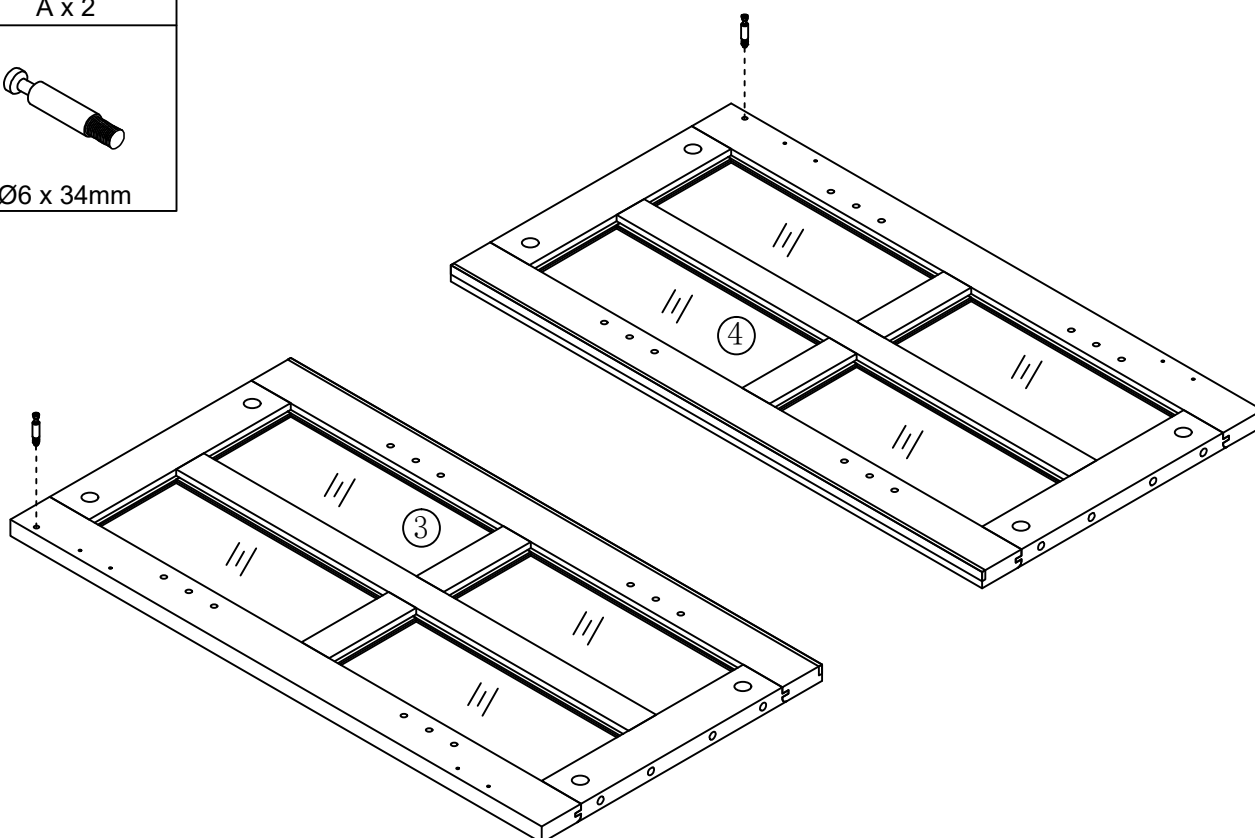


STEP4

B x 2



Ø15 x 10mm

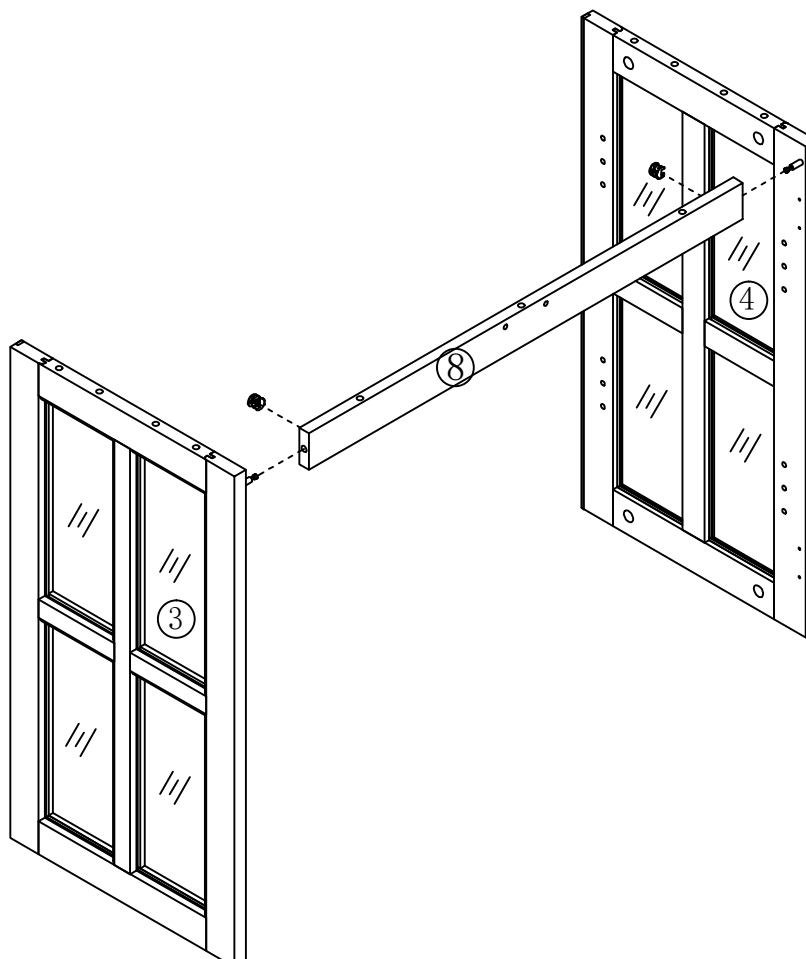


STEP5

B x 6




Ø15 x 10mm

C x 4



Ø8*30mm

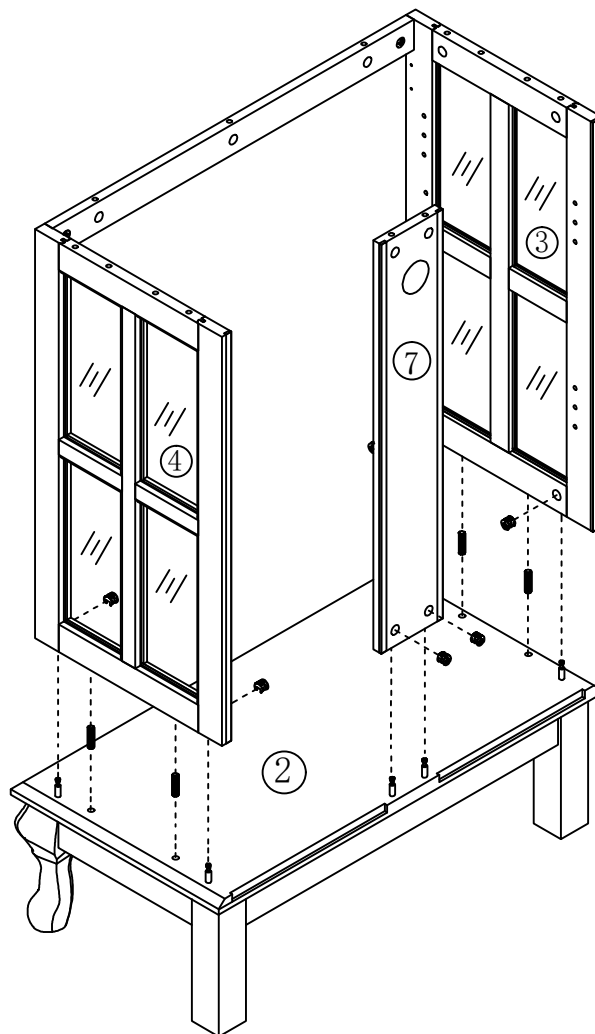


STEP6

A x 9



Ø6 x 34mm

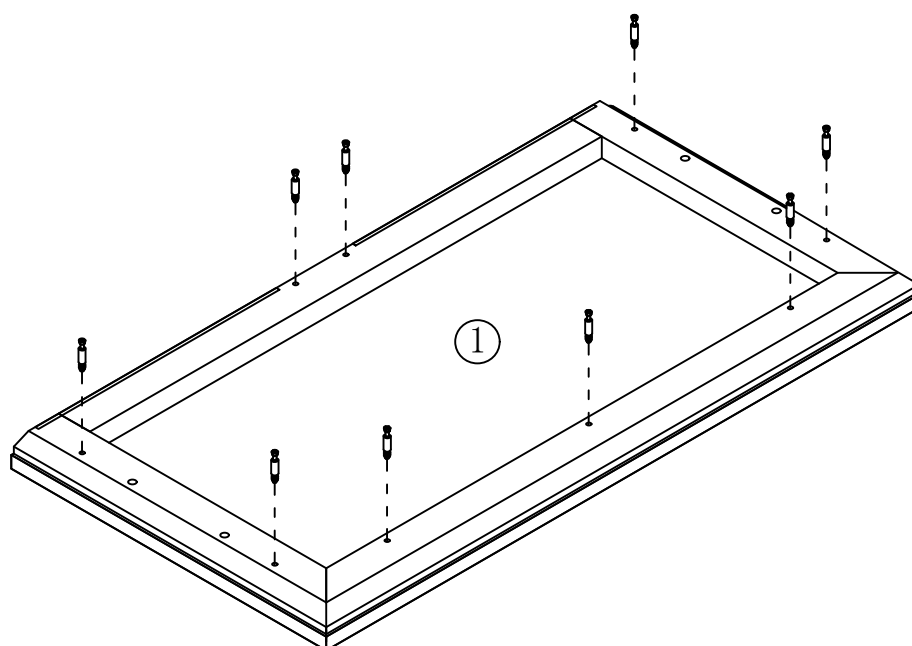



STEP7

1 x 2



Ø3.5*14mm

O X 1

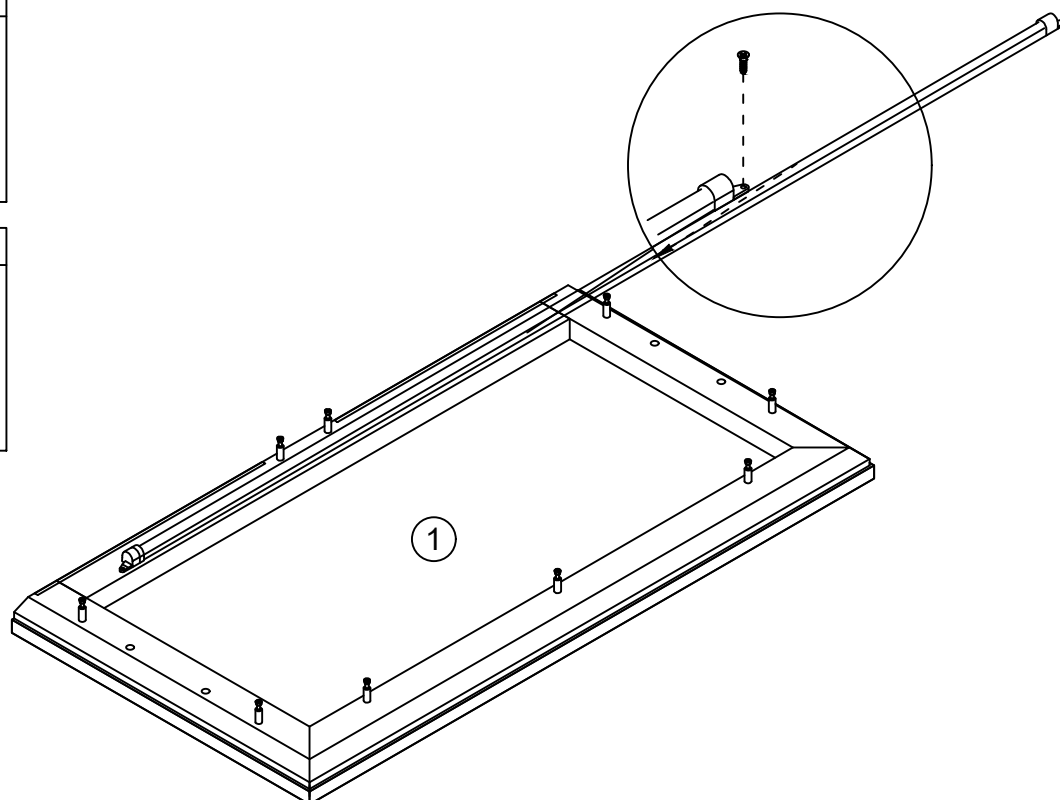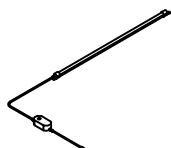


STEP8

B x 9




Ø15 x 10mm



C x 4




Ø8*30mm

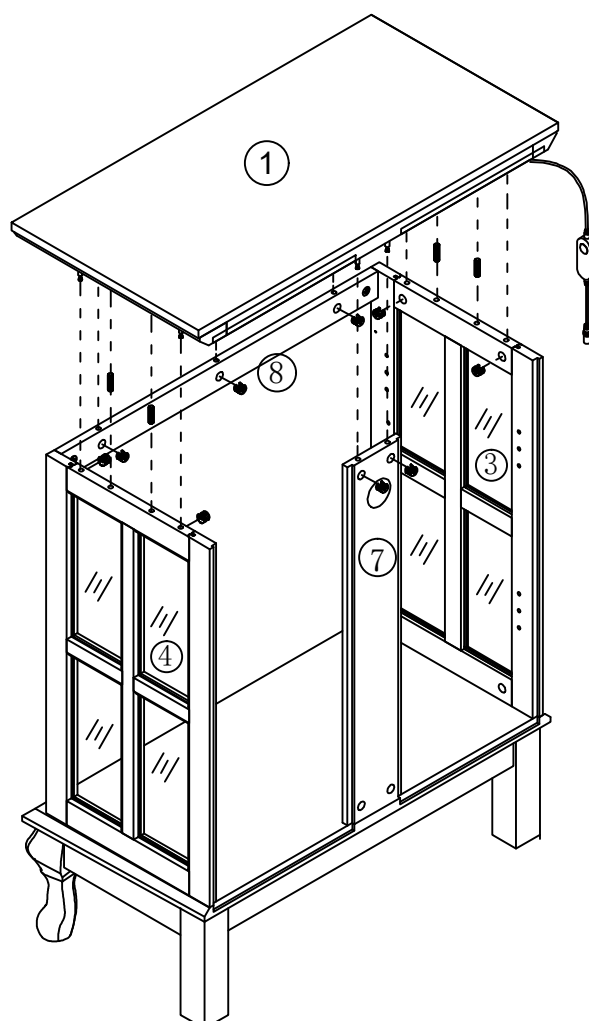



STEP9

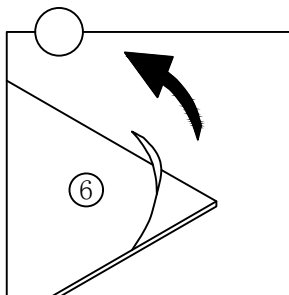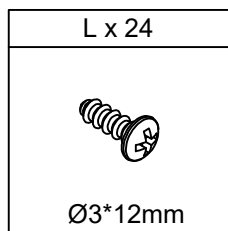



Remove protective film
on the mirror panel.

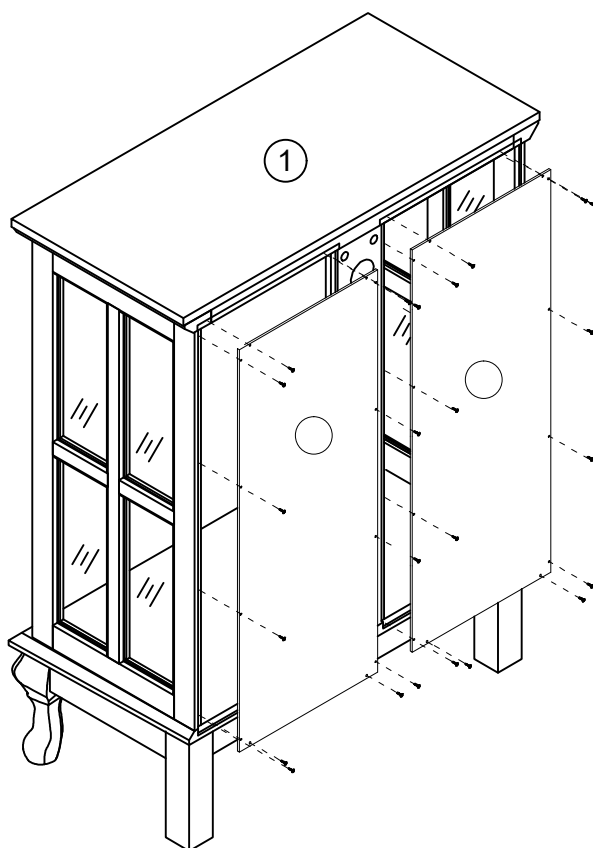



STEP10

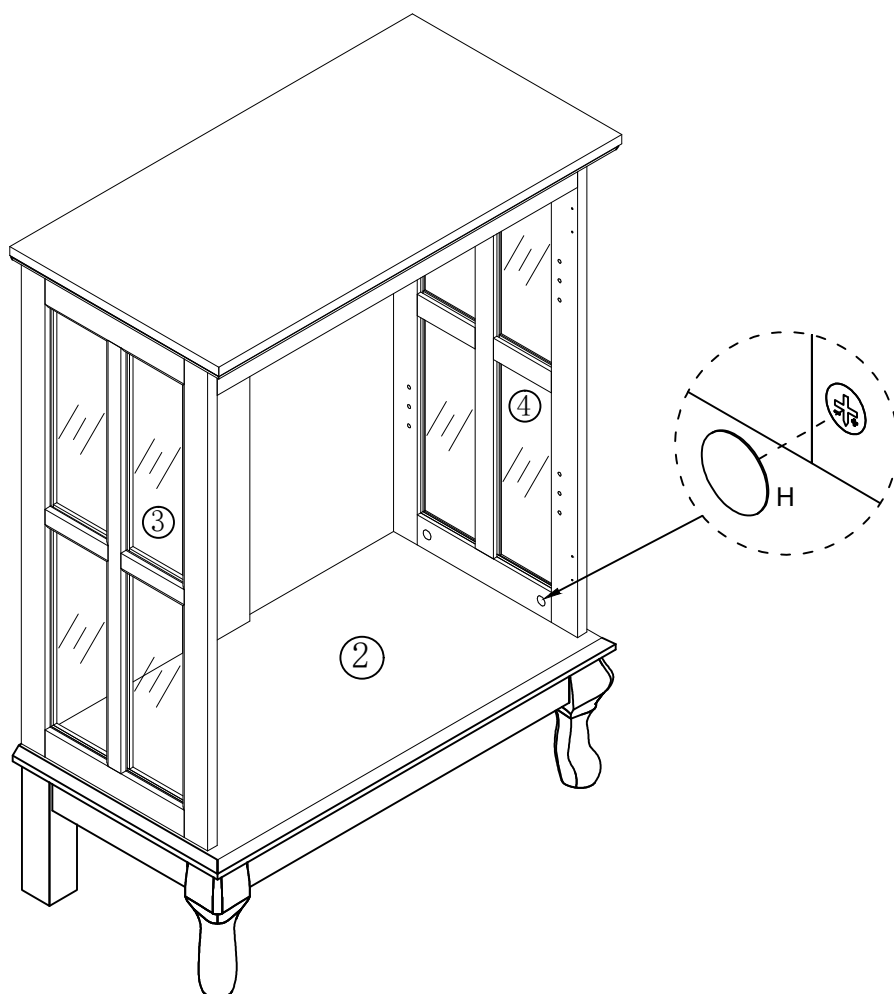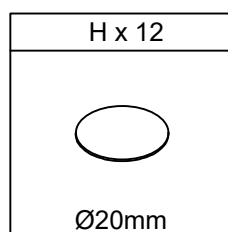



STEP11

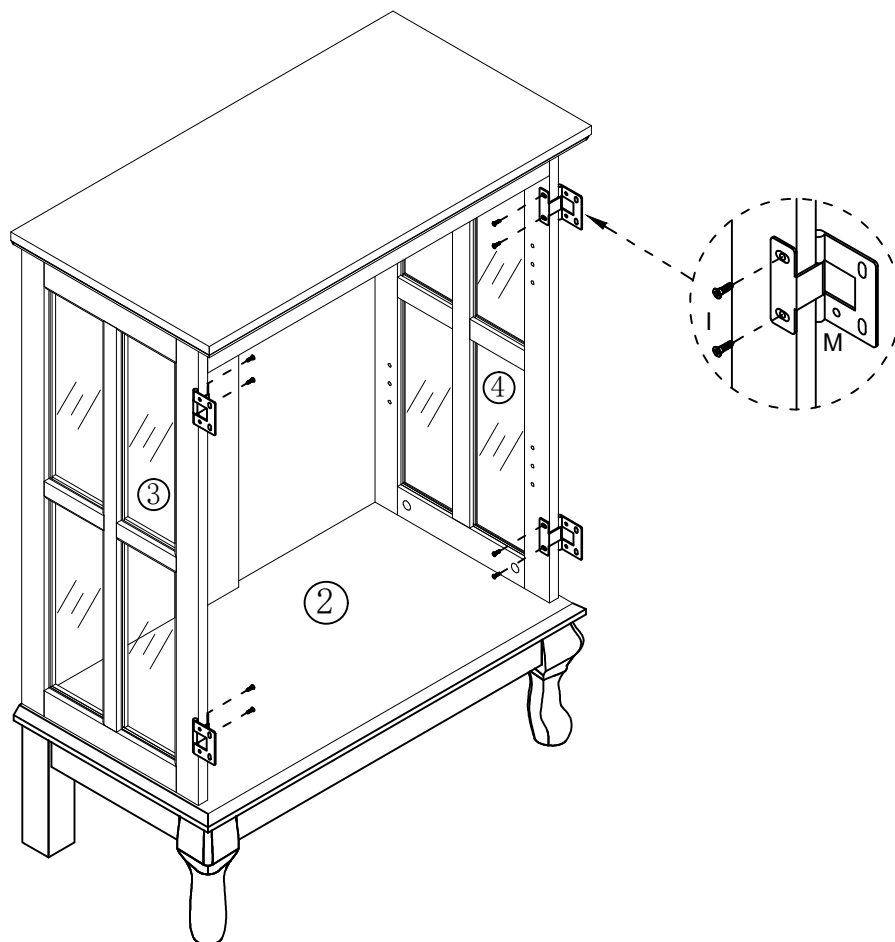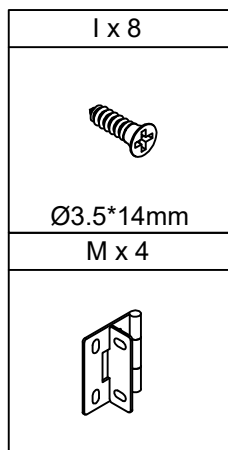



STEP12

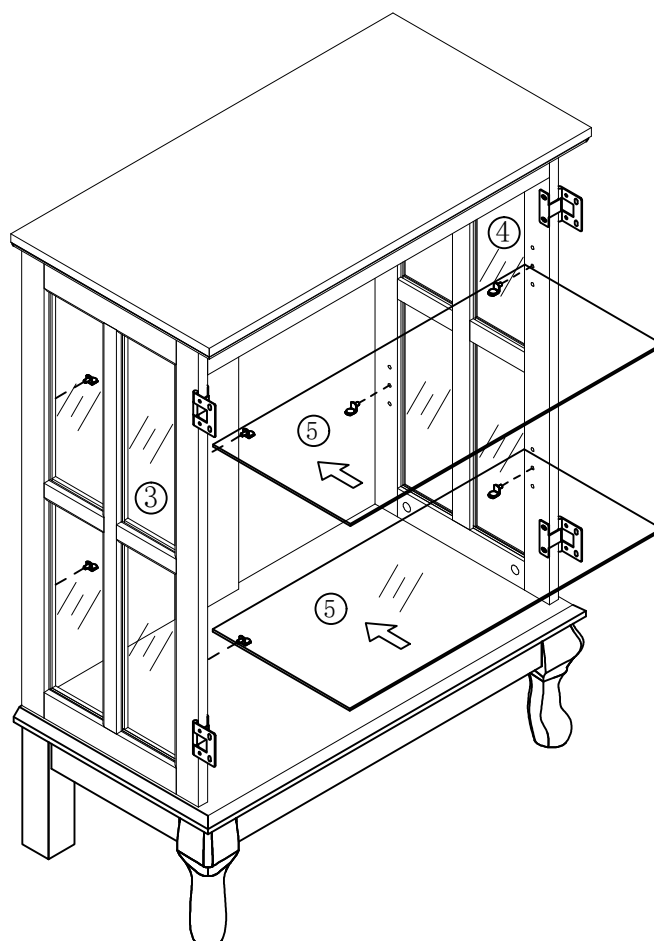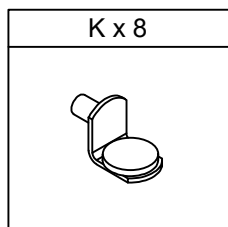

STEP13

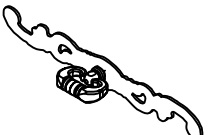F x 2

G x 2

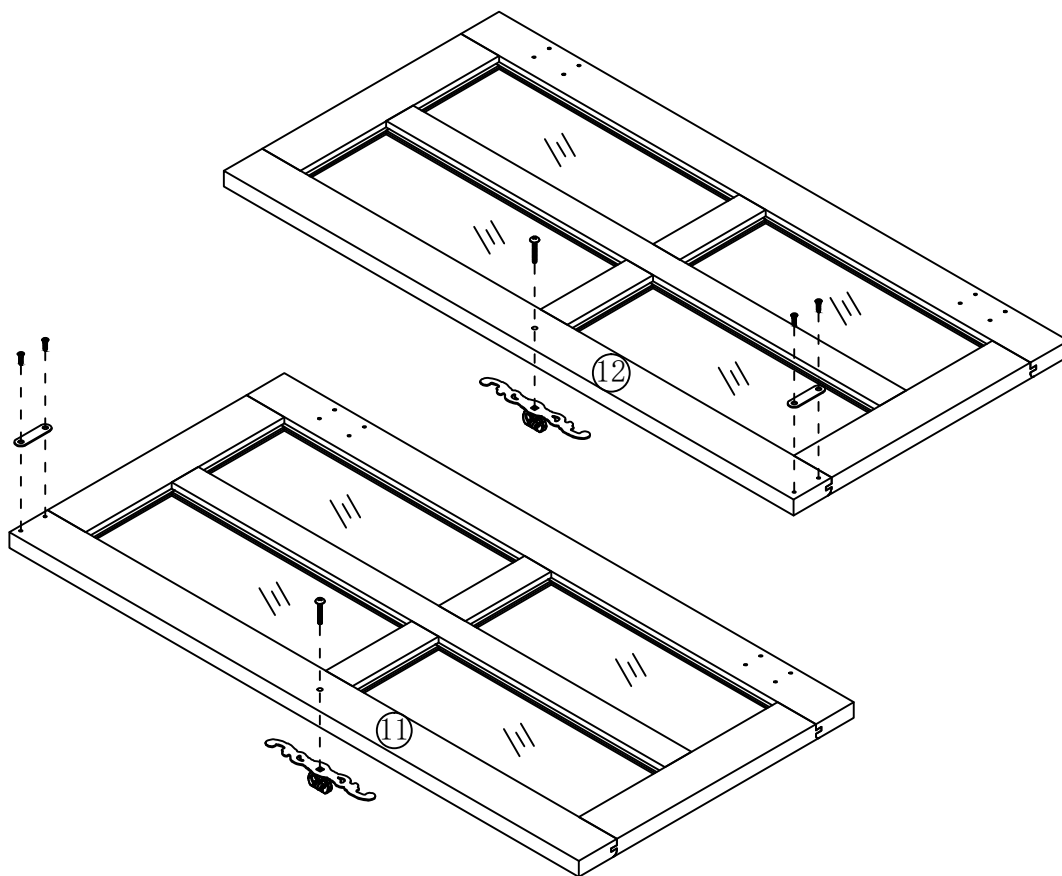Ø4*25mm
D x 4


Ø3*12mm
E x 2




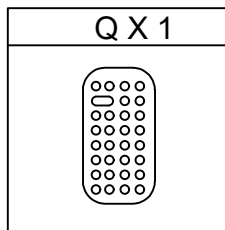
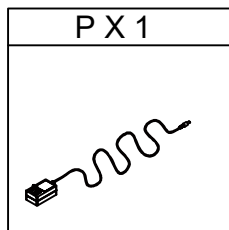
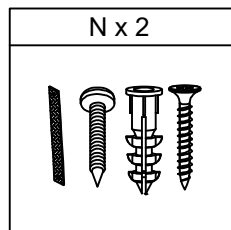
STEP14

I x 16




Ø3.5*14mm

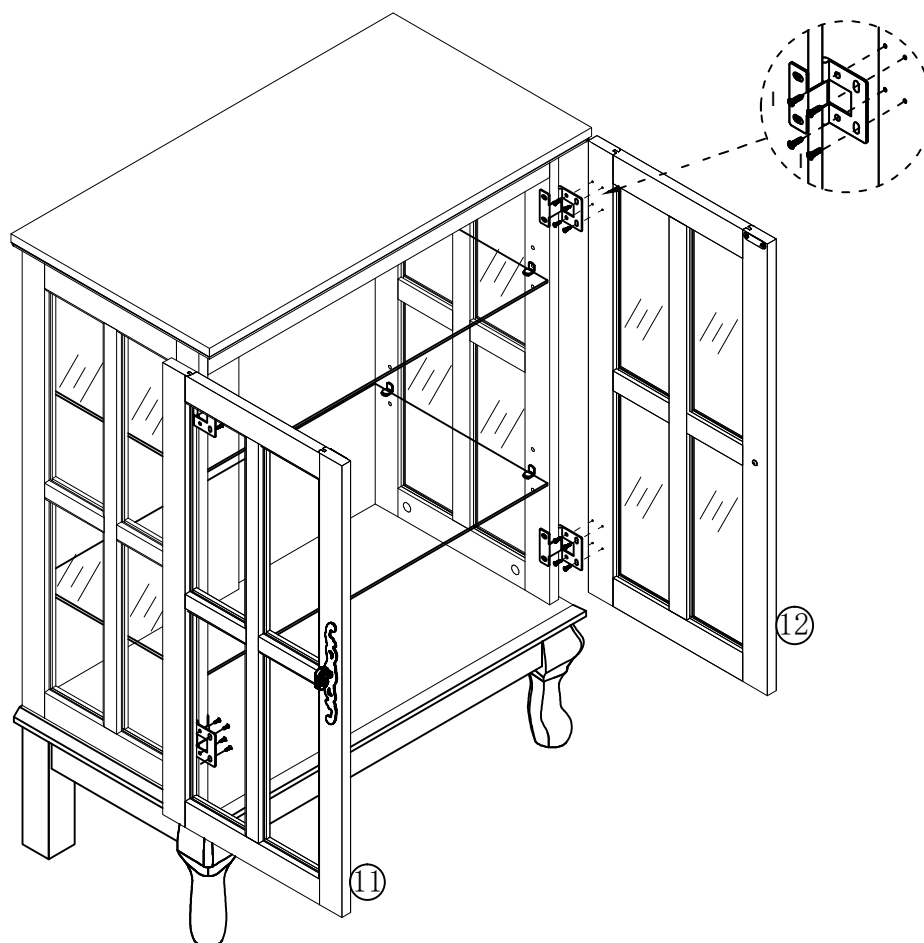

STEP15



Wall

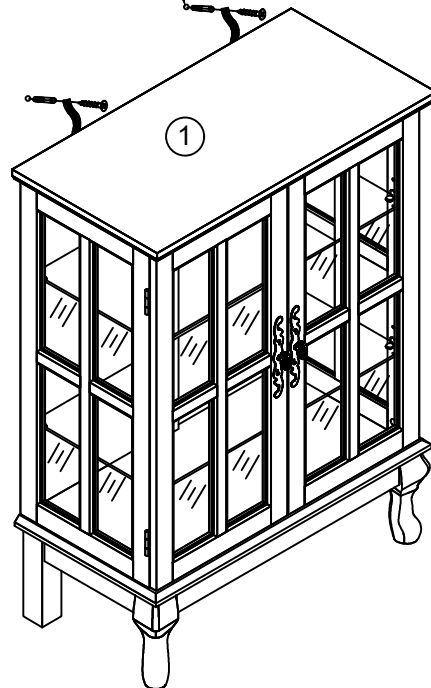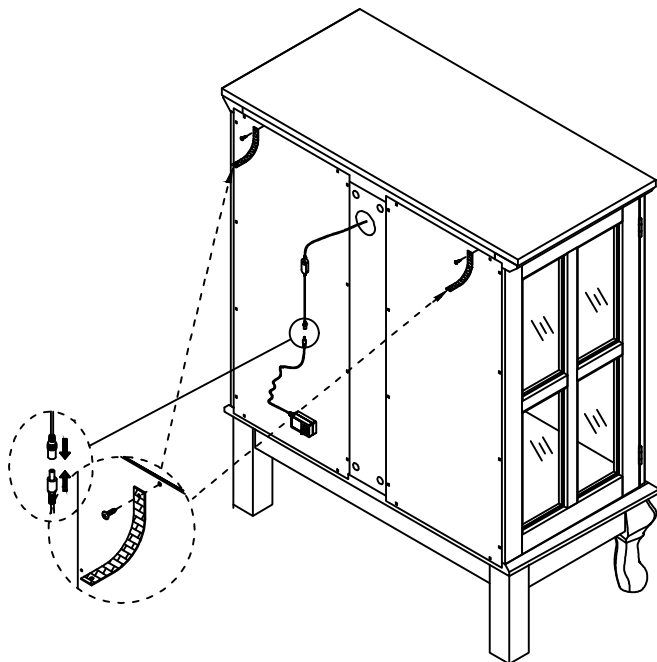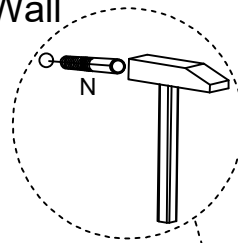

STEP16

