


PARTS


M×2  
PLASTIC COVER




L×1  
HEADREST

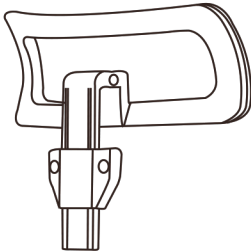


C×1  
ARMREST

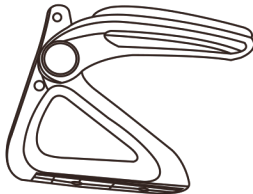

A×1  
BACKREST

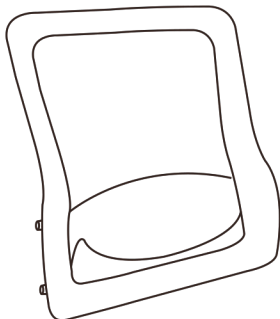

D×1  
ARMREST

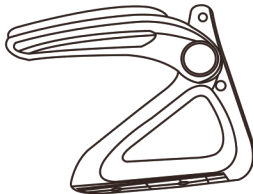


B×1




SEAT


J×1 BUTTERFLY  
HOLDER

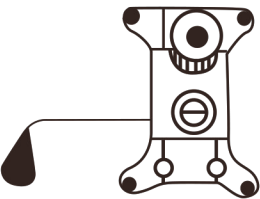


F×1 GAS STICK

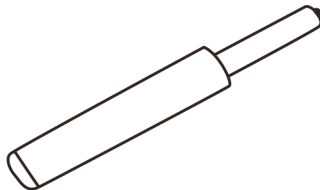

G×5  
CASTOR

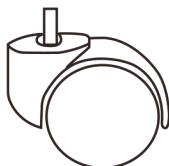

E×1  
FIVE STAR BASE

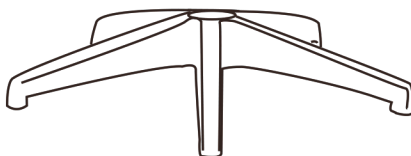


H×1

H-1  × 2  
M6x20mm

H-2  × 8  
M6x22mm

H-3  × 4  
M6x35mm

K×8




N×1



I×1




Assembly Instruction

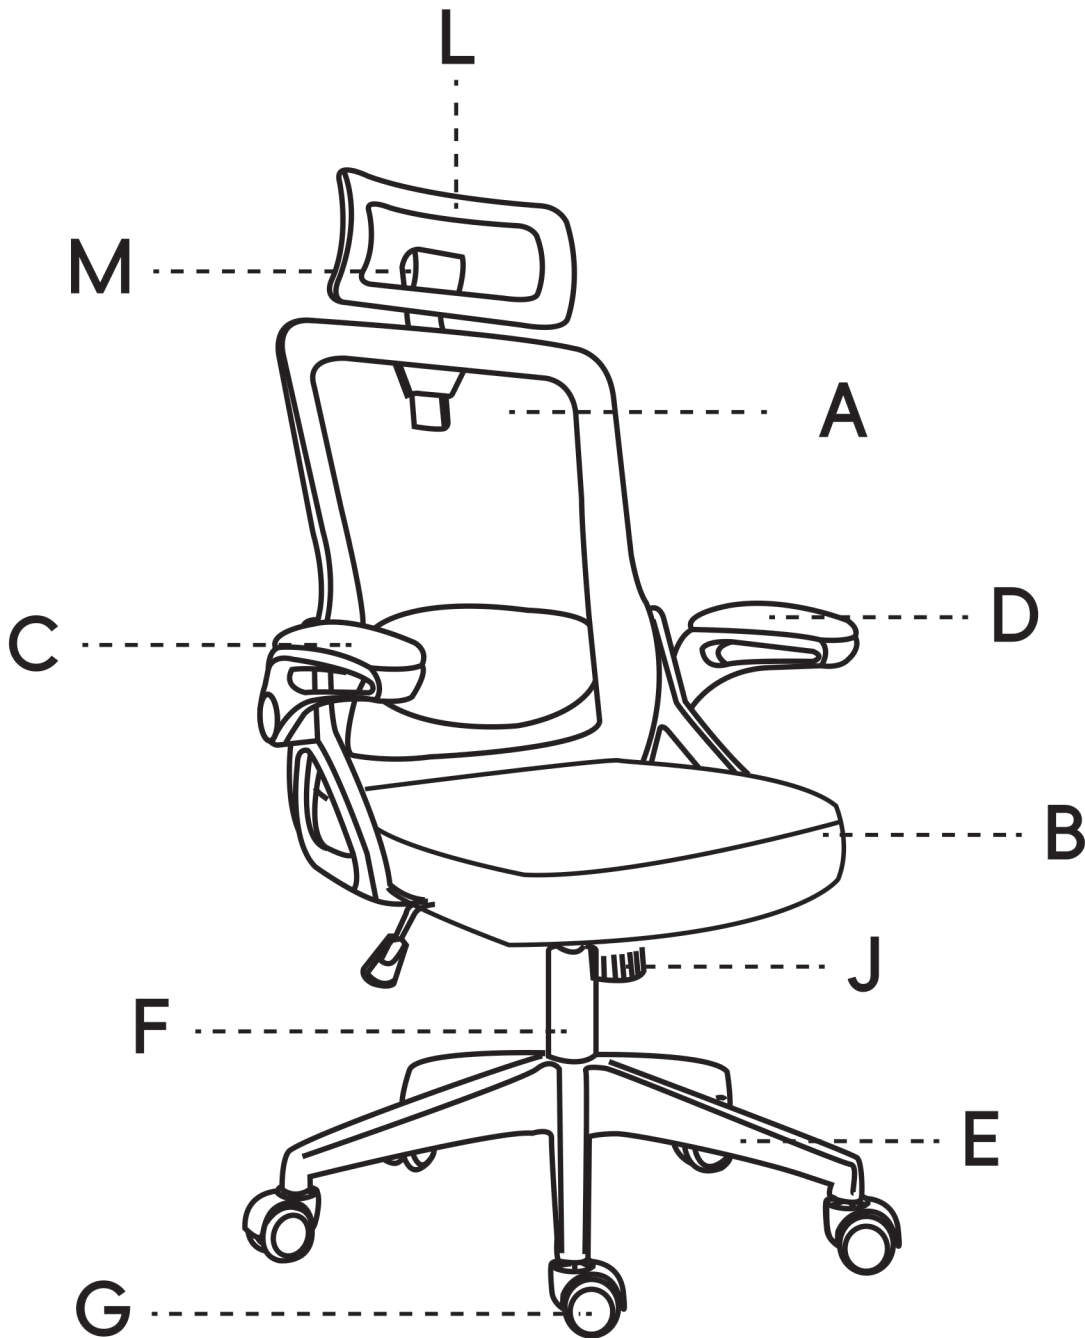


Made In China

STEP 1

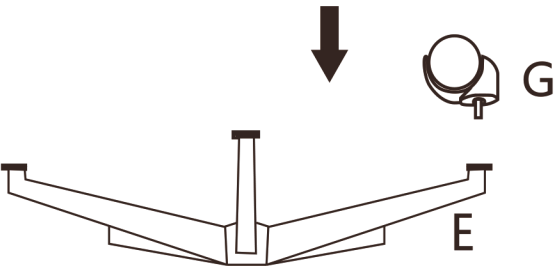


Push the wheels to the base.

STEP 2

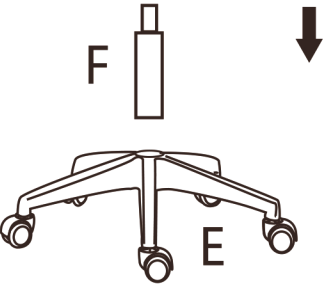


Put the gas lift on the base.


STEP 3

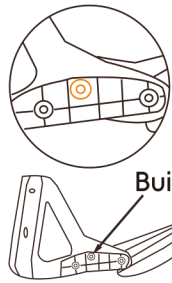

Please try the looseness of the handrail and use the fitting to adjust it to your optimum looseness before installation.

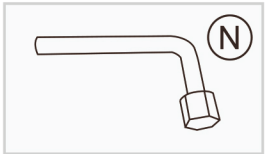


You can use this wrench

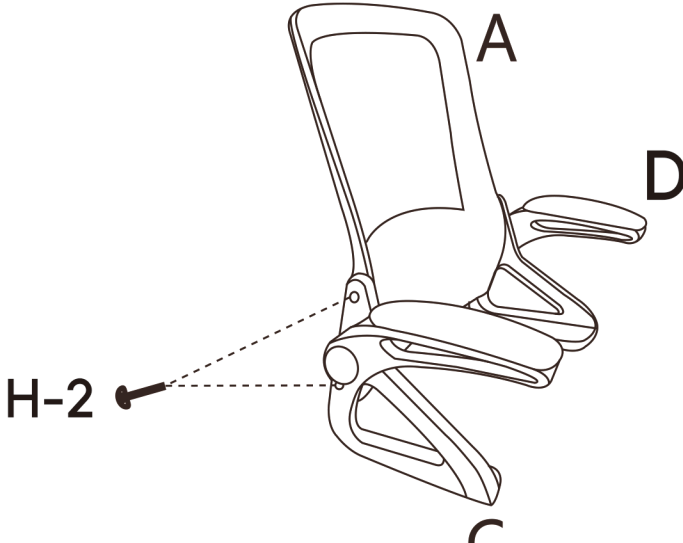


Assemble the armrest and back firstly

STEP 4

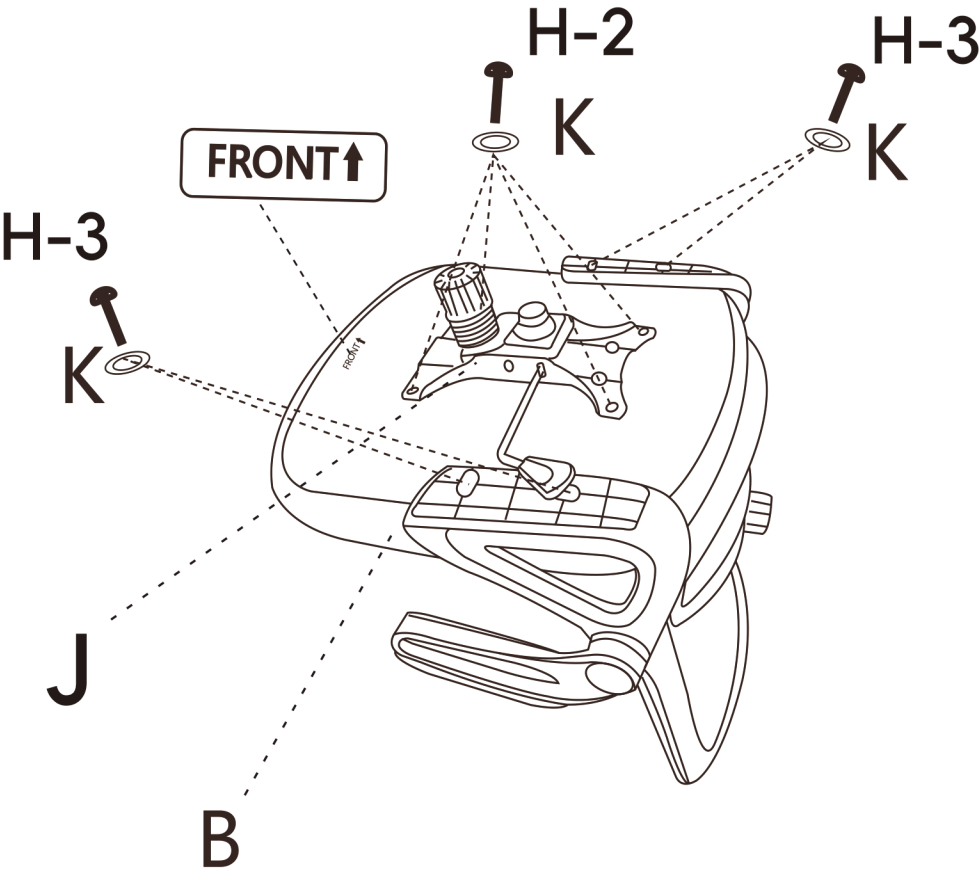

Assemble the armrest and seat cushion first.  
After that attach the mechanism on the seat cushion.  
Please notice the direction!

STEP 5

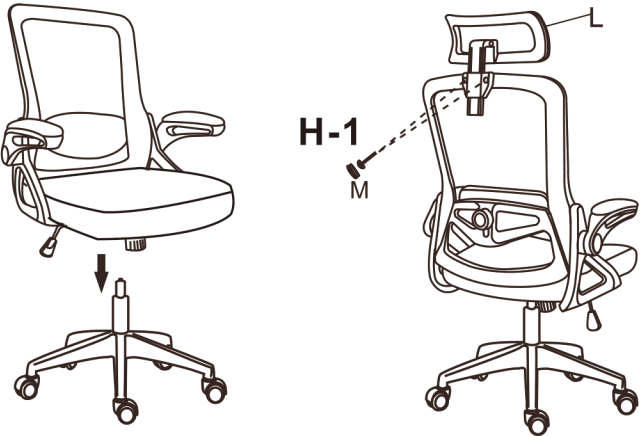

Assemble the chair with two whole parts

STEP 6



Turn the knob clockwise/counterclockwise to adjust the position of the lumbar support