



Installation & Assembly

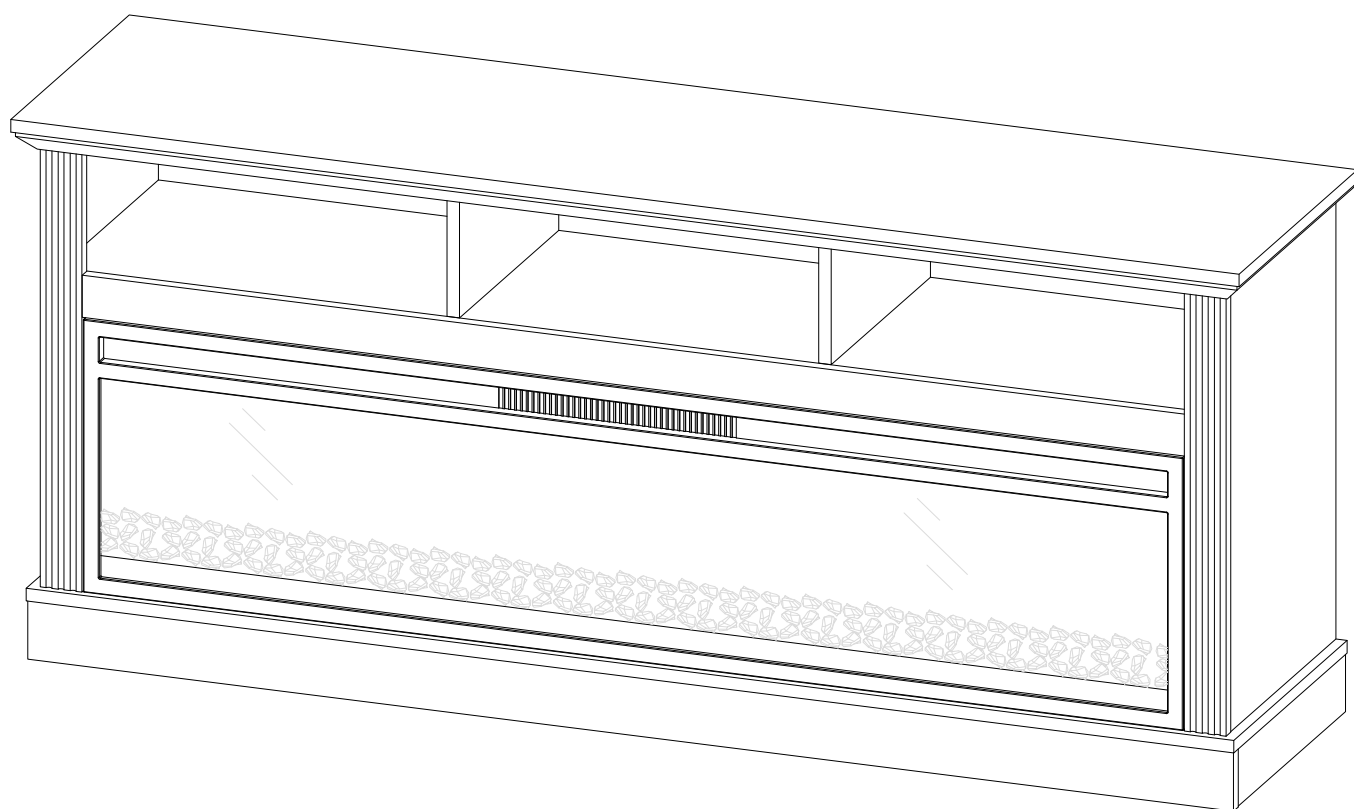

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start


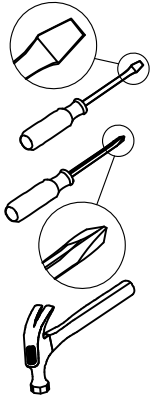


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

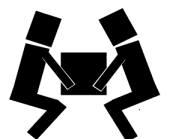


Board Identification


Not actual size

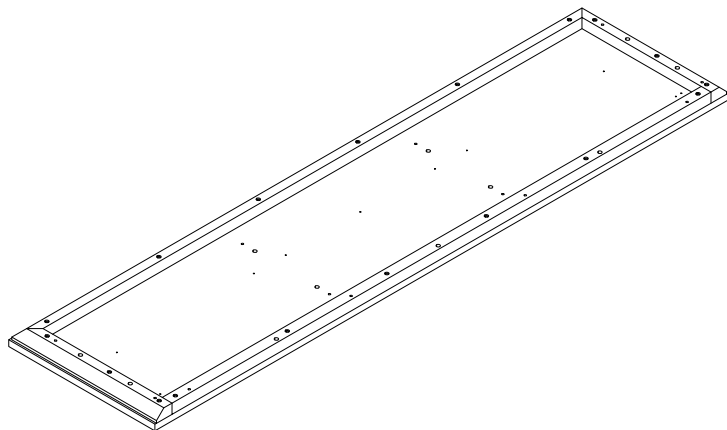


Ⓐ
TOP
Qty:1

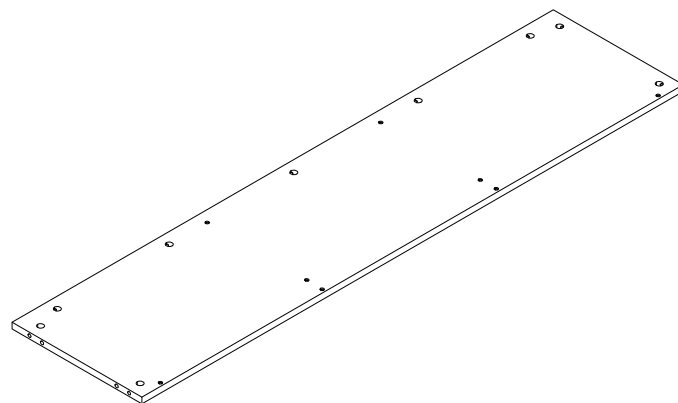


Ⓑ
FIXED SHELF
Qty:1

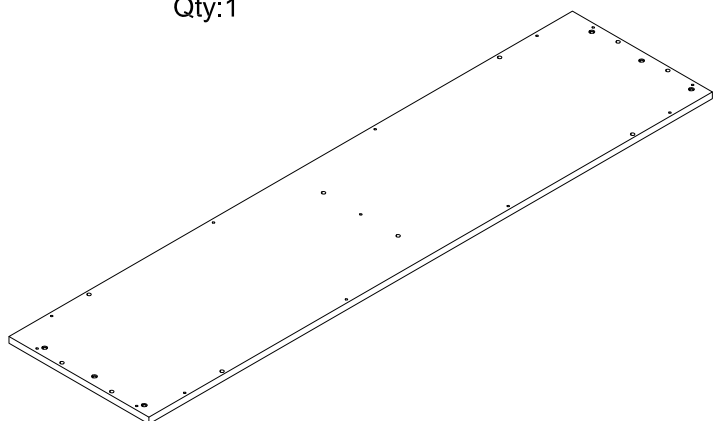


Ⓒ
BOTTOM
Qty:1

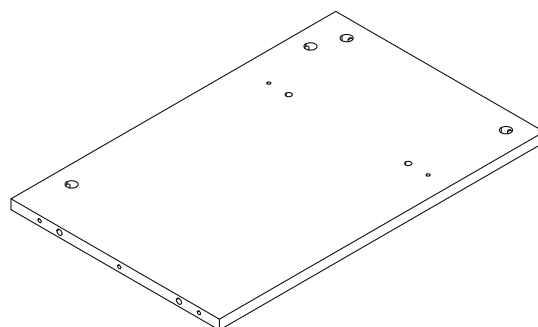

Ⓓ
LEFT SIDE PANEL
Qty:1

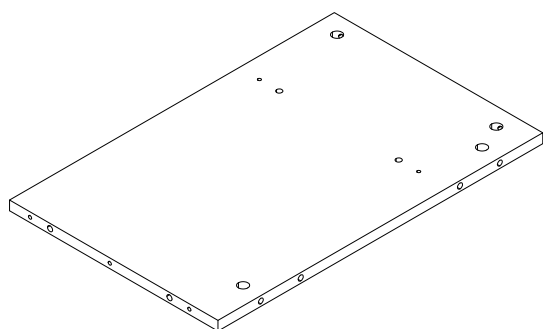


Ⓔ
RIGHT SIDE PANEL
Qty:1

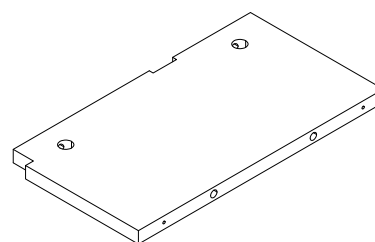


Ⓕ
UPPER PARTITION
Qty:2

Board Identification


Not actual size

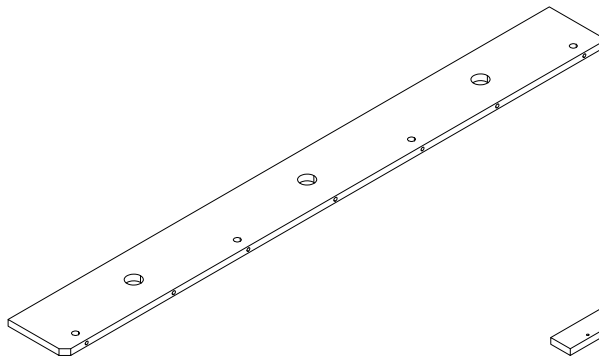


(G)
BACK PANEL
Qty:1

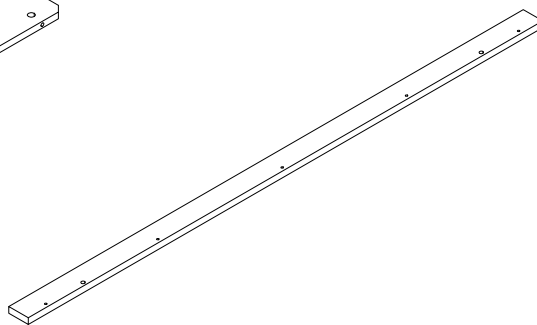


(H)
RAIL
Qty:1

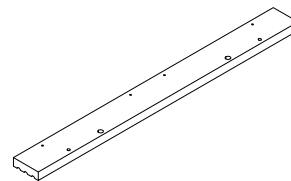


(I)
RAIL
Qty:2

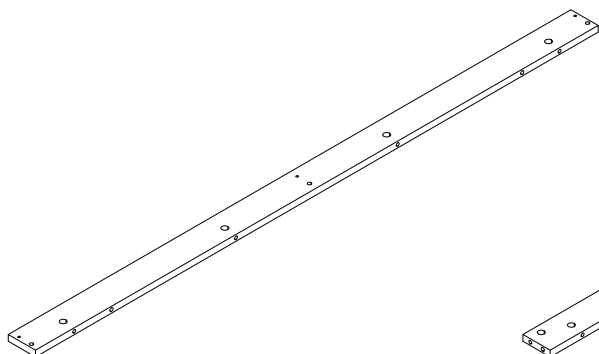


(J)
FRONT BASE PANEL
Qty:1

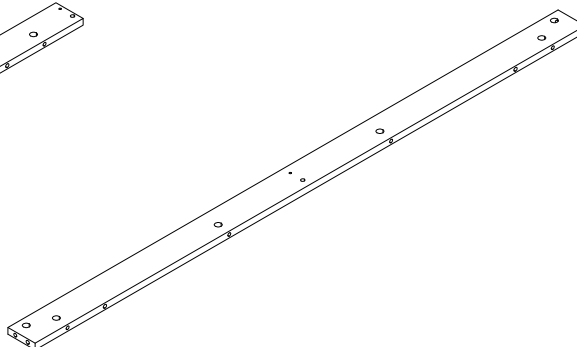


(K)
BACK BASE PANEL
Qty:1

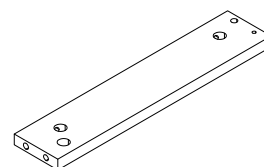

(L)
LEFT BASE PANEL
Qty:1

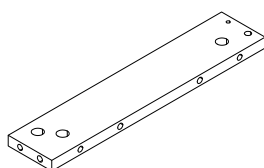


(M)
RIGHT BASE PANEL
Qty:1

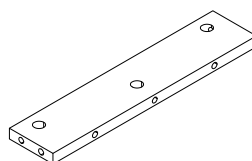


(N)
MIDDLE BASE PANEL
Qty:1


Part List

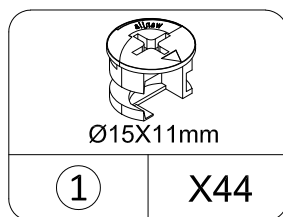


CAM LOCK
spare:1

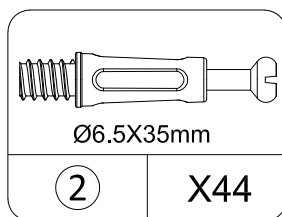


CAM BOLT
spare:1

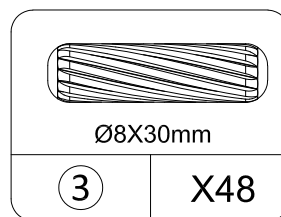


WOODEN DOWEL
spare:2

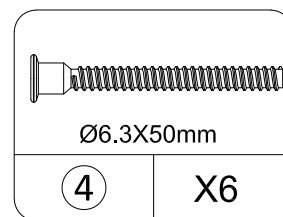


SCREW
spare:1

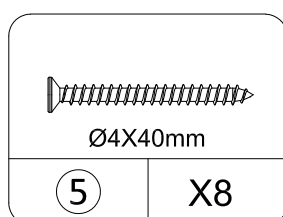


SCREW
spare:1

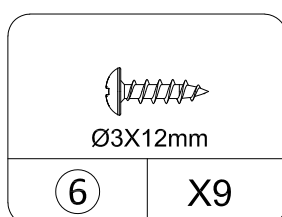


SCREW
spare:1

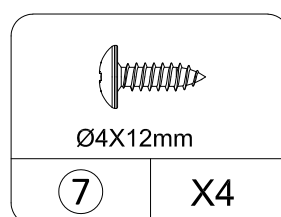


SCREW
spare:1

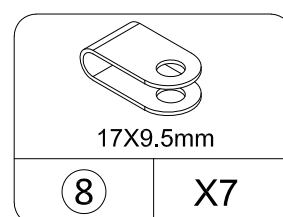


LAMP BELT BUCKLE
spare:1

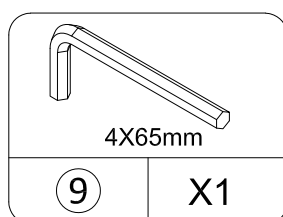

HEX KEY

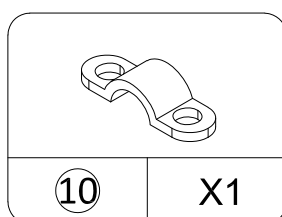




LIGHT WIRE HOLDER

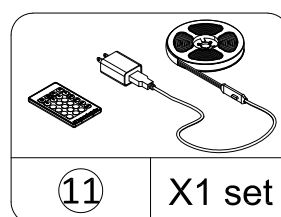


LAMP TUBE

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

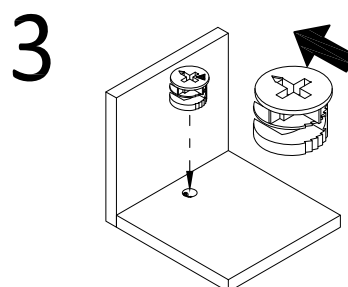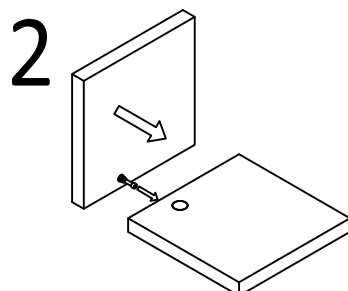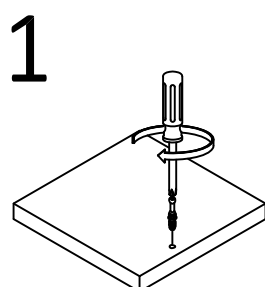


The opening must point toward the edge of the board




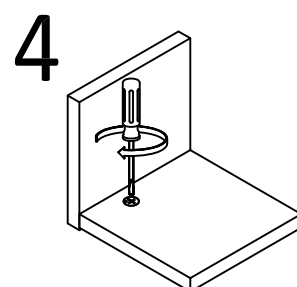


Board Identification








Not actual size

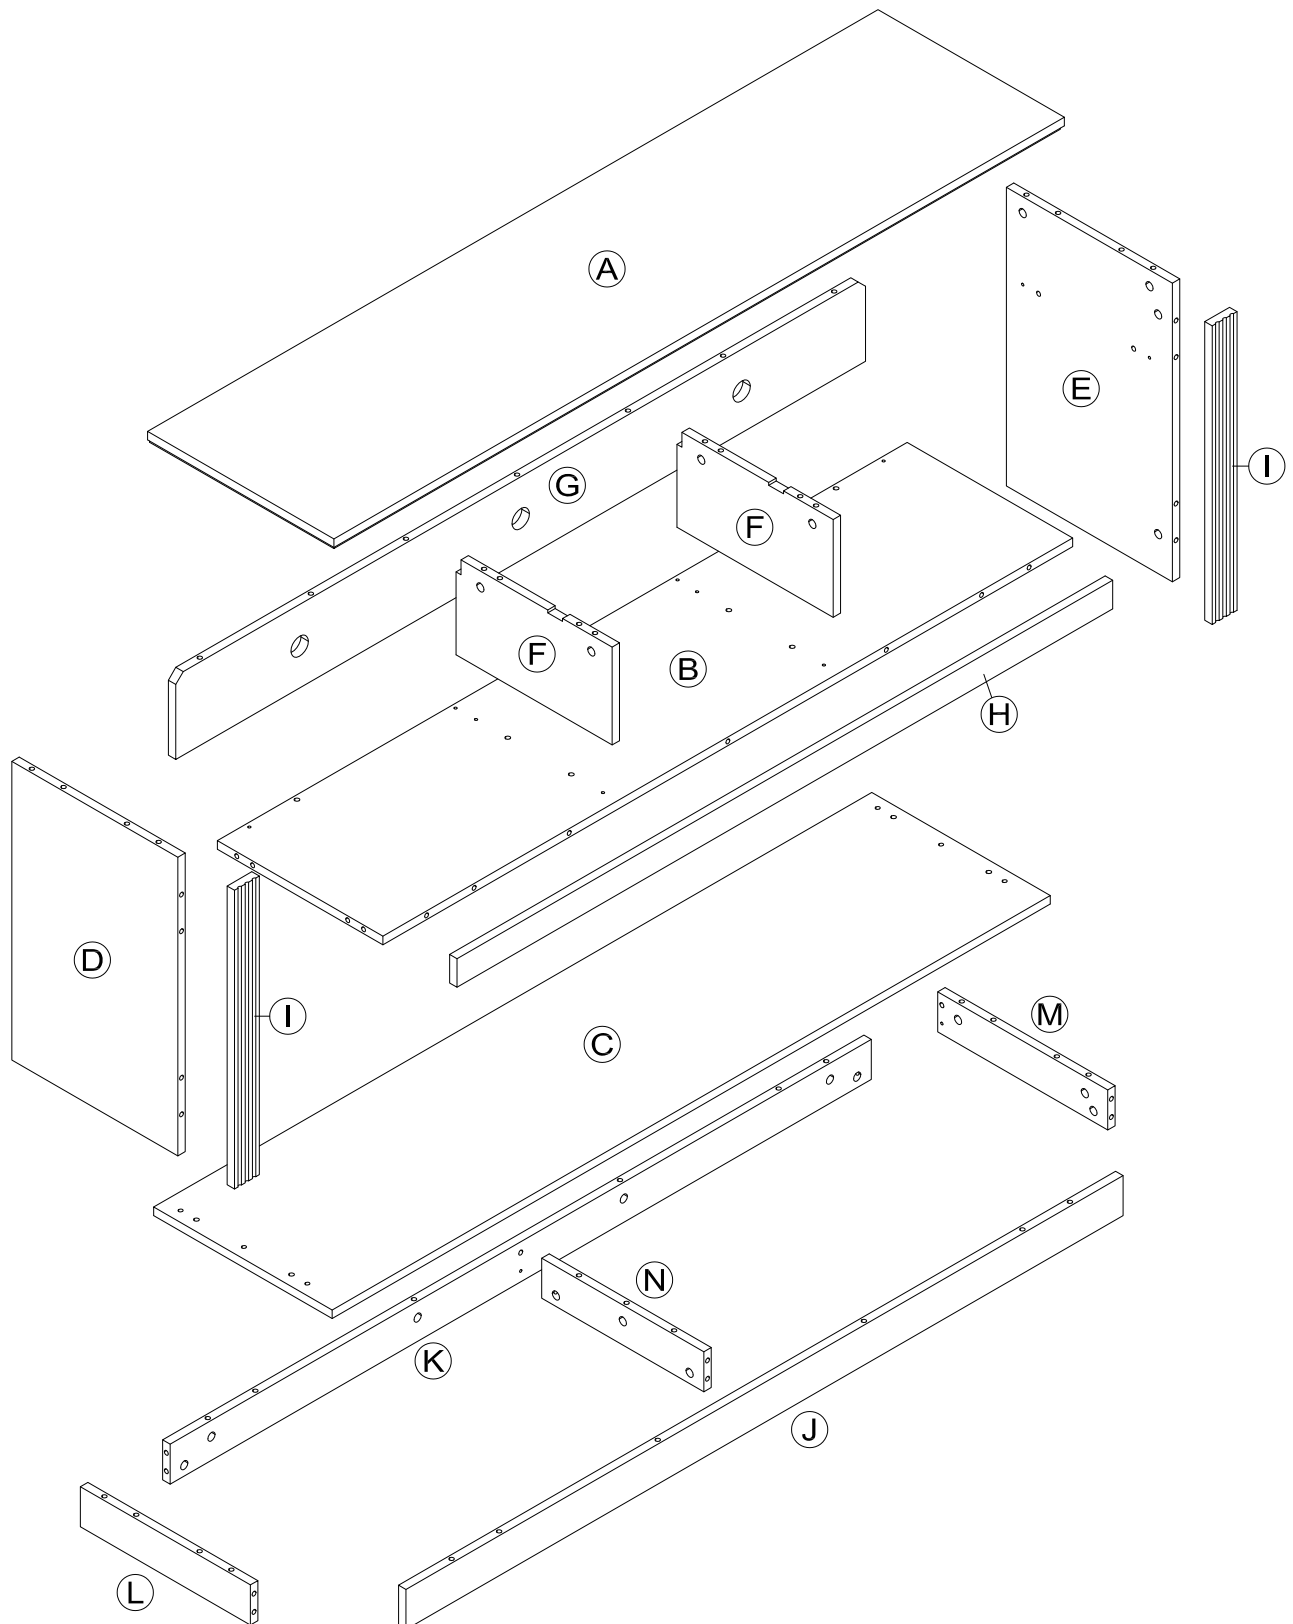

STEP1

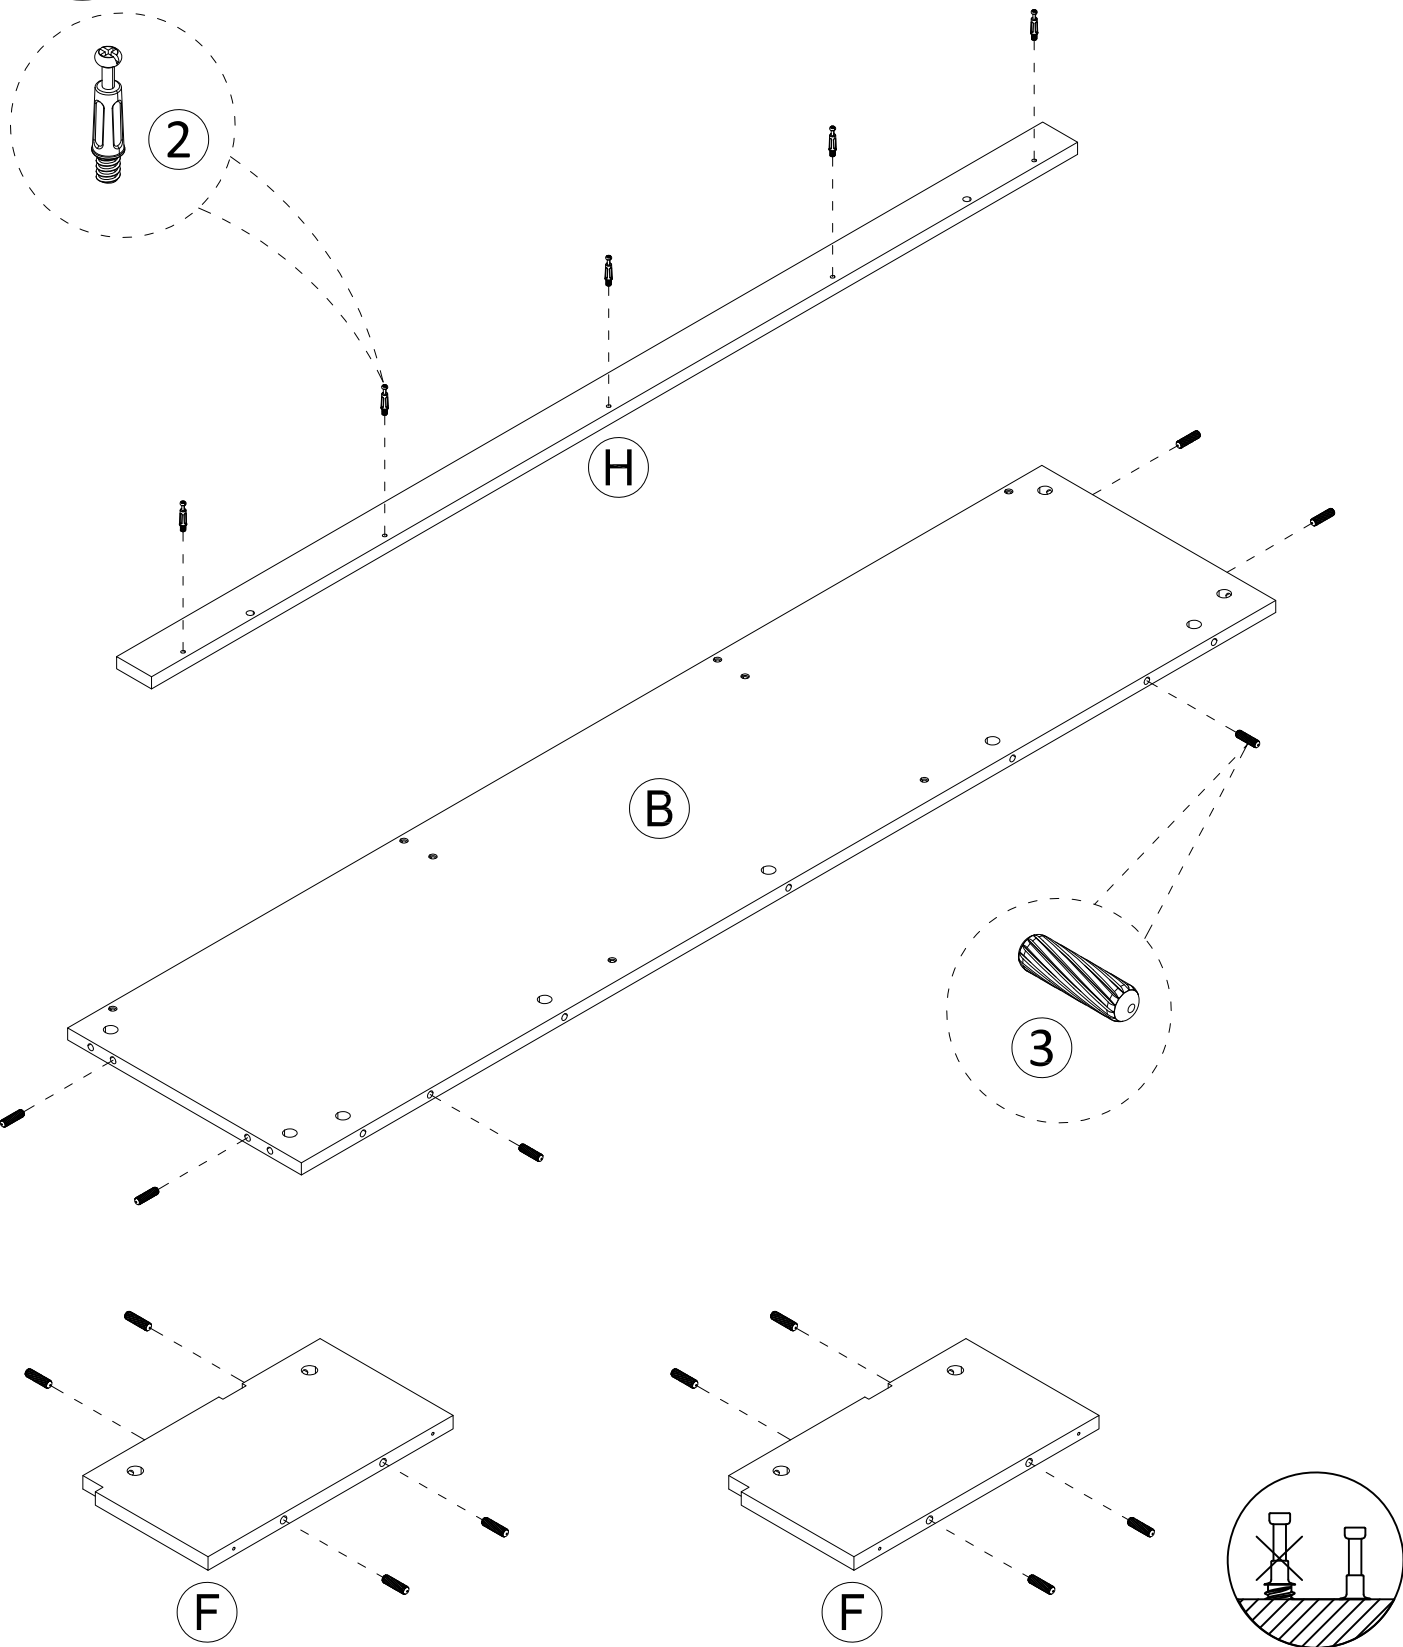
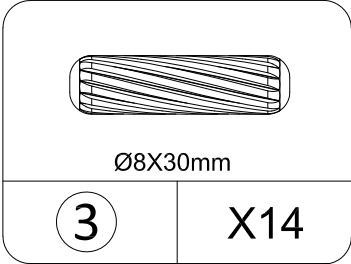
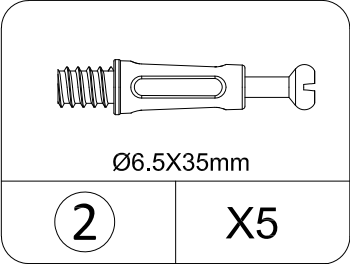
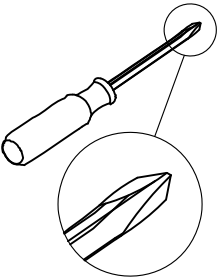


STEP2


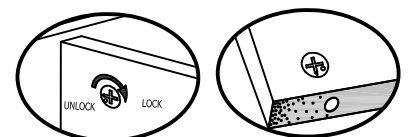
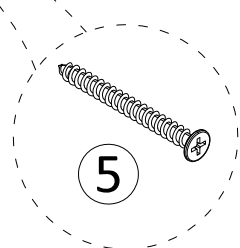
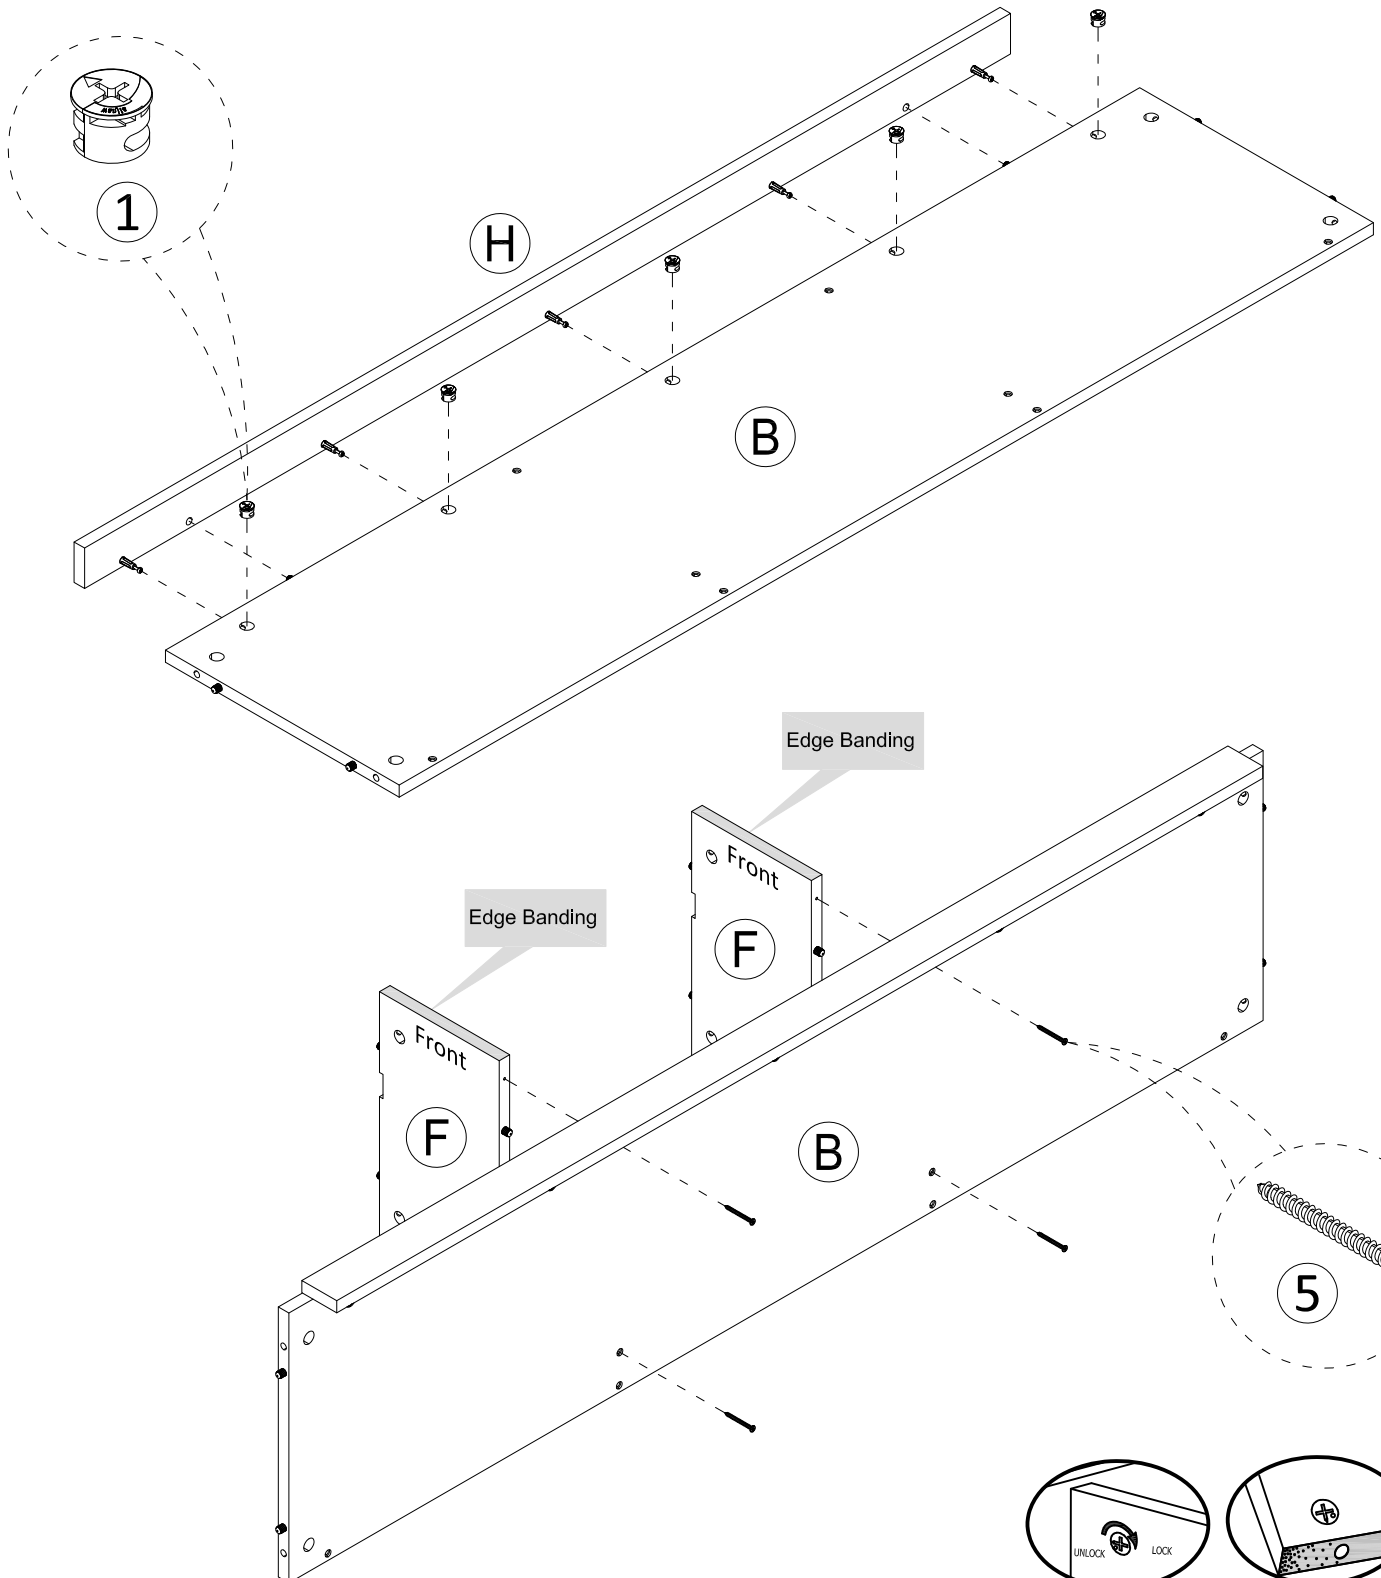
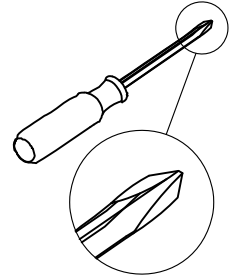
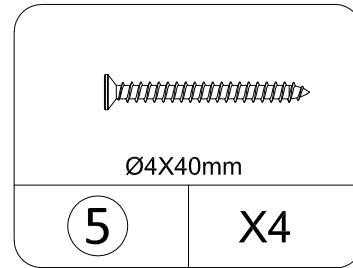
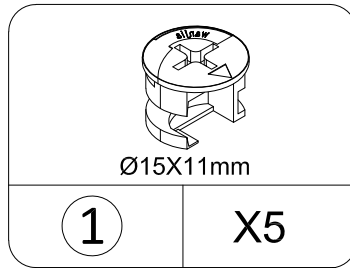
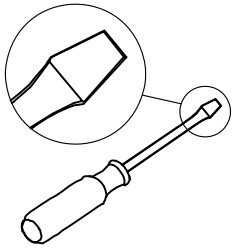


Proper orientation of CAM LOCK








STEP3

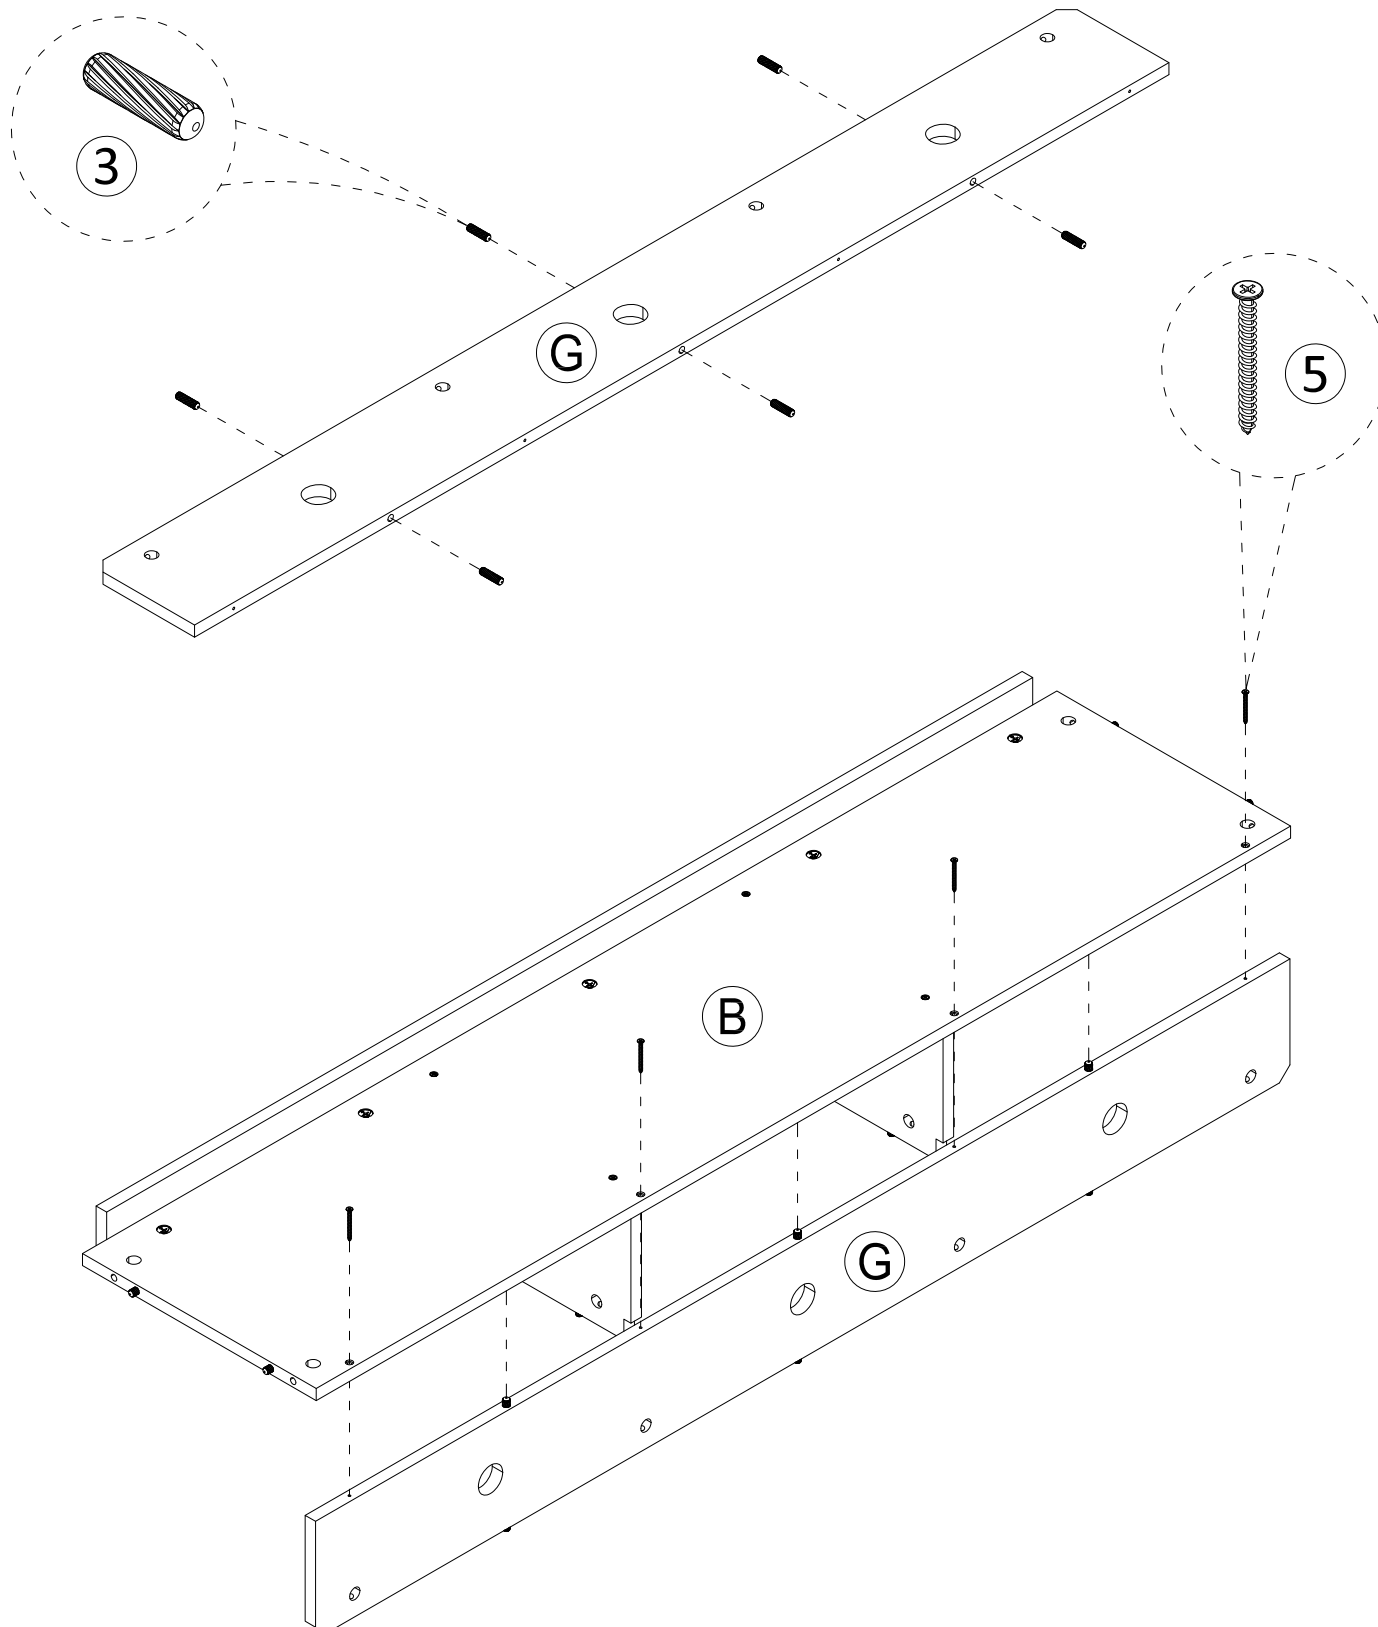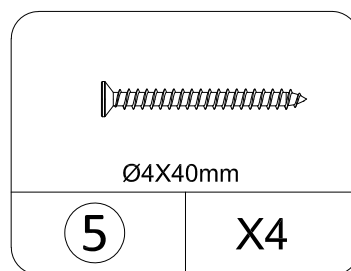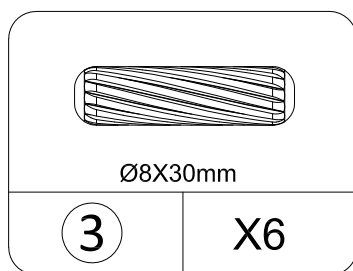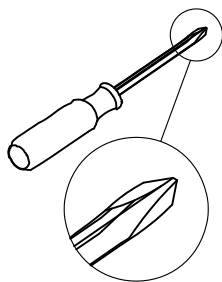

STEP4

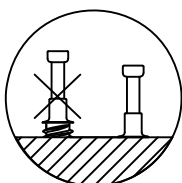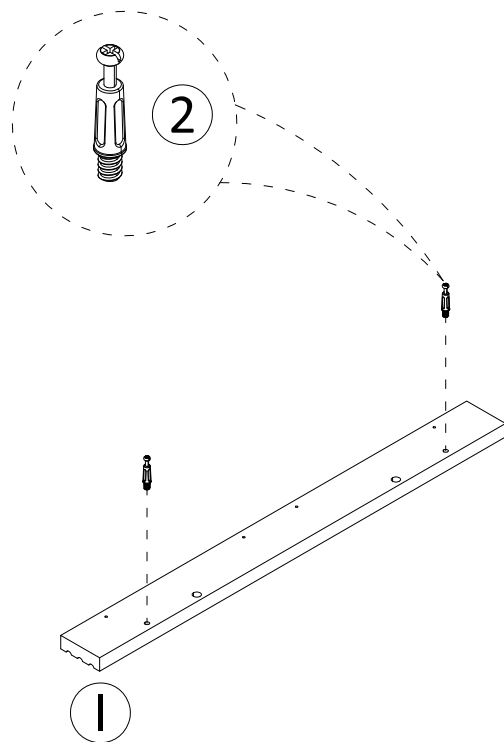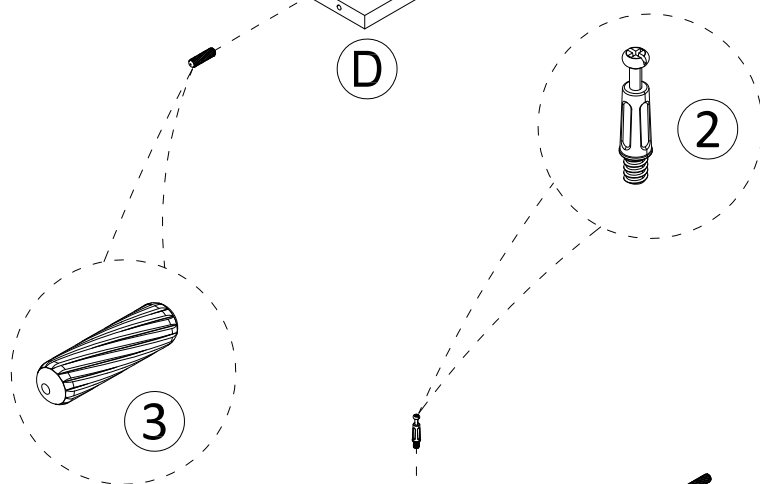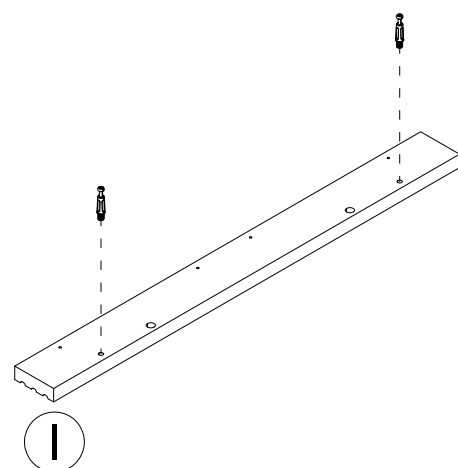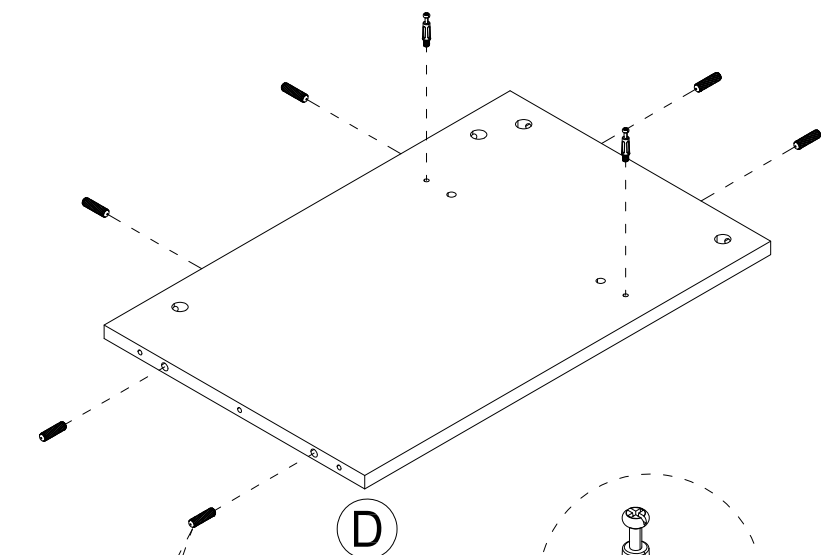
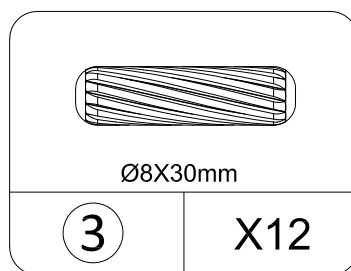
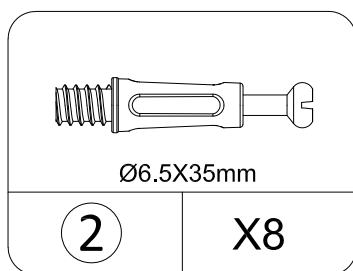
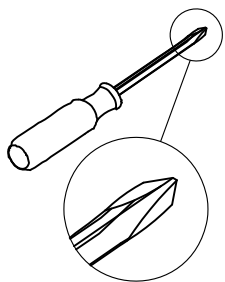


STEP5

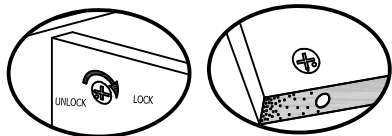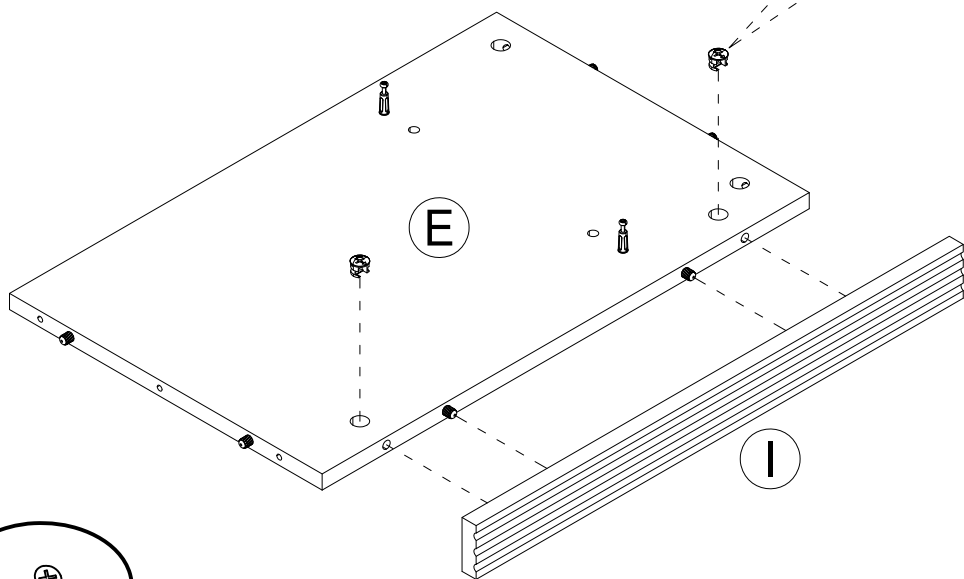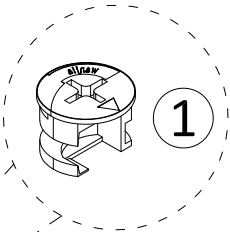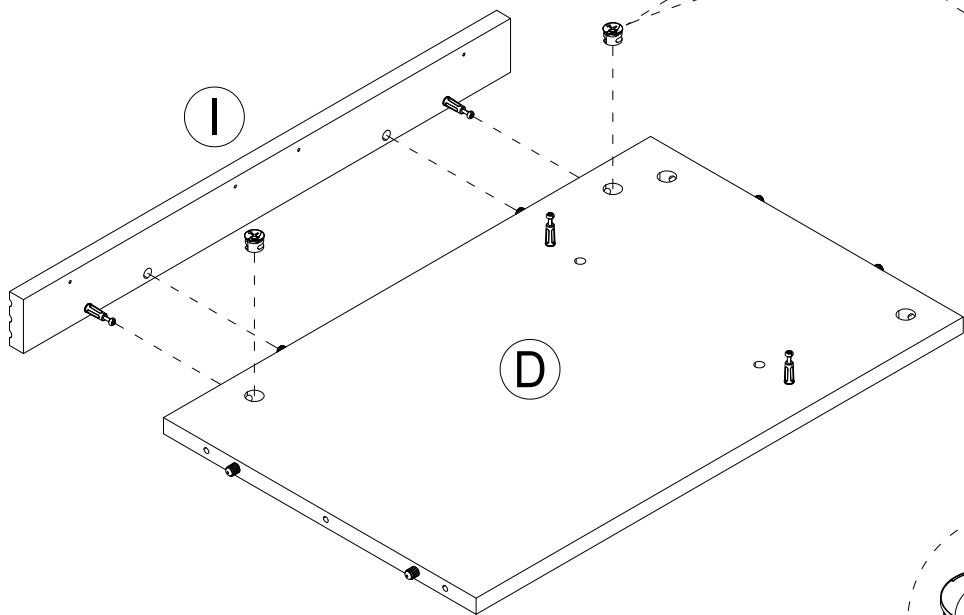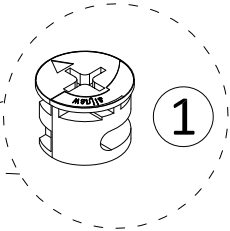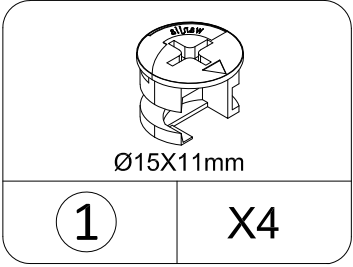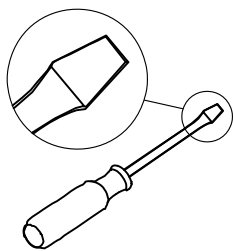





Proper orientation of CAM LOCK

STEP6

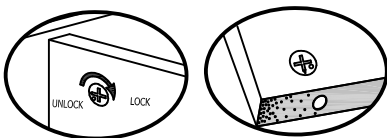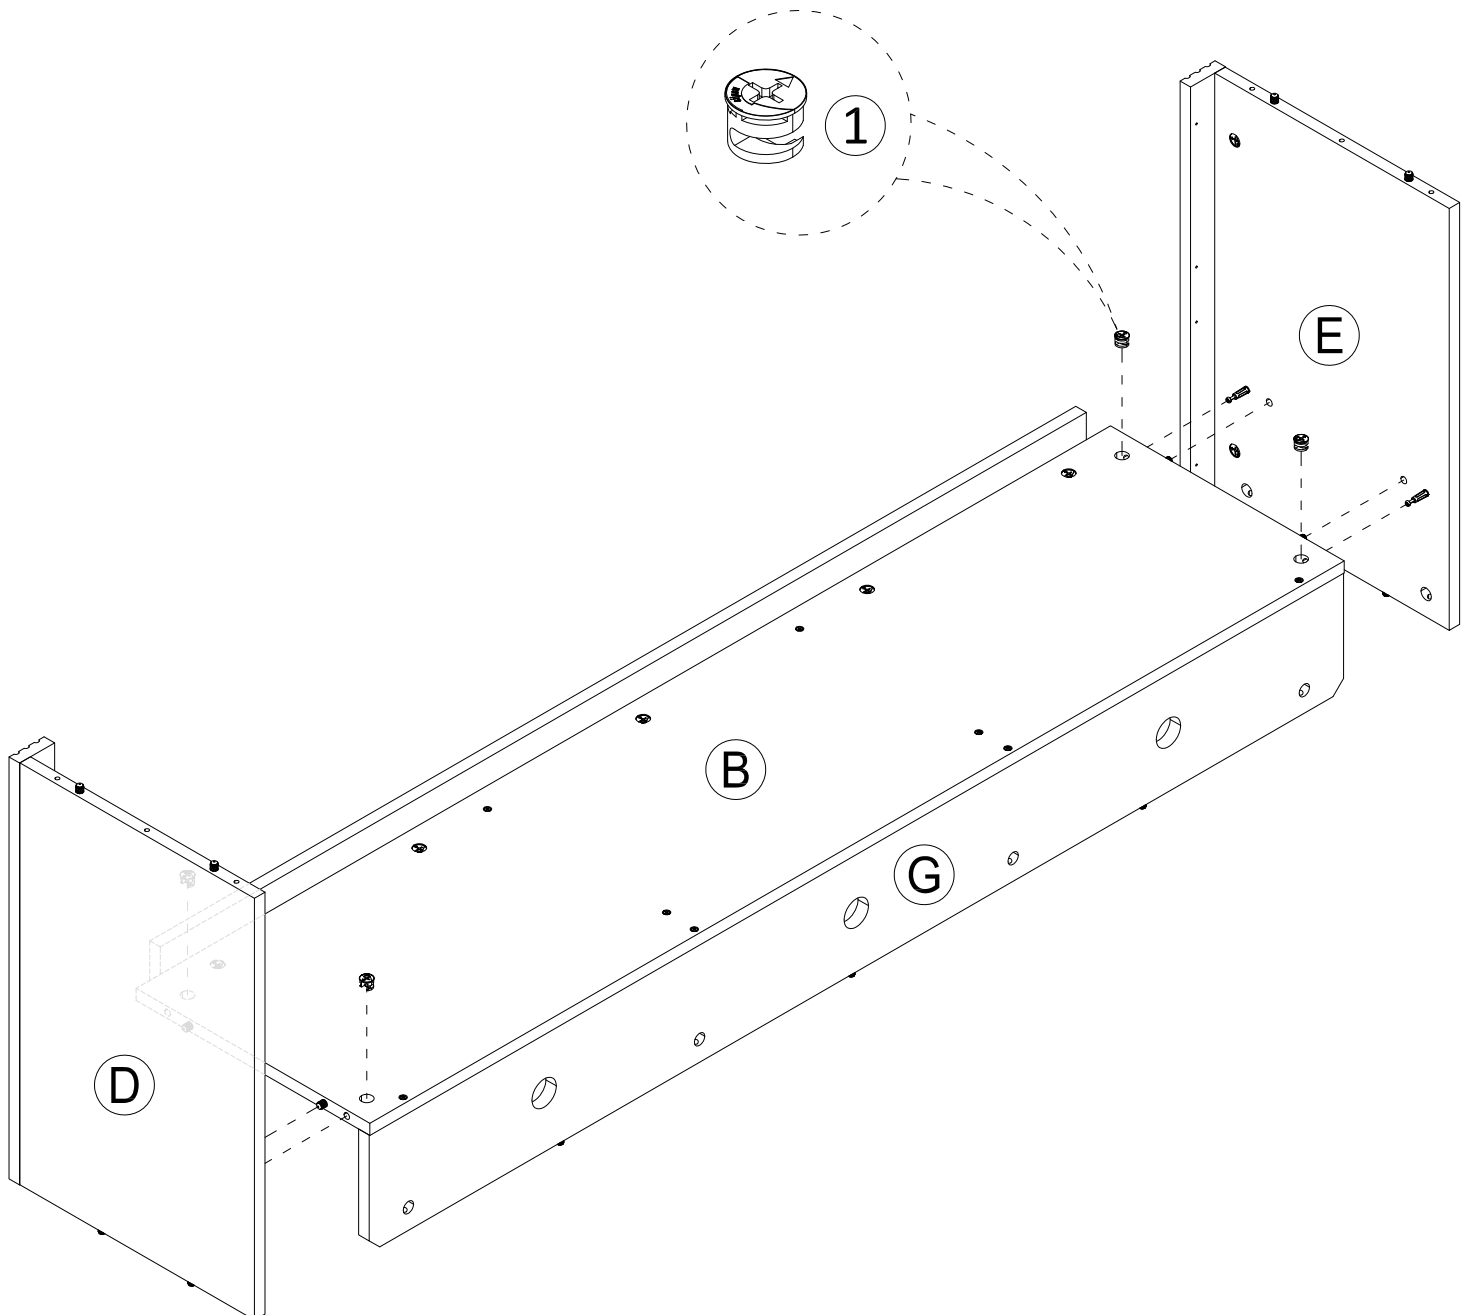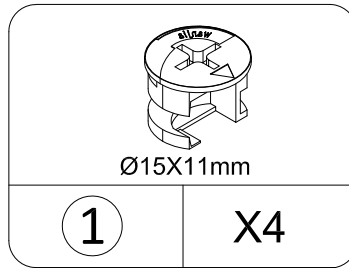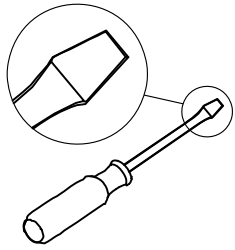






Proper orientation of CAM LOCK

STEP7

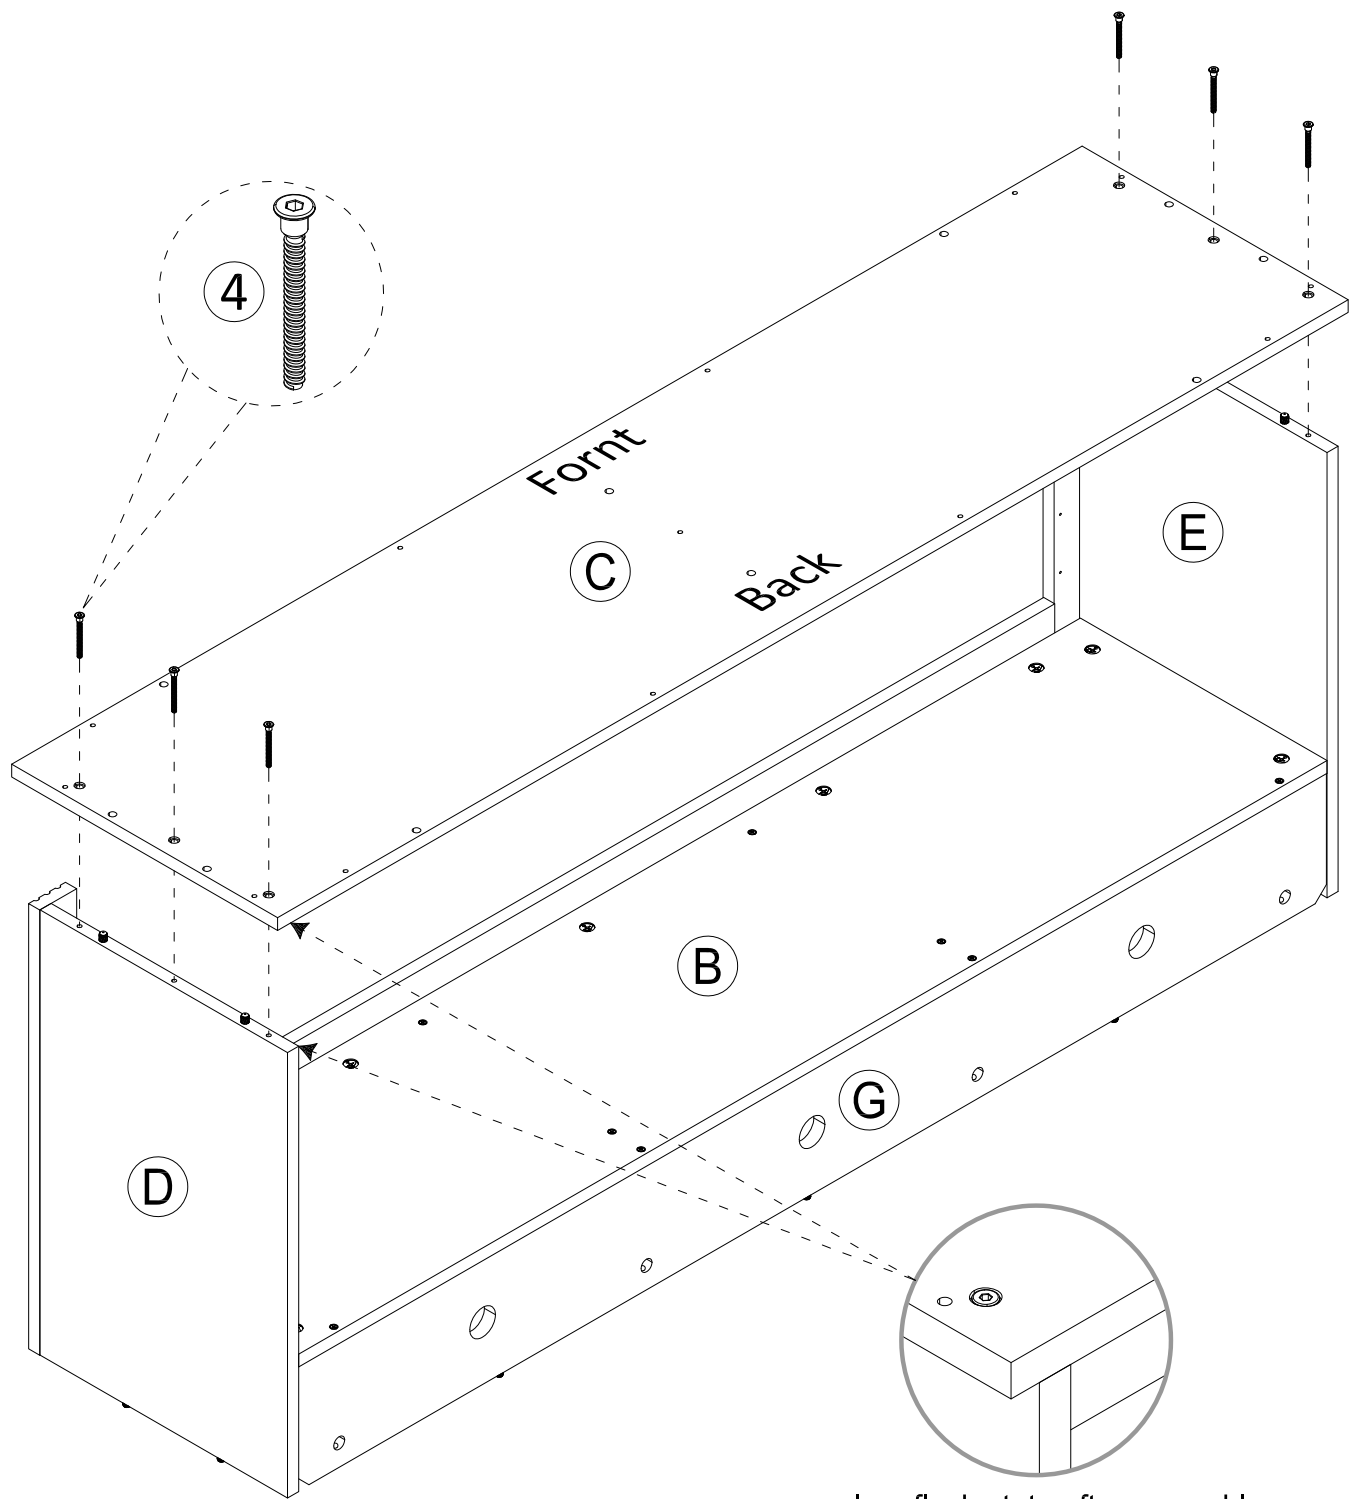
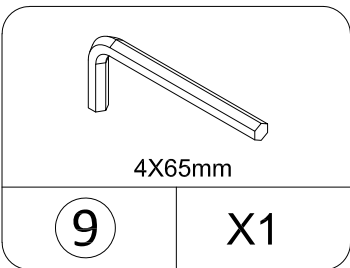
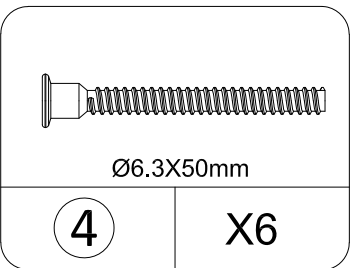
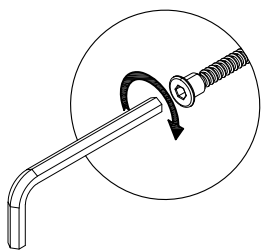


In a flush state after assembly






STEP8

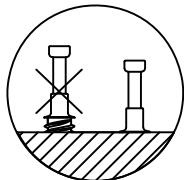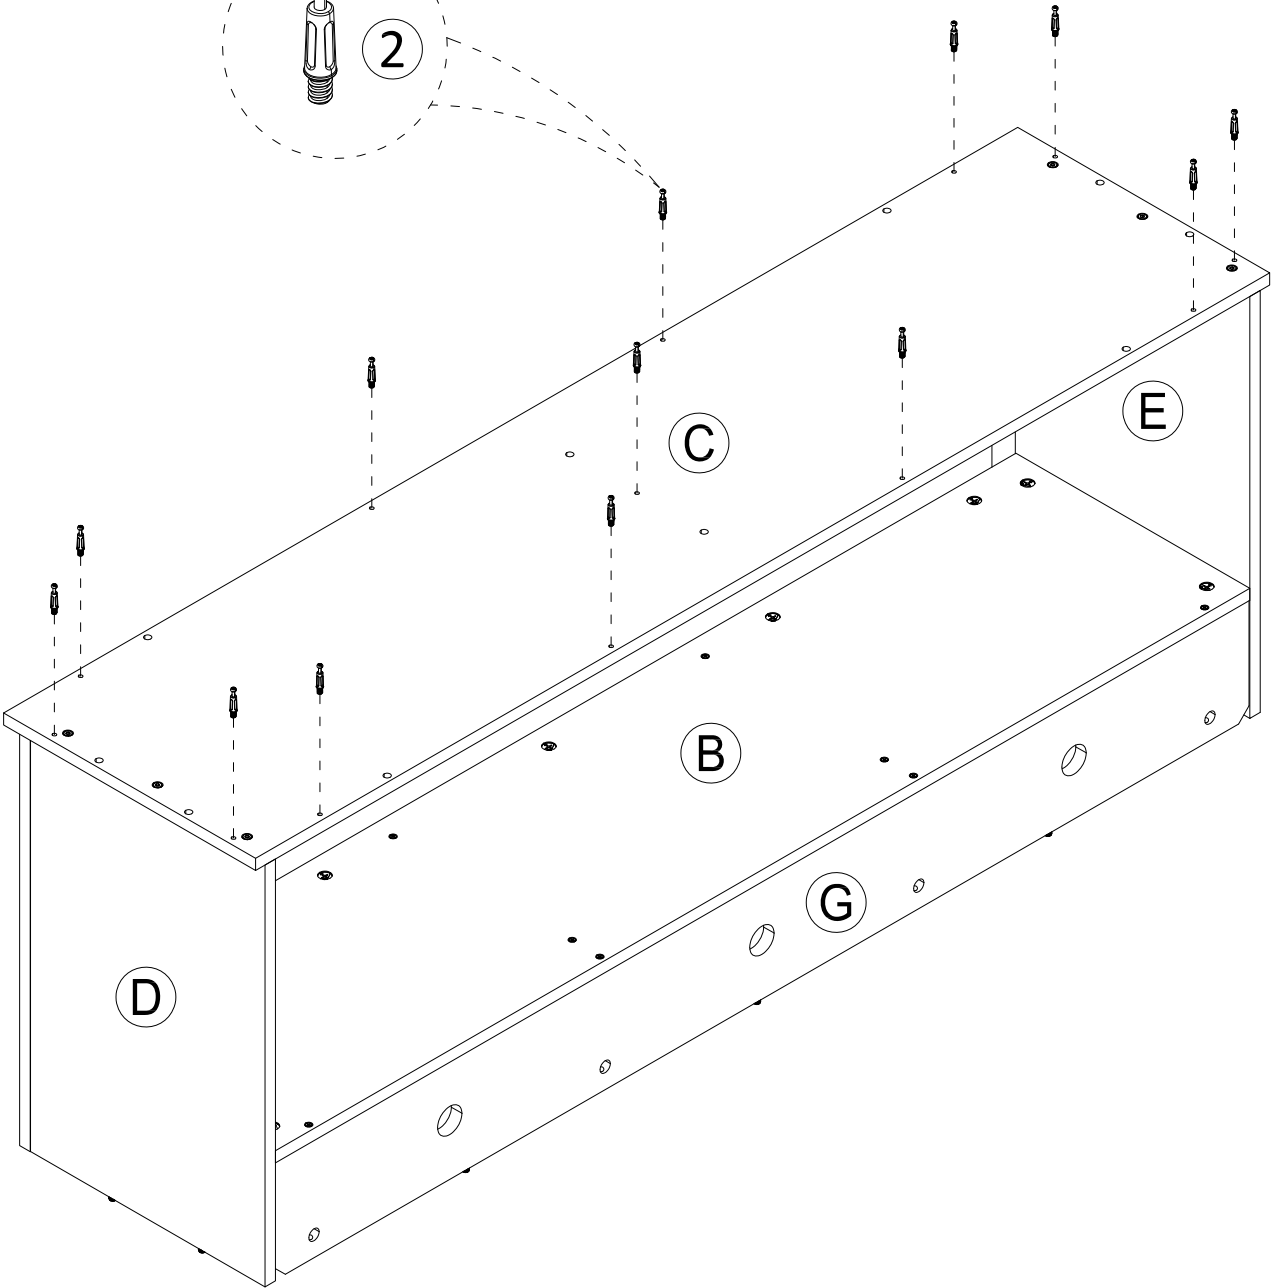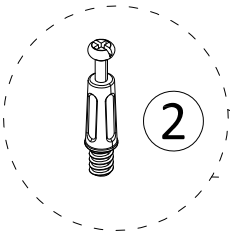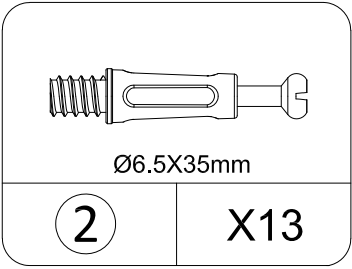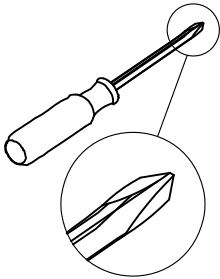

STEP9

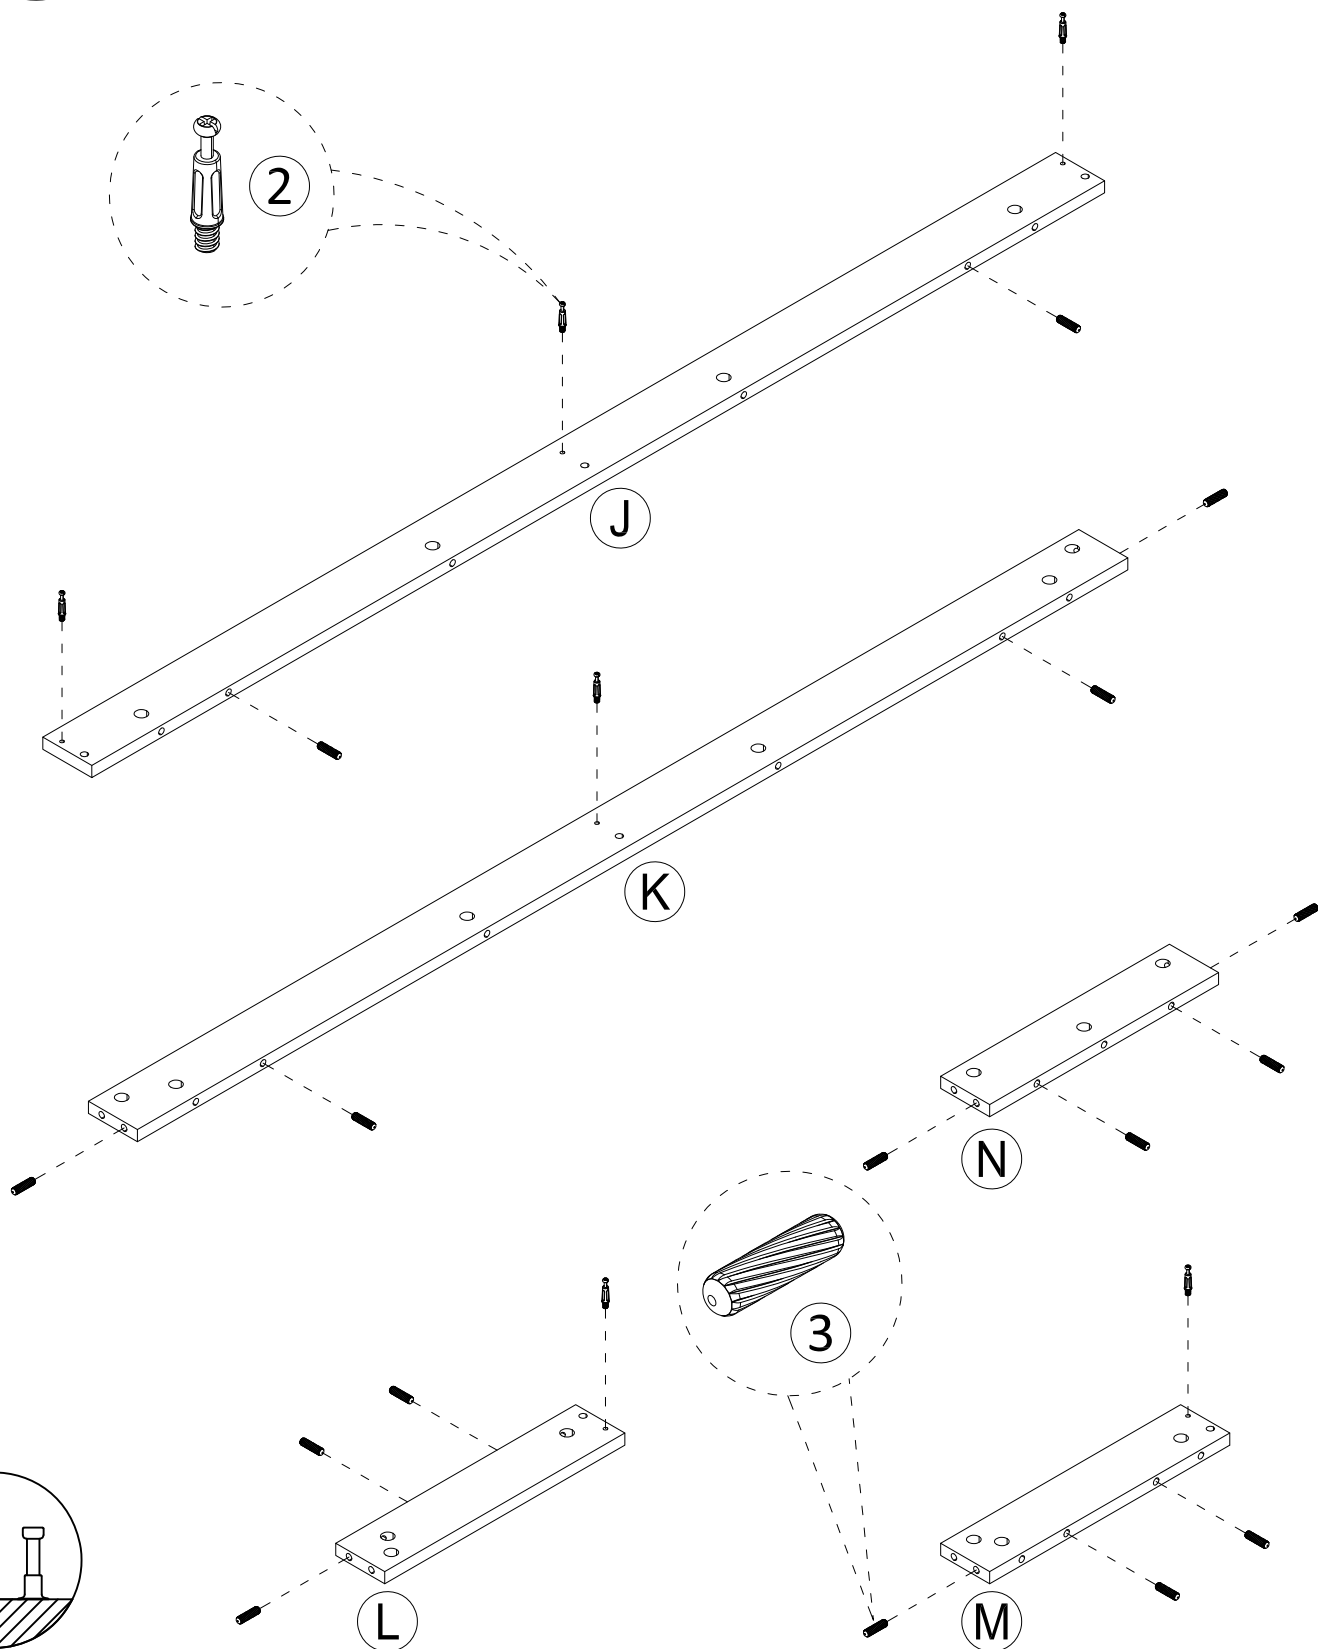
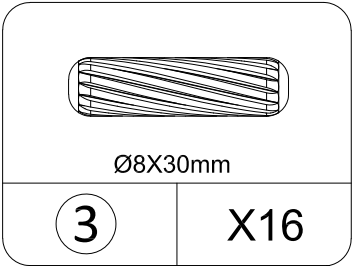
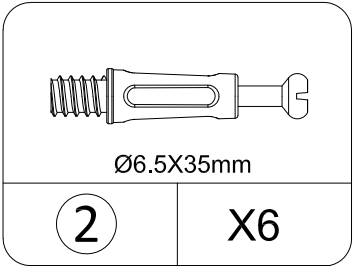
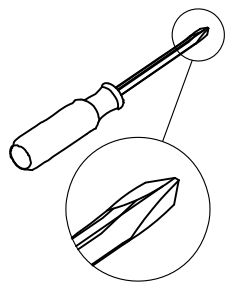


STEP10

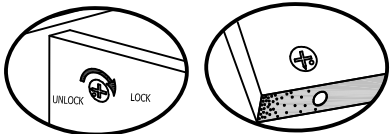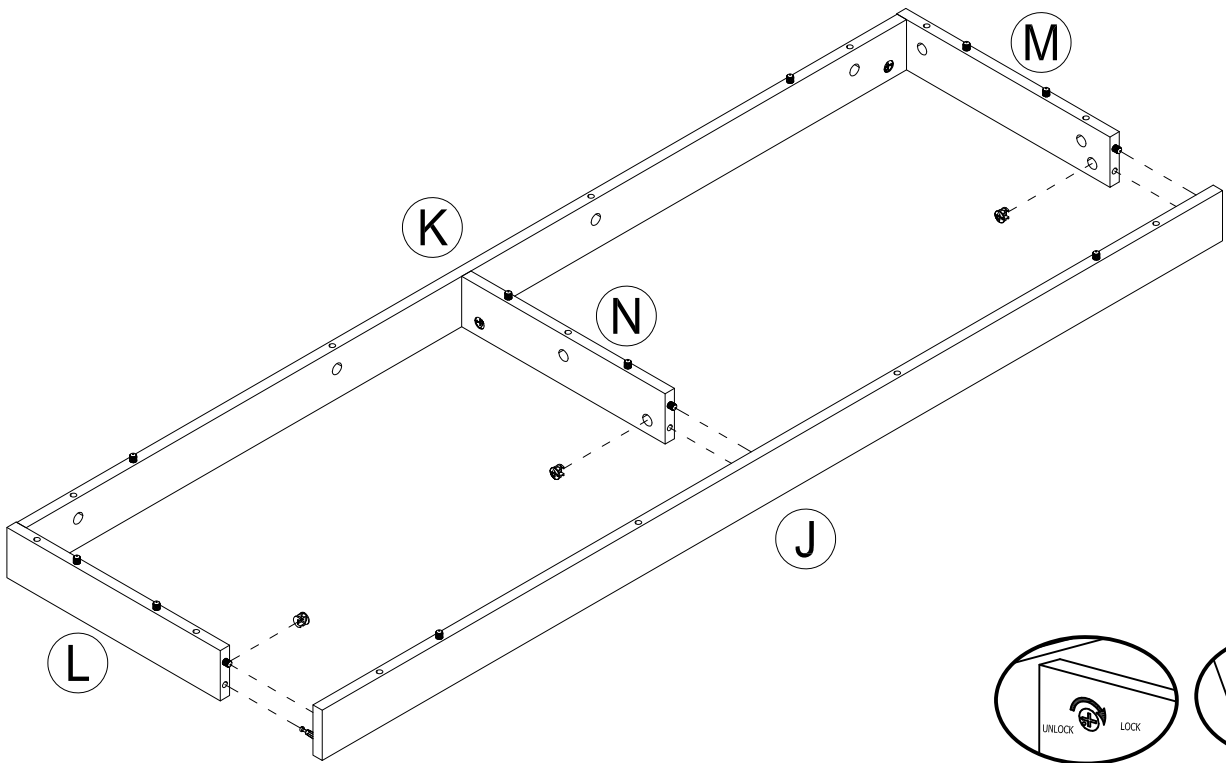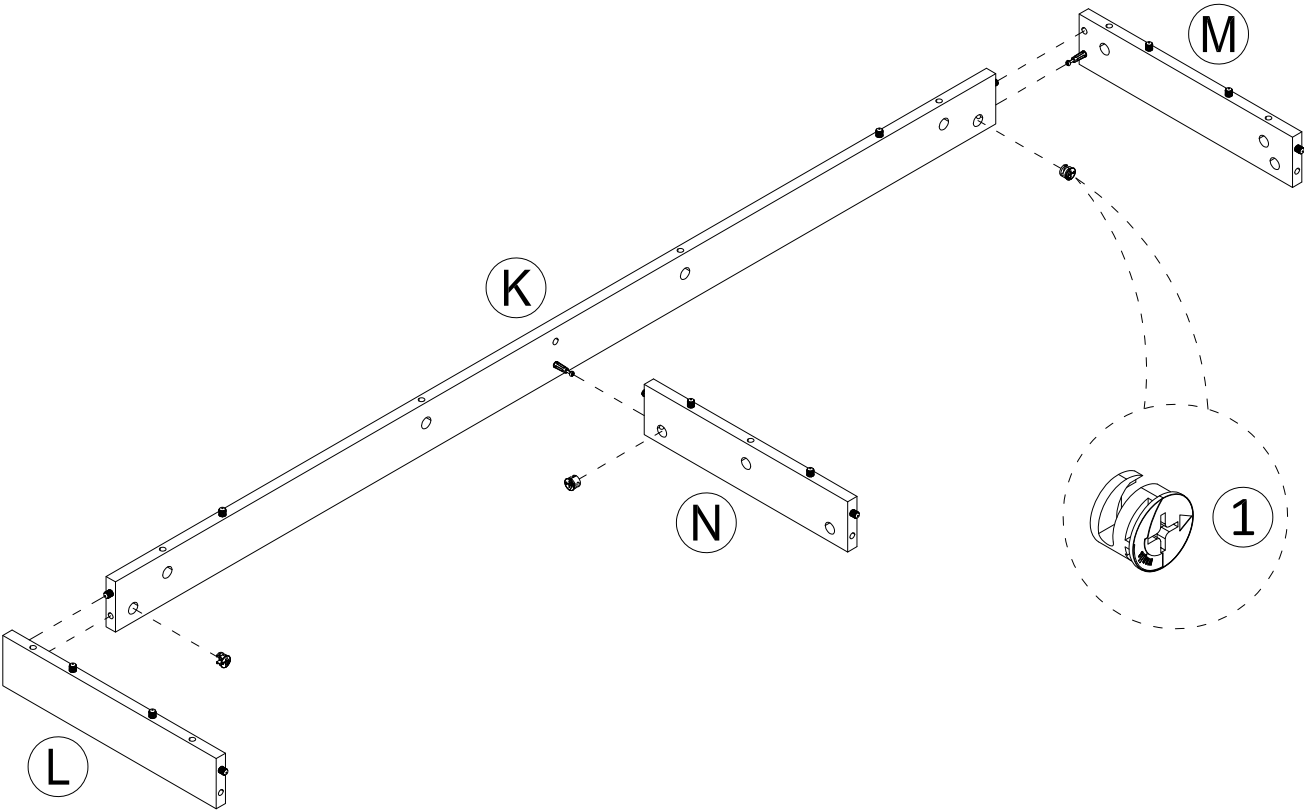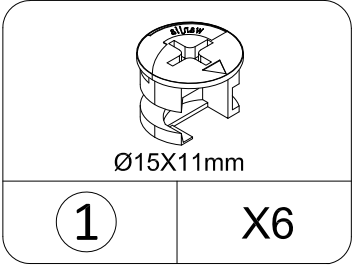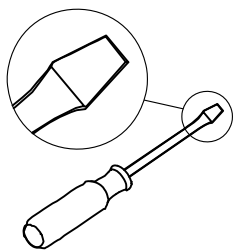

Proper orientation of CAM LOCK


STEP11

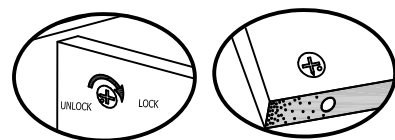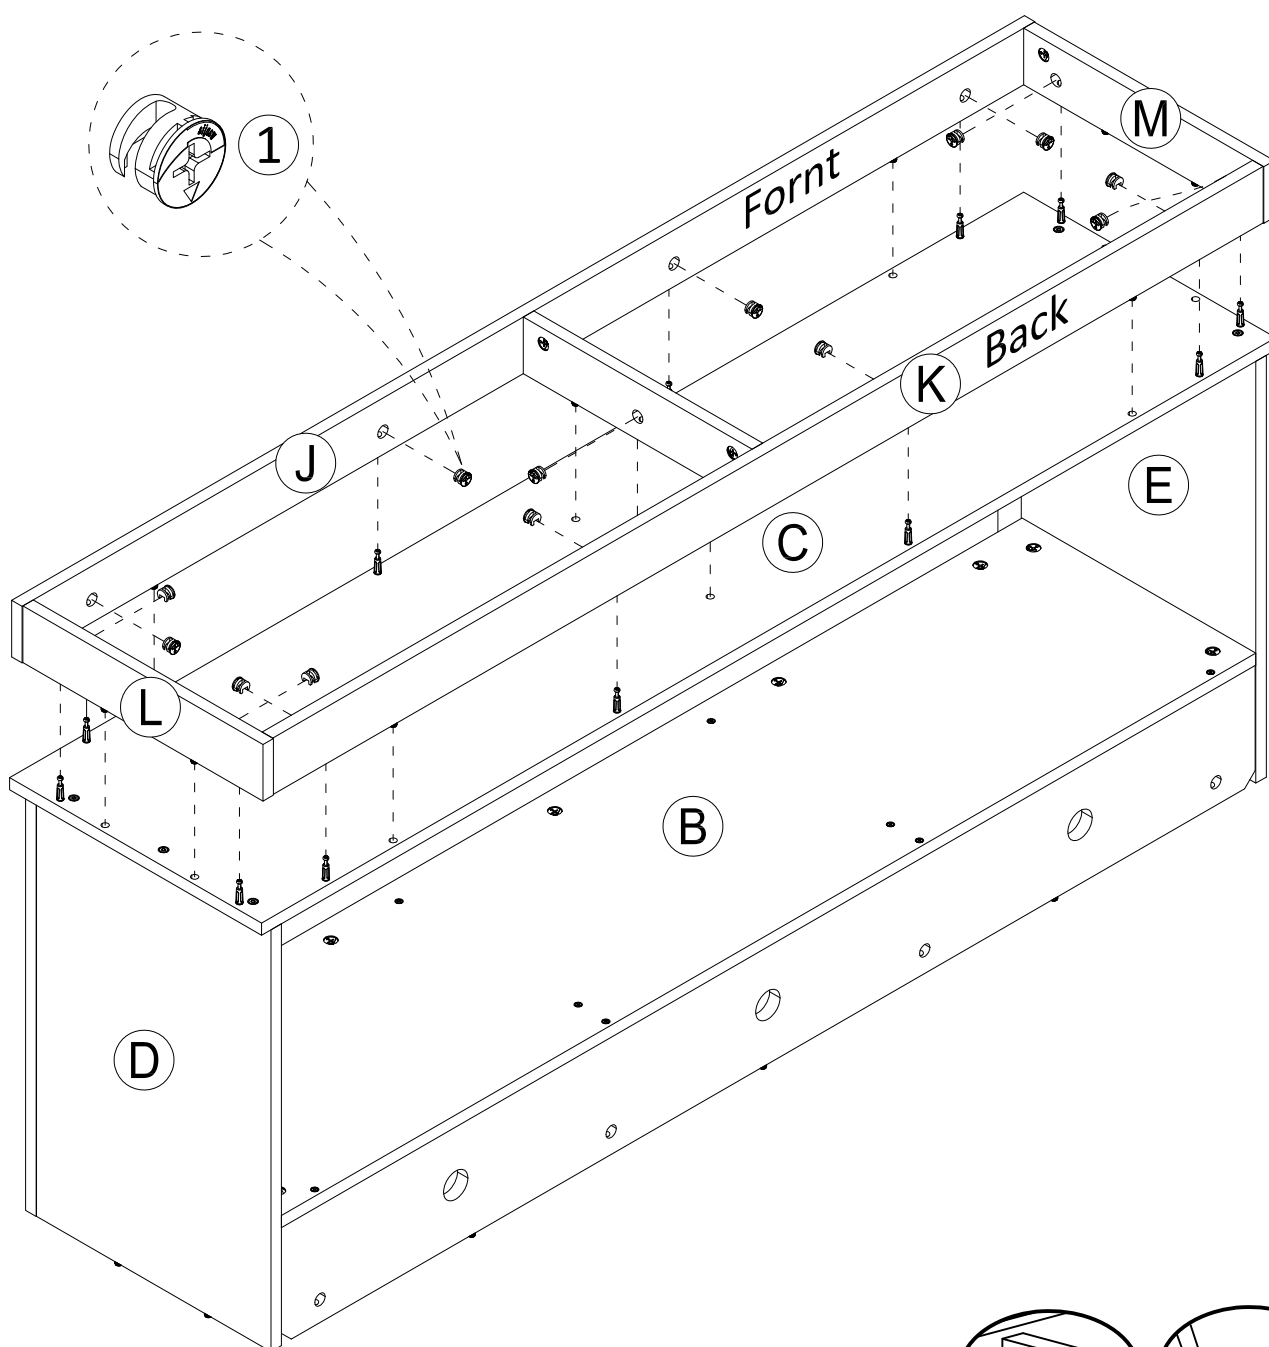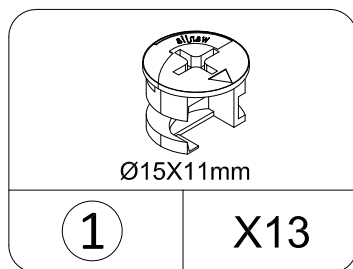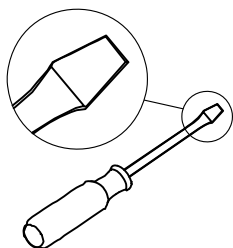

Proper orientation of CAM LOCK


STEP12

Prepare a marker and ruler. Firstly, use a ruler to measure the distance between the rear edges by 186mm (7.32in). Draw a line as an auxiliary line for pasting the light strip.

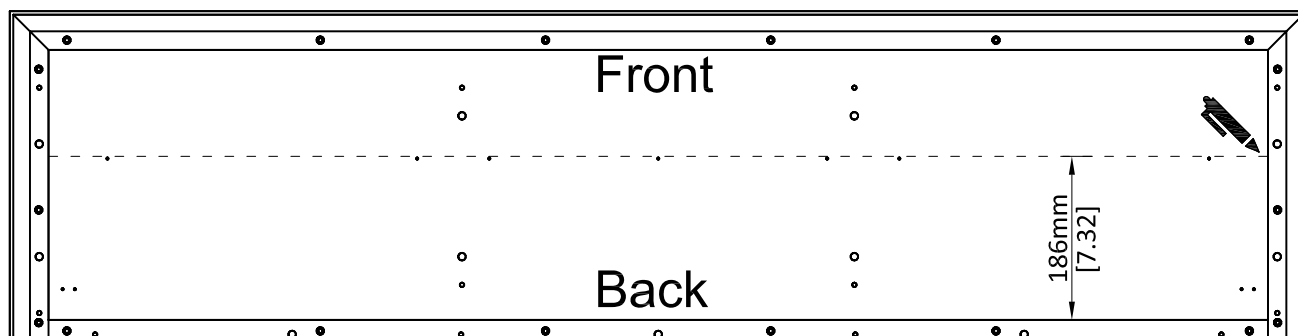





A

Measure and draw auxiliary lines


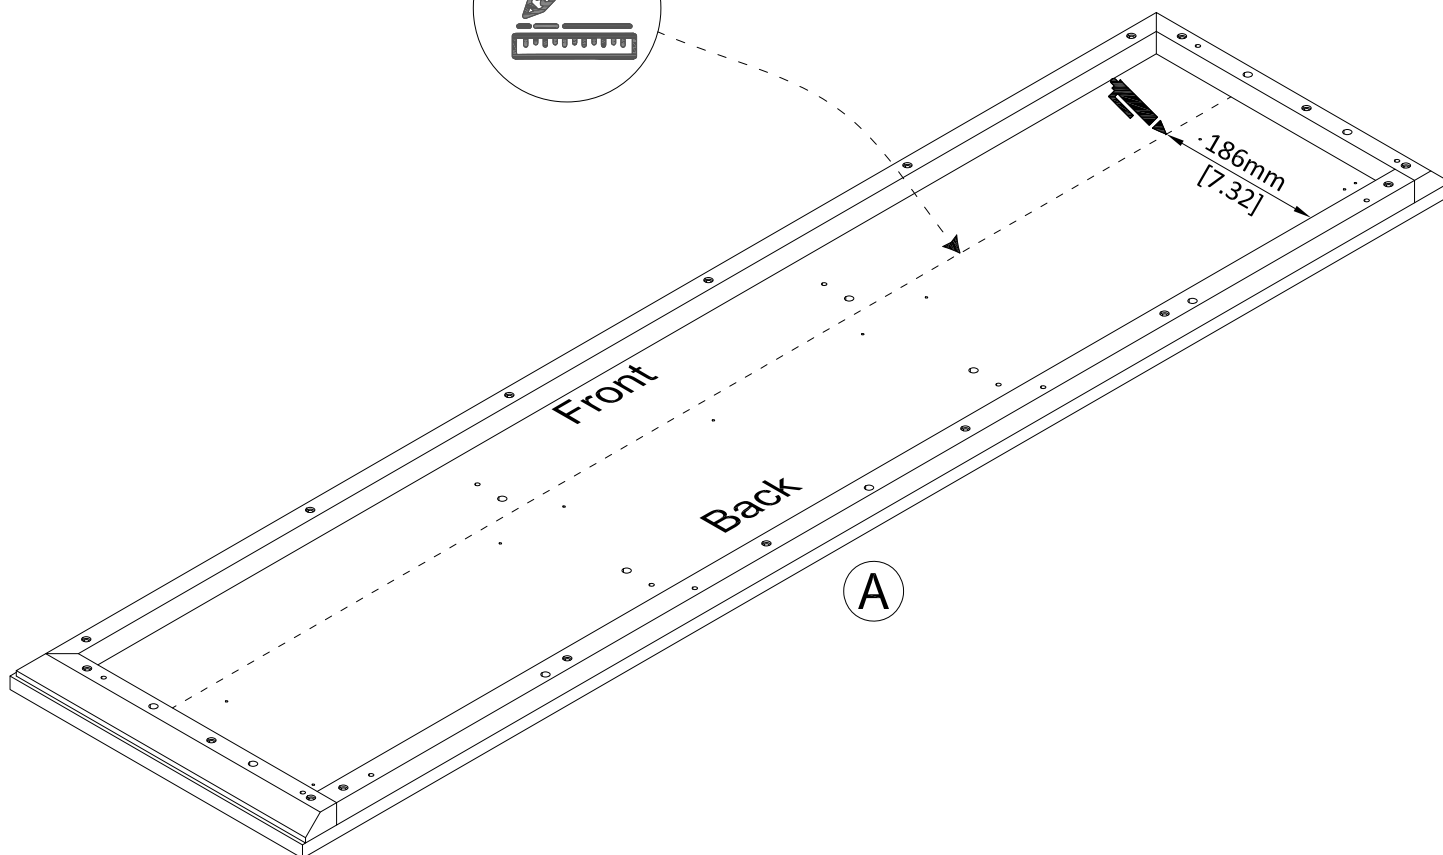


A





STEP13

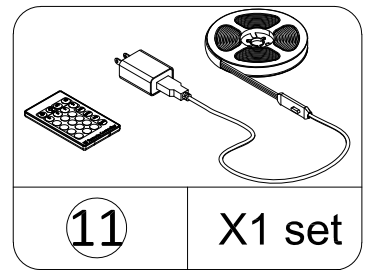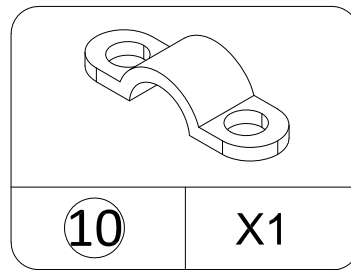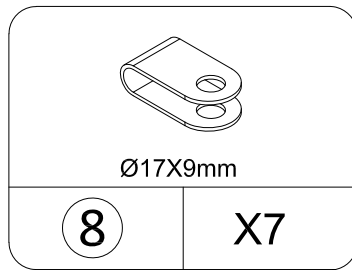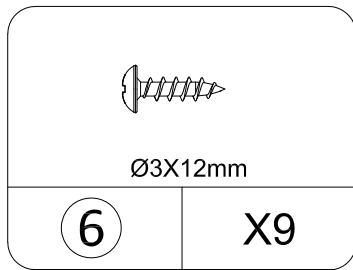



1. Tear off the 3M adhesive tape film on the back of the light strip and stick it inward along the previous marking line.
2. Wrap the light strap buckle (8) around the light strip, align it with the corresponding hole, and screw in the screw (6)

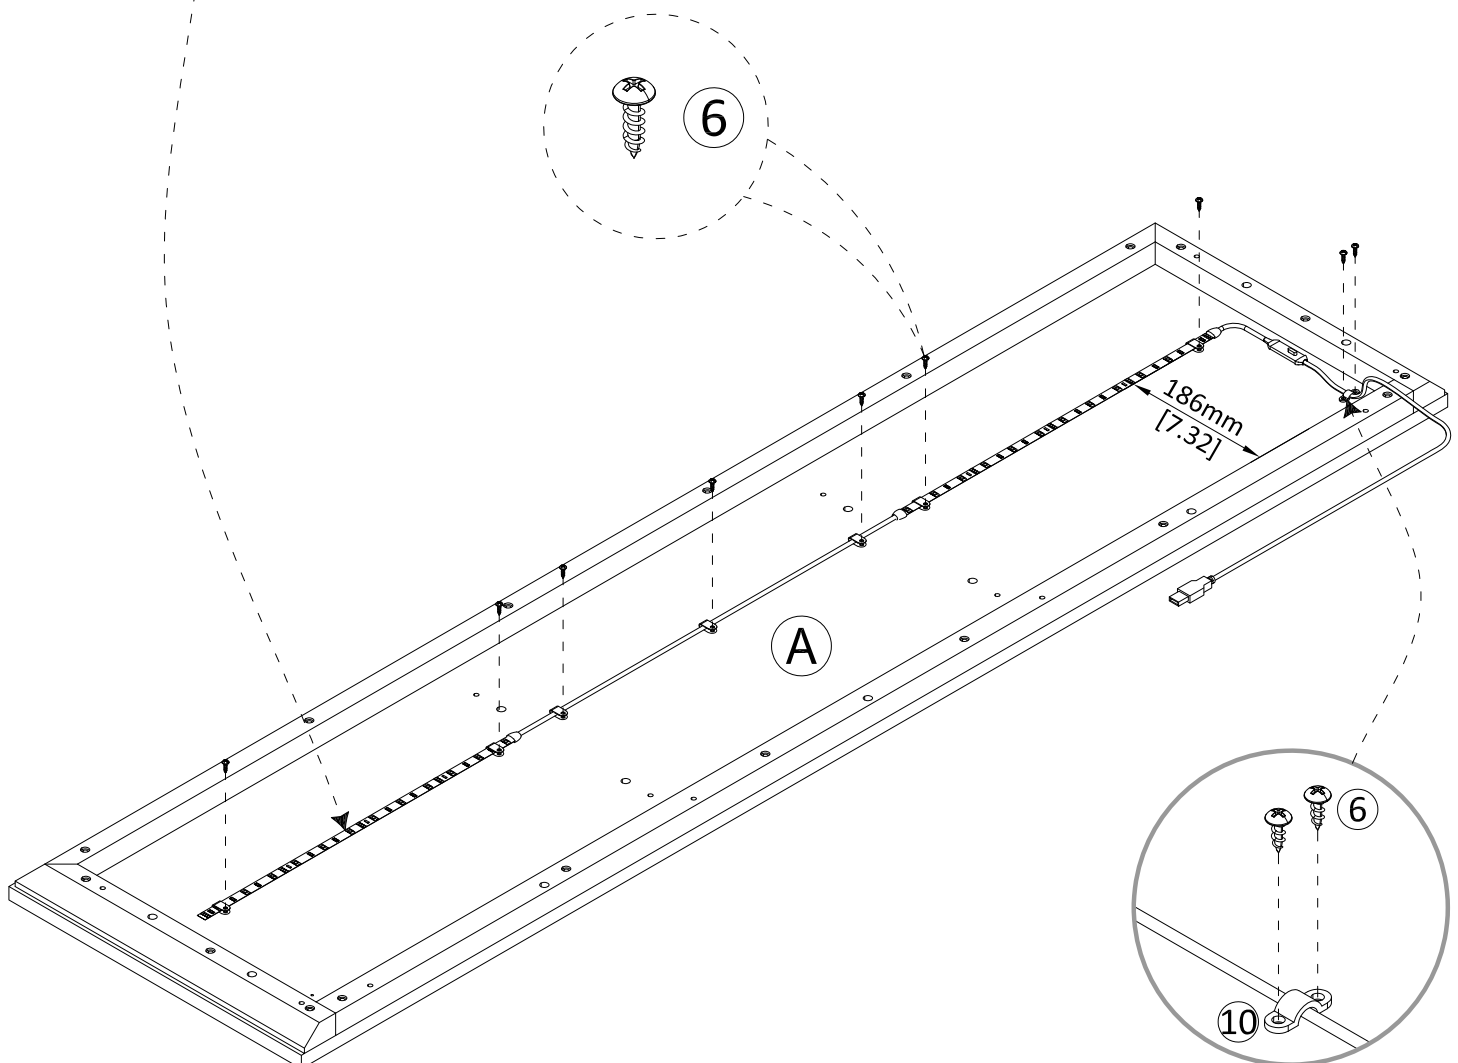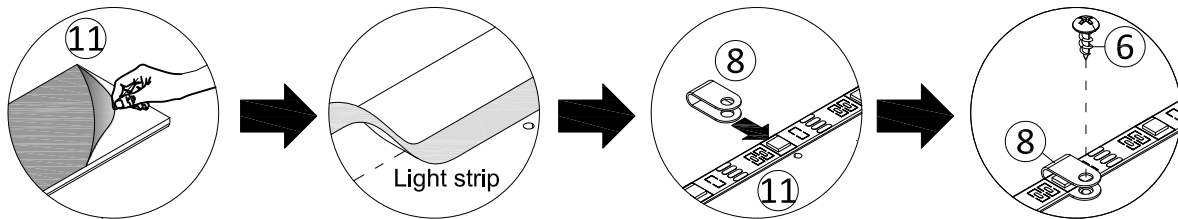



STEP14

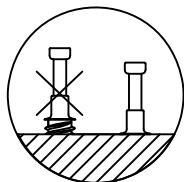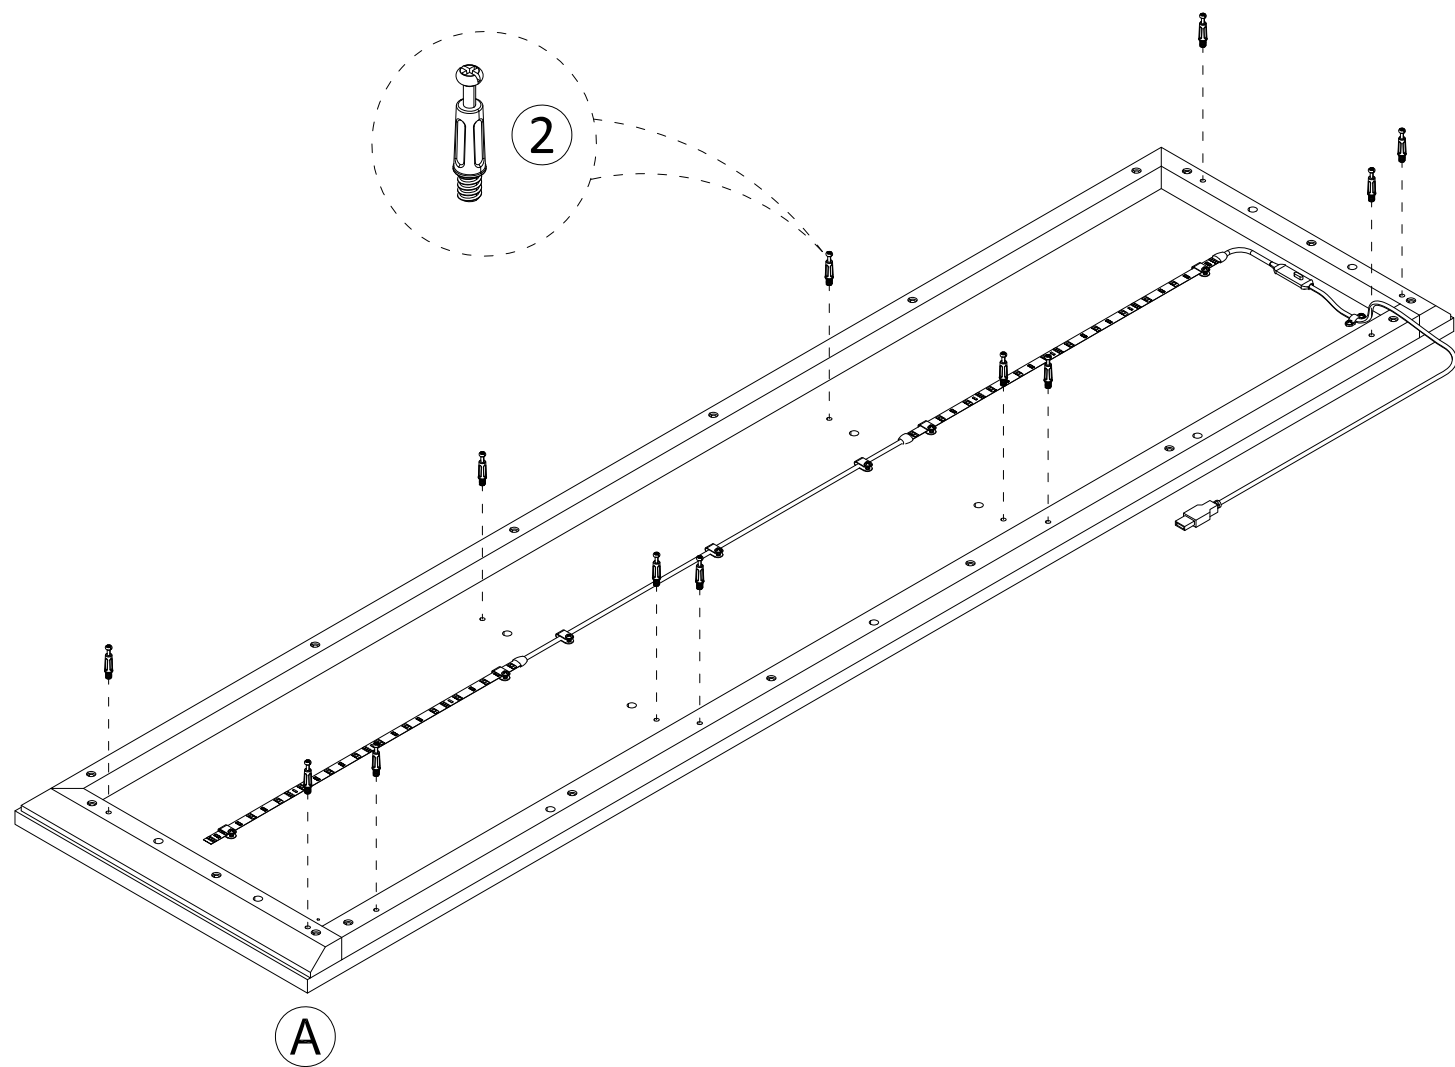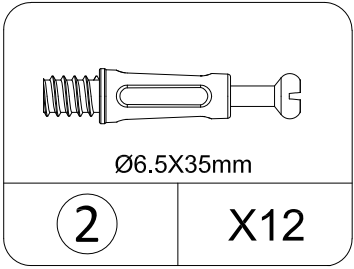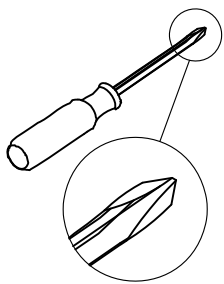

STEP15

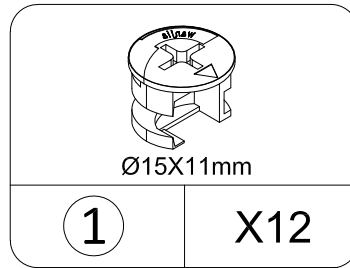
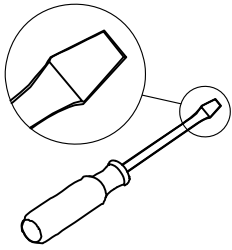


THIS STEP REQUIRES 2 PEOPLE

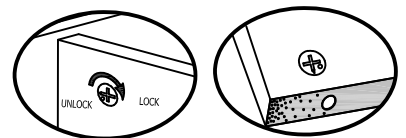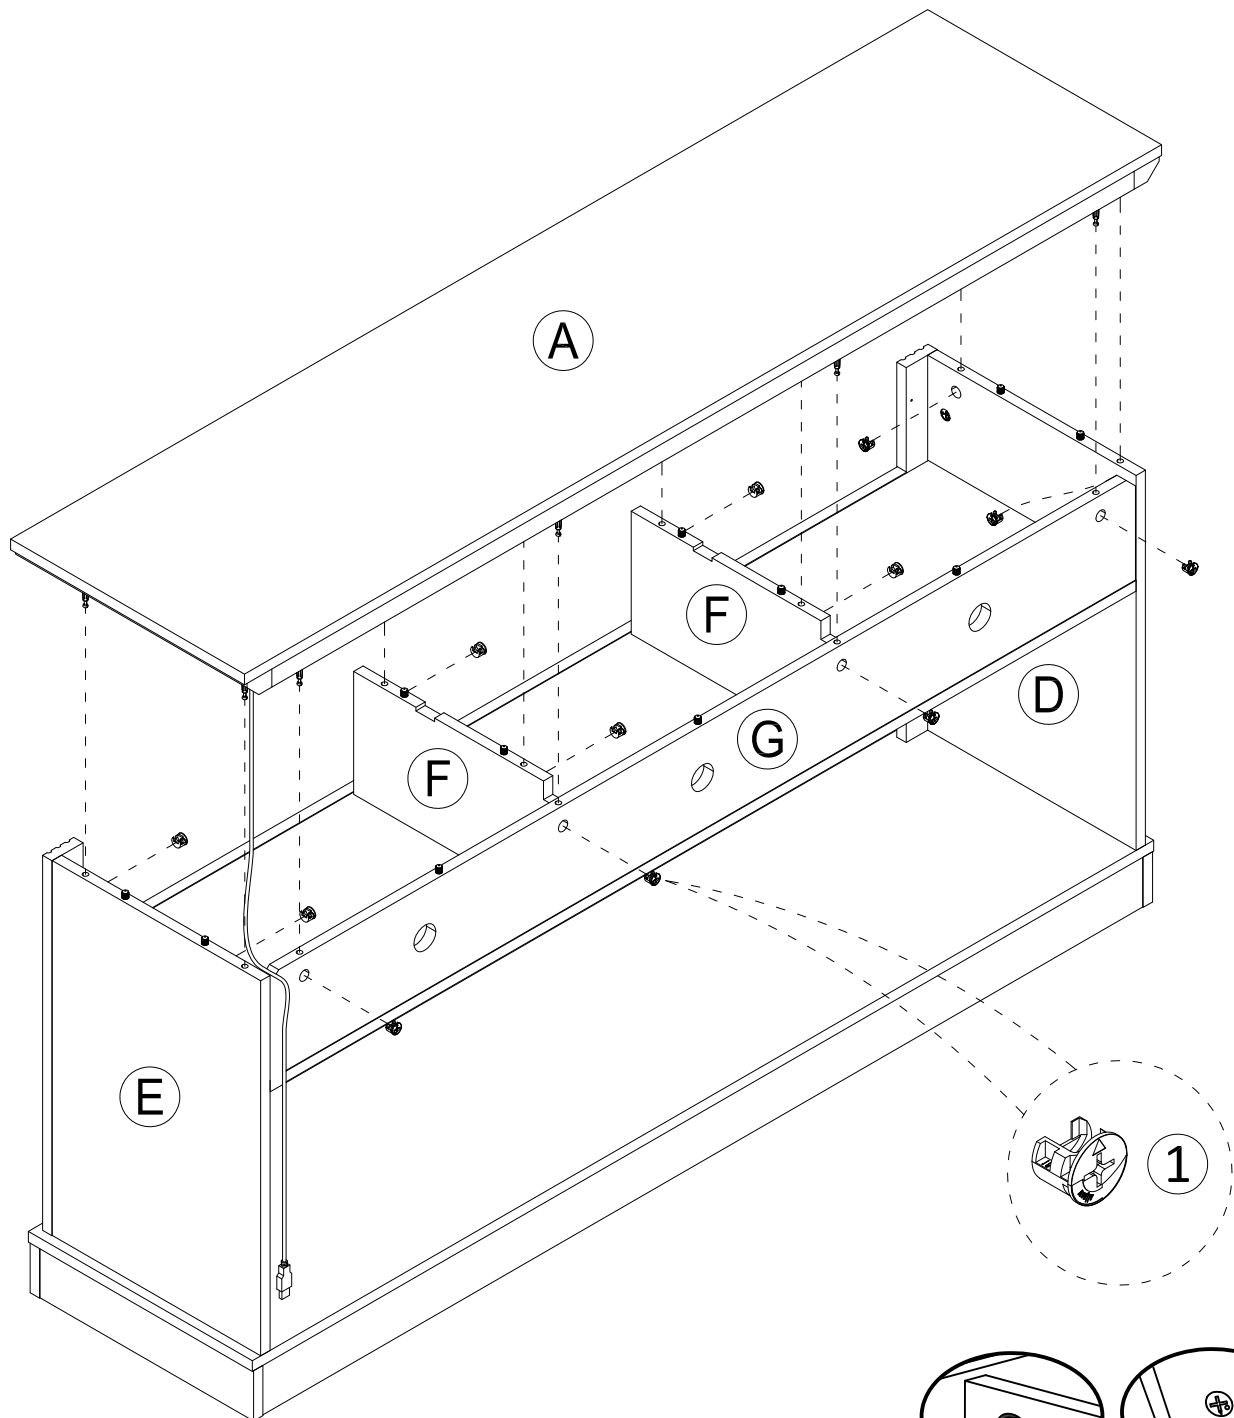


Proper orientation of CAM LOCK

STEP16

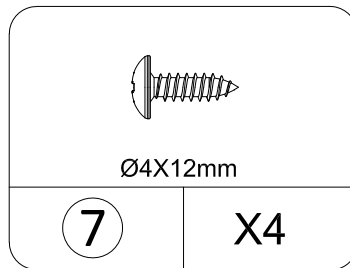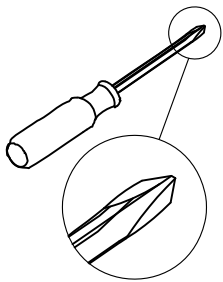


Before installing the fireplace, please read the installation manual of the fireplace.

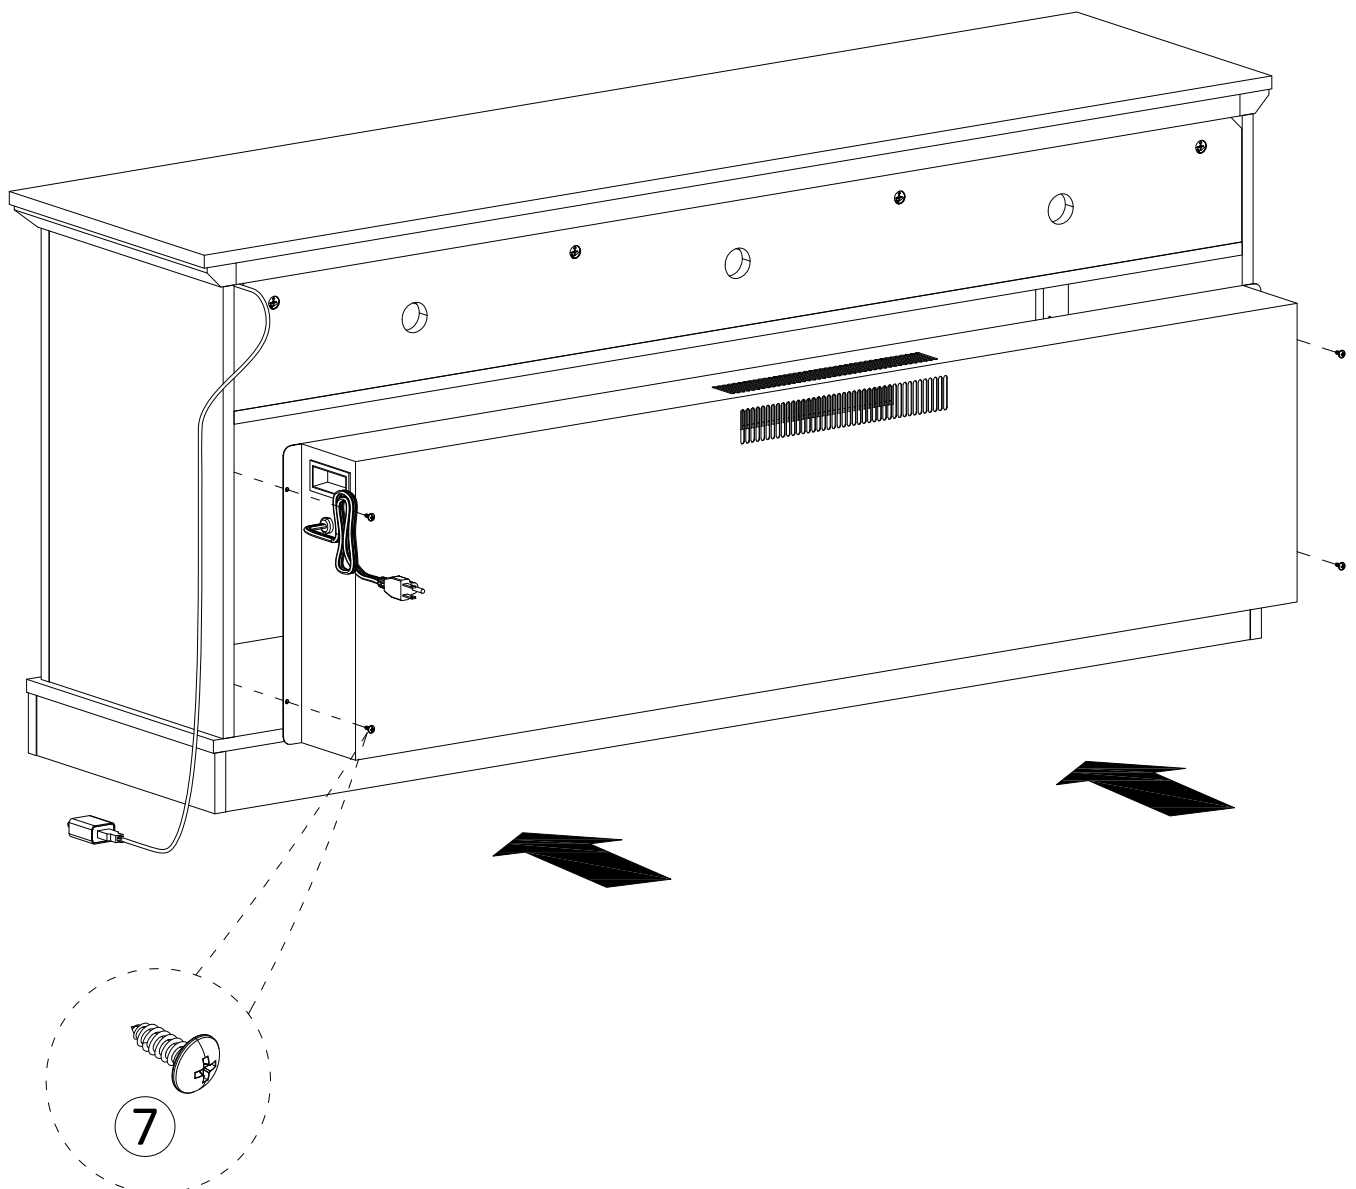

STEP17

- To use the remote control function of the light strip, please read the light strip manual.
- Please read the instruction manual for the usage function of the fireplace

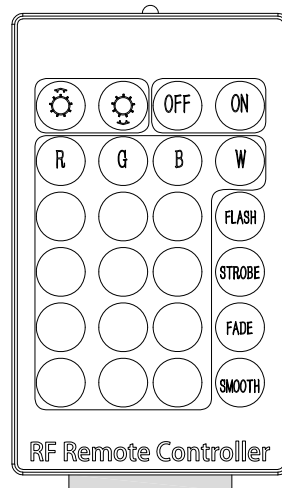

Before use, pull out the transparent card below.

