




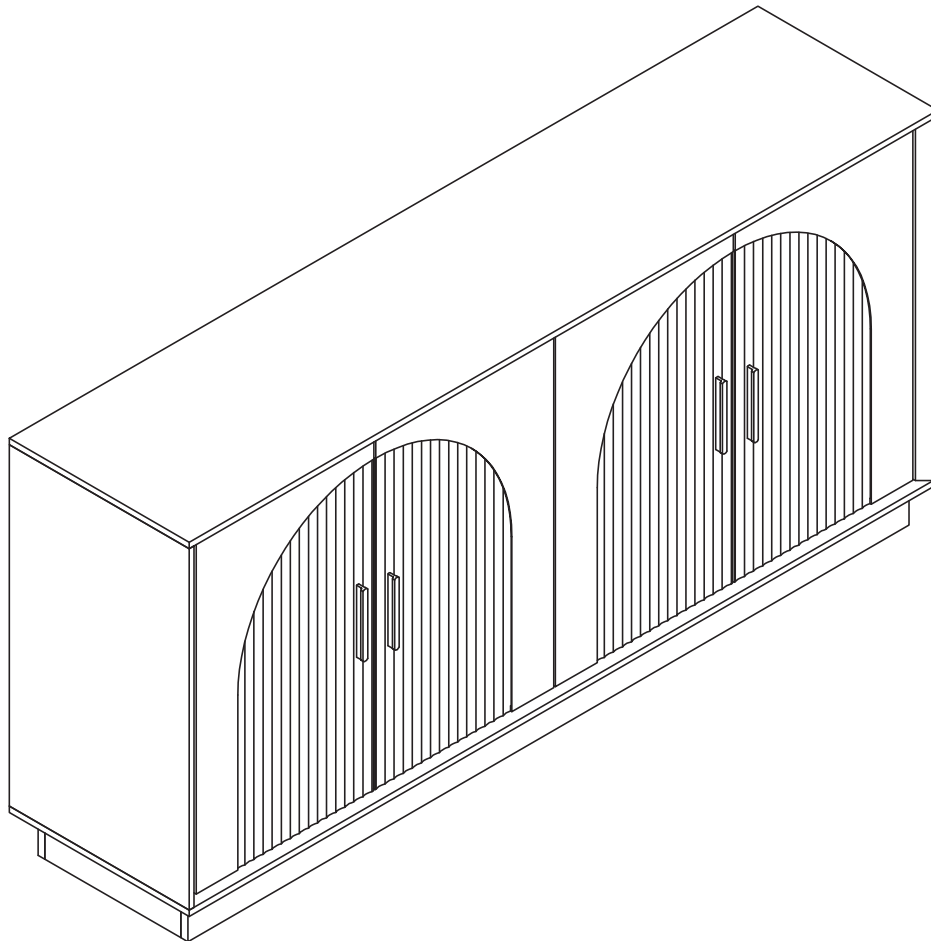


Please note: Items cannot be returned once assembled.

Installation & Assembly




**IT IS RECOMMENDED
TO USE POWER TOOLS**

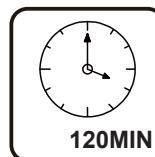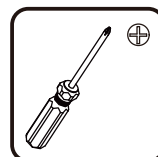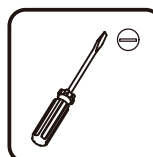


120MIN




EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

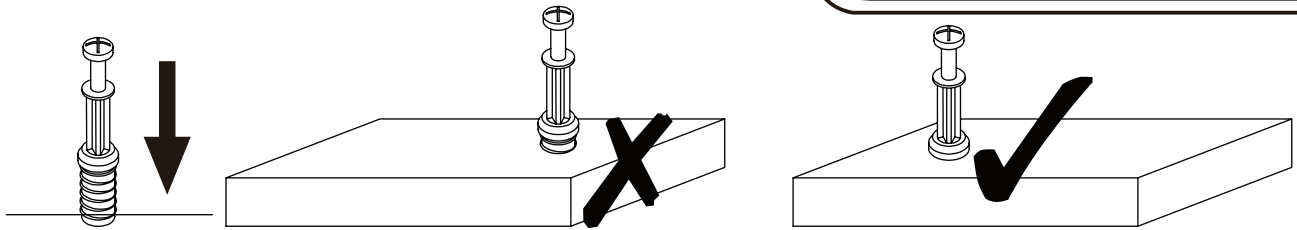


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

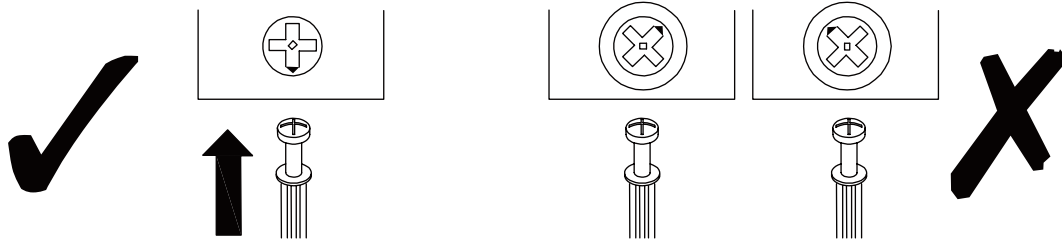

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











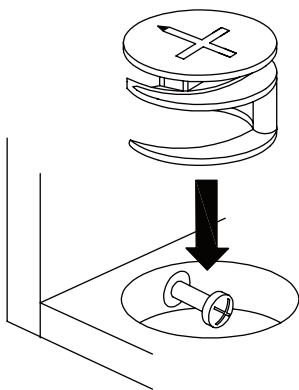





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

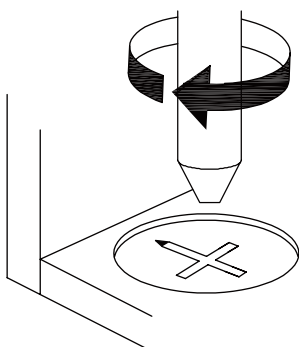


EN_Turn cam lock clockwise to tighten.

PACKING DELALS

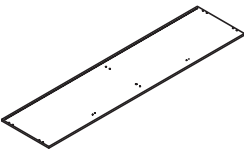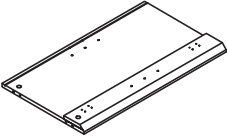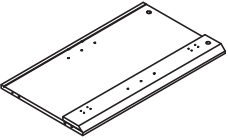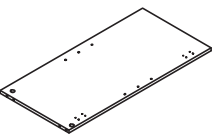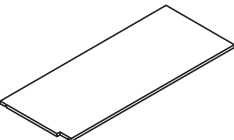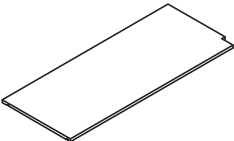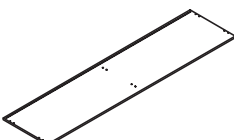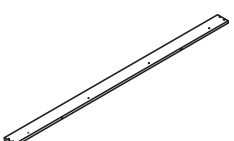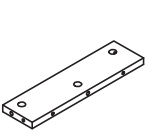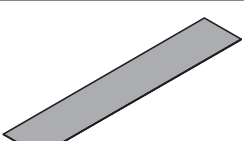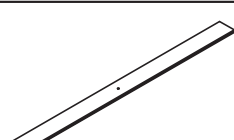
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	
⑪		x1	

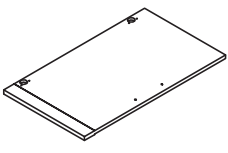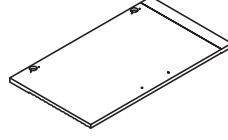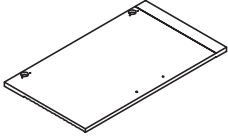NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x1	
⑭		x1	
	 Hardware Kit	x1	

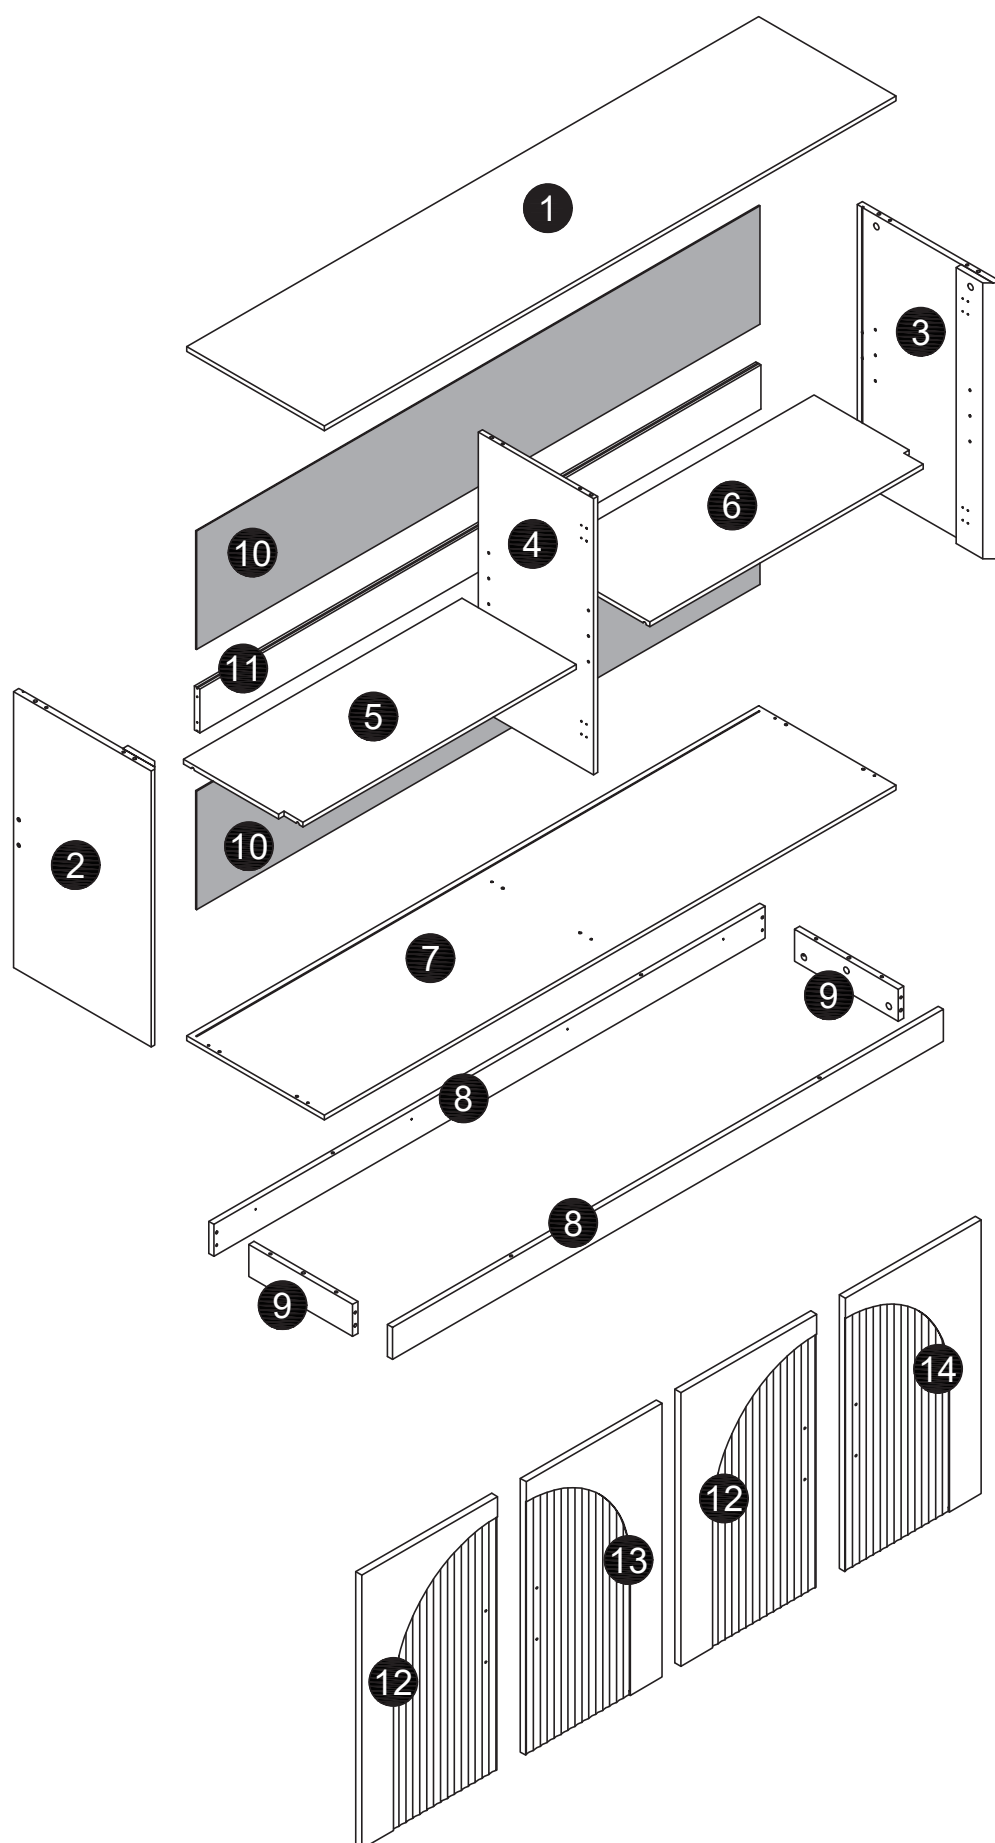

 A x12 Ø6x35mm +1(spare)	 B x12 Ø15x10mm +1(spare)	 C x24 Ø6x30mm +2(spare)	 D x11 Ø5x35mm +1(spare)	 E x64 Ø3.5x12mm +5(spare)	 F x4 F-1	 F x4 F-2
 G x4	 H x2 Ø4x35mm	 I x2 I-1	 I x2 I-2	 J x8	 K x4 +2(spare)	 L x8
 M x8 Ø3x16mm +1(spare)	 M x8 M-2	 N x2 Ø4x14mm N-1	 N x2 N-2	 O x2 Ø6x30mm	 P x2	 Q x4

 C x6	 D x6
---	---

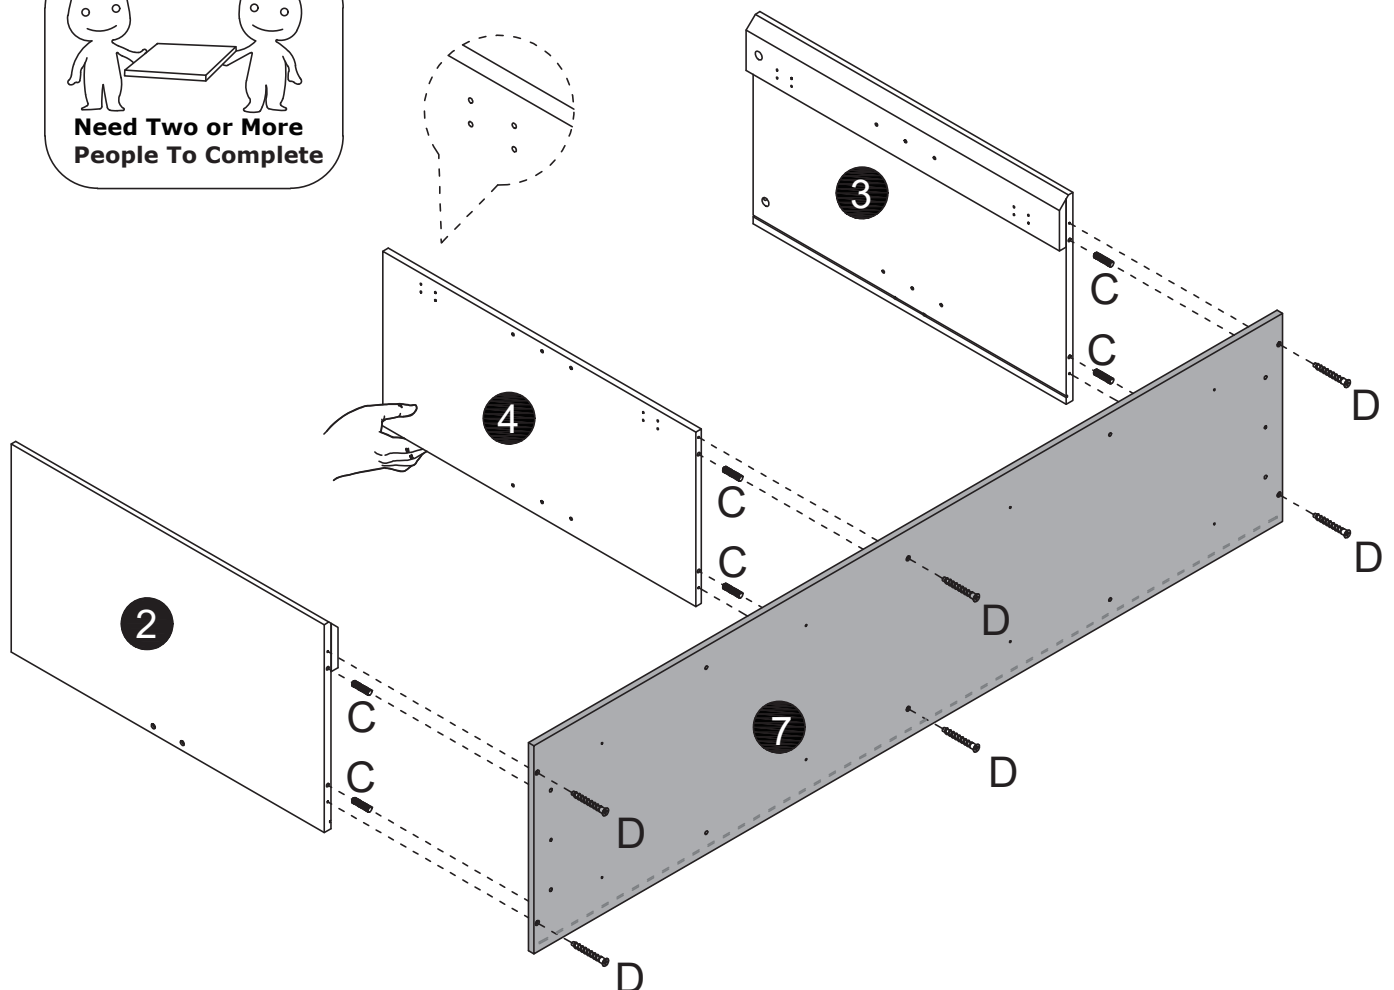





C x6



04

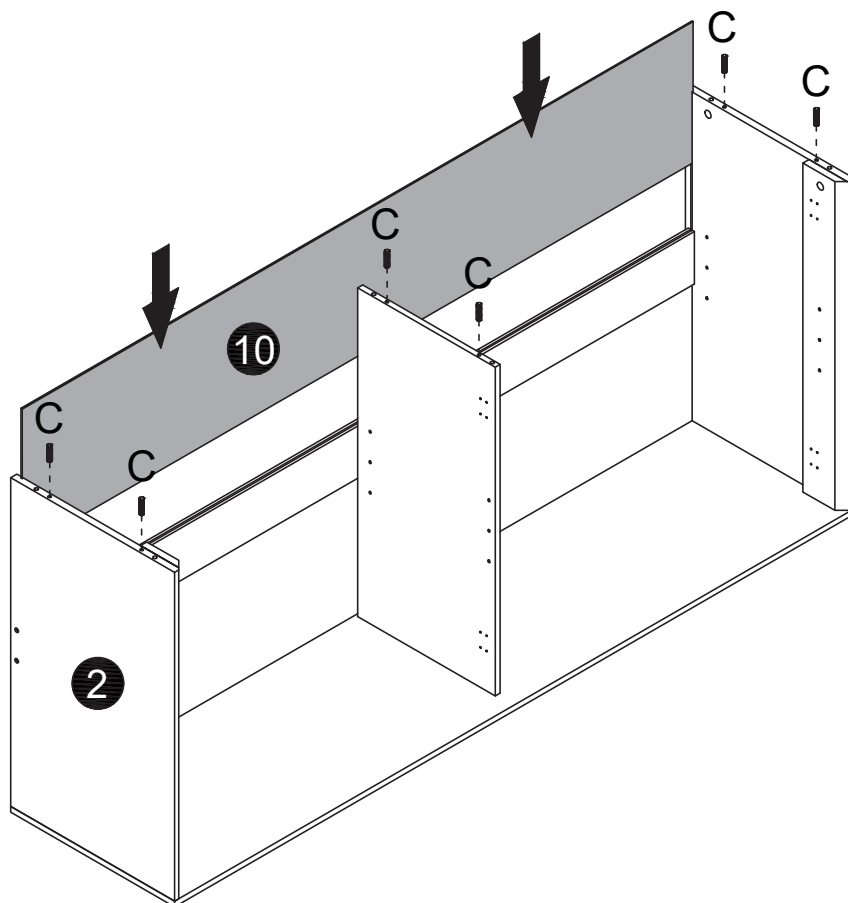

A x6




I x2



I-1

I-2


05

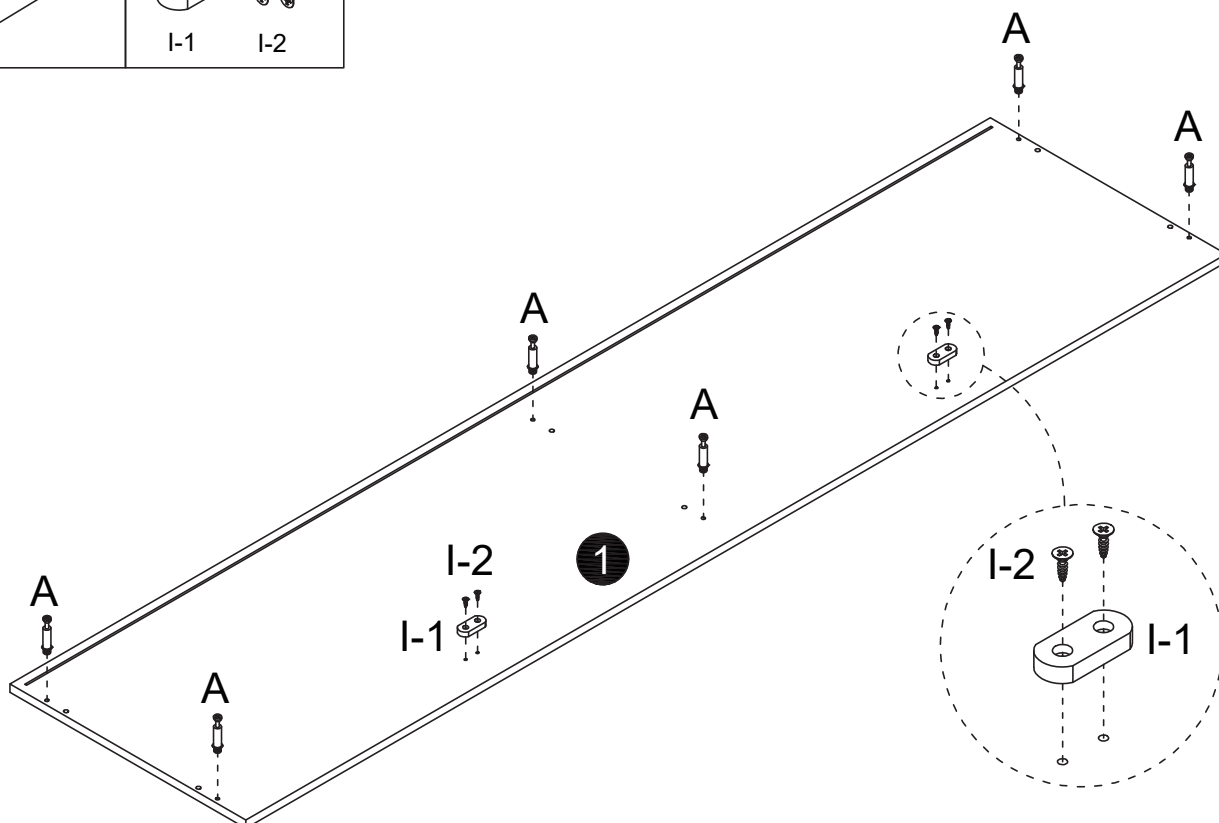

B x6



06

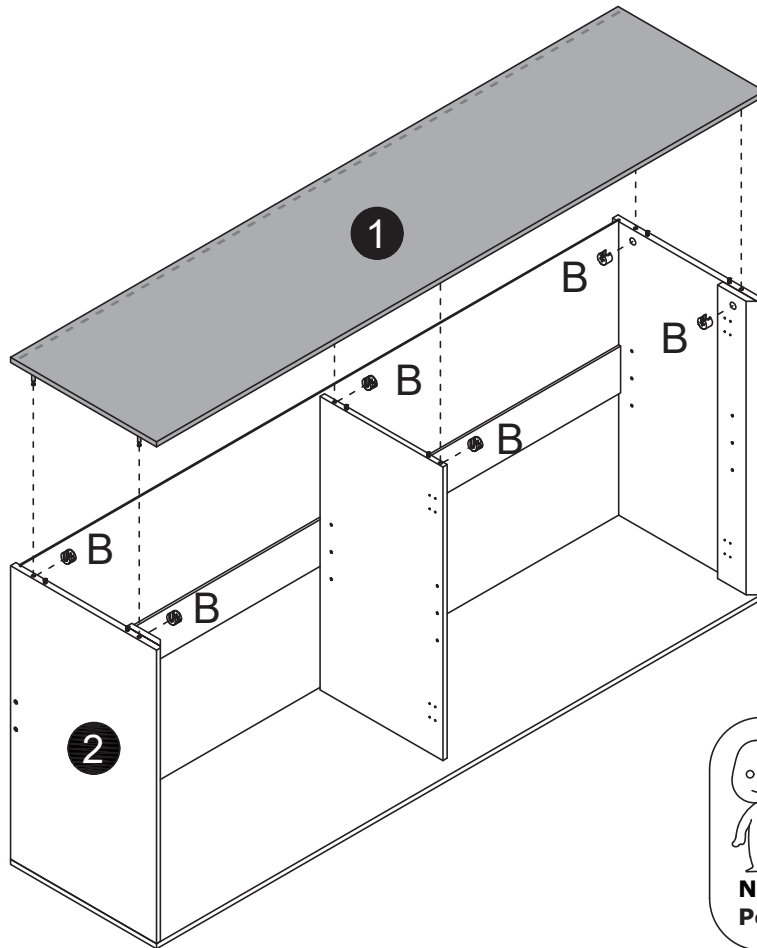

A x6




E x8




L x8



07

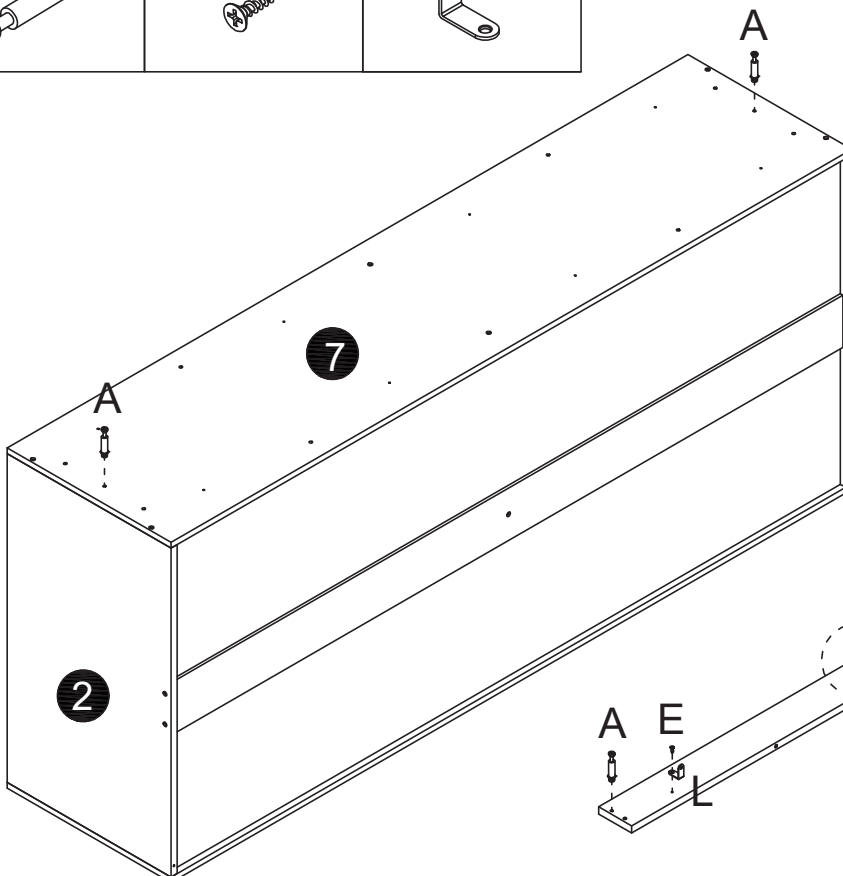


To facilitate subsequent installation, do not lock screw E too tightly in this step.

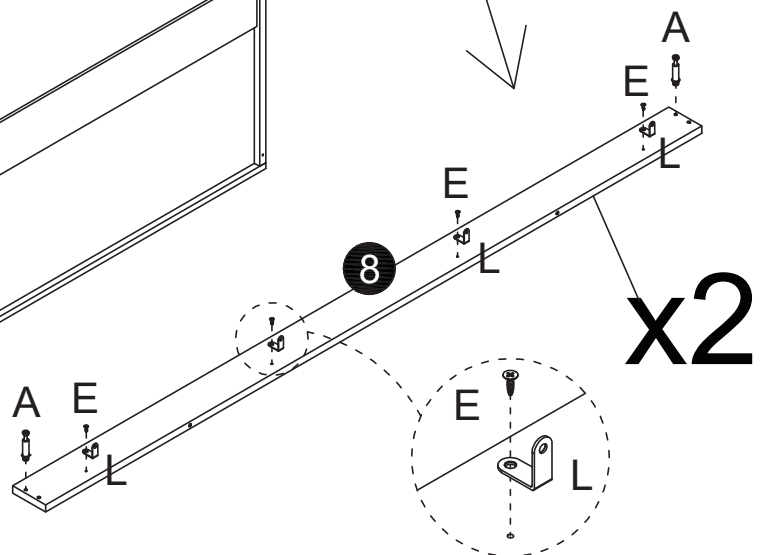

B x4



C x4

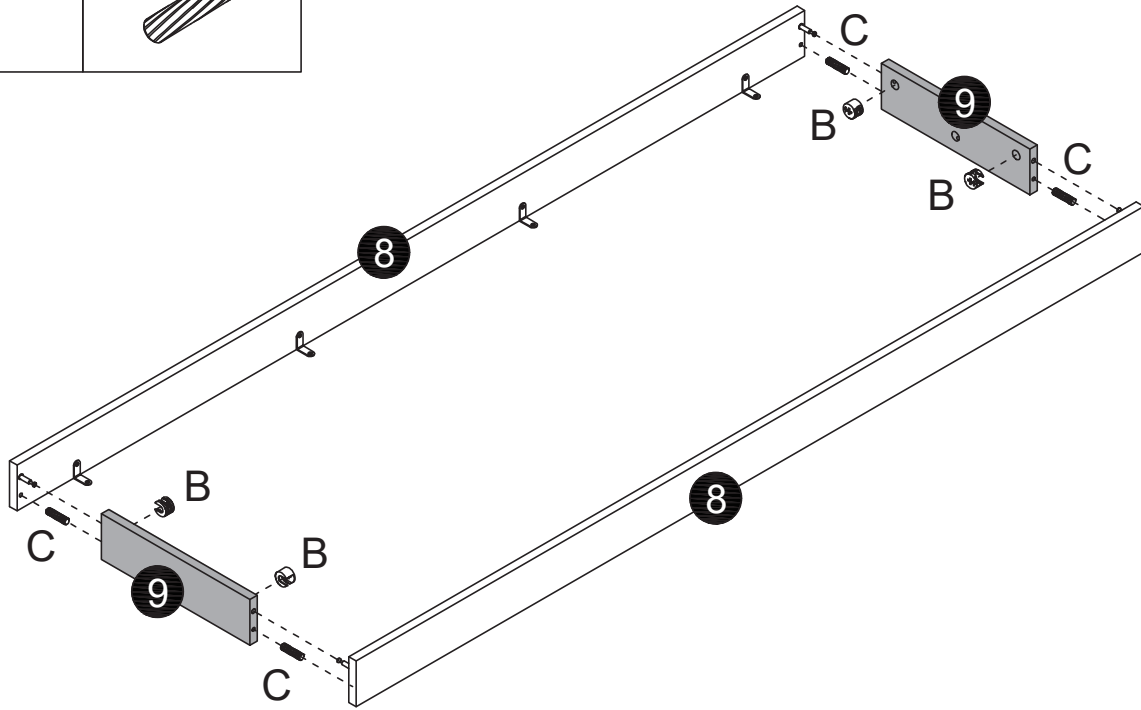



B x2



C x8



E x8

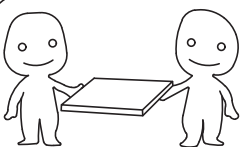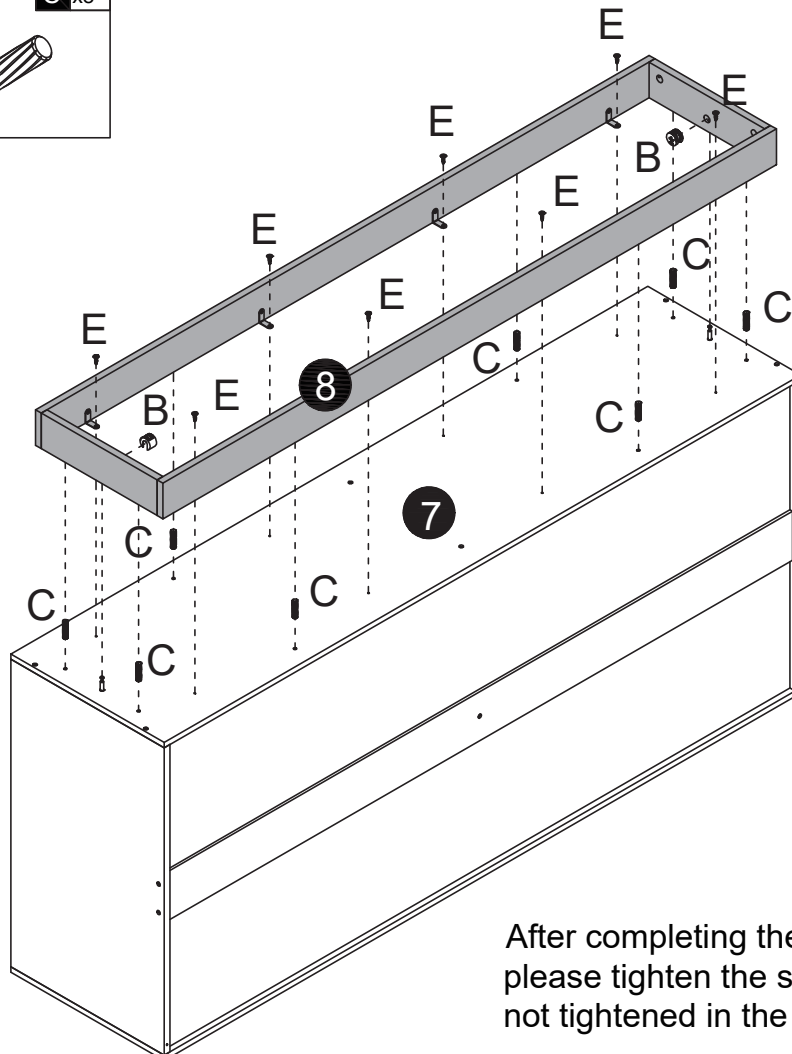

**Need Two or More
People To Complete**

After completing the installation,
please tighten the screw E that was
not tightened in the previous step.

J x8






P x2






There are multiple options for arranging the left and right side panels, and corresponding quantities of accessories can be matched according to different methods.


1、 Plate 5 and Plate 6 are at the same horizontal height

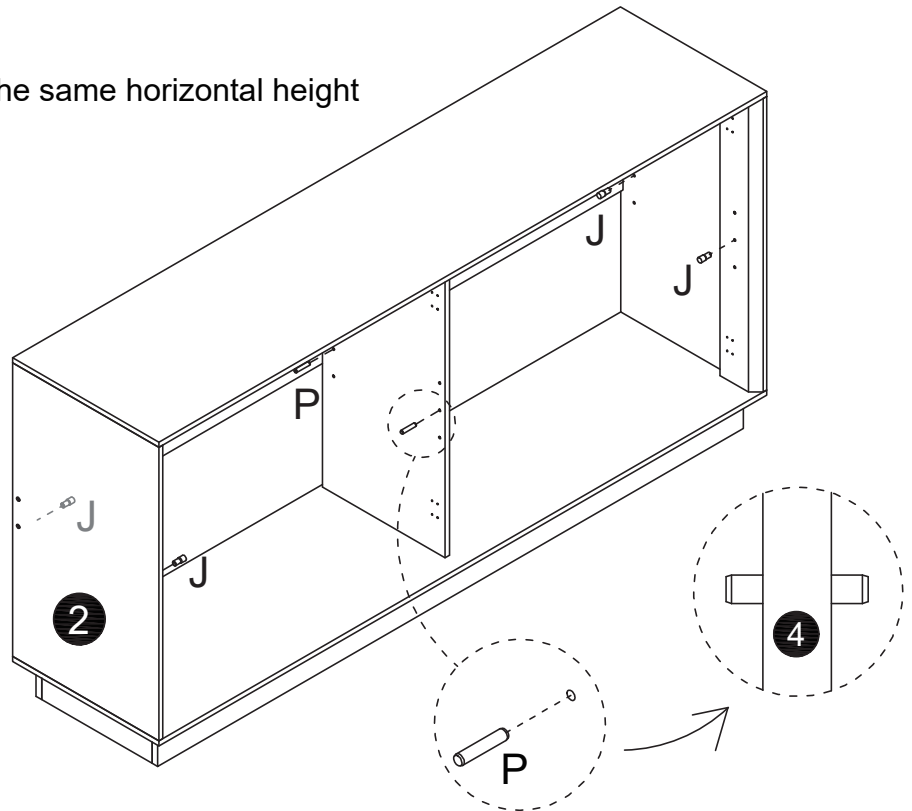
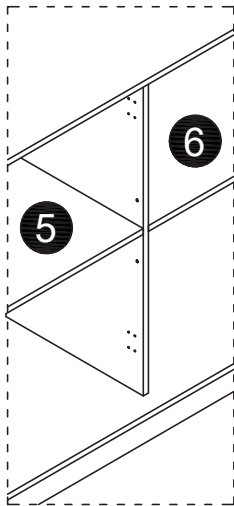


2、 Plate 5 and Plate 6 are not at the same horizontal height

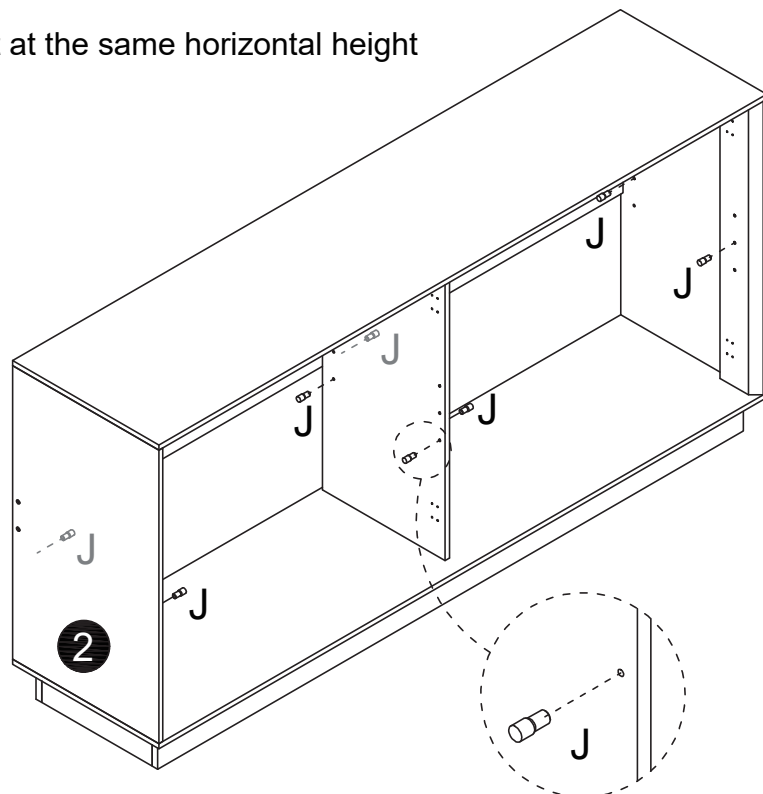
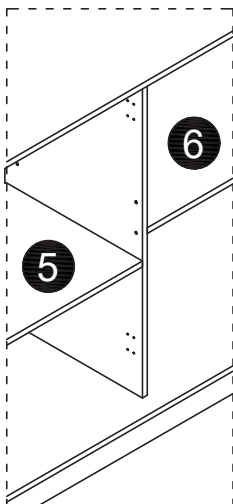






Caution : Please keep the extra accessories properly so that you have the corresponding parts when you switch to another assembly method later.



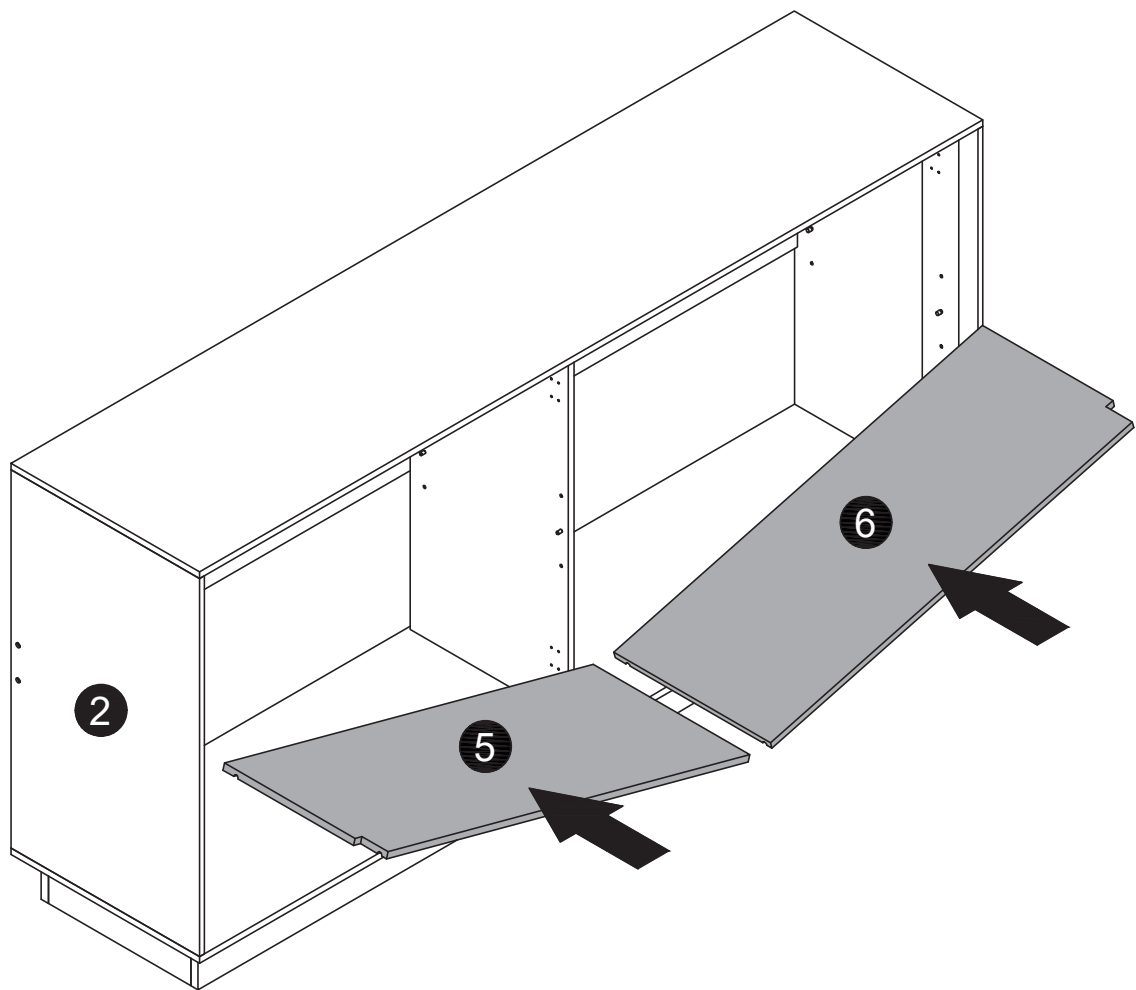


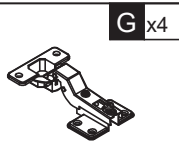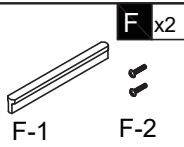

Caution : In this step, please use accessory G instead of accessory Q, and pay attention to the distinction.

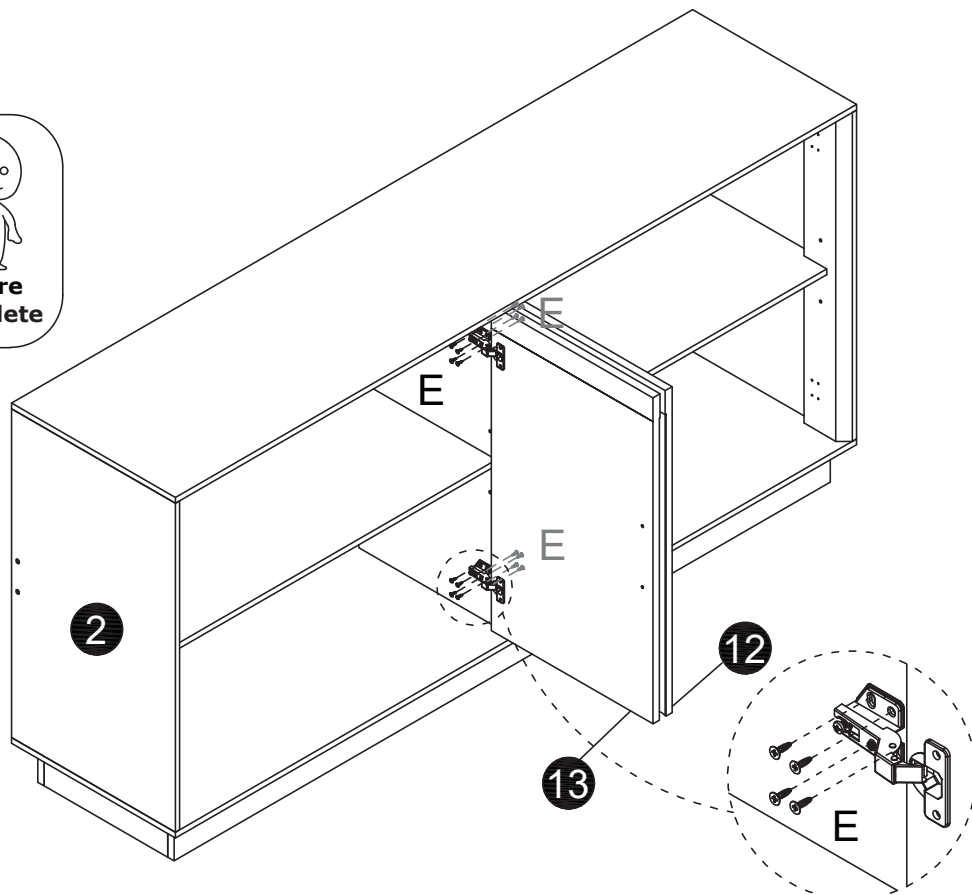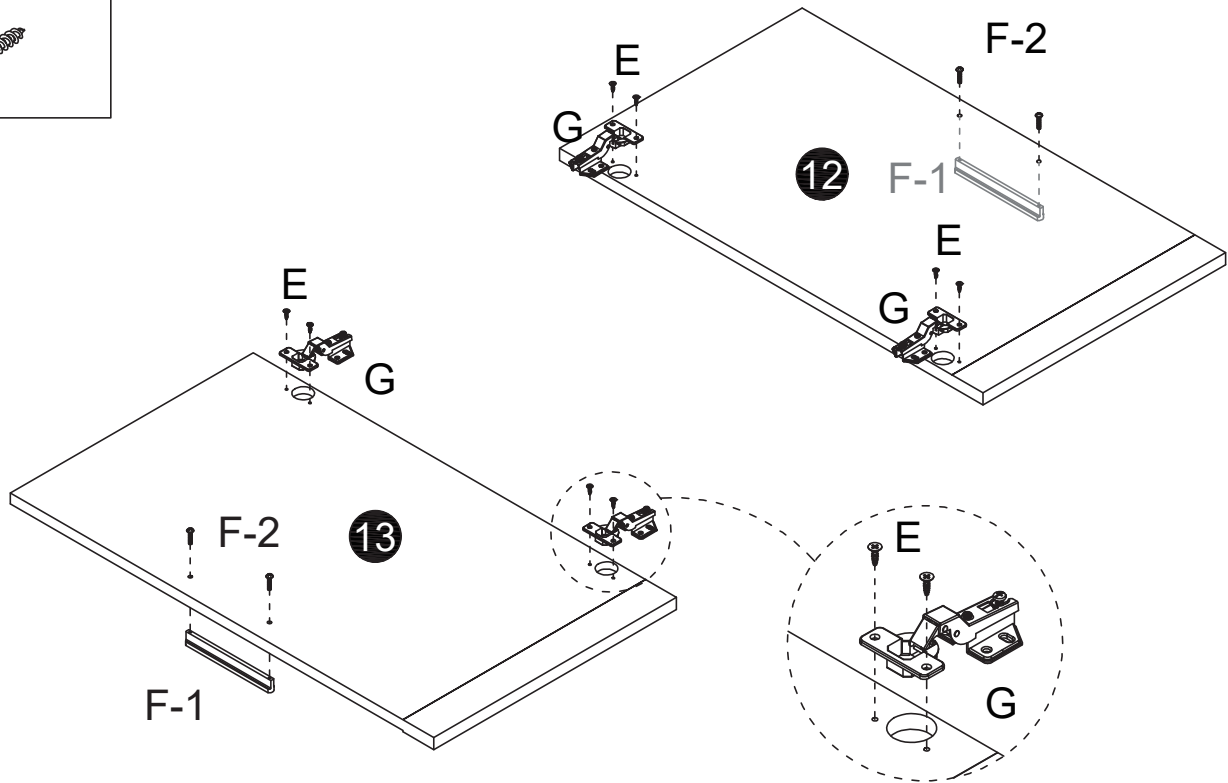


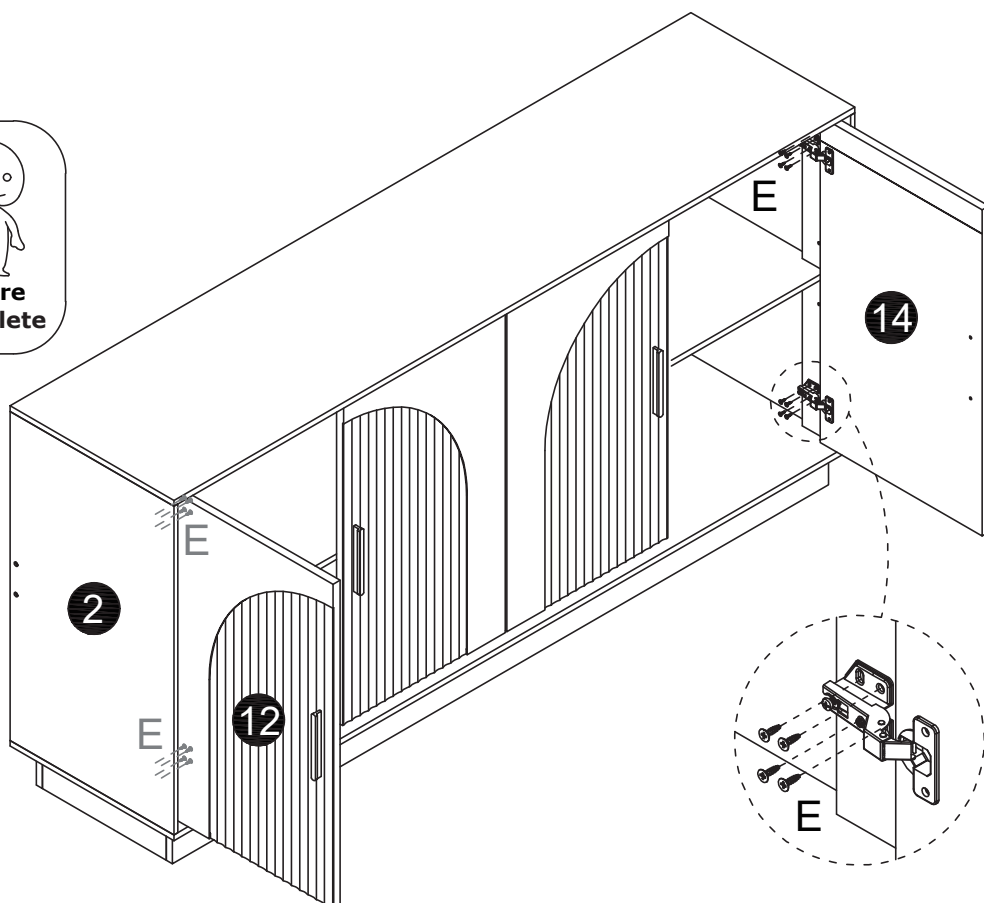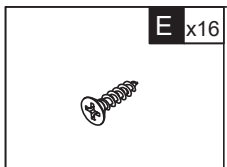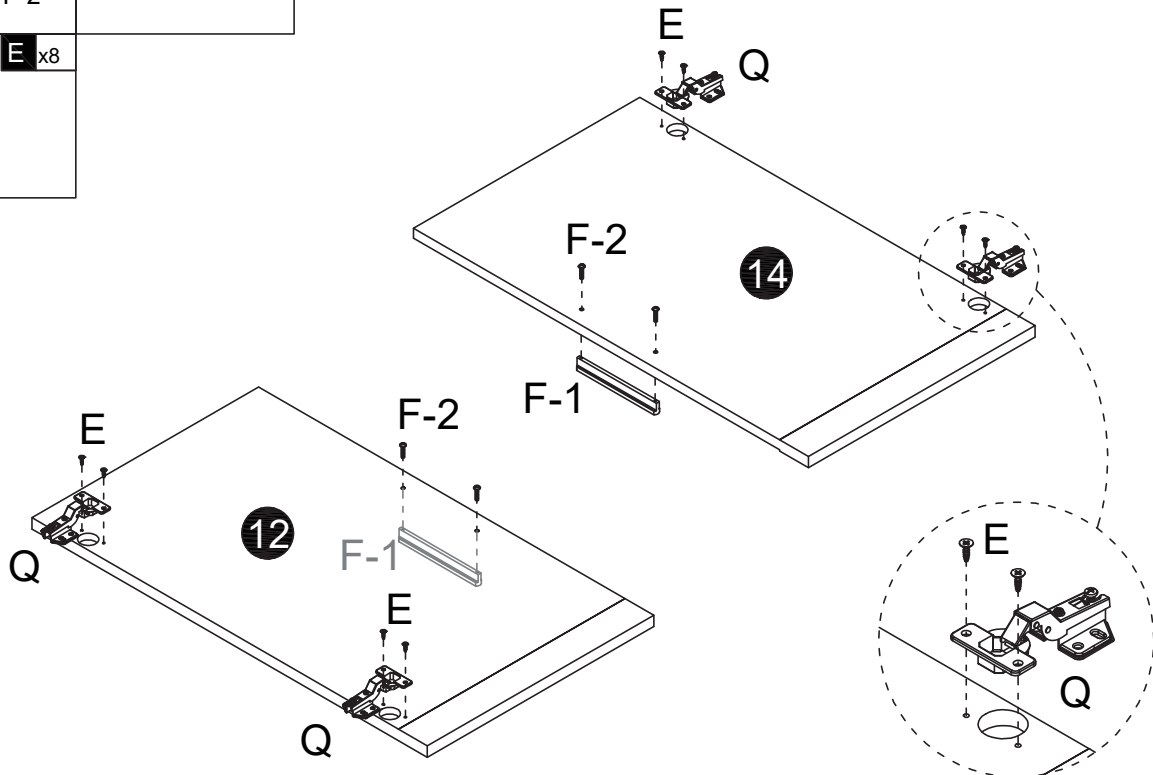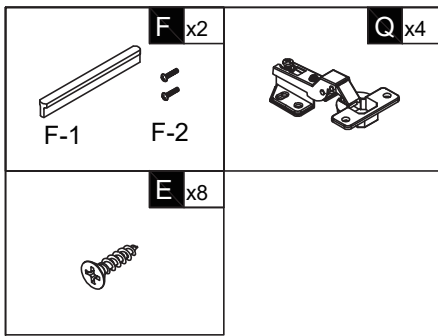

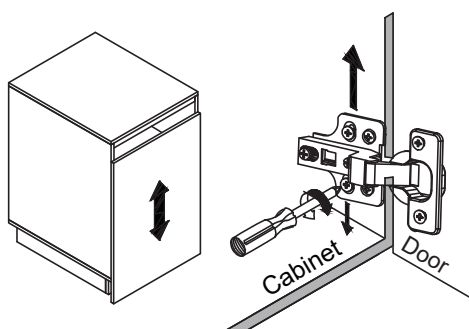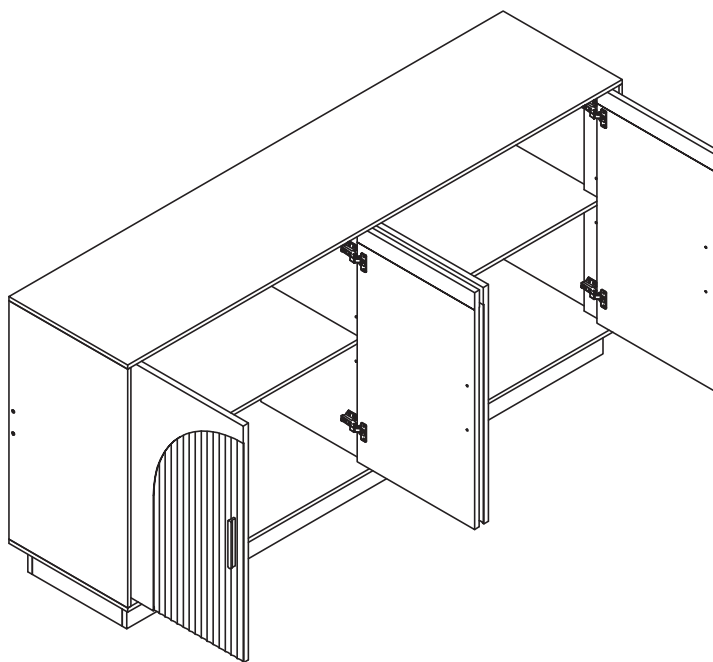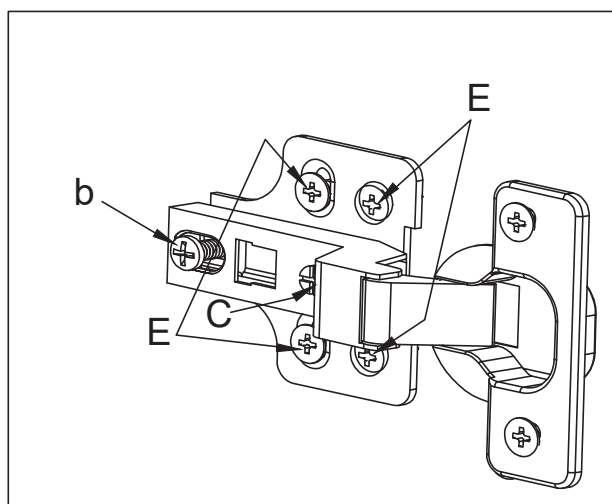


To adjust the vertical height.

Loosen the four screws "E" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

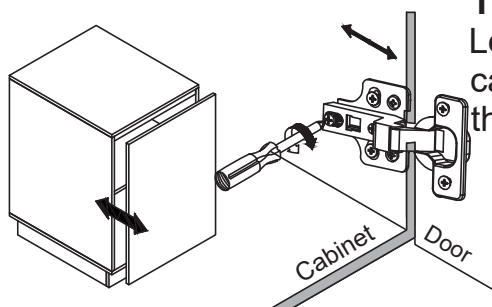

To adjust depth.

Loosen screw "b" and adjust door, if the door can not be adjusted, please loosen screw "c", then try again. Tighten screw "b" and "c".

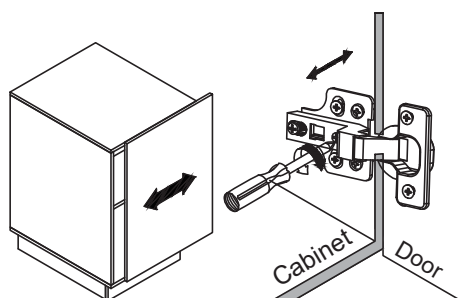

To adjust side ways.

Turning the screw "c" on BOTH hinges on each door.

K x4


M x8




M-1




M-2

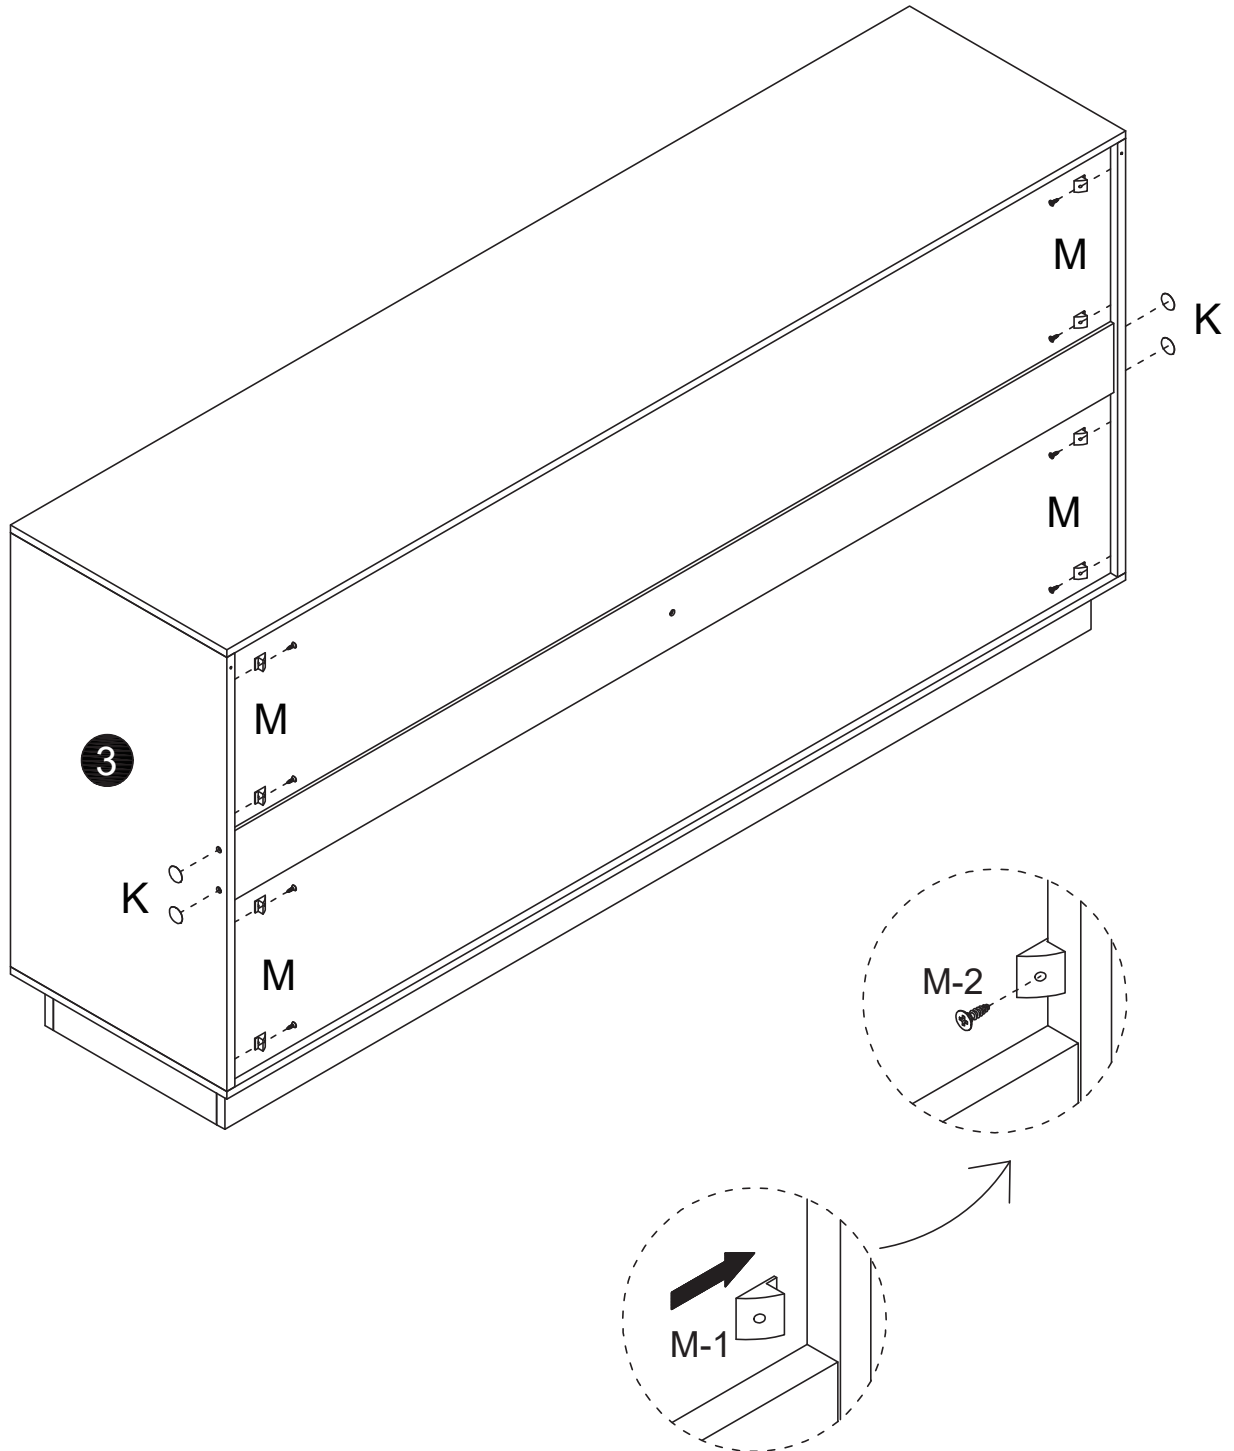

H x2



N x2





N-1




N-2


O x2

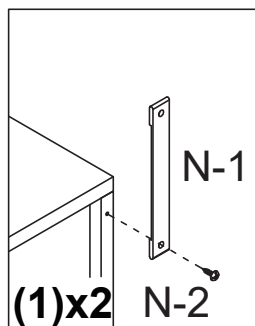


First fix the anti-rewind screw in the reserved hole of the product.

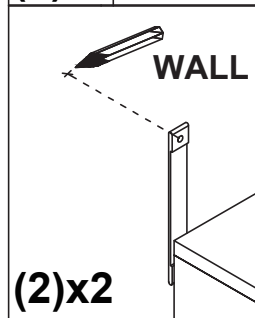


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

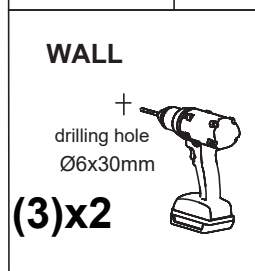

Then use a tape drill to make holes in the wall that are suitable for the product screws.

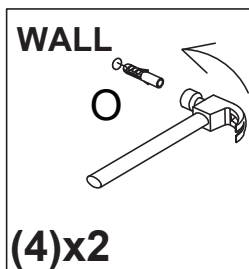

Then, put the expansion bolt into the hole

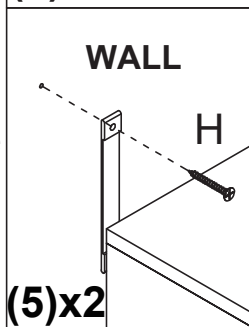

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

