
BATHROOM VANITY ASSEMBLY INSTRUCTIONS

Open Shelf on the Left

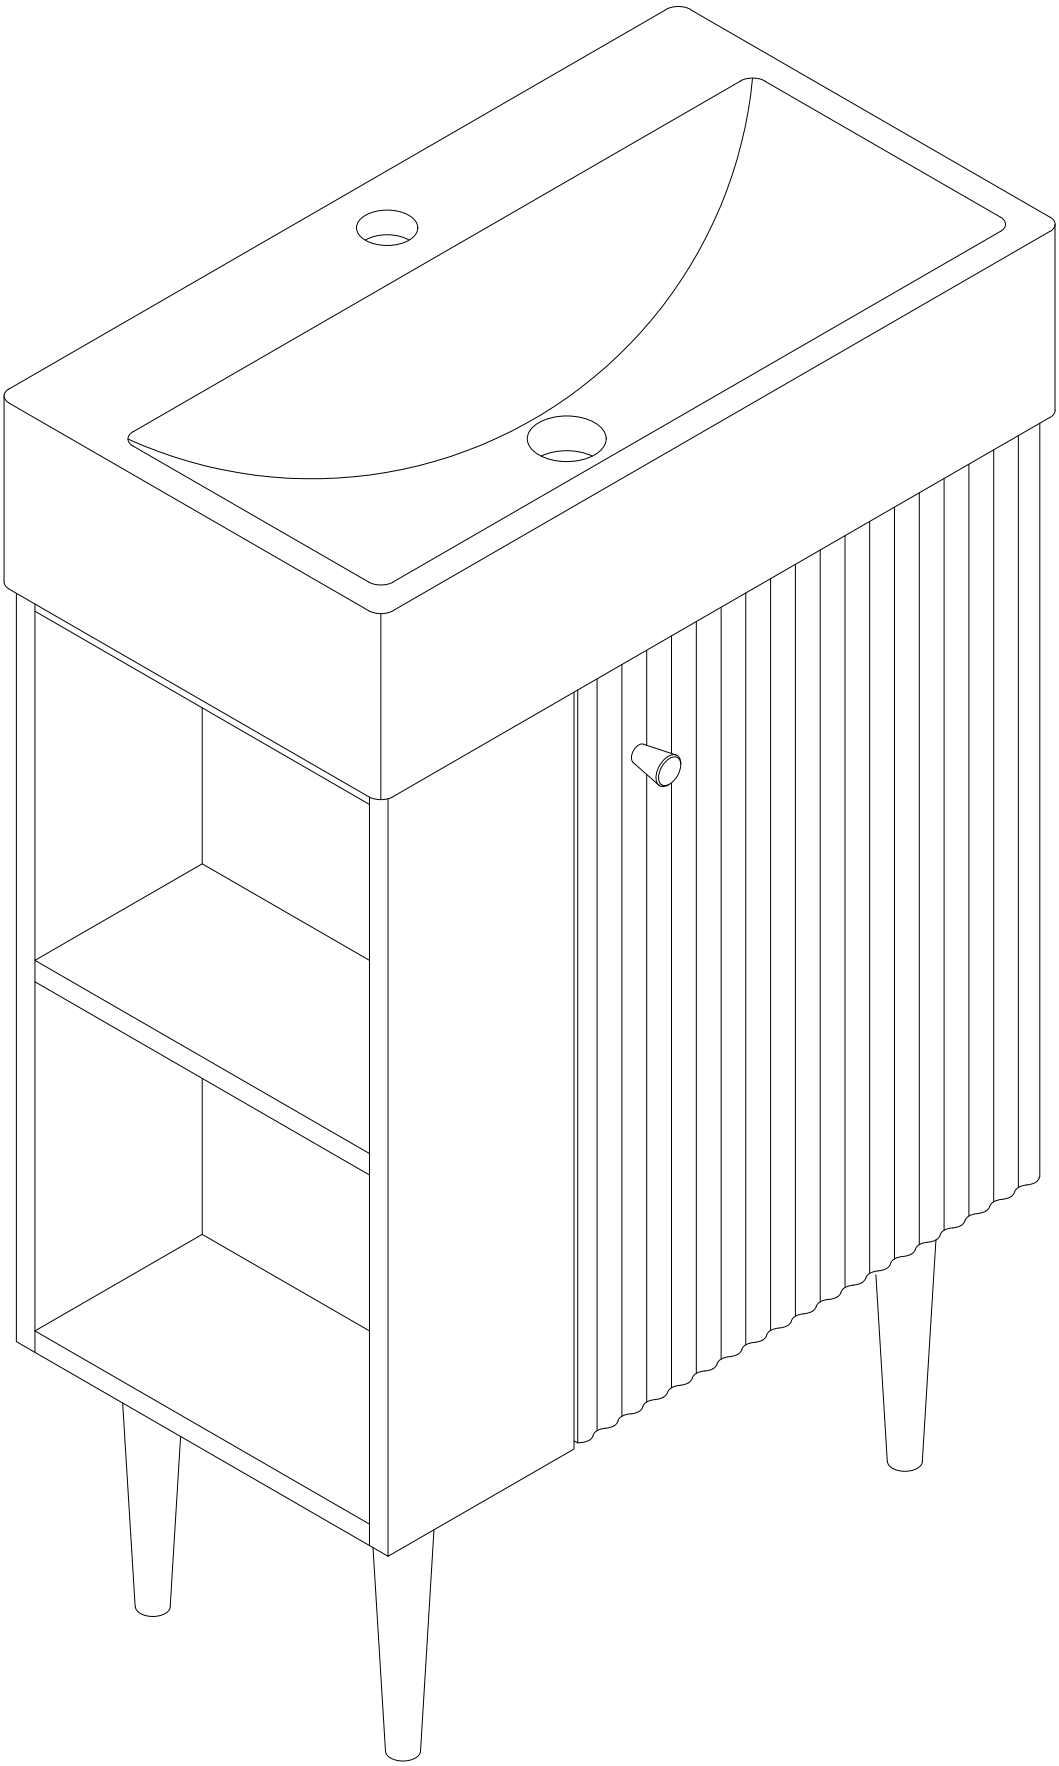

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.


Tools Required (Not Supplied)

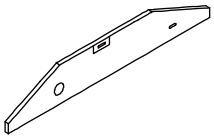


Spirit level




Tape measure

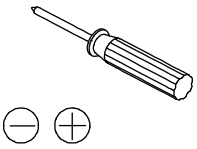

Screwdriver

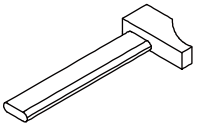

Hammer

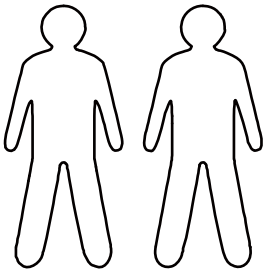




Drill



Drill bit
(Ø8)




Pencil

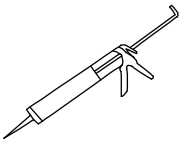


Silicone


Part List

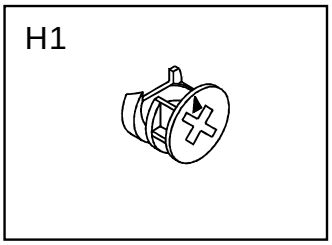


23x

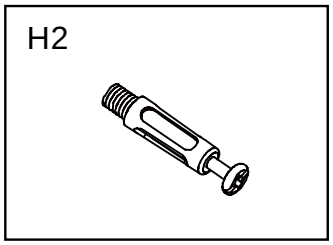


23x

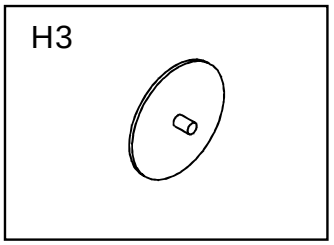


23x

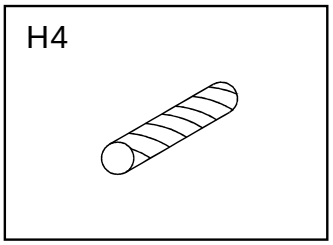


8xΦ8x30

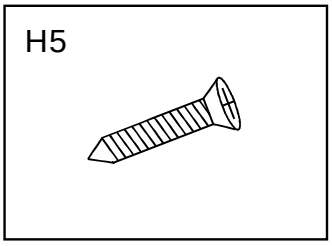


48xM4x16

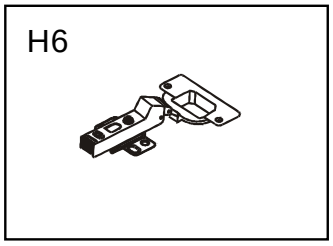


2x

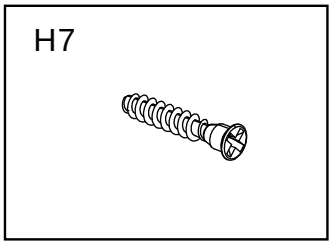


2x

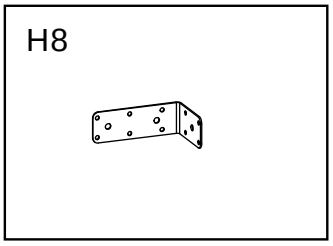


2x

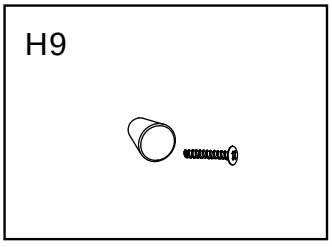


1x

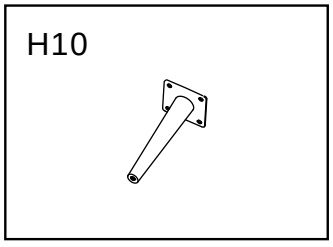

4x

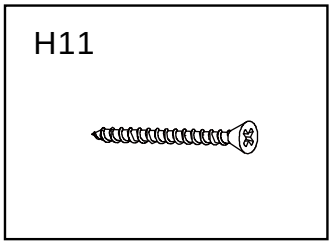


4xM4x70

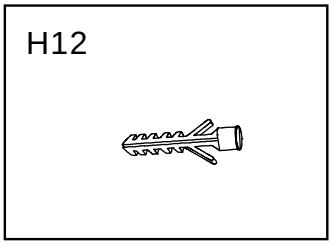


4xΦ8x40


STAND-BY SPAREPARTS

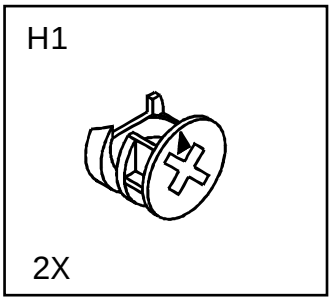


2X

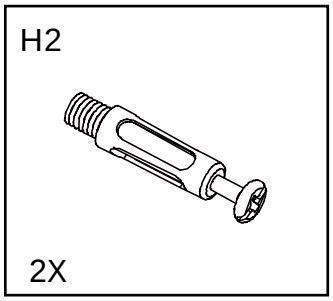



2X

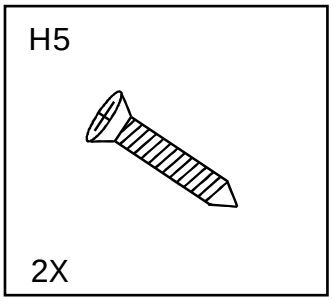


2X

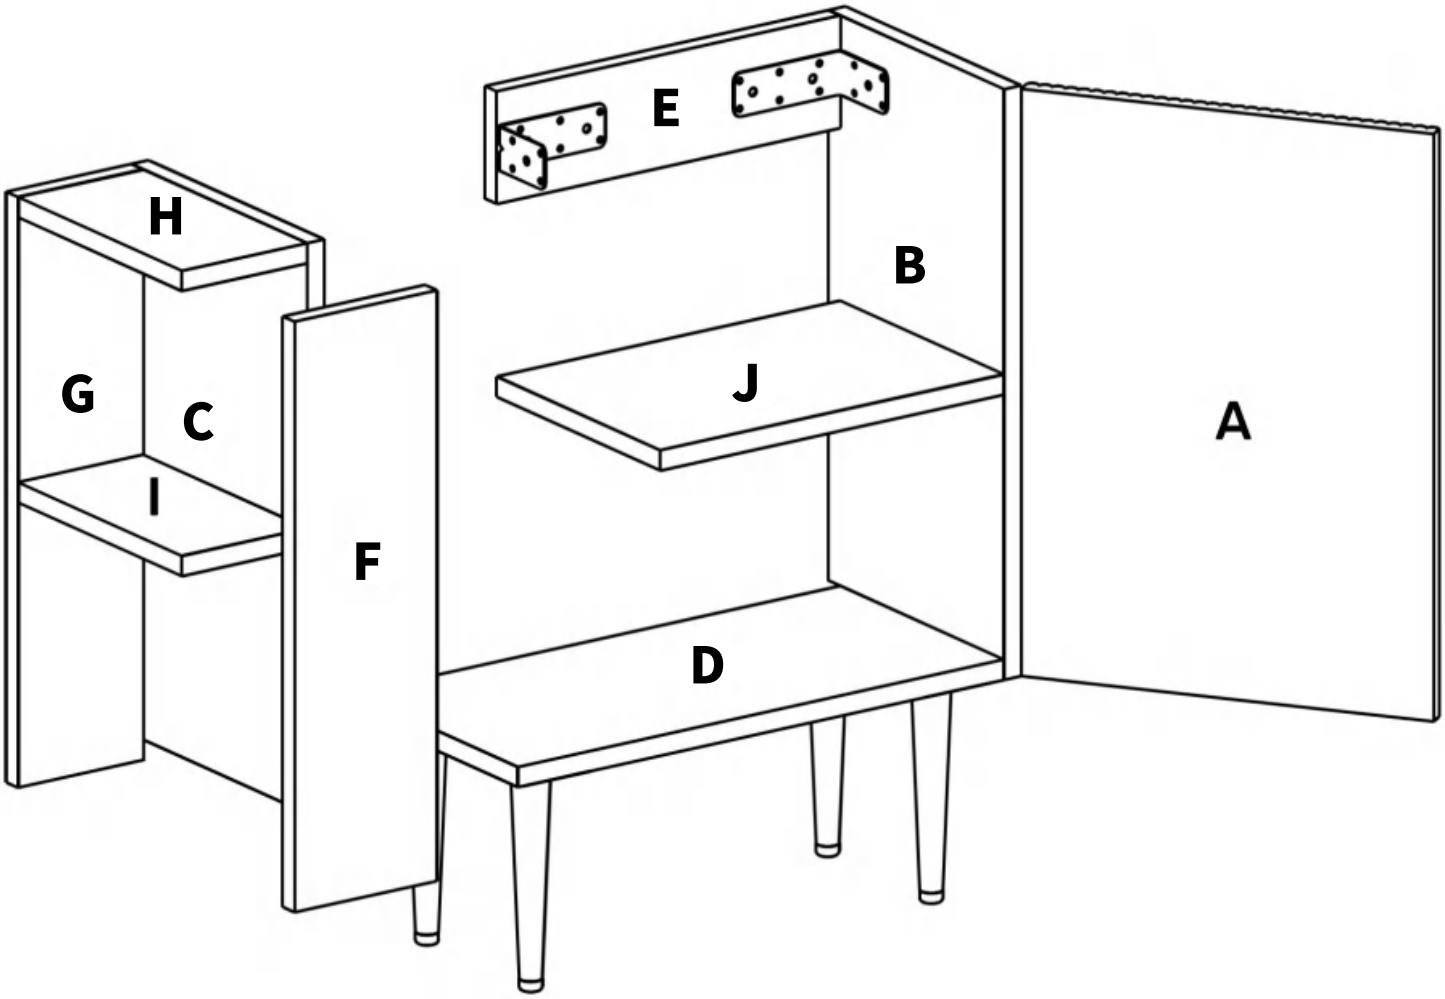

E
H
B
G
C
J
A
I
F
D

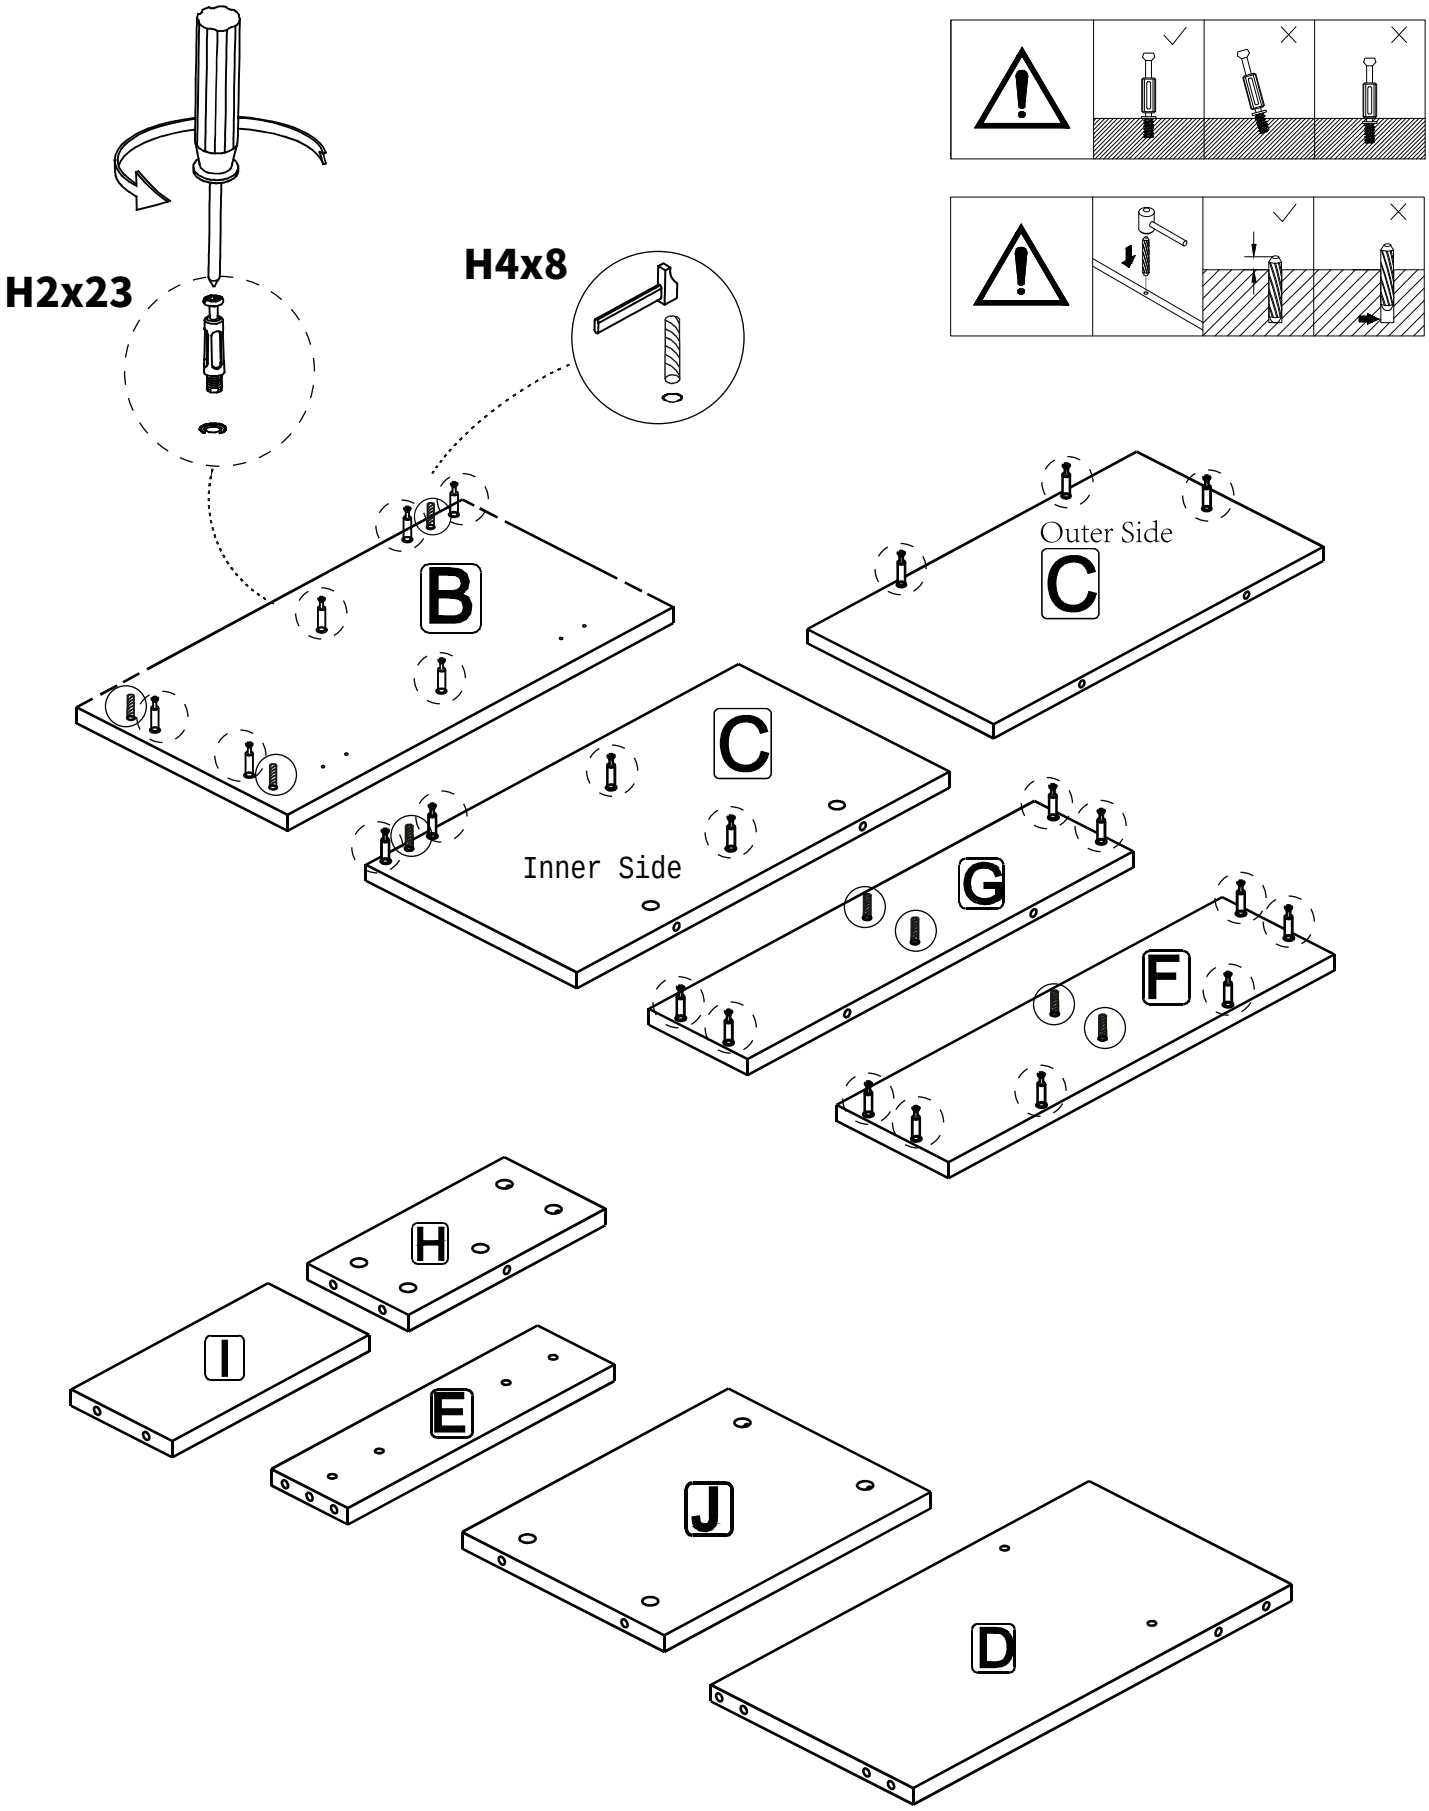

H2x23
H4x8
B
C
Outer Side
C
Inner Side
G
F
H
I
E
J
D

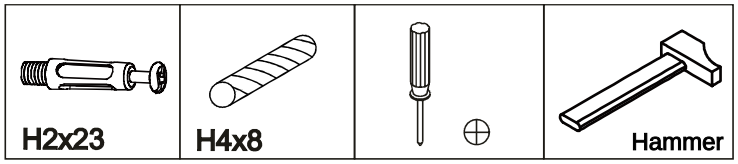

H2x23
H4x8
Hammer

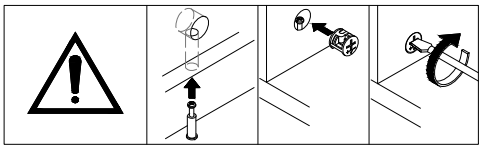



C
J
E
B
Step: 1
Step: 2
Step: 3
H1x8
H3x8

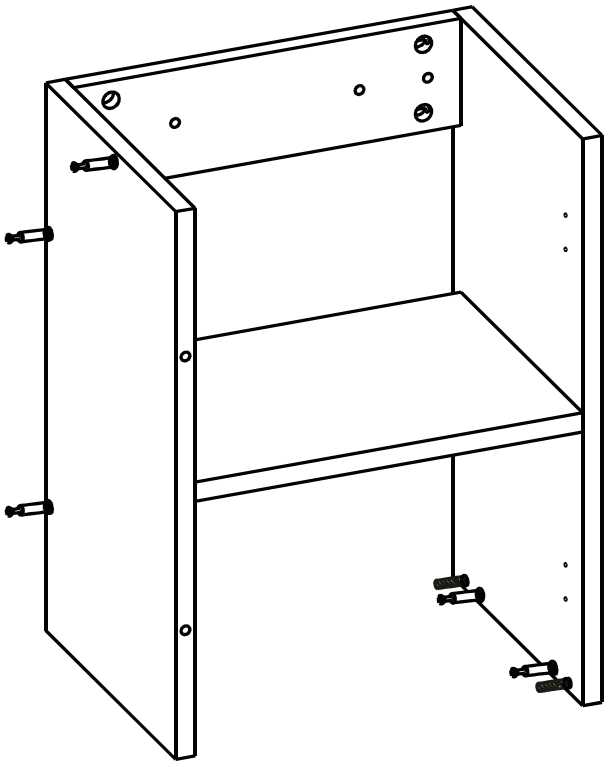




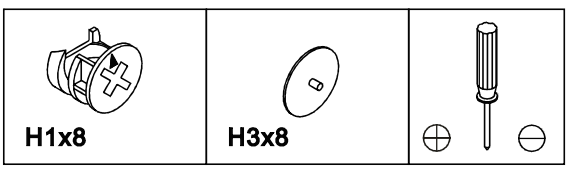

H1x8
H3x8

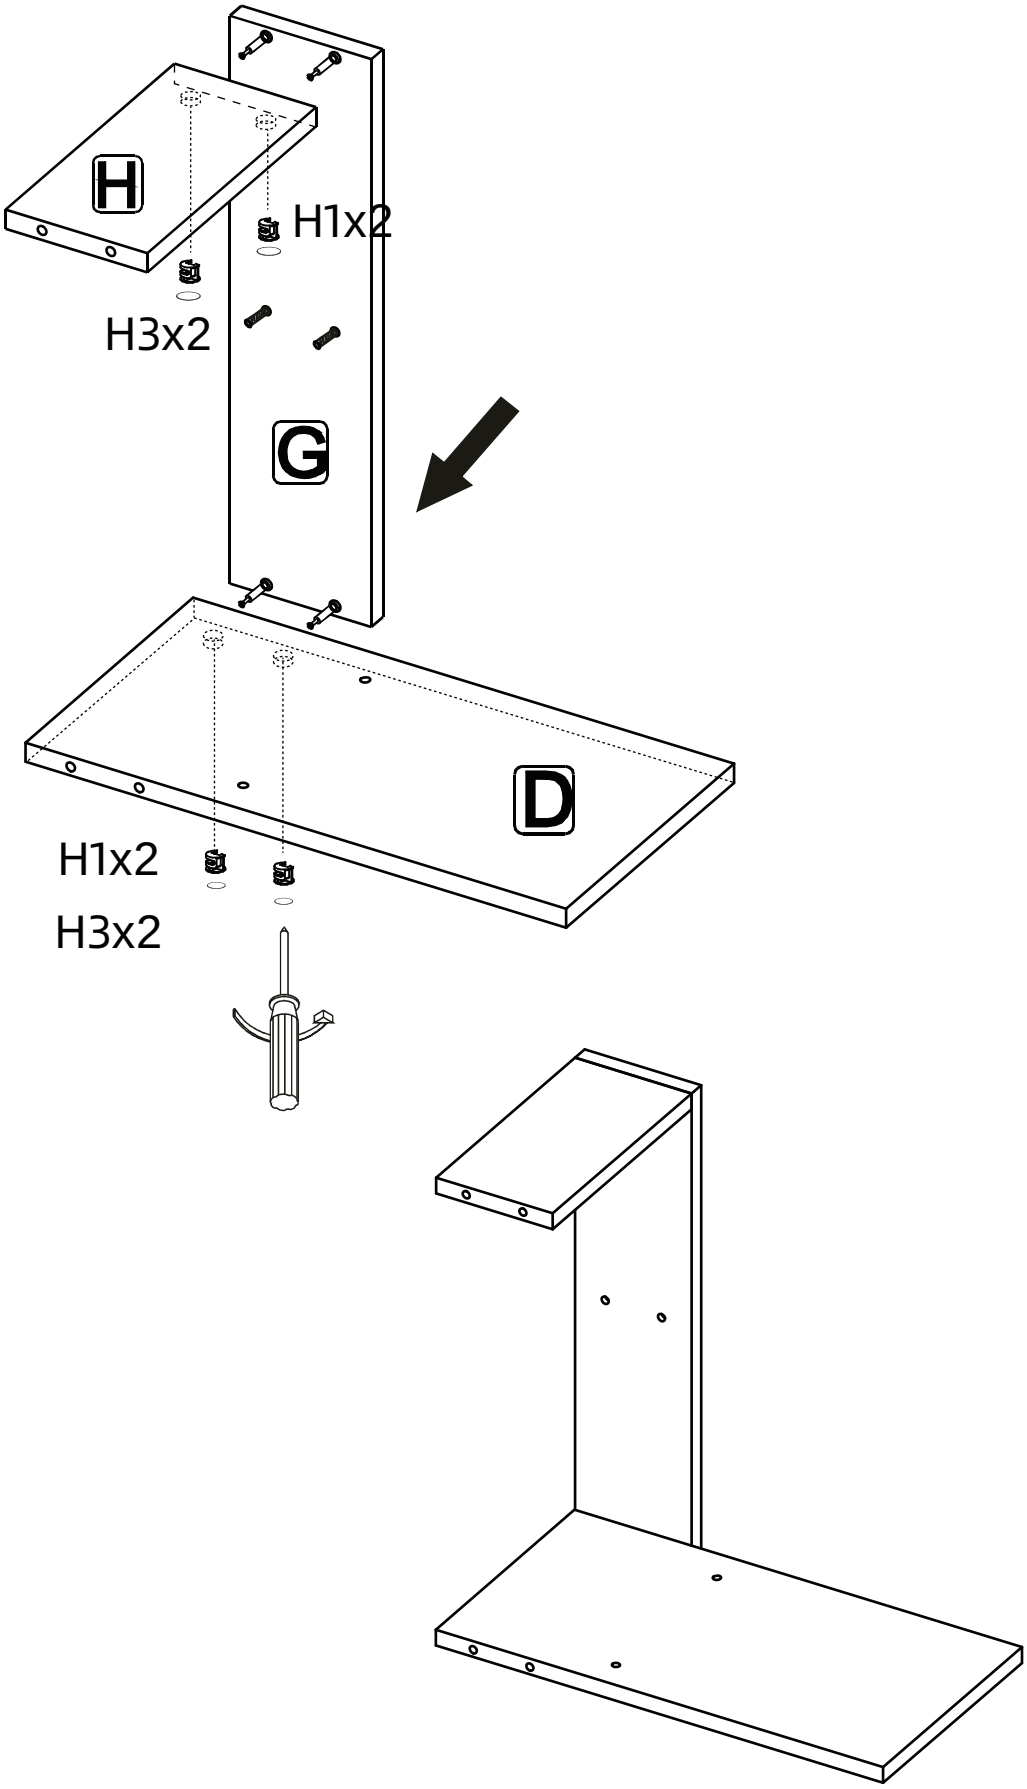


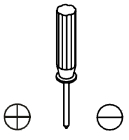
 H1x4	 H3x4	

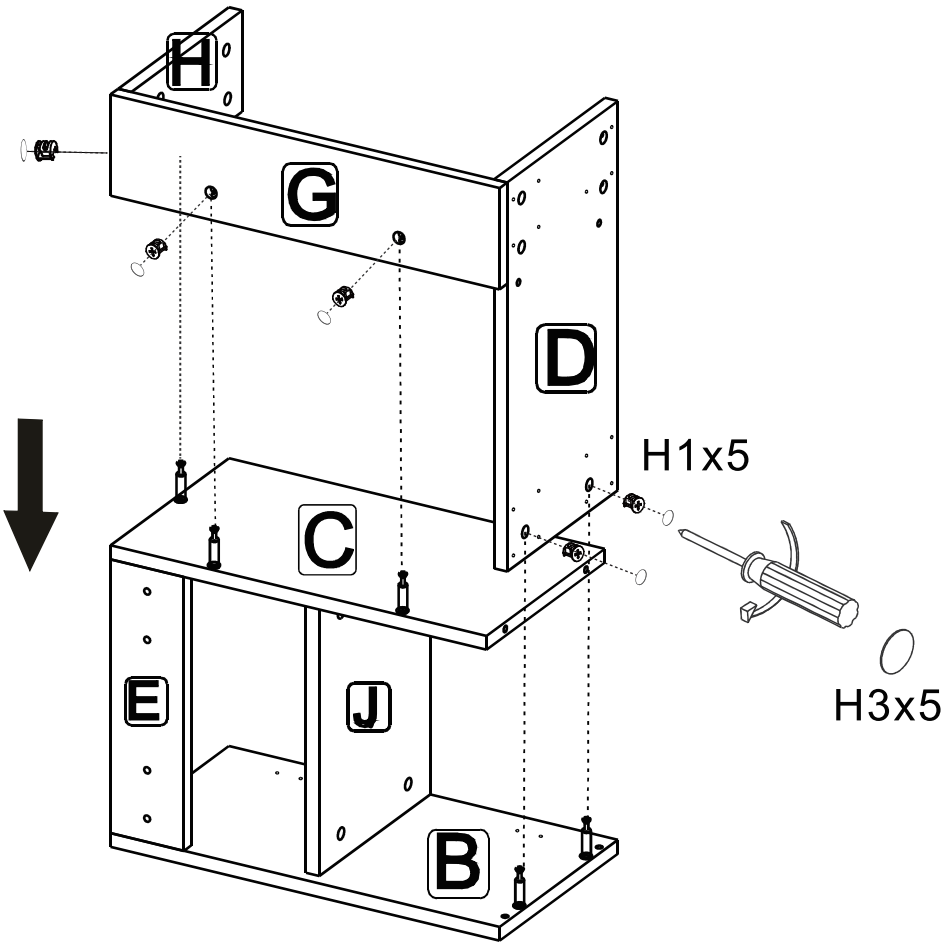


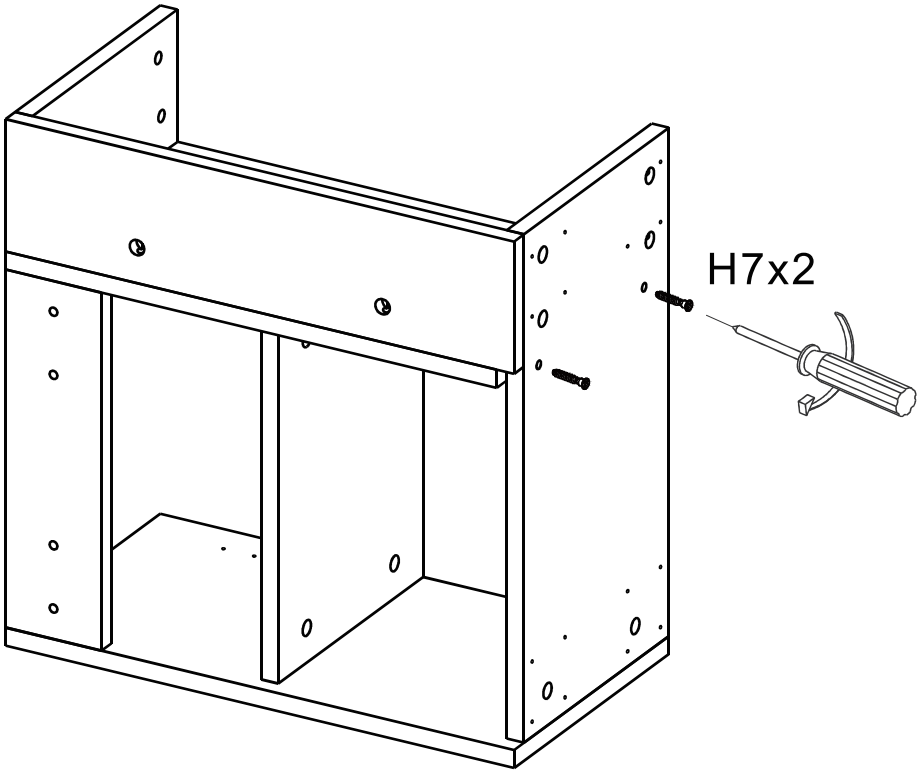


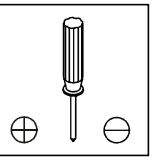
 H1x5	 H3x5	 H7x2	

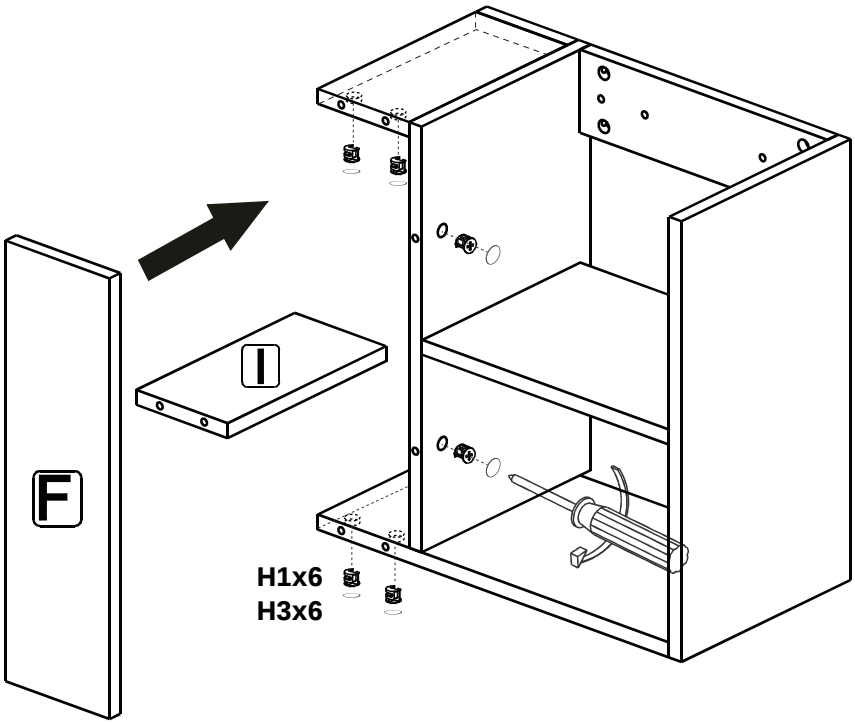

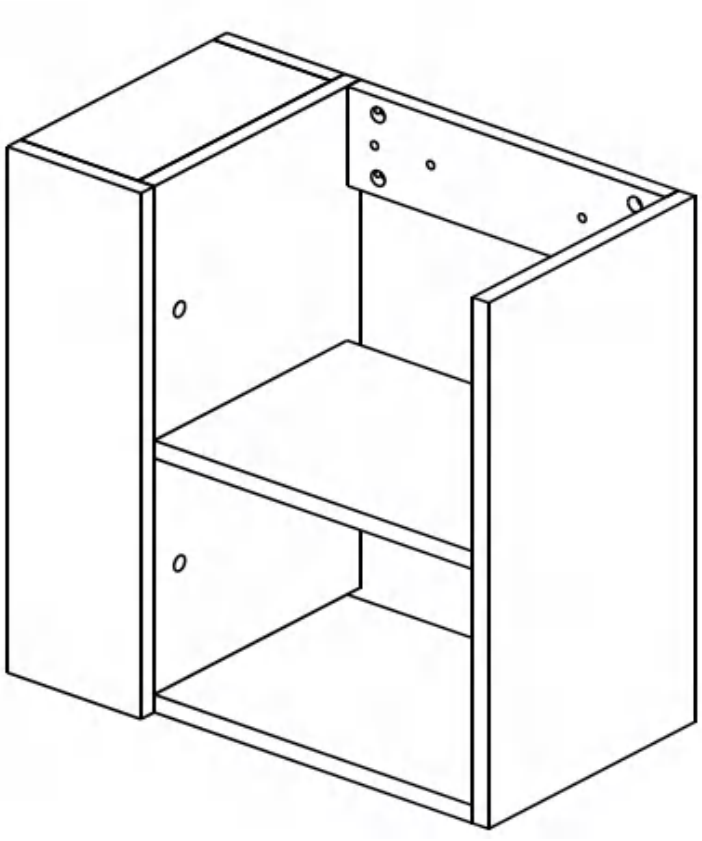


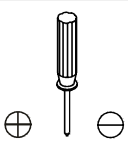
 H1x6	 H3x6	

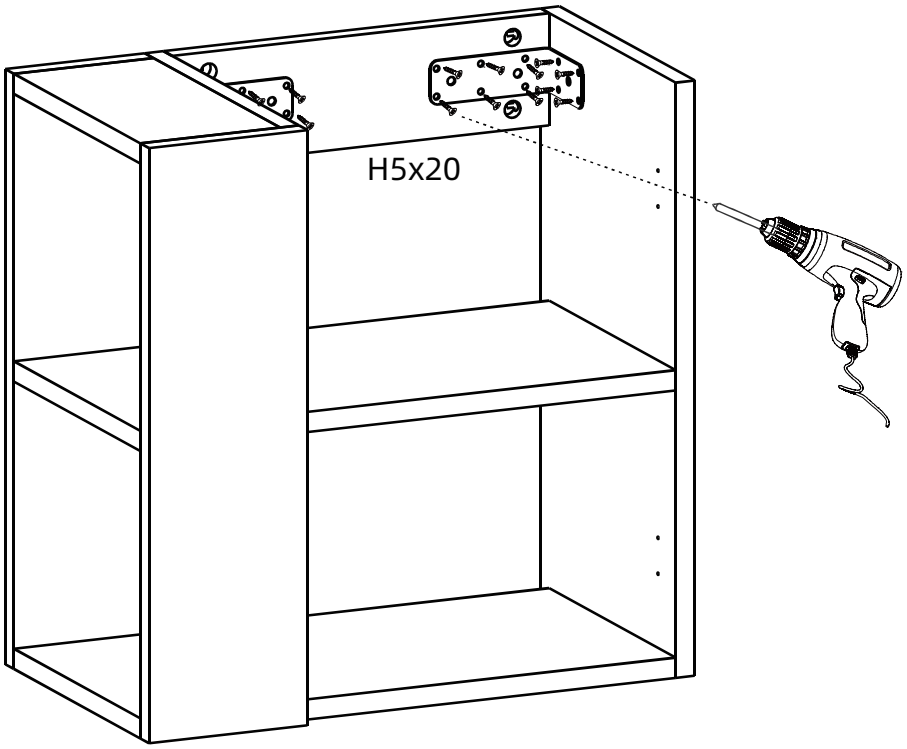

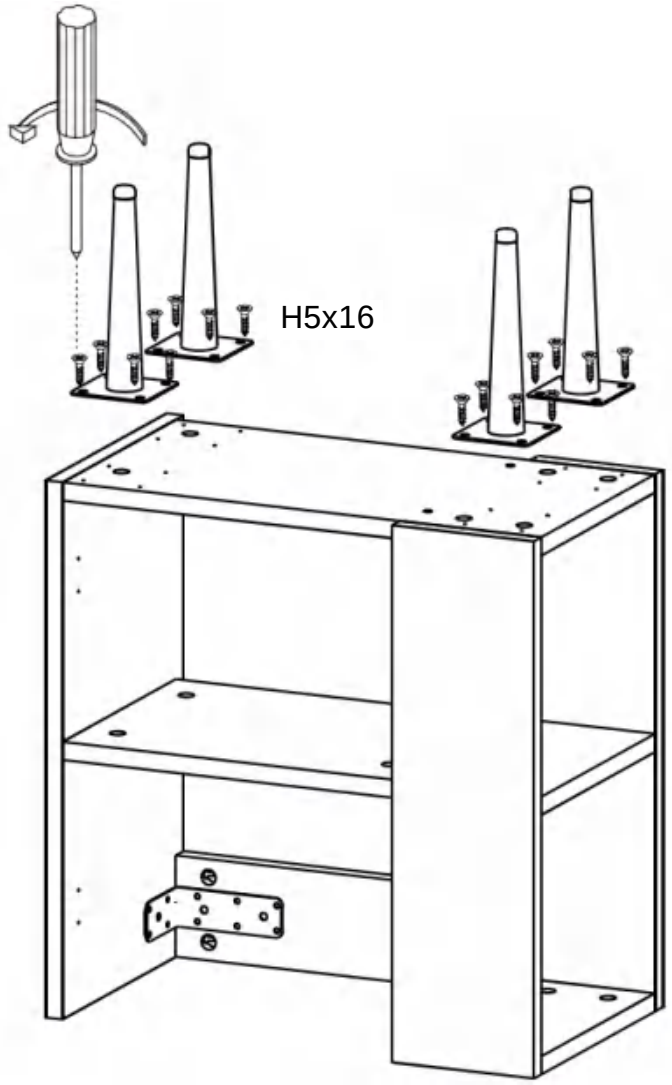


***This is a freestanding bathroom cabinet. The cabinet legs (H10) are optional and may be removed if the customer chooses to install the unit as a wall-hung cabinet.

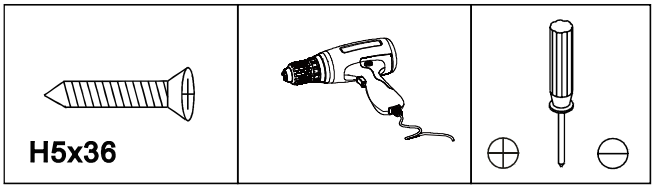

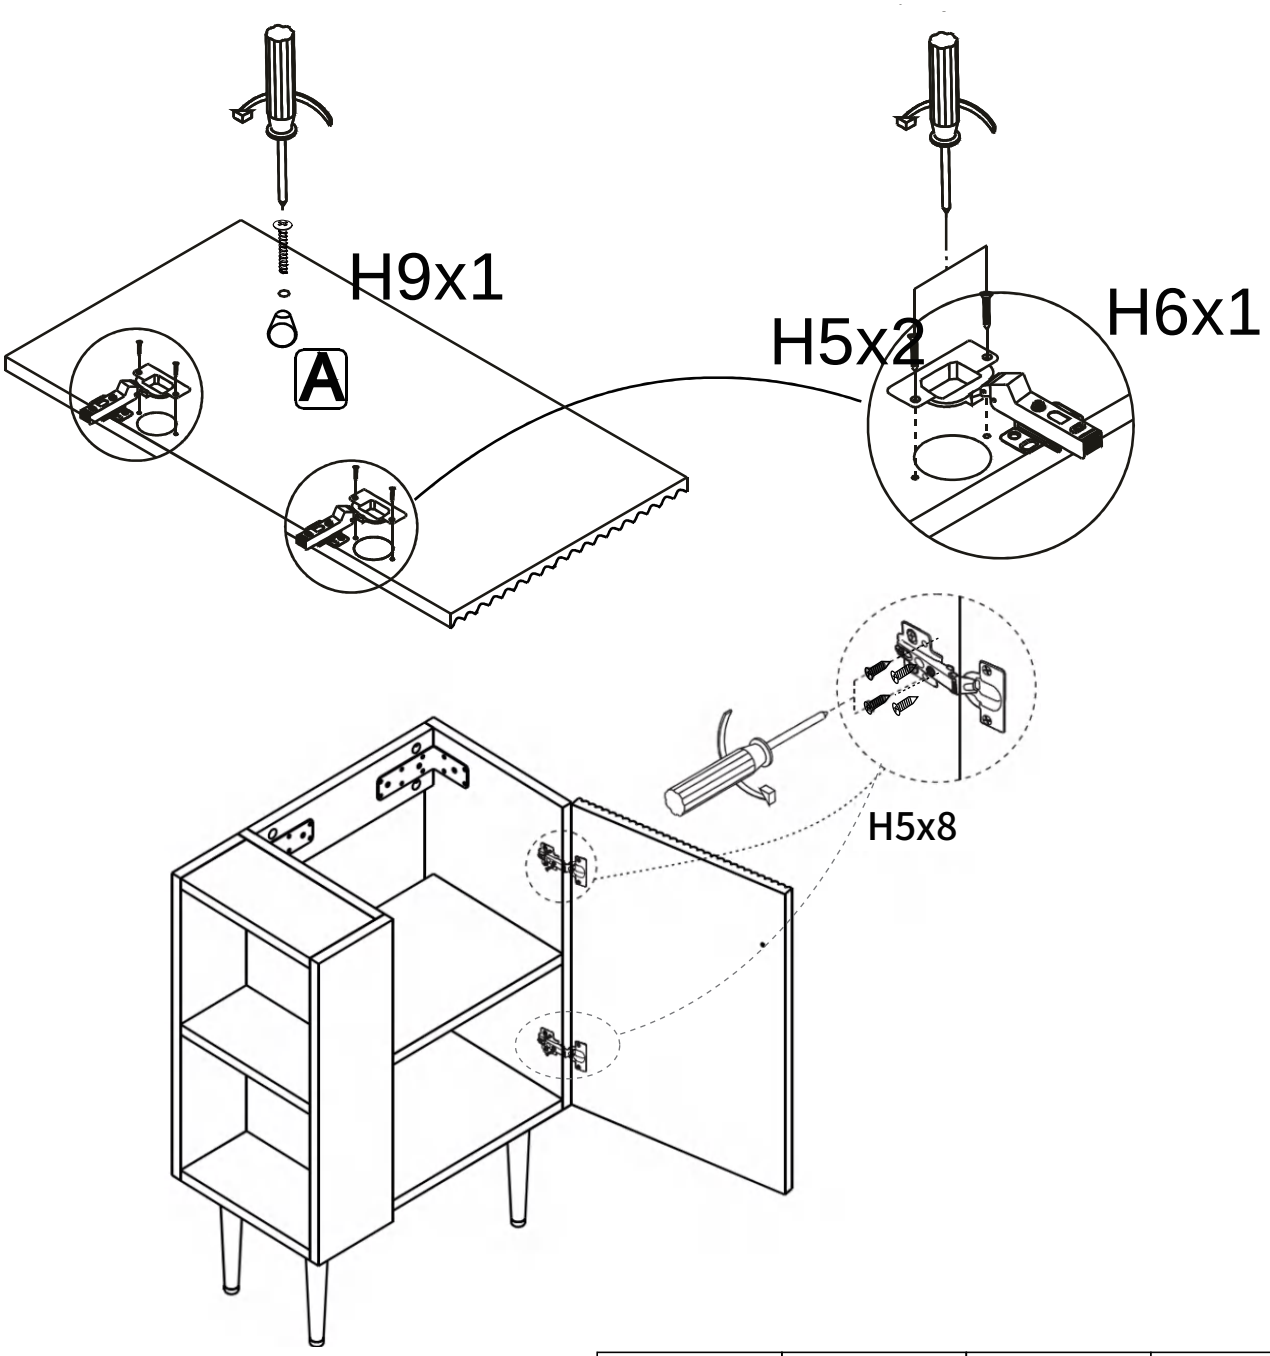


H5x12	H6x2	H9x1	

Adjust the door up and down to match the cabinet.

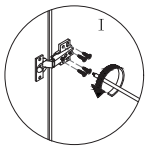

I:loosen the screw.

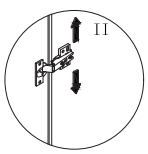


II:Adjust the upper and lower position.




III:tighten the screw.

Adjust the door left and right to match the cabinet for suitable crack of the door

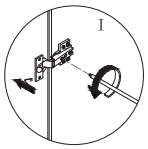


I:loosen the screw to keep hinge apply force toward the direction of arrow.

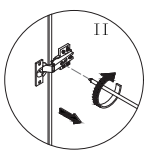


II:tighten the screw to keep hinge apply force toward the direction of arrow.


Adjust the door backwards and forwards to match the cabinet.

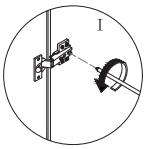


I:loosen the screw.

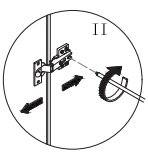


II:Adjust the distance between front and back.

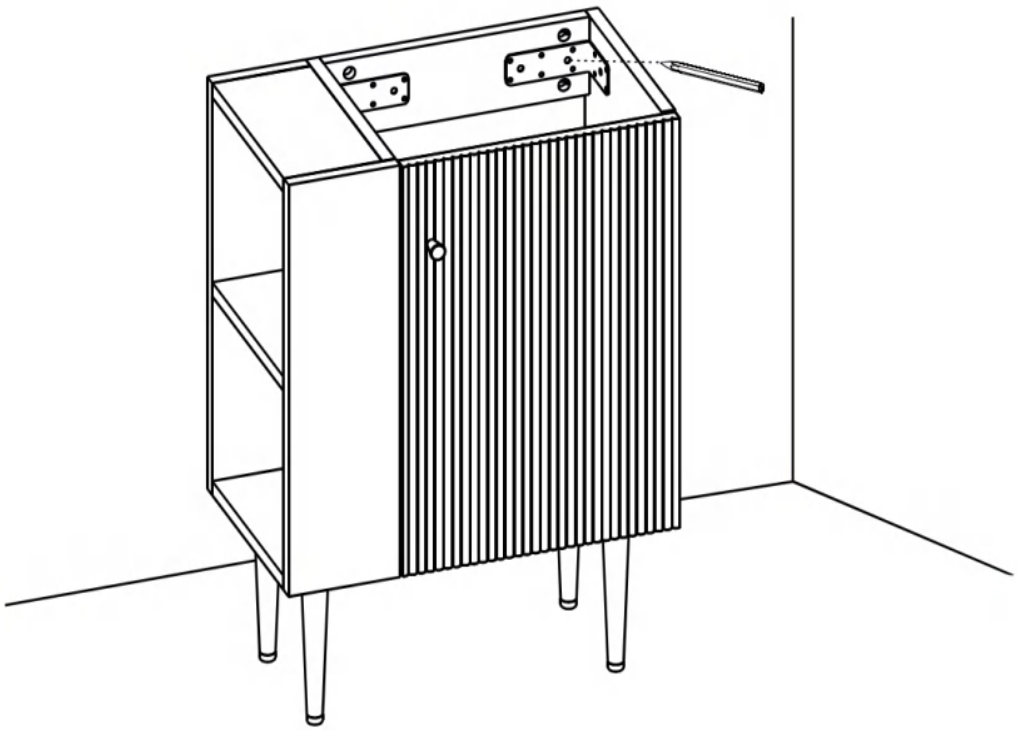

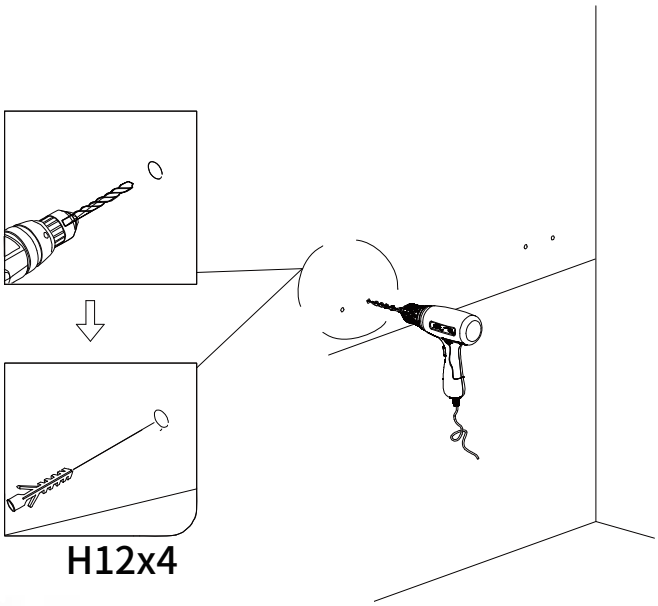



H12x4

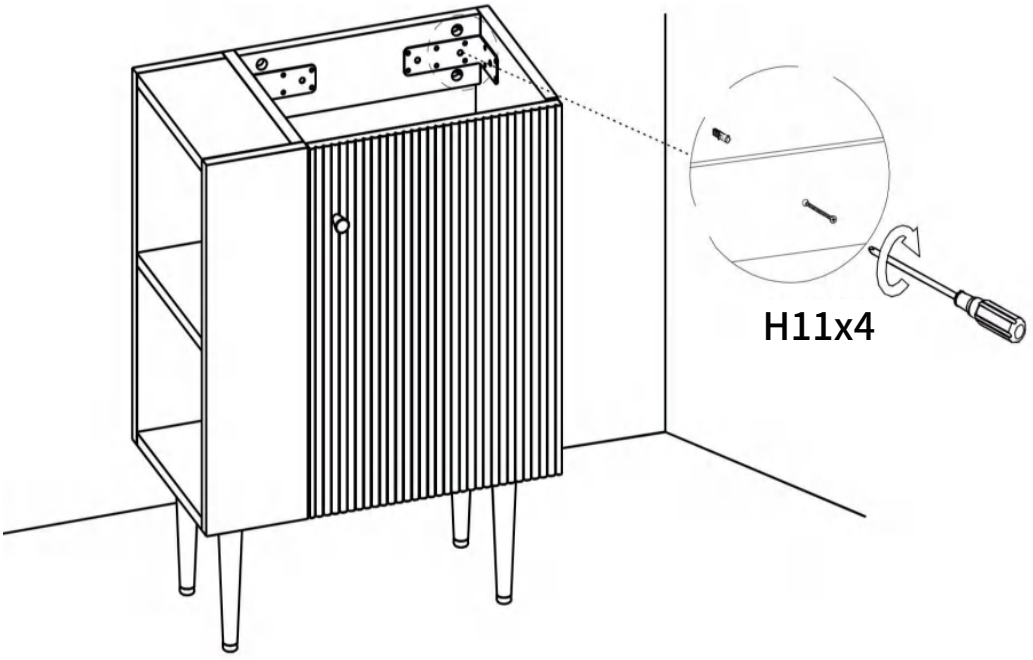

H11x4

H11x4	H12x4		

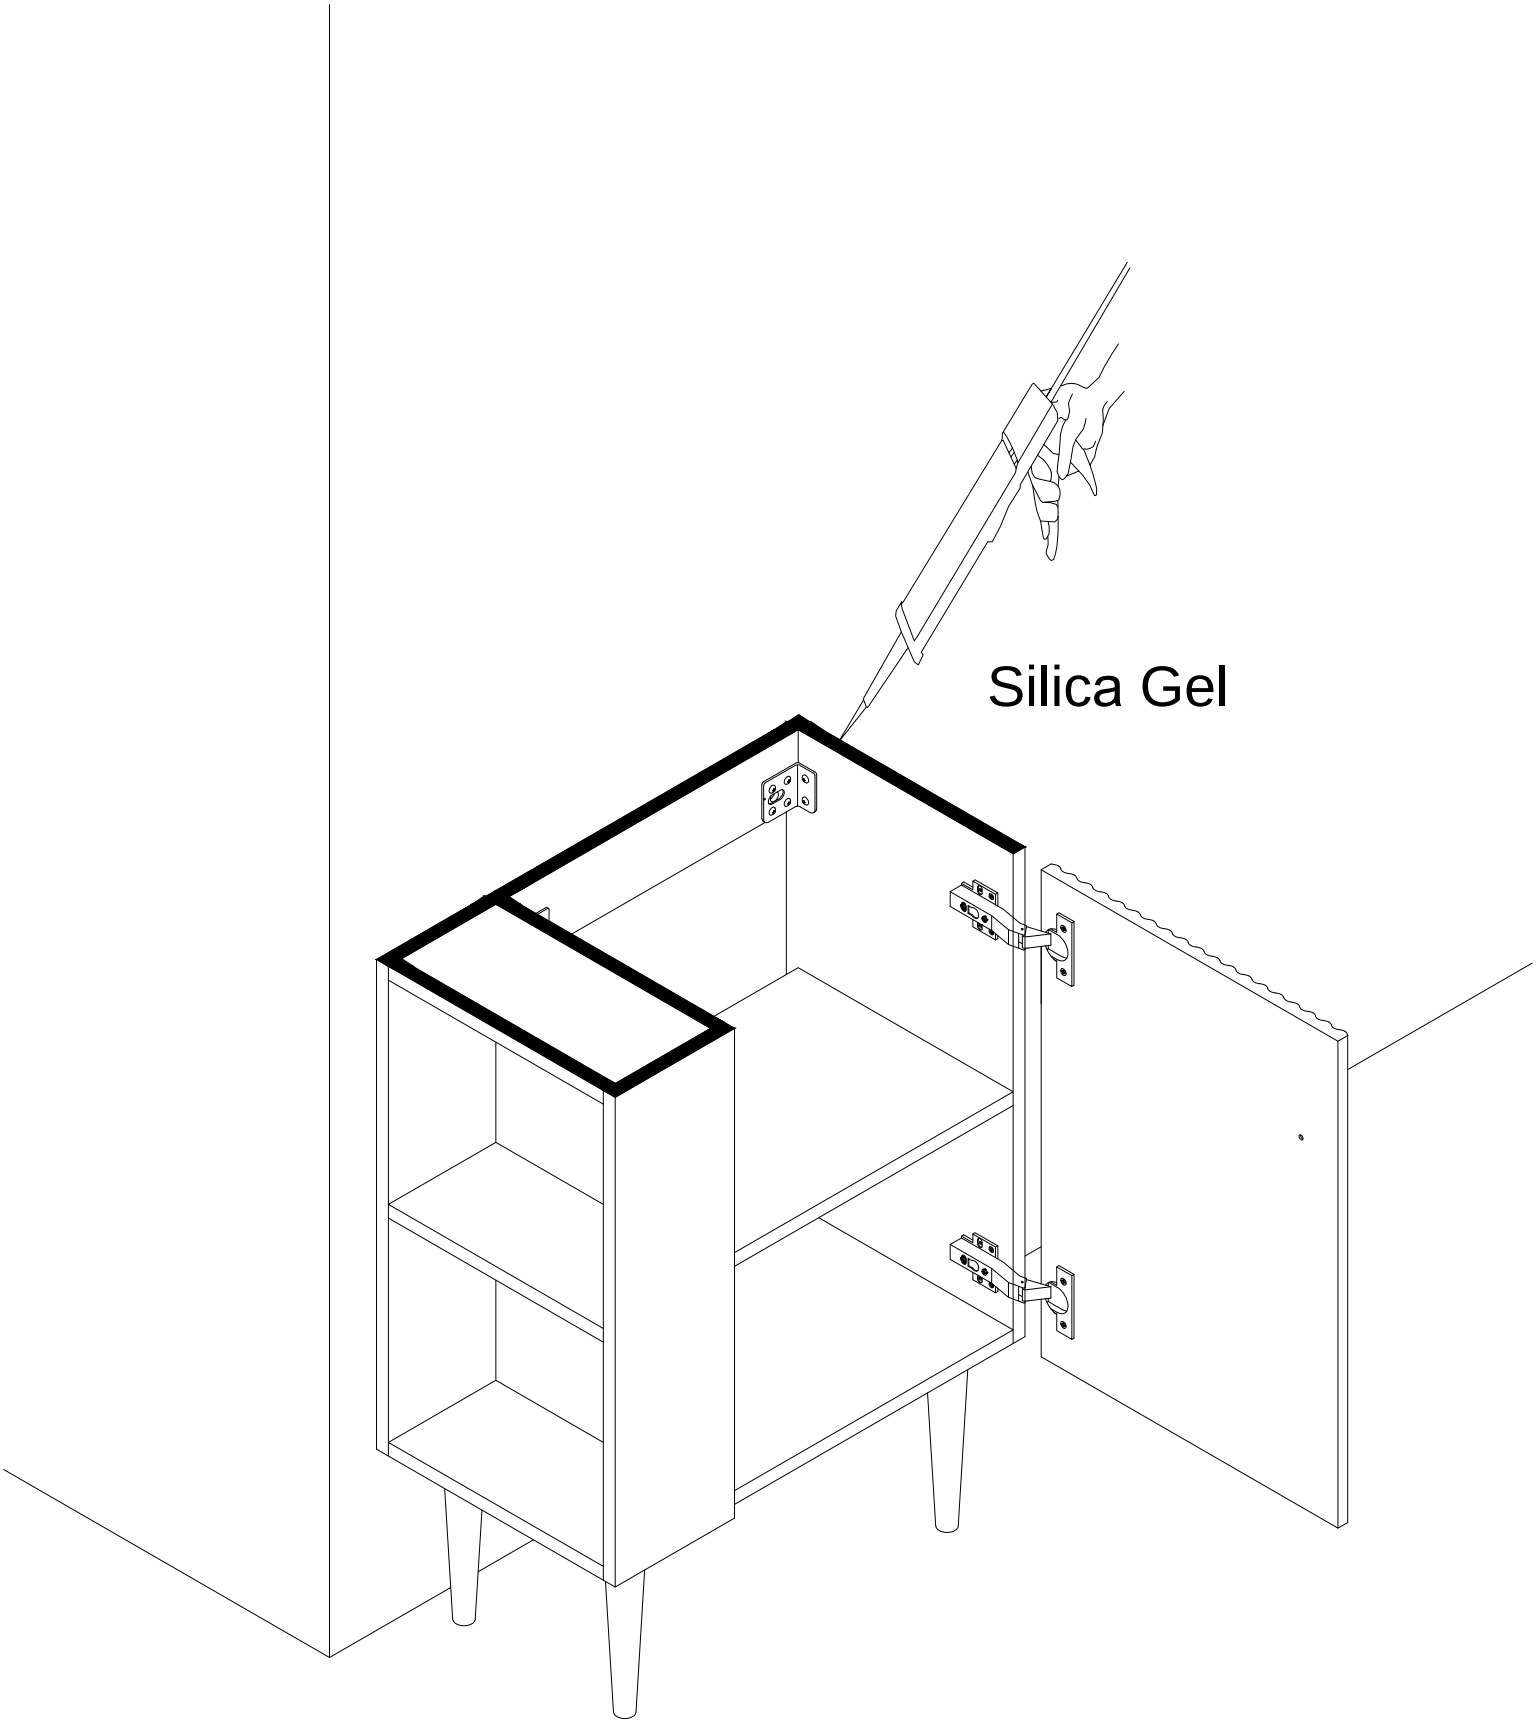
Silica Gel

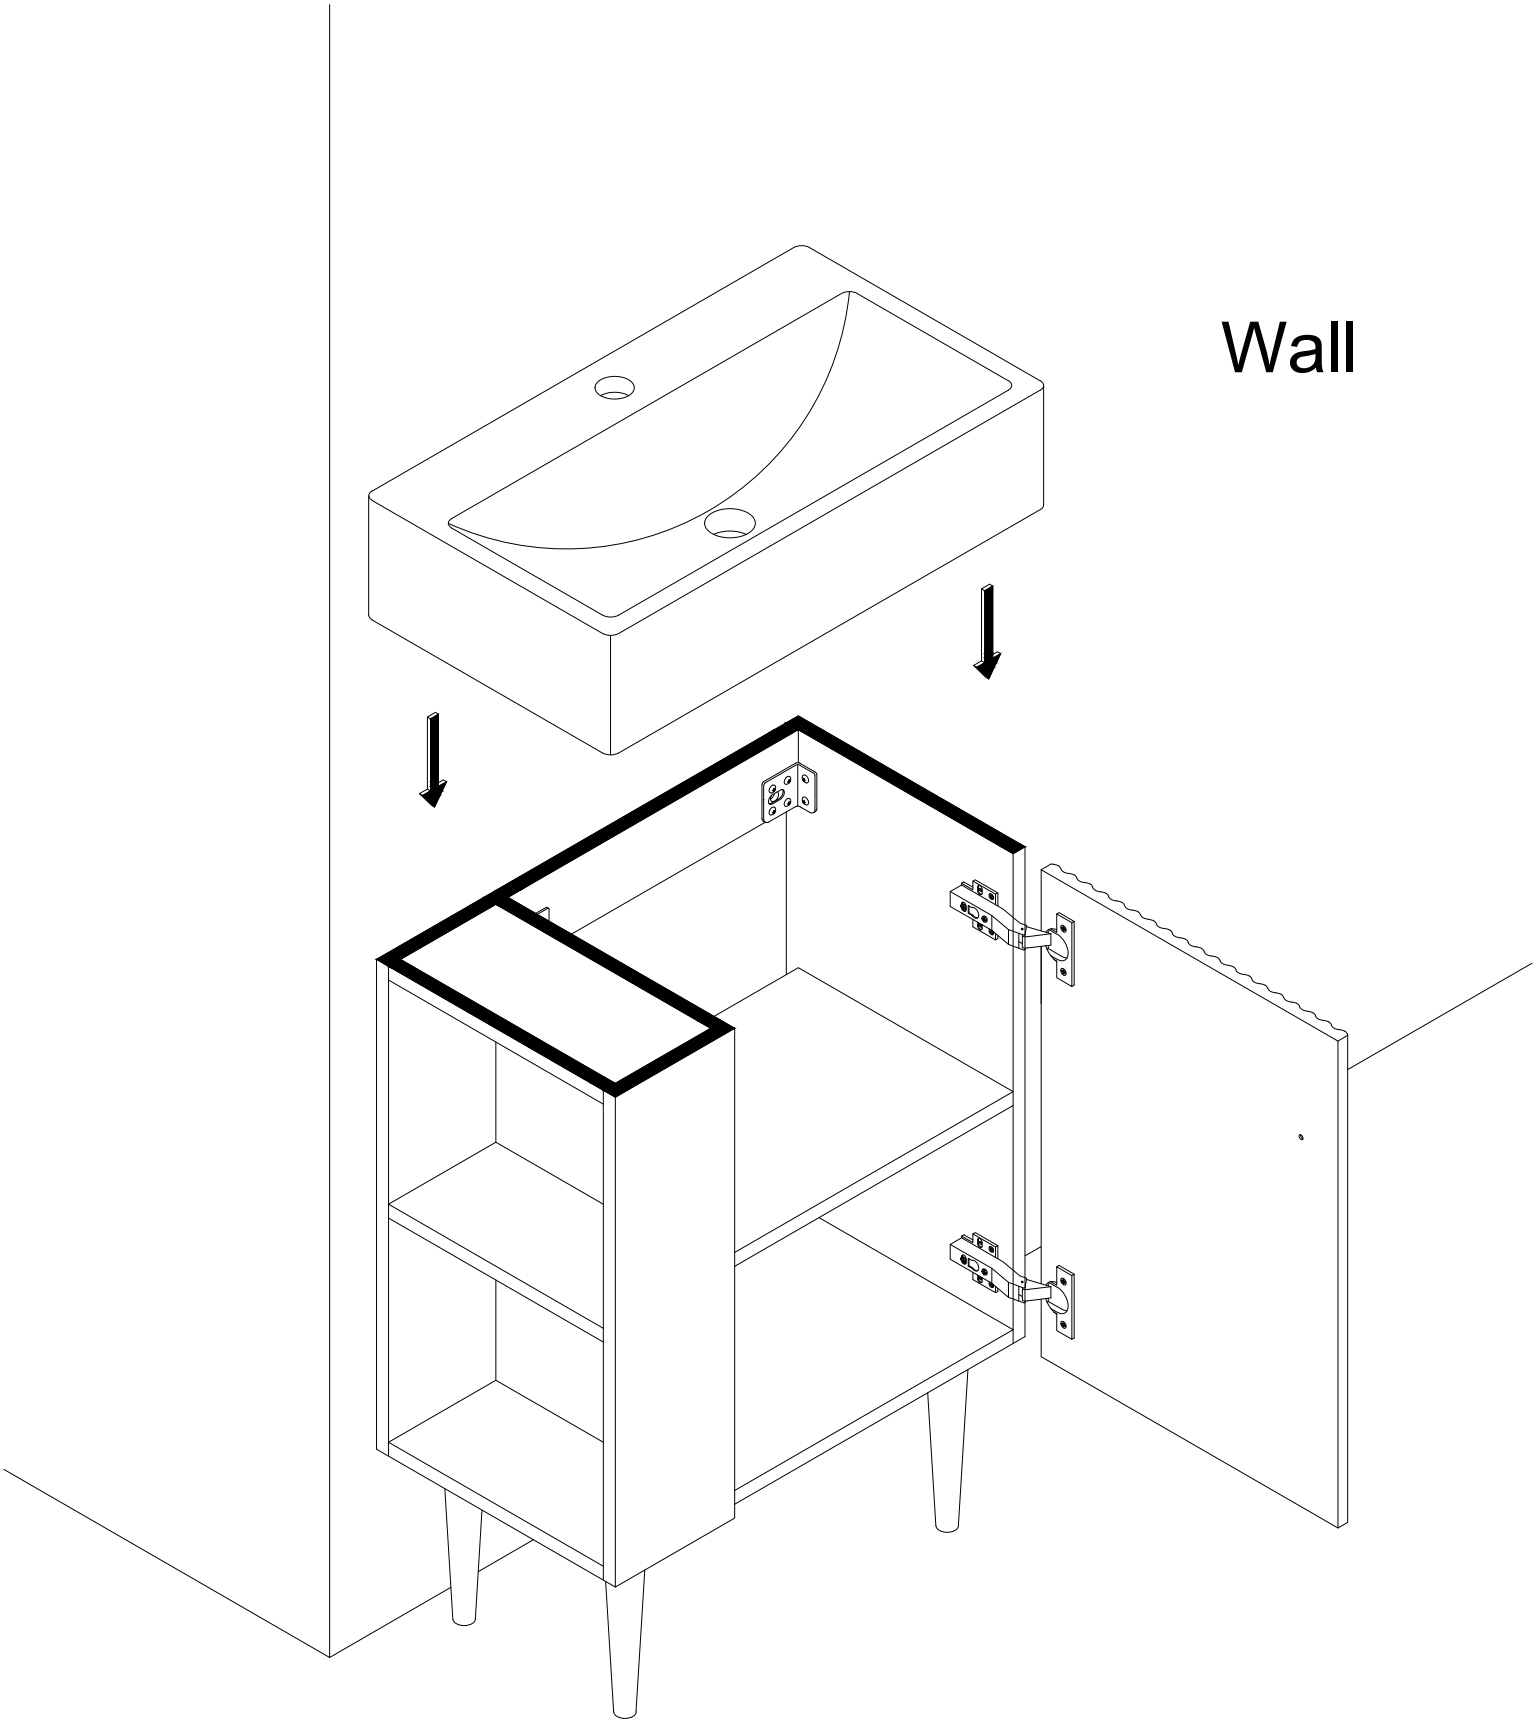
Wall