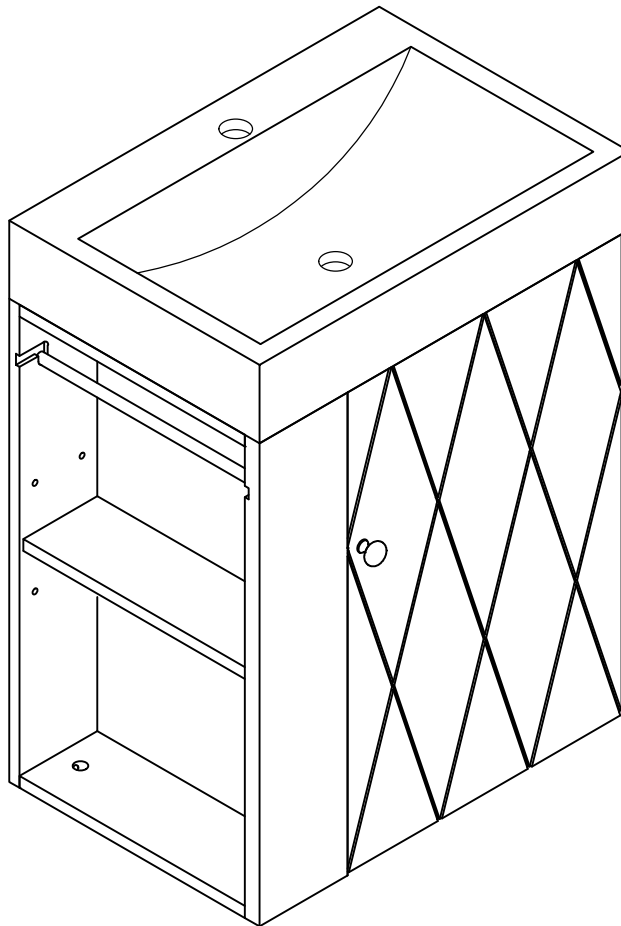


ASSEMBLY INSTRUCTIONS

20INCH BATH VANITY(COMBO)

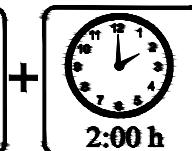
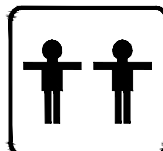
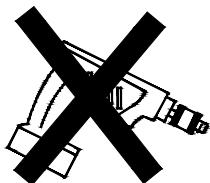


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


- 
- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
 - * Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions












	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

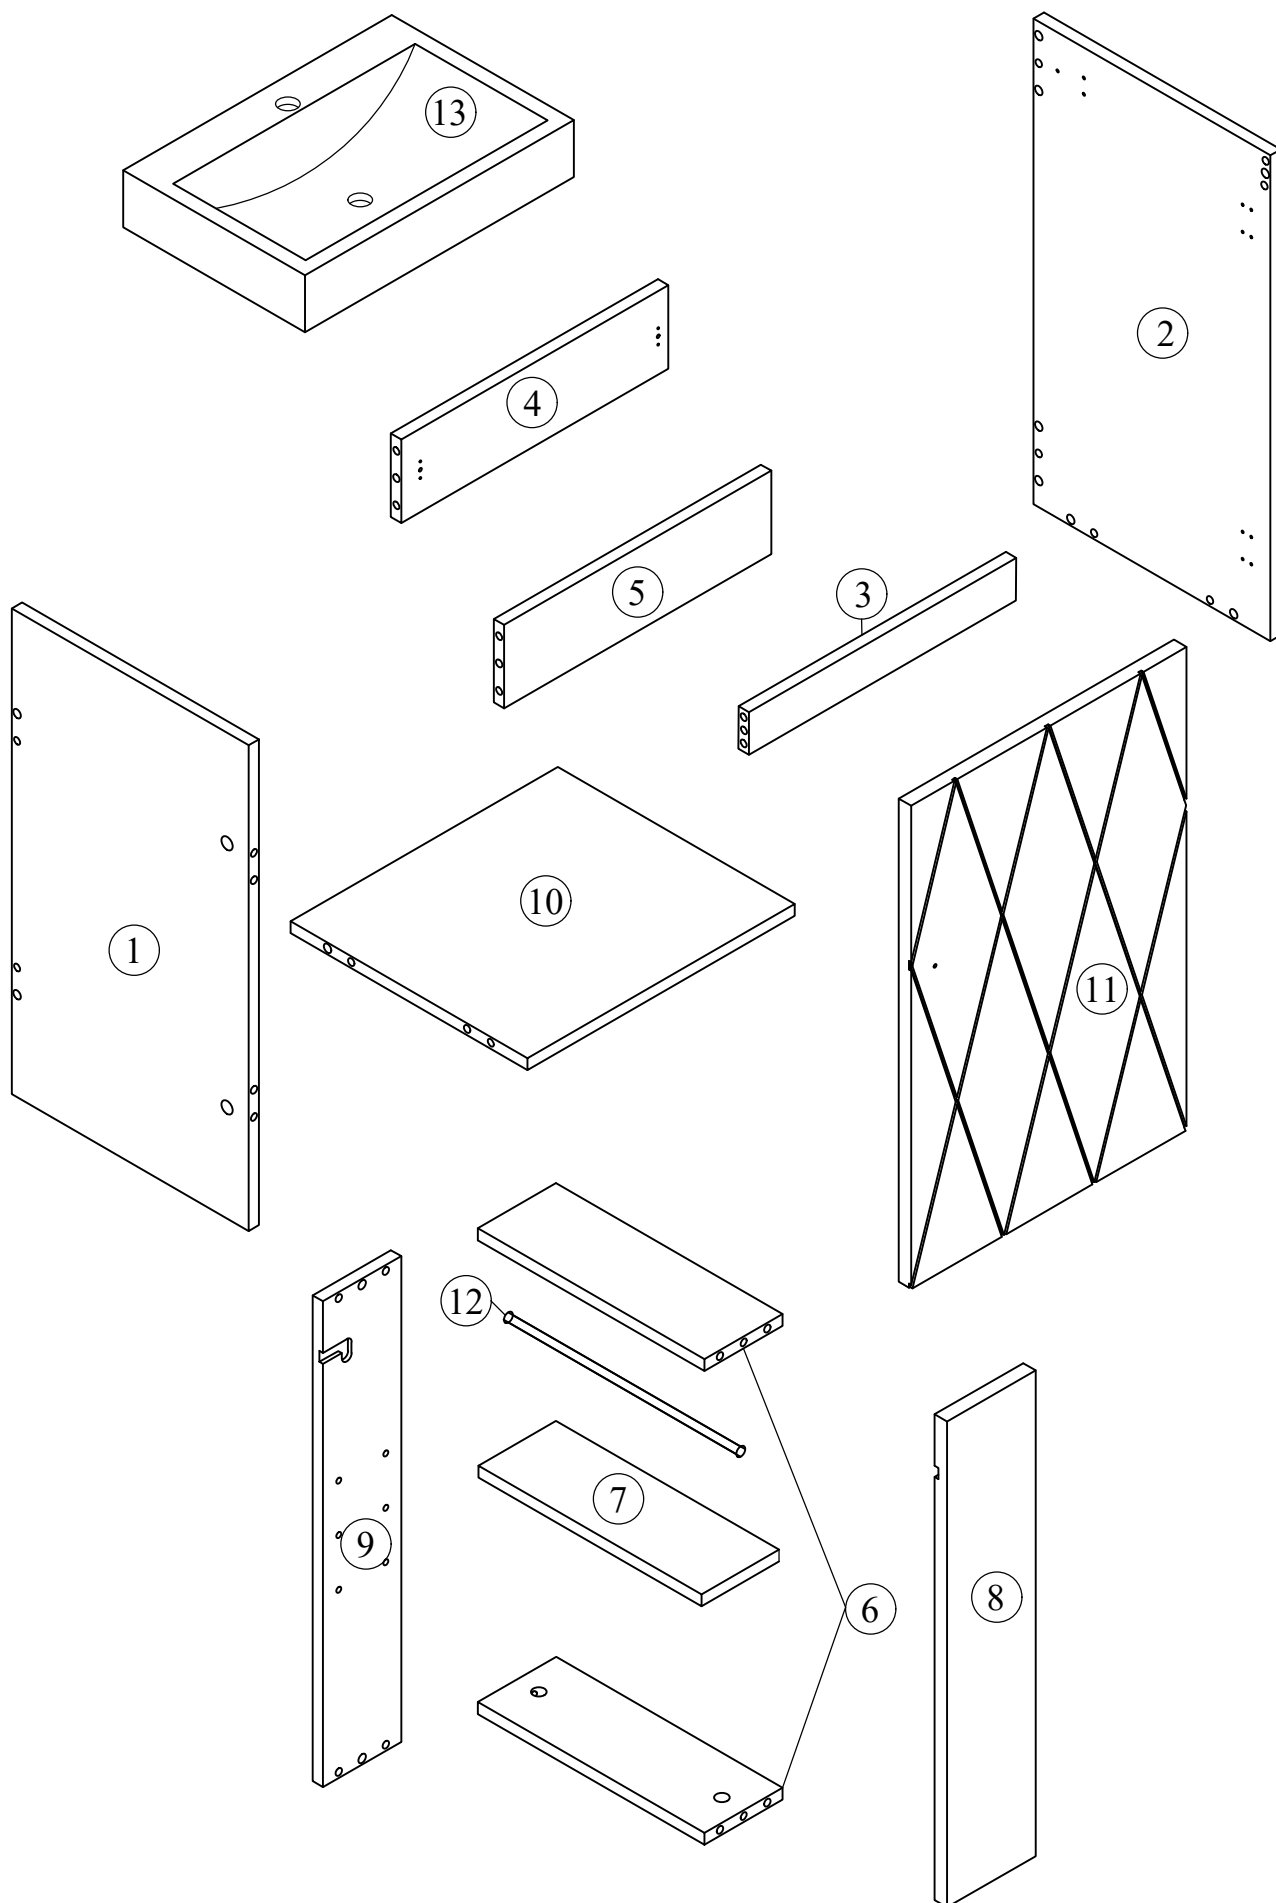Detail View - CABINET











Identifying the Hardware-Identify the hardware using the illustrations below.

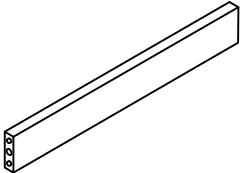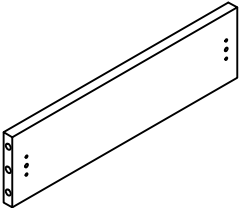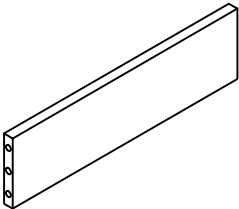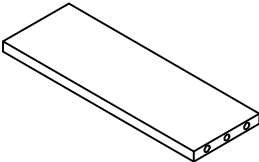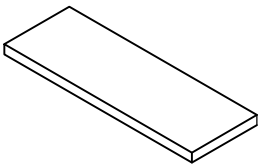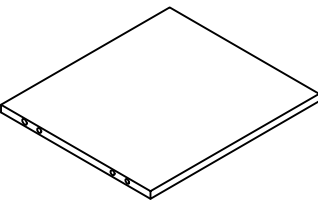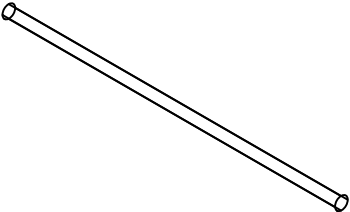
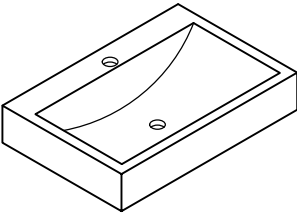
Part List


1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Panel Front - 1pc		Top Panel Rear - 1pc
5		6	
	Bottom Panel Rear - 1pc		Top & Bottom Panel Shelf - 2pcs
7		8	
	Adjustable Shelf - 1pc		Side Panel Shelf (R) - 1pc
9		10	
	Side Panel Shelf (L) - 1pc		Bottom Panel - 1pc
11		12	
	Door Face - 1pc		Round Bar - 1pc
13			
	Sink - 1pc		

Hardware List



A  ø6x35mm	B  ø14.5x12mm	C  Damping hinge (2pcs)
D  ø7xø3.5x12mm Flat head screw (12pcs)	E  ø6.2x31x19x16mm Laminate pad (4pcs)	F  ø8x30mm Wood dowel(24pcs)
G  ø10xø5x60mm Flat head screw (2pcs)	H  ø12x55mm Plastic stopper - 2pcs	I  ø1/4"x19x1mm Washer (2pcs)
J  82x60x45x3mm L wall hanging iron(2pcs)	K  ø7xø3.5x12mm Flat head screw (10pcs)	L  ø23x20mm Handle (1pc)
M  ø5/32"x22mm Handle screw (1pcs)		



STEP: 1

A	B	F
		
7PCS	7PCS	6PCS

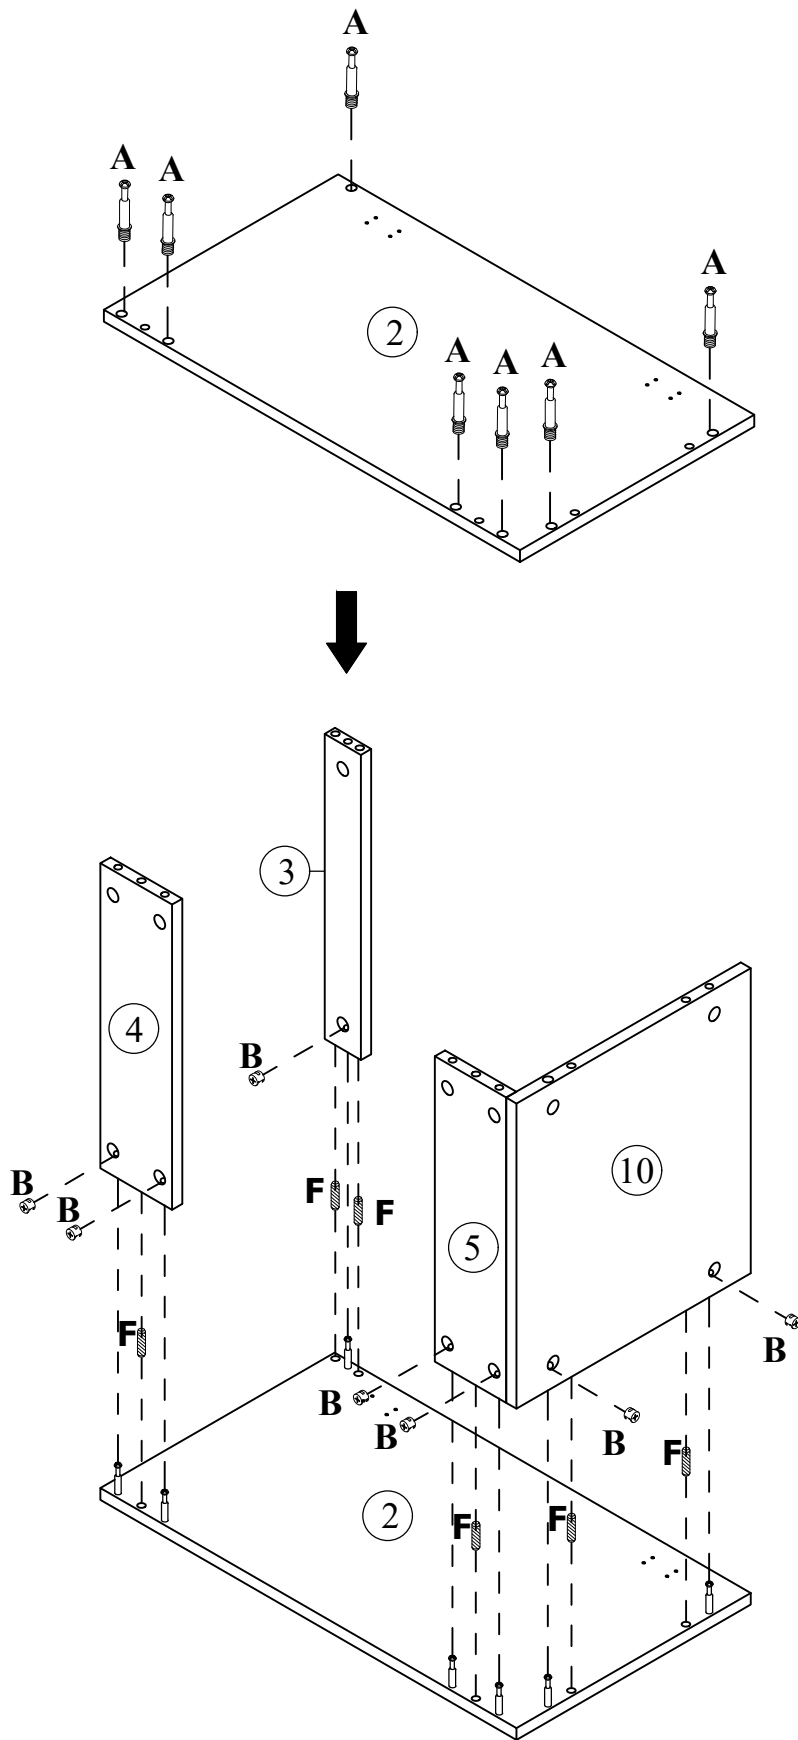


STEP: 2


A	B	F
		
9PCS	7PCS	6PCS

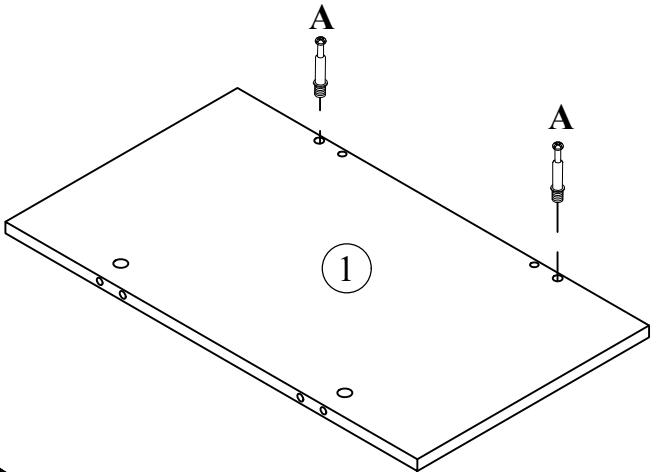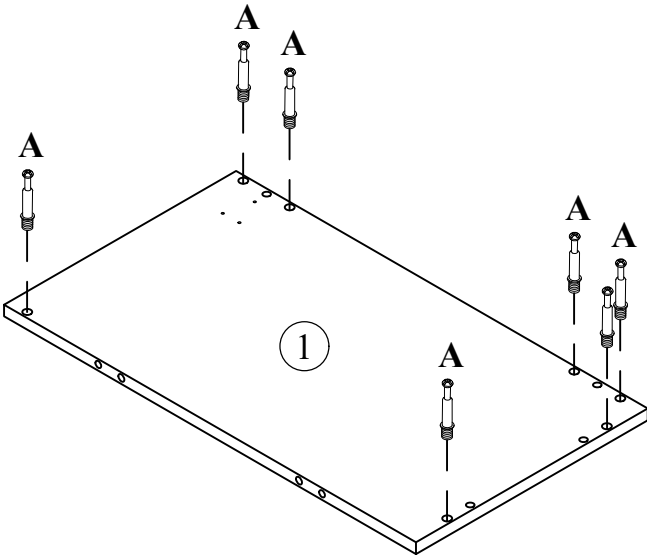



Turn over and install screw(C)

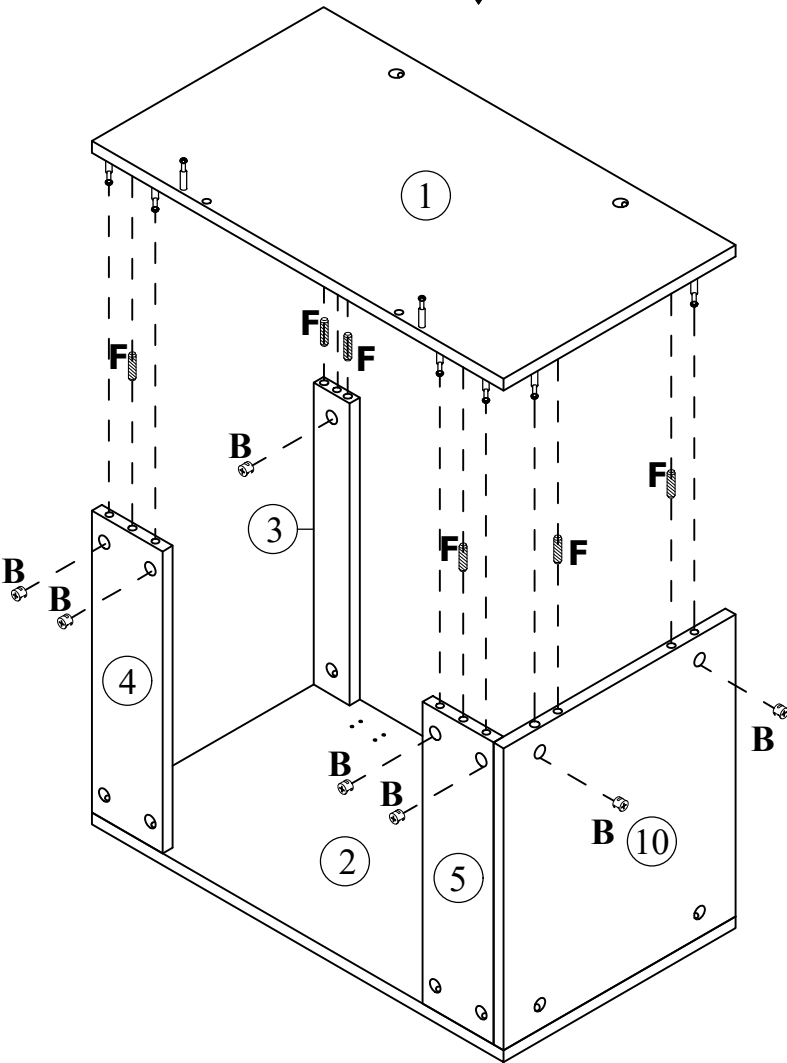


STEP:3

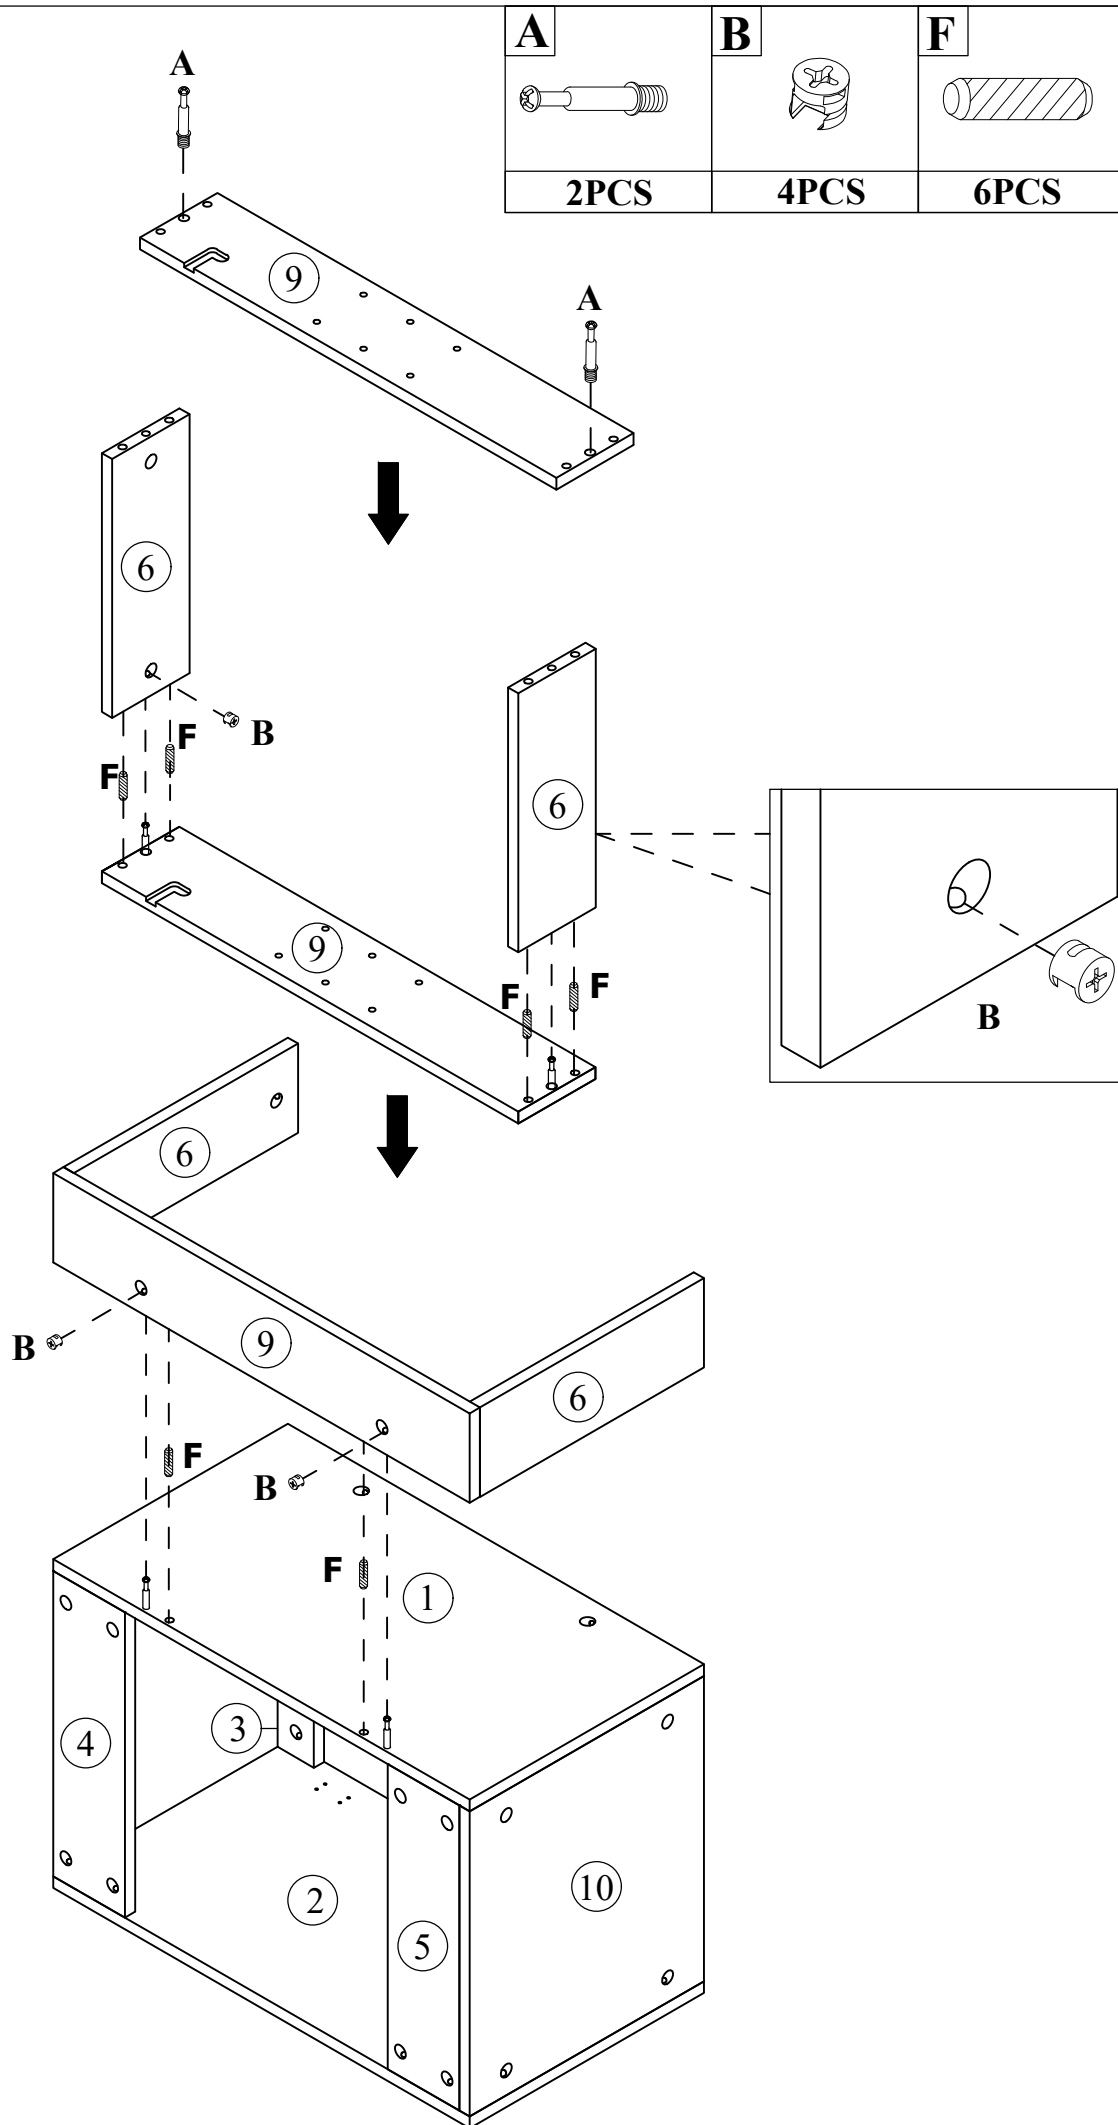



STEP:4

A	B	F
		
4PCS	4PCS	6PCS

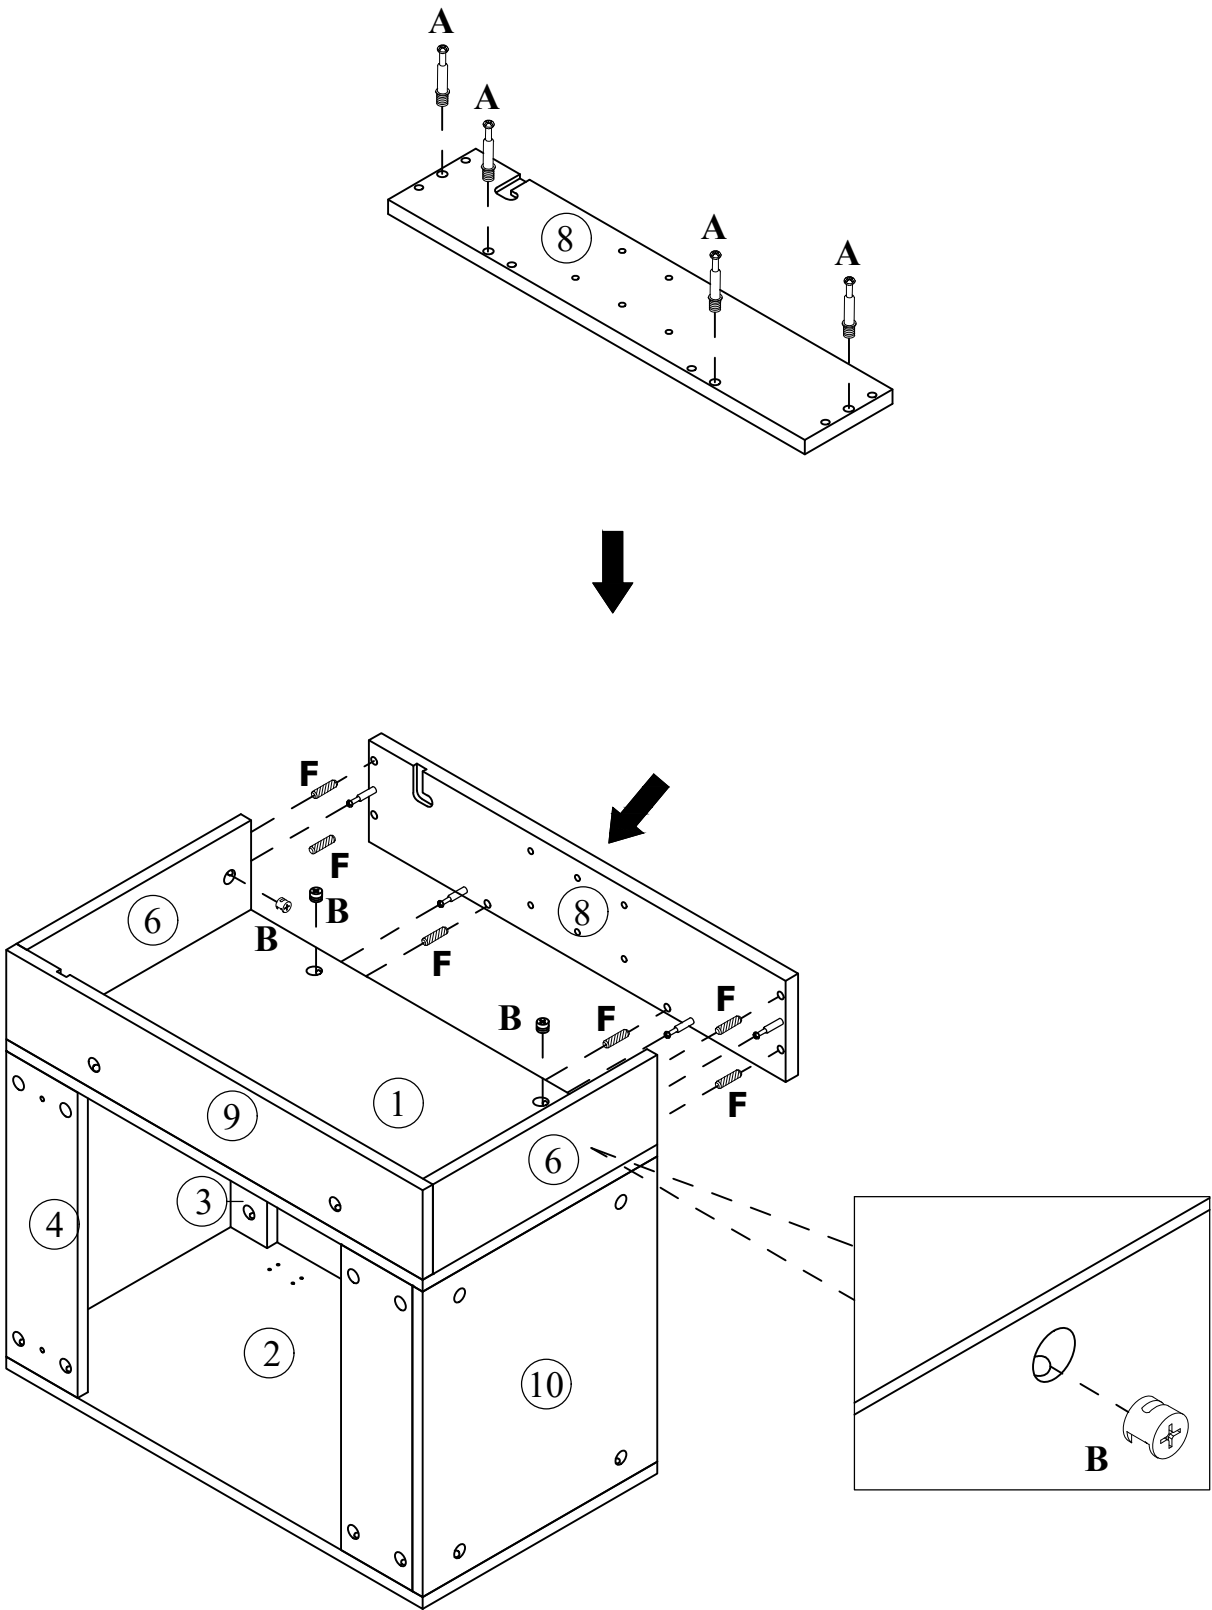


STEP:5

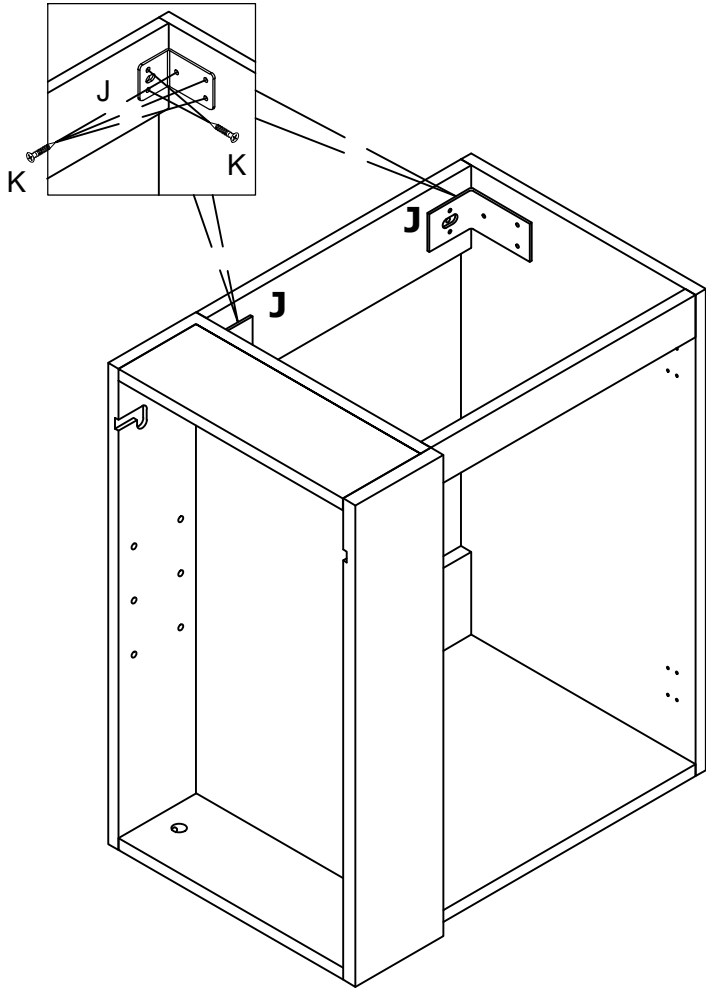




J	K
	
2PCS	10PCS


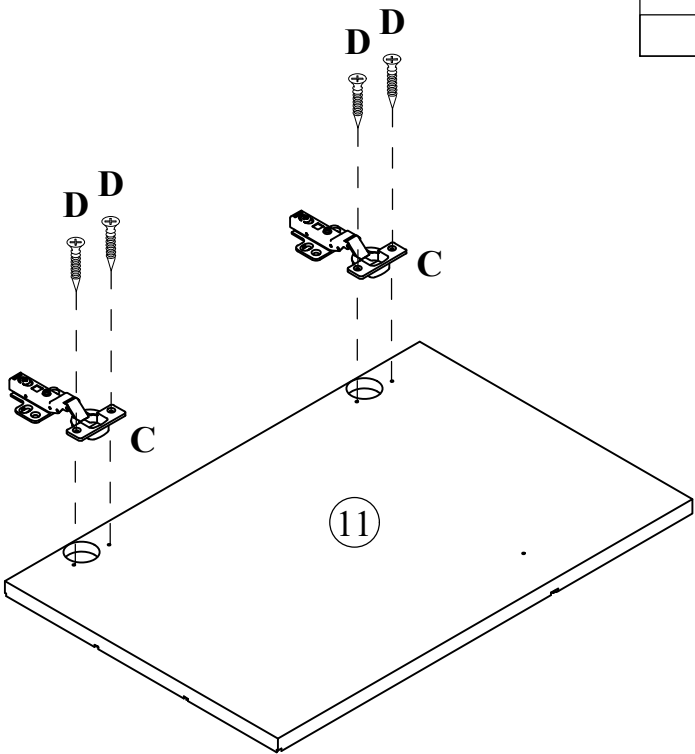
STEP:6



C	D
	
2PCS	4PCS


STEP:7

D	L	M
		
8PCS	1PC	1PC

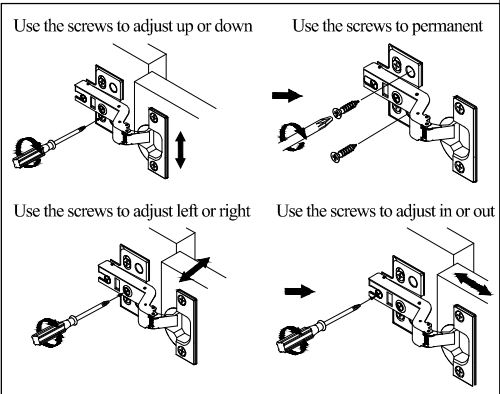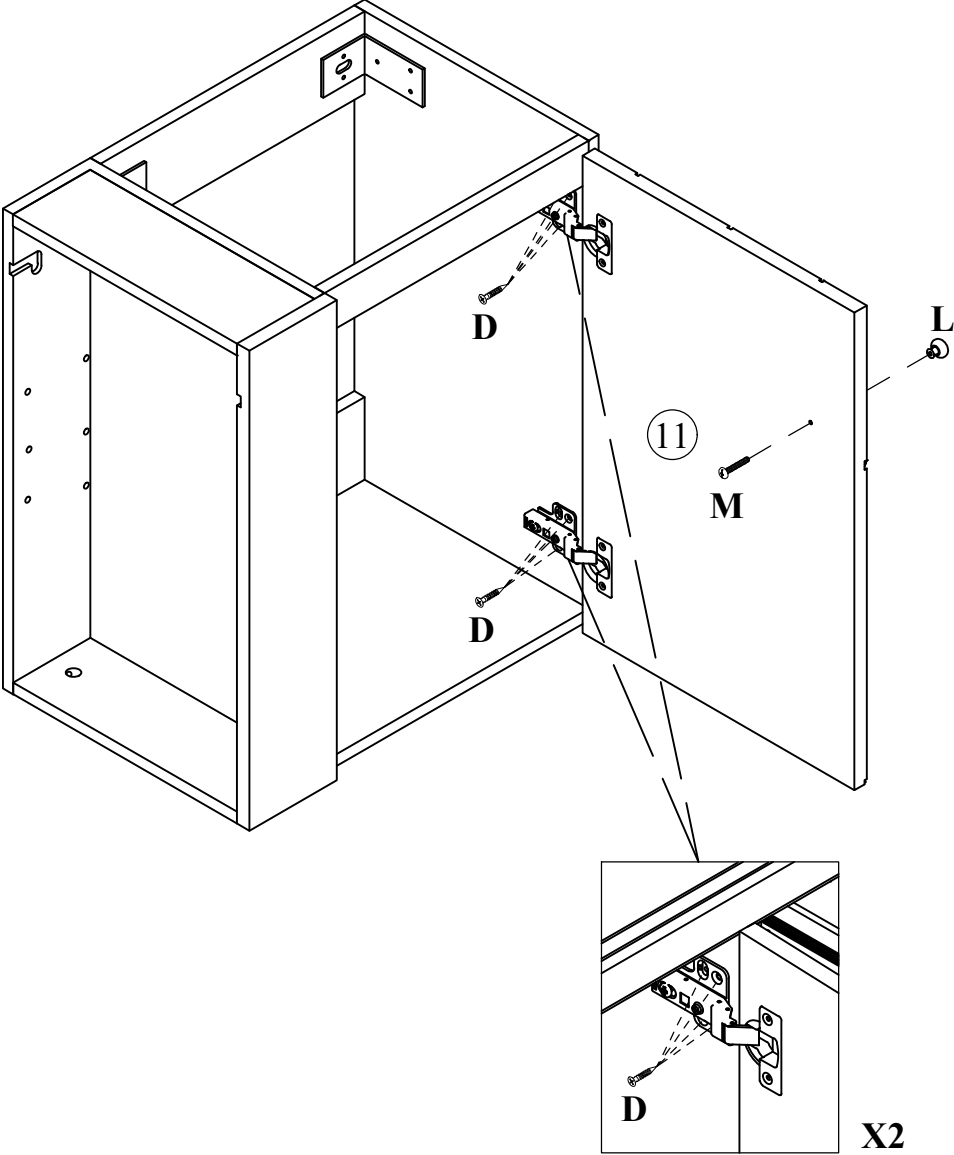


STEP:8


E




4PCS



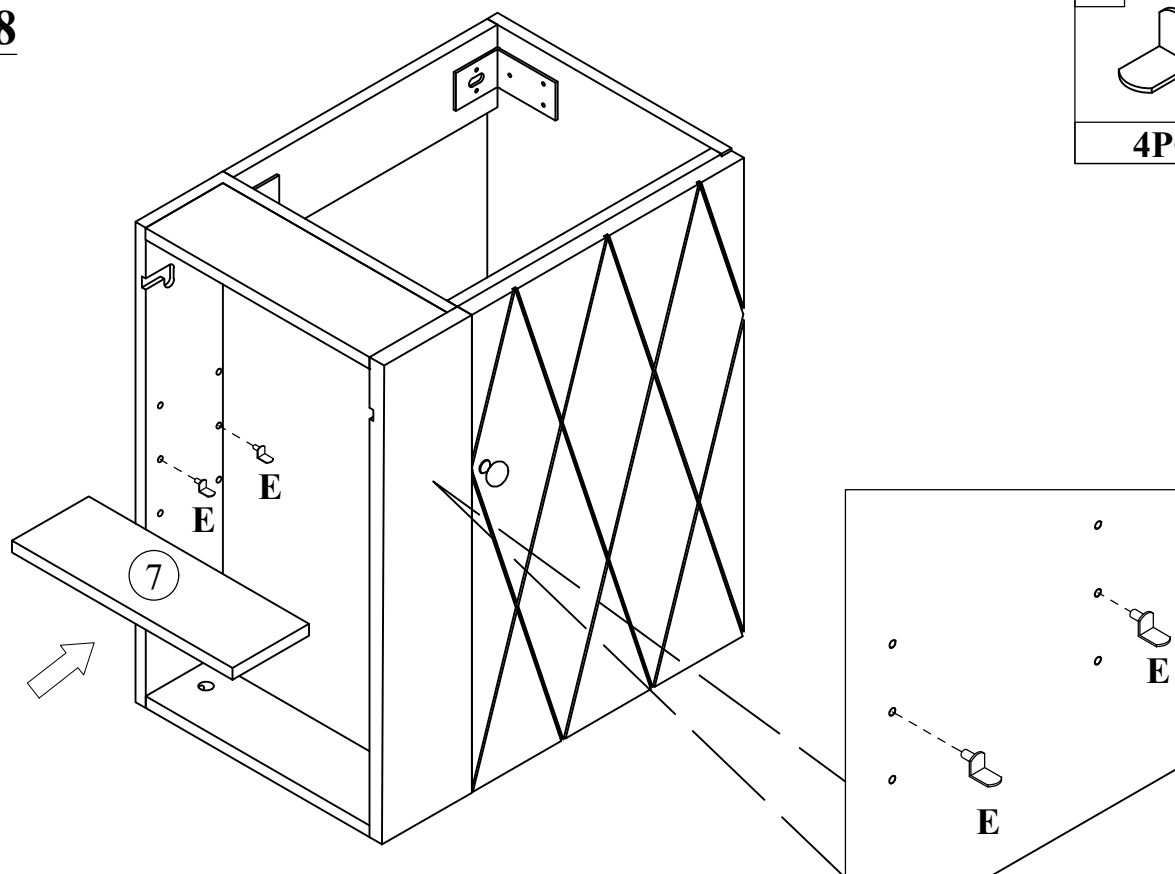


STEP:9

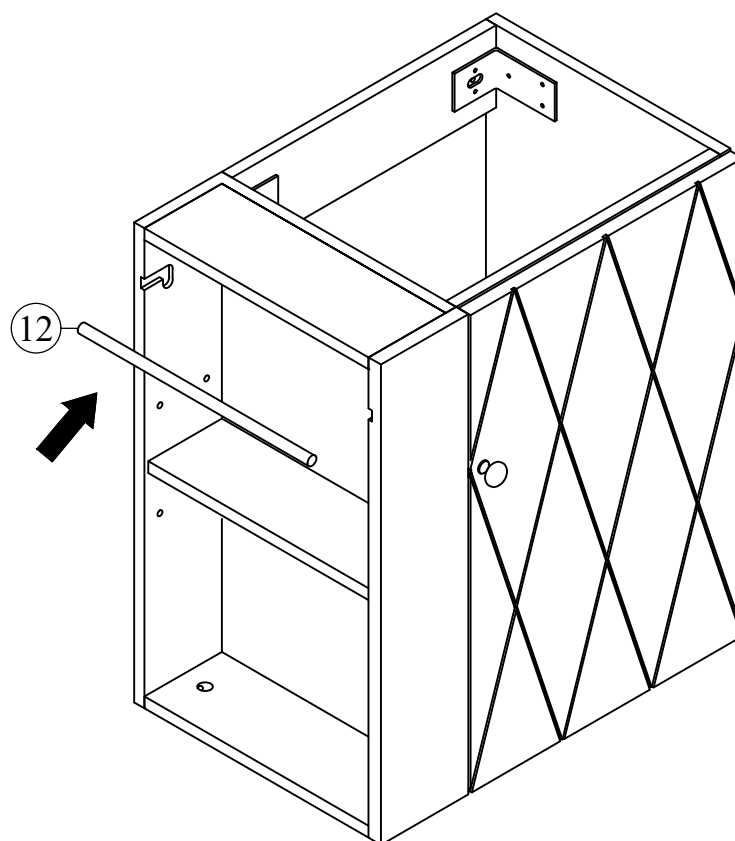

STEP:10

G	H	I
		
2PCS	2PCS	2PCS

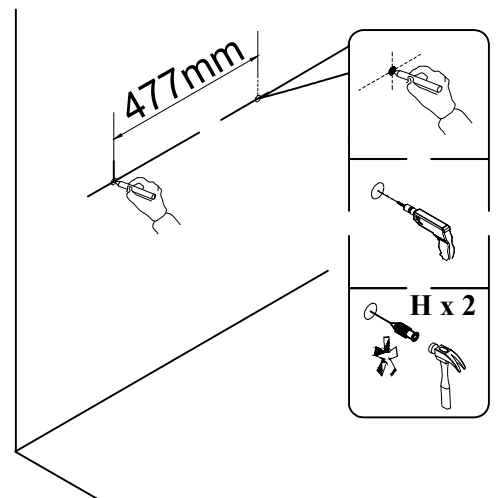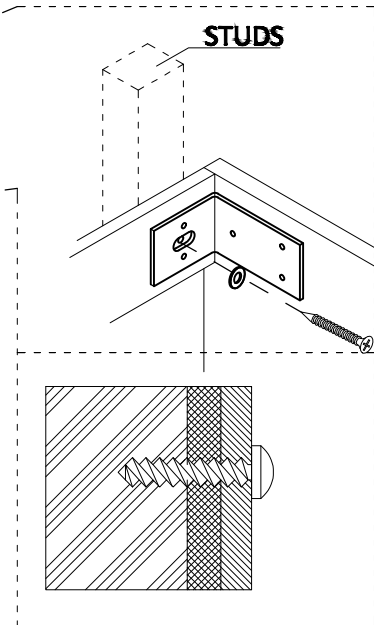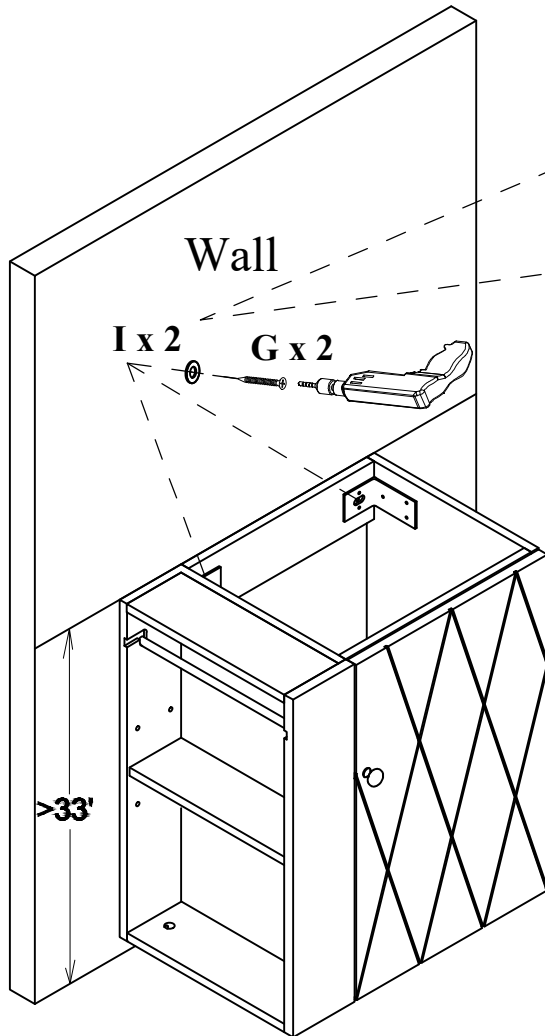


WARNING:
INSTALLATION METHOD OF FLOATING VANITY HAS BIG RELATION
WITH THE WALL STRUCTURE.



To get the best installing effect, please follow as below:
Please screw through the "L" shape hanger if there is exactly wall stub behind the
hanger.

STEP: 11

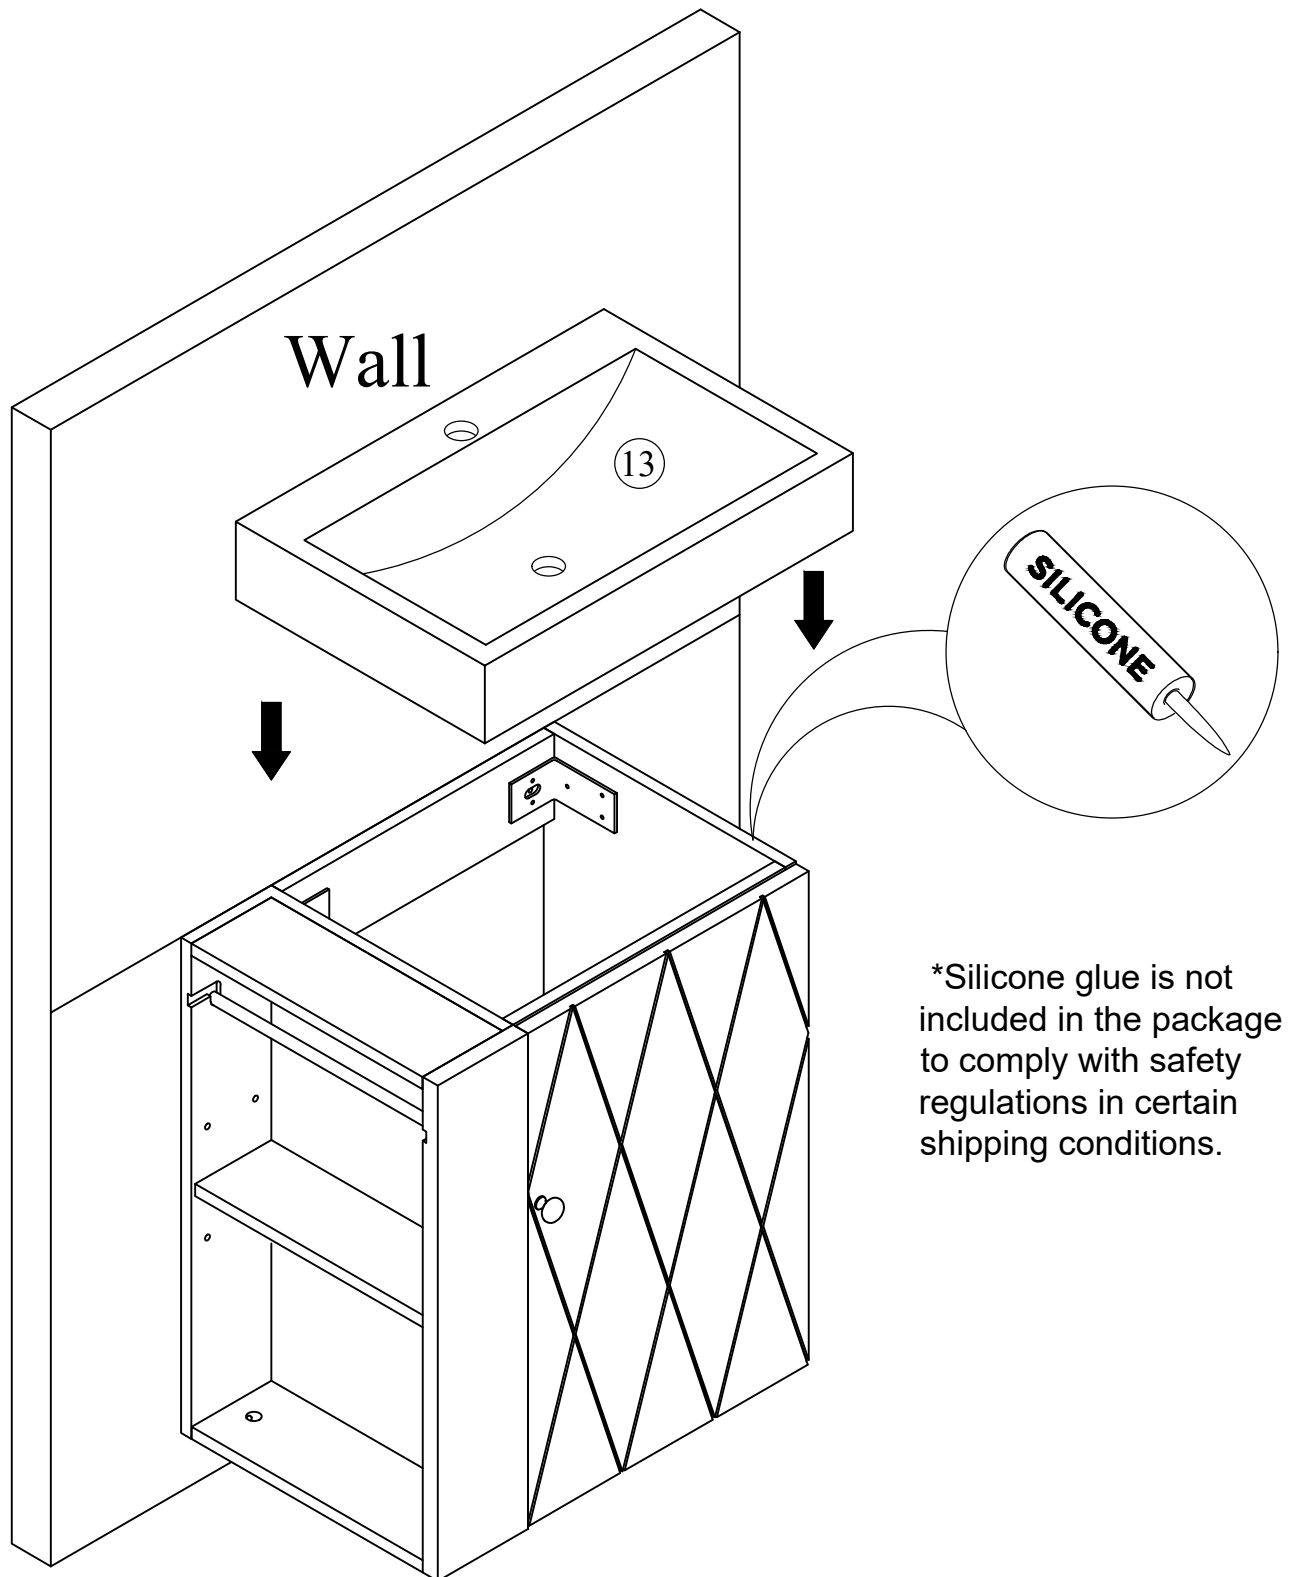
Install the sink on the cabinet with glue.
Let stand for 24 hours



STEP: 12

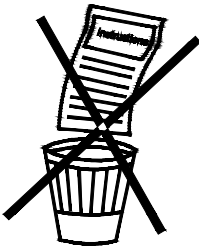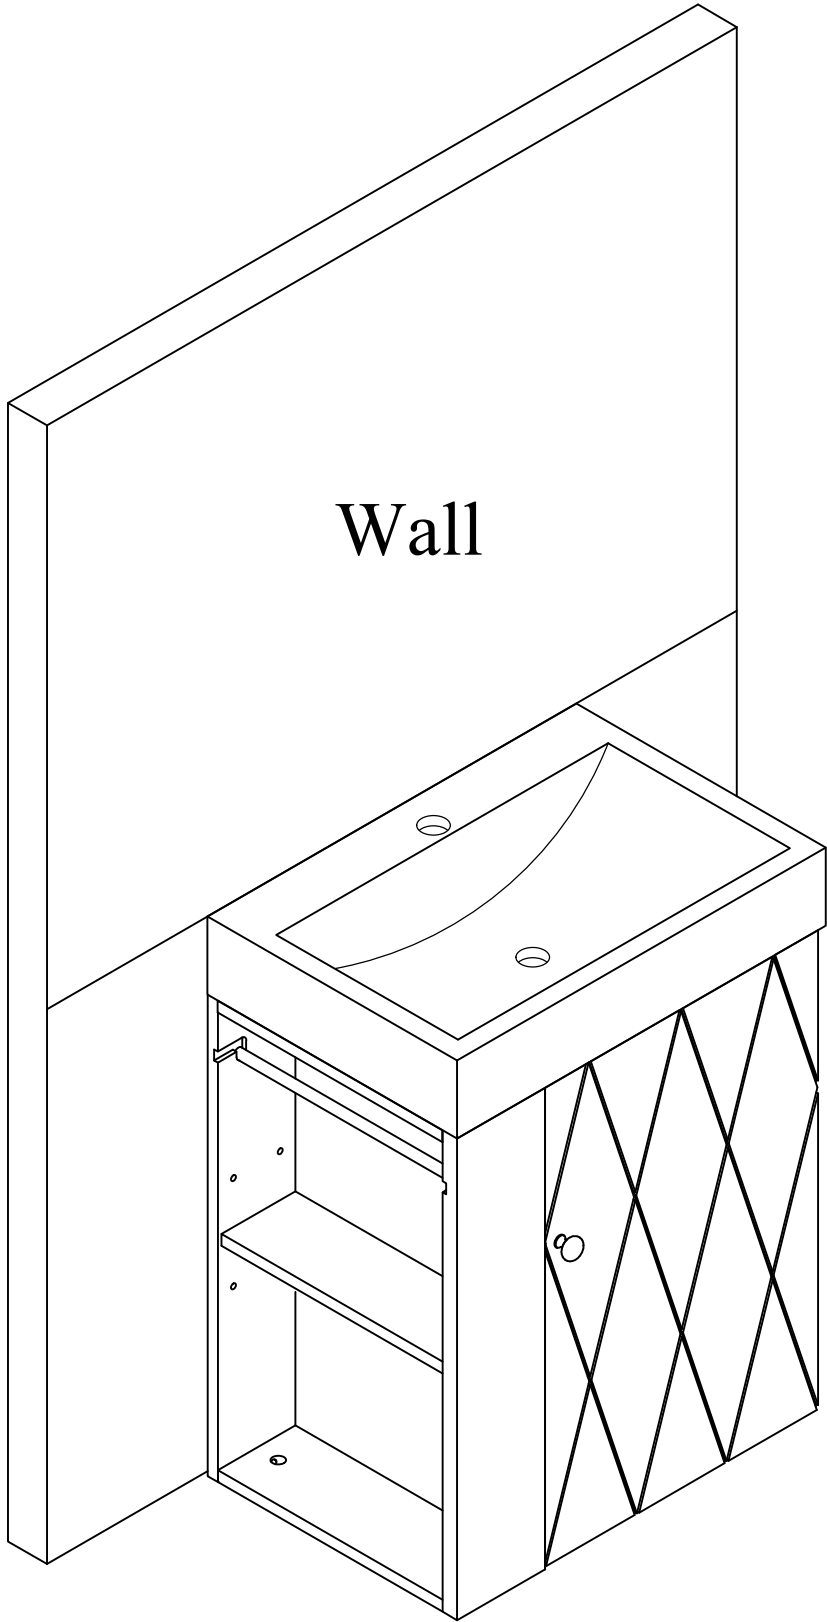


HINGE ADJUSTMENTS

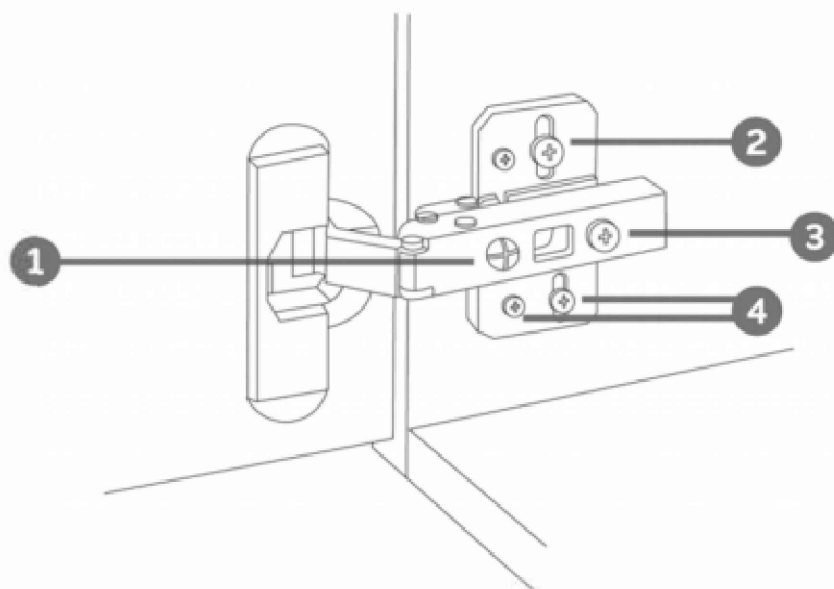


① Sideways / Tilt adjustment

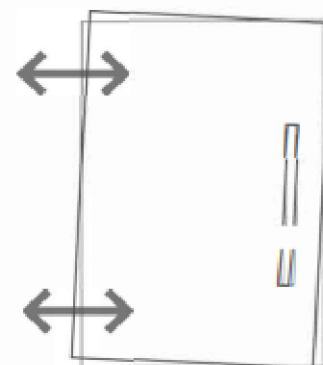Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet



② ④ Height adjustment

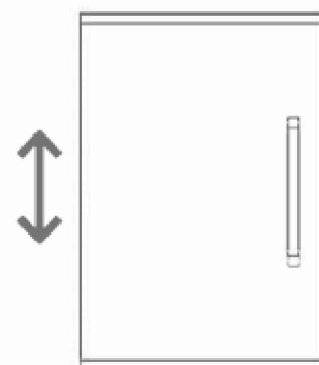While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down



③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

