
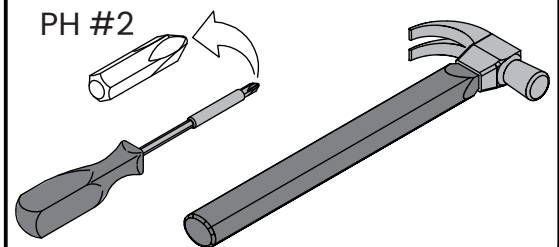
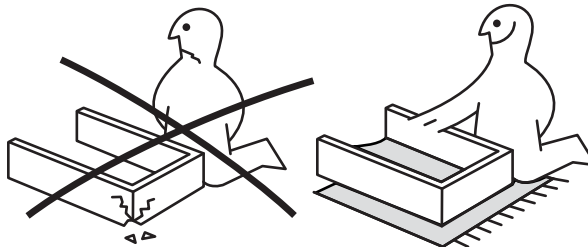
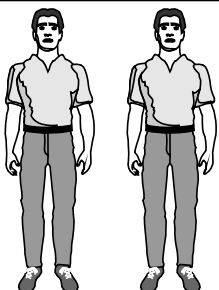
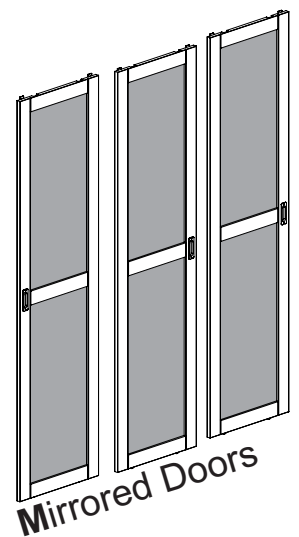
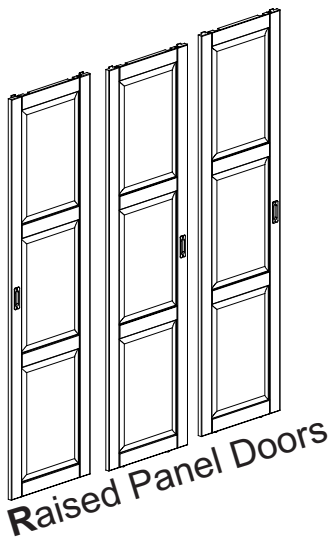


ASSEMBLY INSTRUCTIONS

3 SLIDING DOORS WARDROBE

SKU 5671R / 5671L / 5671M - White


SKU 5676R / 5676L / 5676M - Java

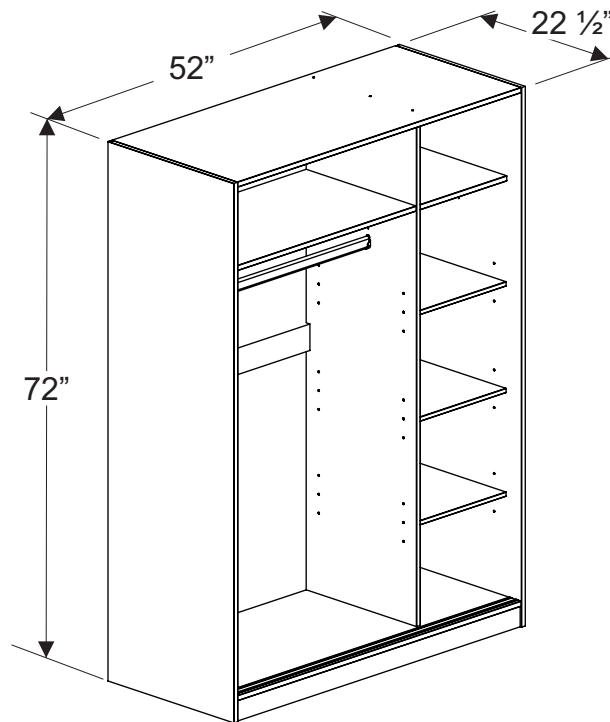




PRE-ASSEMBLY PREPARATION



- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us at info@palaceImportsInc.com
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM

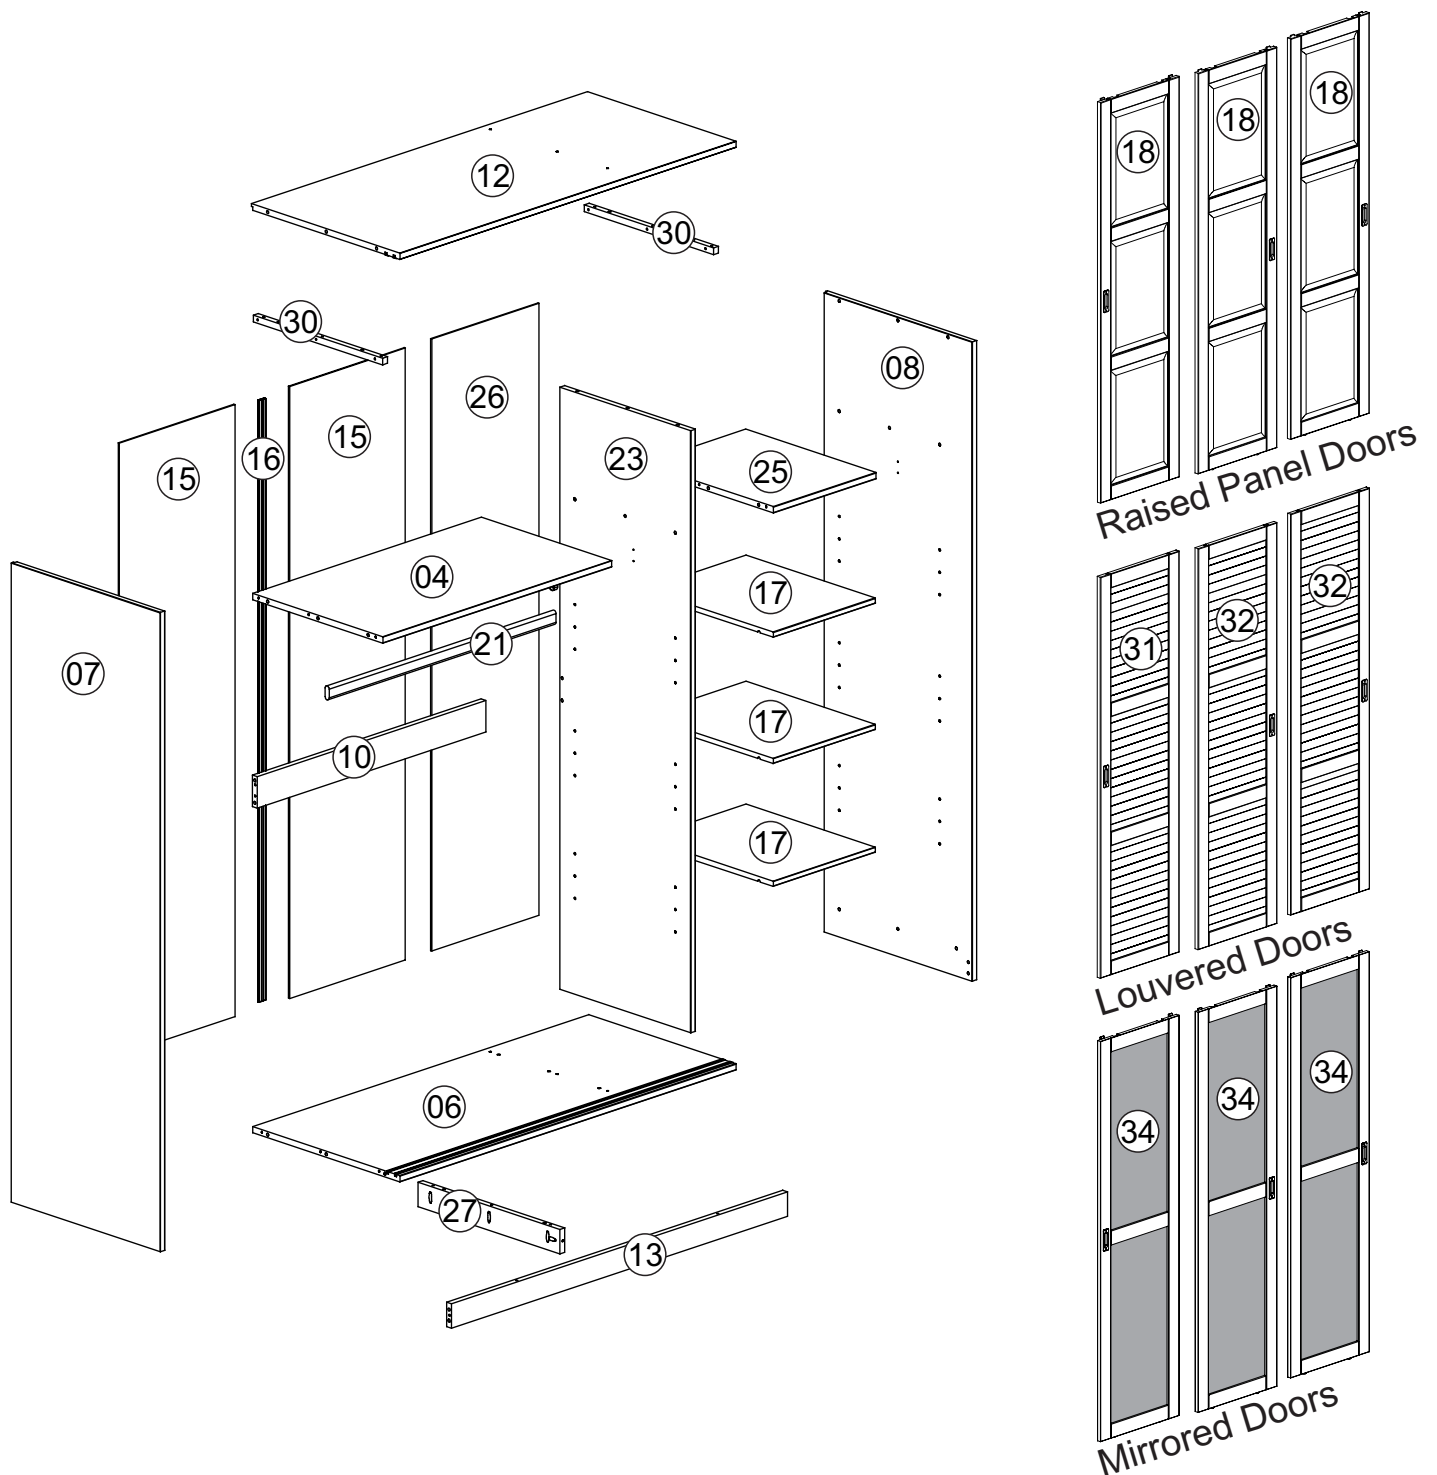

SCREWS ARE SHOWN IN ACTUAL SIZE


A1	 4,0x30	42+2
A3	 3,0x16	06+1
A4	 3,5x14	04+1
A9	 3,5x16	28+1
A16	 4,0x40	06+1
C2	 8,0x25	44+2
D4		12+1
D10		02
D27		05
E15		06
E16		06
G1	 10x10	53
H2		03

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01

WARNING:
 **CHOKING HAZARD**
 Small Parts.
 Adult Supervision Required.
 Not for children under 3 years old.


WARNING:
 **FURNITURE TIPOVER CAN RESULT IN SERIOUS INJURY OR DEATH**
 This wardrobe includes tipover-prevention hardware that **MUST BE ATTACHED TO THE WALL** per the assembly instructions.

01)


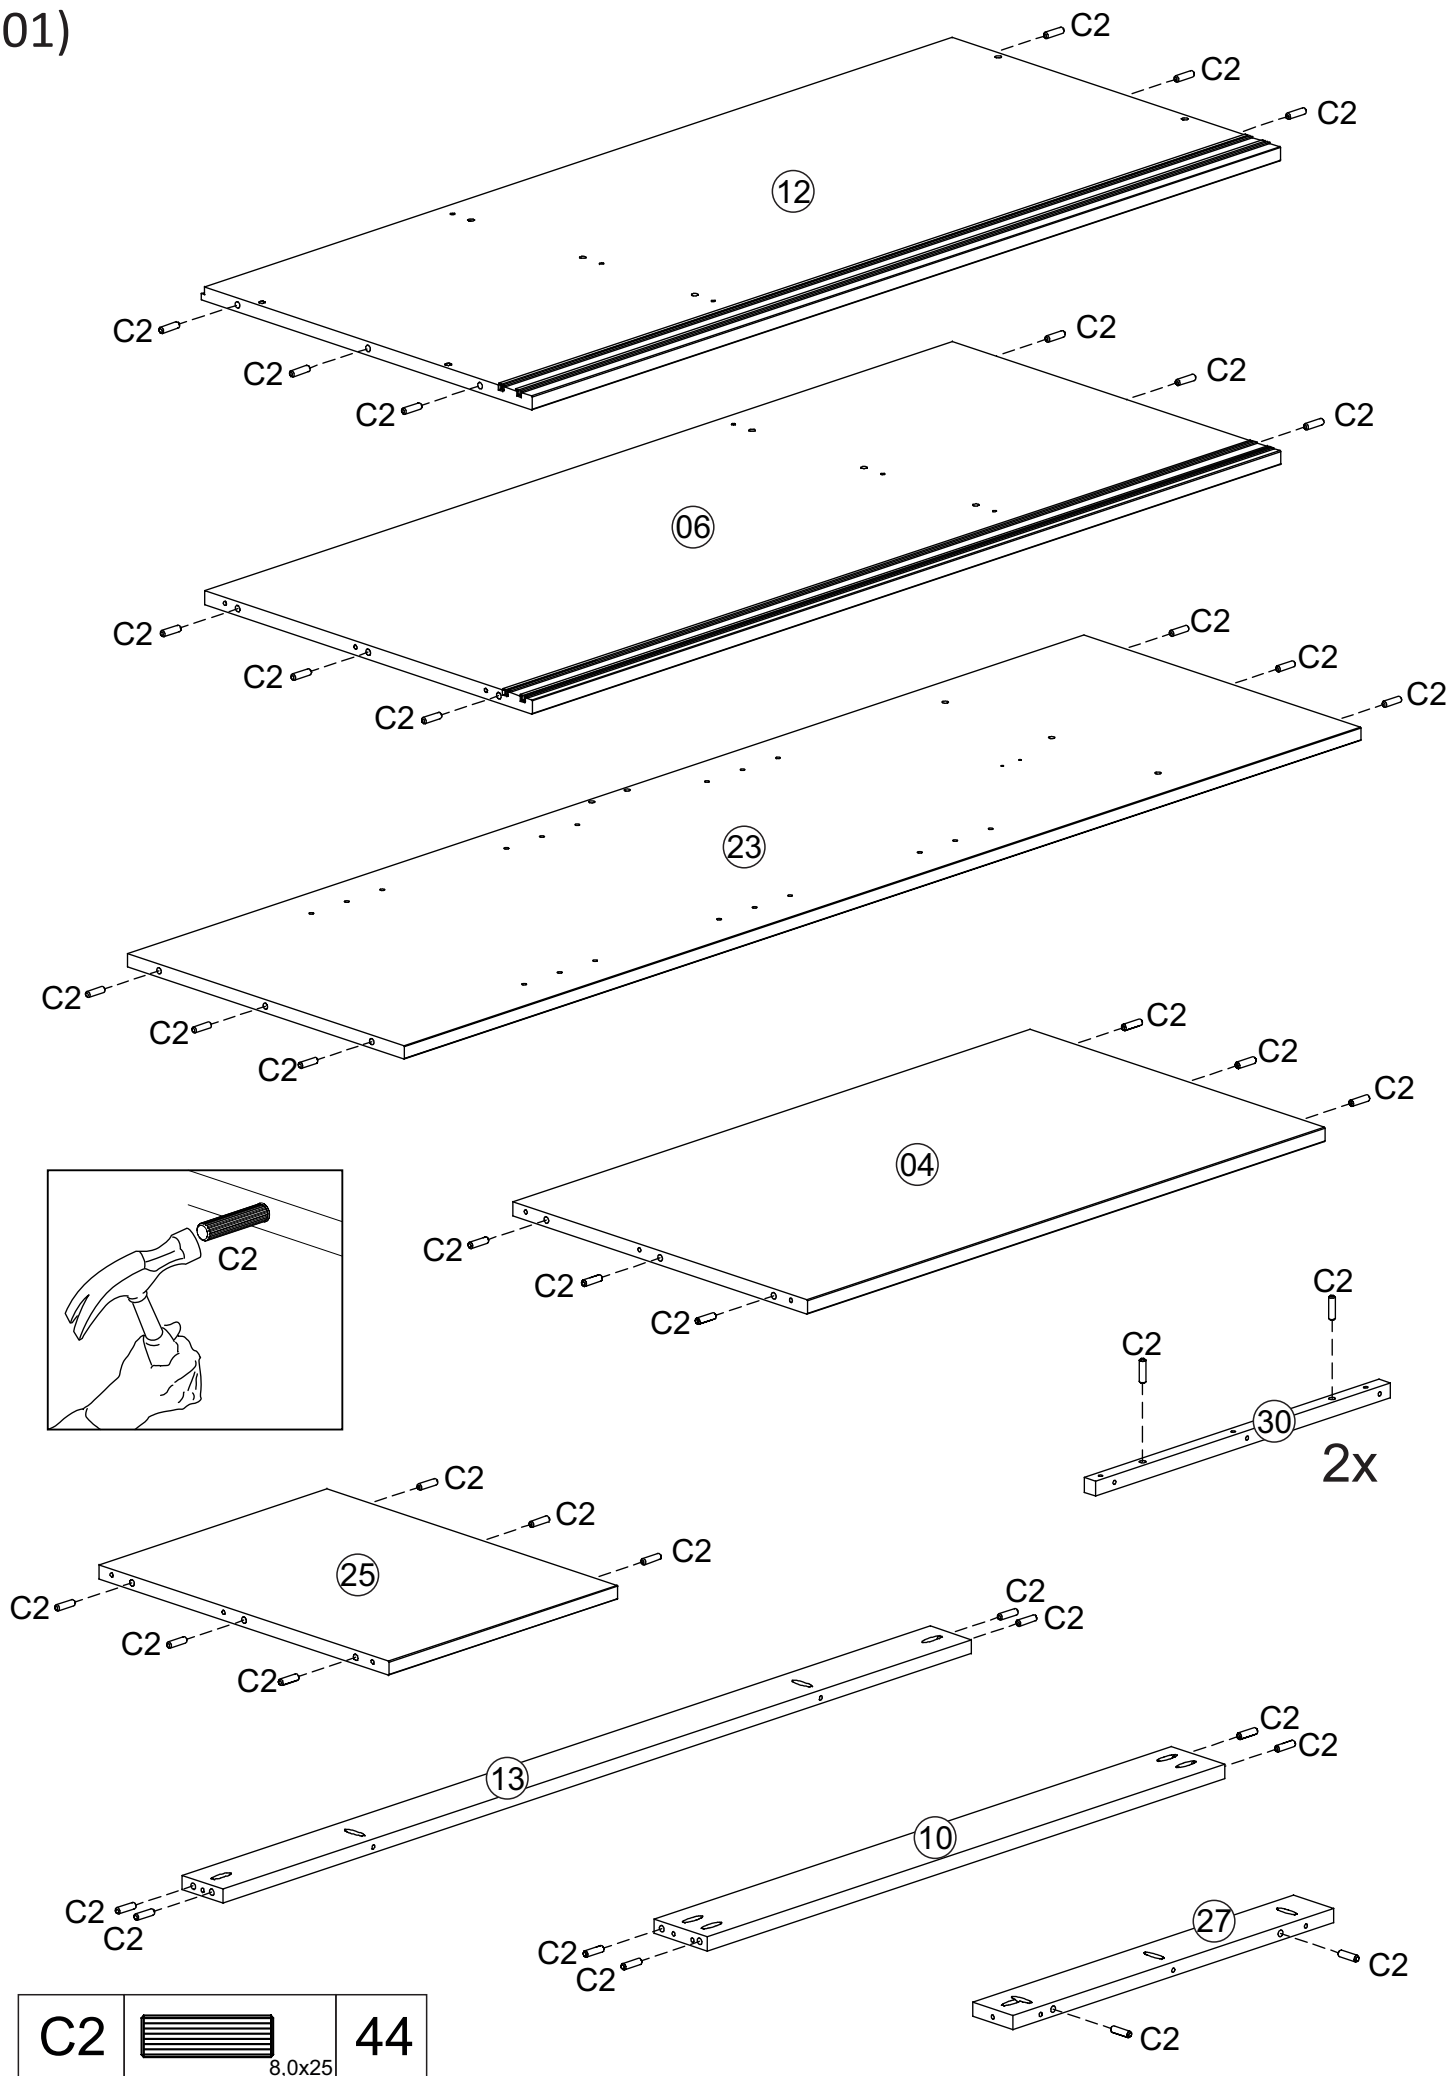


C2		44
8,0x25		


02)

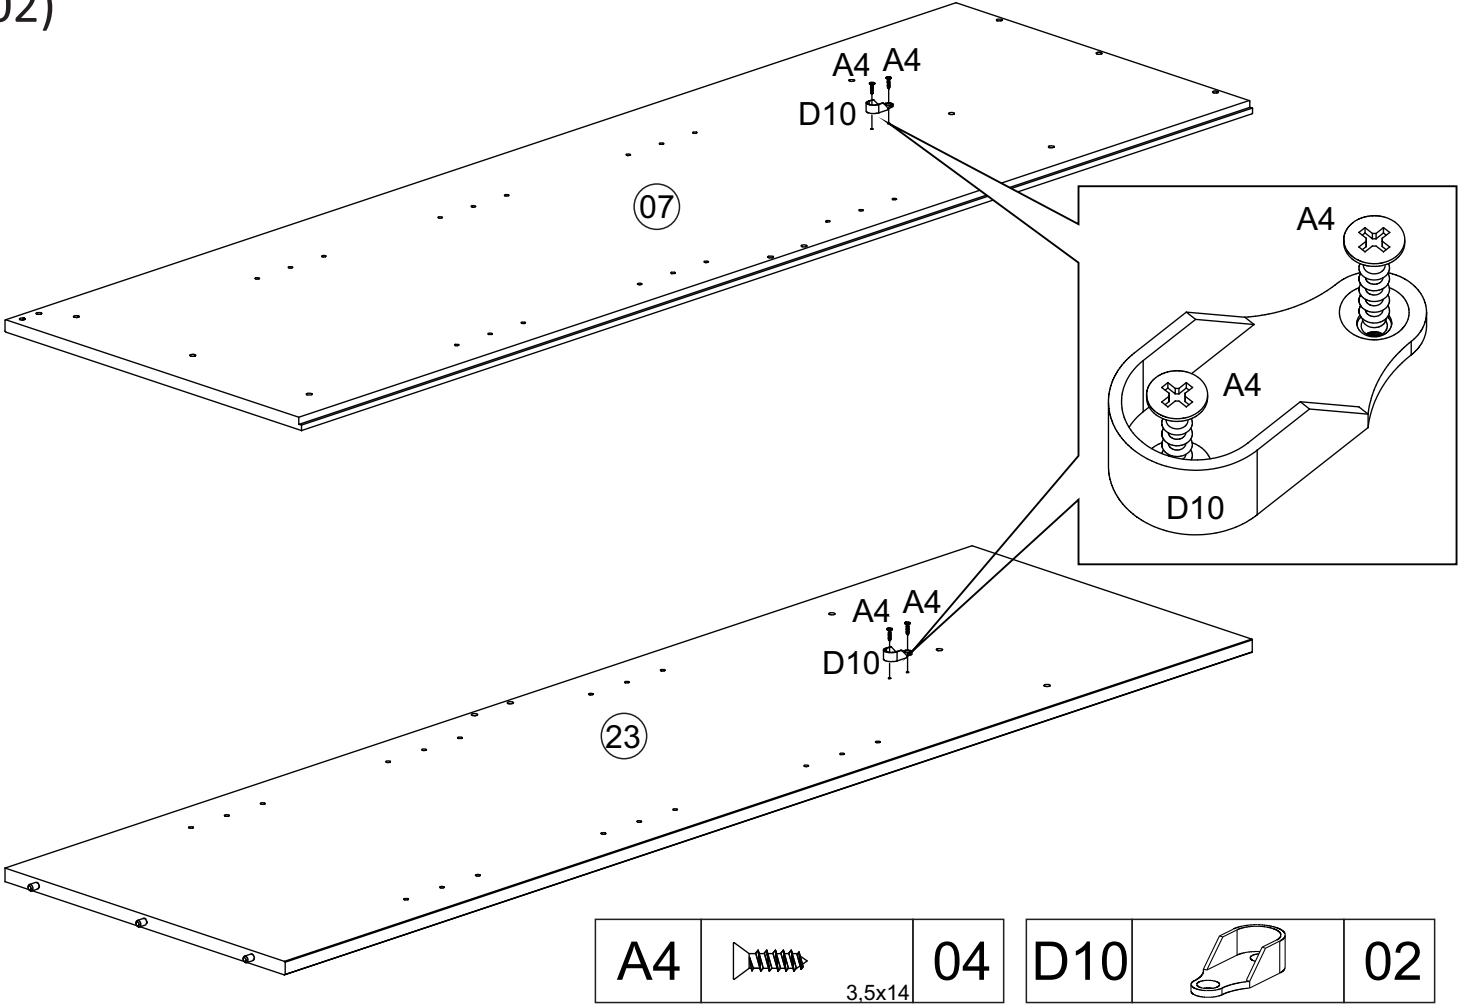



03)

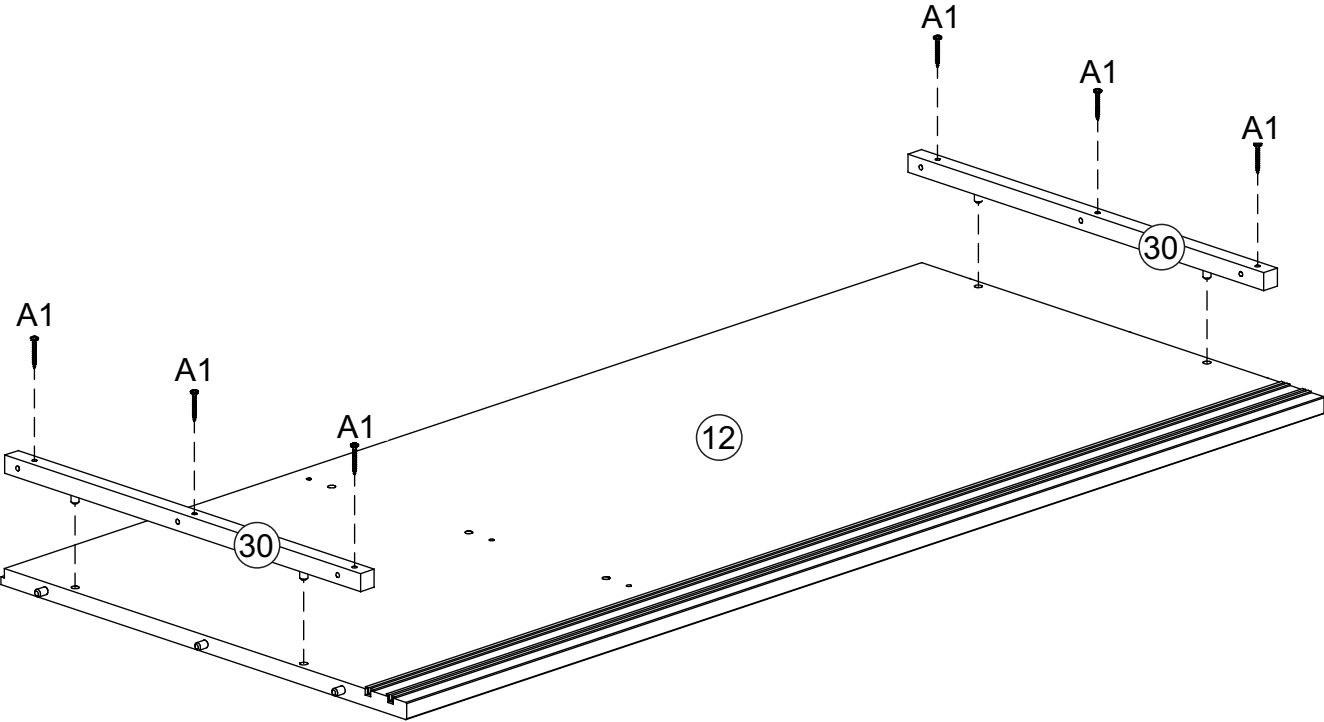


04)

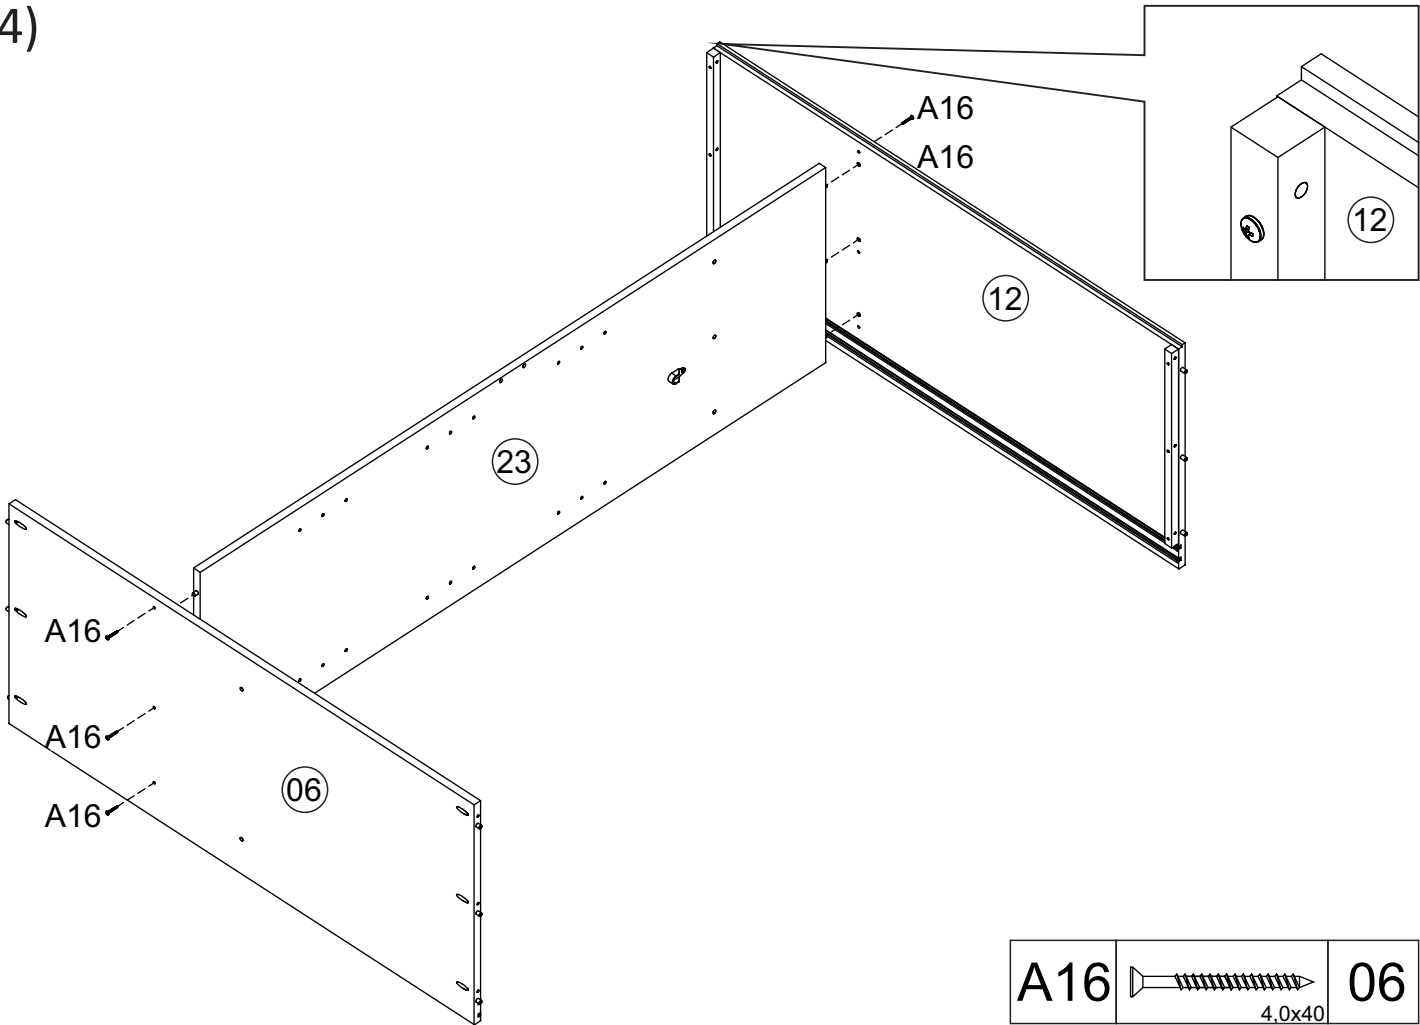




05)

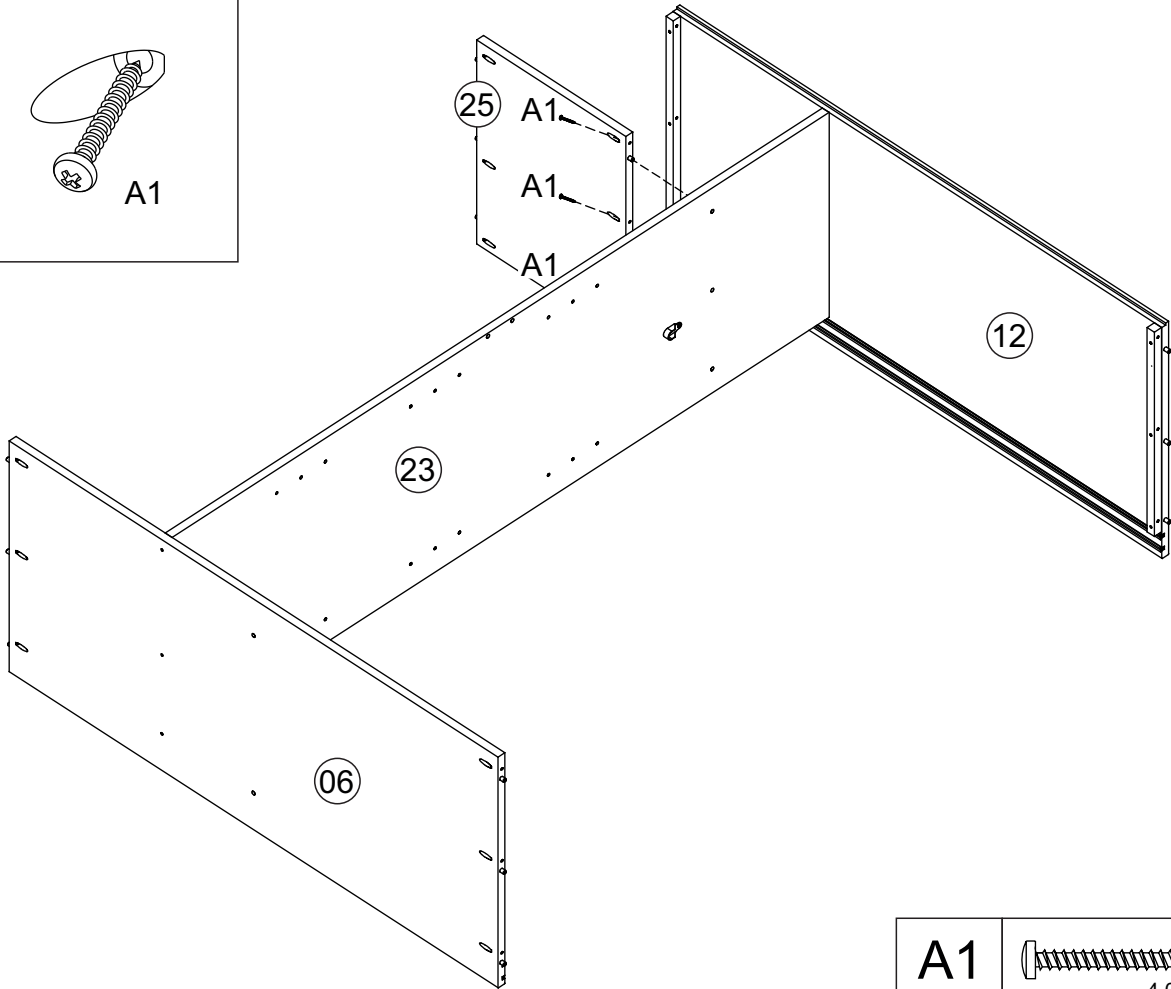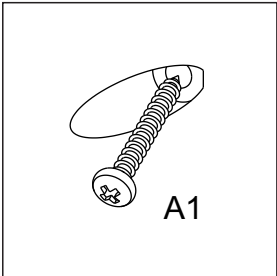

06)

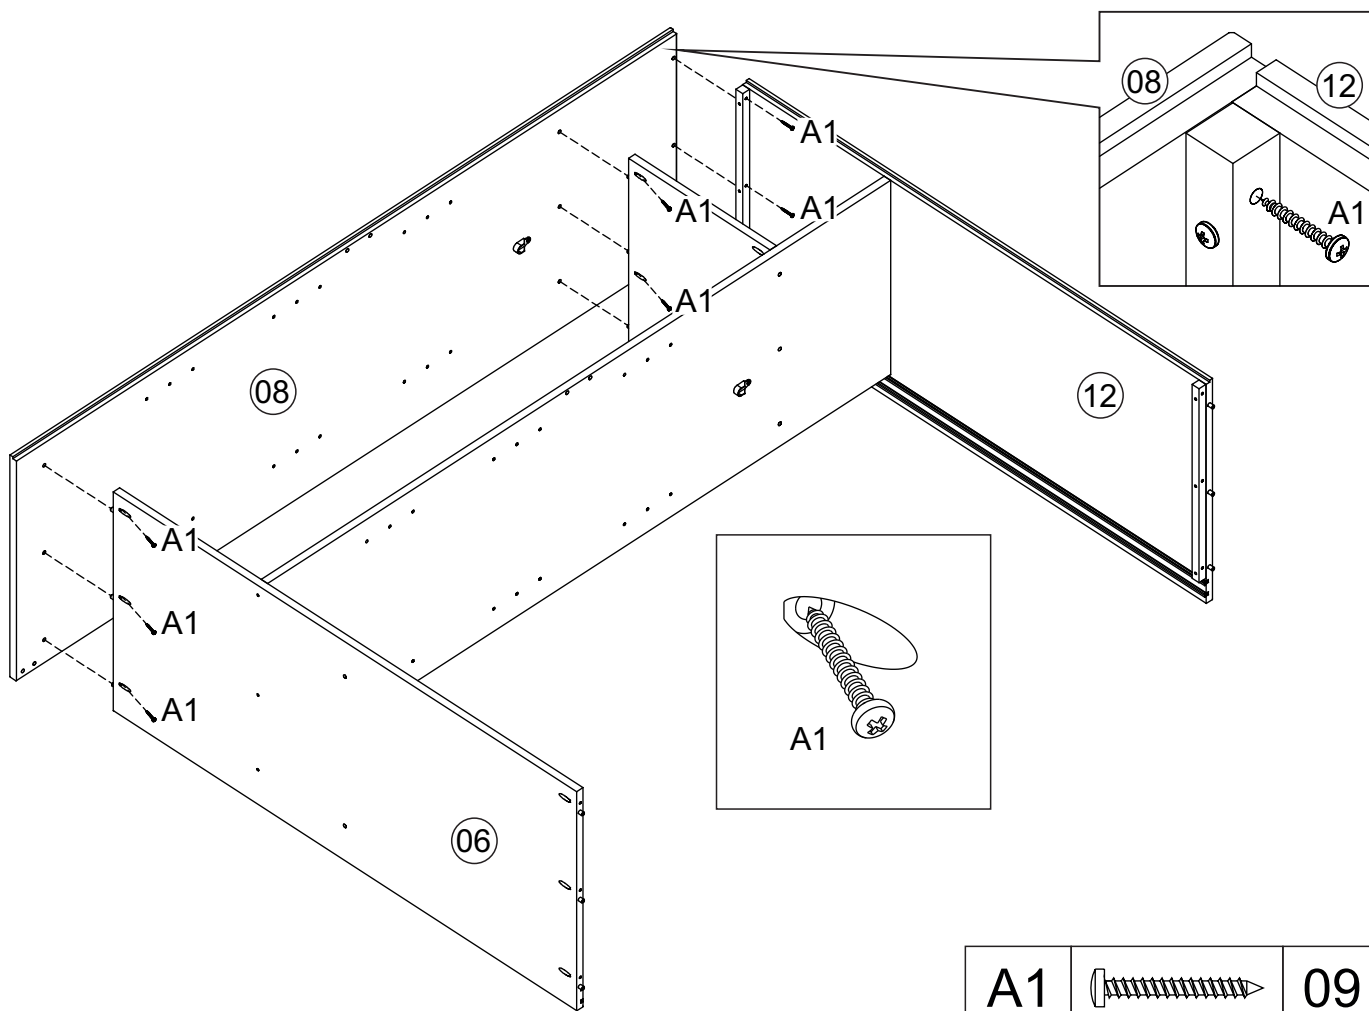

07)

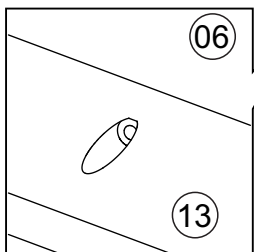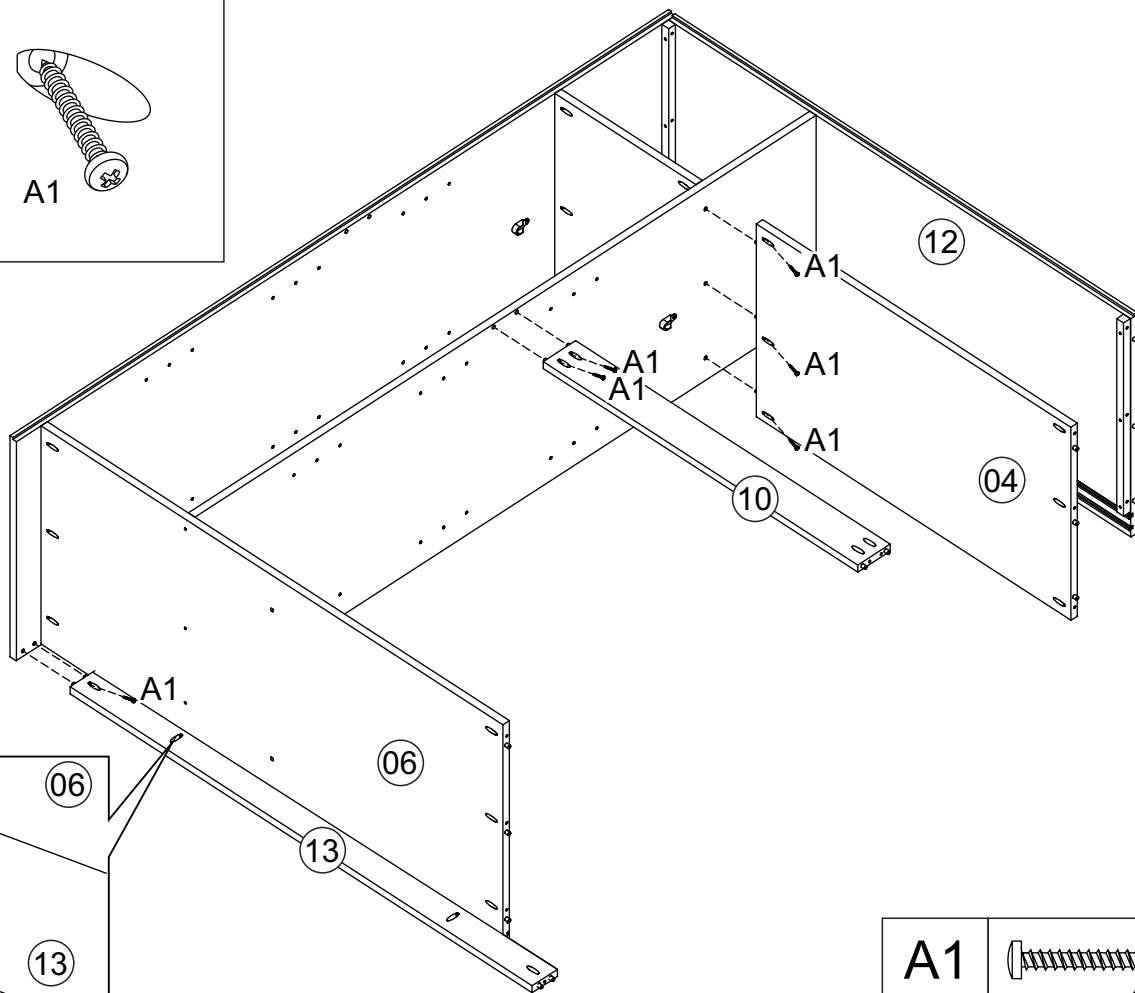
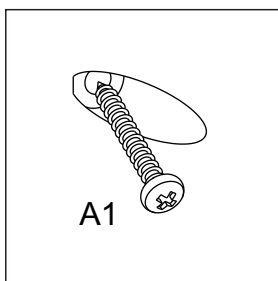



A1







06

08)

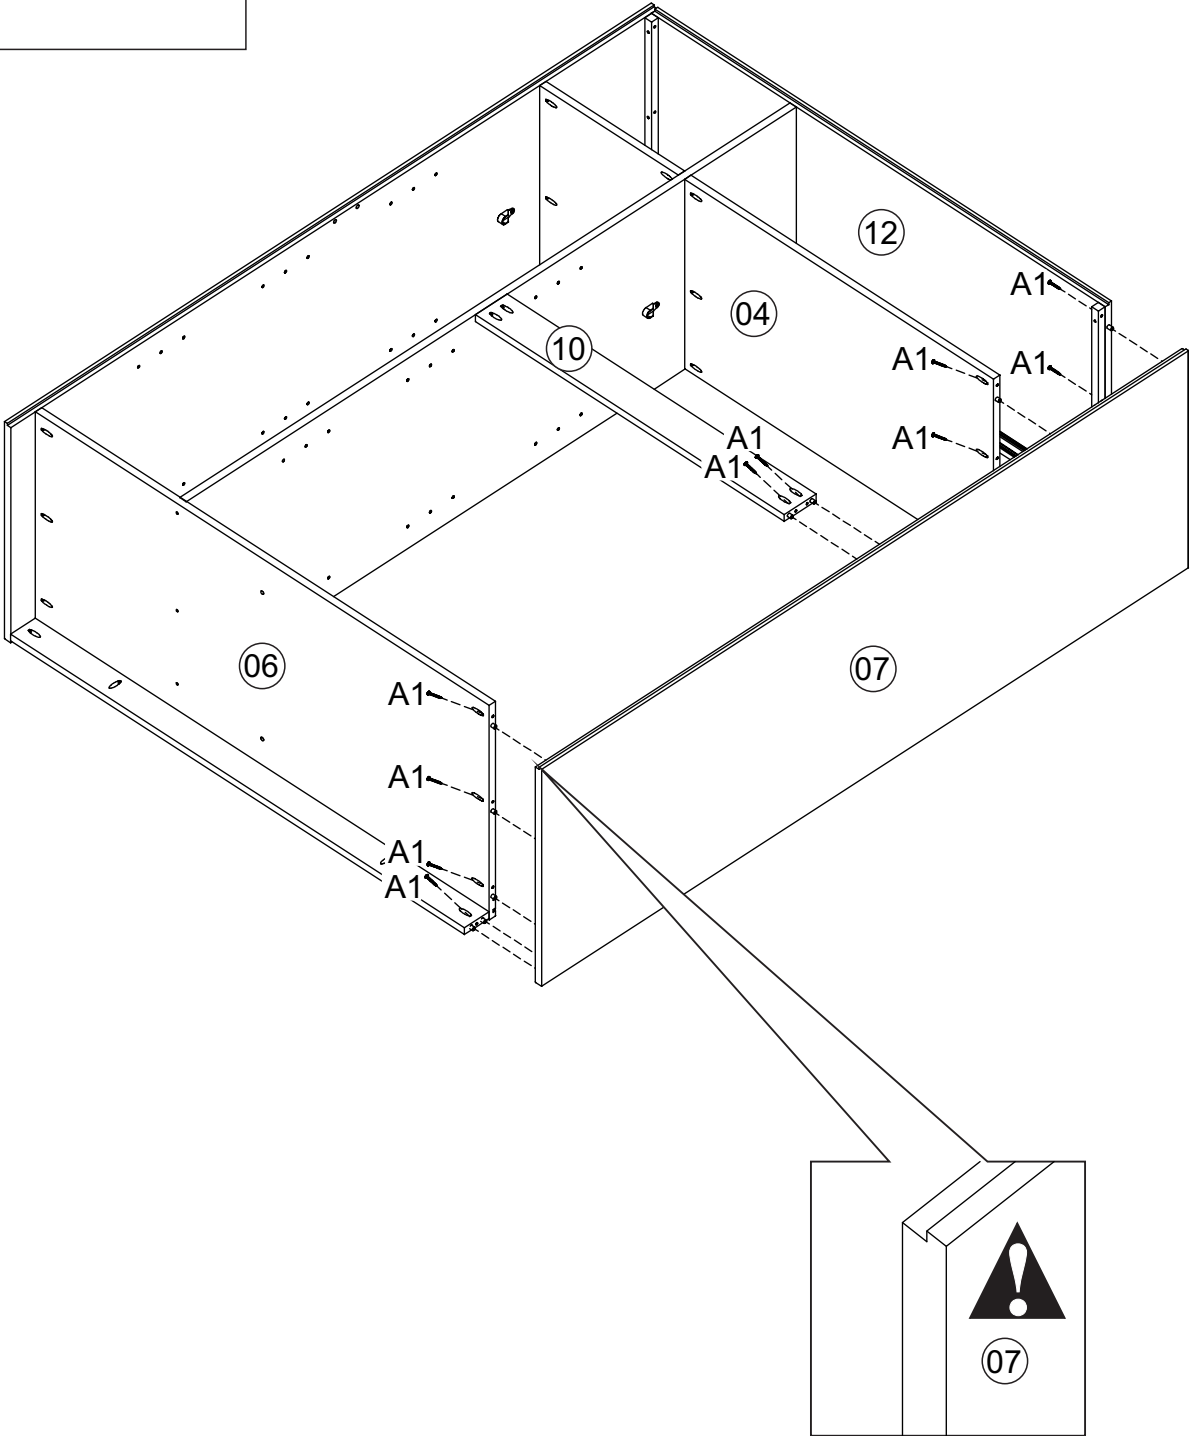
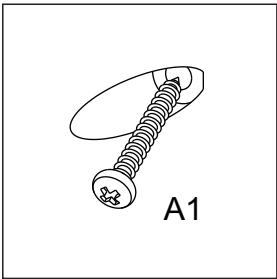


A1	 4.0x30	12
----	---	----




09)

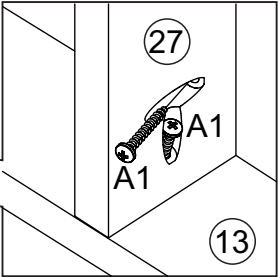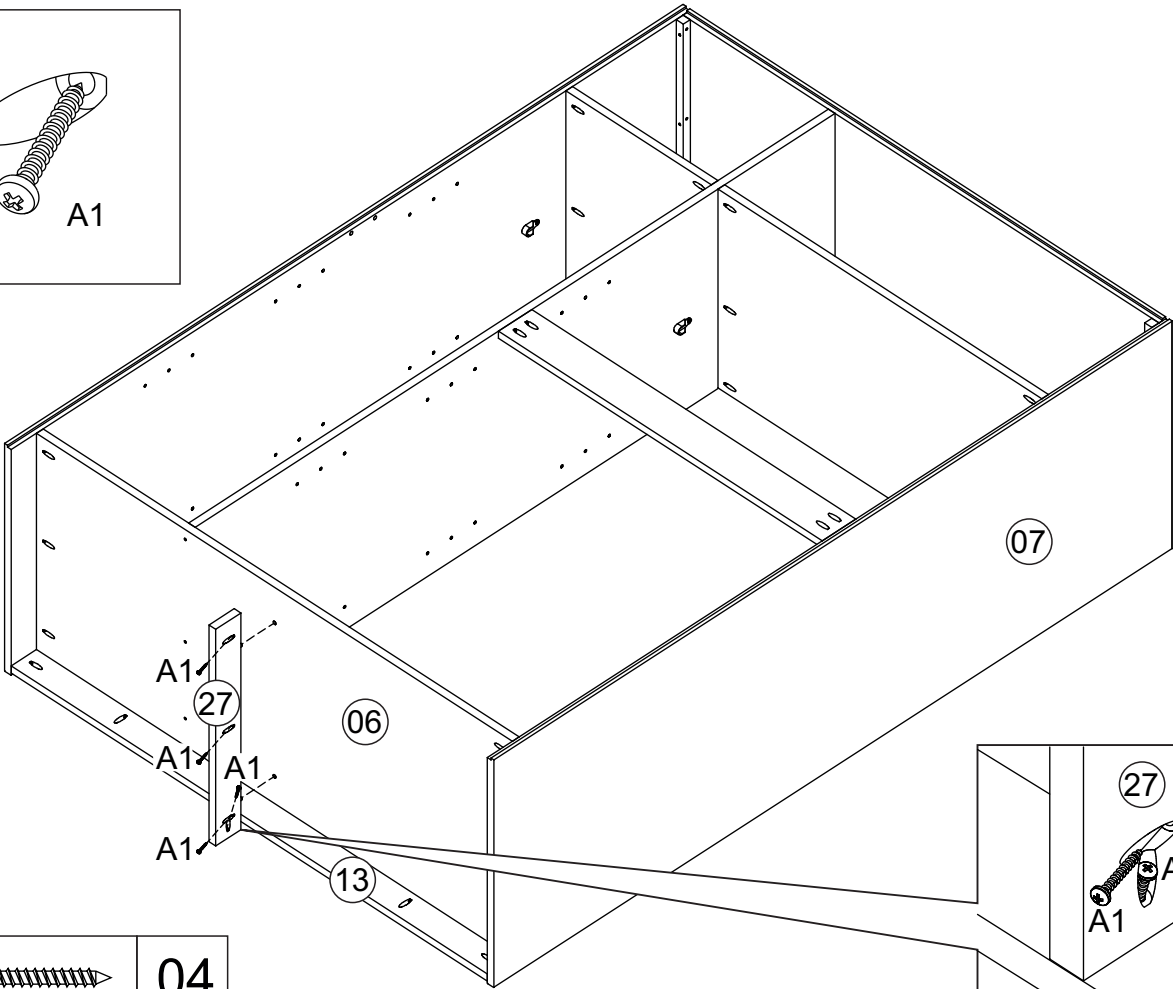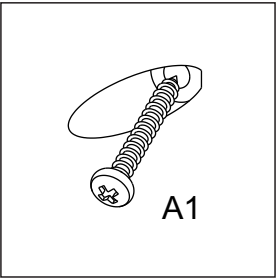


10)


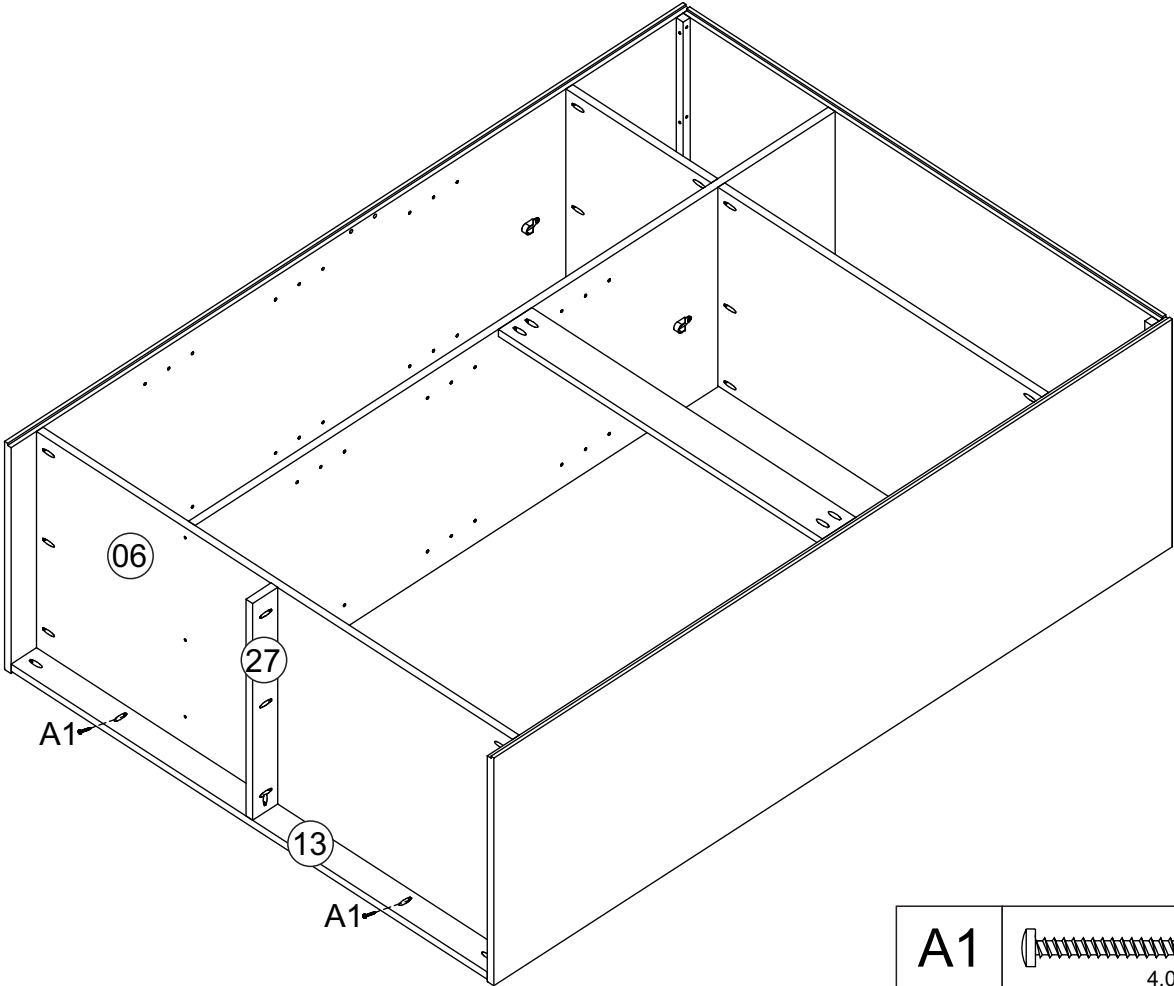




11)

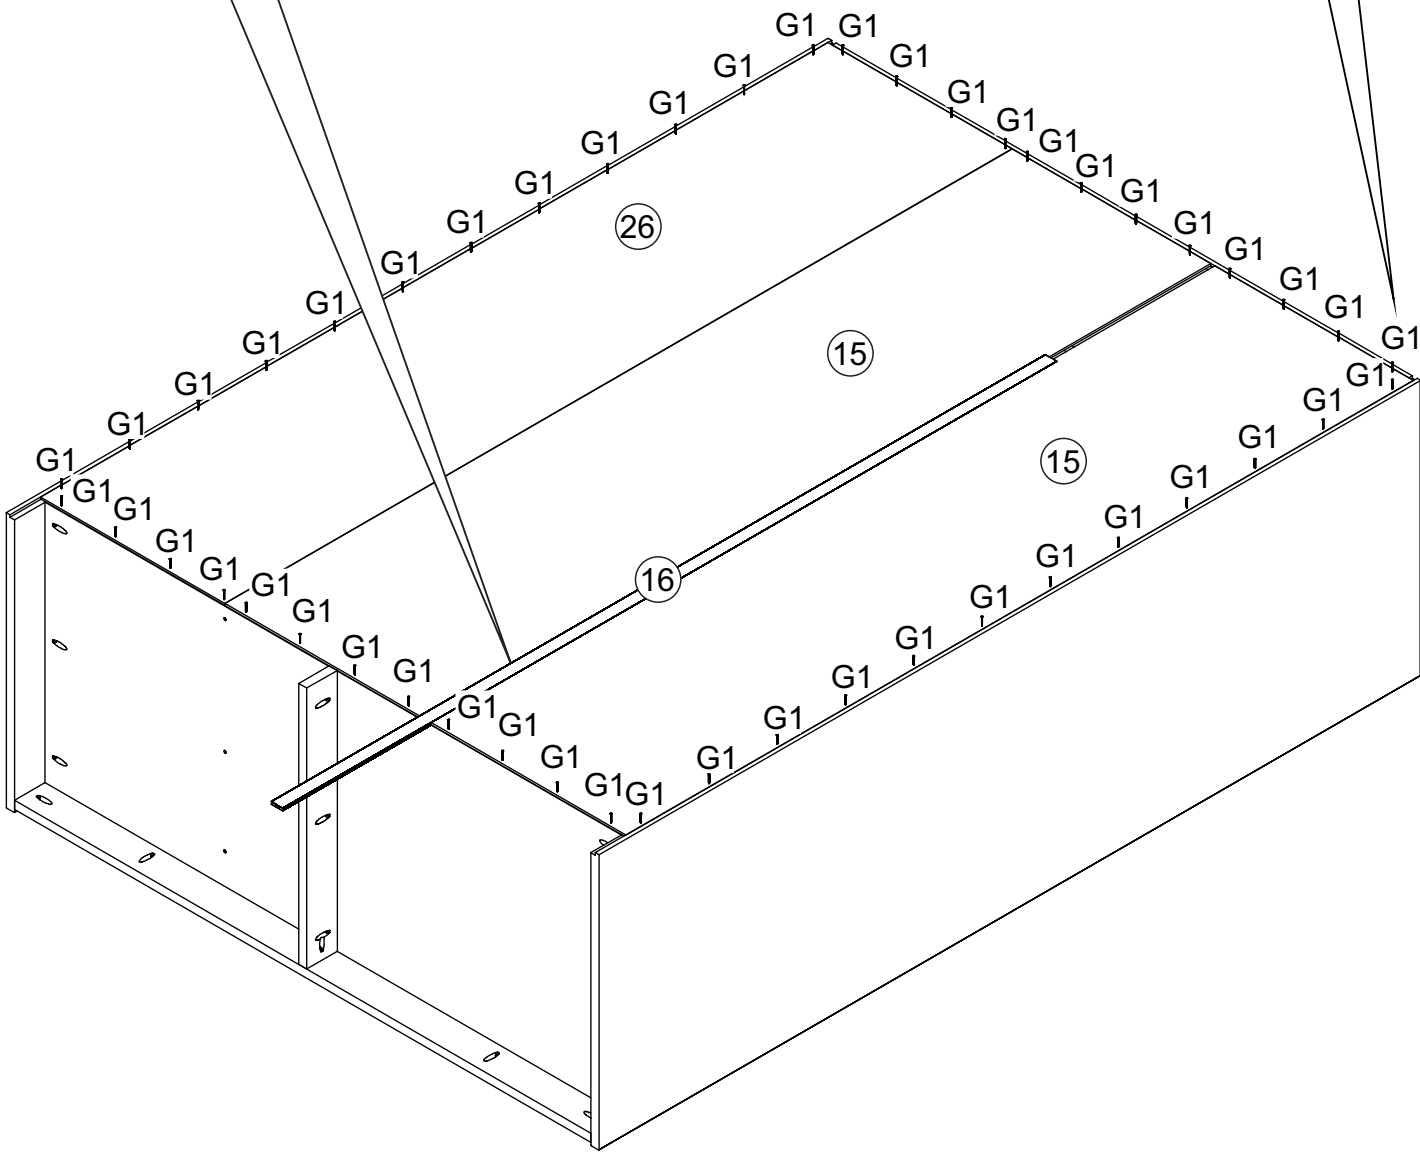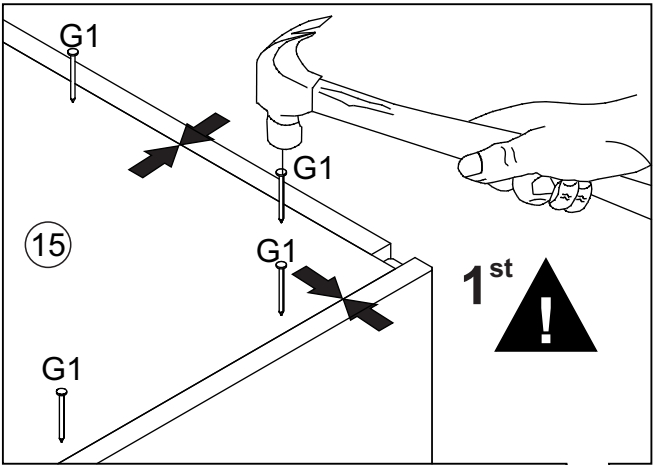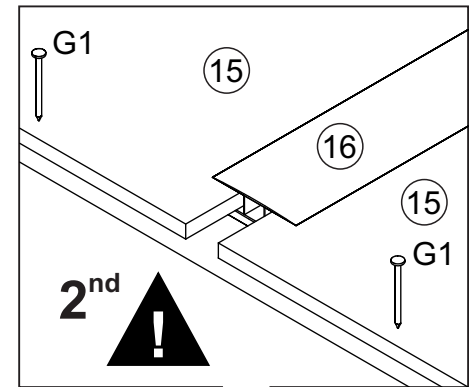



12)

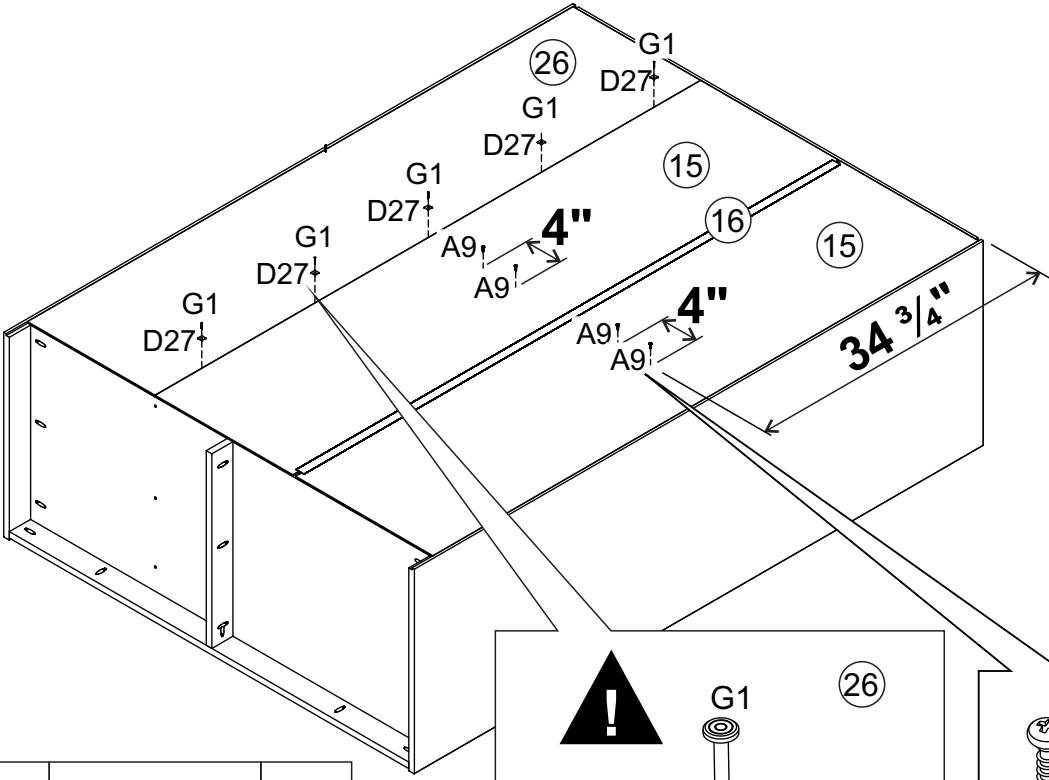


A9	 3.5x16	04
D27		05
G1	 10x10	05

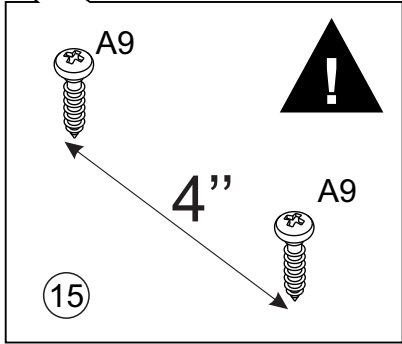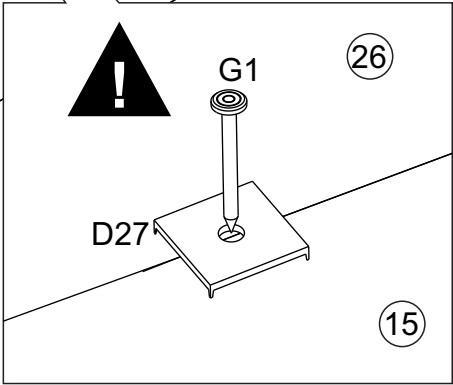

13)

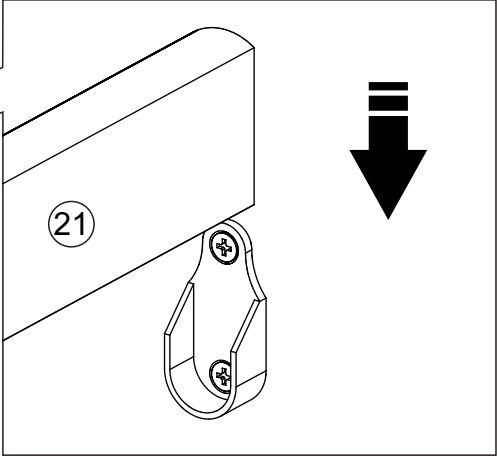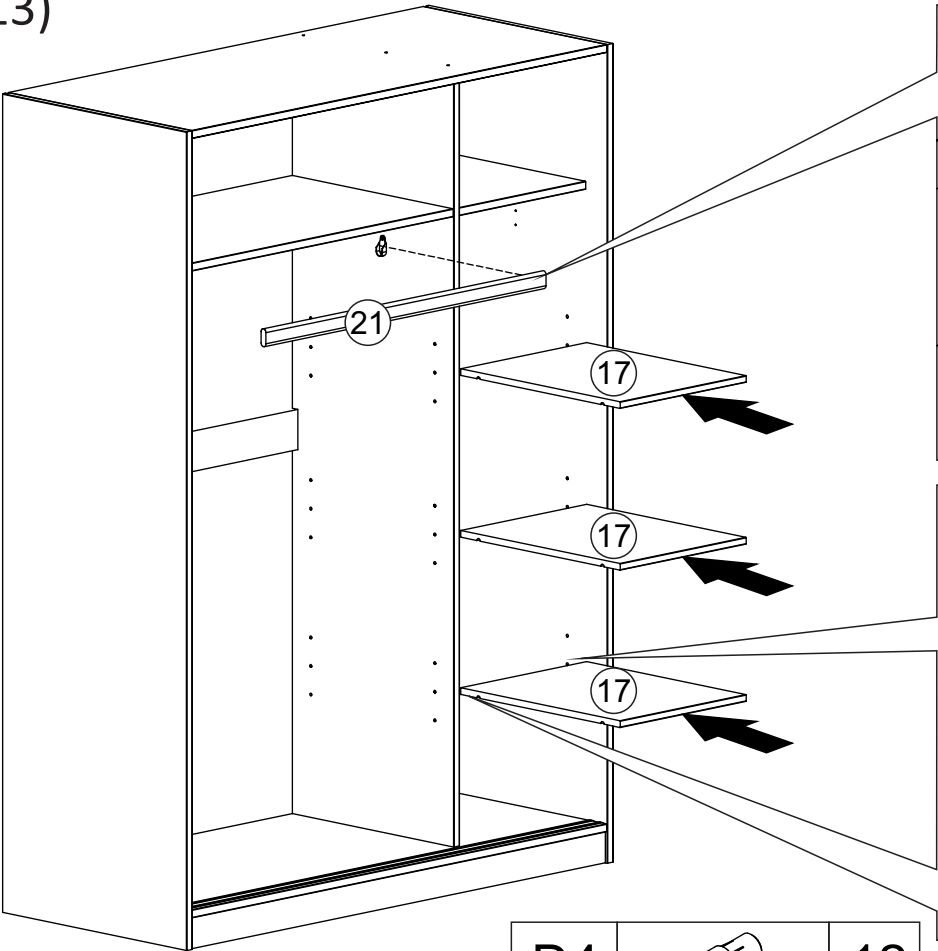


Choose the desired shelf position and insert metal pegs.

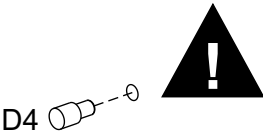


D4		12
----	---	----


14) Raised Panel Doors

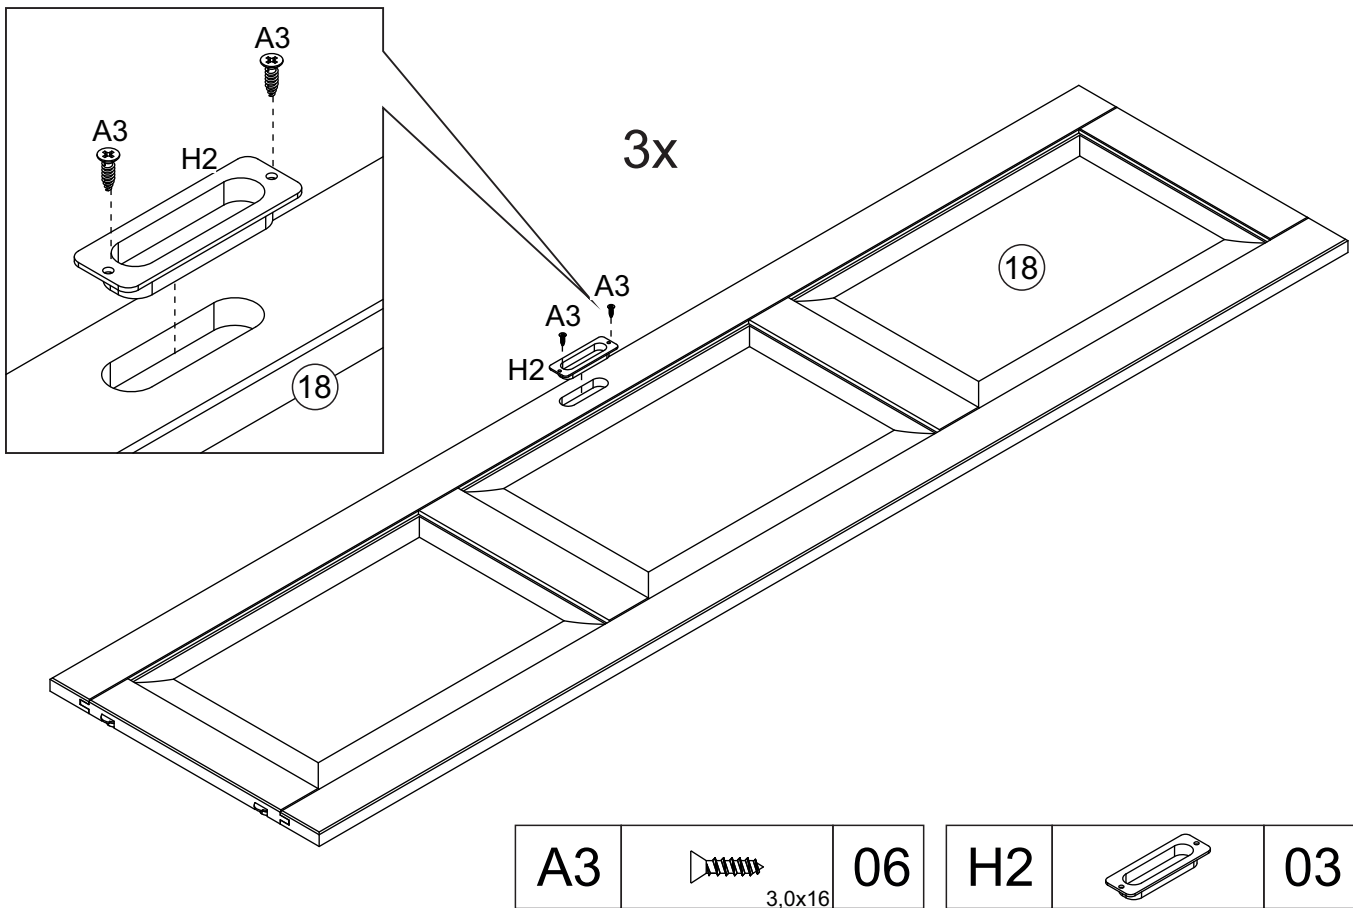


15) Raised Panel Doors

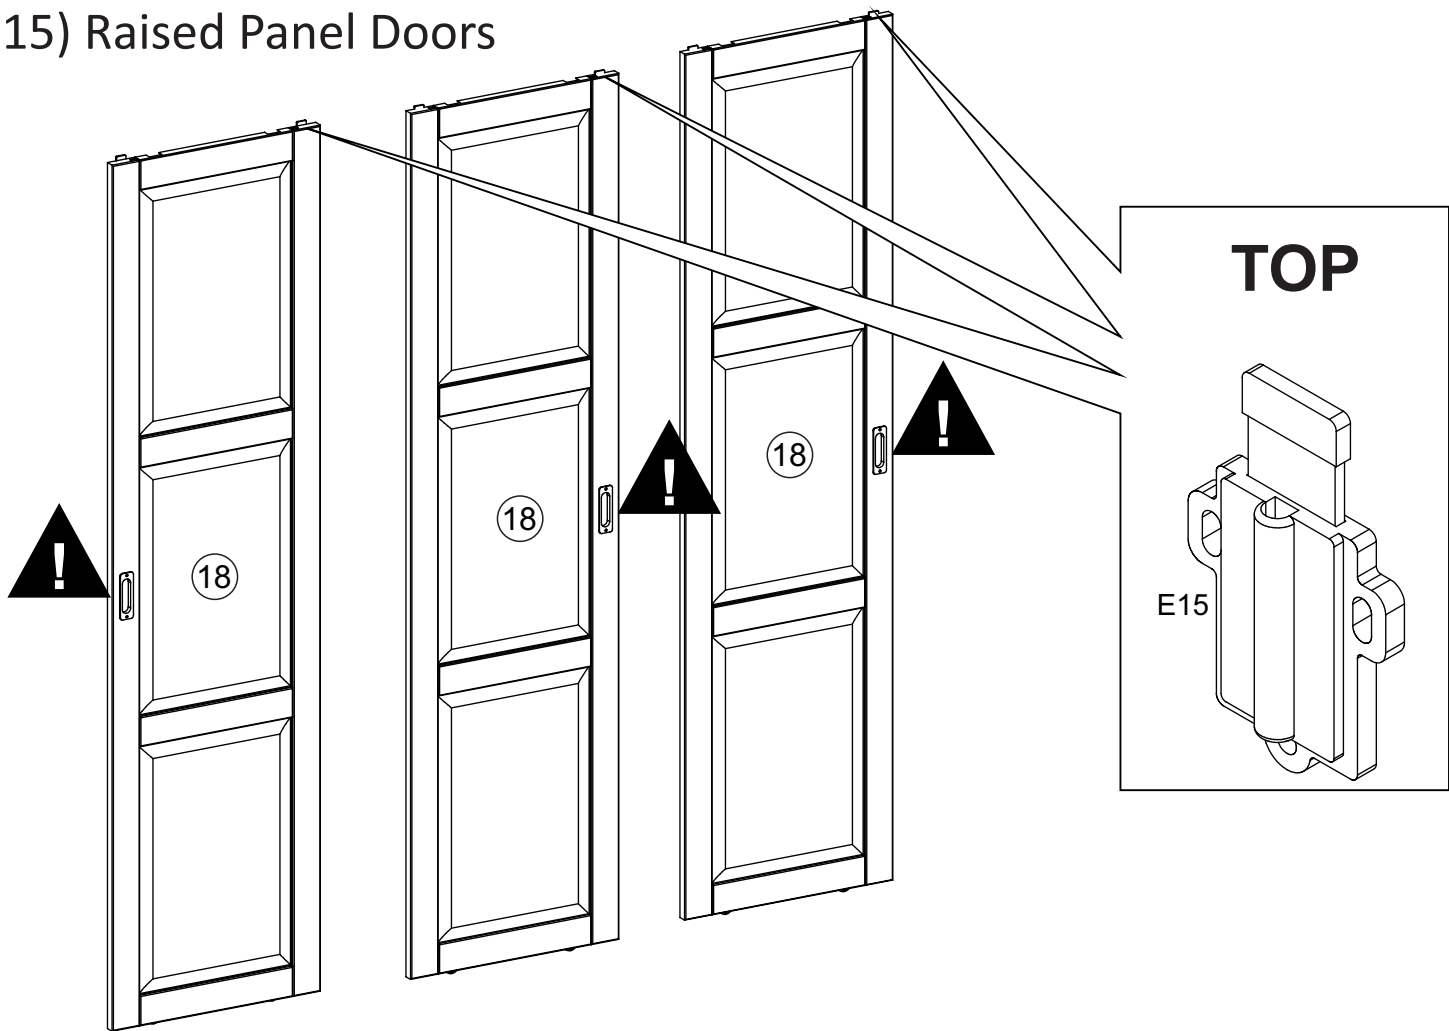


16) Raised Panel Doors

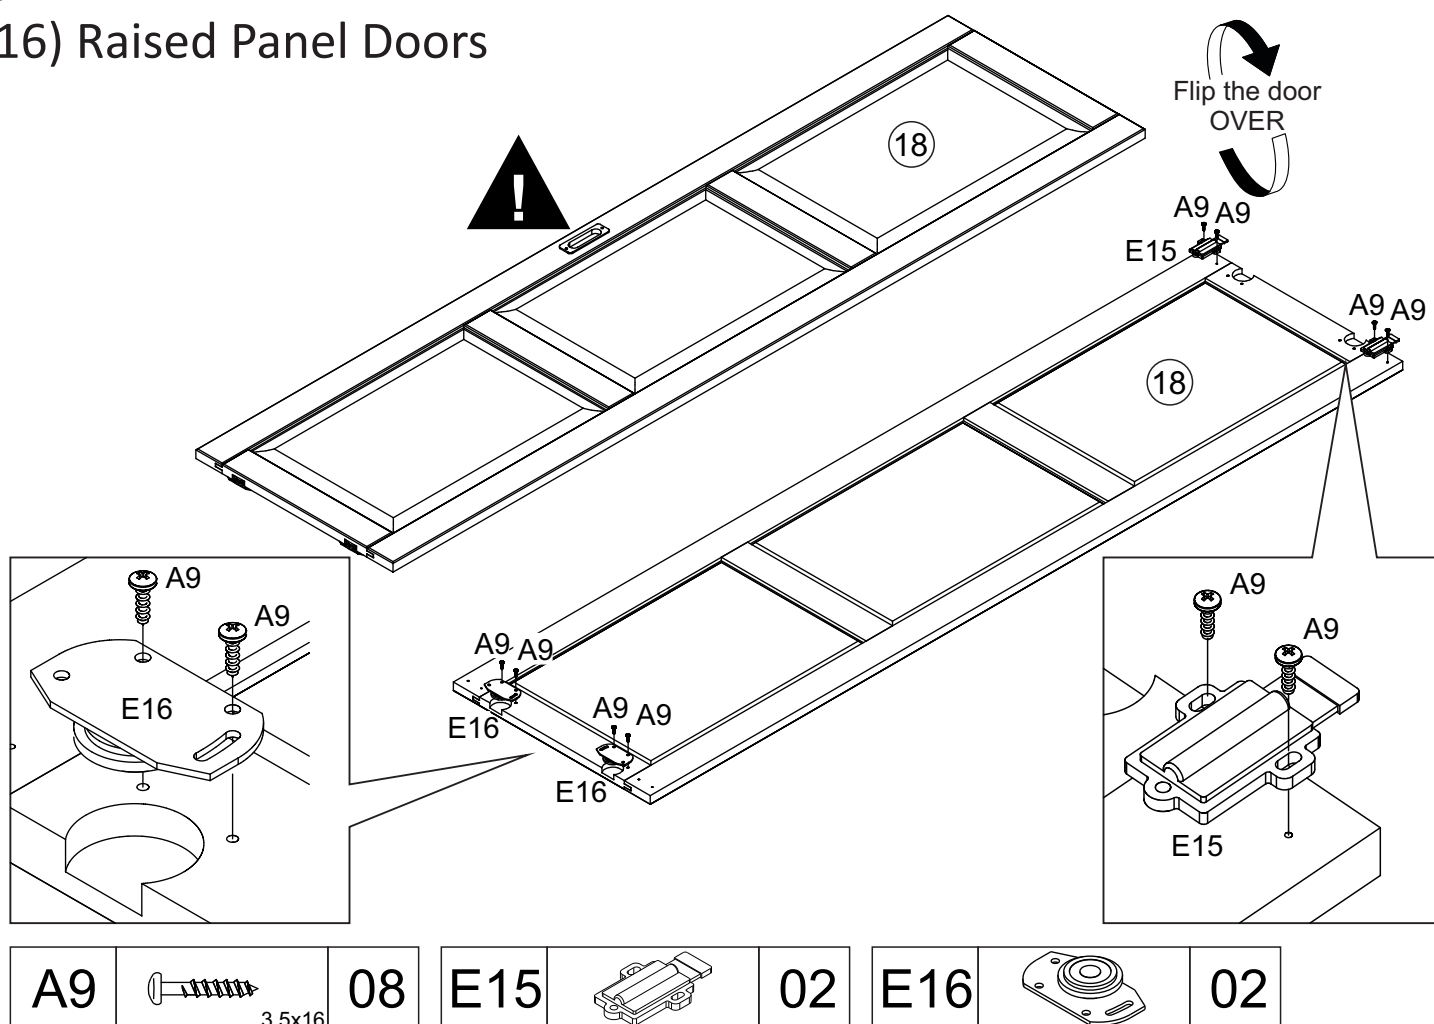


17) Raised Panel Doors

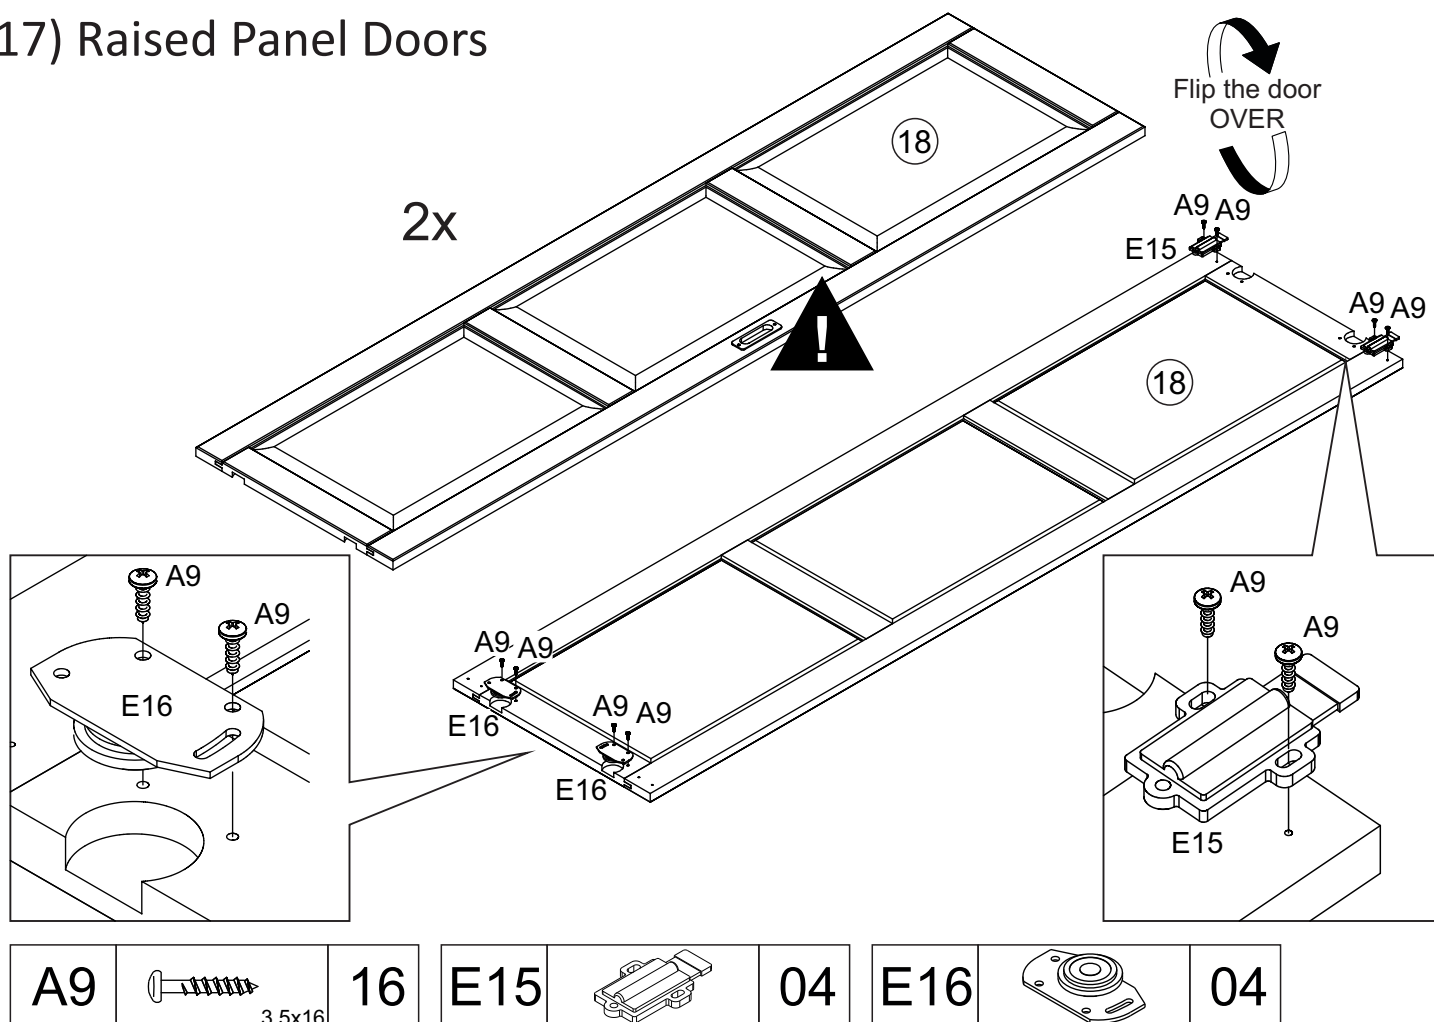


18) Raised Panel Doors

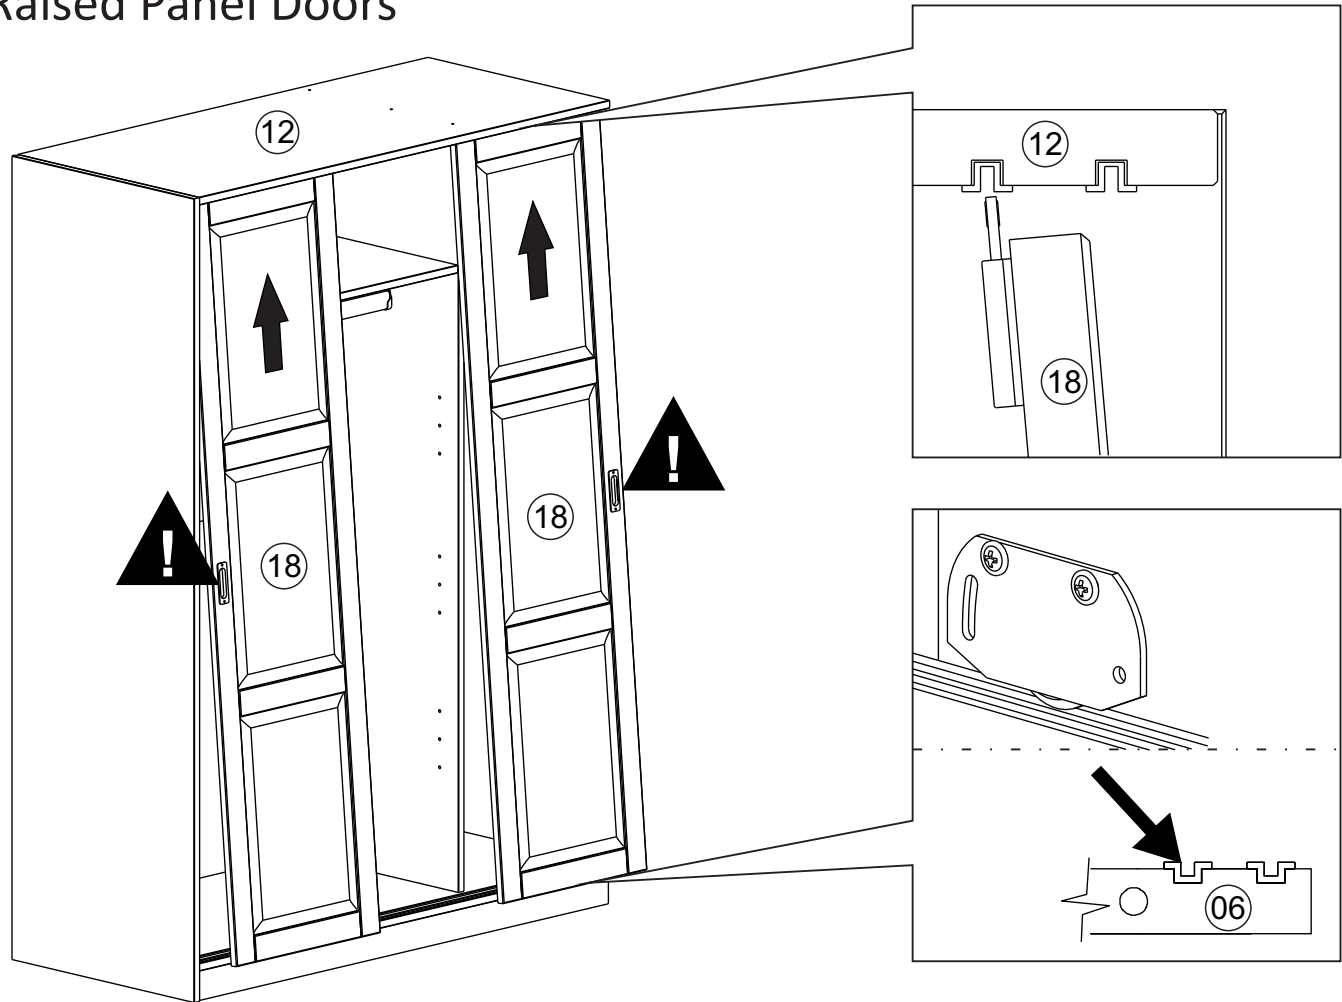


19) Raised Panel Doors

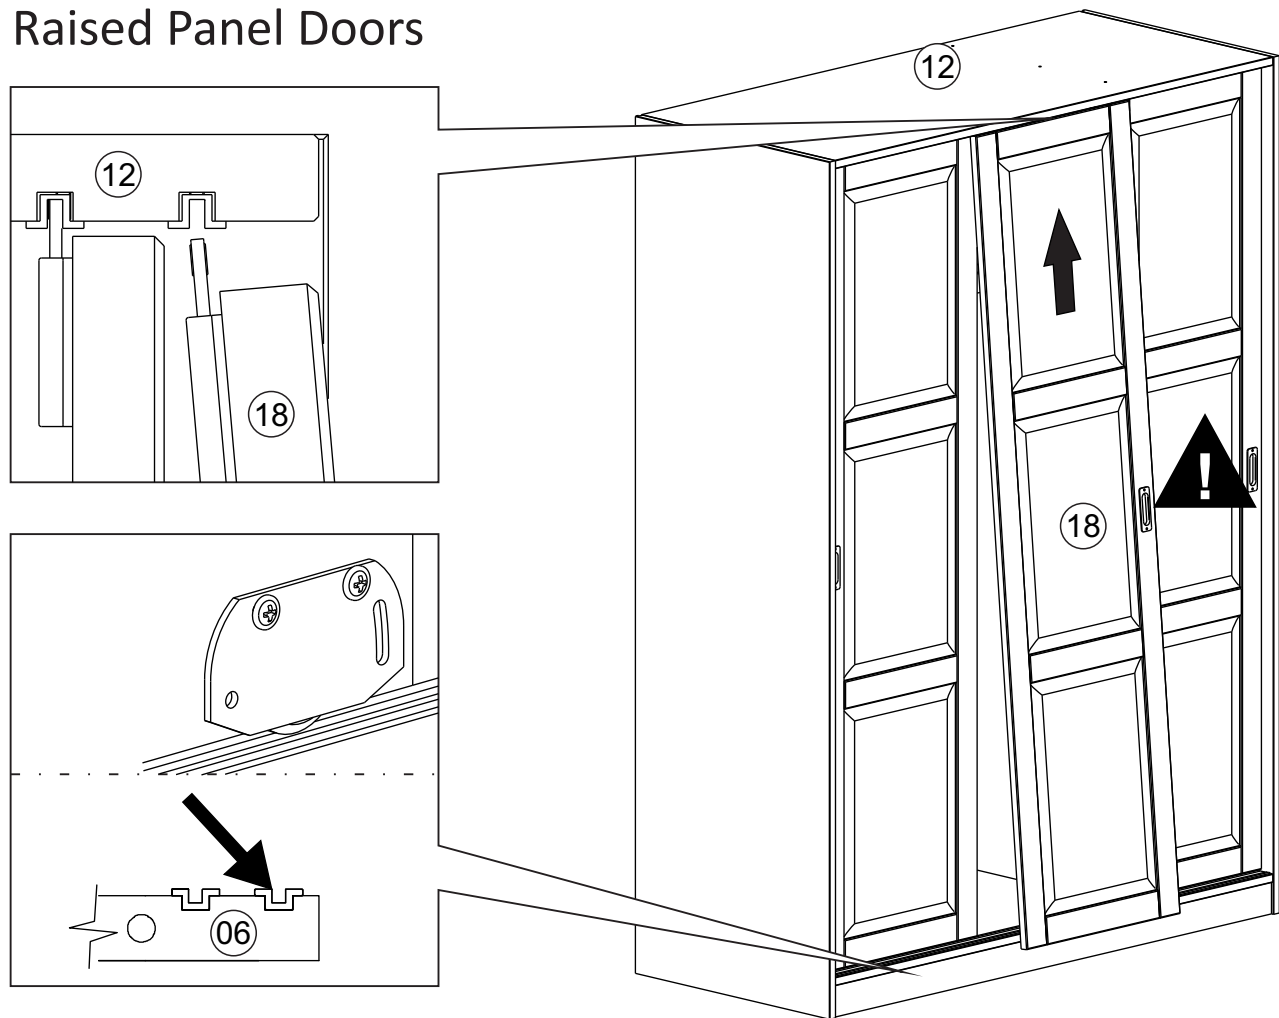


14) Louvered Doors

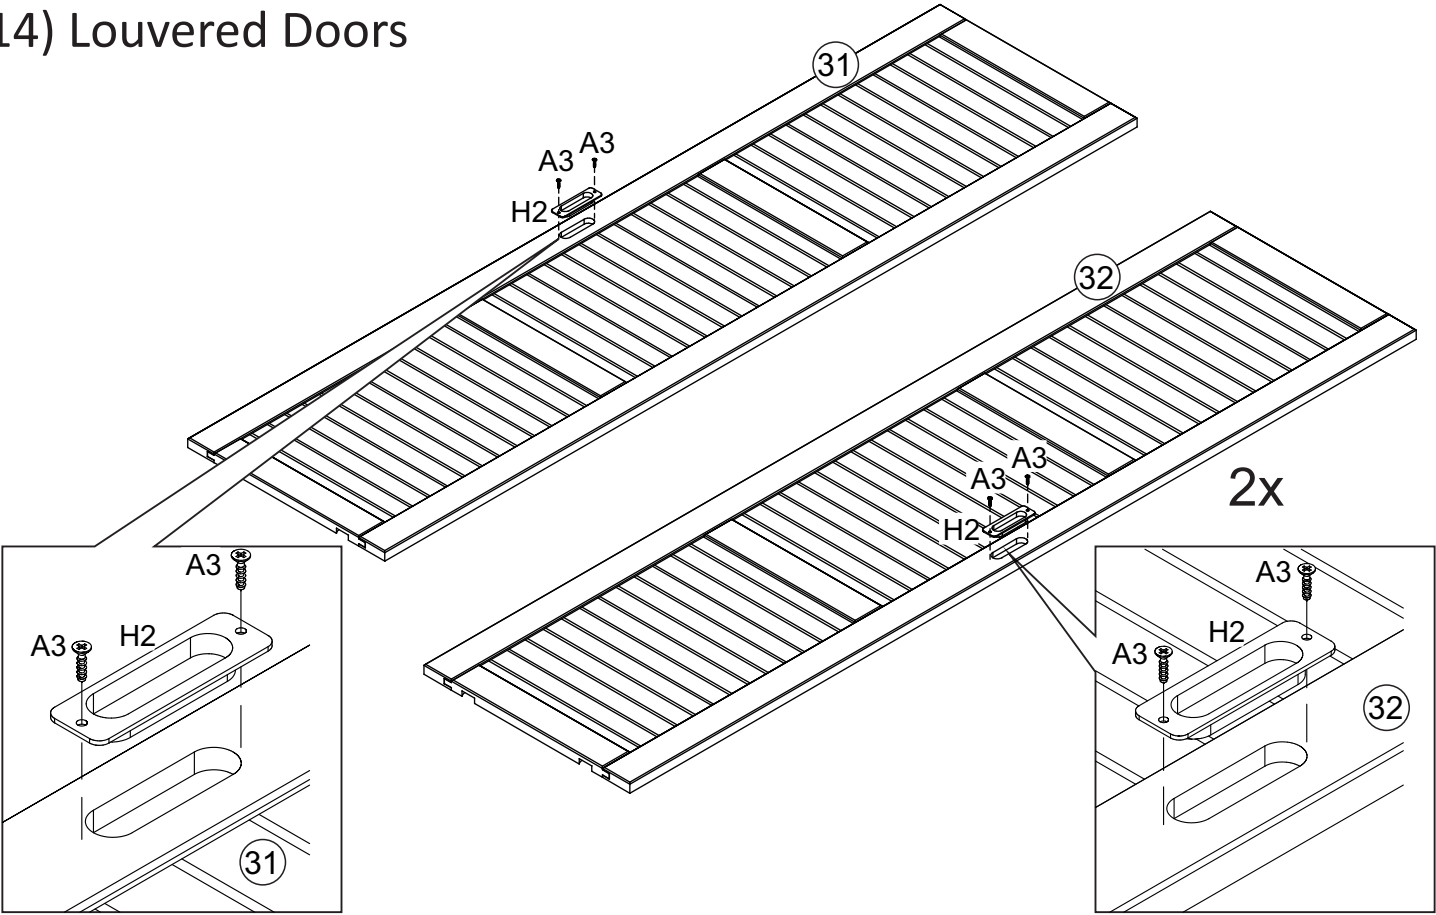


A3	 3.0x16	06	H2		03
----	--	----	----	---	----


15) Louvered Doors

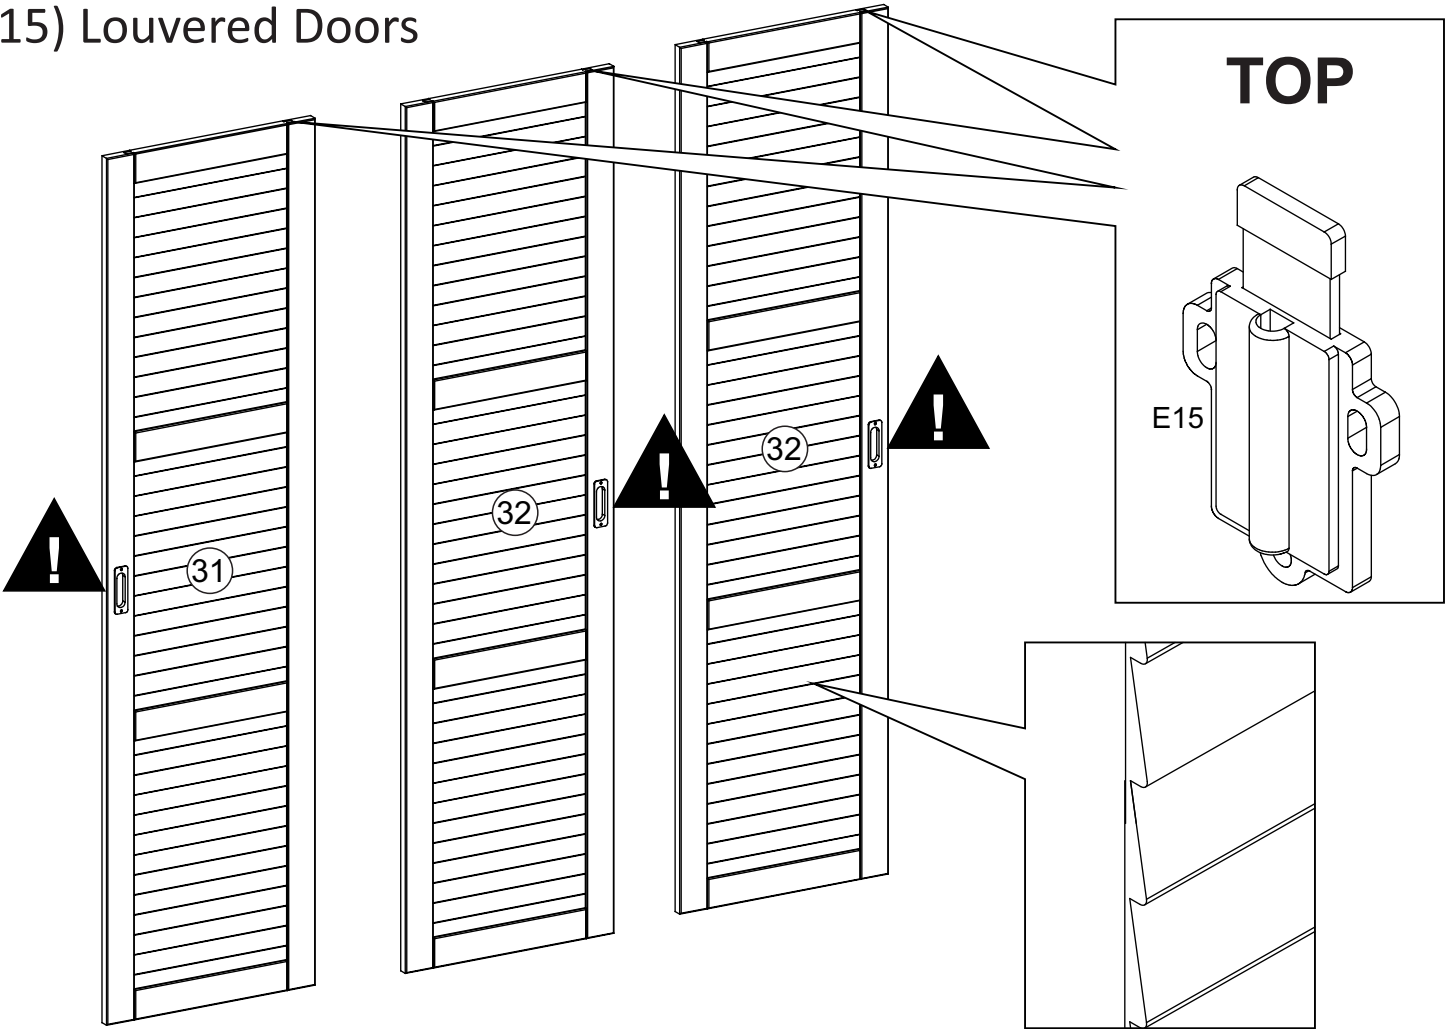


16) Louvered Doors

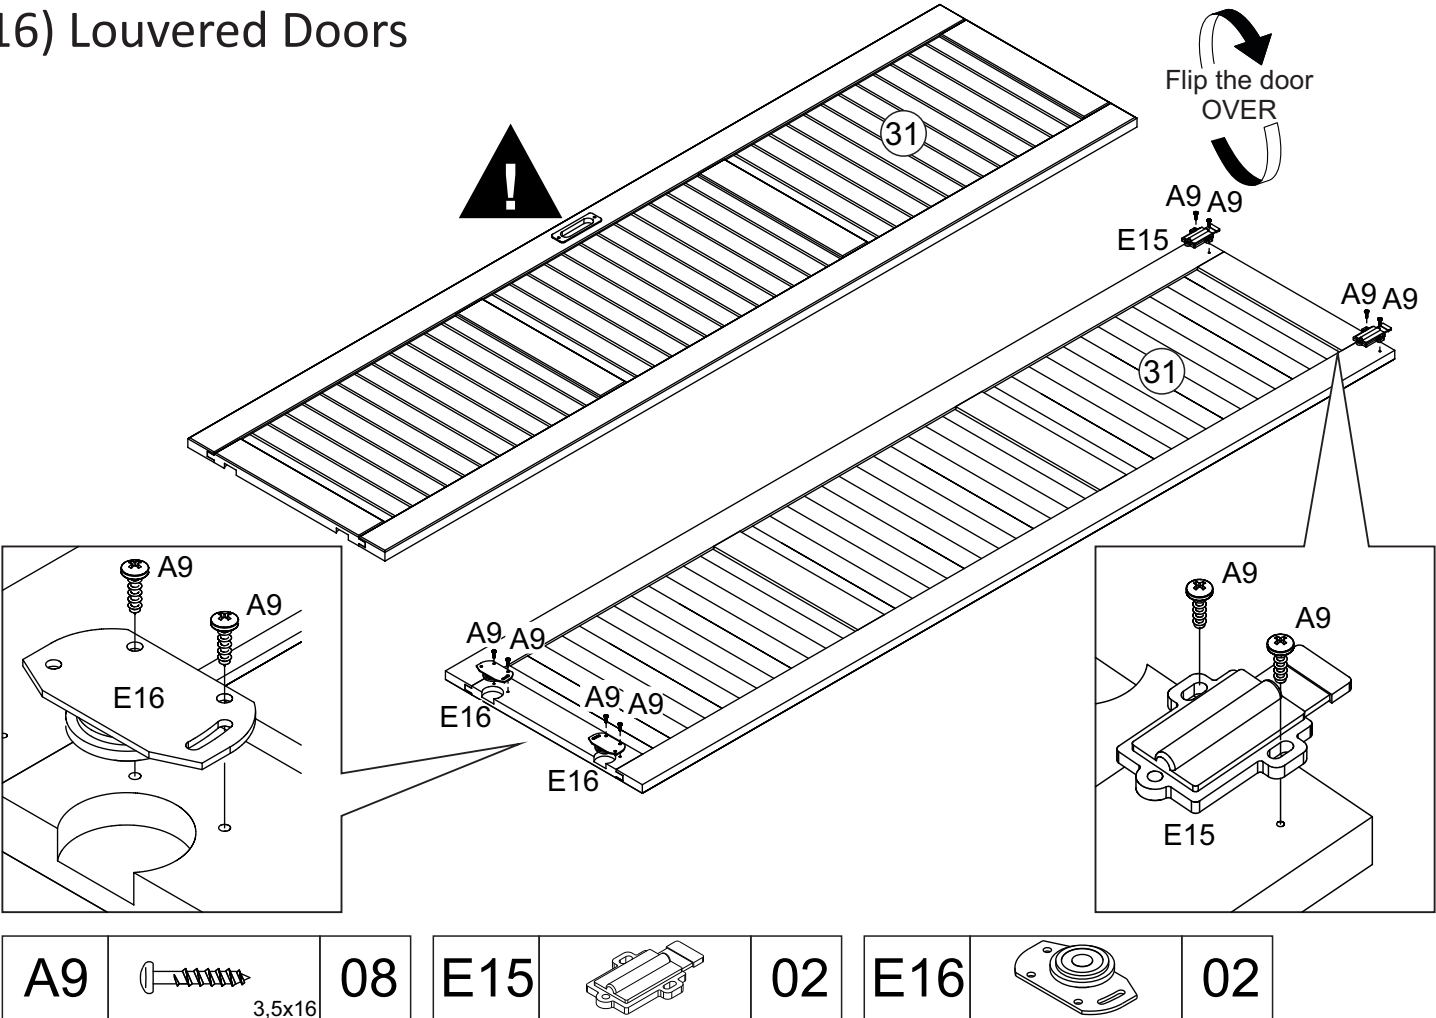


17) Louvered Doors

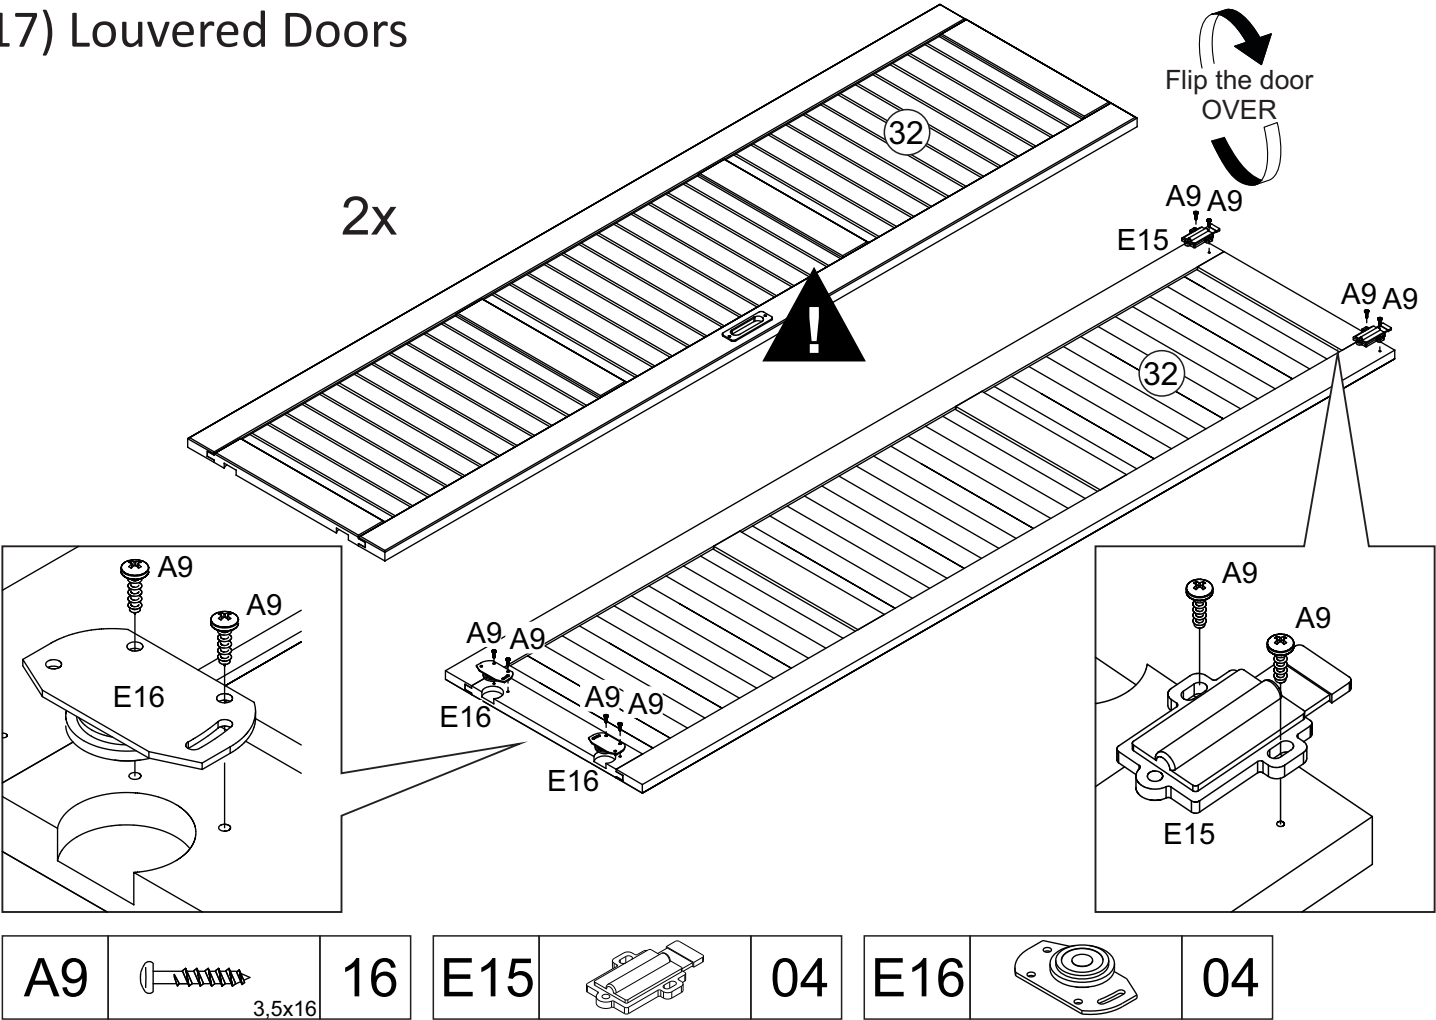


18) Louvered Doors

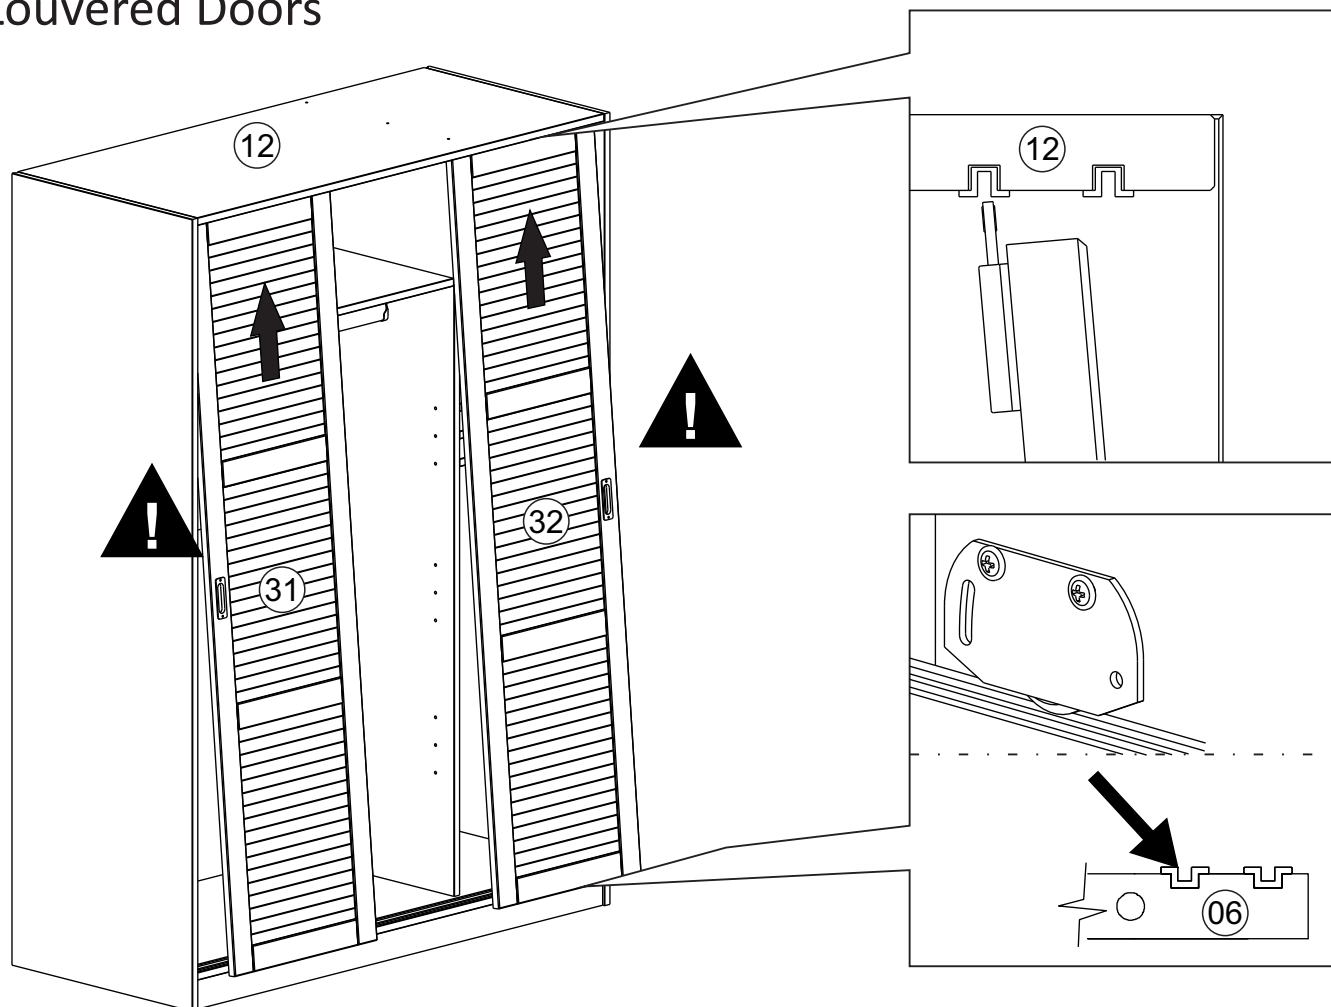


19) Louvered Doors

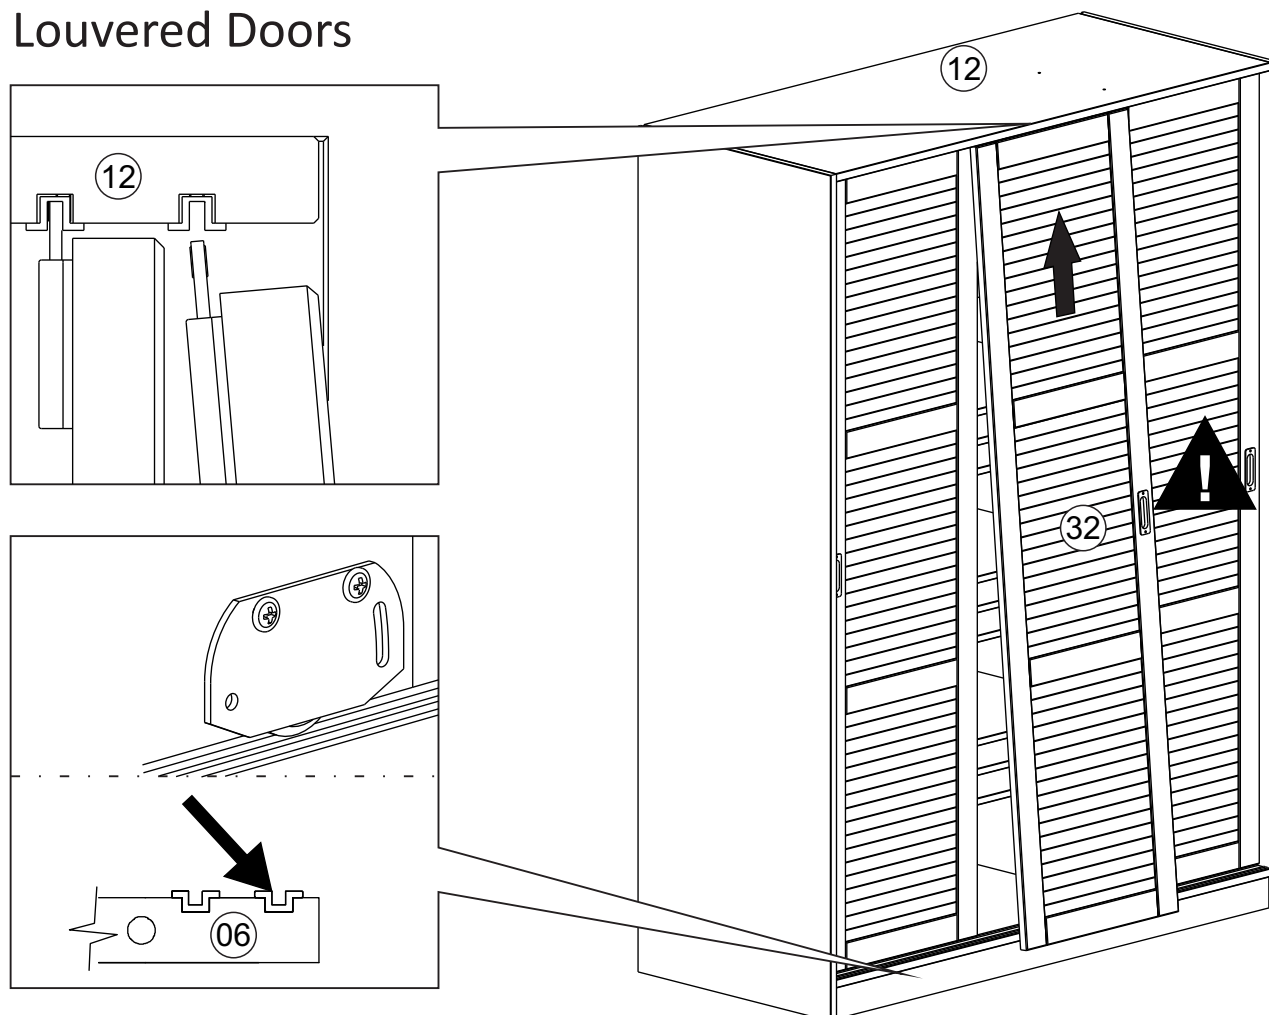


14) Mirrored Doors

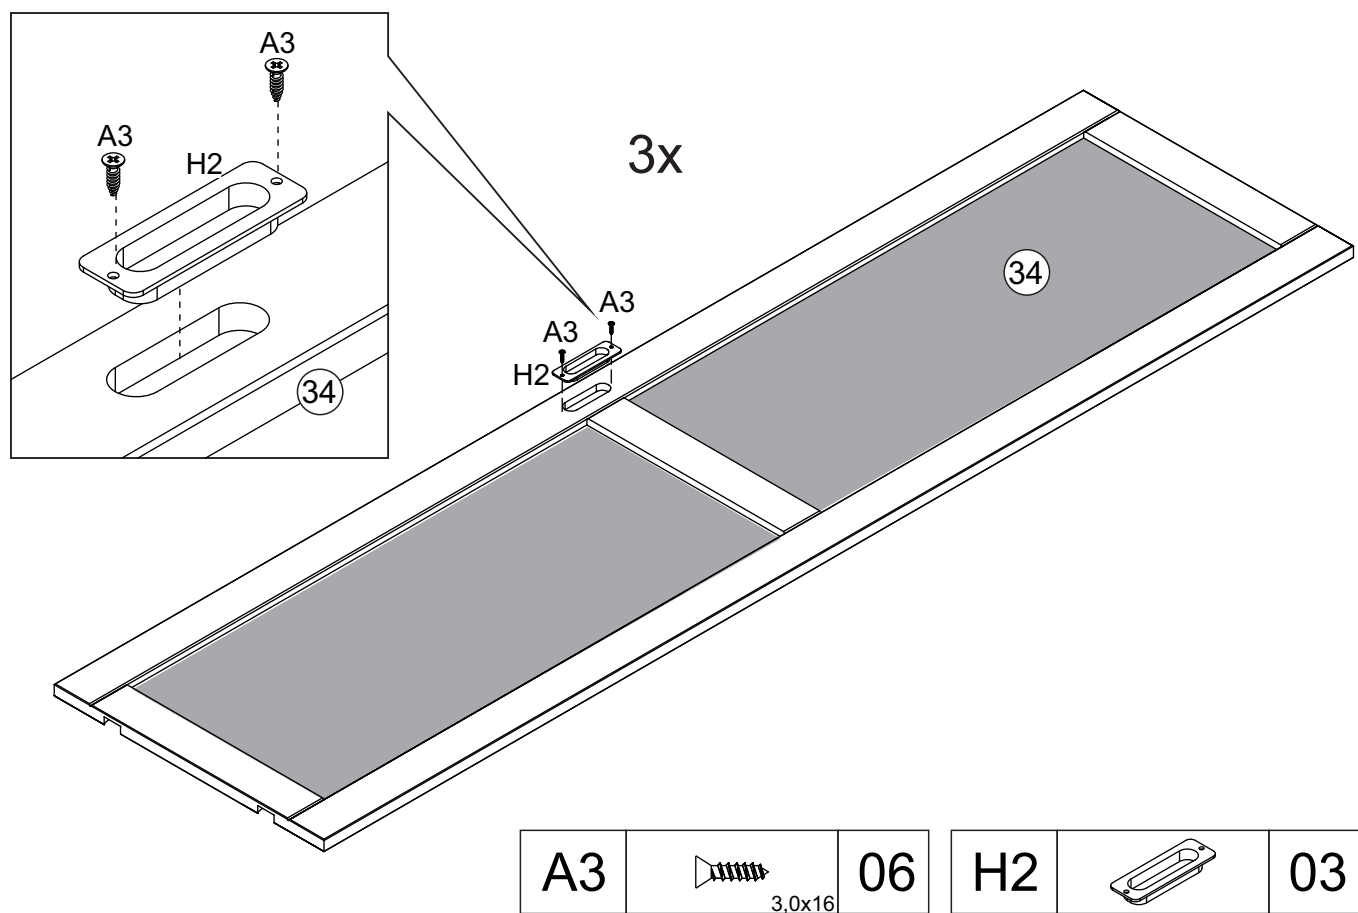


15) Mirrored Doors

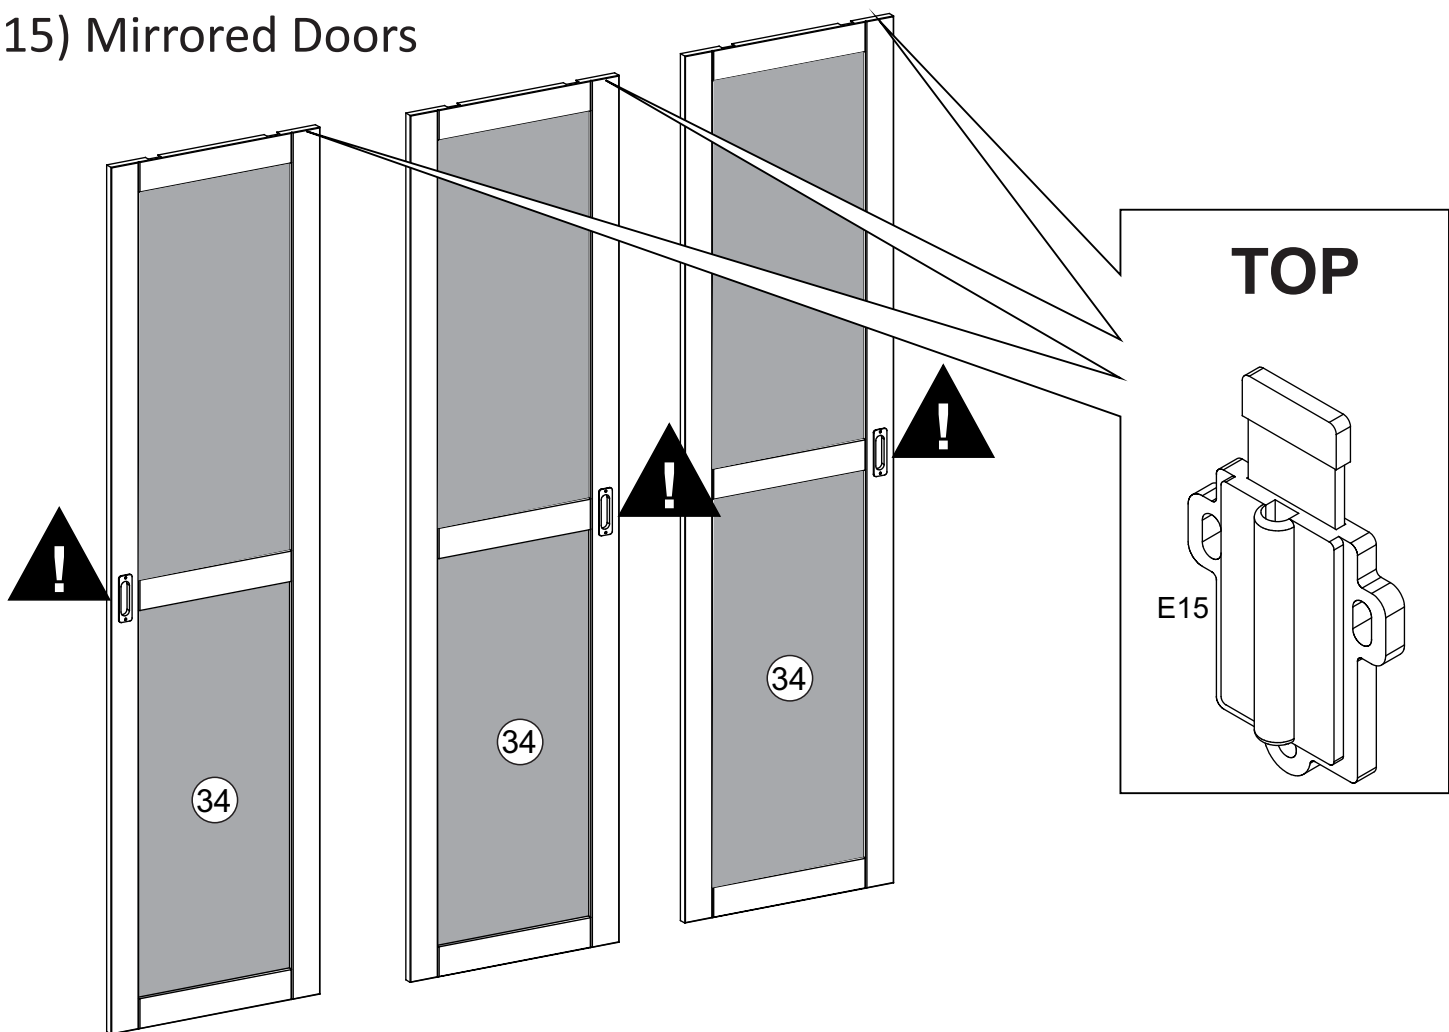


16) Mirrored Doors

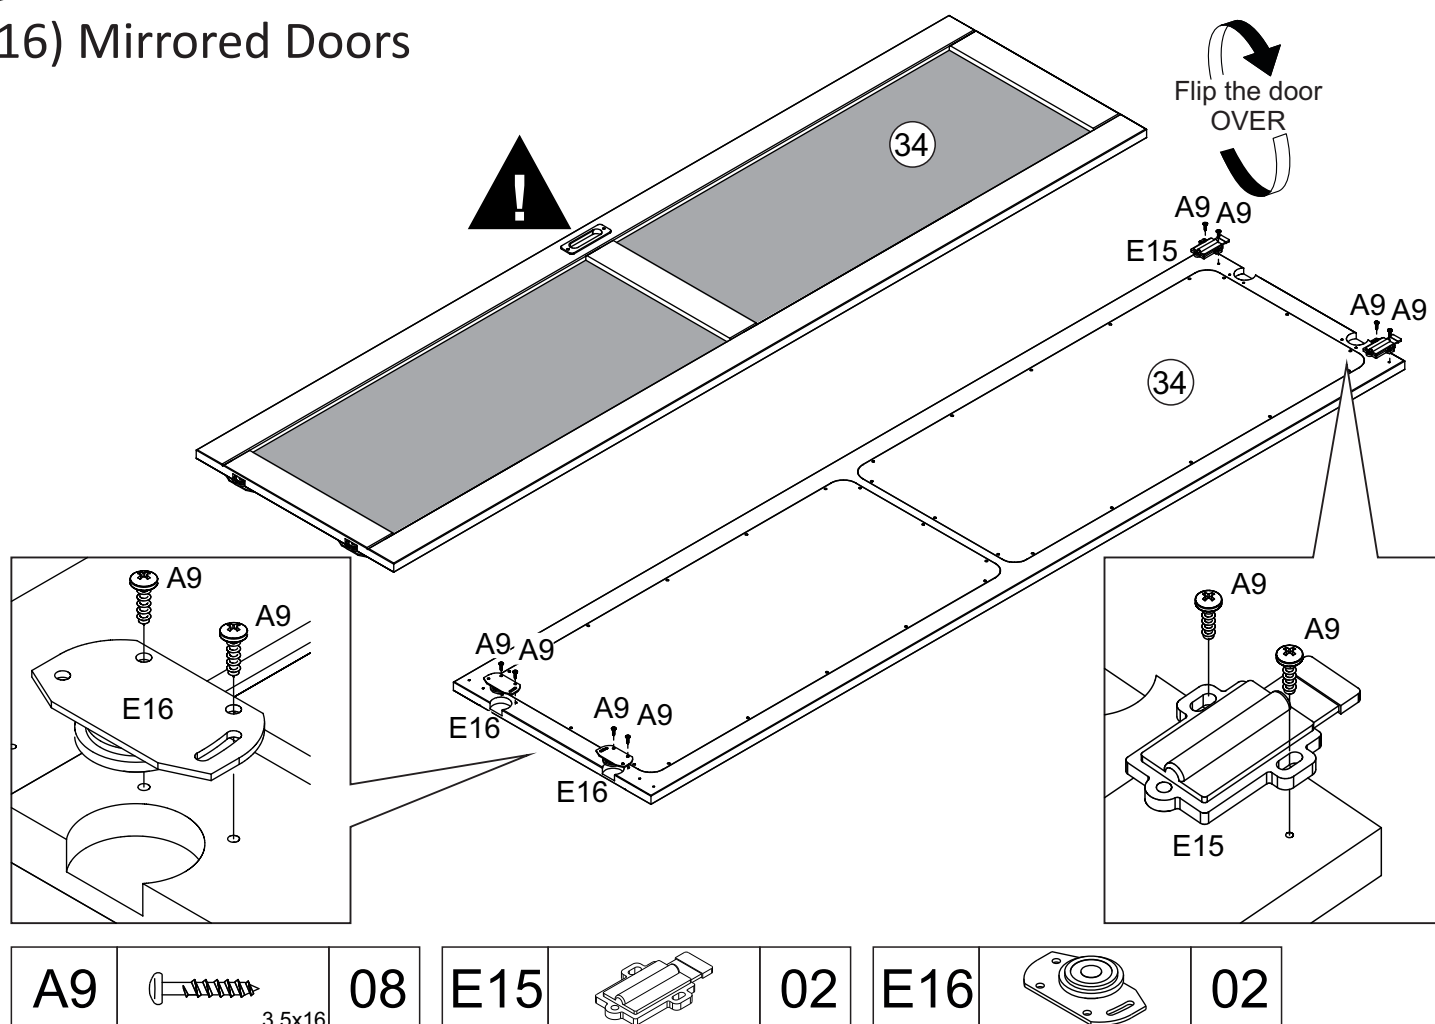


17) Mirrored Doors

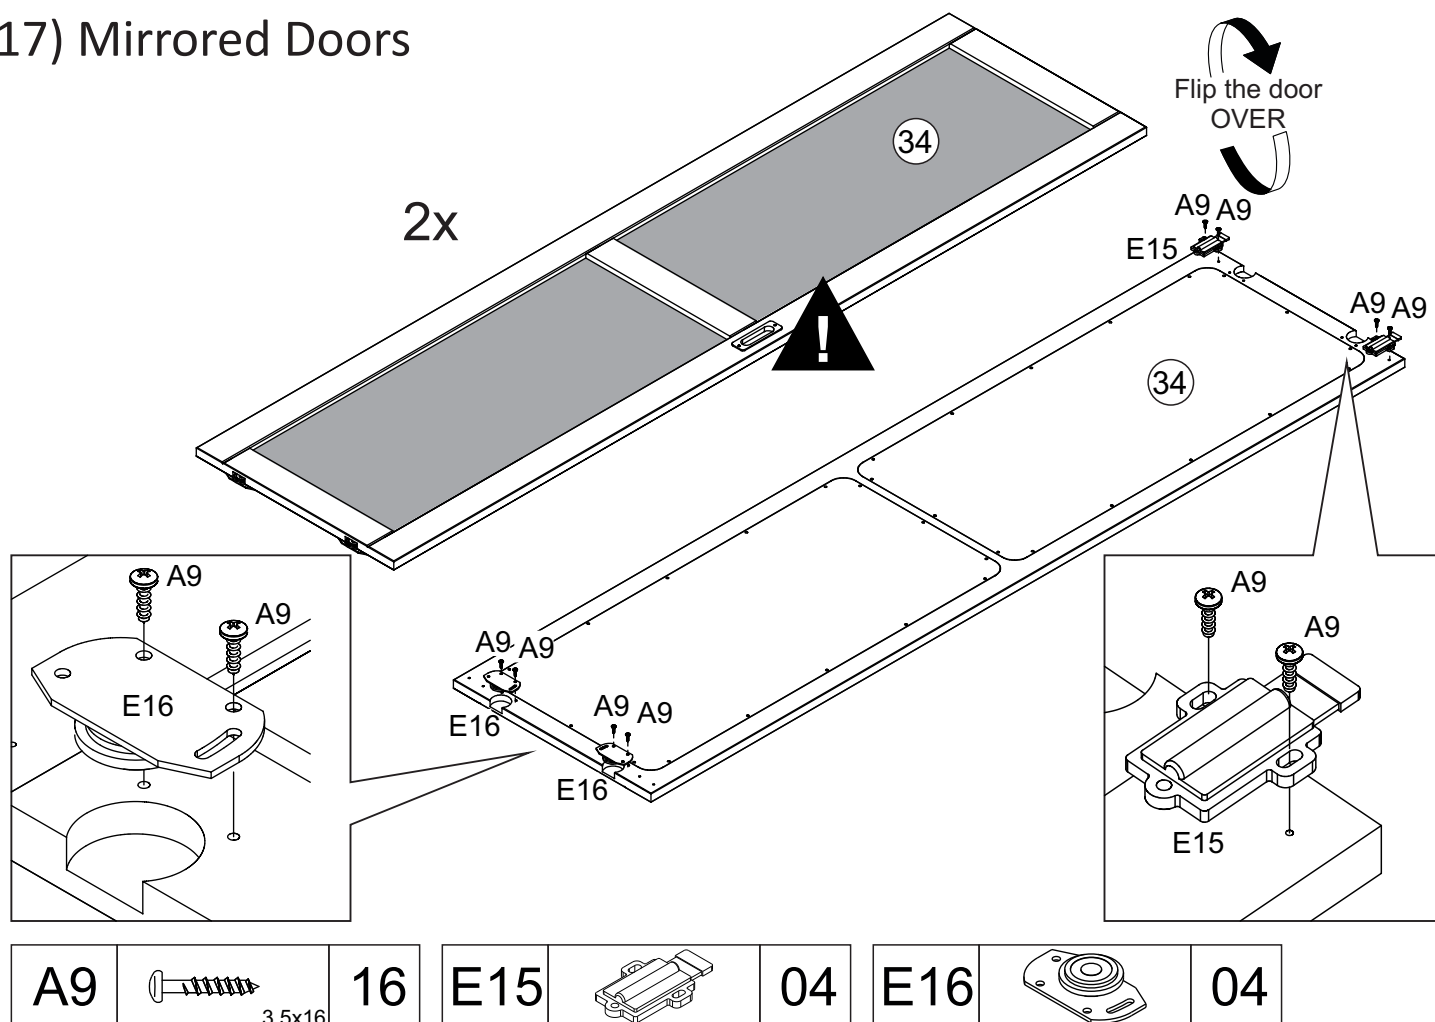

18) Mirrored Doors


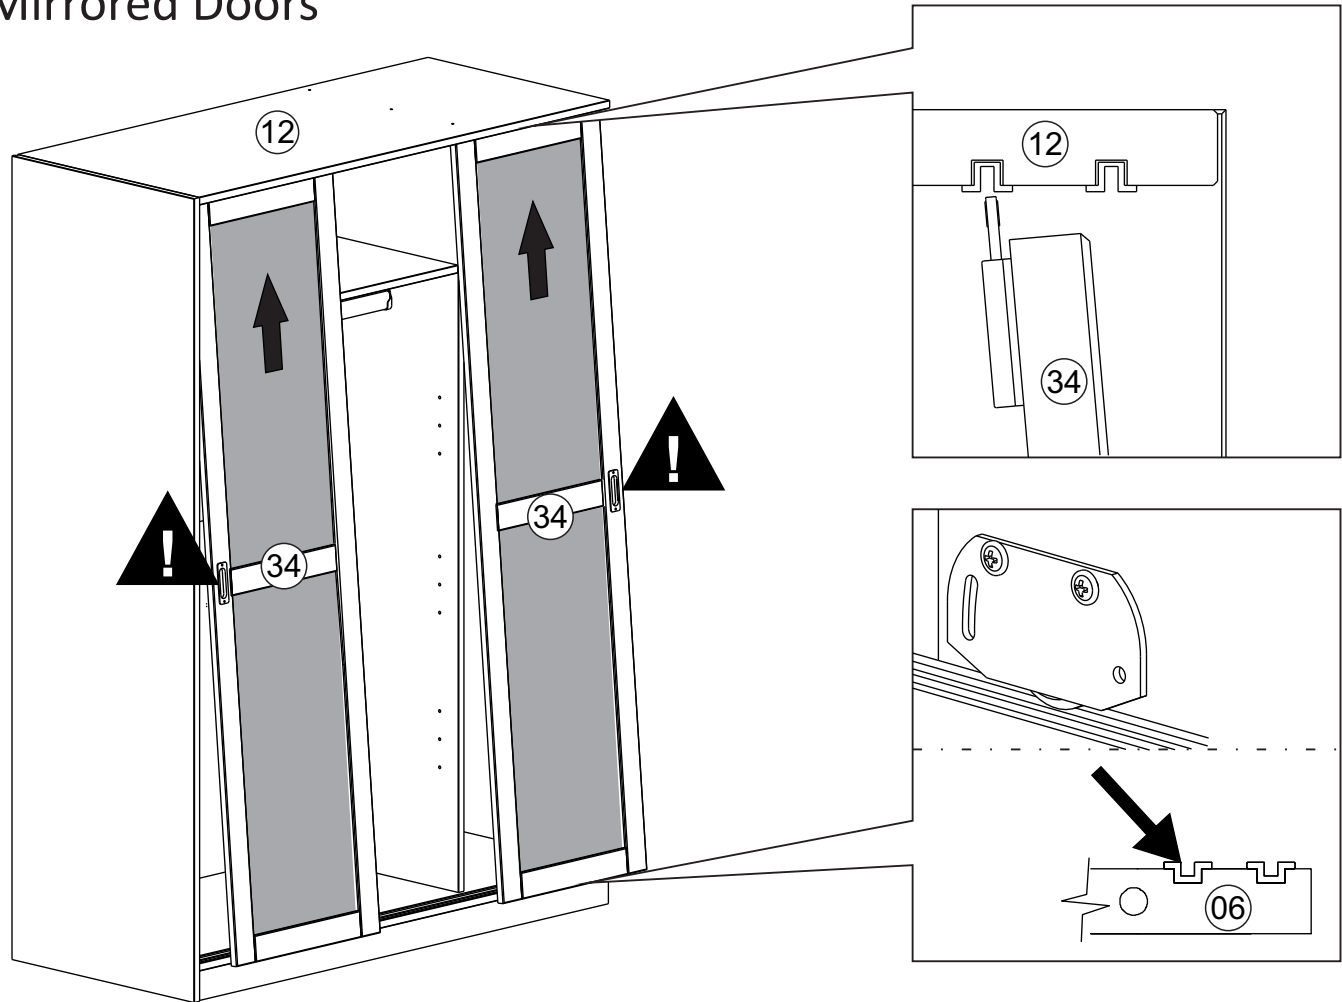


19) Mirrored Doors

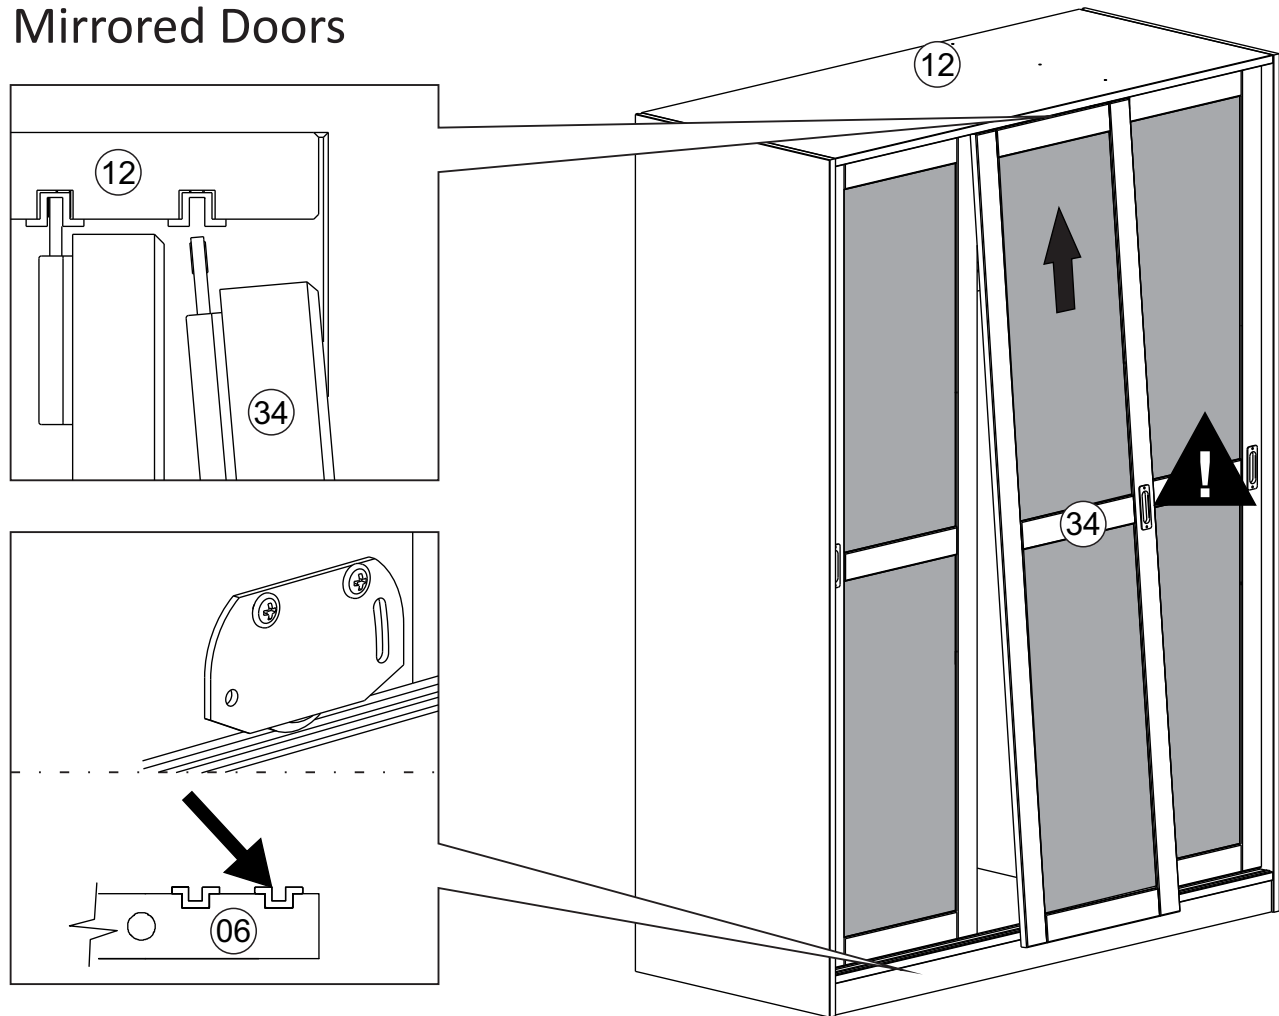







20)


Door adjustment

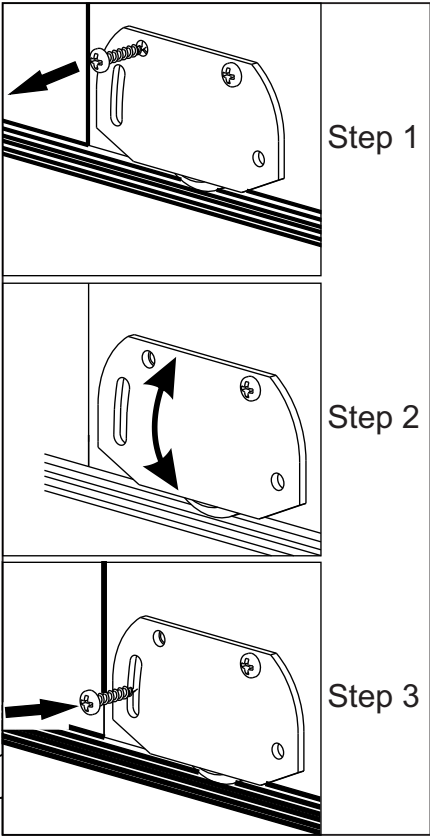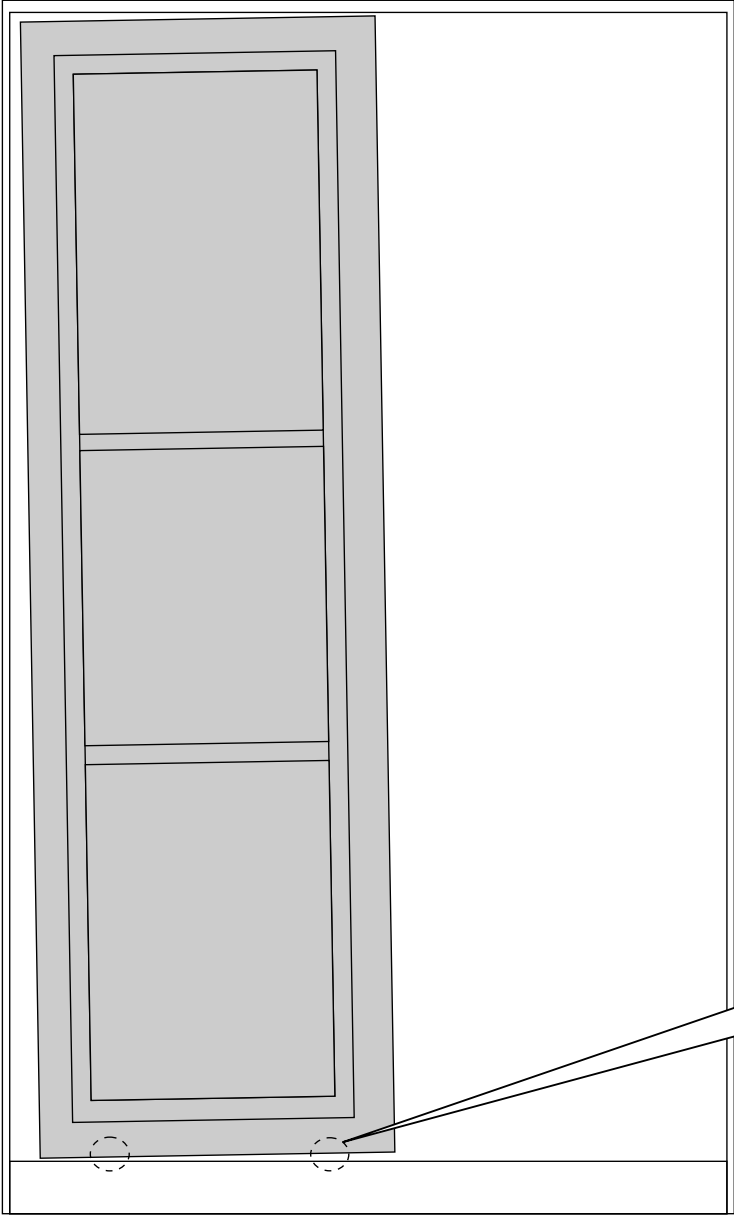

21)

FURNITURE TIPOVER PREVENTION KIT INSTALLATION

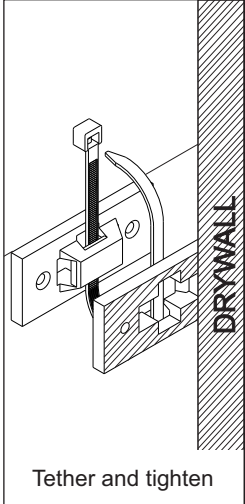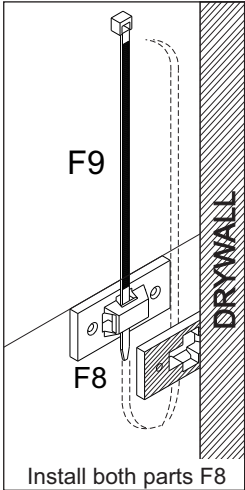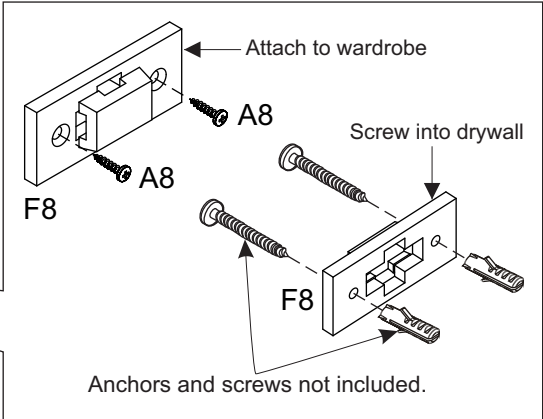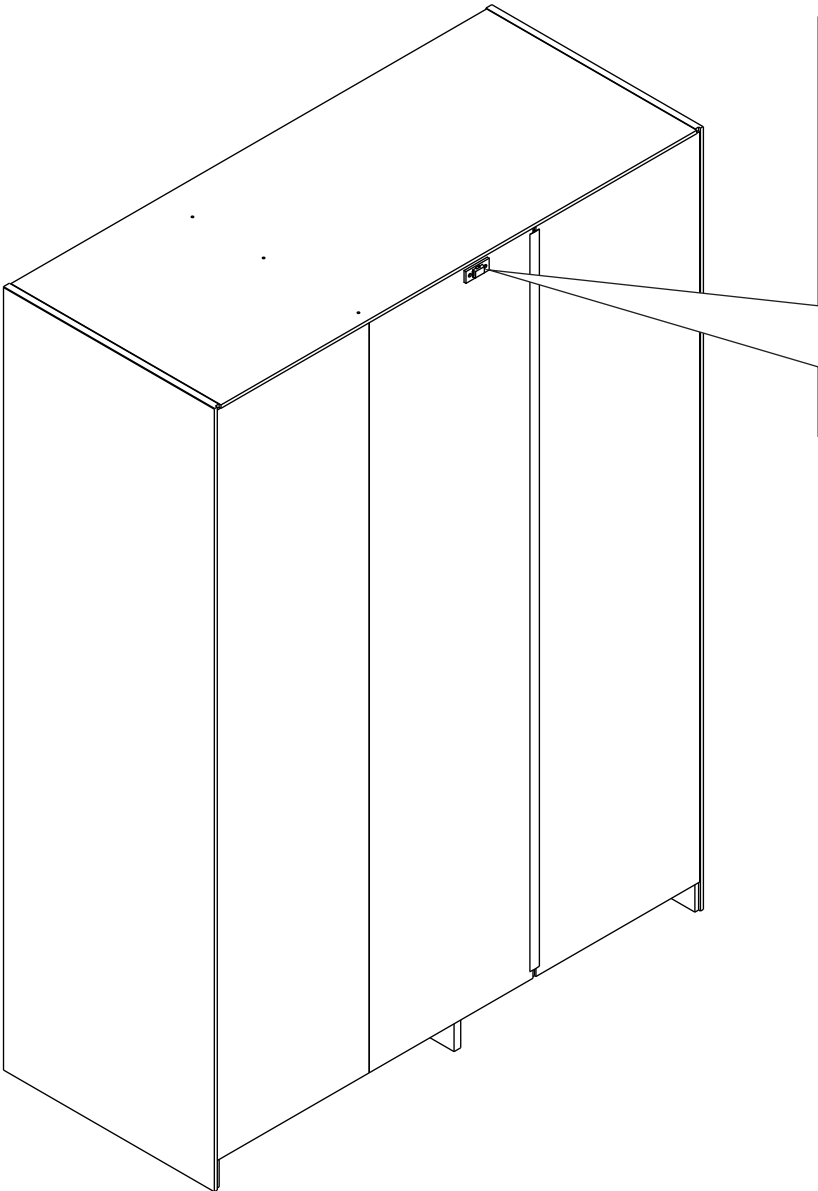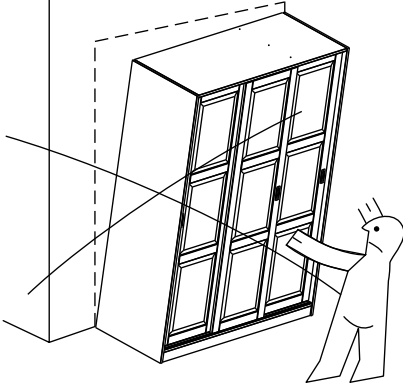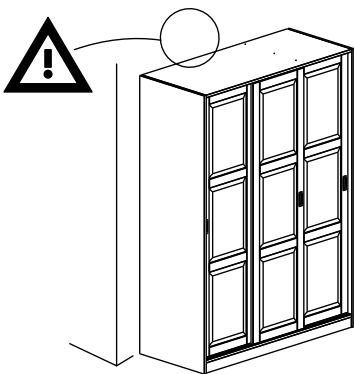

A8	 3,0x20	02
F8		02
F9		01