
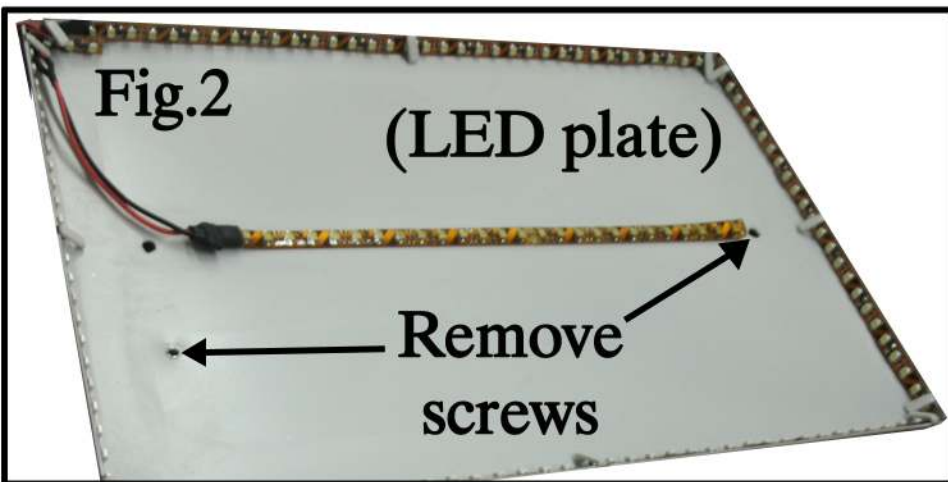


FIELD MODIFICATION INSTRUCTIONS FOR # 146603

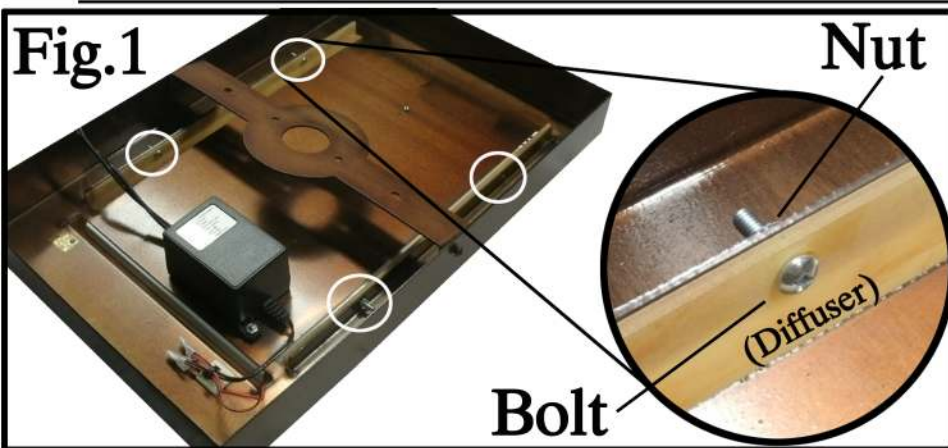

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Do not scratch your finish, flip your sconce onto its face so that you are looking at the backside. Remove the four nuts and bolts, that hold in place your acrylic diffuser. Remove your diffuser. (Fig.1)
- 2.) Flip your sconce over so the front is facing. Remove the two screws from your LED plate. Clip the wires leading away from old LED plate. (Fig.2)
- 3.) Place your new LED plate where your old plate came out of, tucking the wires through to the backside. Screw your two screws into the plate and sconce, securing the plate in place. (Fig.2)
- 4.) Lower your sconce onto the diffuser, and secure in place with the four nuts and bolts from step 1. (Fig.1)
- 5.) Connect your wires as per local codes: the red from the LED plate will be joined with the grey striped black wire from the power supply. Connect the remaining two wires together. Stick your wire tie mount to the back of the sconce and ziptie your wires snug. (Fig.3)
- 6.) Slide your white diffuser in between the LED plate and the thicker diffuser. Be sure you are passing the four bolts on the front side. (Fig.4)
- 7.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com