



ASSEMBLY INSTRUCTIONS








TWIN FLOOR BED WITH FENCE WITHOUT DOOR

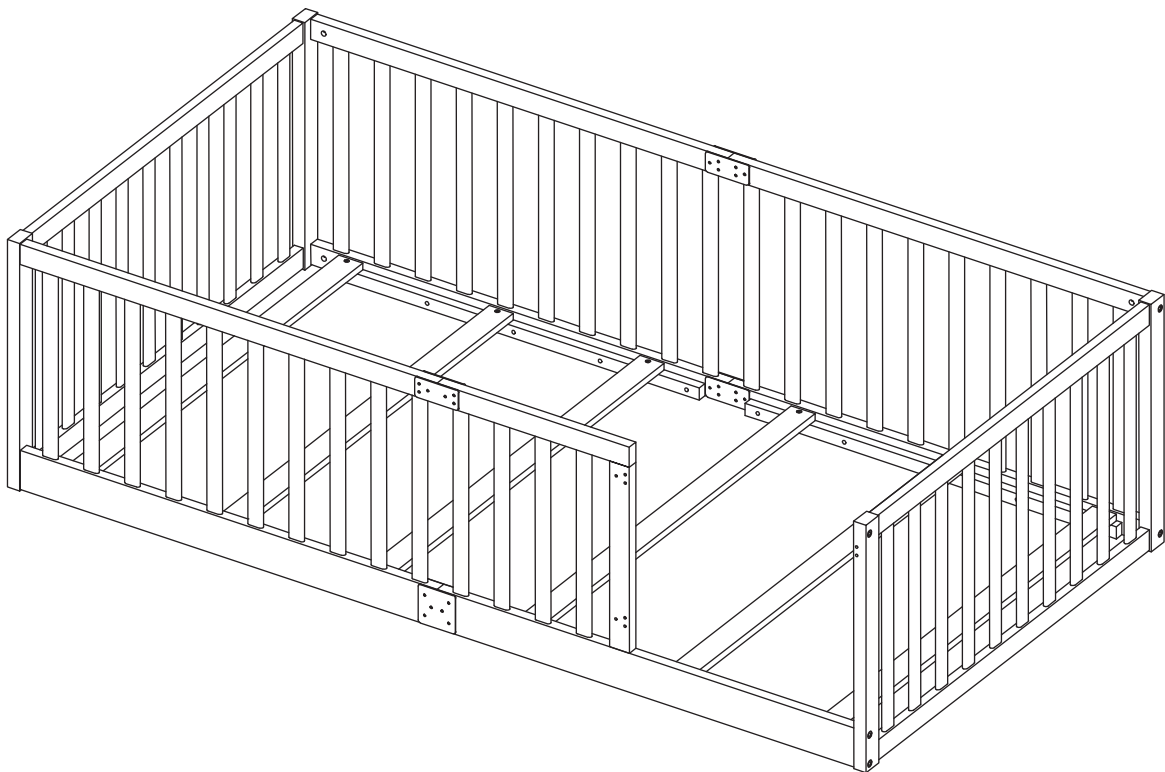



Detail View

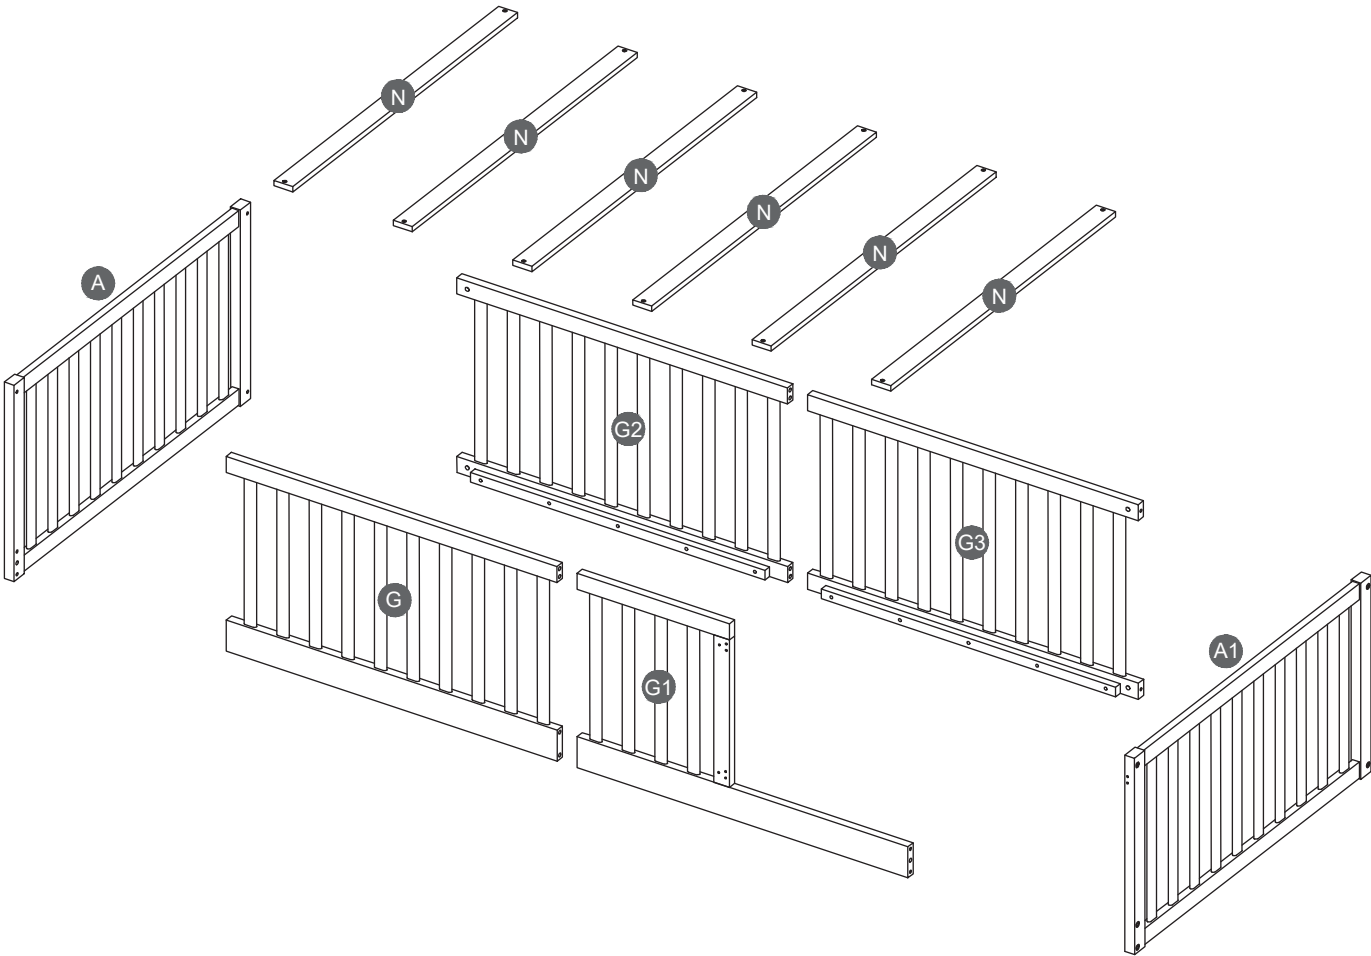


Part List

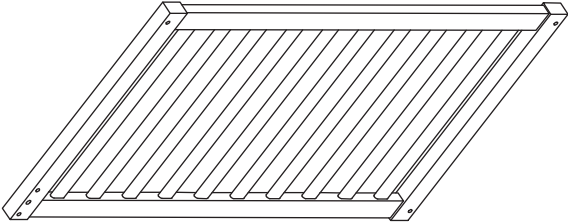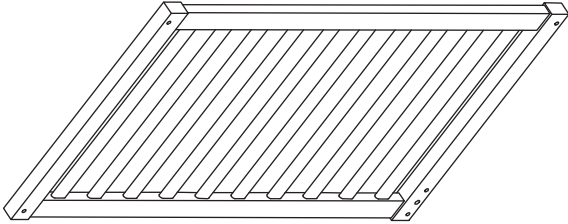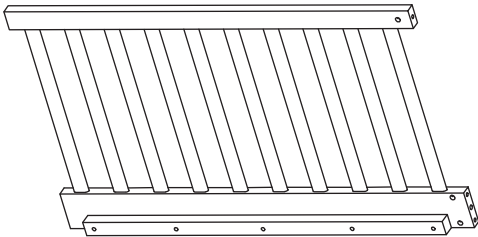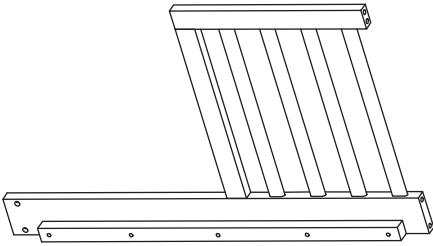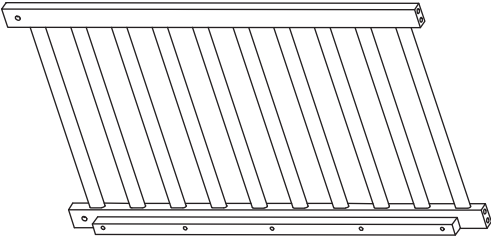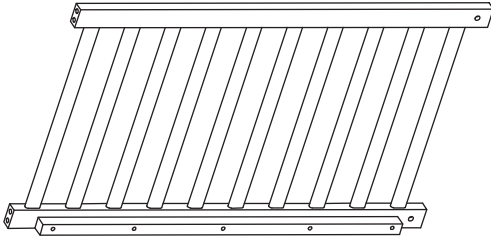A  Hb. Fb. Panel (Left) - 1pc	A1  Hb. Fb. Panel (Right) - 1pc
G  Side Rail Front (Left) - 1pc	G1  Side Rail Front (Right) - 1pc
G2  Side Rail Back (Left) - 1pc	G3  Side Rail Back (Right) - 1pc
N  Bed Slats - 6pcs	

Hardware List


1  M6 x 70mm JCBC (9pcs)	2  M6 x 15mm Barrel Nut (9pcs)	3  M10 x 30mm Wood Dowel (Short) (2pcs)
4  100 x 44 x 1.5mm Metal Bracket (3pcs)	5  100 x 44 x 1.5mm Metal Bracket (3pcs)	6  85 x 85 x 1.5mm Metal Bracket (1pc)
7  85 x 85 x 1.5mm Metal Bracket (1pc)	8  M4 x 16mm CSK Screw (48pcs)	9  Sticker Cap (2pcs)
10  M10 x 40mm Wood Dowel (Long) (8pcs)	11  20 x 20 x 290mm Wood Block (1pc)	12  M4 x 25mm CSK Screw (12pcs)
13  M4 Allen Key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

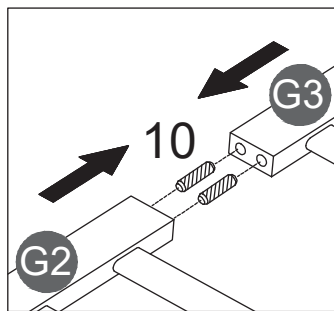


Note:
Use the **Long
Wood Dowel
M10 x 40mm**

10


4PCS

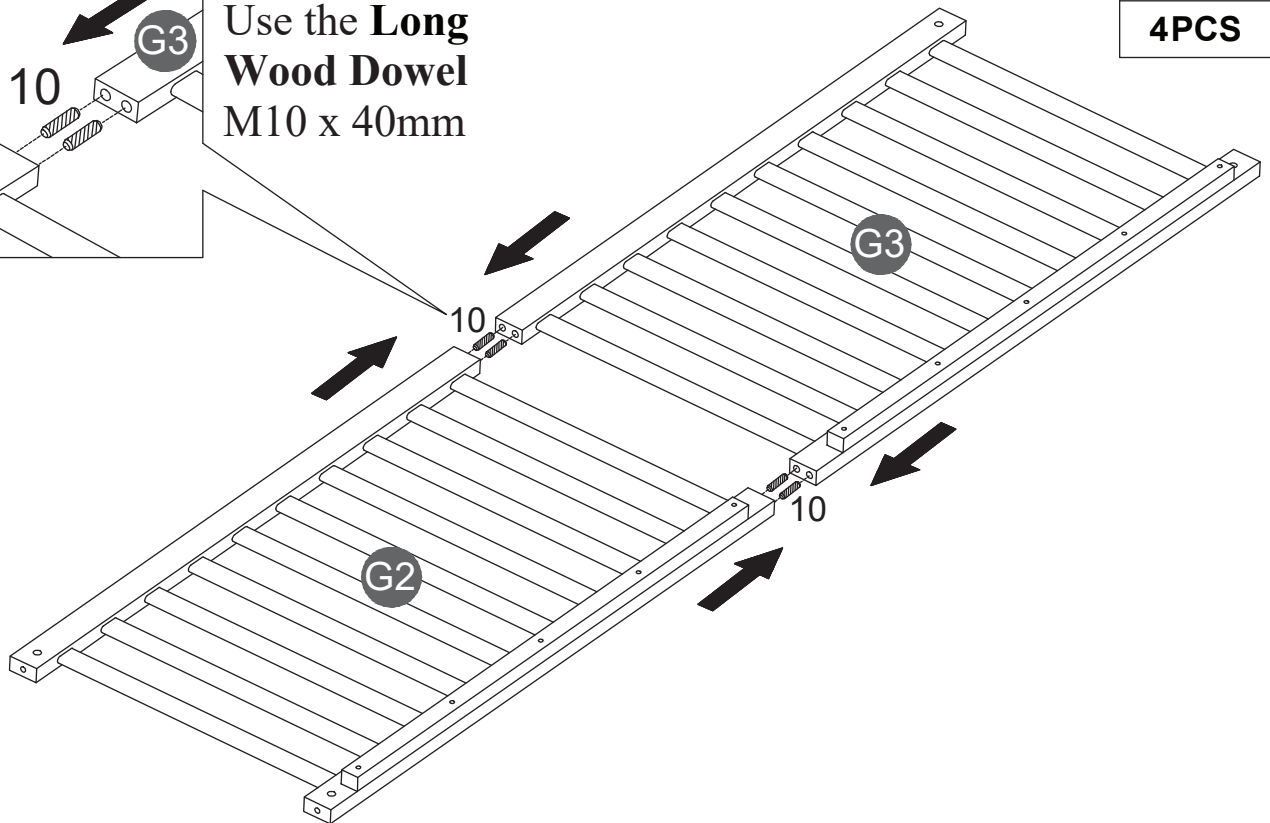

STEP 2:

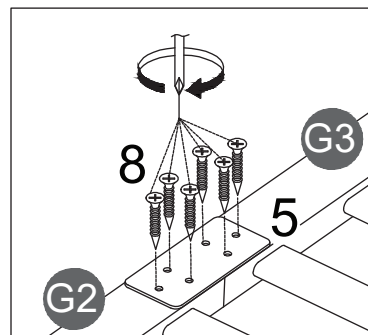


5 	8
2PCS	12PCS

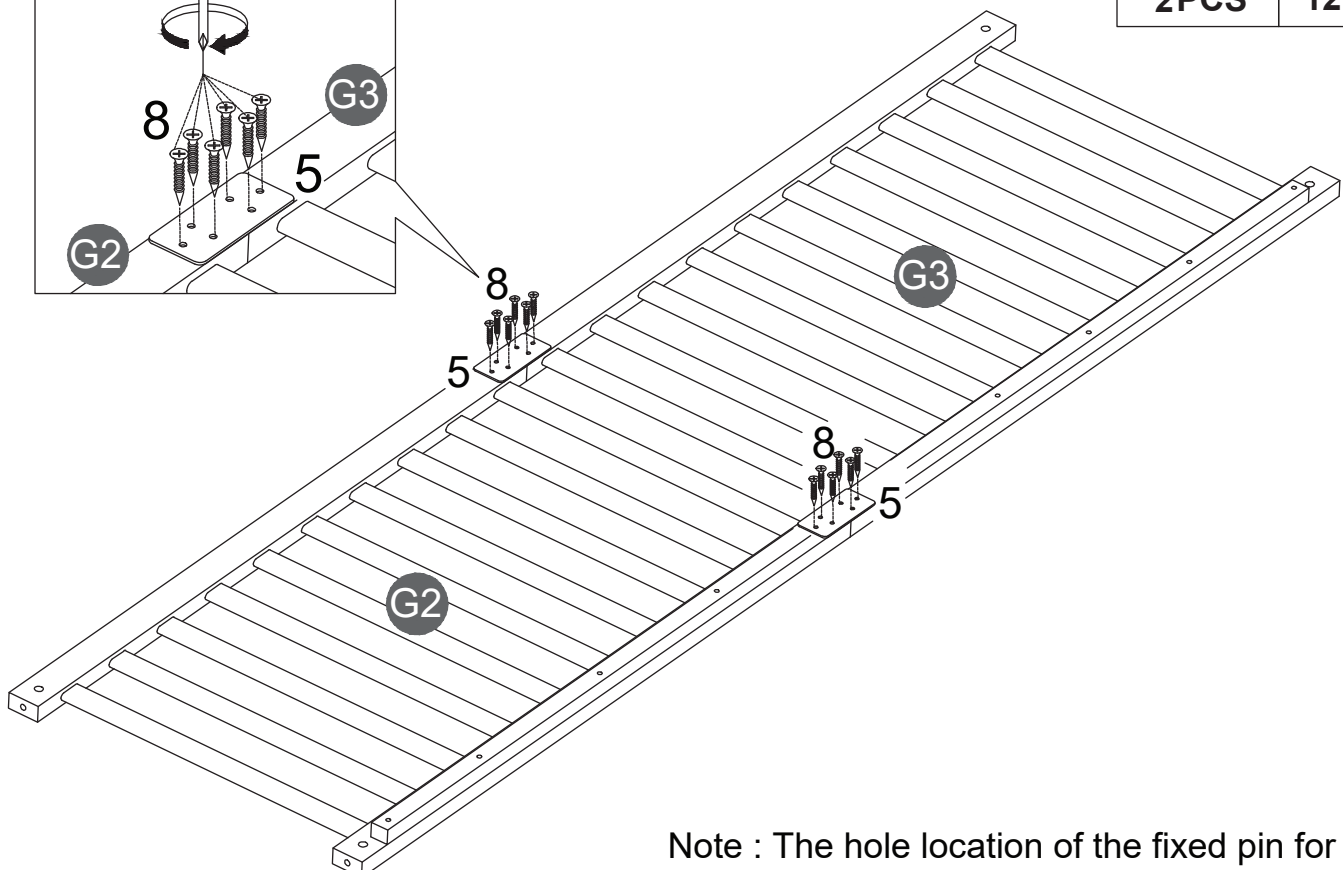


Note : The hole location of the fixed pin for each installation step is different.

STEP 3:

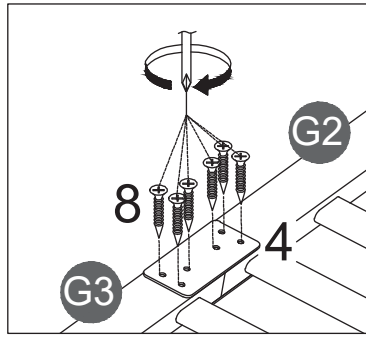


4	8
2PCS	12PCS

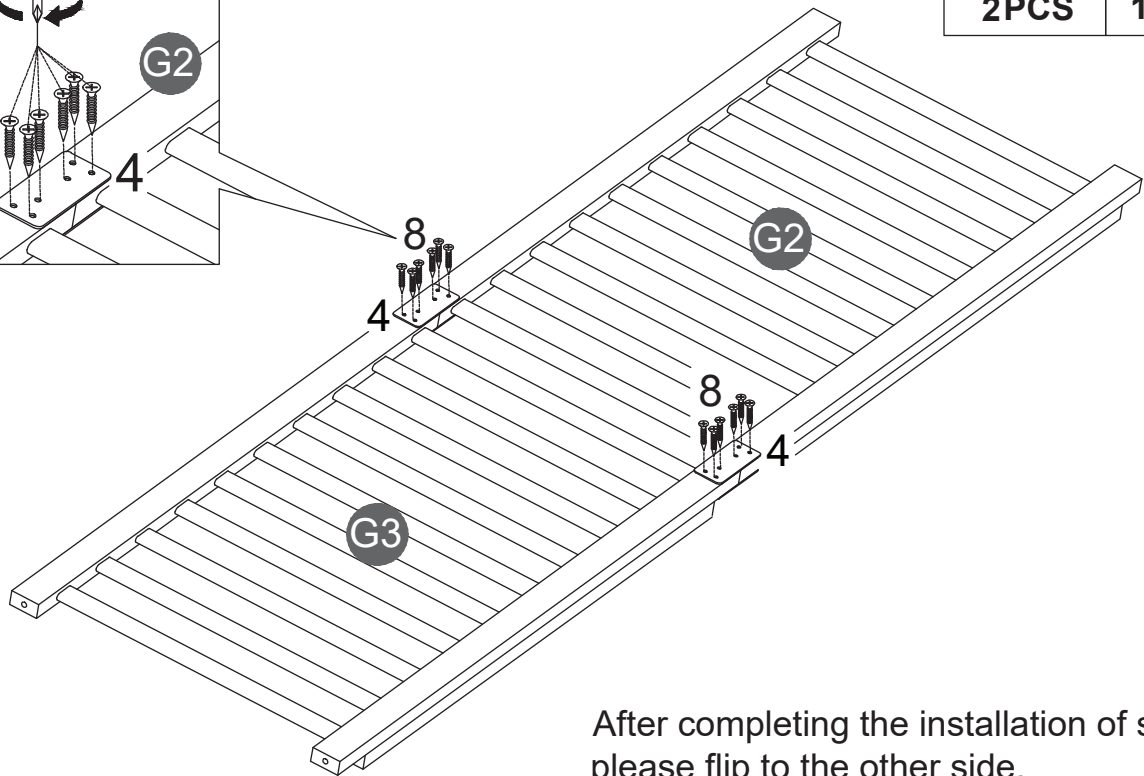



After completing the installation of step 2, please flip to the other side.

STEP 4:


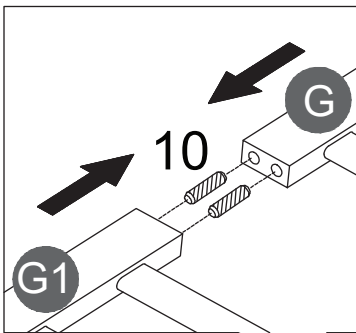



Note:
Use the **Long Wood Dowel**
M10 x 40mm


10	
4PCS	

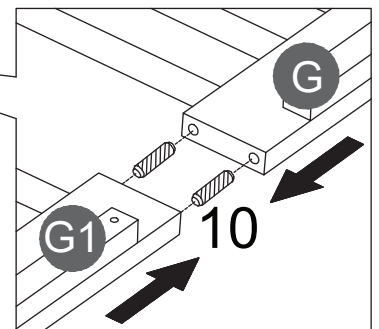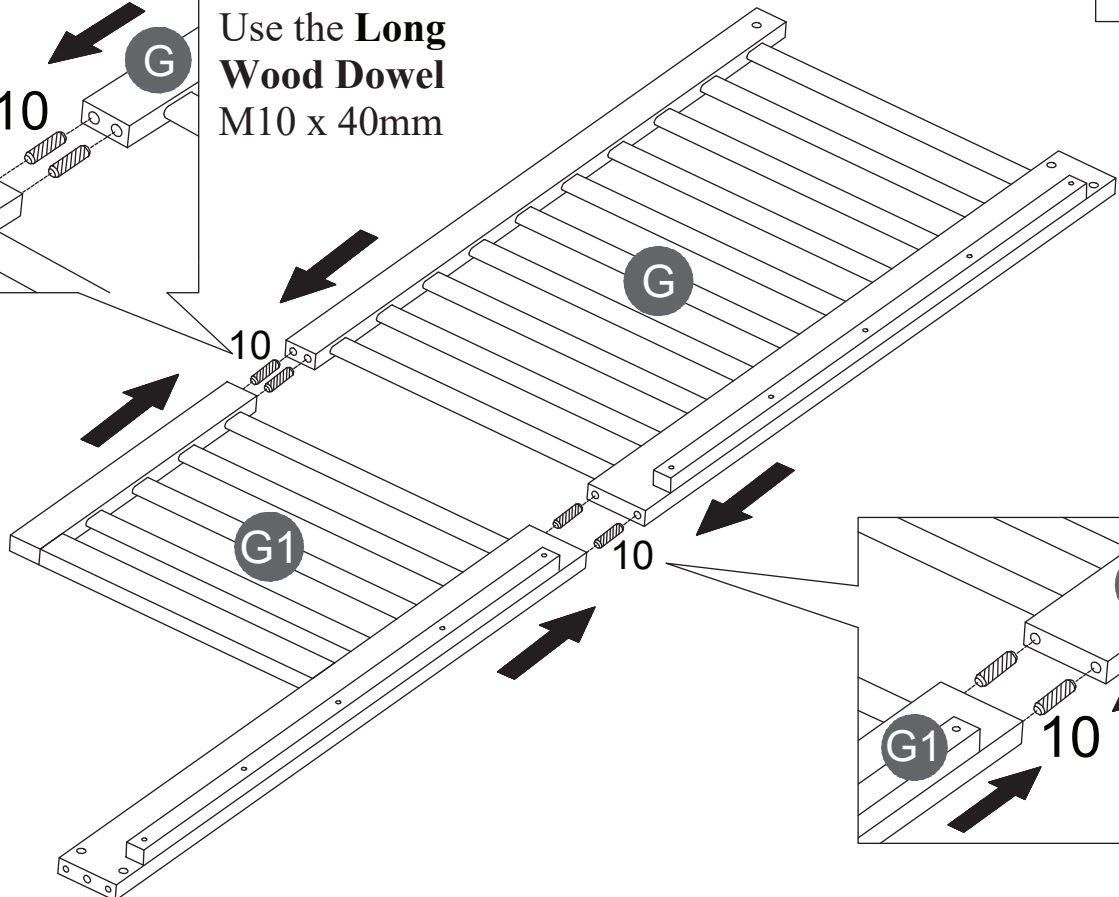

STEP 5:

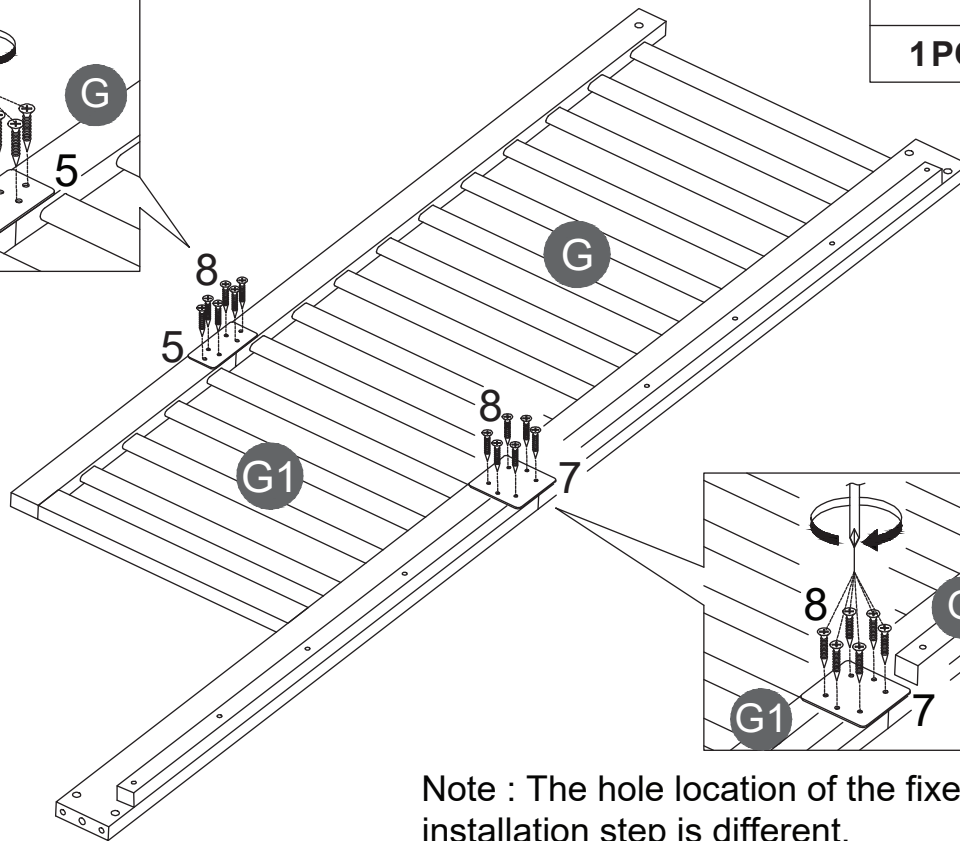
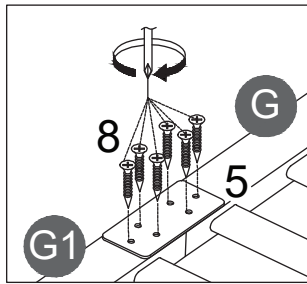




5	7
	
1PC	1PC
	8
	
	12PCS

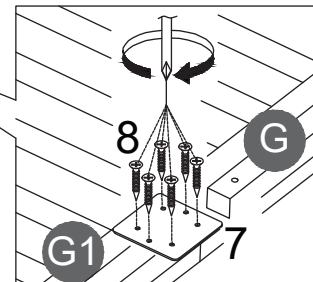


Note : The hole location of the fixed pin for each installation step is different.

STEP 6:

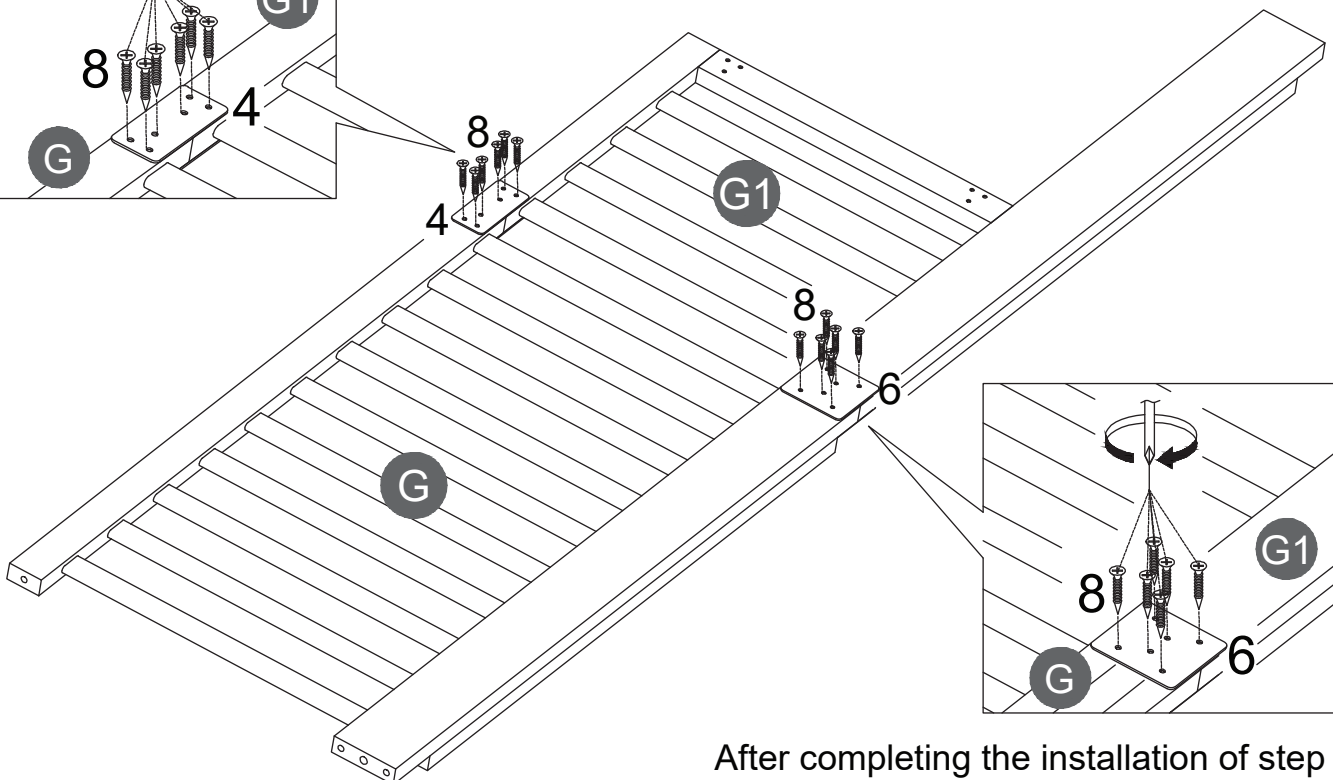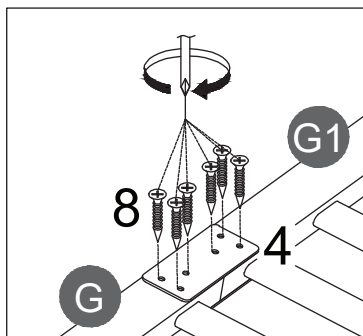


4	6	8
		
1PC	1PC	12PCS

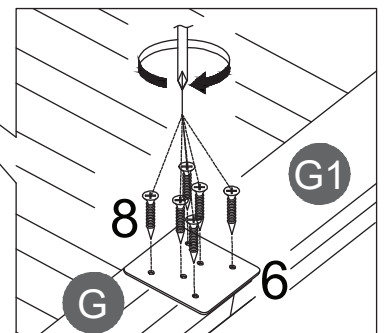

After completing the installation of step 5, please flip to the other side.



STEP 7:

1		2		3		9	
9PCS		9PCS		2PCS		2PCS	

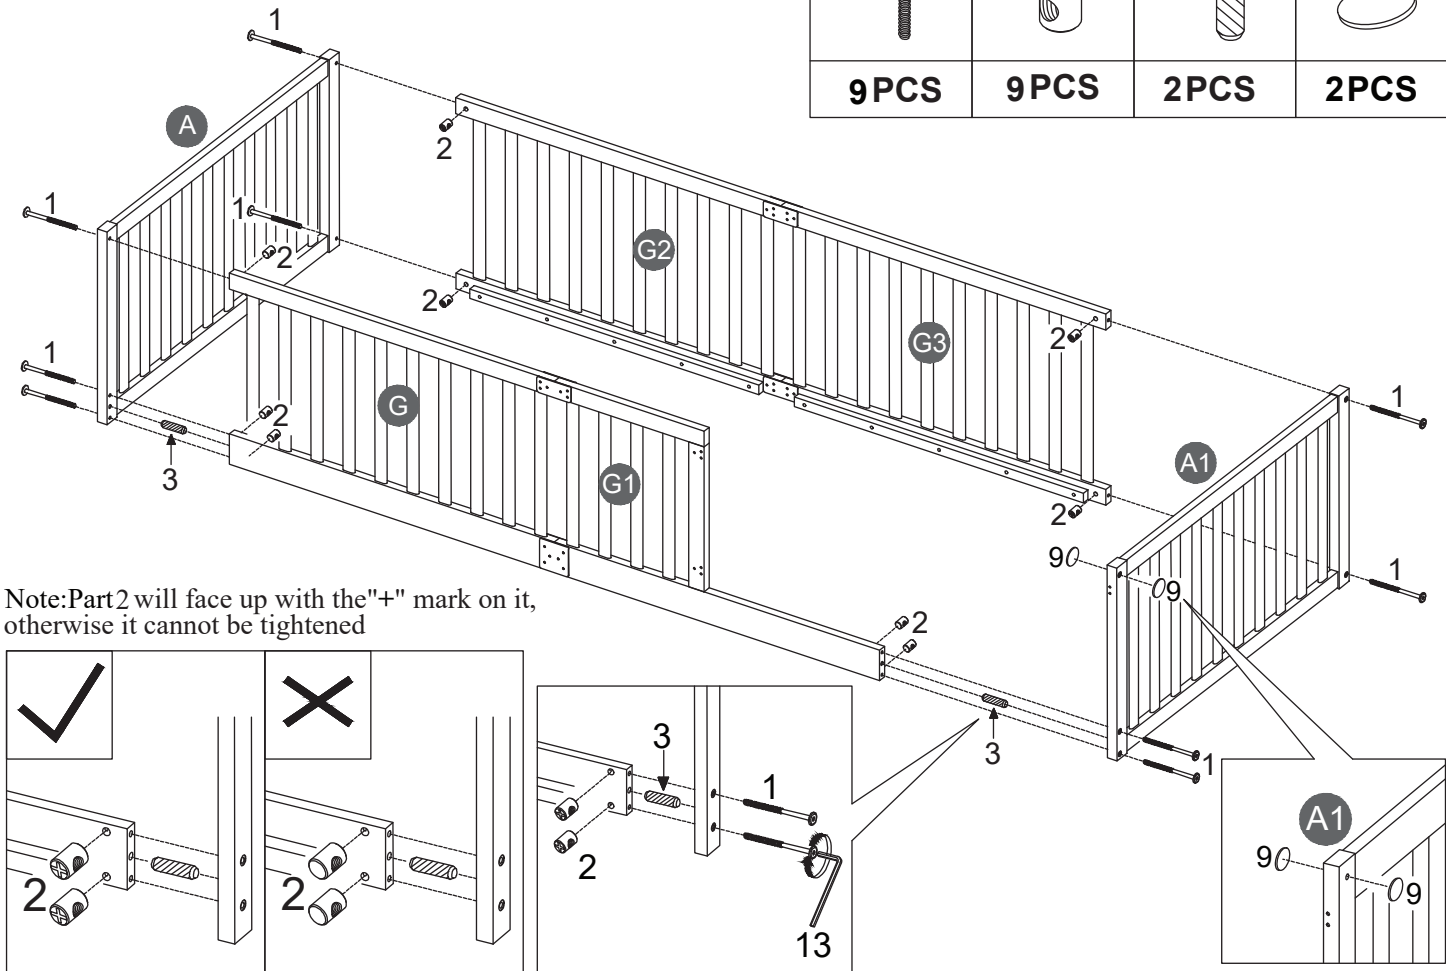


STEP 8:

11		12	
1PC		12PCS	

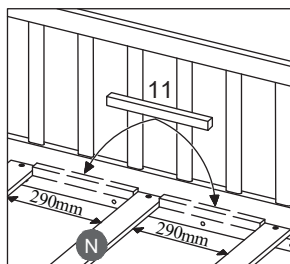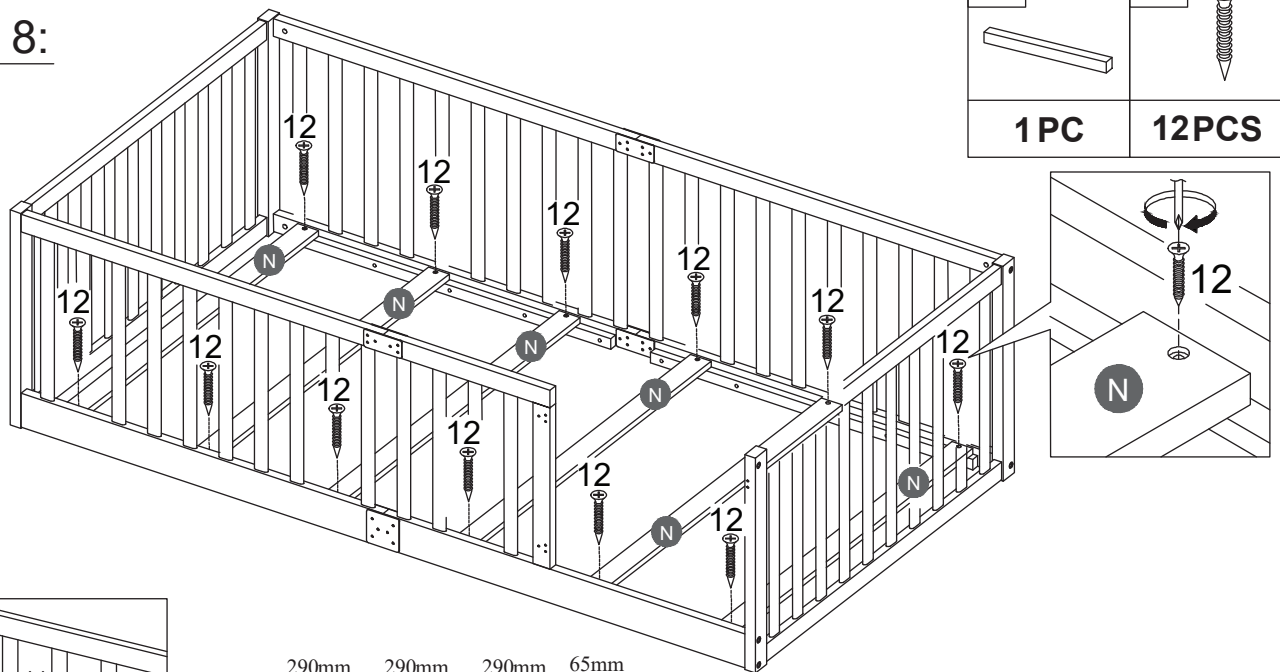

Note: Use Wood Block as a guidance distance between Bed Slats.

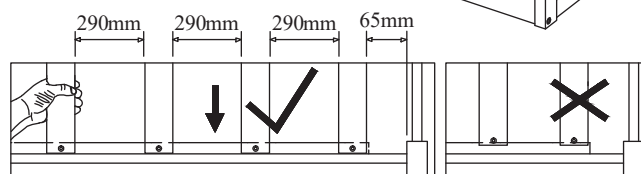

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.