

Storage Cabinet B

User Manual

INTRODUCTION


Thank you for purchasing our products. Committed to providing customers with the best quality products and service has always been our lifelong goal. Before using the product, please read this instruction manual carefully to ensure correct use. Keep the instruction manual in a place where the user can find it at any time.

PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.
Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
3. The main components of the product is relatively heavy. Please pay attention to safety during installation.
4. The product is not stable during installation. Please do not move it randomly before it is completely installed.
5. If you have any questions during installation, please contact the customer service in time.

*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.


*IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.

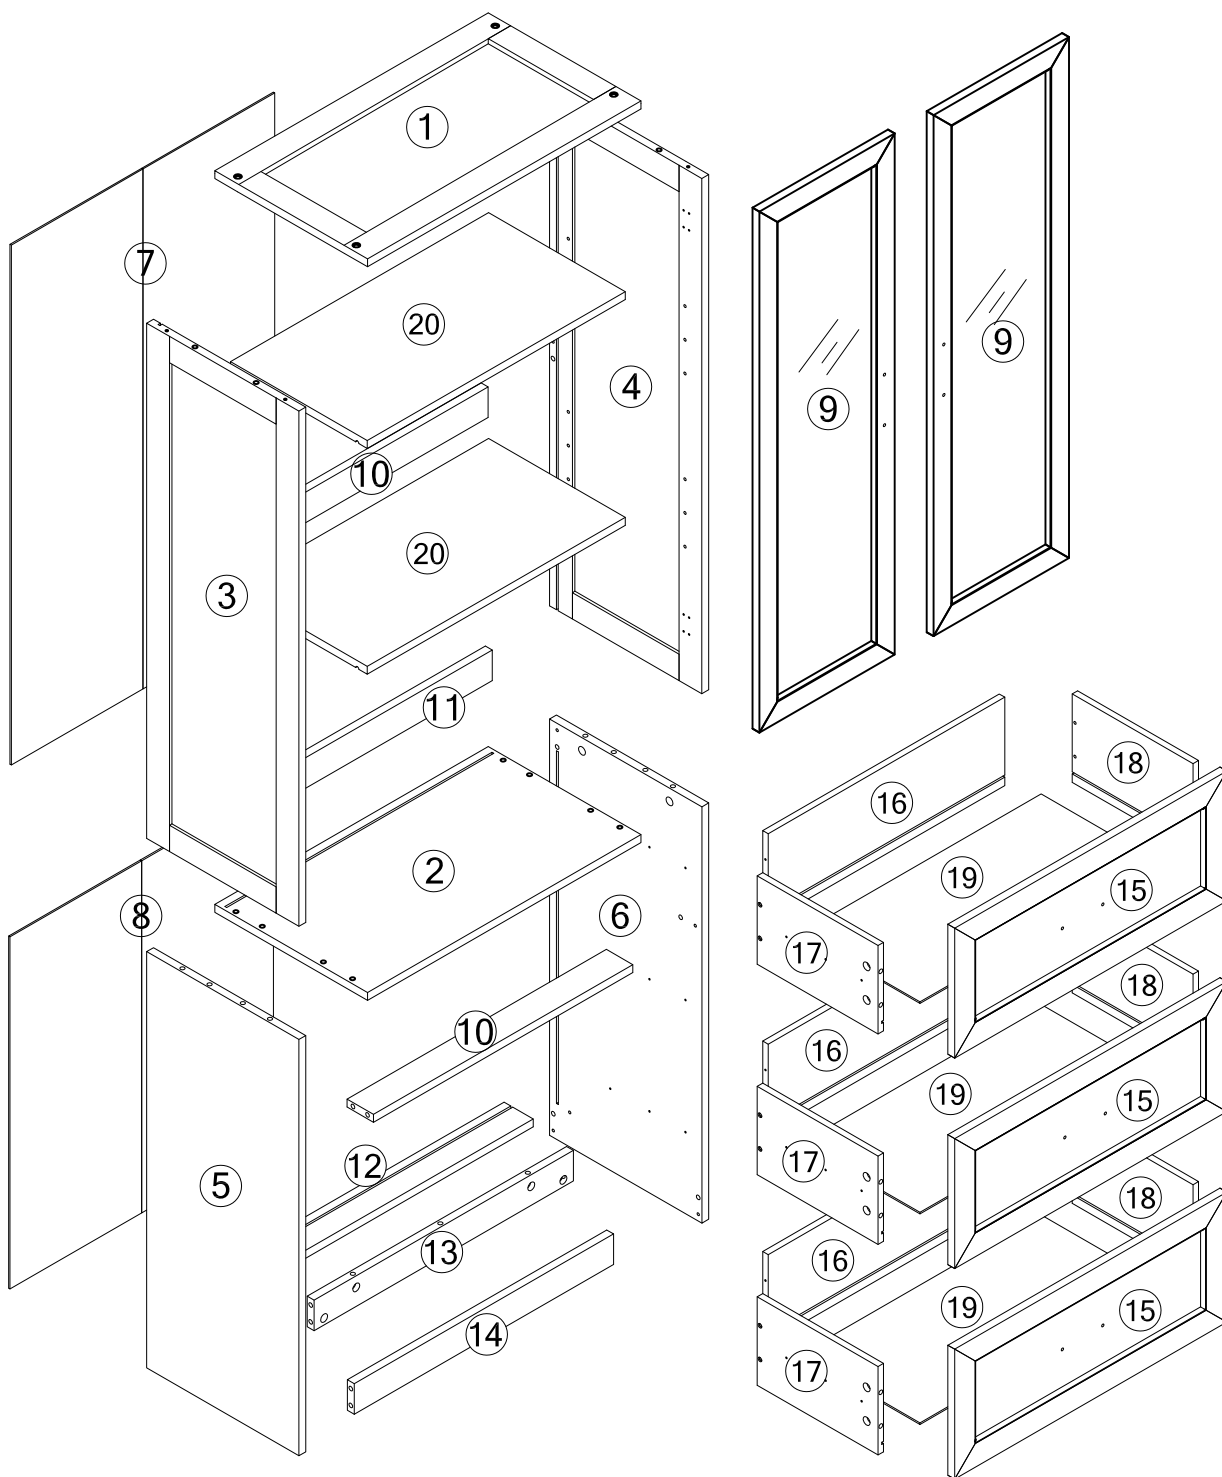

PARTS LIST


Unit(mm)

① 600*335*15

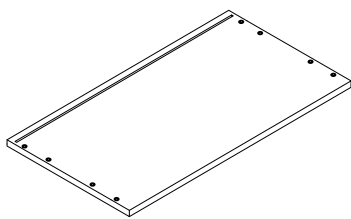


x1

② 600*335*15

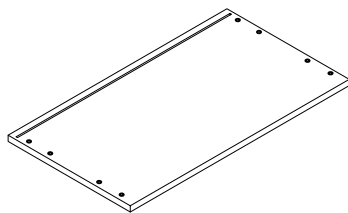


x1

③ 979*334*15

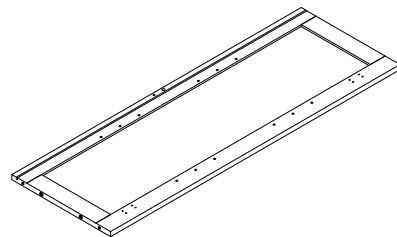


x1

④ 979*334*15

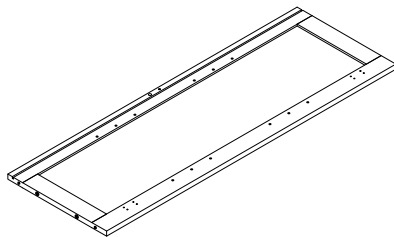


x1

⑤ 791*334*15

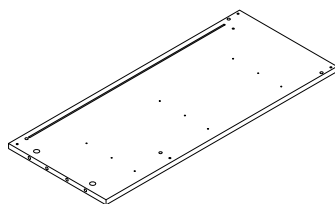


x1

⑥ 791*334*15

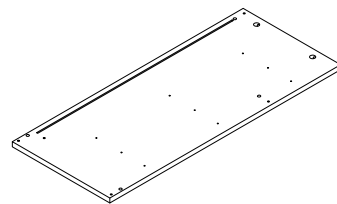


x1

⑦ 988*289*3

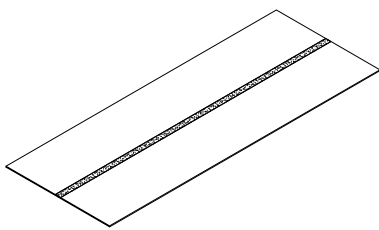


x2

⑧ 669*289*3

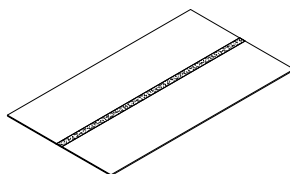


x2

⑨ 990*297*15

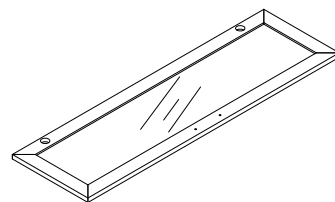


x2

⑩ 569*58*15

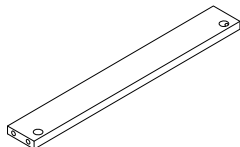


x2

⑪ 569*58*15

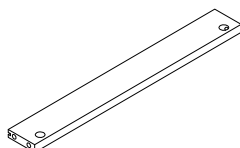


x1

⑫ 569*64*15

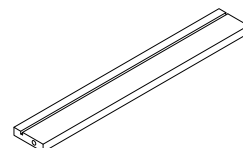


x1

⑬ 569*58*15

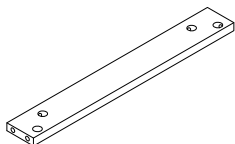


x1

⑭ 569*58*15

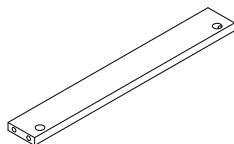


x1

⑮ 597*247*15

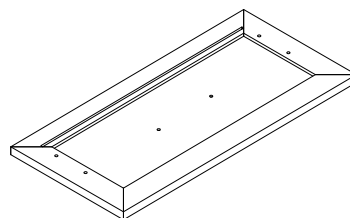


x3

⑯ 519*168*12

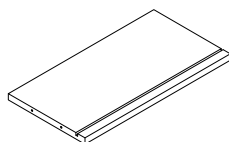


x3

⑰ 265*168*12

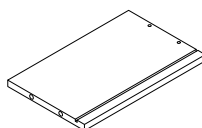

x3

⑱ 265*168*12

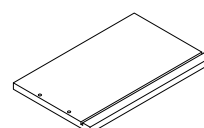


x3

PARTS LIST


Unit(mm)

①9 528*262*3

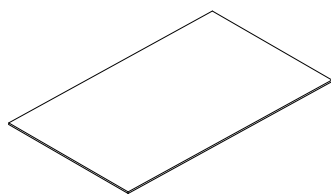







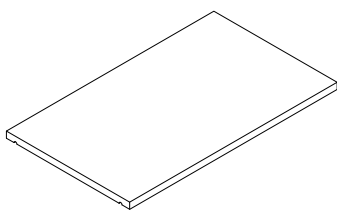
















x3

②0 566*300*12



x2

HARDWARES LIST

A Ø5*25mm  x30 pcs	B Ø15*11mm  x18 pcs	C Ø15*9mm  x12 pcs	D Ø8*30mm  x23 pcs	E Ø23mm  x30 pcs	F Ø6*50mm  x8 pcs
G 10"*35mm  x6 pcs	H Ø3.5x12mm  x36 pcs	J 128*12*38mm  x5 pcs	K 5/32"x22mm  x4 pcs	L 5/32"x10mm  x6 pcs	M Buffered straight arm door hinge (outer cover)  x4 pcs
N Ø3.5*14mm  x24 pcs	O M4  x1 pcs	P 16x16*10.5mm  x16 pcs	Q Ø3x17mm  x16 pc	R Ø4*30mm  x12 pc	S Ø5x16mm  x8 pcs
T 10g  x1 pcs	U Ø8.5x30  x2 pc	V Ø4x18  x2 pc	W Ø4x25  x2 pc	X 140x25  x2 pc	

Slides Must Be Separated Before Assembly.


After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.

Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.

Après la séparation, mettez de côté jusqu'au moment de l'assemblage.


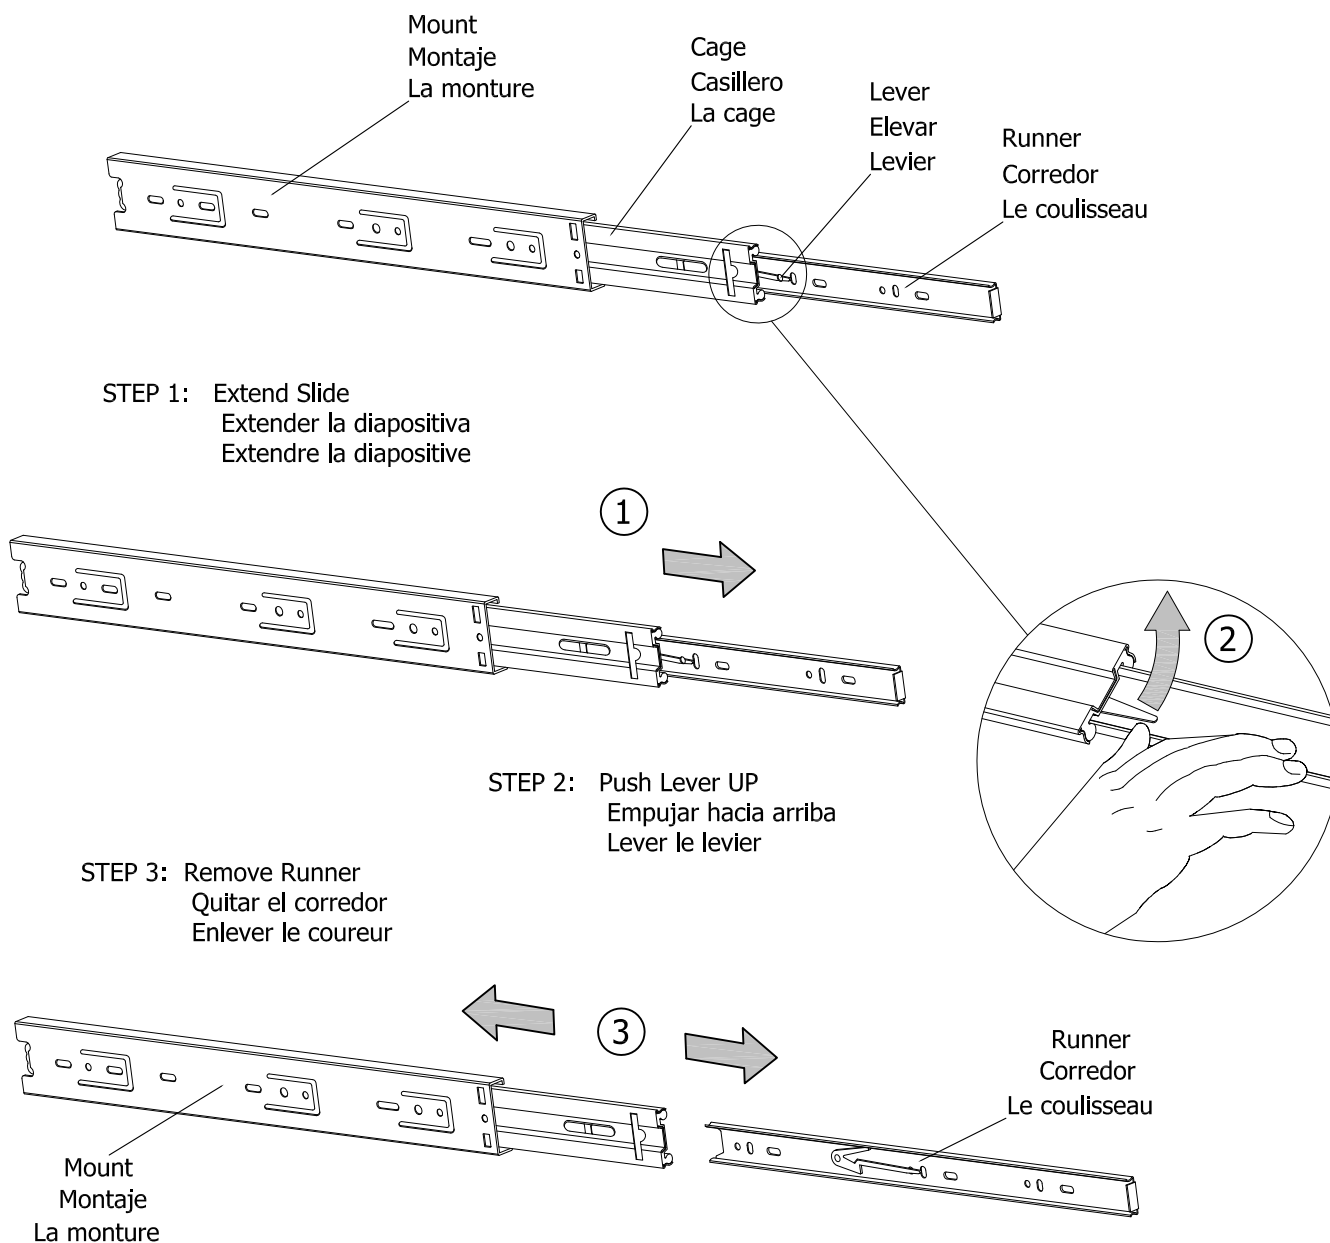


INSTALLATION STEPS

1

YOU WILL NEED




Ax2

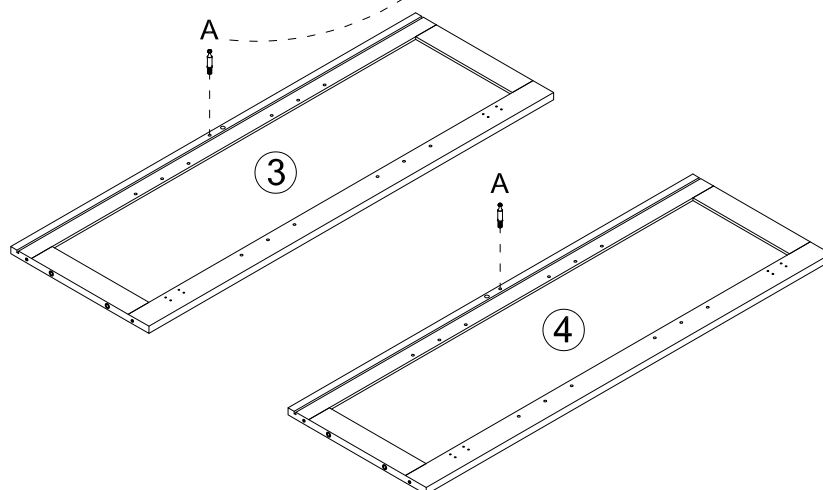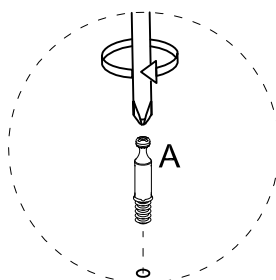

2

YOU WILL NEED

Dx14

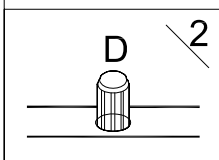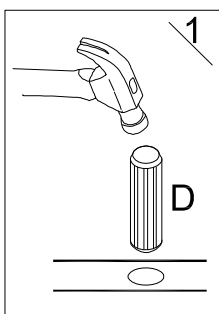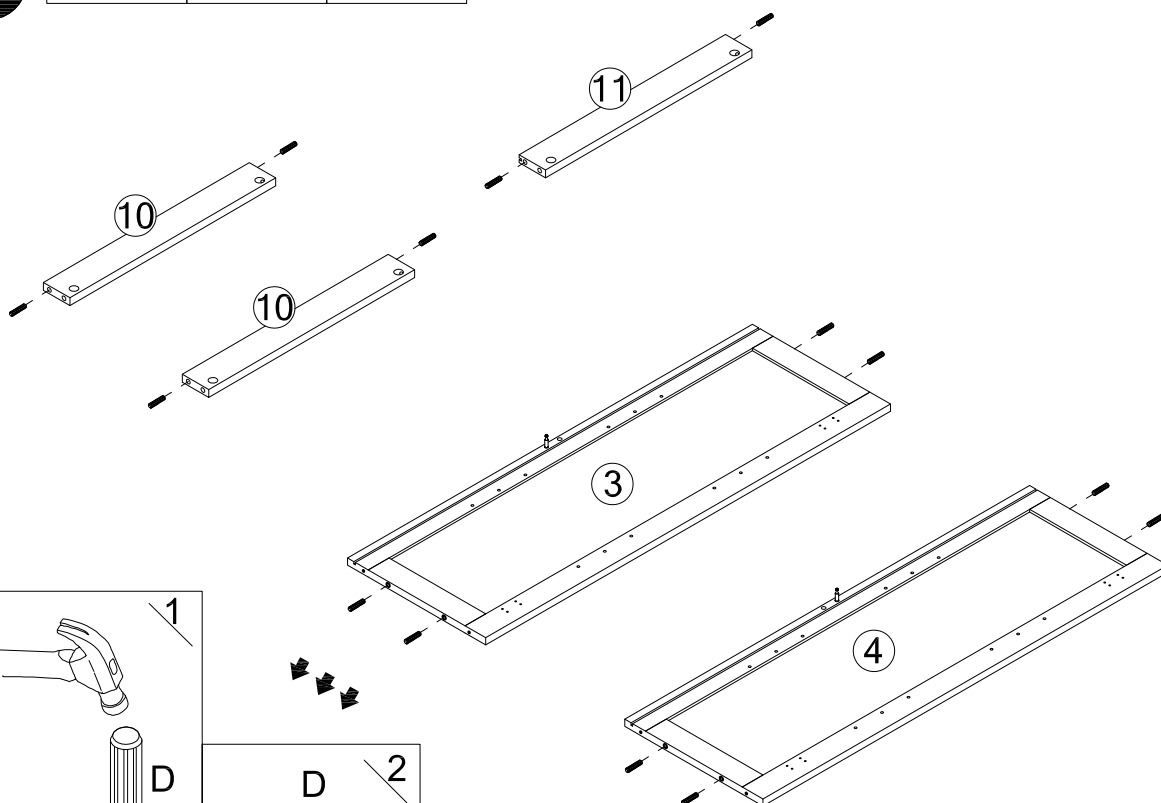


INSTALLATION STEPS

3

YOU WILL NEED


Dx9

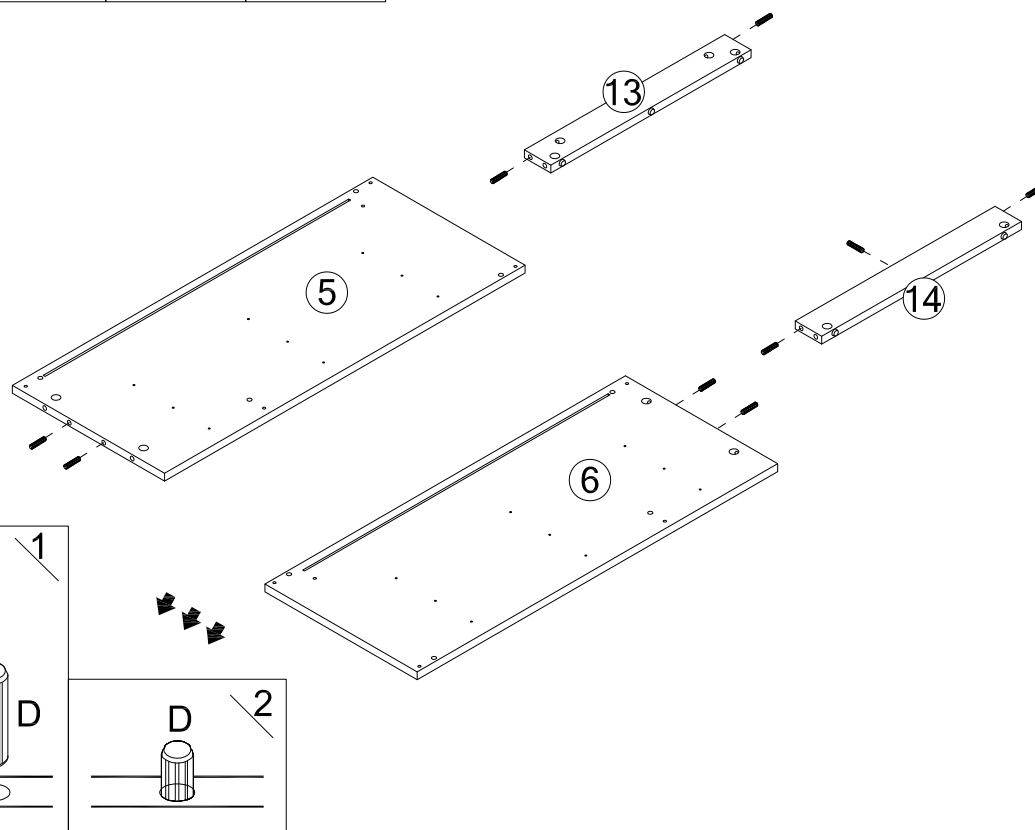

4

YOU WILL NEED

Bx1

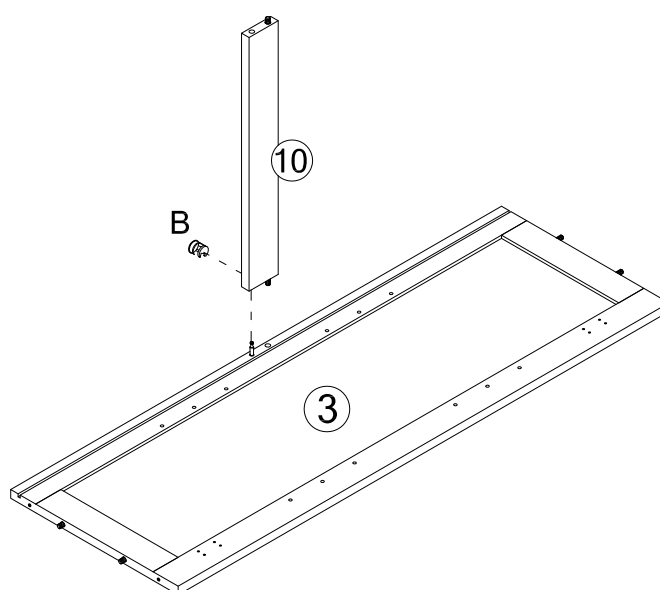


INSTALLATION STEPS

5

YOU WILL NEED


Bx1

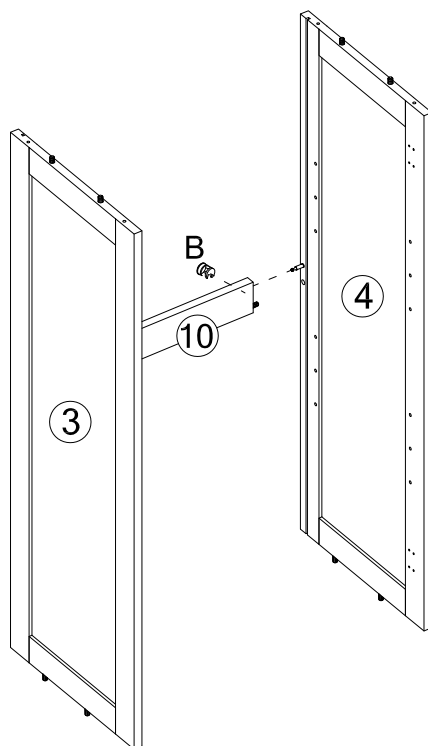

6

YOU WILL NEED


Fx4

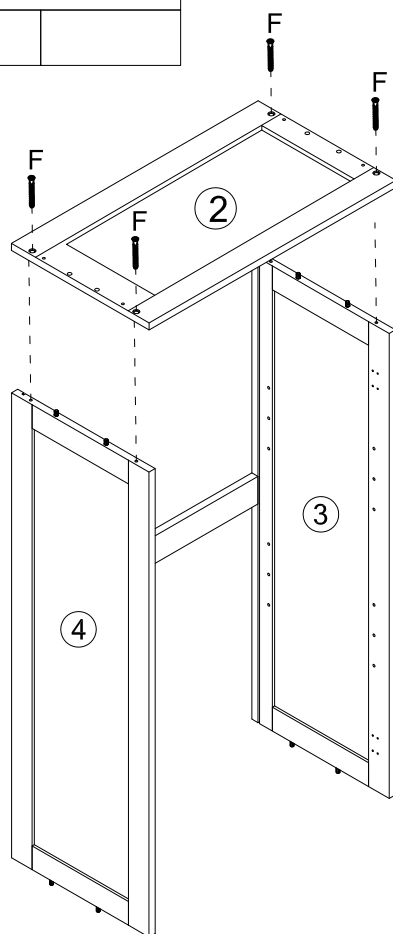

INSTALLATION STEPS


7

YOU WILL NEED		

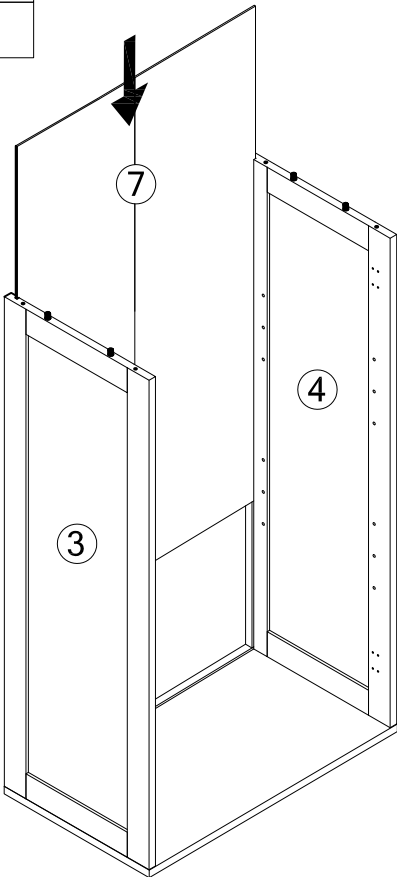

8

YOU WILL NEED		
Fx4		

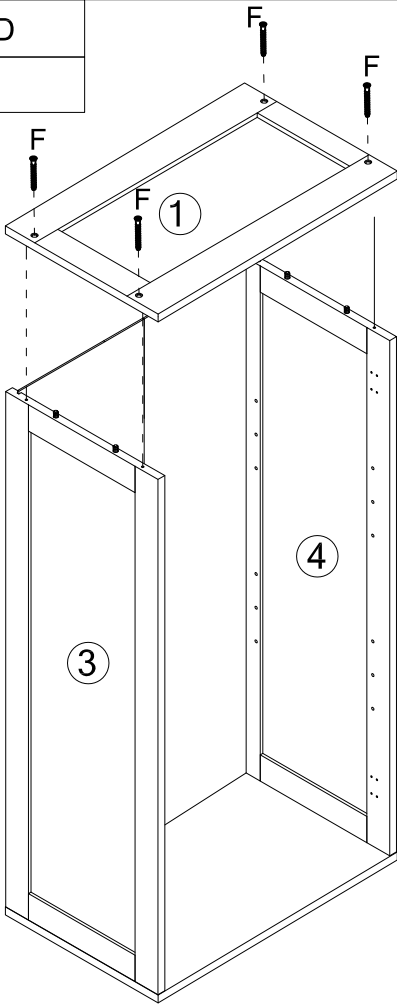


INSTALLATION STEPS

9

YOU WILL NEED


Ax4

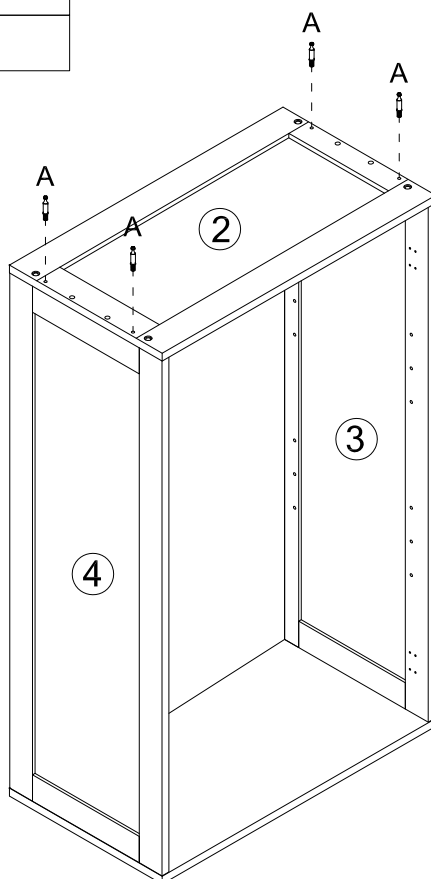

10

YOU WILL NEED

Ax12

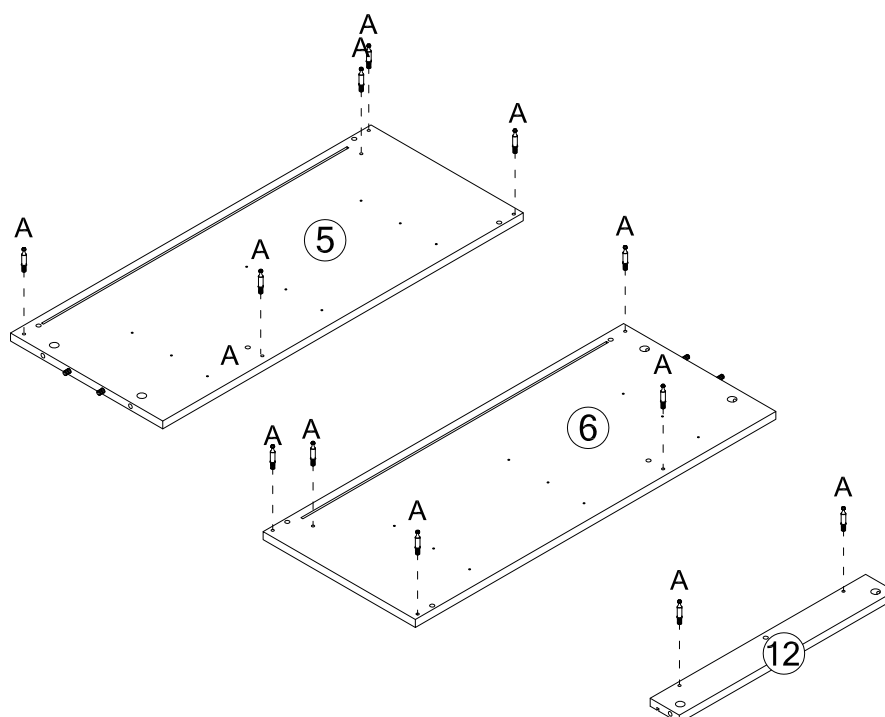


INSTALLATION STEPS

11

YOU WILL NEED


Gx6

Hx18

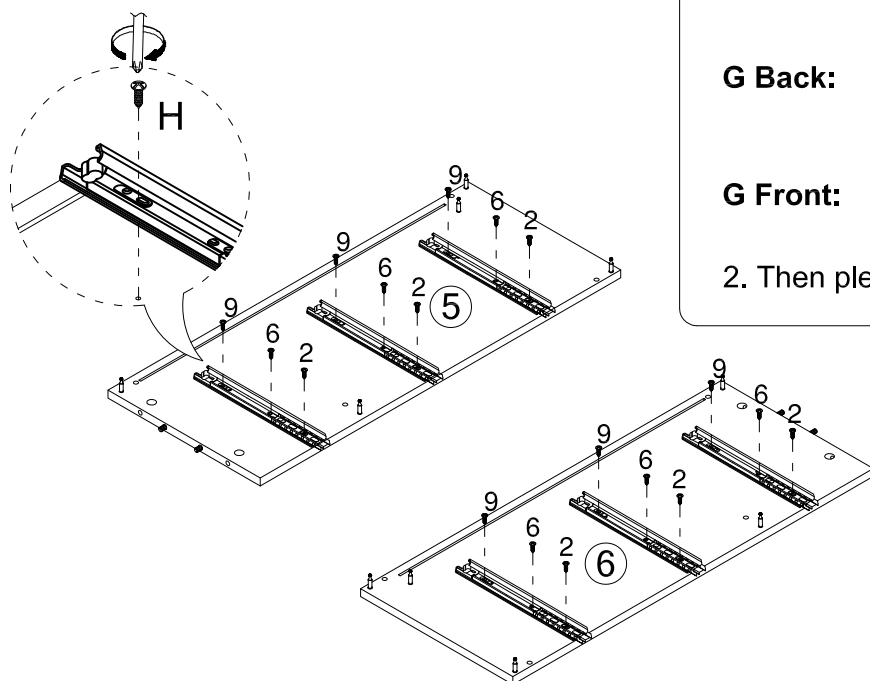


ATTENTION:

1. Please locate the holes from the back of part G.

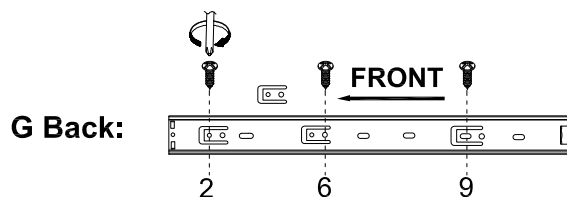

G Front:




2. Then please install part H from the front of part G.

12

YOU WILL NEED


Bx2

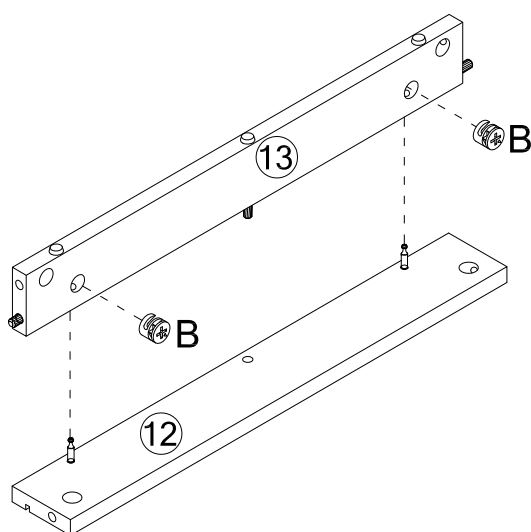

INSTALLATION STEPS


13

YOU WILL NEED		
Bx5		

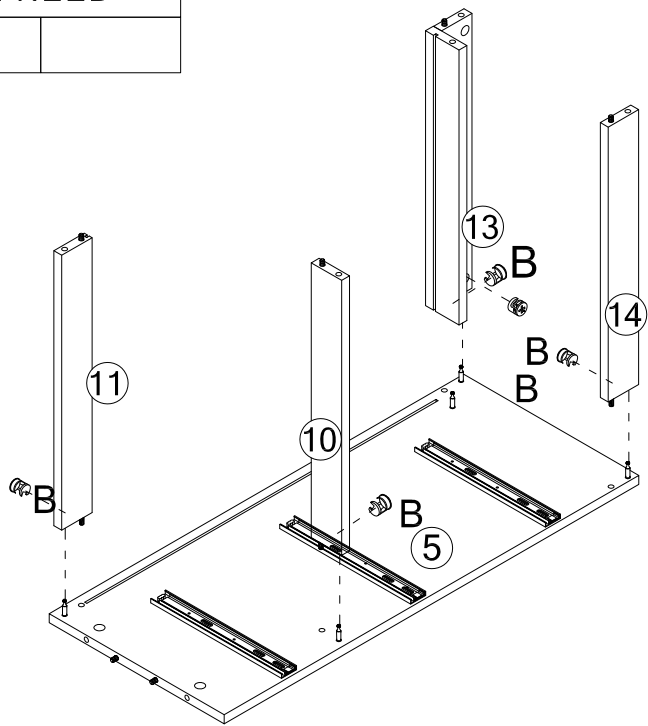

14

YOU WILL NEED		

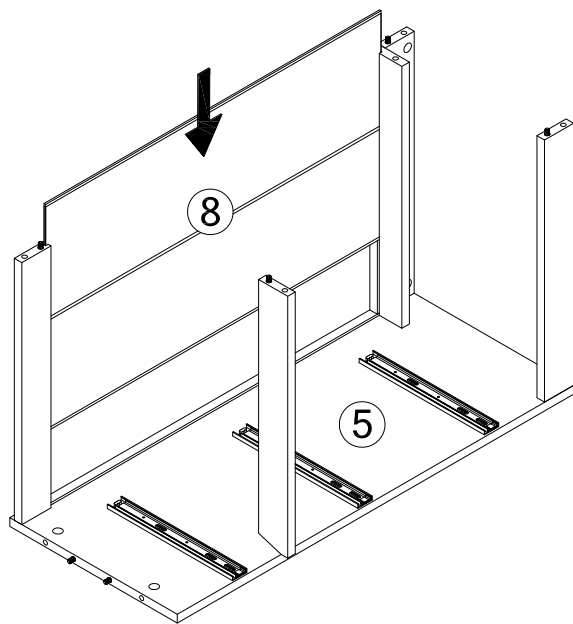


INSTALLATION STEPS

15

YOU WILL NEED


Bx5

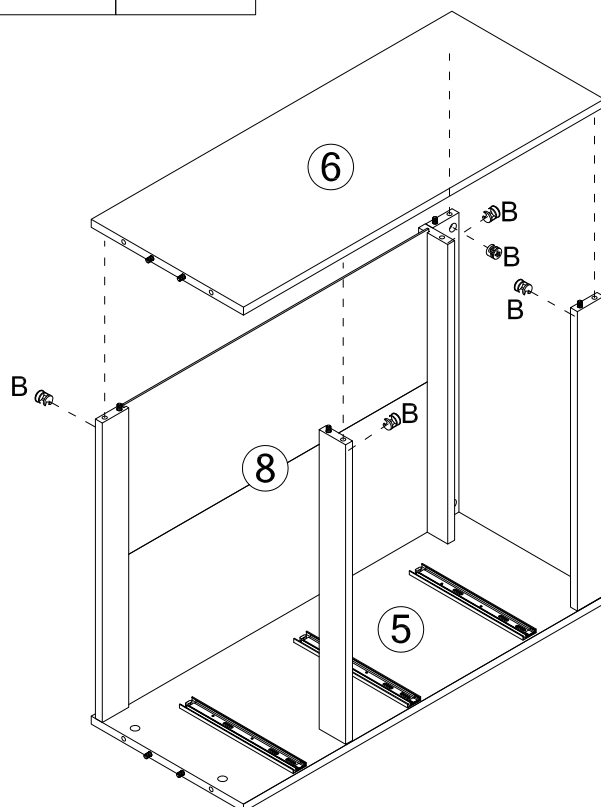

16

YOU WILL NEED

Bx4

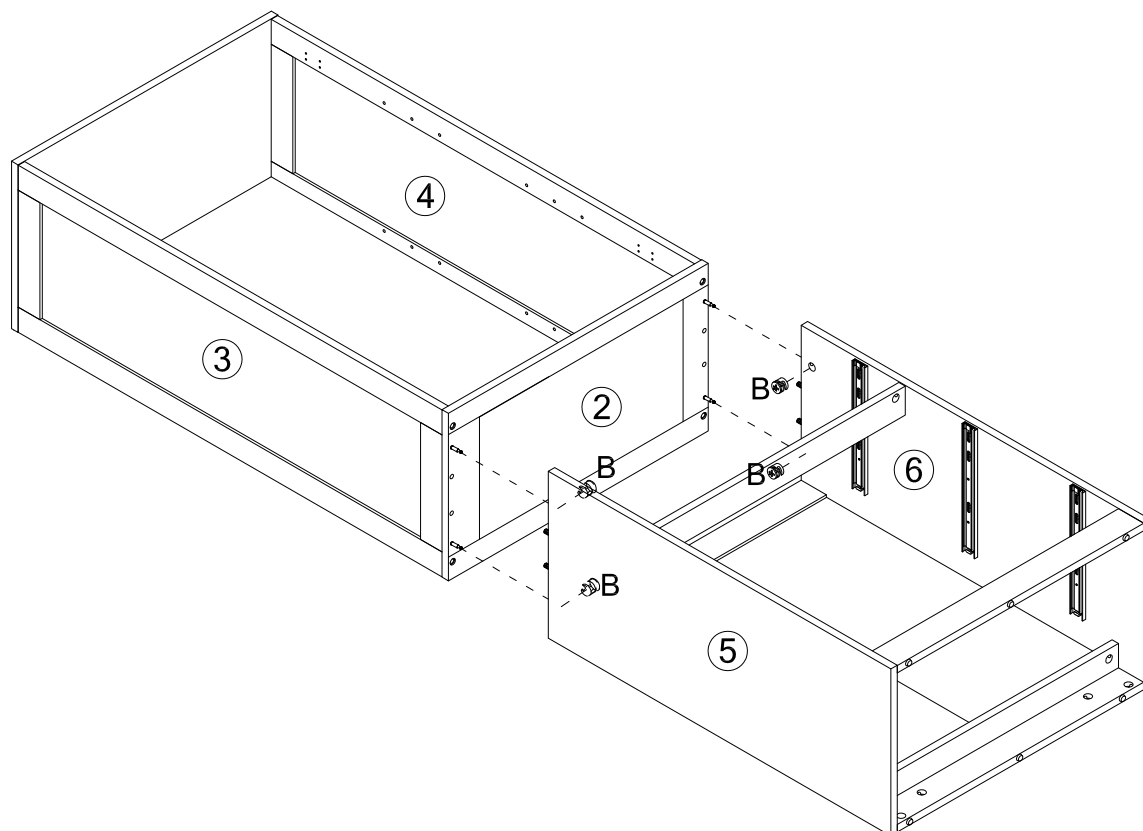


INSTALLATION STEPS

17

YOU WILL NEED

Px16


Qx16

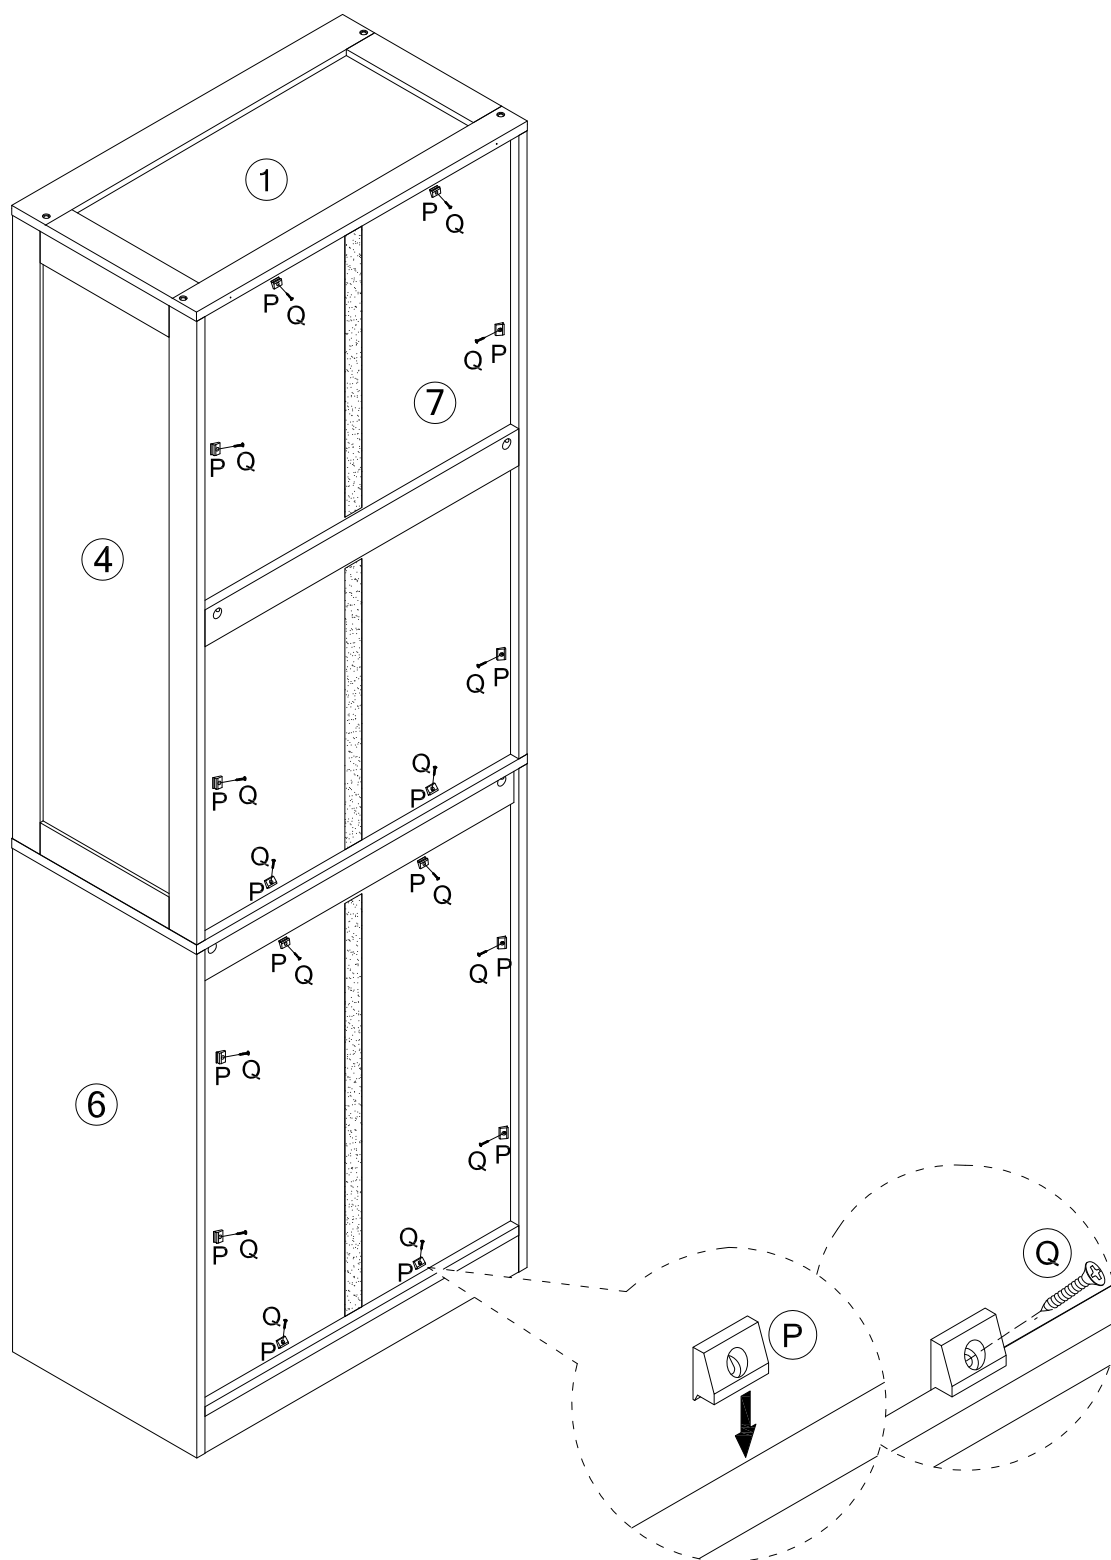

INSTALLATION STEPS

18


YOU WILL NEED		
Sx8		

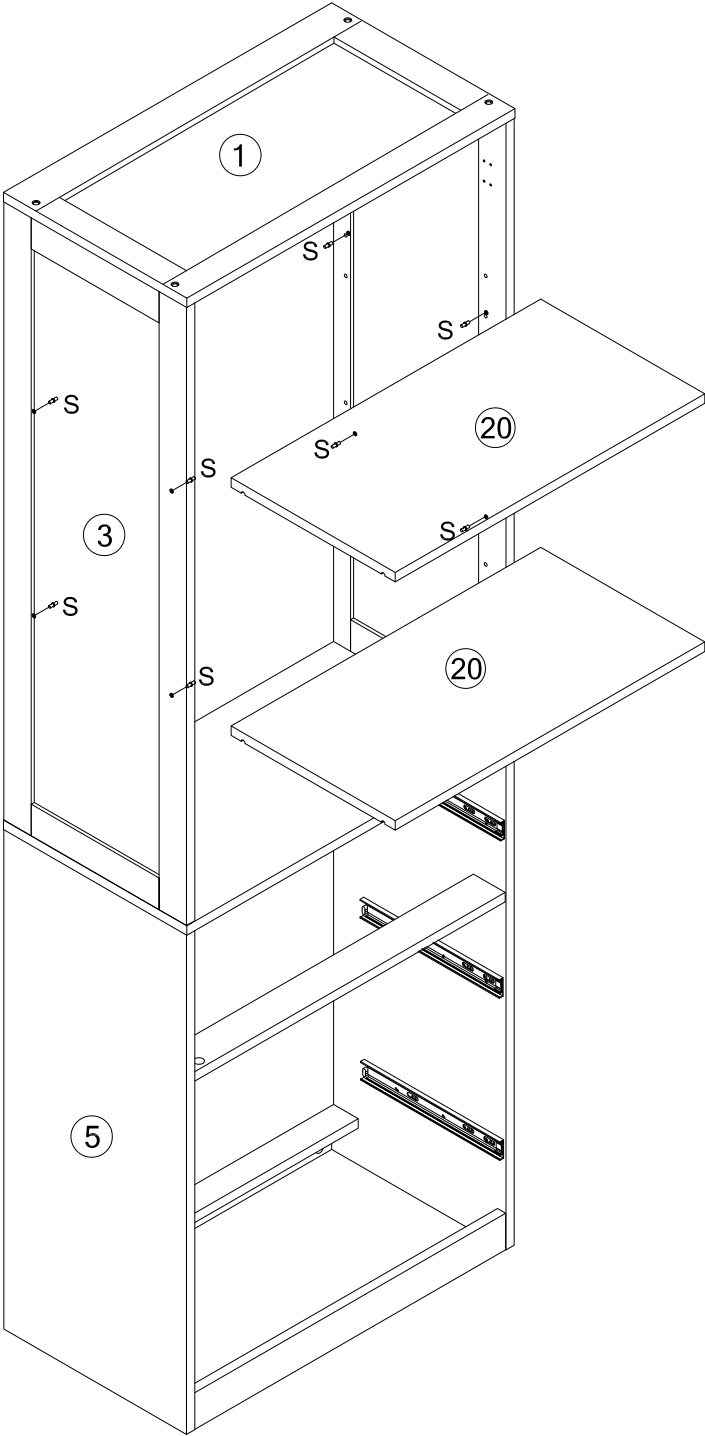

INSTALLATION STEPS


19

YOU WILL NEED		
Mx4	Nx8	

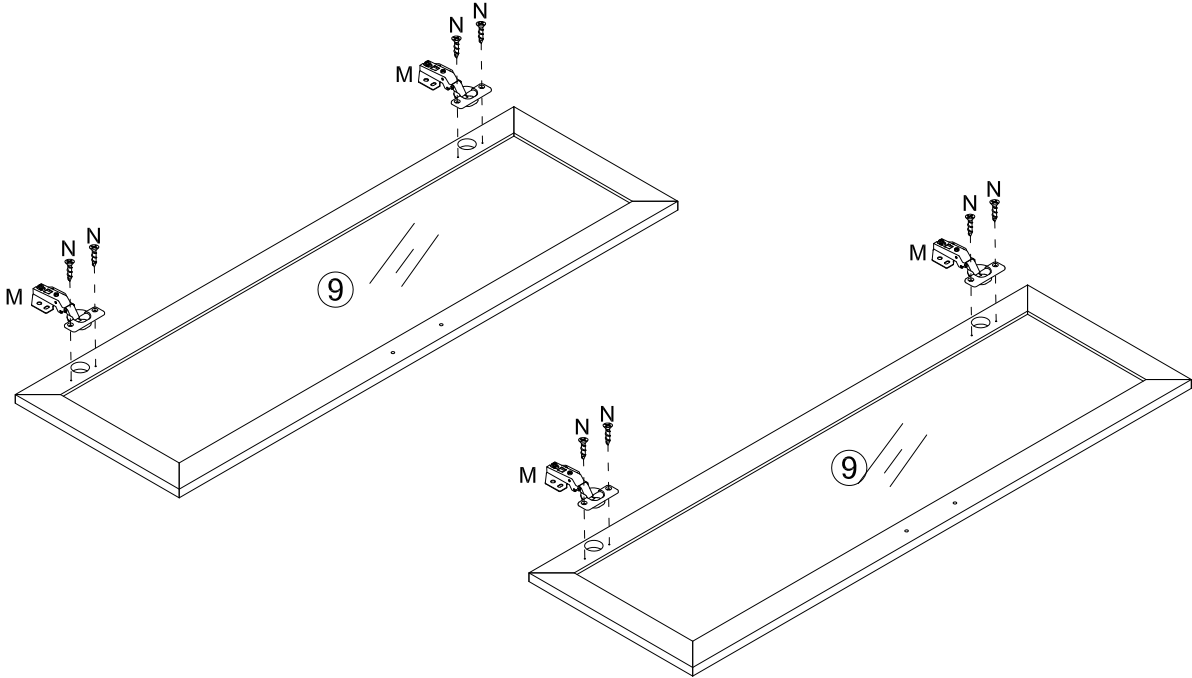

20

YOU WILL NEED		
Jx2	Kx4	



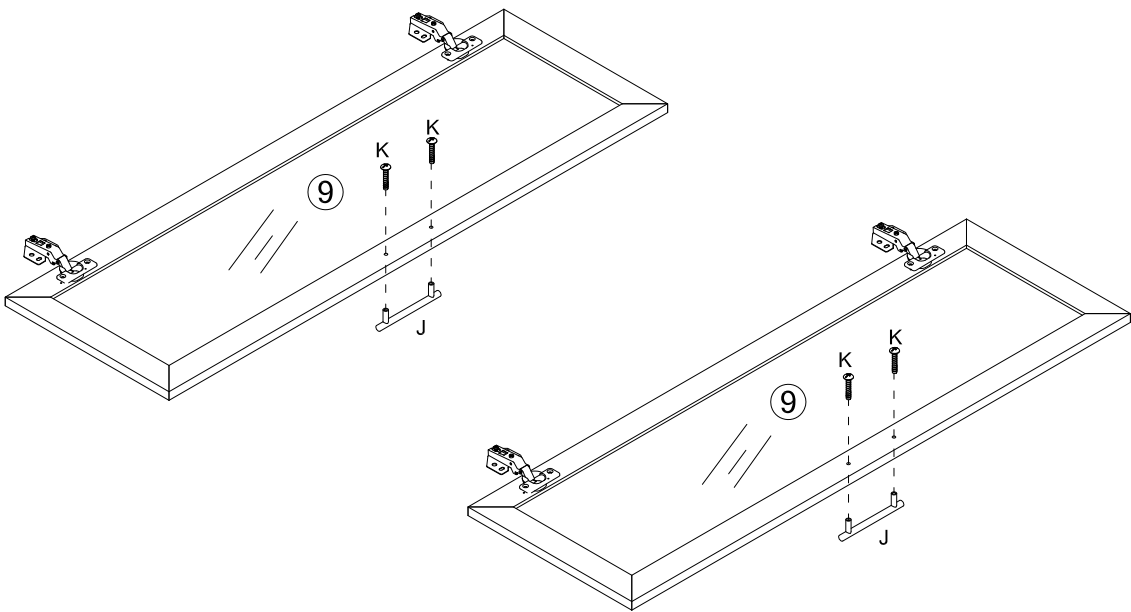


INSTALLATION STEPS


21

YOU WILL NEED

Nx16

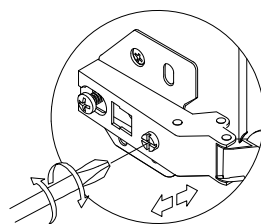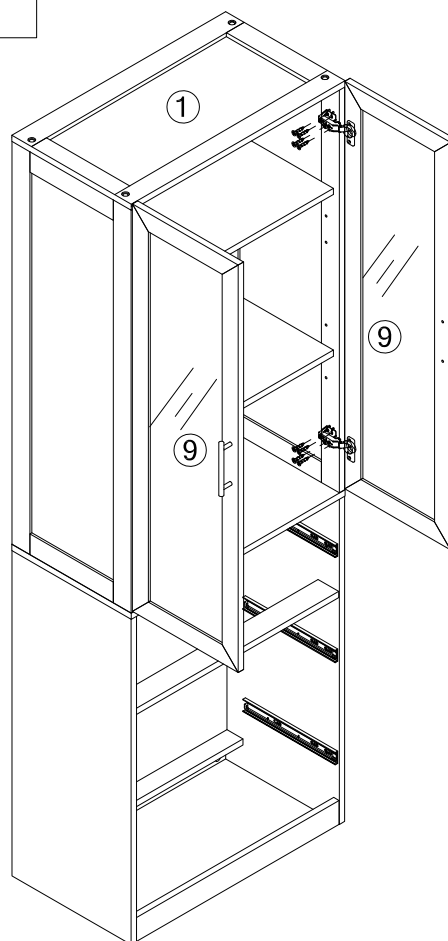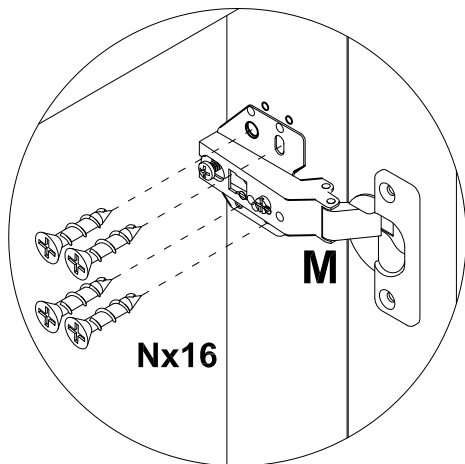

This is used to adjust the door panel in the left and right direction.

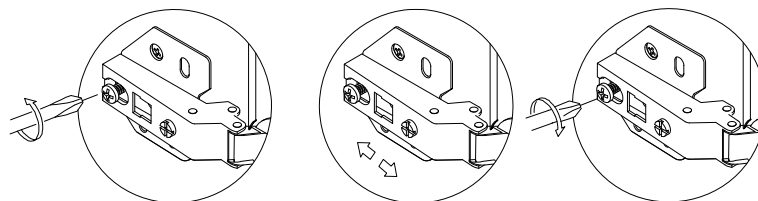

This is used to adjust the door panel in the front and back direction: Loosen screws of I according to the diagram, and then tighten screw after adjusting the door panel to the proper position.

INSTALLATION STEPS

22


YOU WILL NEED

G2x6


Hx18

ATTENTION:

1. Please locate the holes from the back of part G2.

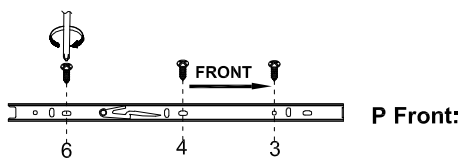


2. Then please install part H from the front of part G2.

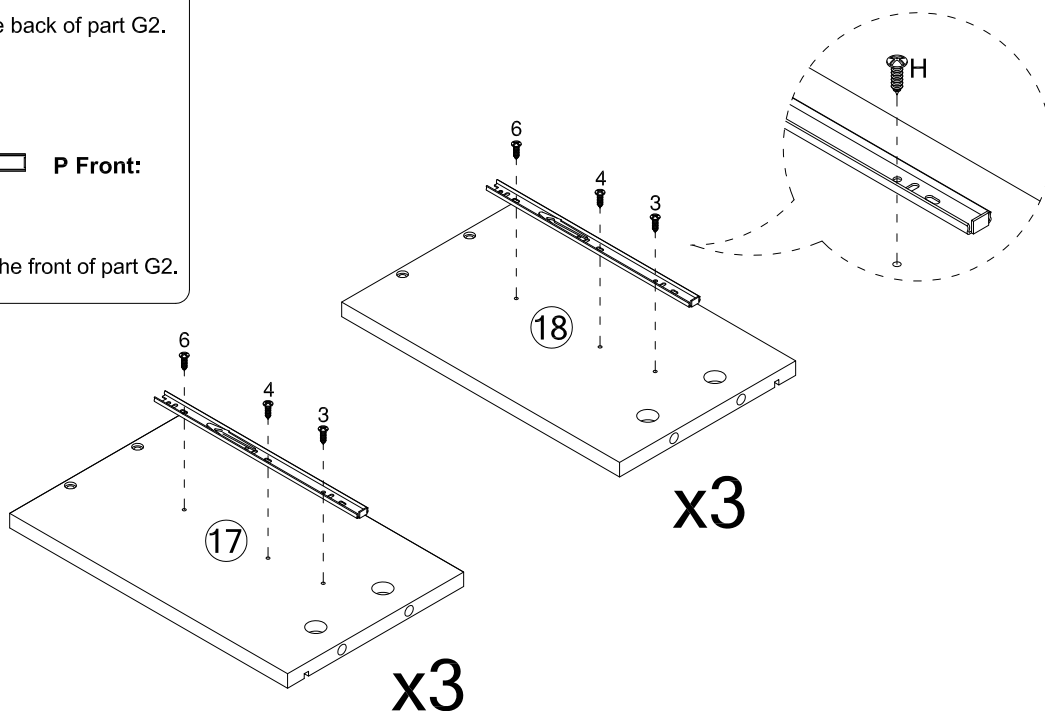

23

YOU WILL NEED

Rx12

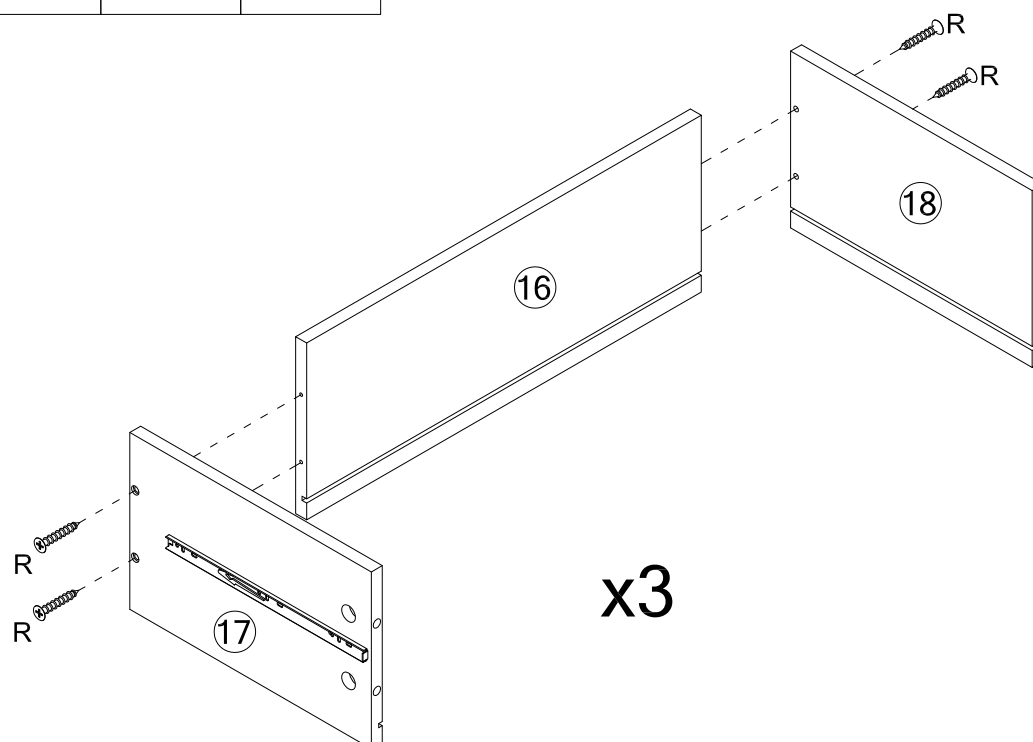


INSTALLATION STEPS

24

YOU WILL NEED

--	--	--

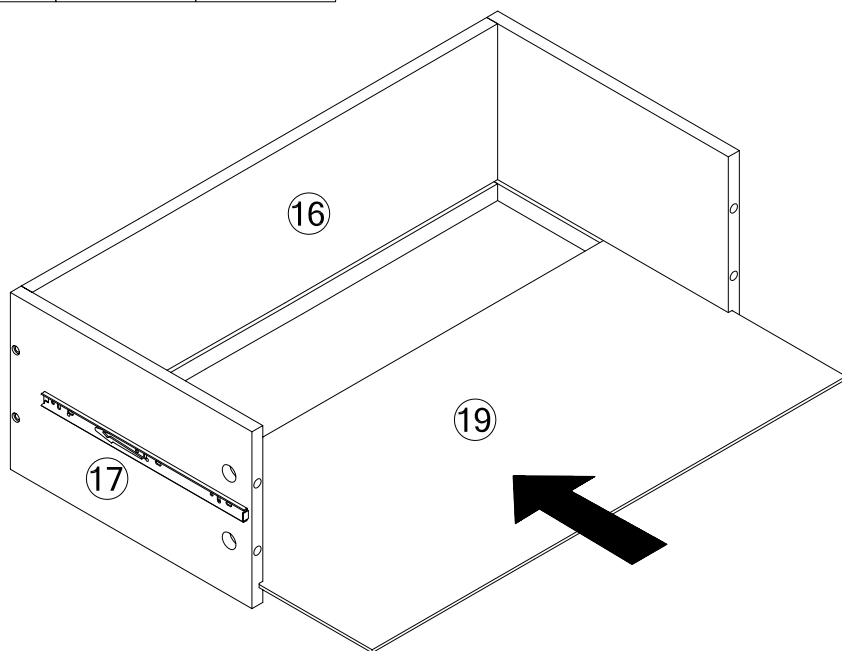


x3

25

YOU WILL NEED

Ax12

--	--

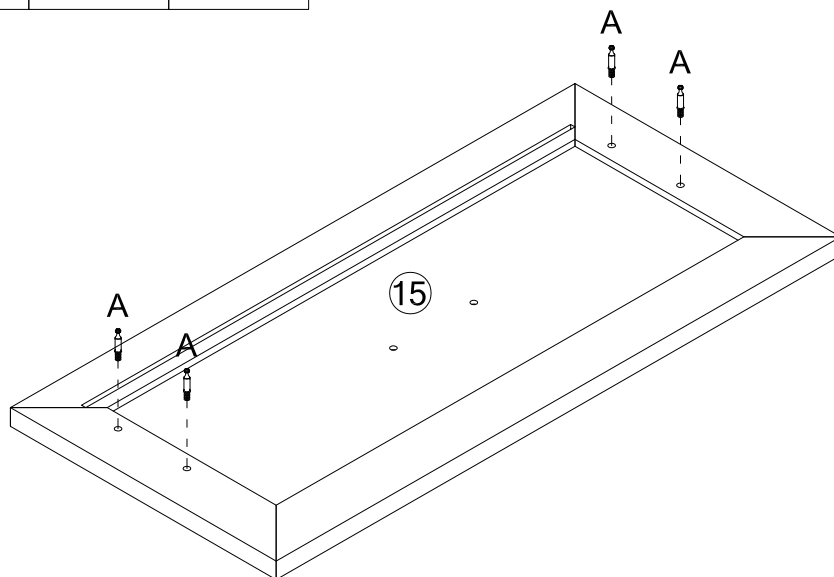


x3

INSTALLATION STEPS

26



YOU WILL NEED		
Jx3	Lx6	

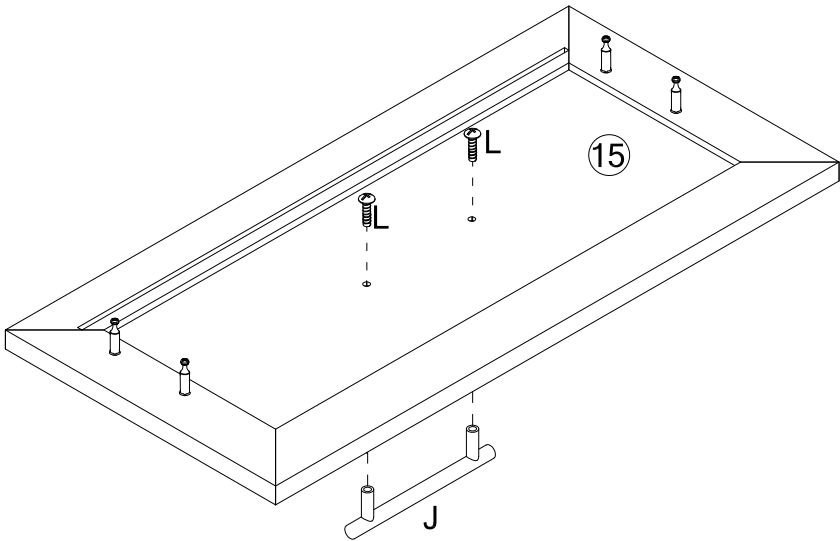

x3

27

YOU WILL NEED		
Cx12	Ex12	

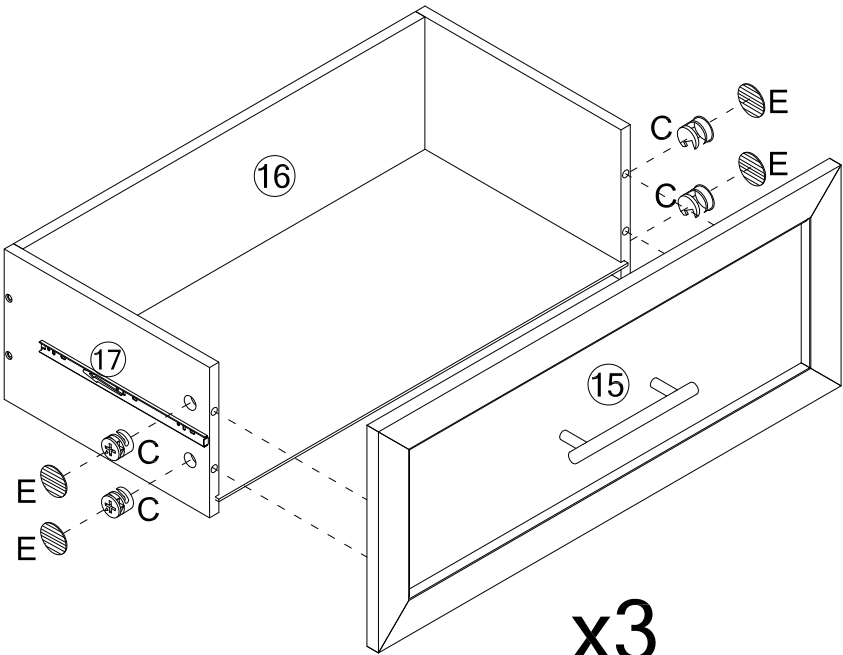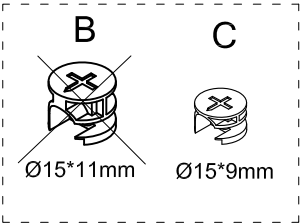


x3

INSTALLATION STEPS

28

YOU WILL NEED

Ex18


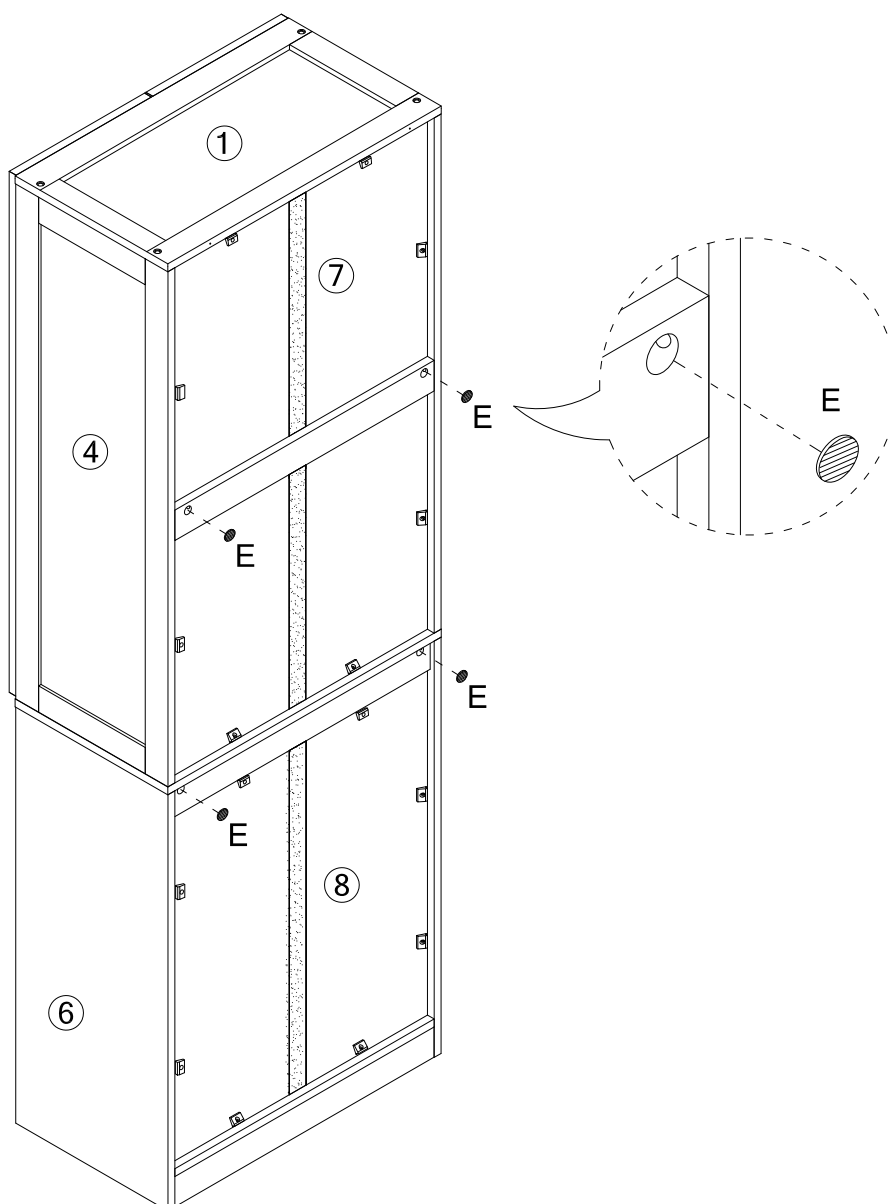


INSTALLATION STEPS

29

YOU WILL NEED

--	--	--

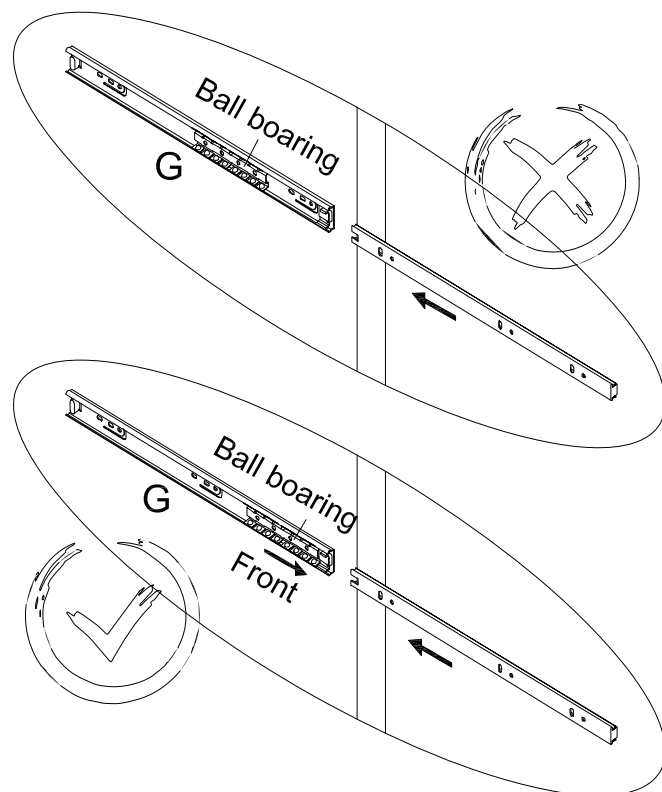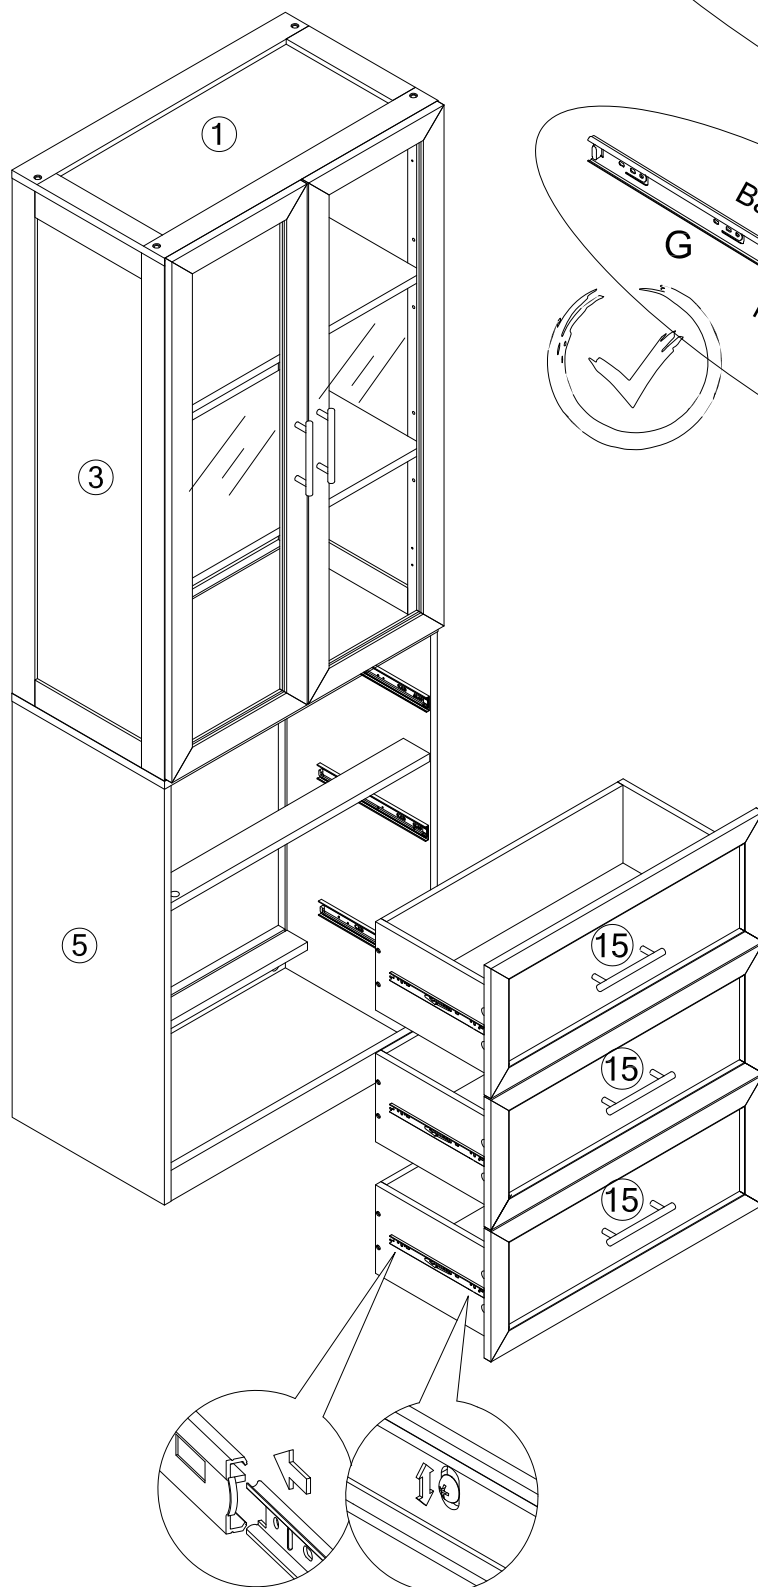

INSTALLATION STEPS


30

YOU WILL NEED

Xx2

Vx2

Attach anti-tipping straps to the back of the sideboard.

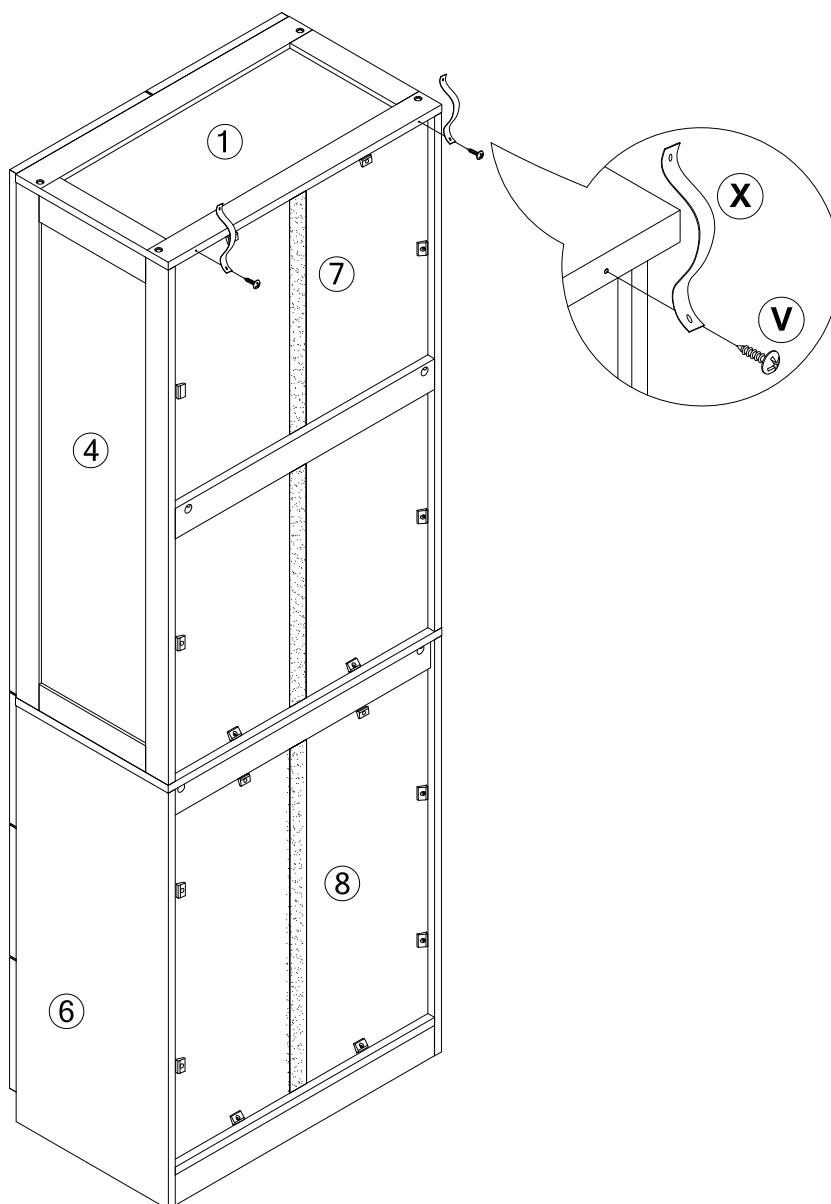

INSTALLATION STEPS


31

YOU WILL NEED

Ux2

Wx2

Affix the sideboard to a wall.

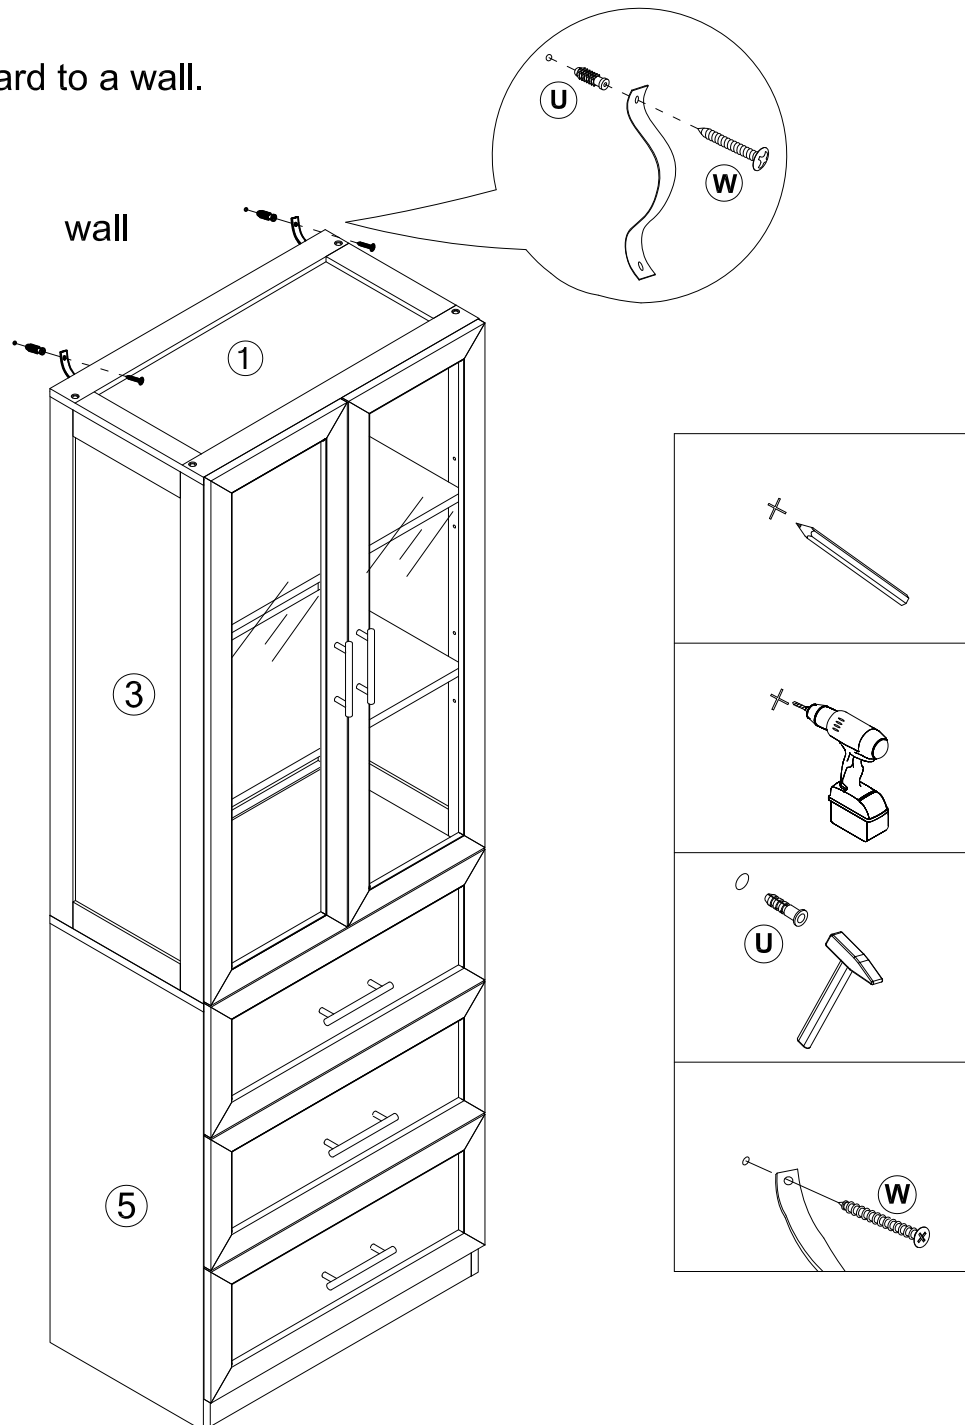

Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.