


ASSEMBLY INSTRUCTION

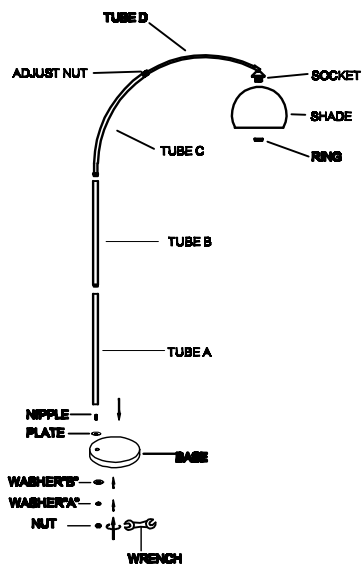

1. PARTIALLY SCREW THE NIPPLE INTO "TUBE A."
2. INSERT "TUBE A" THROUGH THE PLATE AND INTO THE BASE. FROM THE BOTTOM, USE THE WASHER AND NUT TO SECURE THE TUBE TIGHTLY.
3. ATTACH "TUBE B" INTO "TUBE A."
4. ATTACH "TUBE C" INTO "TUBE B."
5. EXTEND "TUBE D" TO THE PROPER LENGTH THEN TIGHTEN THE ADJUSTMENT NUT TO LOCK IN PLACE.
6. ATTACH THE SHADE ONTO THE SOCKET WITH THE RING.

