



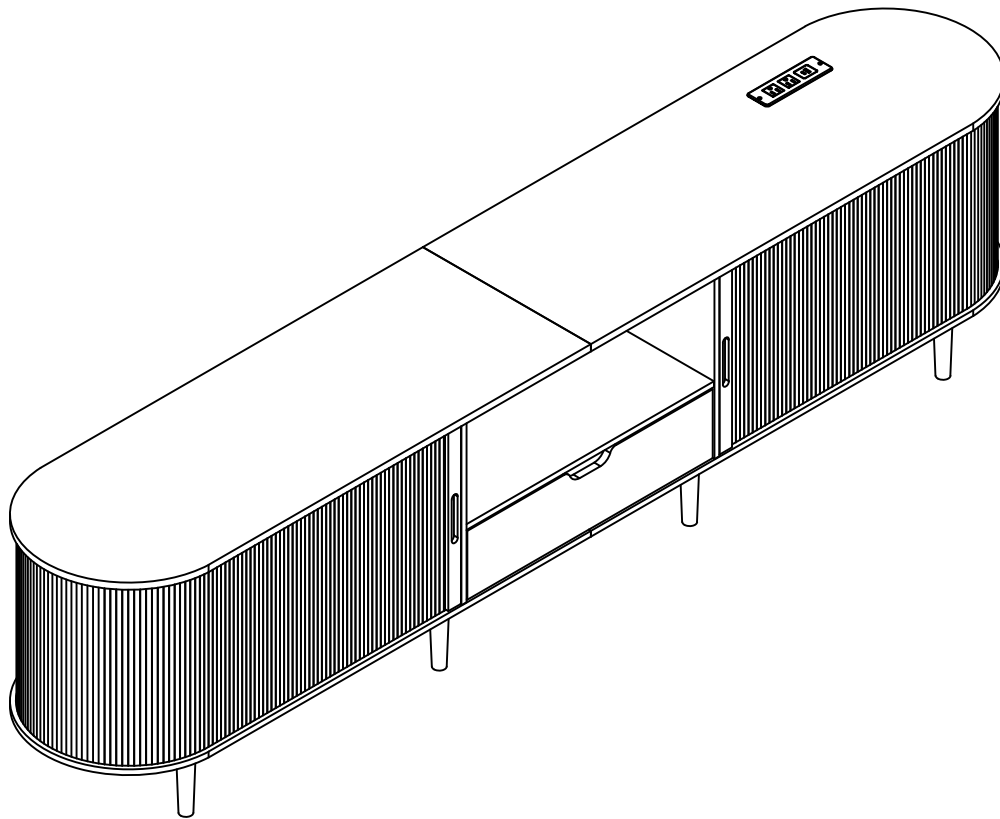

As this item contains many parts, please read the installation instruction carefully before installation. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us. Our professional after-sales team will serve you online all day.

Before You Start


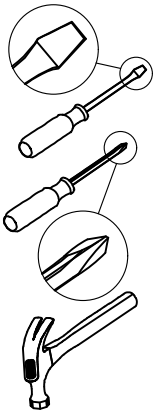


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

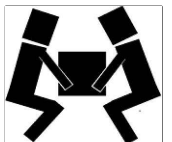


Board Identification

Not actual size

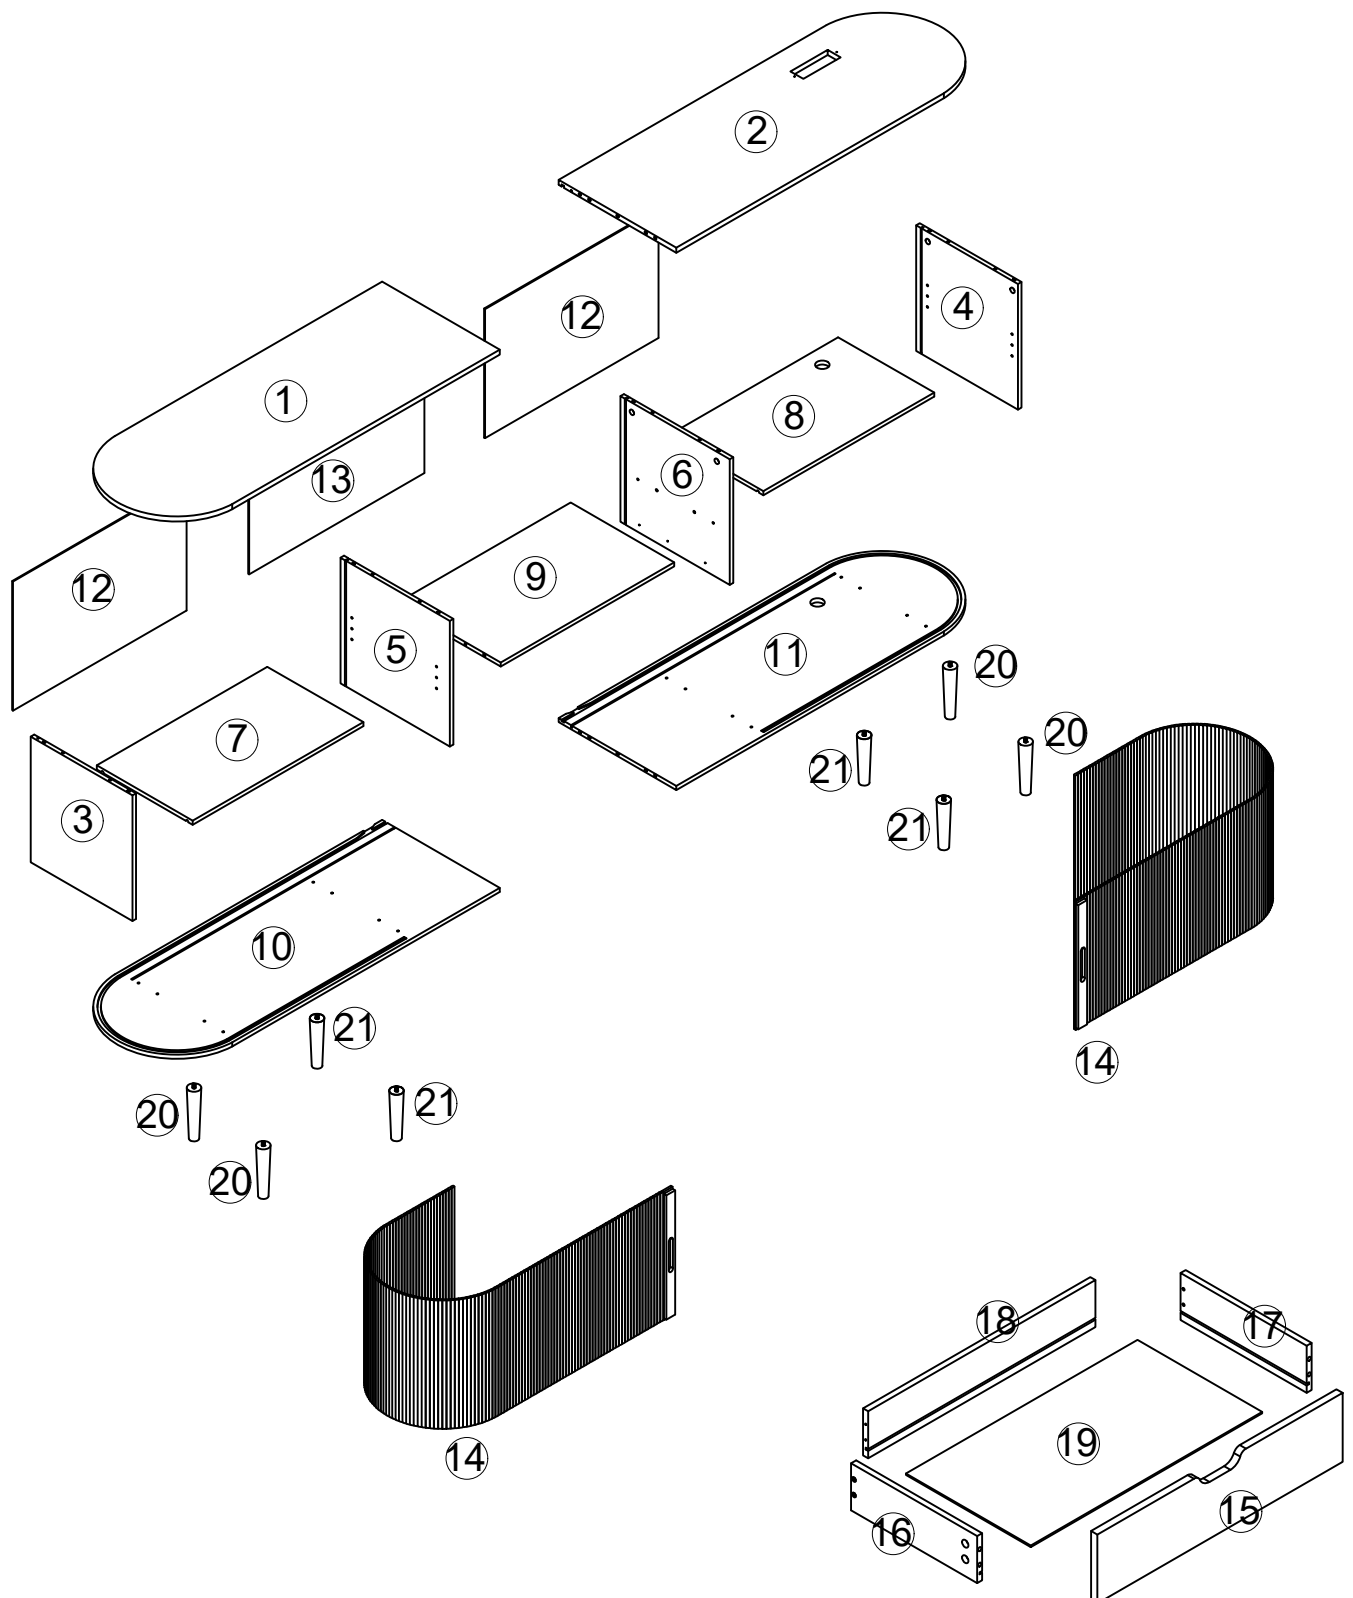


Board Identification


Not actual size

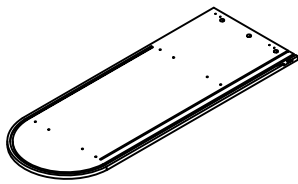


①
Qty:1

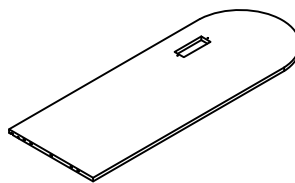


②
Qty:1

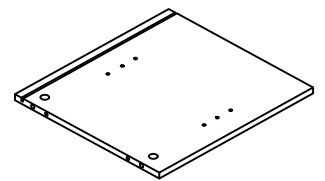


③
Qty:1

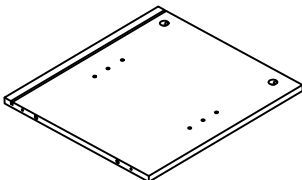


④
Qty:1

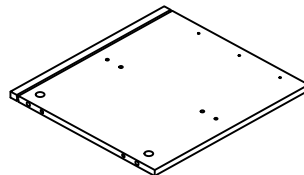


⑤
Qty:1

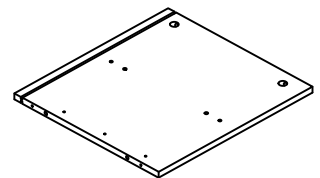


⑥
Qty:1

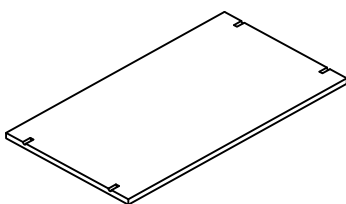

⑦
Qty:1

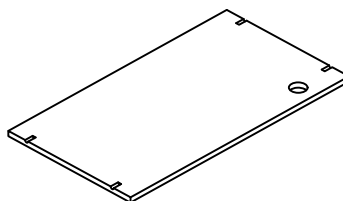


⑧
Qty:1

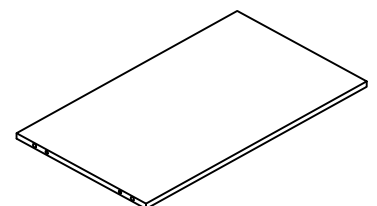


⑨
Qty:1

Board Identification


Not actual size

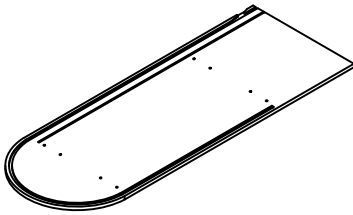


⑩
Qty:1

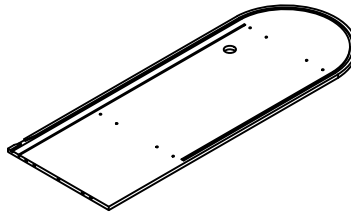


⑪
Qty:1

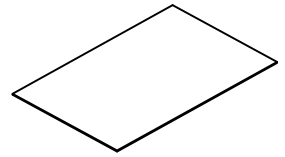


⑫
Qty:2

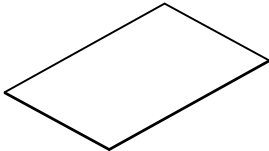


⑬
Qty:1

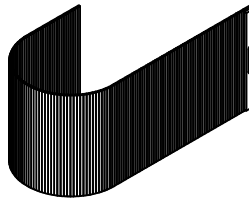


⑭
Qty:2

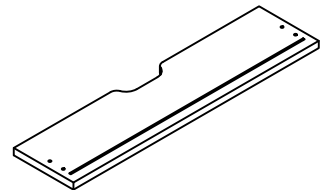


⑮
Qty:1

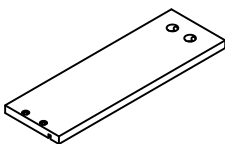

⑯
Qty:1

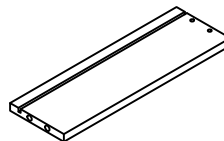


⑰
Qty:1

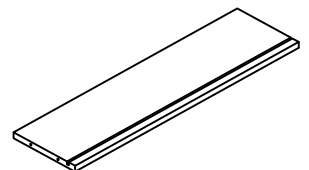


⑱
Qty:1

Board Identification


Not actual size

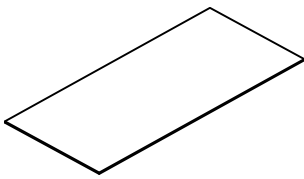

①⑨
Qty:1

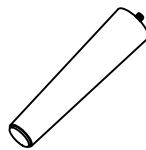

②⑩
Qty:4

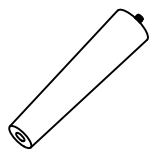

②⑪
Qty:4

Part List




ø15X9.5mm

(A)

X28

CAM LOCK
spare: 2




ø6.5X35mm

(B)

X16

CAM BOLT
spare: 1



ø5X60mm

(C)

X6

WOOD DOWEL
spare: 1



ø6X30mm

(D)

X20

WOOD DOWEL
spare: 2




ø8X30mm

(E)

X4

WOOD DOWEL
spare: 1




ø4X35mm

(F)

X12

SCREW
spare: 2



ø3X12mm

(G)

X2

SCREW
spare: 1




ø4X14mm

(H)

X32

SCREW
spare: 3




49X49X1.2mm

(I)

X8

IRON SHEET



ø5X25mm

(J)

X8

SHELF SUPPORT



ø3X14mm

(K)

X12

BACK PANEL BUCKLE
spare: 3




ø21

(L)

X18

HOLE STICKER
spare: 2

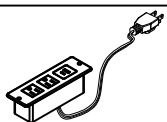


162X55X40mm

(M)

X1

POWER STRIP




60X38X1.3mm

(N)

X4

IRON SHEET




70X30X5mm

(O)

X1

HEX KEY

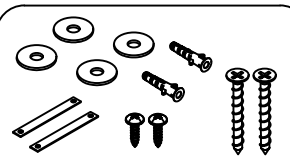

(P)

X1set

ANTI-TIPPING DEVICE


Part List



300mm

Q-CL **X1**


LEFT CABINET
SLIDE RAIL



300mm

Q-CR **X1**


RIGHT CABINET
SLIDE RAIL



300mm

Q-DL **X1**


LEFT DRAWER
SLIDE RAIL



300mm

Q-DR **X1**


RIGHT DRAWER
SLIDE RAIL



ø3.5X12mm

(R) **X12**

SCREW
spare: 1



ø3.5X14mm

(S) **X16**

SCREW
spare: 1




(T) **X4**

ADJUST THE LEGS


Cam Lock Fastening System

Insert the cam bolt into the
hole first, then insert the cam
lock and lock it.


1

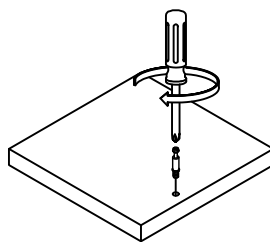

2

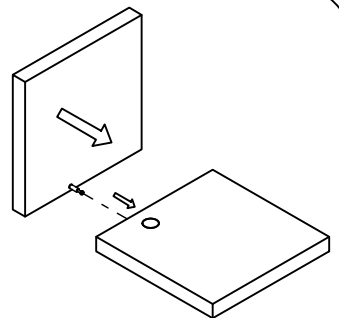


3




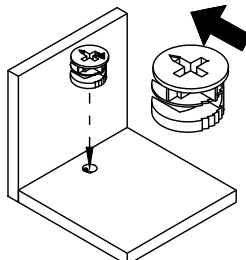


The opening must point toward the
edge of the board


4

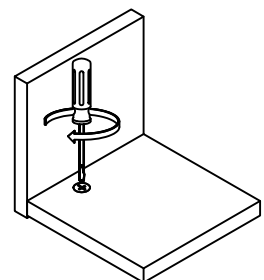


STEP1

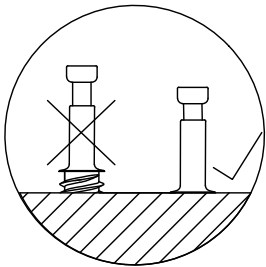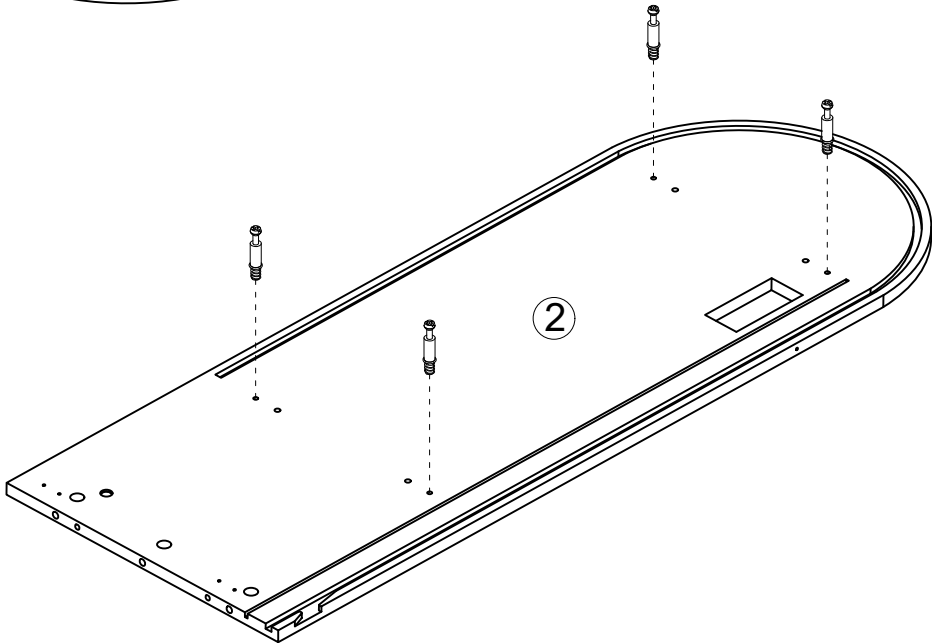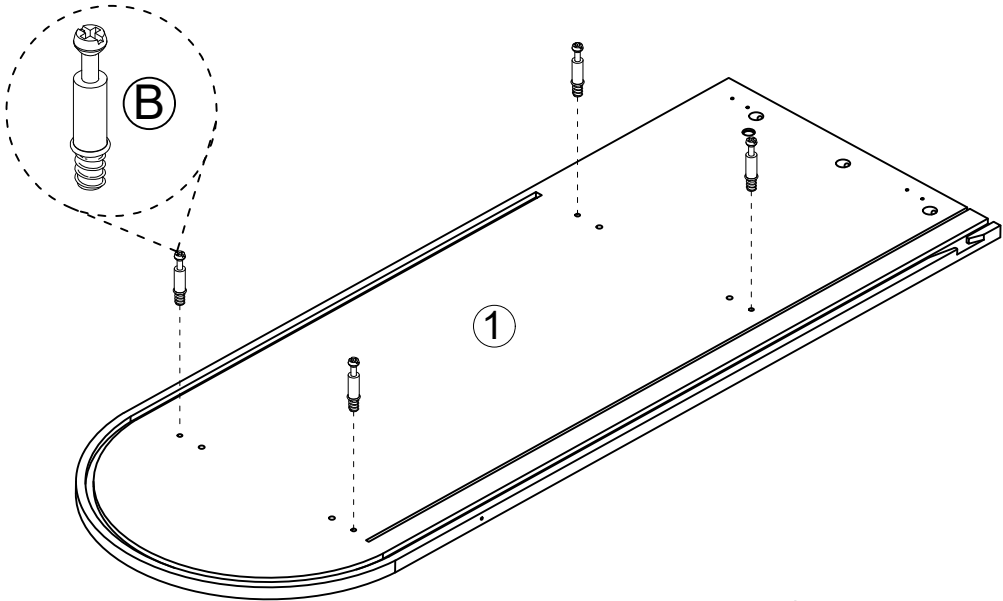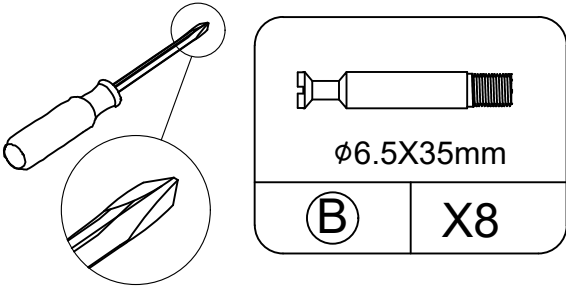



STEP2

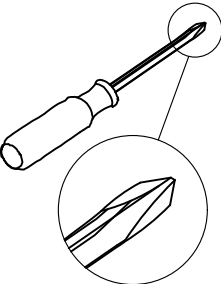


	
$\phi 15 \times 9.5 \text{mm}$	
(A)	X12

	
$\phi 5 \times 60 \text{mm}$	
(C)	X6

	
$\phi 8 \times 30 \text{mm}$	
(E)	X4

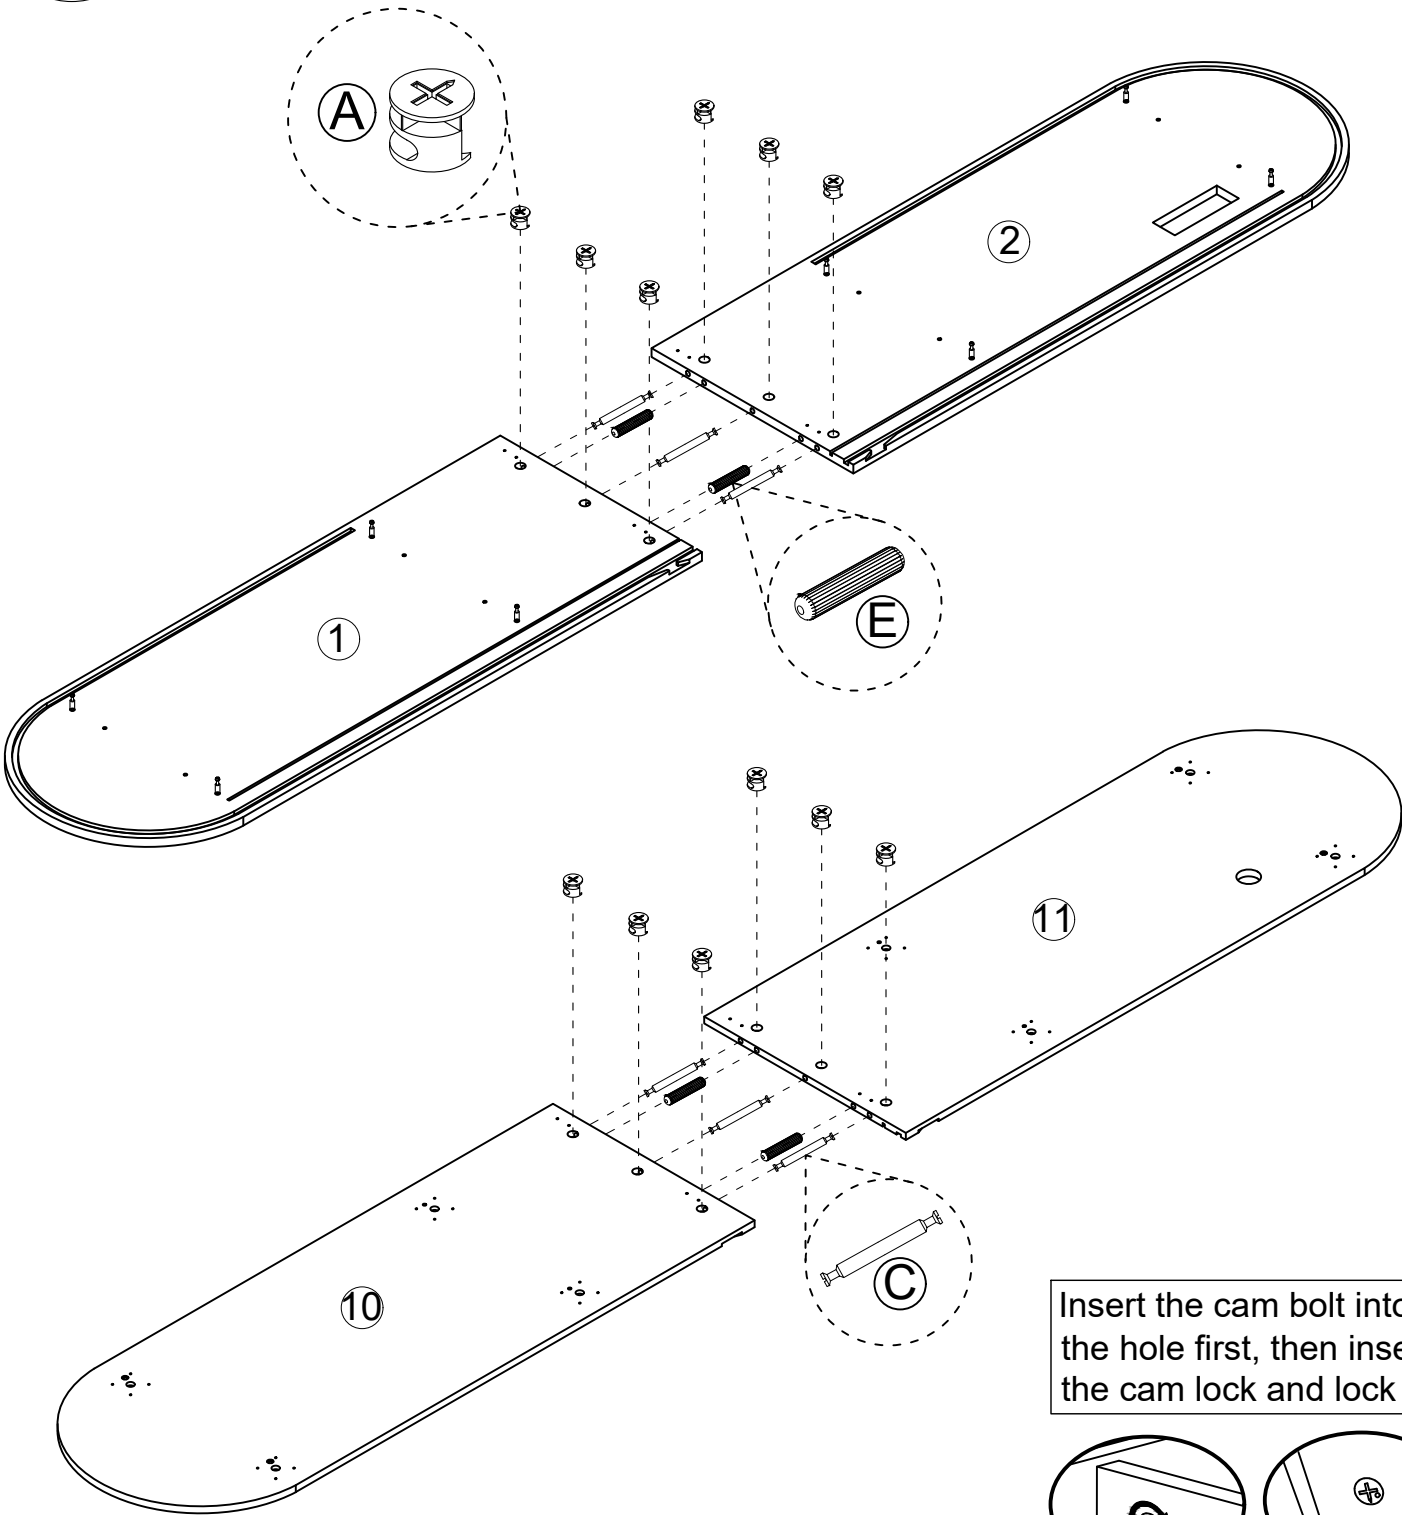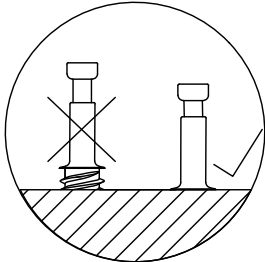



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

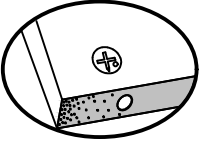



Proper orientation of CAM LOCK

STEP3

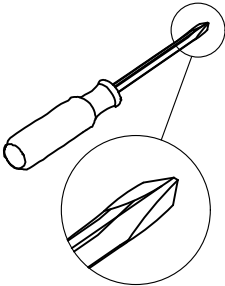



	
60X38X1.3mm	
(N)	X4


	
Ø3.5X14mm	
(S)	X16

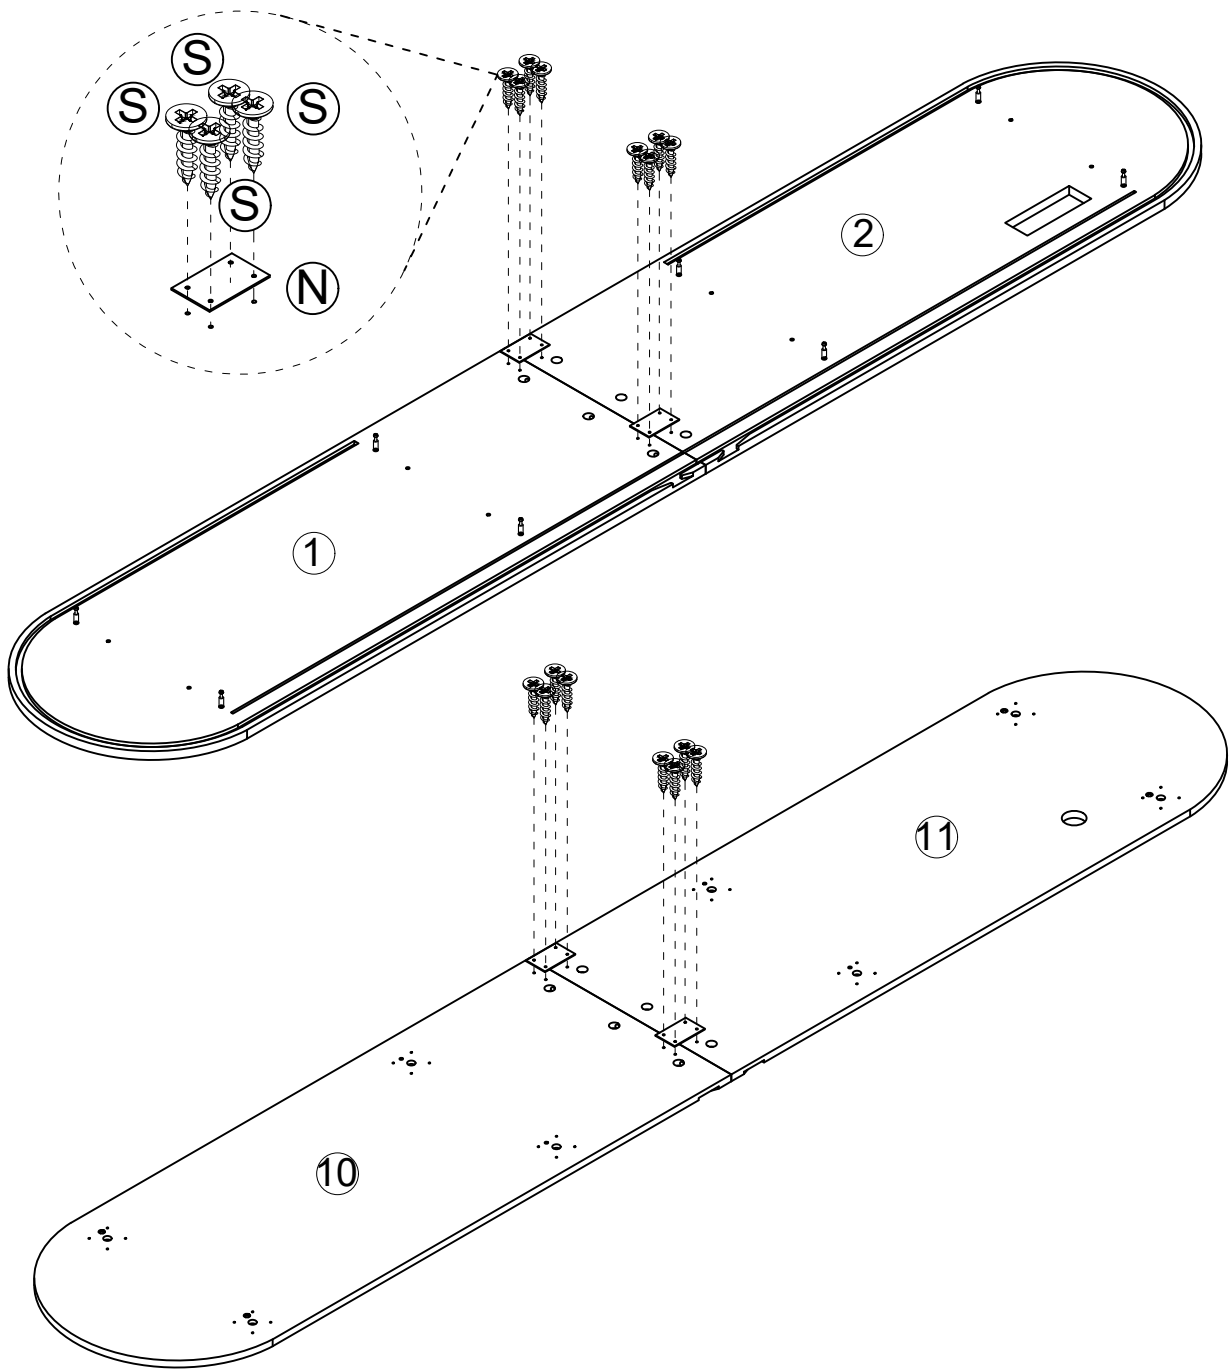


STEP4


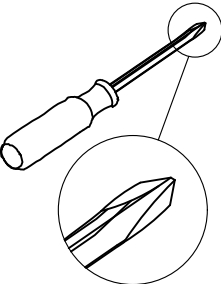


 ø6.5X35mm	
(B)	X4





 ø3.5X12mm	
(R)	X6

 300mm	
Q-CL	X1


 300mm	
Q-CR	X1

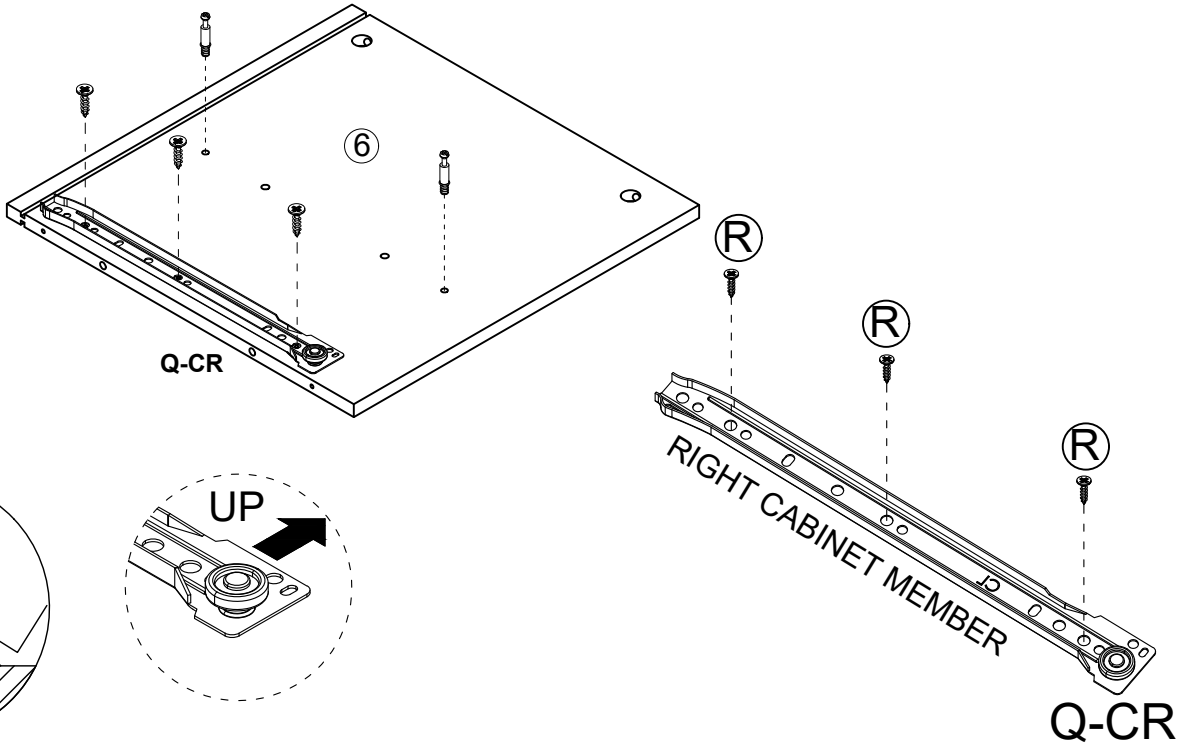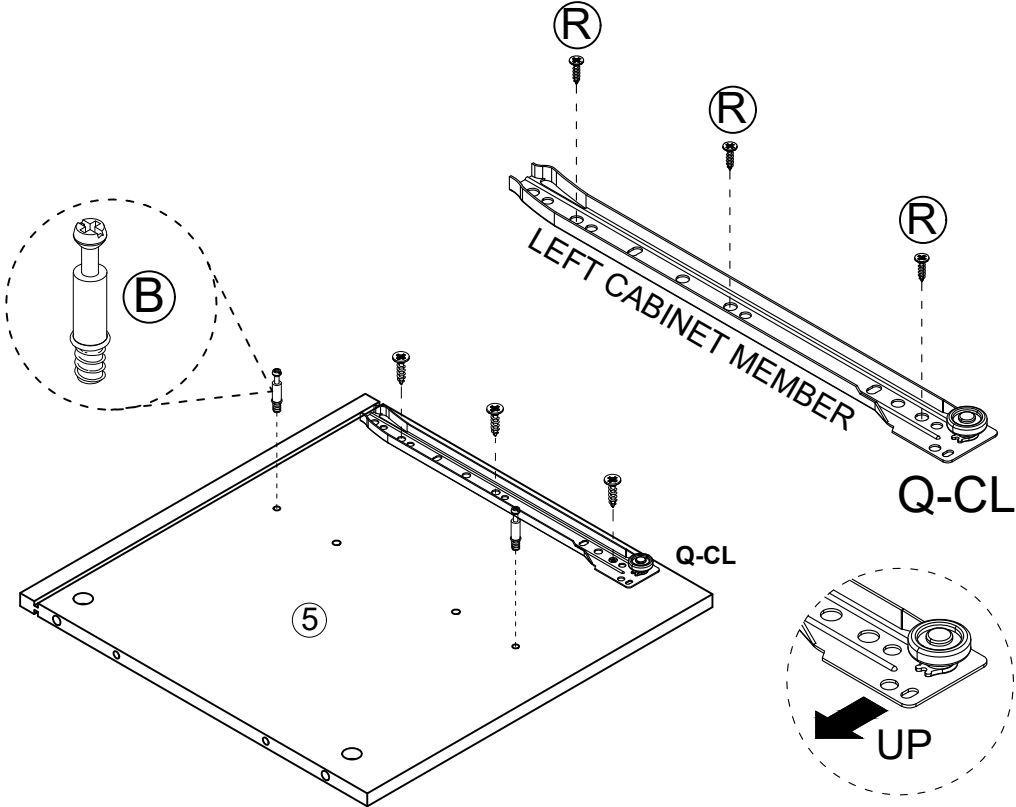

STEP5

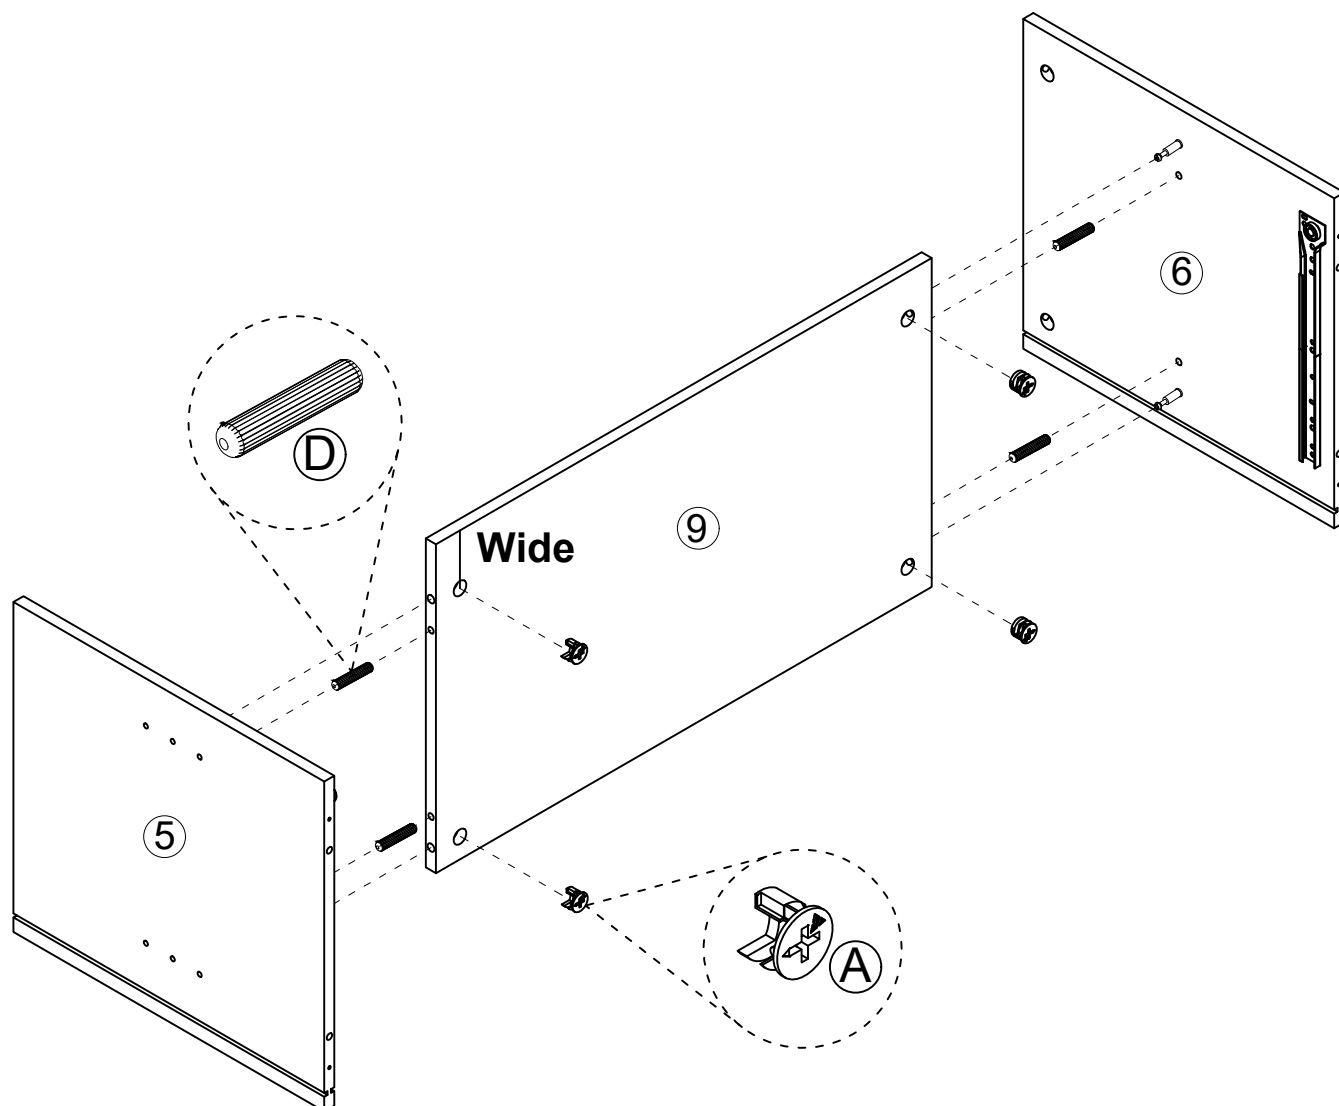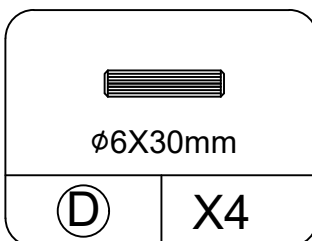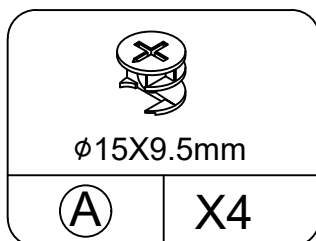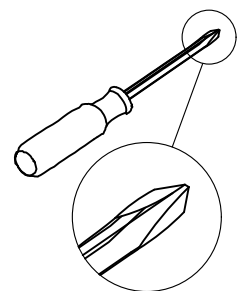


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

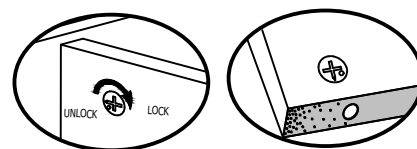


Proper orientation of CAM LOCK

STEP6

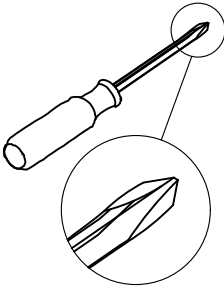


	
ø15X9.5mm	
(A)	X8

	
ø8X30mm	
(D)	X8

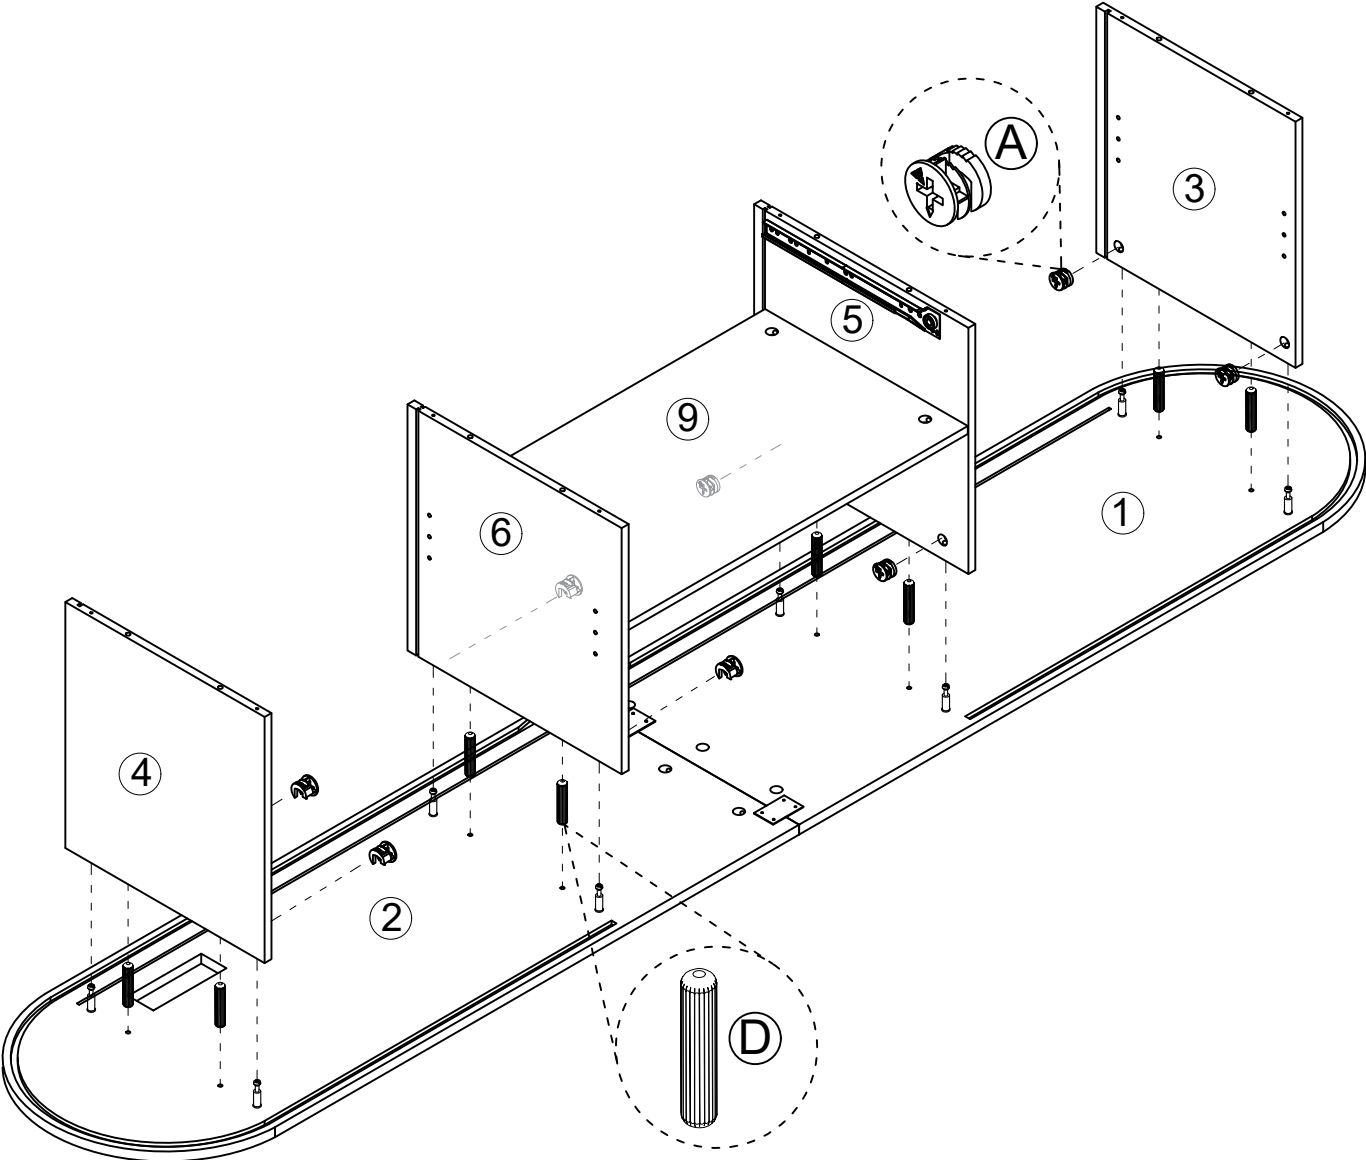


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

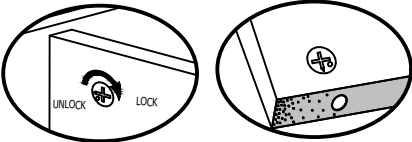


Proper orientation of CAM LOCK


STEP7



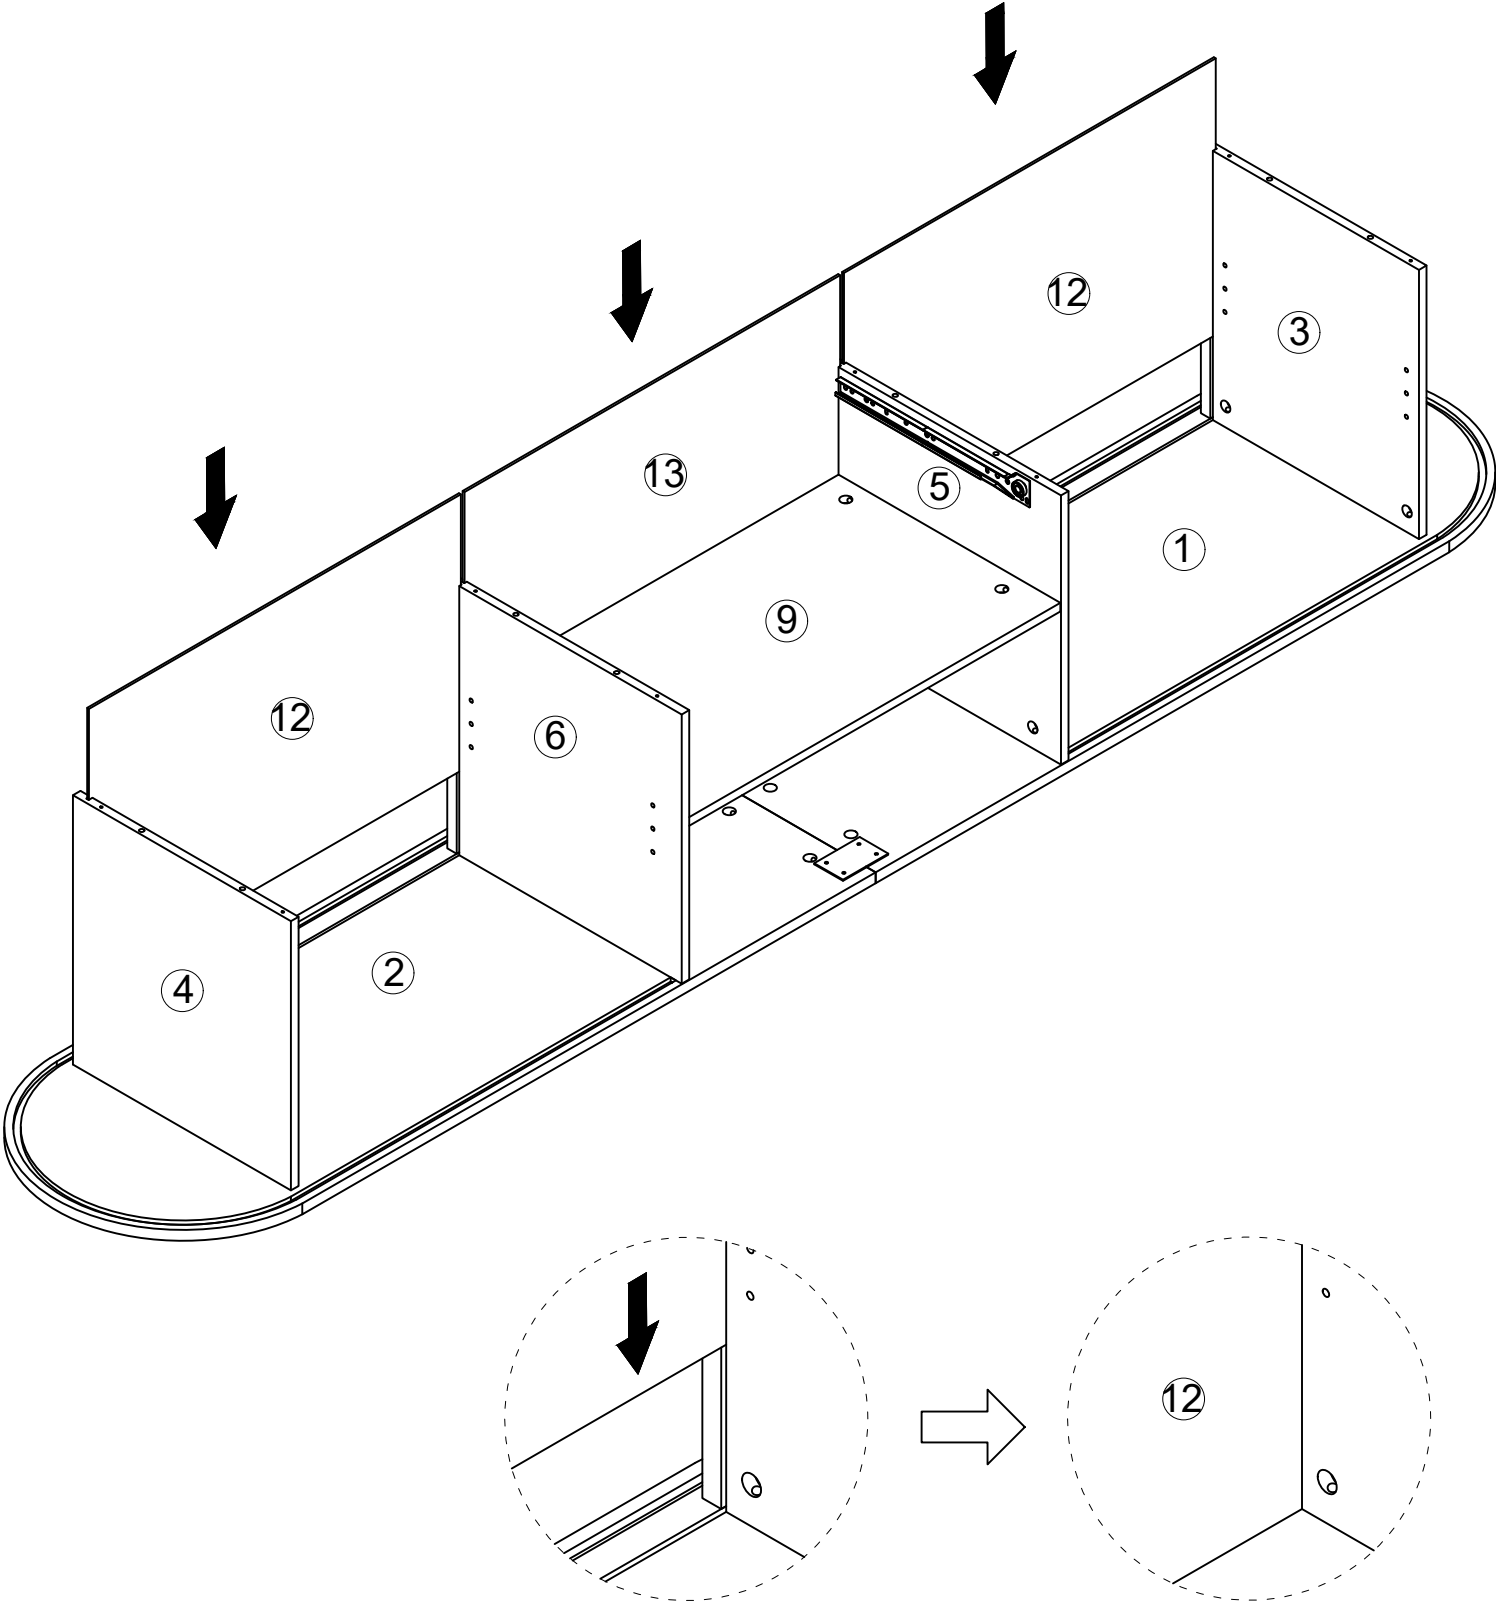



STEP8

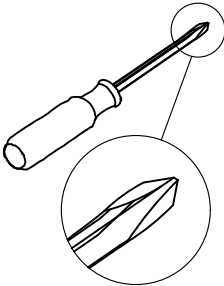


	
ø6X30mm	
Ⓓ	X8

	
ø4X35mm	
Ⓕ	X8

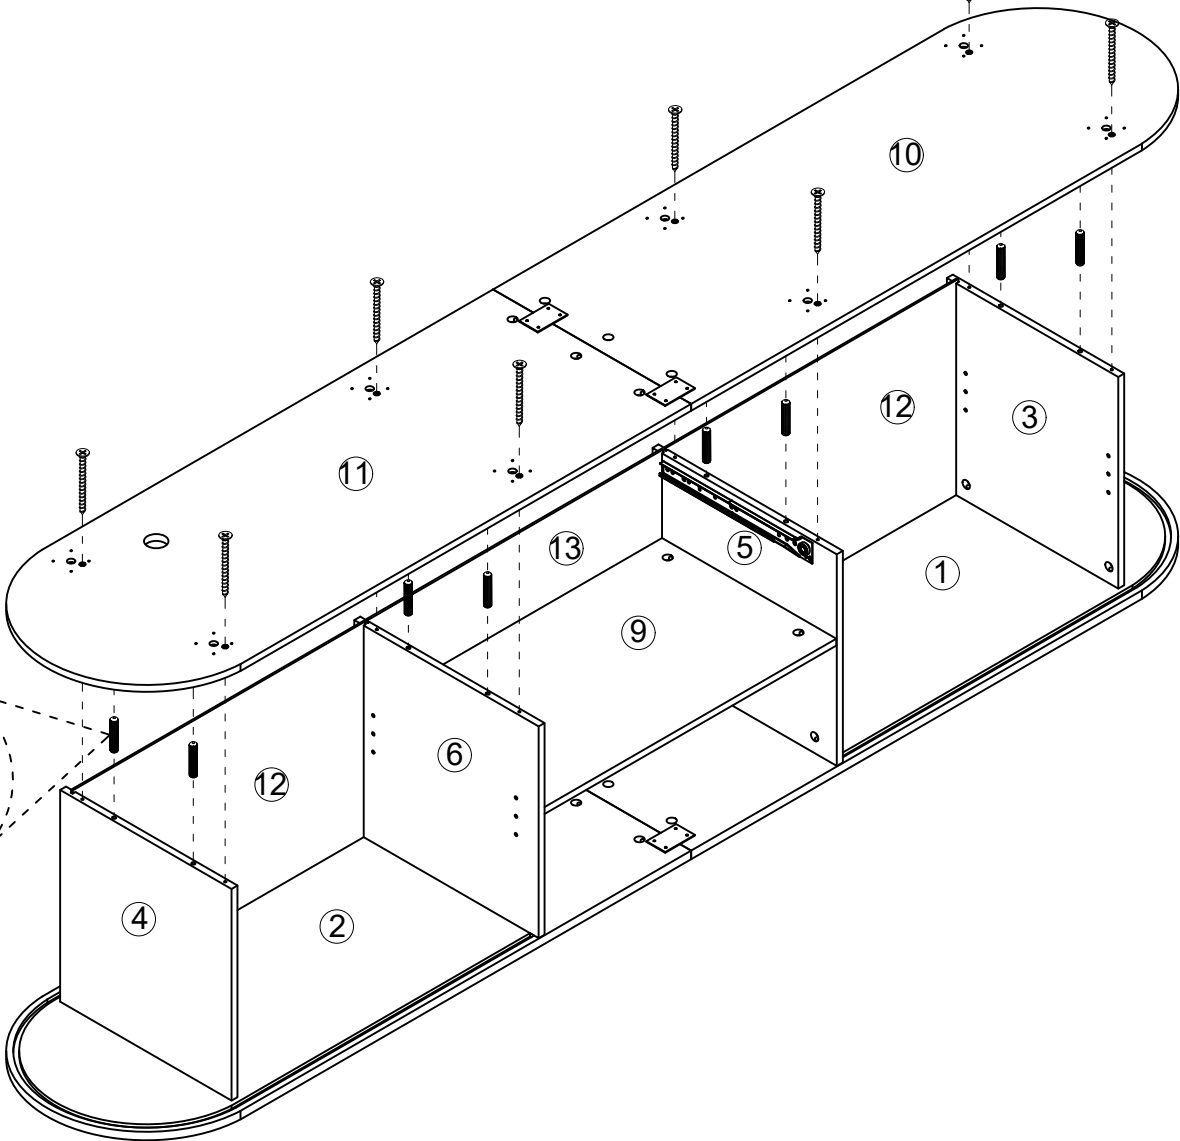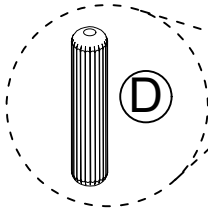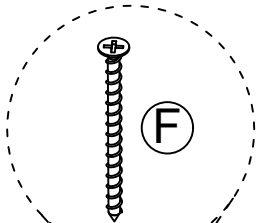


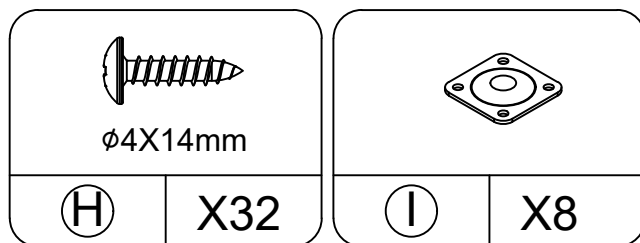





STEP10

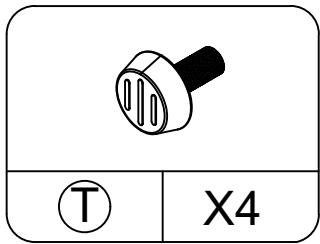

Rotate and Tighten.

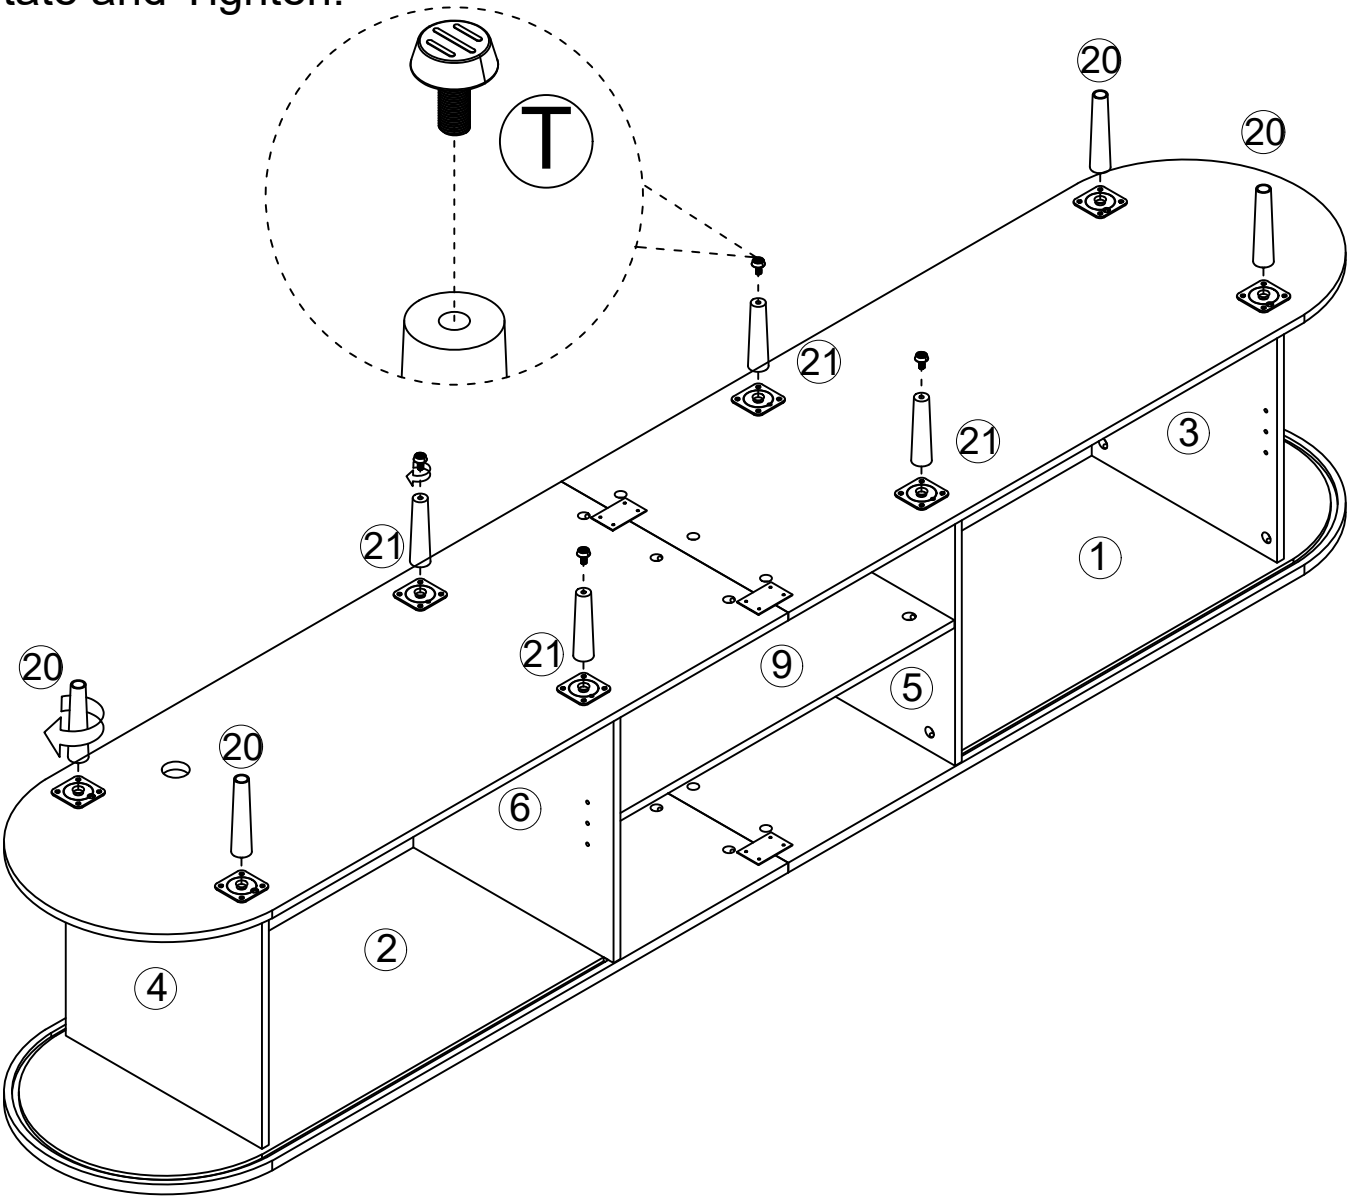

STEP11

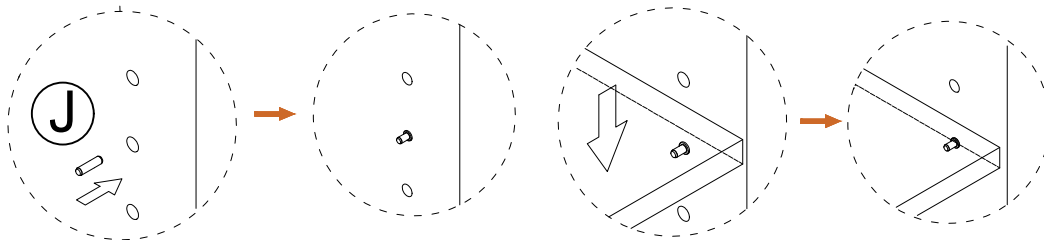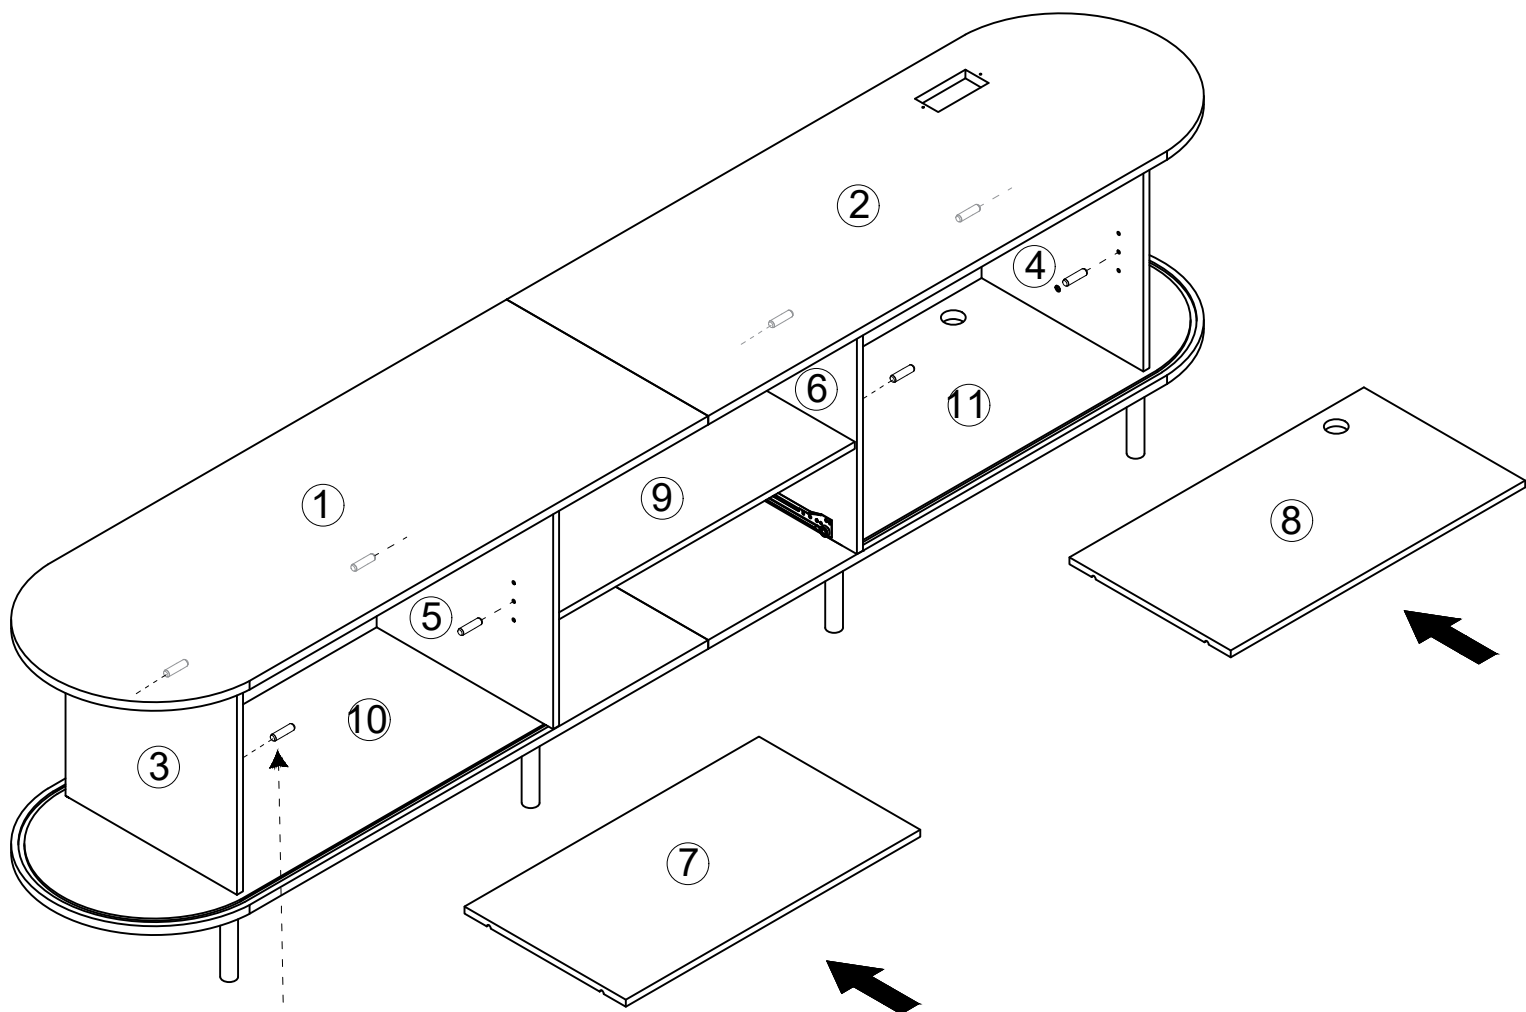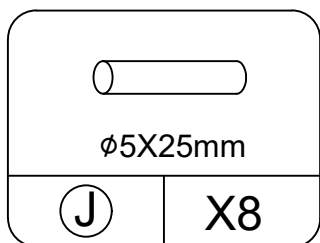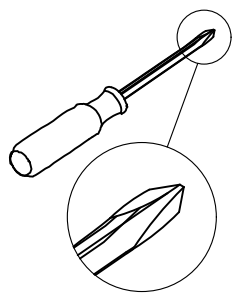


Step 1

Select the desired height and put it in

Step 2


Aim the board gaps down


STEP12

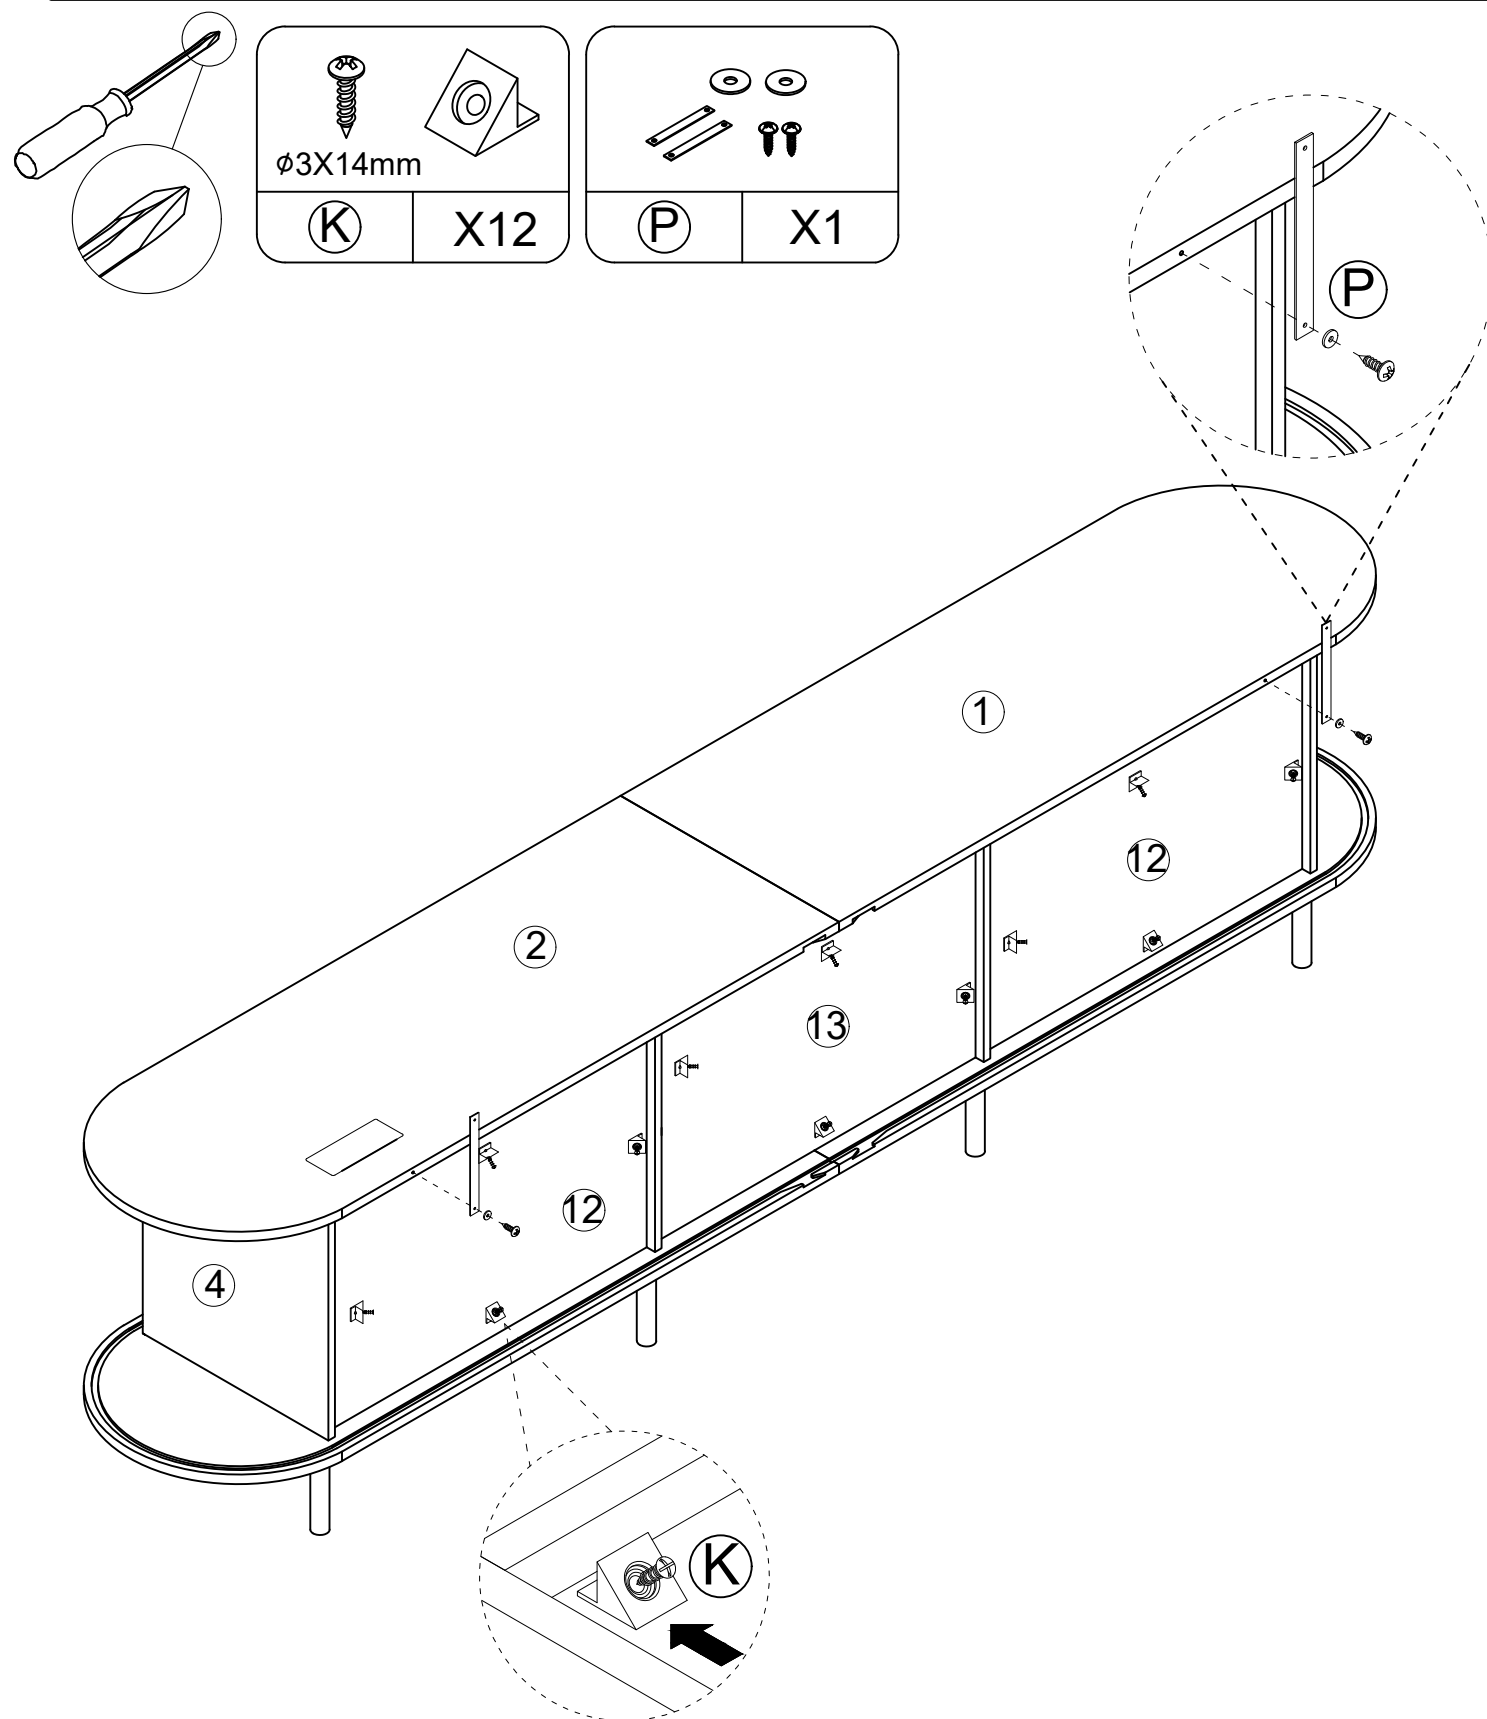



Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP13

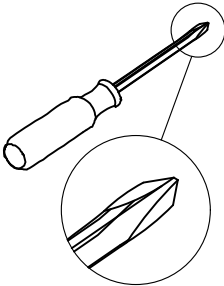


 ø3X12mm	
(G)	X2


 162X55X40mm	
(M)	X1

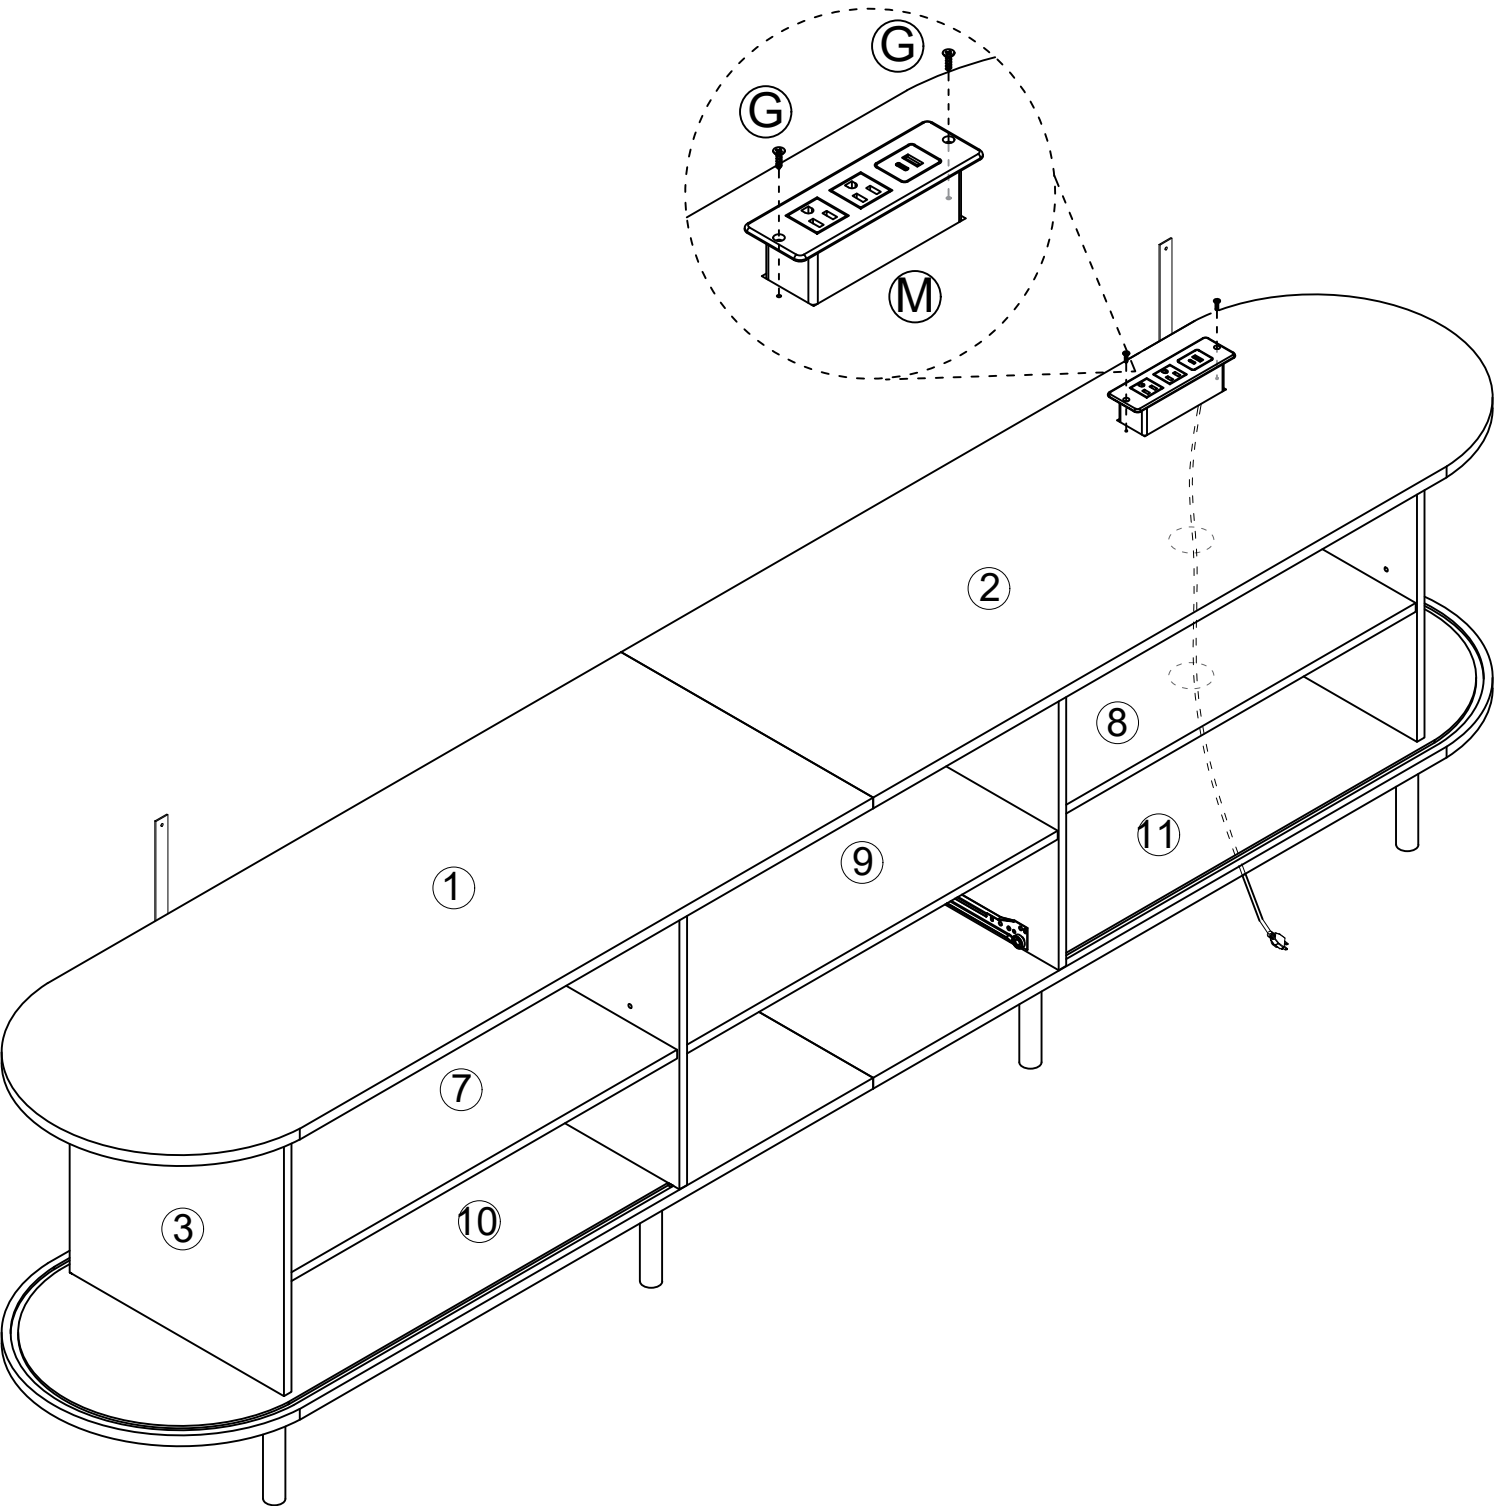



STEP14

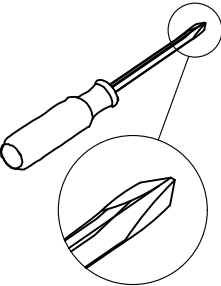



	
$\phi 15 \times 9.5 \text{mm}$	
(A)	X4

	
$\phi 6.5 \times 35 \text{mm}$	
(B)	X4

	
$\phi 4 \times 35 \text{mm}$	
(F)	X4

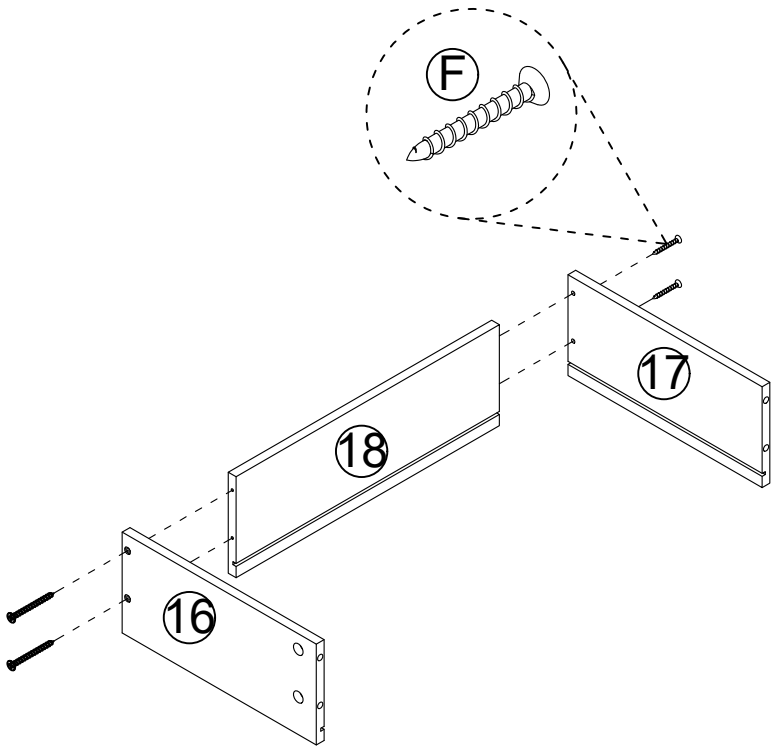


Step 1

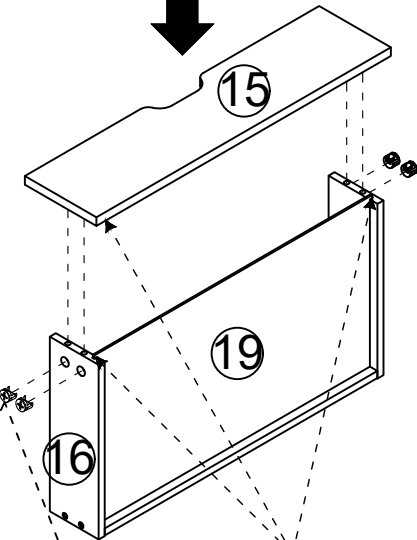
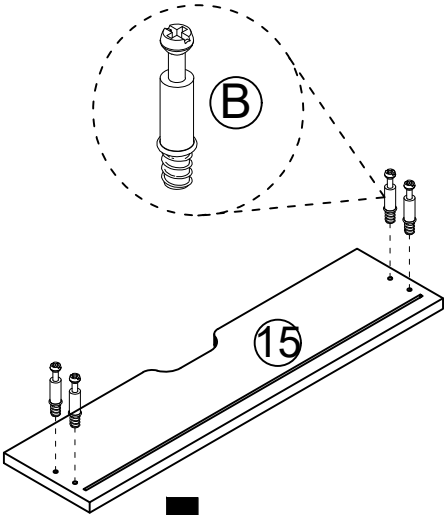


GROOVE


Step 3

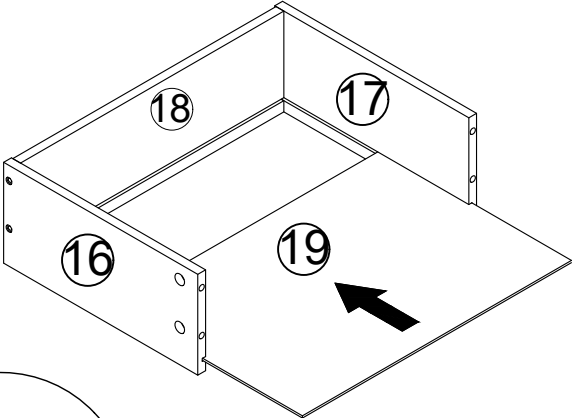

Step 2

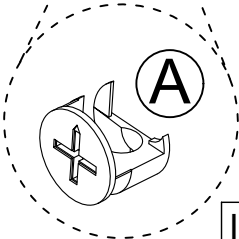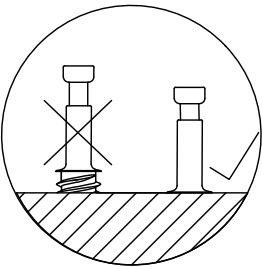



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

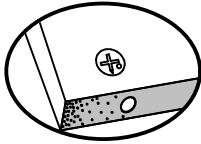



Proper orientation of CAM LOCK


STEP15

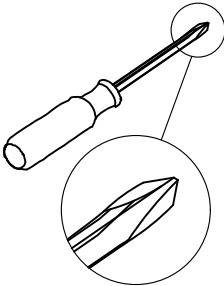


 ø3.5X12mm	
(R)	X6

 300mm	
Q-DL	X1


 300mm	
Q-DR	X1

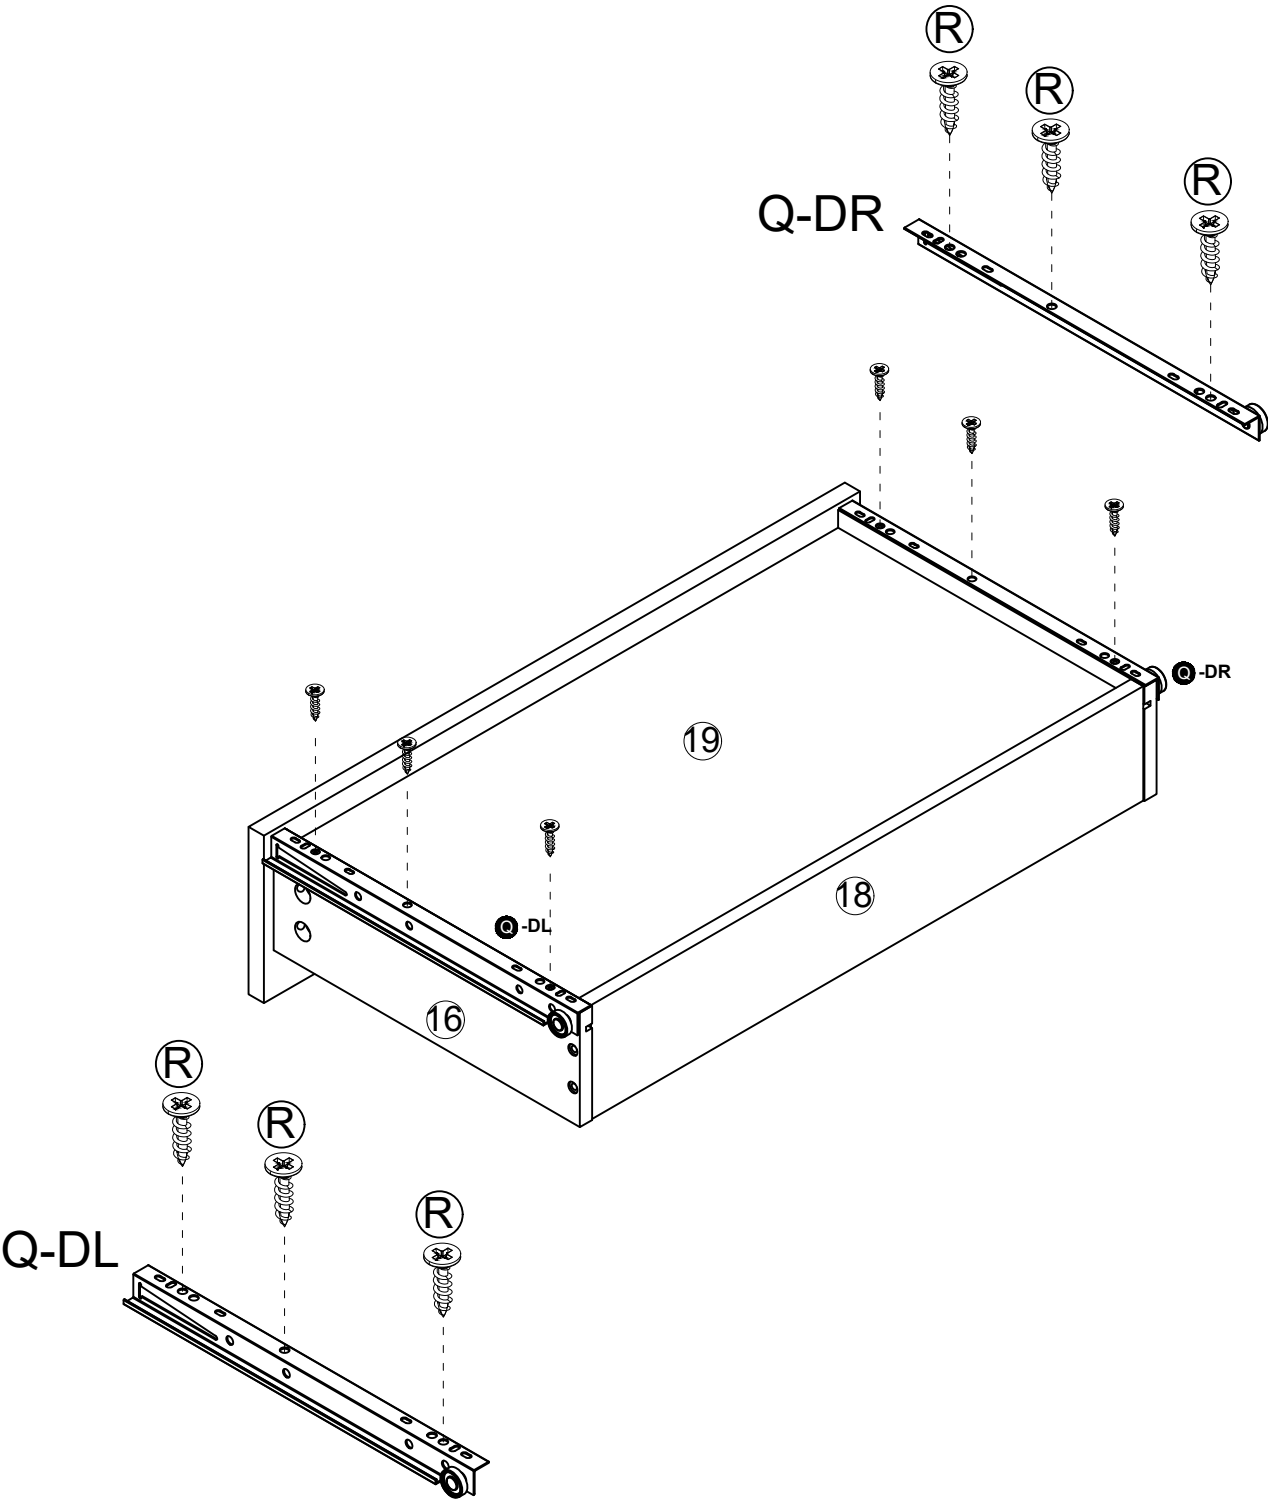

STEP16

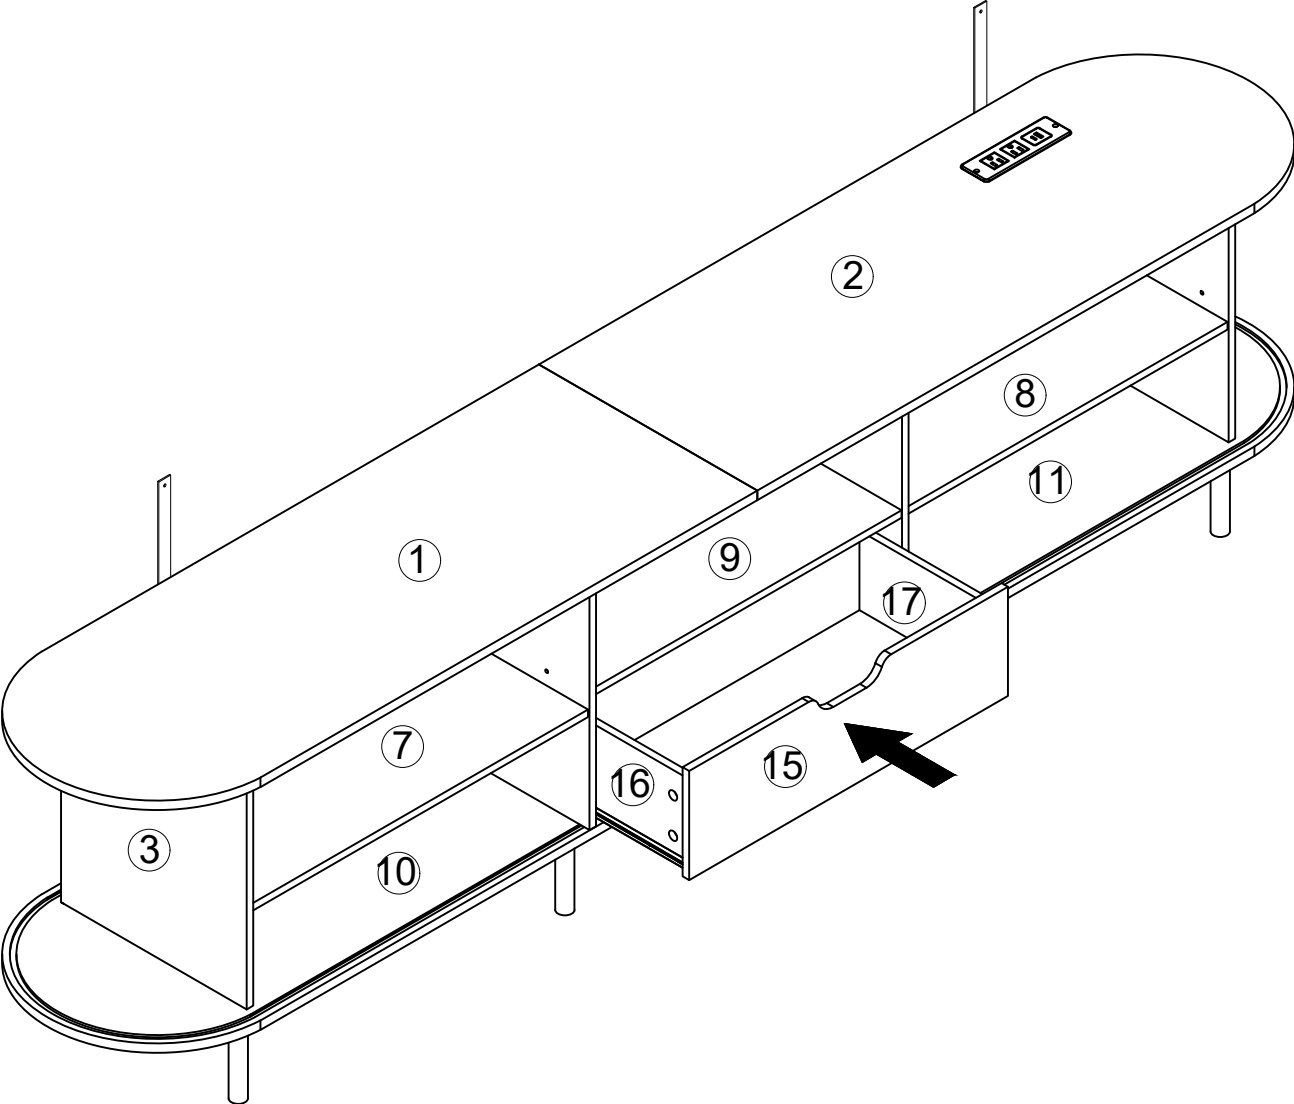


Cabinet Slide

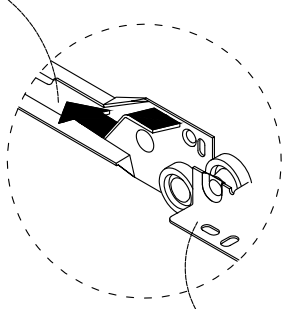


Drawer Slide


STEP17

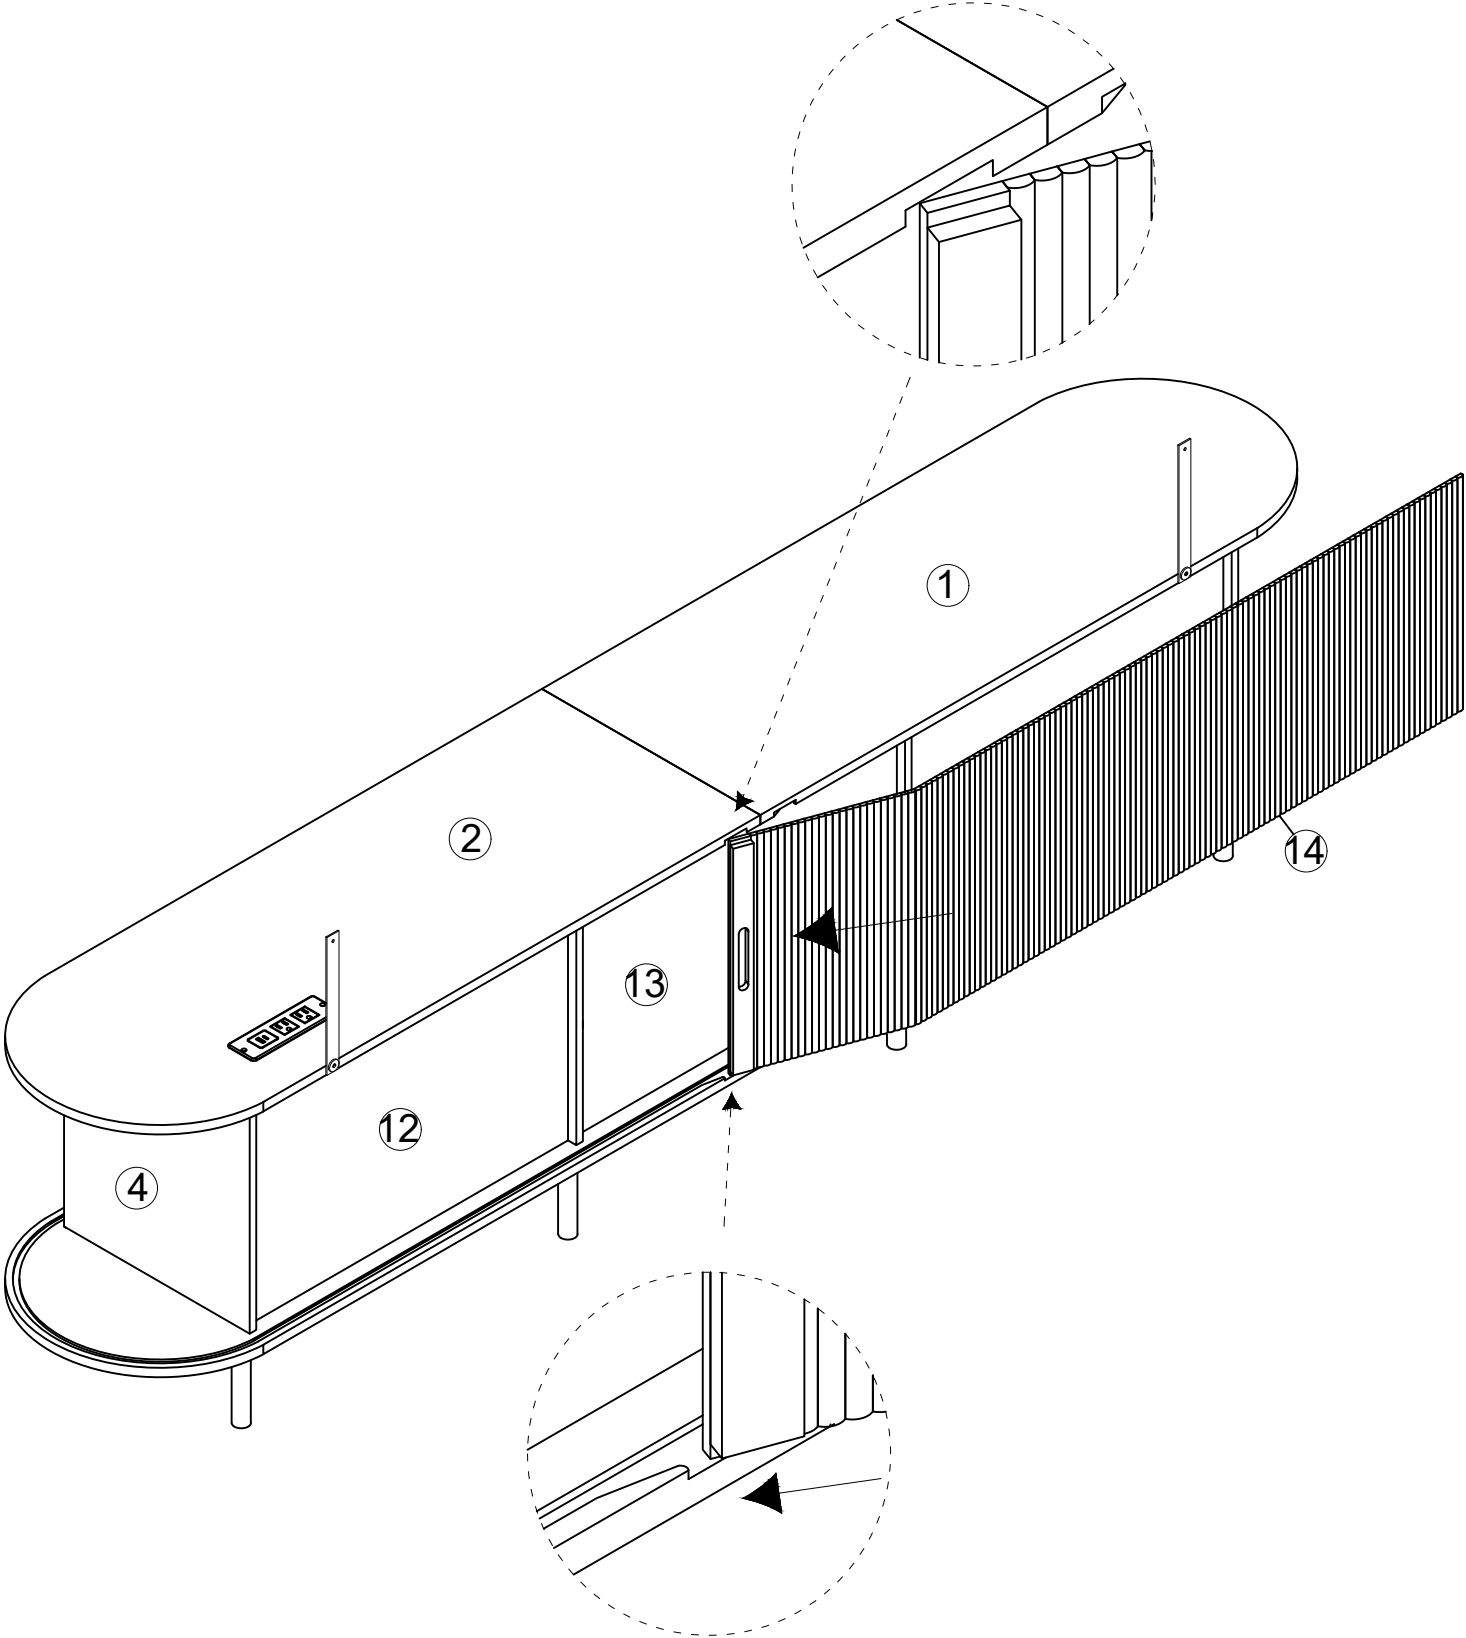


STEP18

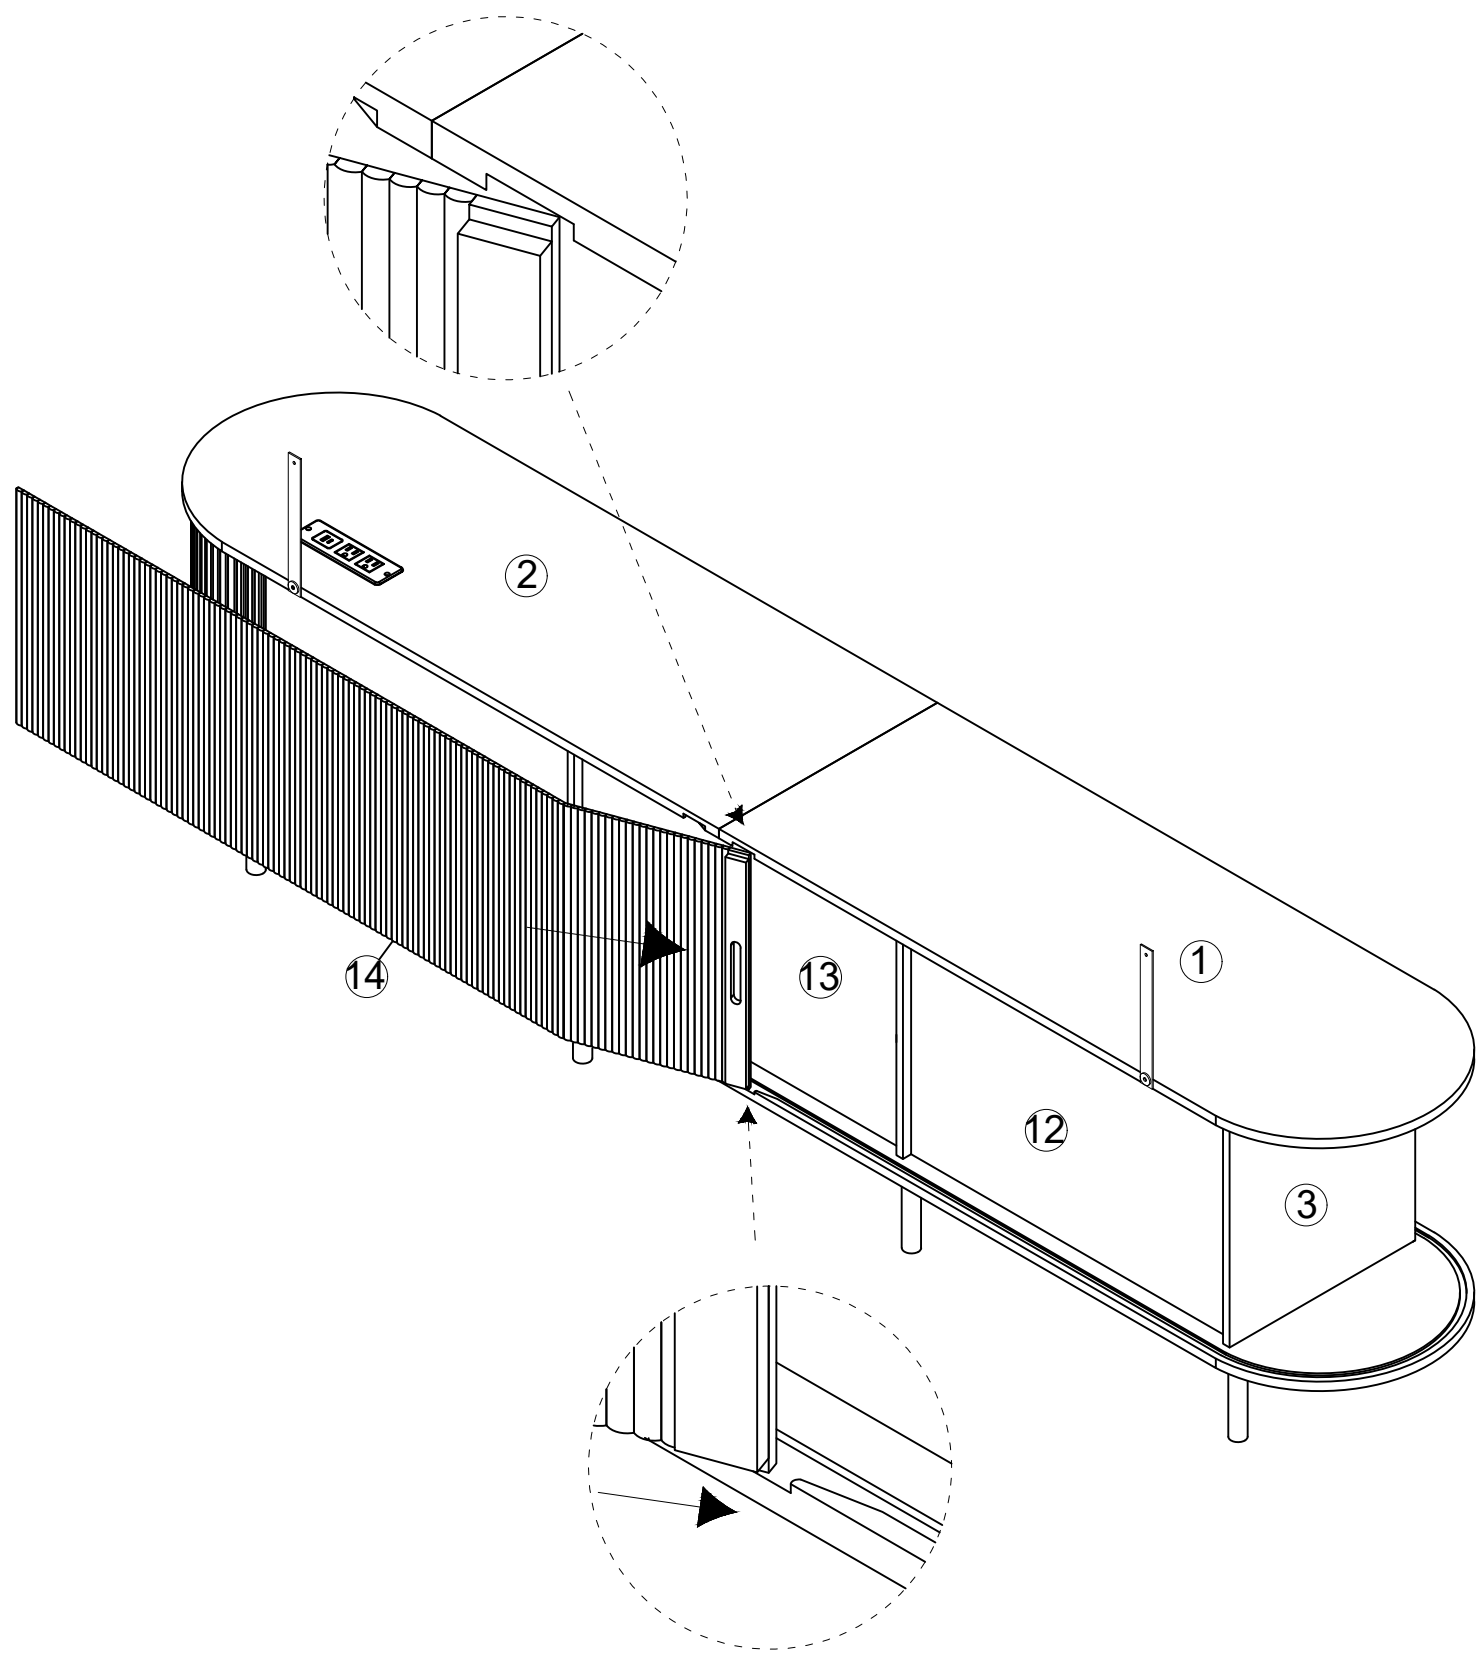


STEP19

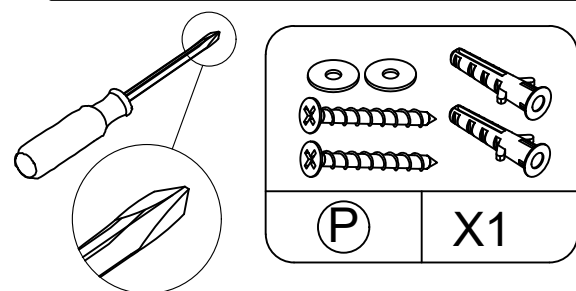


Install the tipping
restraint hard ware

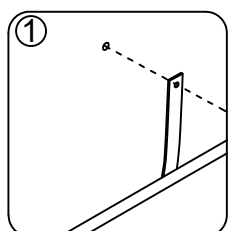


1.make mark on
the wall

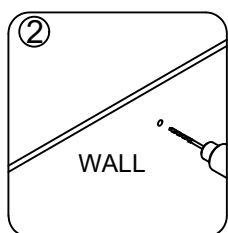


2.drill two Ø6
holes on the wall

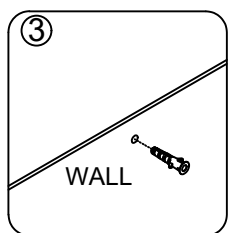

3.put two anchors in
the holes

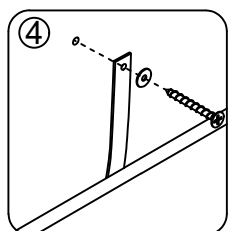

4.fix the device on the
wall by the long screws

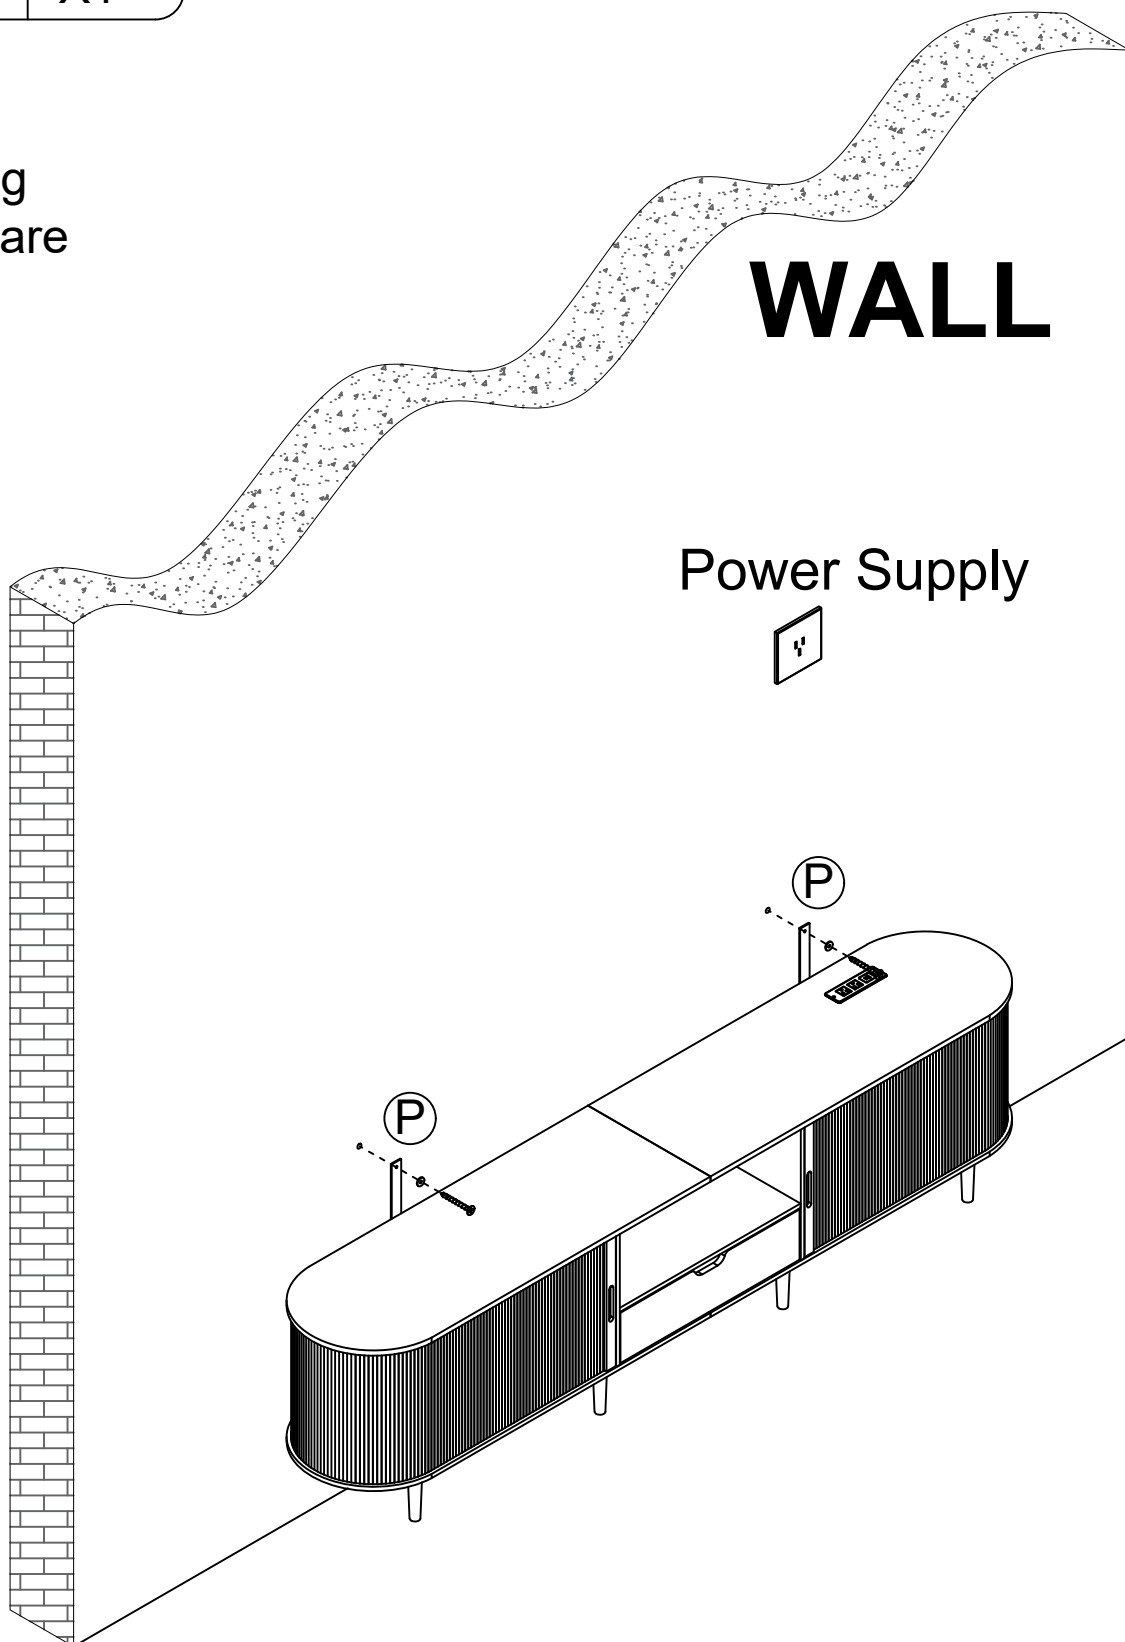

STEP20

