




DESIGNED FOR LIFE

Assembly Instructions

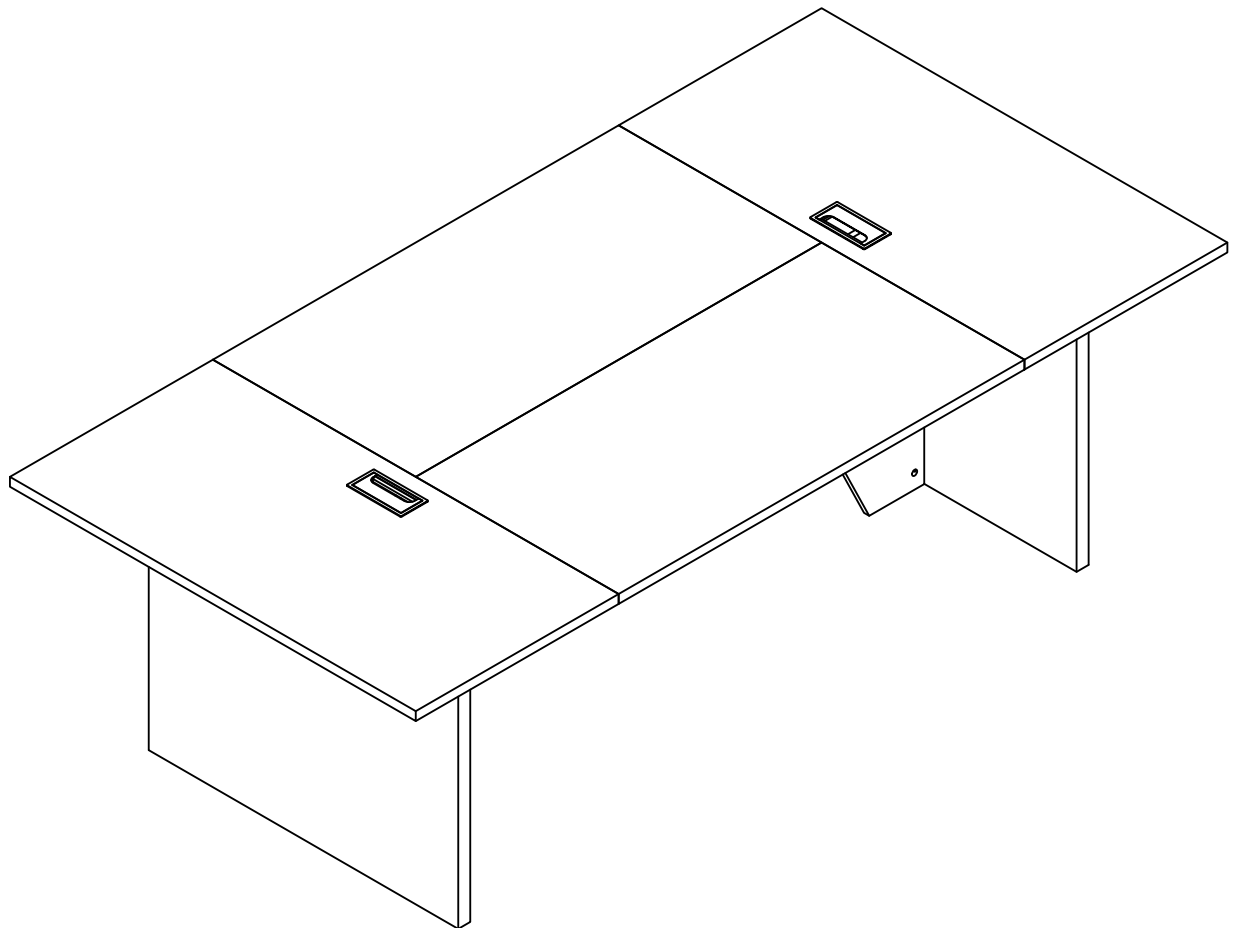

Conference Table

Model No.
HOGA-YS0329



www.tribesign.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video


Step 1

Scan the QR code.






Step2

Search with the Model No.
(on the bottom left corner of the title page)

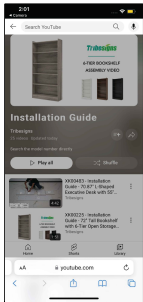


Note: If you can't find the assembly video, please contact us.

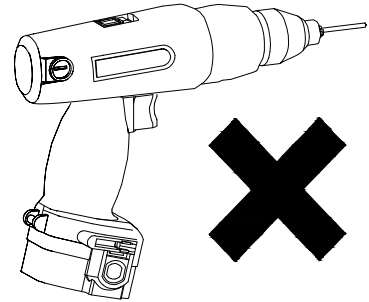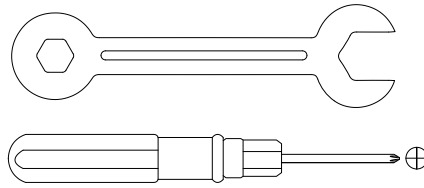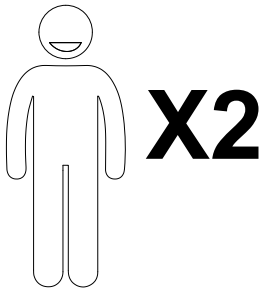



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

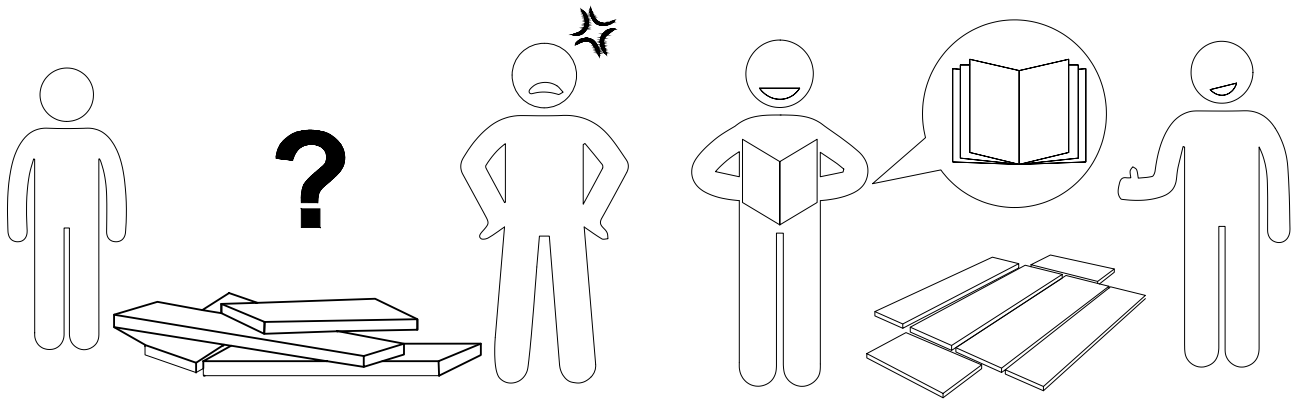

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

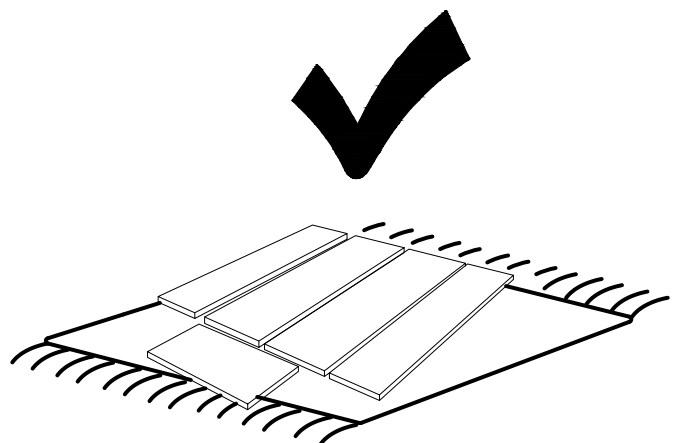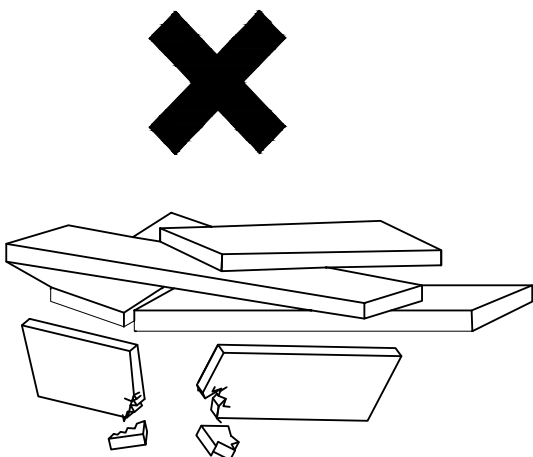

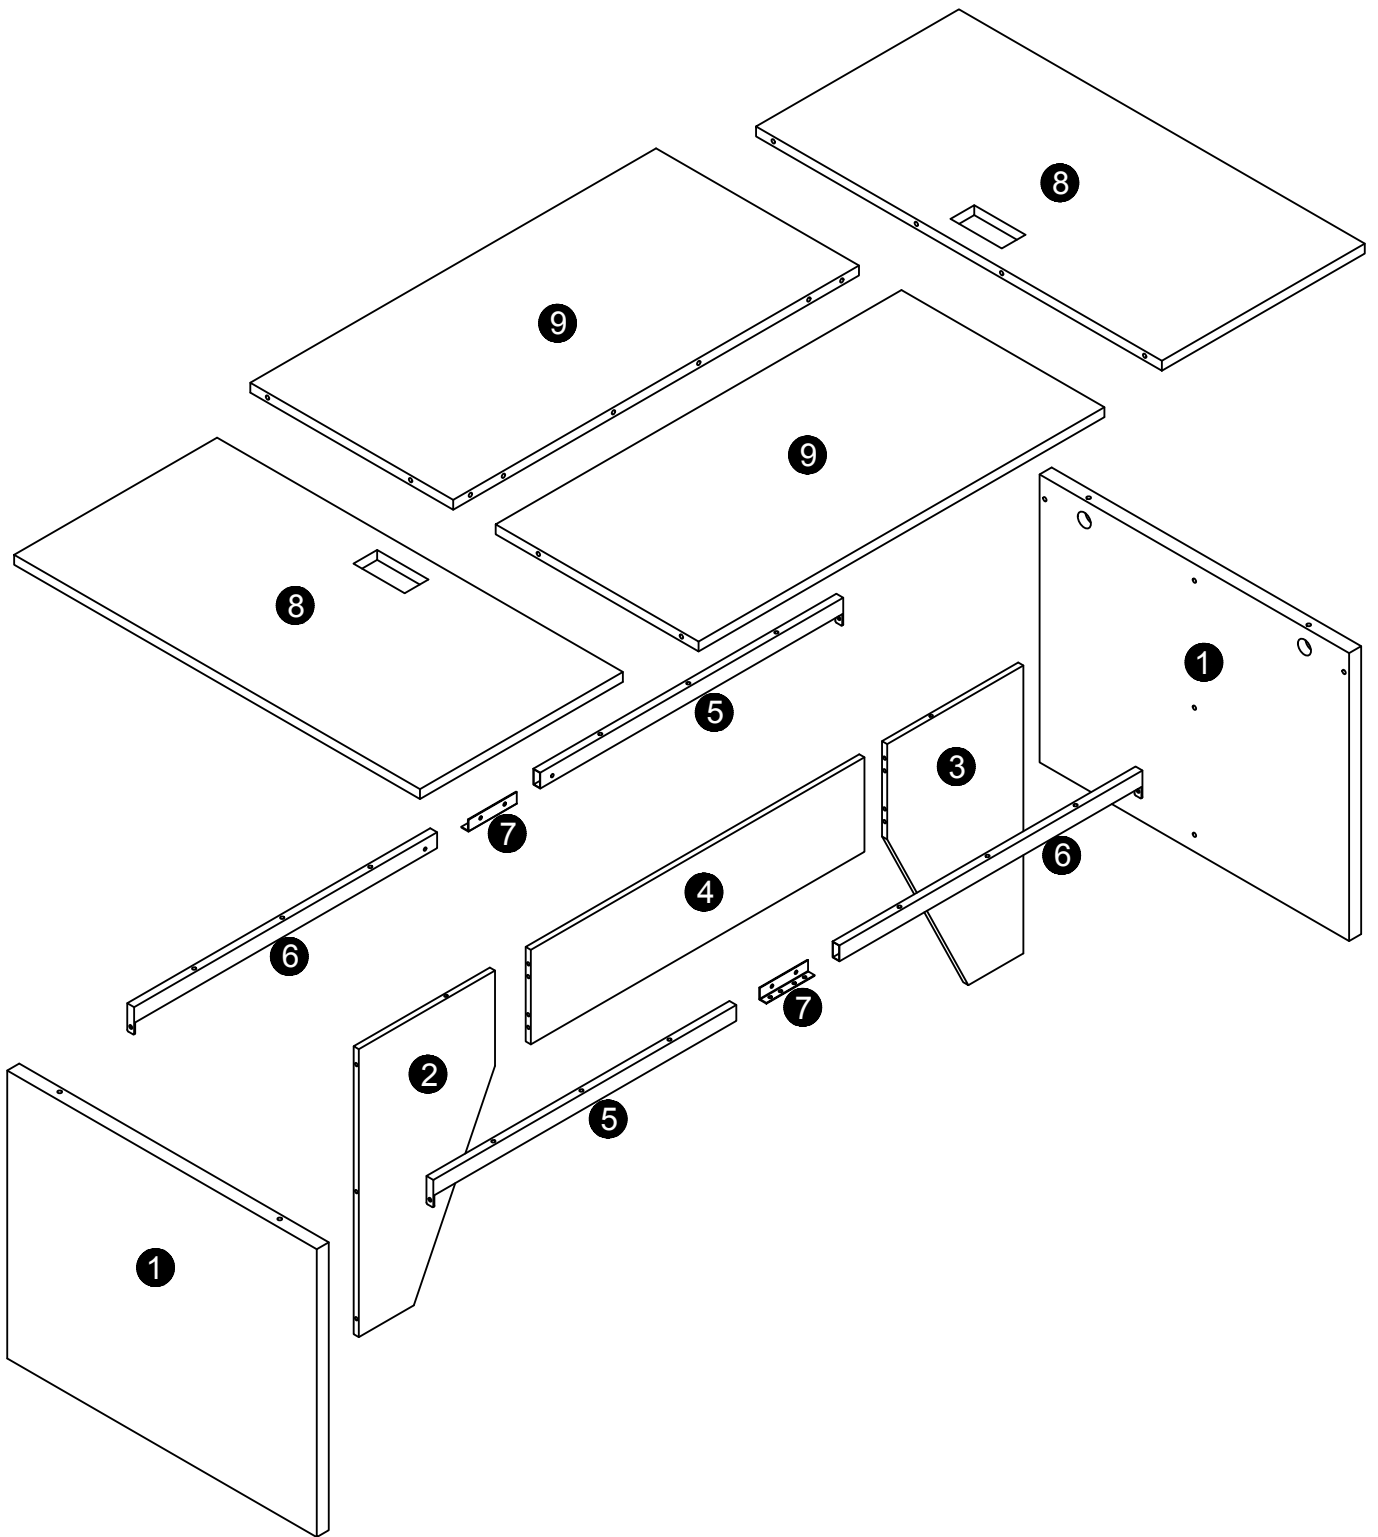**⚠ Caution**


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List







1 2 pcs	2 1 pc	3 1 pc	4 1 pc	5 2 pcs
6 2 pcs	7 2 pcs	8 2 pcs	9 2 pcs	







Before installation, please check if you have received the A, B packages, and check if the parts are complete.

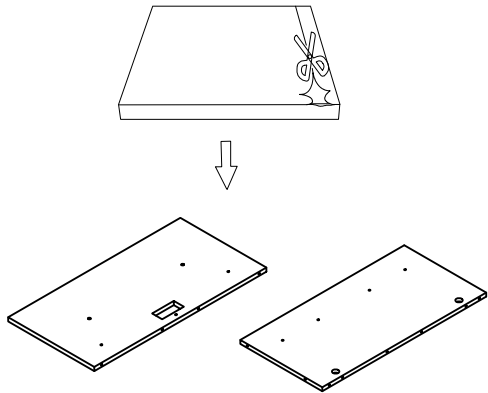

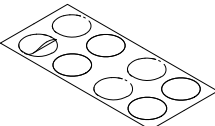



HOGA-YS0329-A				HOGA-YS0329-B			
8	2 pcs	9	2 pcs	1	2 pcs	2	1 pc
				4	1 pc	3	1 pc
				7	2 pcs	5	2 pcs
						6	2 pcs









Hardware List

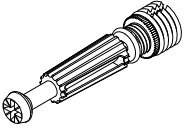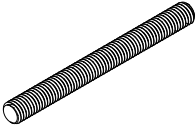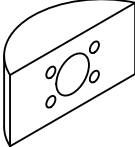A	B	C	D		E
 M6x35mm	 Ø15x12mm	 Ø10x30mm	D1	D2	 M8x95mm
			 8 pcs	 M8 8 pcs	
8 pcs	8 pcs	12 pcs	8 pcs	8 pcs	2 pcs

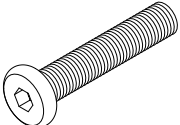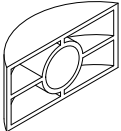

F	G		H	I	J
 Ø8x30mm	G1	G2	 M6x95mm 4 pcs	 M6x16mm 16 pcs	 M6x55mm 12 pcs
	 8 pcs	 M6 8 pcs			
4 pcs	8 pcs	8 pcs	4 pcs	16 pcs	12 pcs

K	L	M	N	O	
 Ø30x3mm 4 pcs	 Ø16x3mm 2 pcs	 Ø50 16 pcs	 Ø21 8 pcs	O1	O2
				 20x20mm 1 pc	 Ø3.5x14mm 4 pcs
4 pcs	2 pcs	16 pcs	8 pcs	1 pc	4 pcs

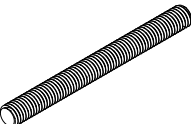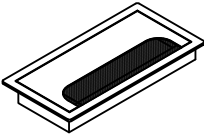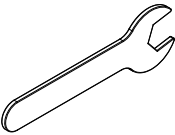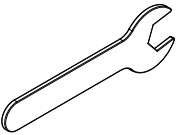
P	Q	R			
 M8x70mm 4 pcs	 2 pcs	 M6 2 pcs	 M8 2 pcs	 1 pc	 M4 1 pc
4 pcs	2 pcs	2 pcs	2 pcs	1 pc	1 pc

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

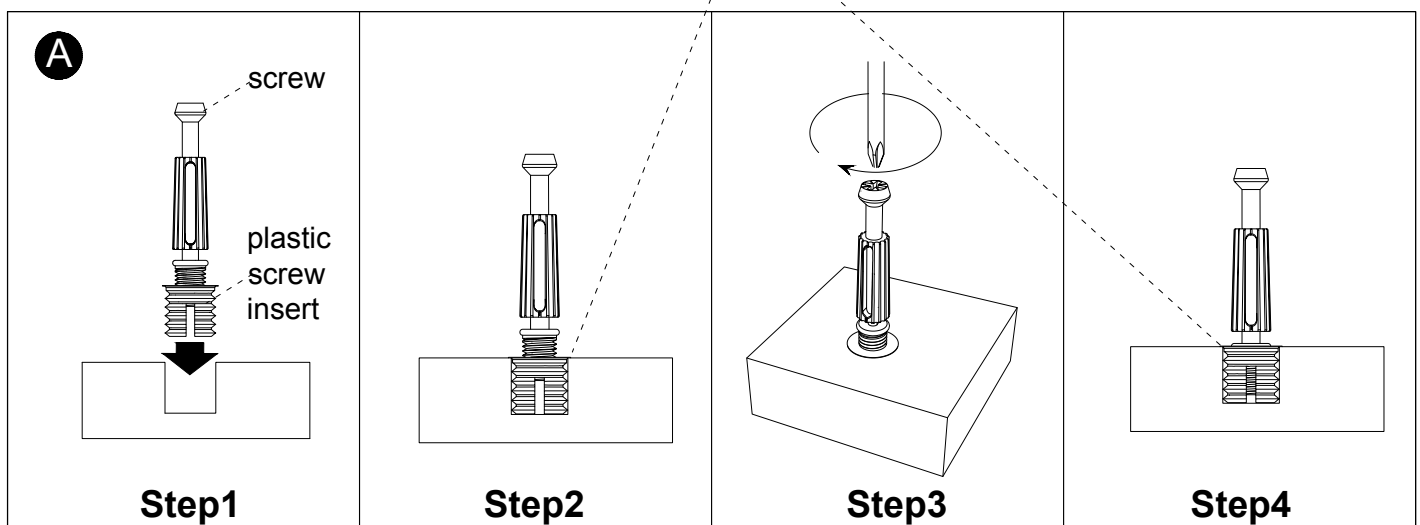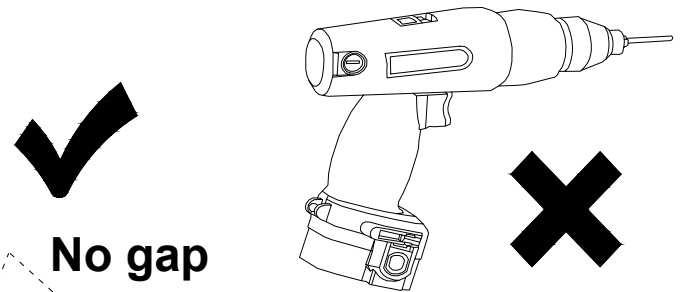


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

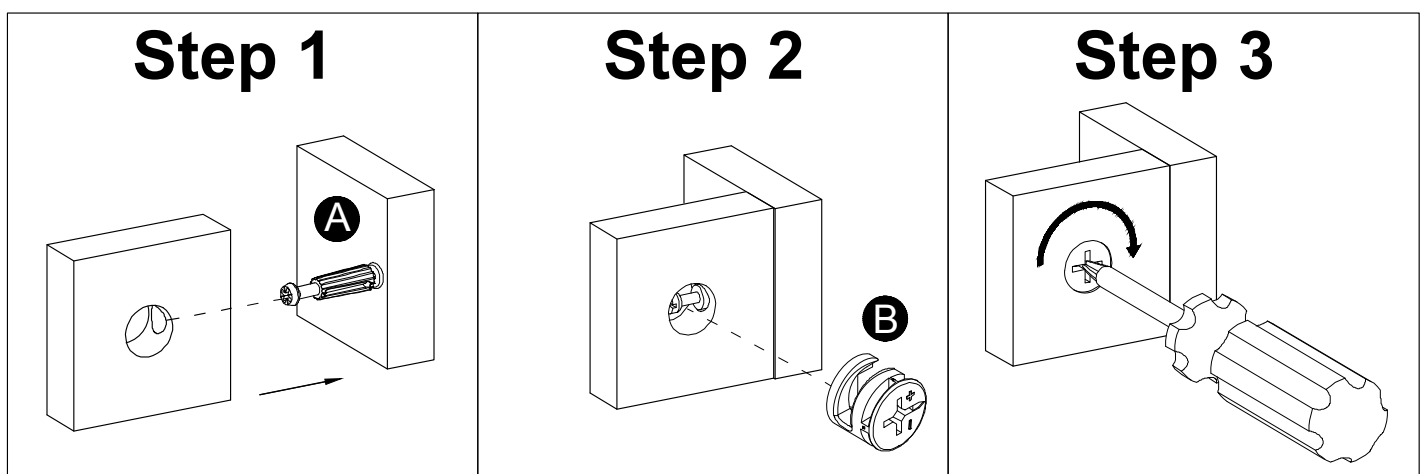



1

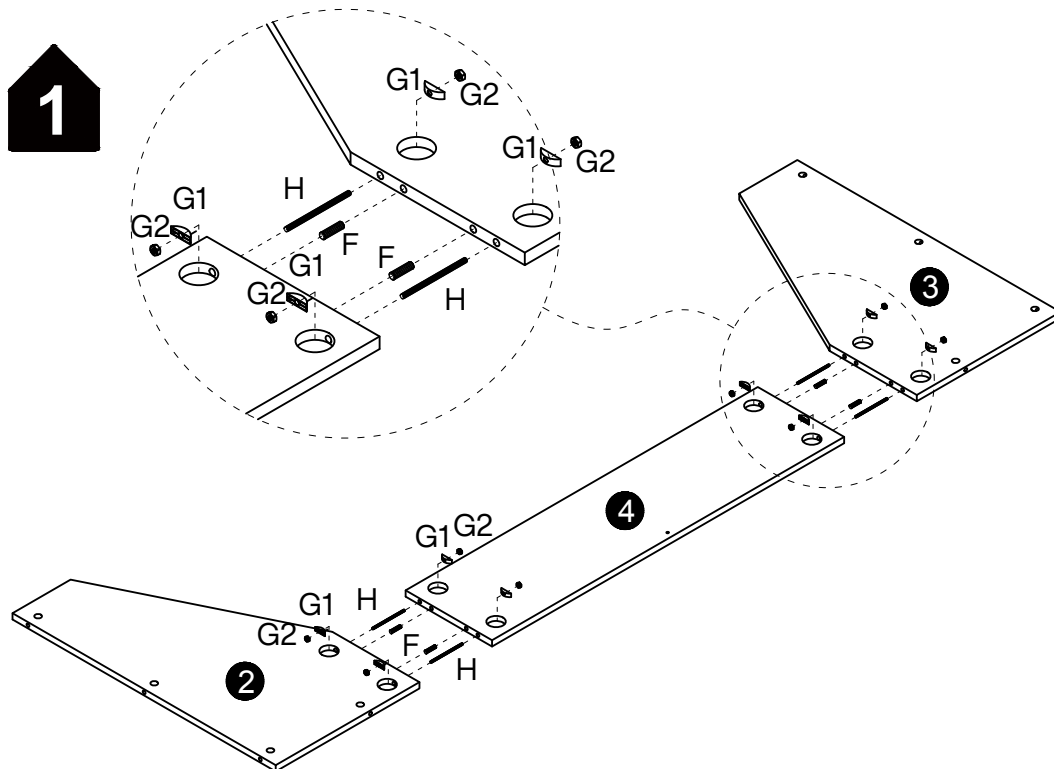

G1	G2
8 pcs	8 pcs
F	H
Ø8x30mm	M6x95mm
4 pcs	4 pcs






Step 1

Step 2


Step 3

Step 4


Step 5

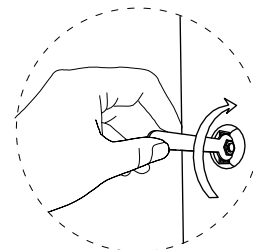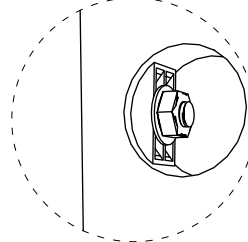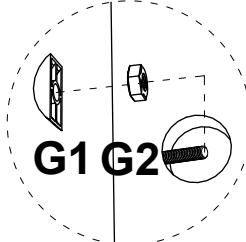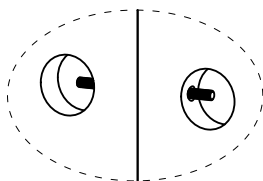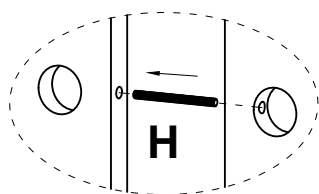


2

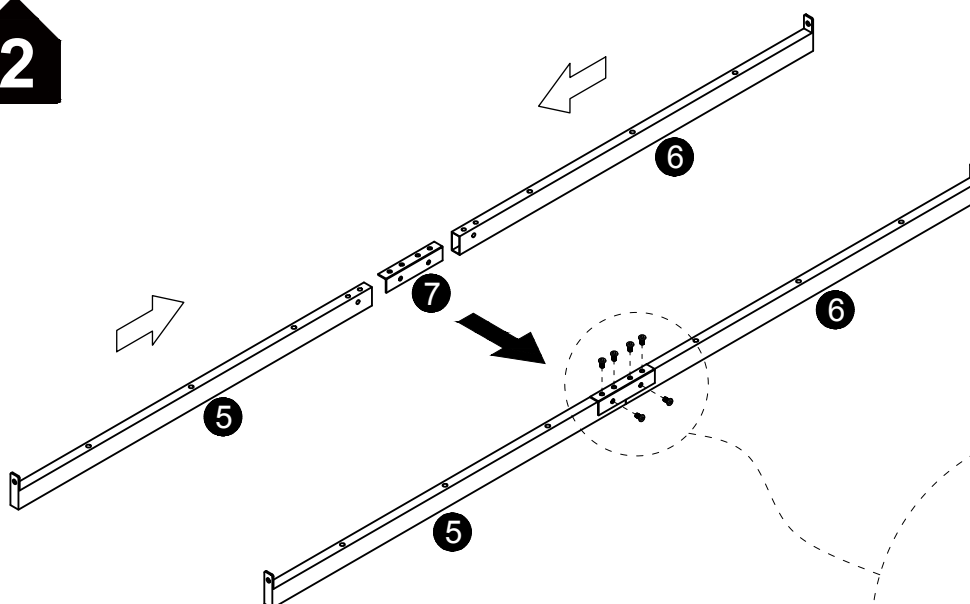


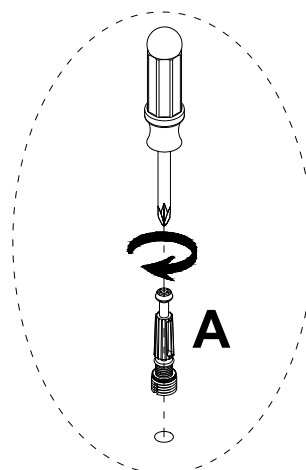
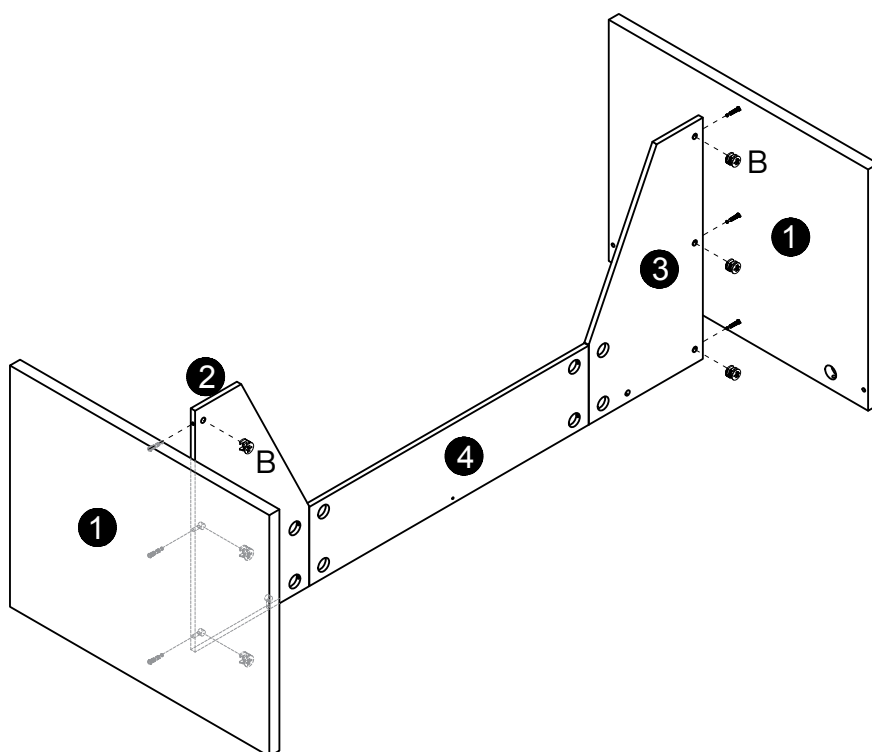
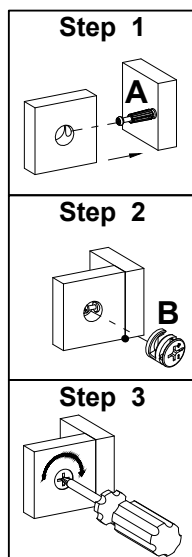
I
M6x16mm
12 pcs

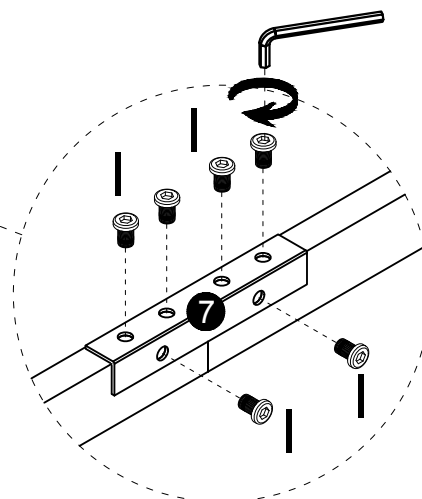


x2

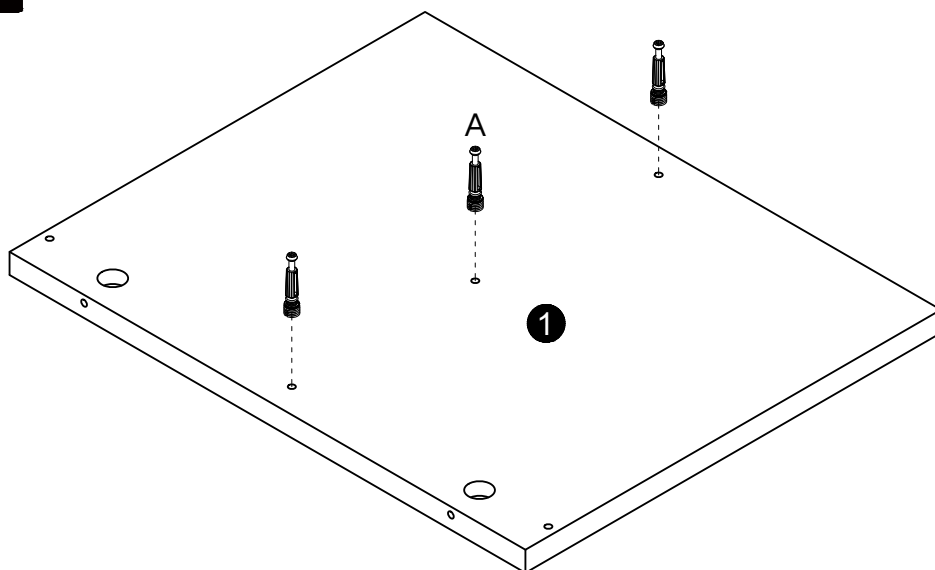3


A

M6x35mm
6 pcs


x2
4


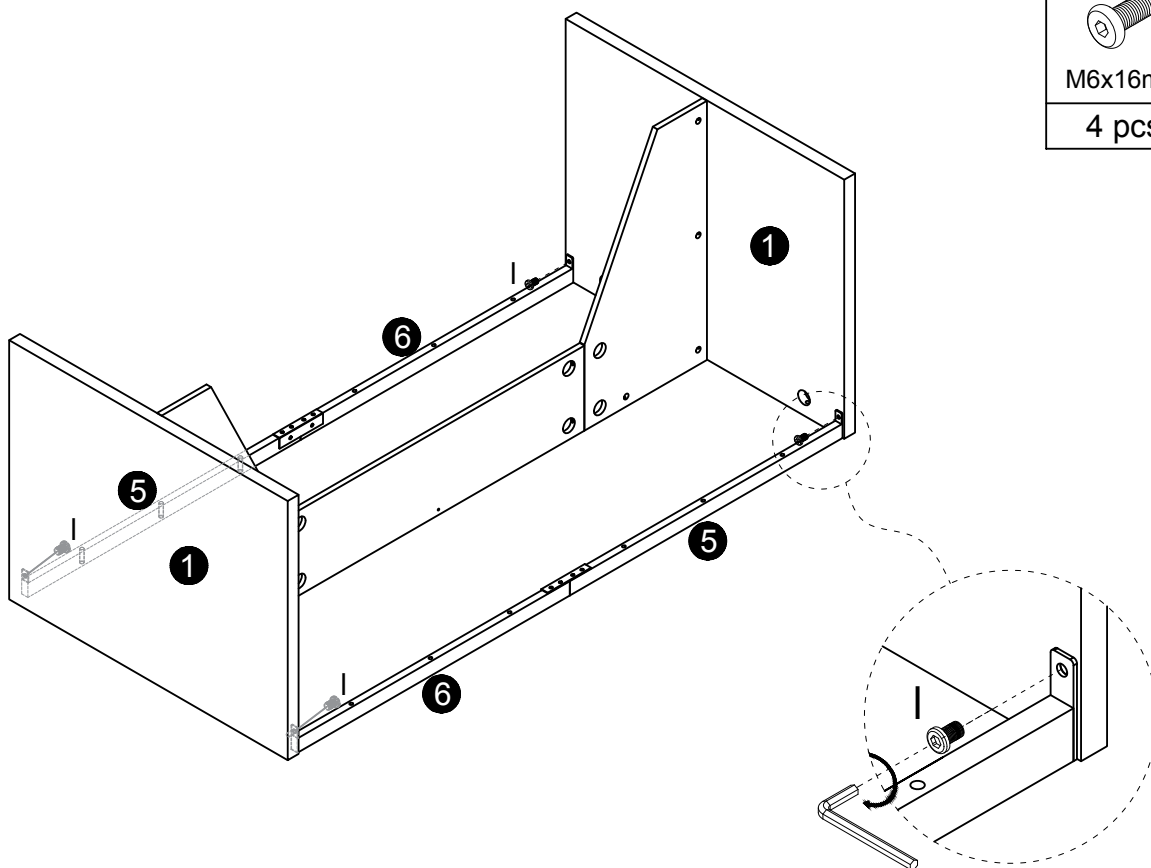
B

Ø15x12mm
6 pcs







5


I

M6x16mm
4 pcs



6

D1	D2
	
4 pcs	4 pcs
C	E
	
Ø10x30mm	M8x95mm
4 pcs	2 pcs

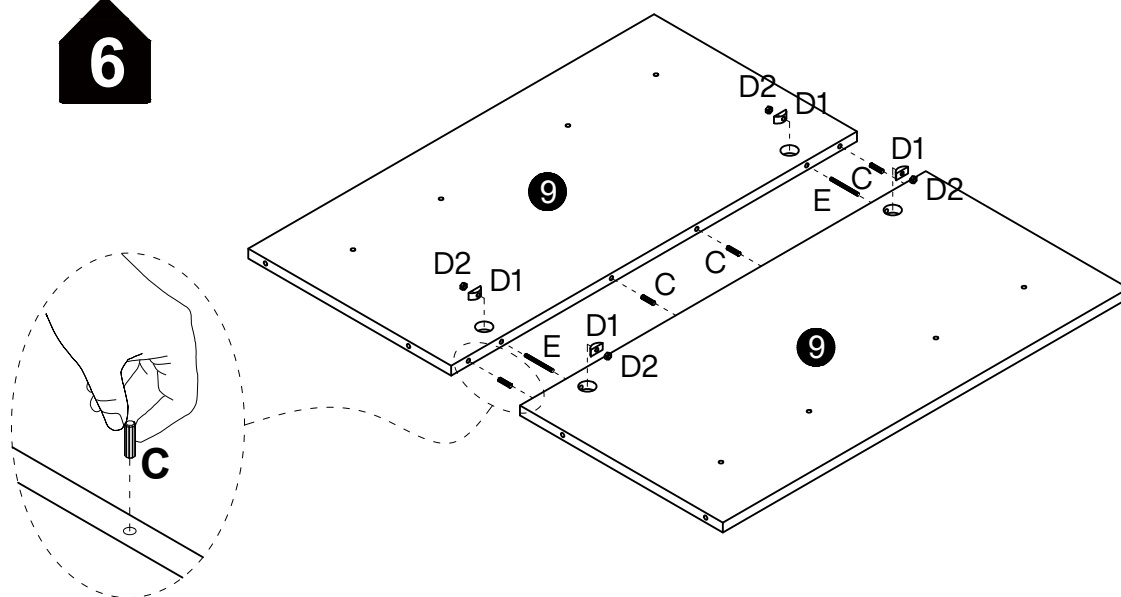






Step 1

Step 2

Step 3


Step 4


Step 5

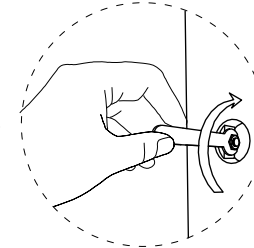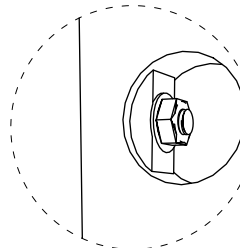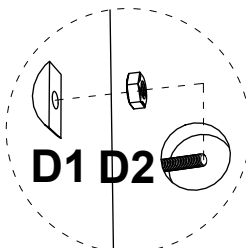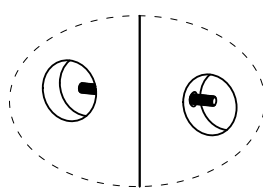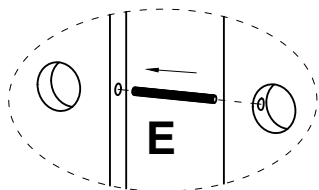




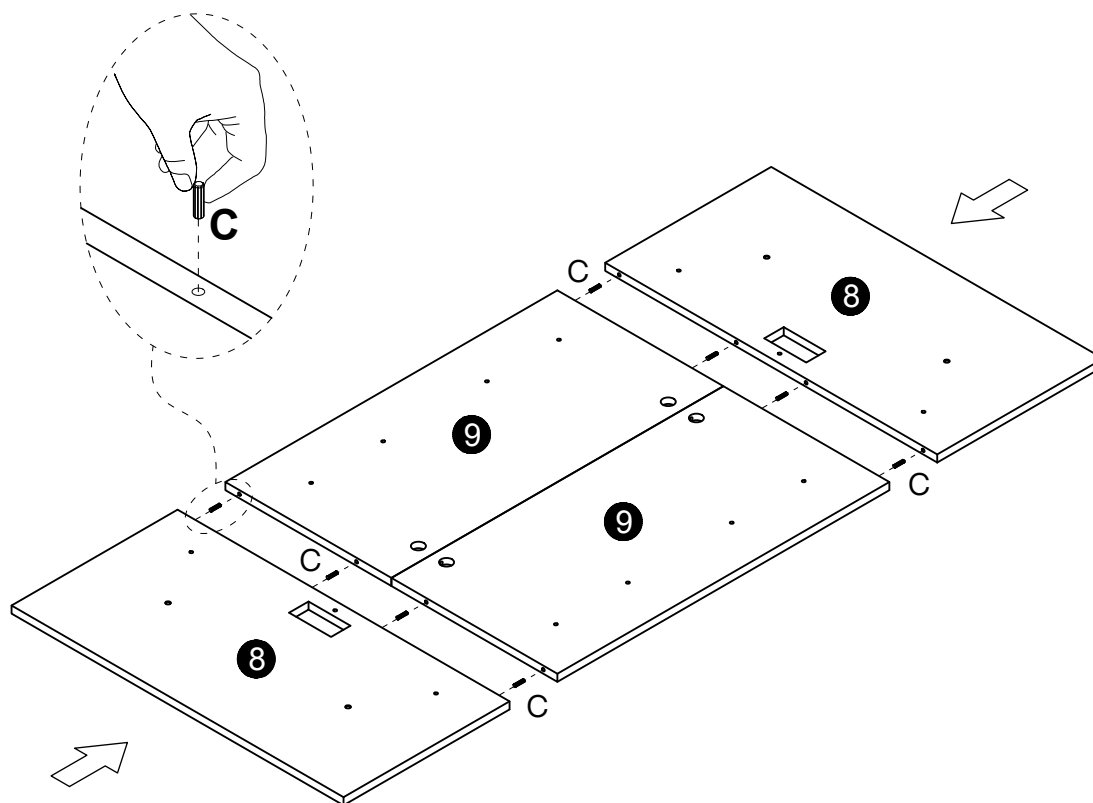

7




C

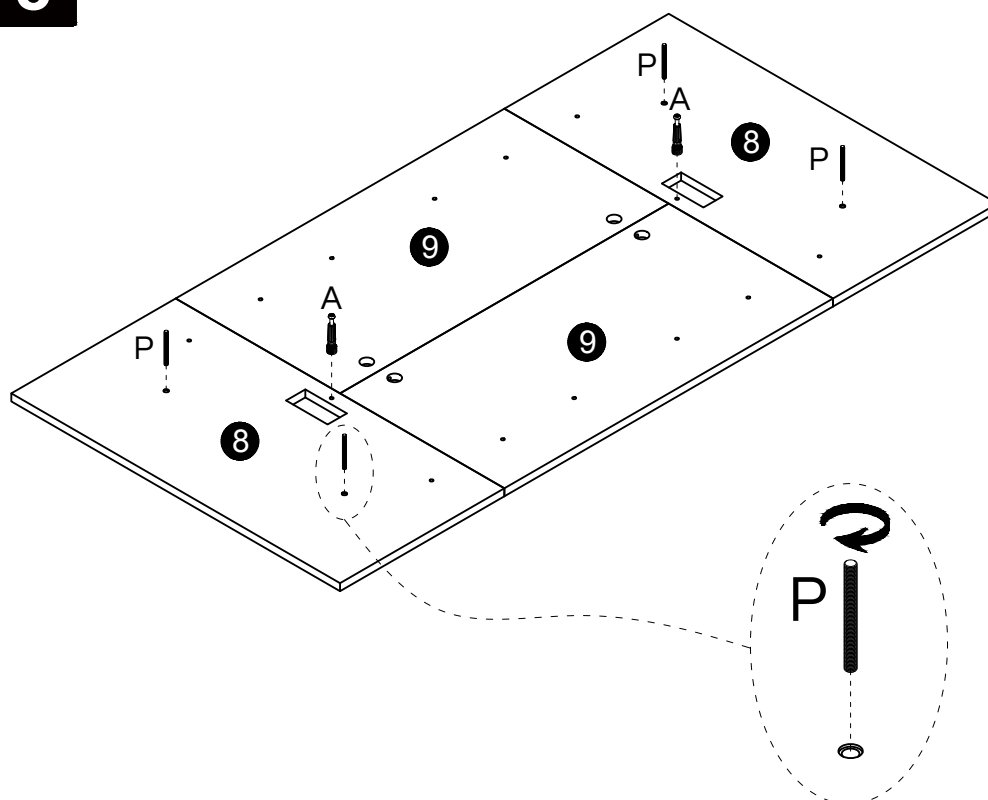Ø10x30mm
8 pcs




8




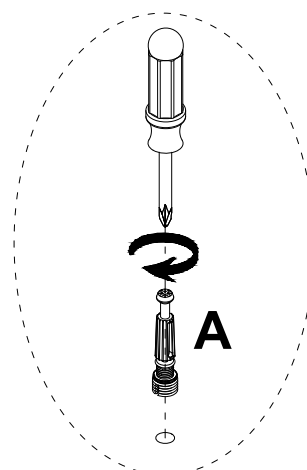



A	P
	
M6x35mm	M8x70mm
2 pcs	4 pcs






**9**



B	D1	D2
 Ø15x12mm		 M8
2 pcs	4 pcs	4 pcs

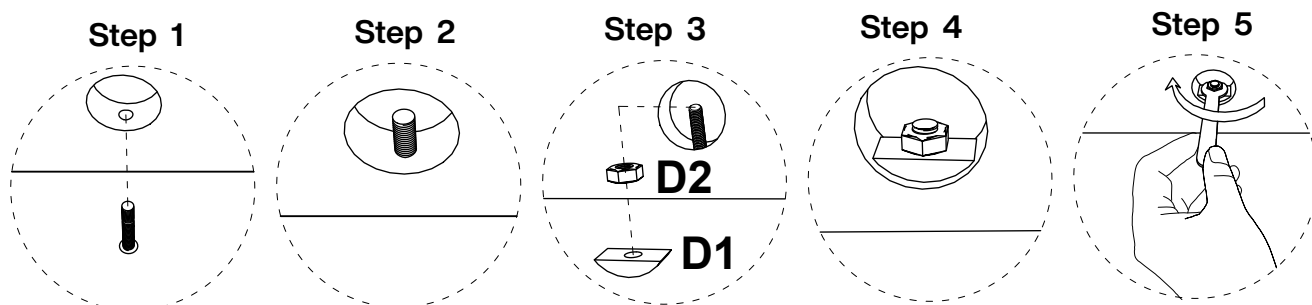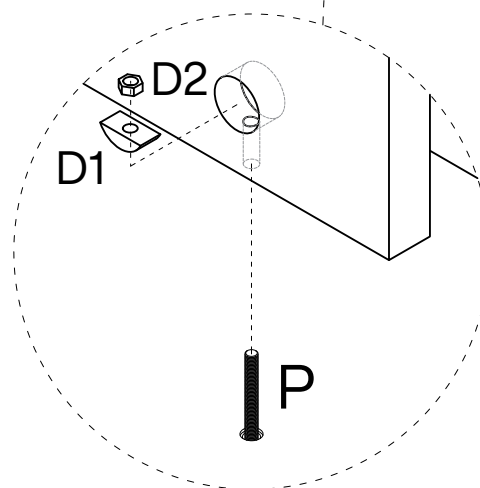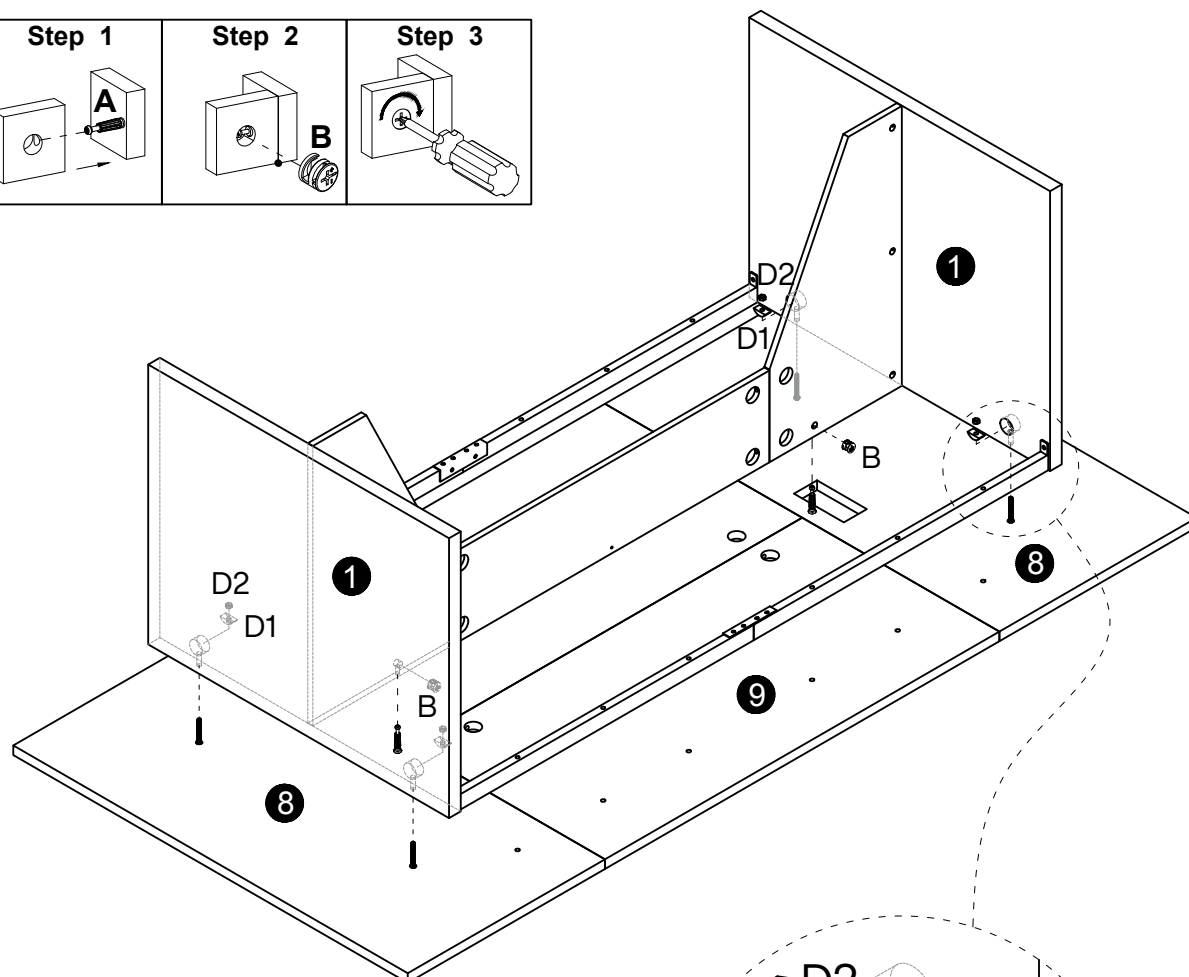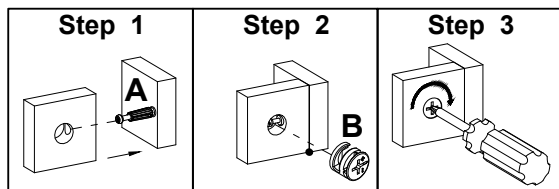


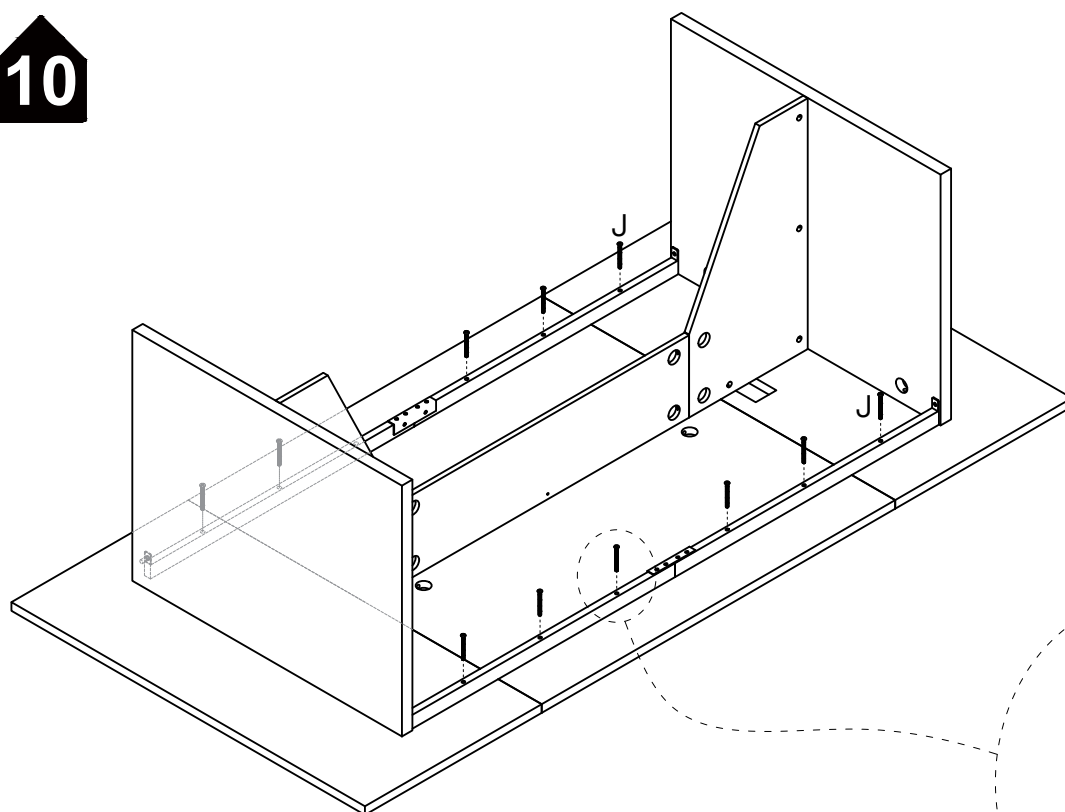
**10**

J

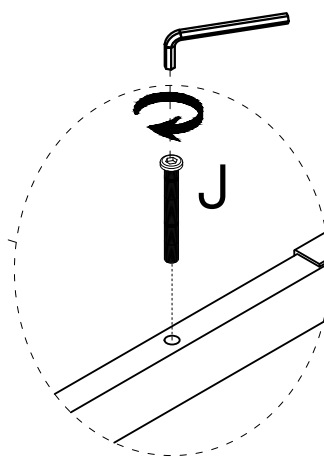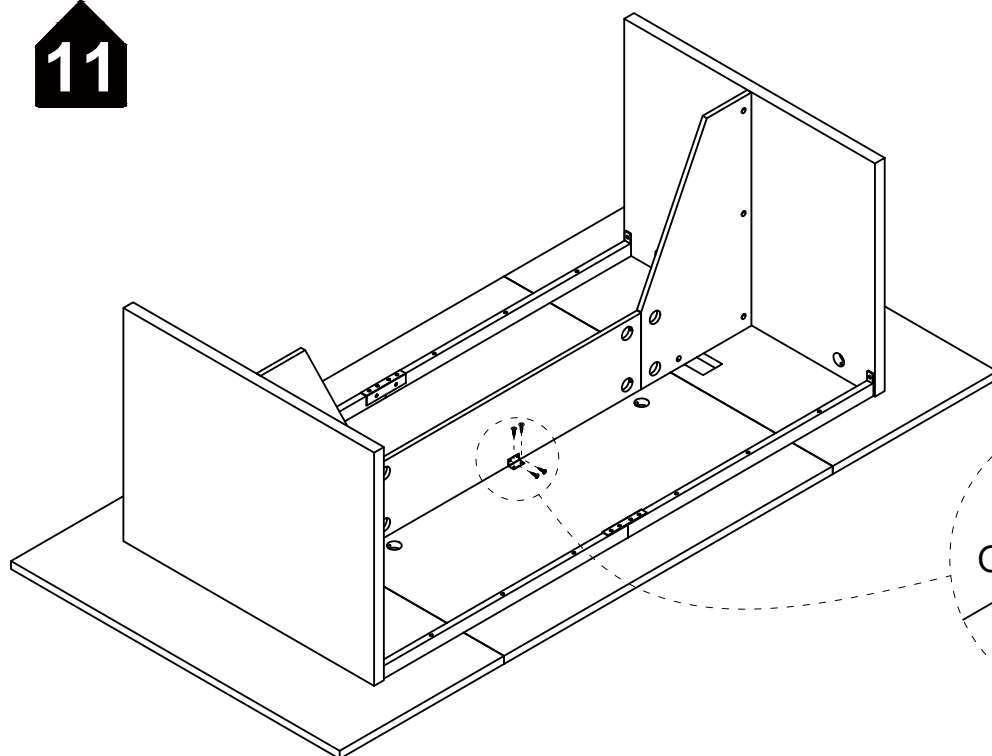M6x55mm
12 pcs



**11**

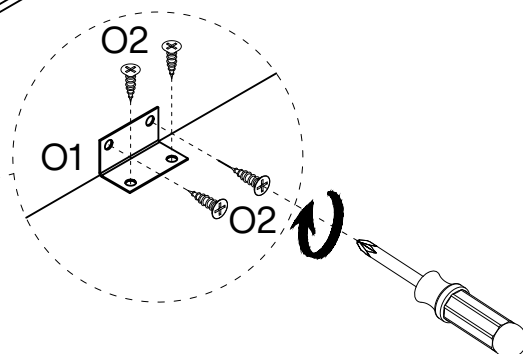O1	O2
	
20x20mm	Ø3.5x14mm
1 pc	4 pcs


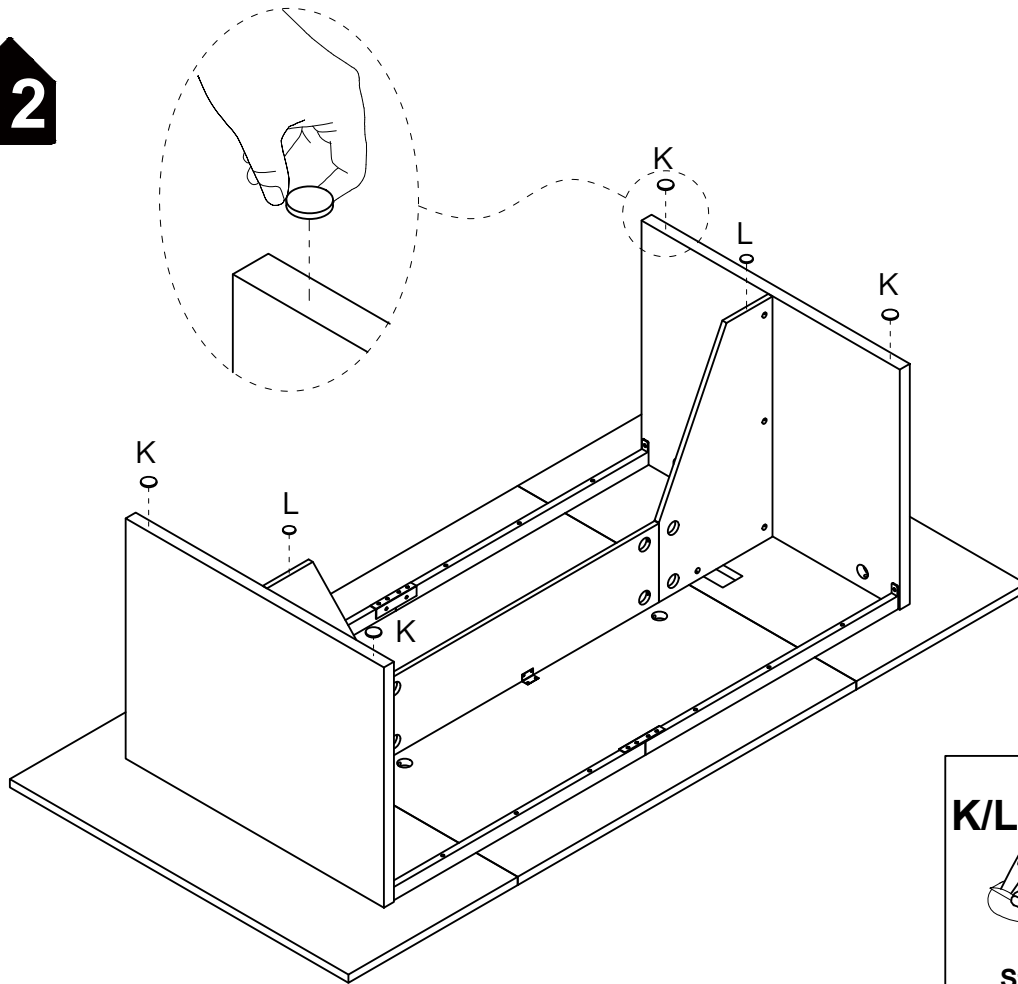


12


K	L
Ø30x3mm	Ø16x3mm
4 pcs	2 pcs

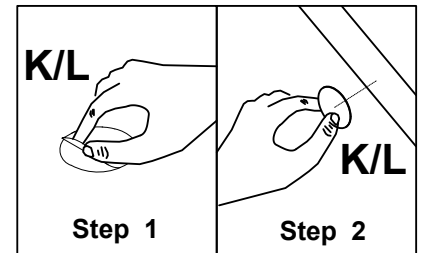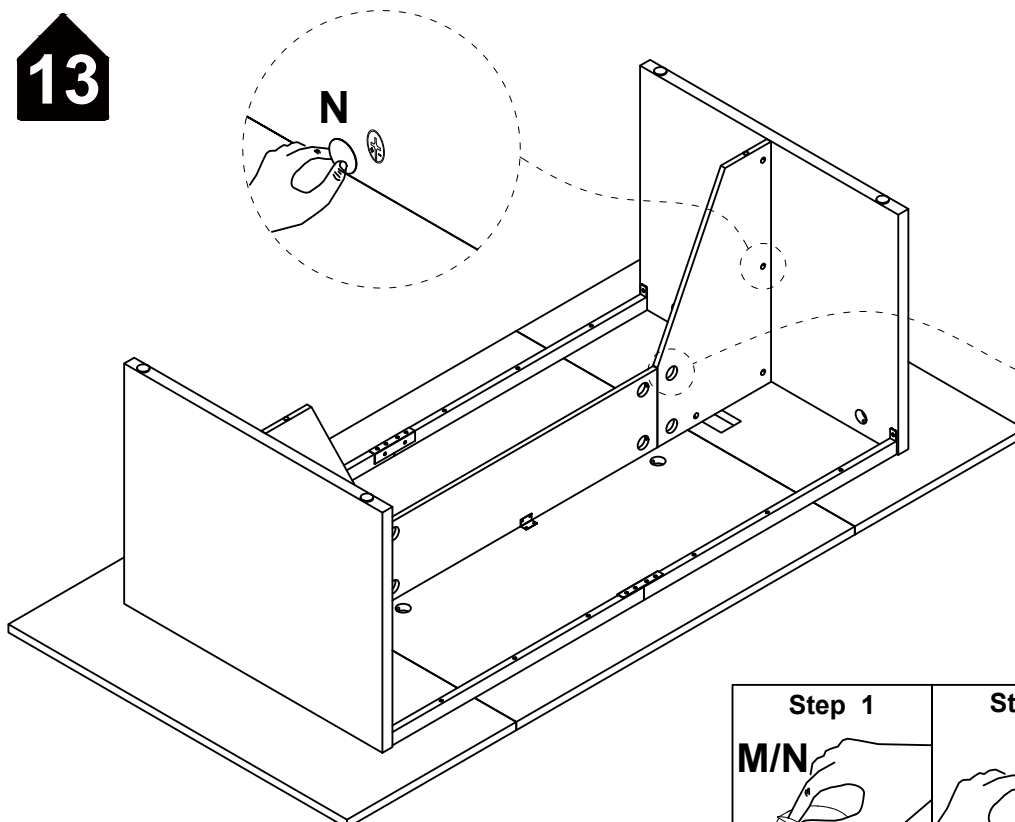

13


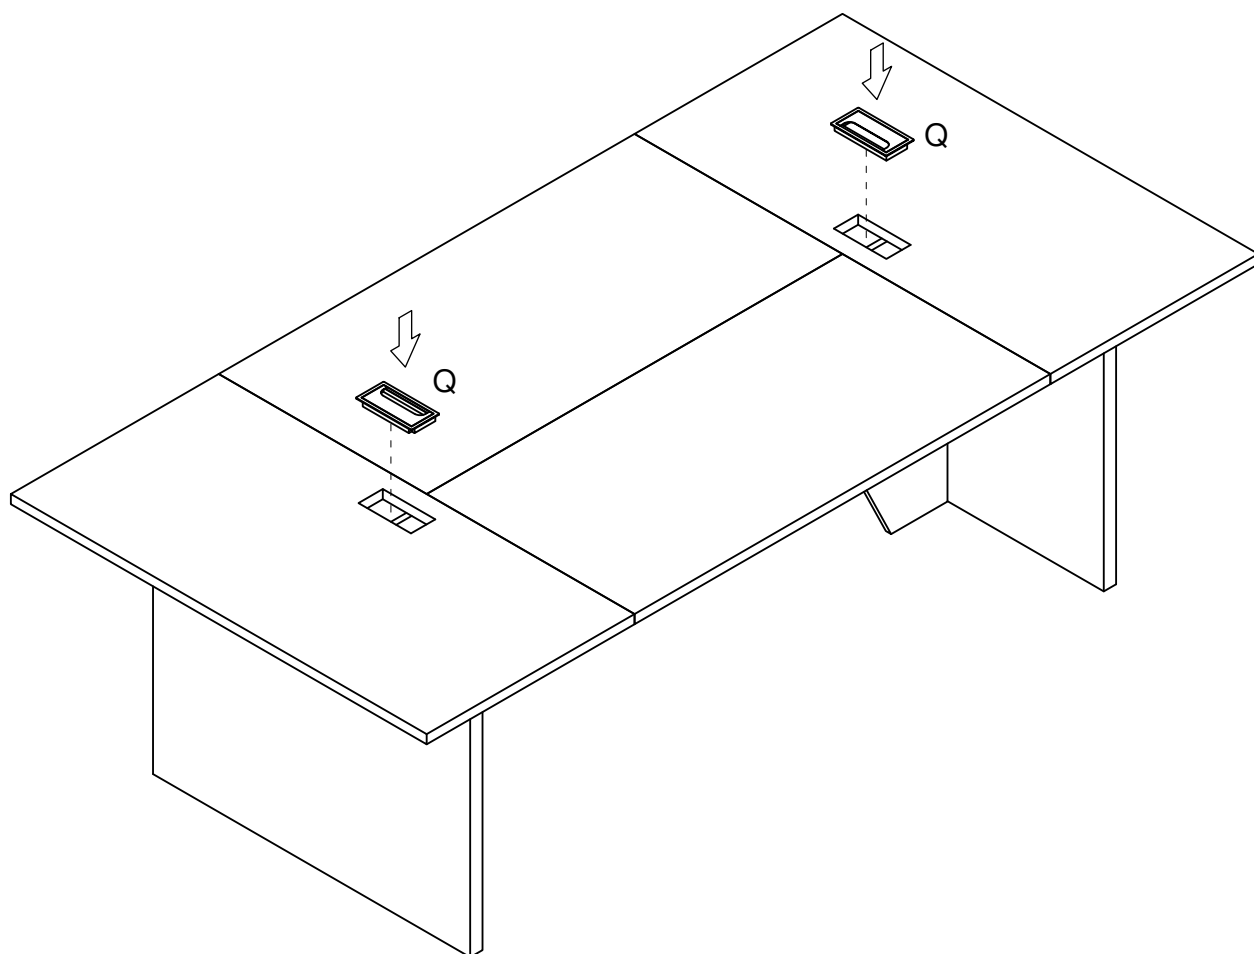
M	N
Ø50	Ø21
16 pcs	8 pcs

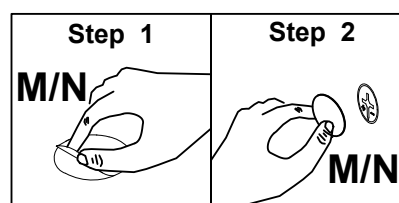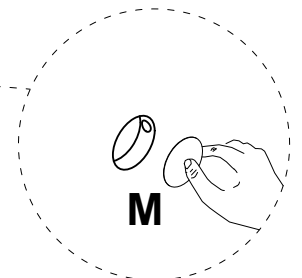



14


Q

2 pcs





DESIGNED FOR LIFE

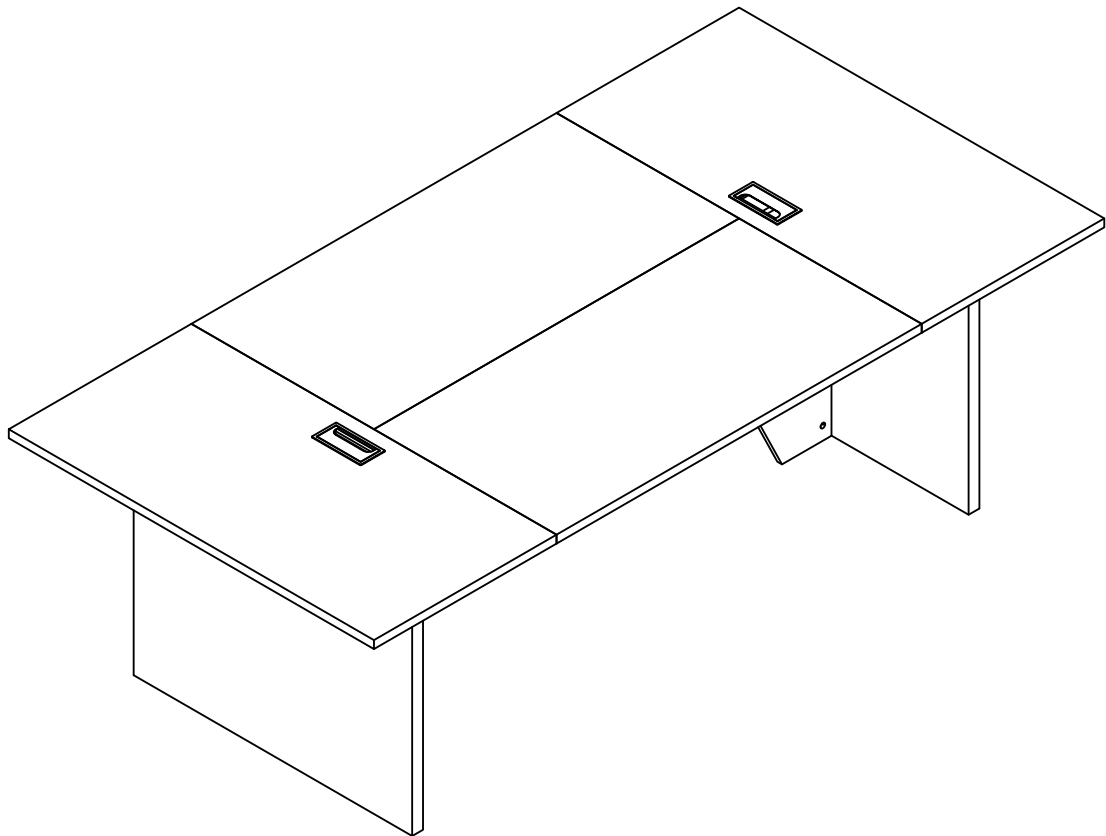Thank you for your support !



Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

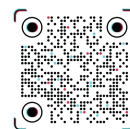

TikTok



WhatsApp