

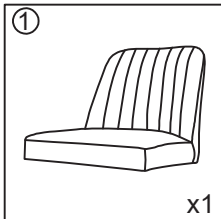
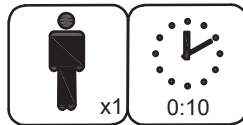


ASSEMBLY INSTRUCTIONS


Counter & Bar Height Stool#: M-1008

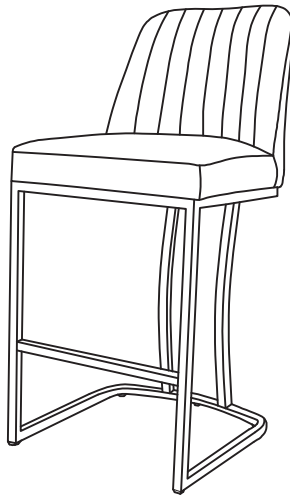


x1

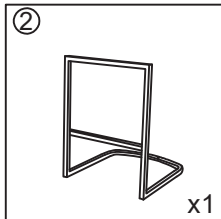


x1

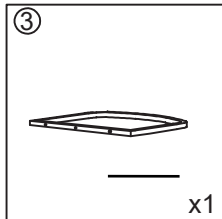


x1

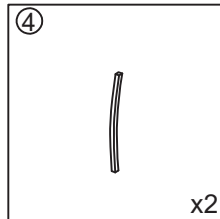


x2



M6x35mm




M6x35mm




M6x20mm



M6



M6



4#


Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Note: Do NOT use power tools for assembly

1


Attach the leg part (4) to leg part (2), using bolt (A), Allen wrench (F), 80% tighten the bolts.

Note: Do not fully tighten yet.

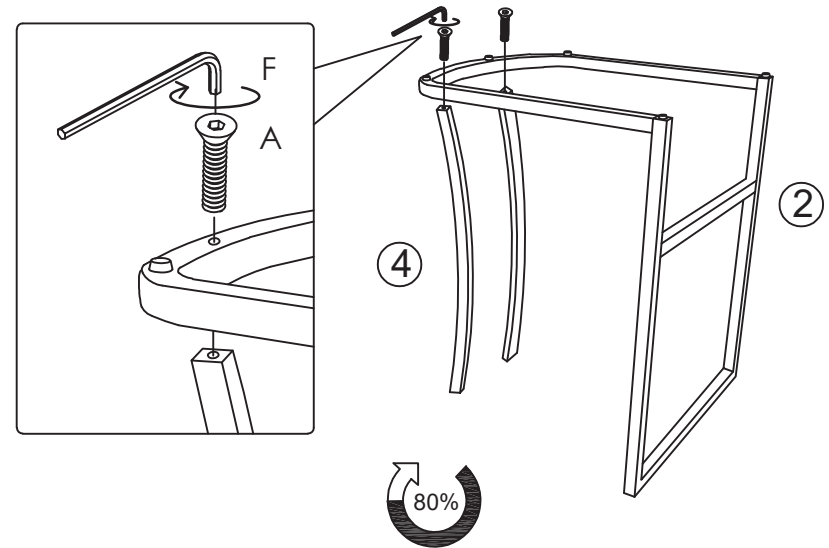


2


Attach the leg part to assembled structure in step 1, using bolt (A), Allen wrench (F), 80% tighten the bolts. **Note: Do not fully tighten yet.**

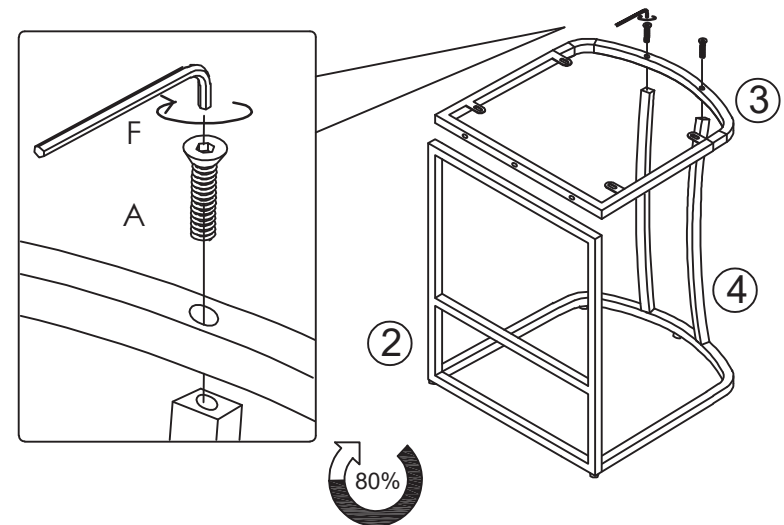


- 3 Attach leg part (3) to leg part (2), using bolt (B), flat washer (E), Allen wrench (F), 80% tighten the bolts. **Note: Do not fully tighten yet.**

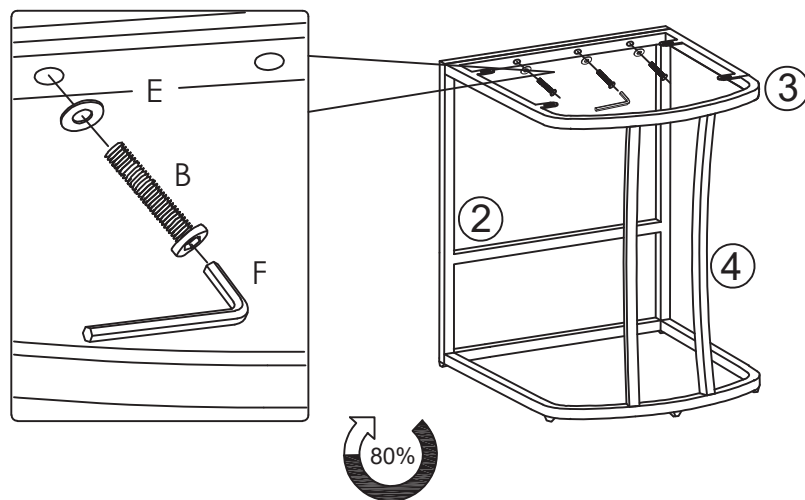

- 5 Attach the assembled stool base in Step 4 to the seat part (1), using Bolts (C), lock washers (D), flat Washers (E) and Allen Wrench (F). Fully tighten all the bolts.

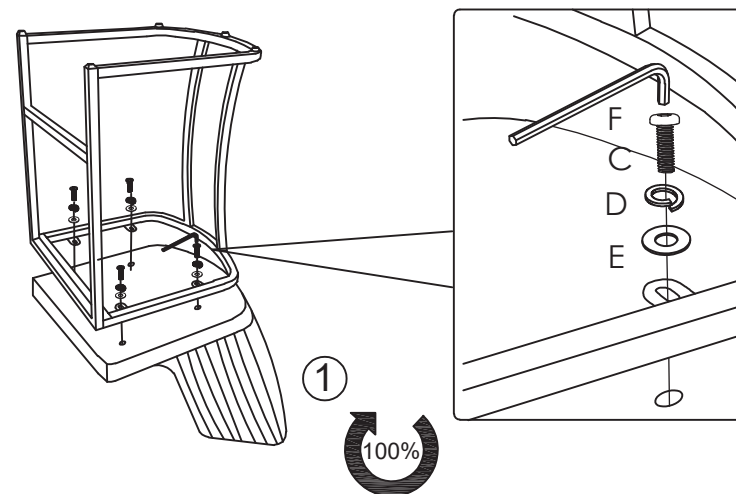

- 4 Adjust the structure, then tighten all the bolts.

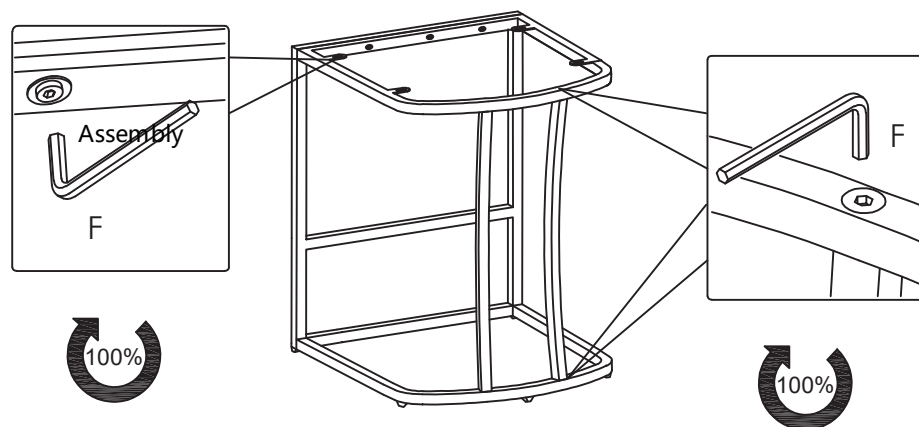

- 6 Turn assembled chair upright and place on a flat surface. **Note: Each leg has an adjustable foot leveler to help level your chair.**
- 7 Assembly Completed. Enjoy.

