




ASSEMBLY INSTRUCTION

NO	PART LIST	QTY
1	 BACK REST	1PC
2	 CUSHION SEAT	1PC
3	 LEG	2PC
NO	HARDWARE LIST	QTY
A	 JCBC SCREW M6 X 40mm	1PC
B	 JCBC SCREW M6 X 60mm	4PCS
C	 JCBC SCREWS M6 x 80mm	4PCS
D	 SPRING WASHERS Ø1/4"	9PCS
E	 FLAT WASHERS Ø1/4" X 19mm	9PCS
F	 L - KEY M4 X 65mm	1PC



STEP 1

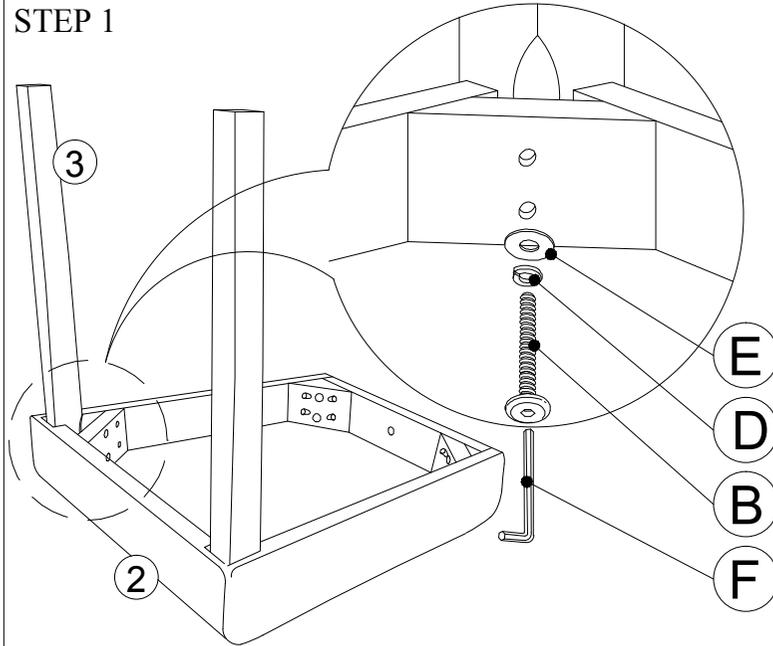

STEP 2

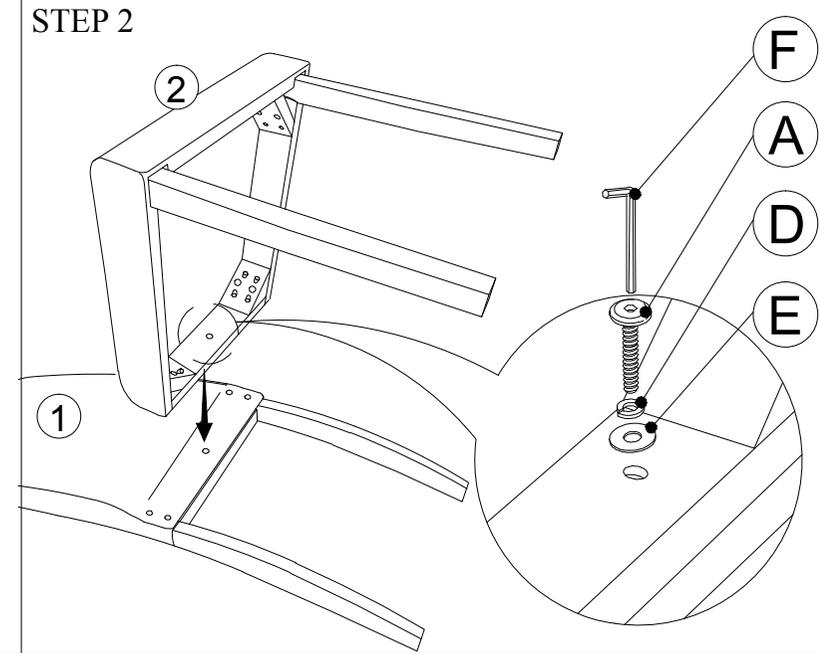

STEP 3

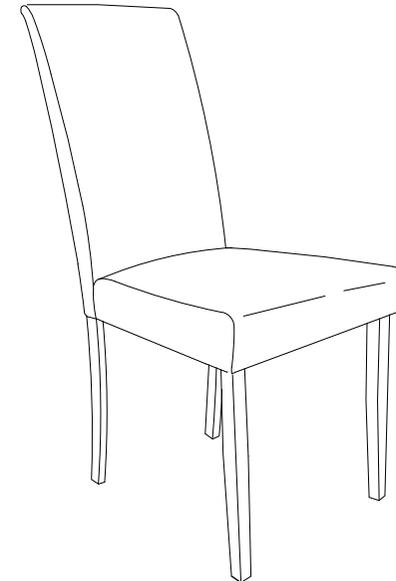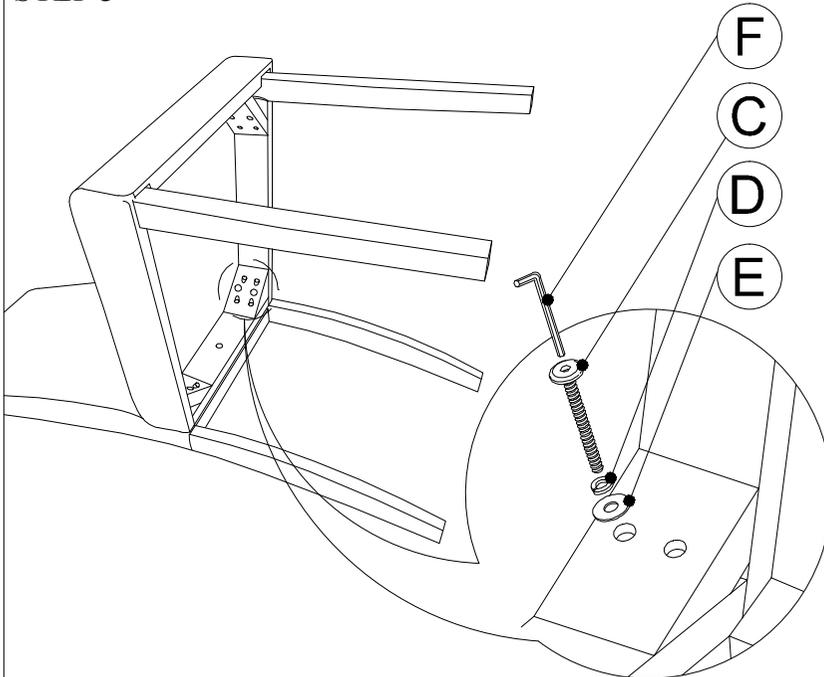

ASSEMBLY
COMPLETED

NOTE: AFTER A FEW DAYS OF ASSEMBLY, IT WILL HAVE ACCLIMATIZED TO ENVIRONMENT. PLEASE TIGHTEN ALL HARDWARE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.