

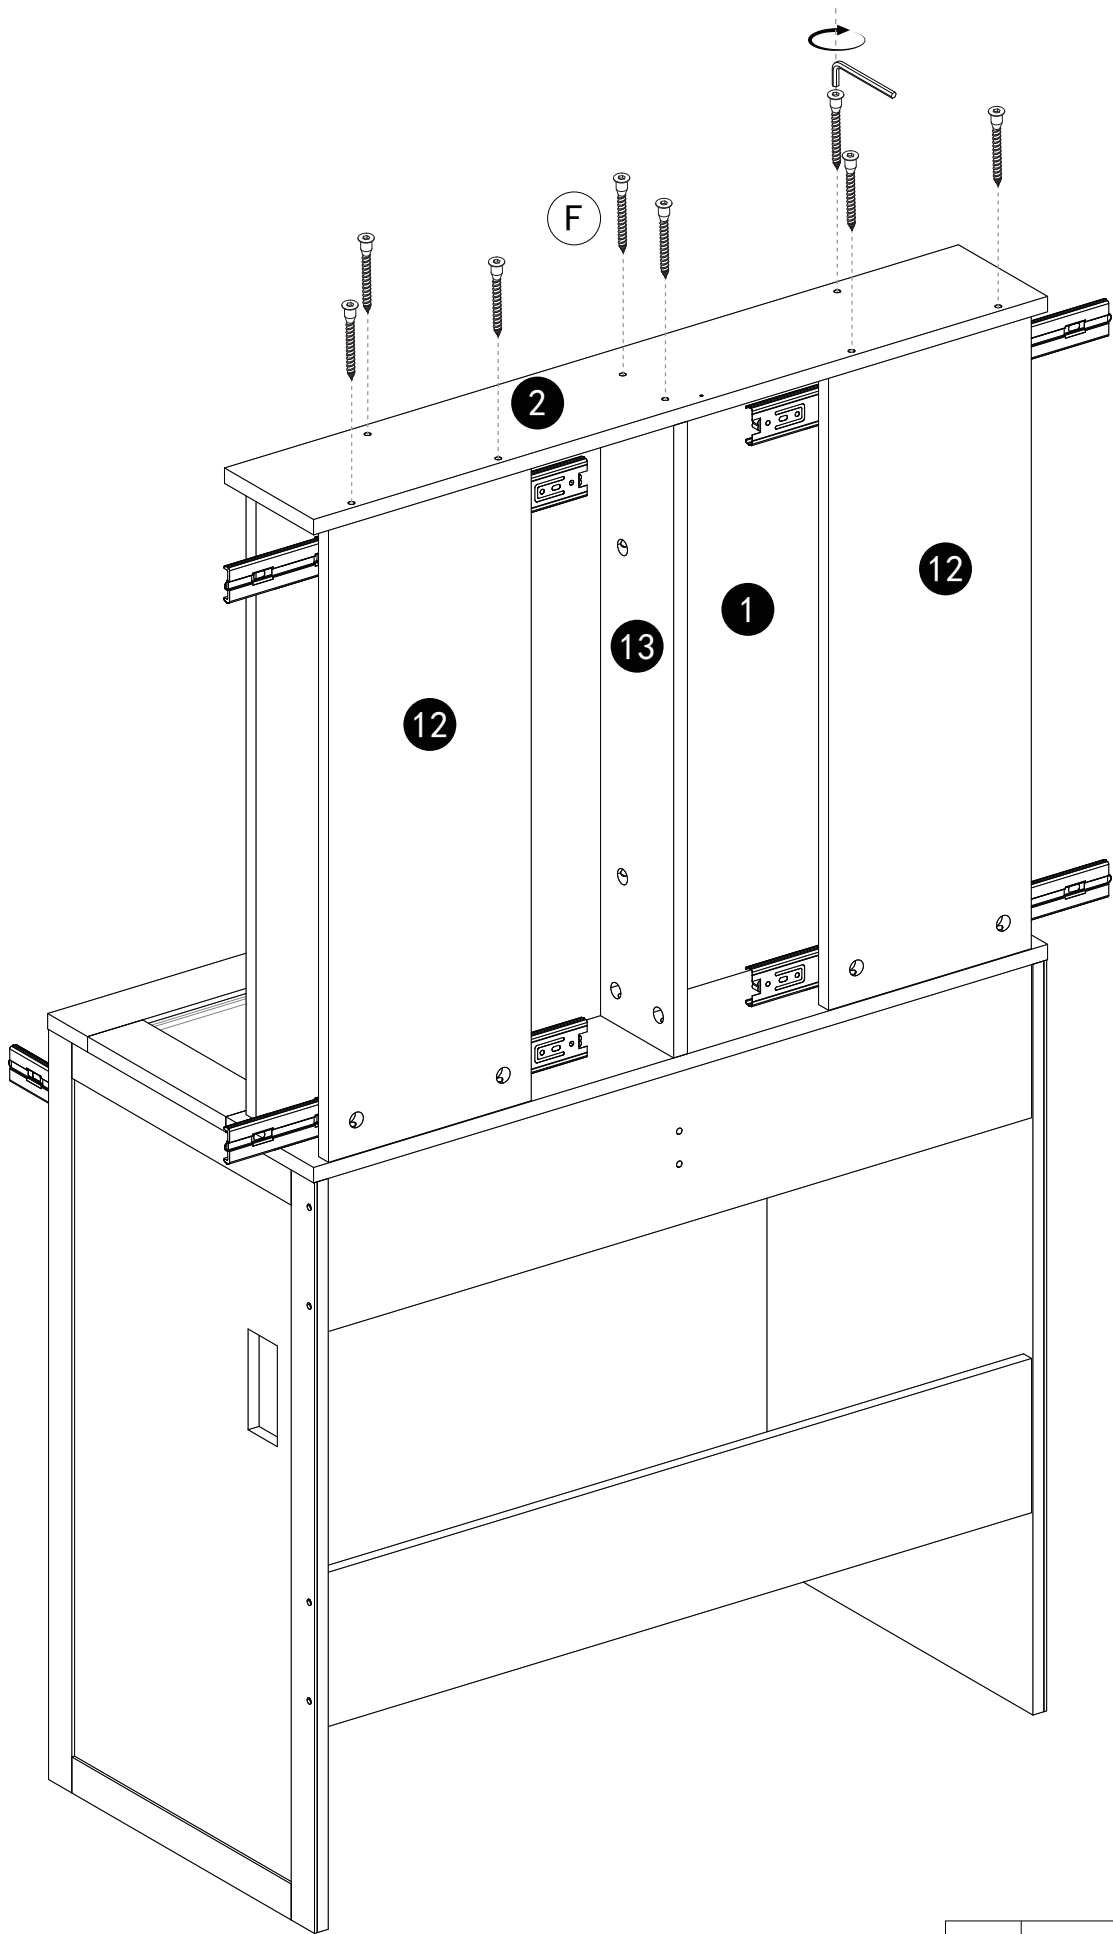


STEP 13


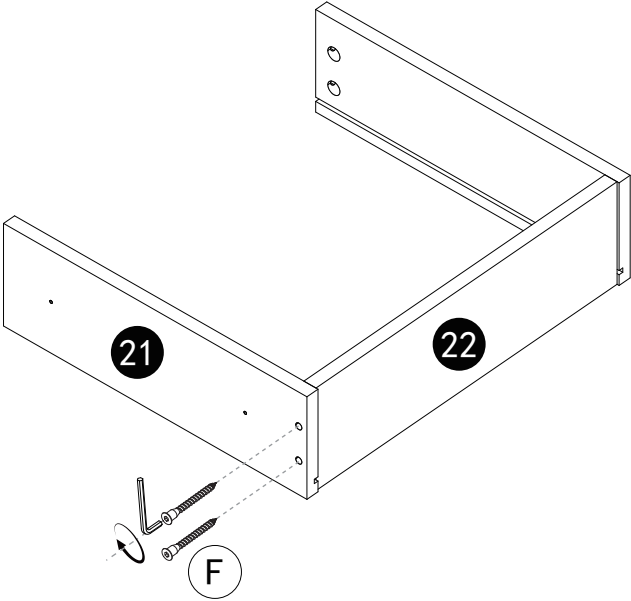




F		x8
---	---	----

STEP 14

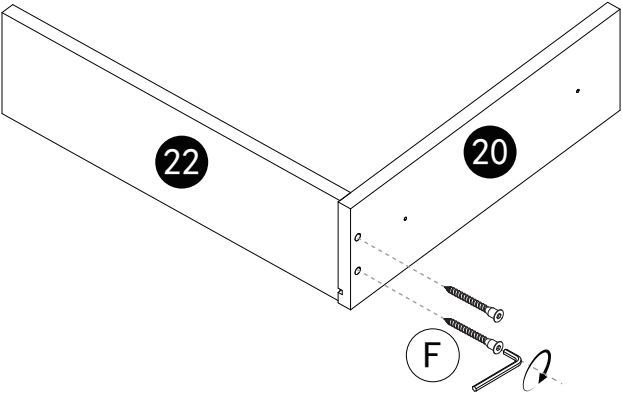


1 X2 2
3 4

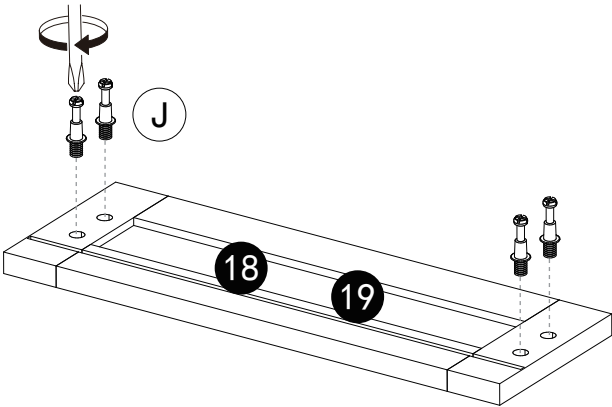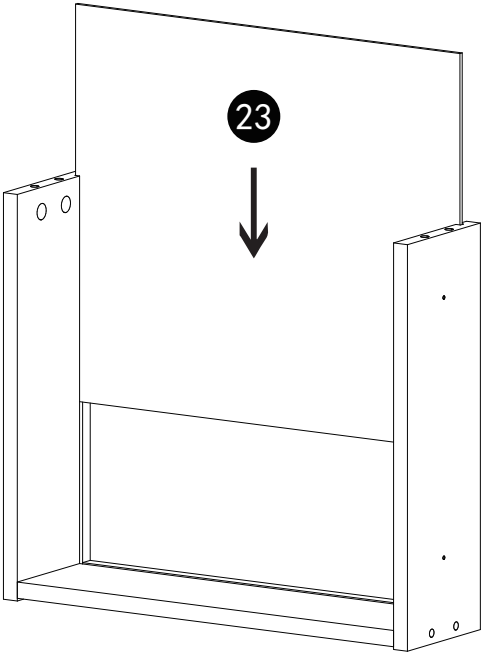



J		x8
F		x8

STEP15

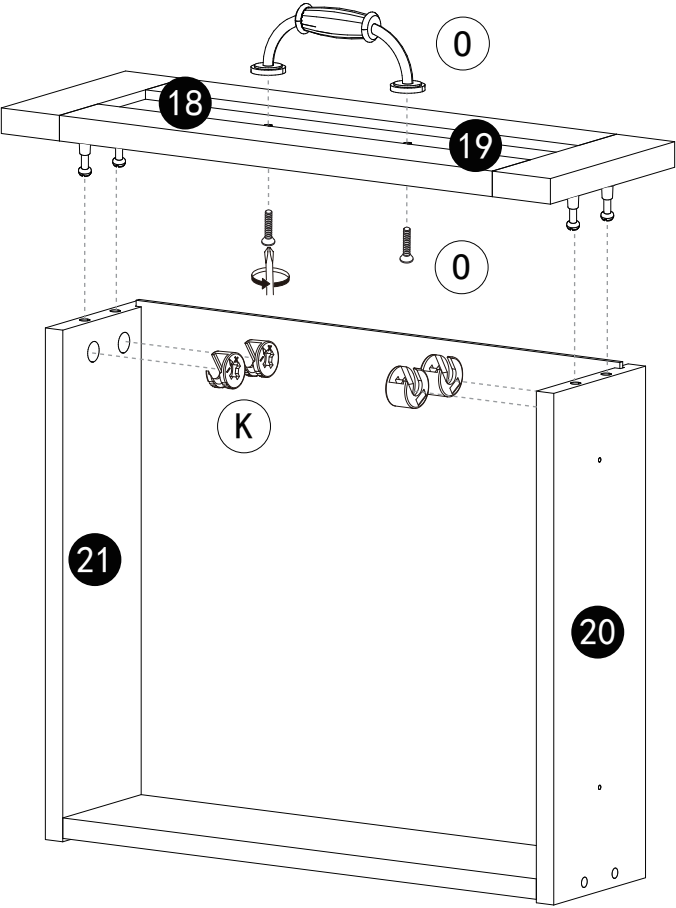

0		x2
K		x8

X2

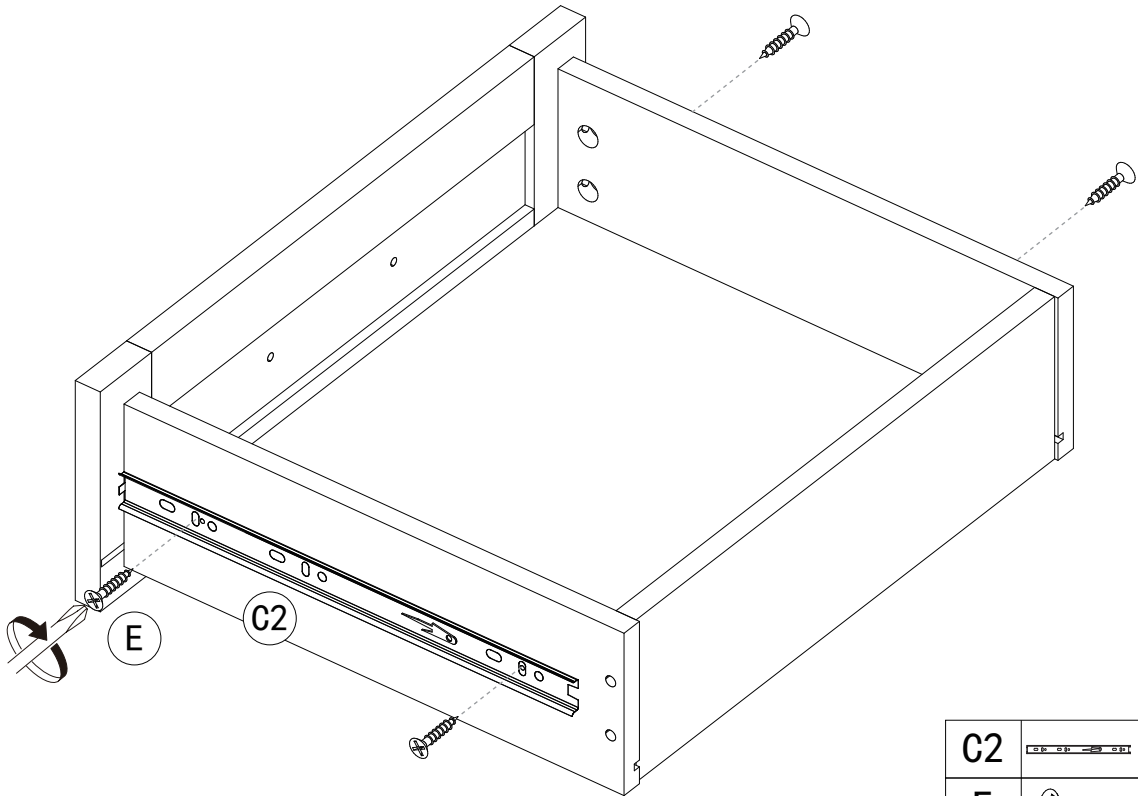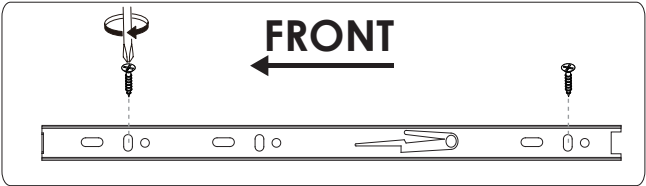

C2		x4
E		x8

STEP16

1

2

X

X

✓

The diagram illustrates the assembly of a wooden frame. It consists of four horizontal wooden beams. The top two beams are labeled '10' and the bottom two are labeled '9'. Pins, labeled 'D', are being driven into the beams using a hammer. The pins are shown being inserted into the ends of the beams. The diagram shows the pins being inserted into the top and bottom beams, and then into the side beams. The pins are shown being inserted into the beams from both ends. The diagram shows the pins being inserted into the beams from both ends. The diagram shows the pins being inserted into the beams from both ends.

D



x12

20

STEP 17



1

2

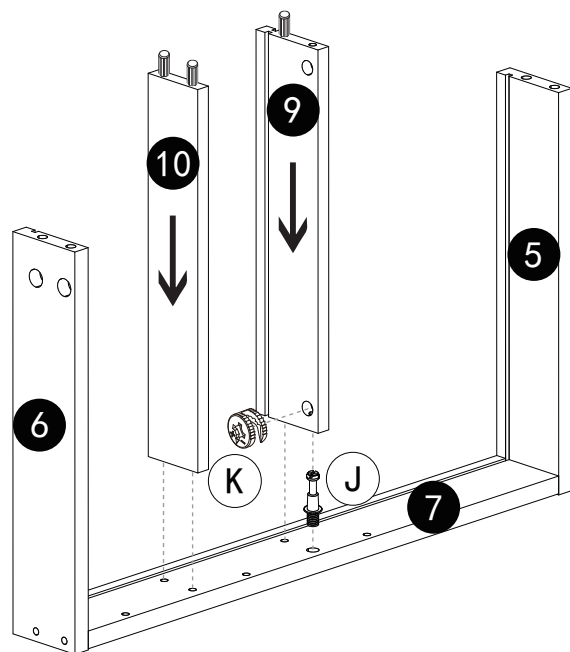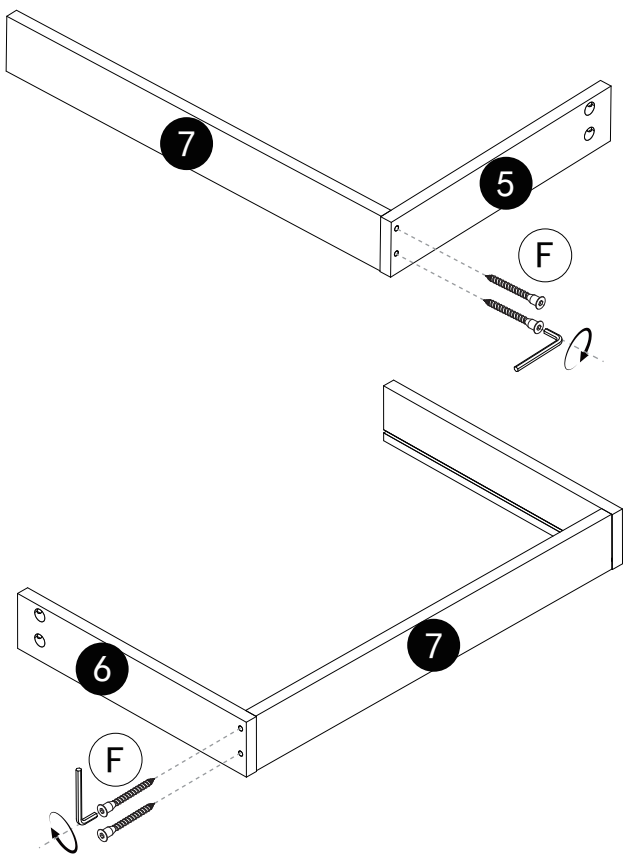




3

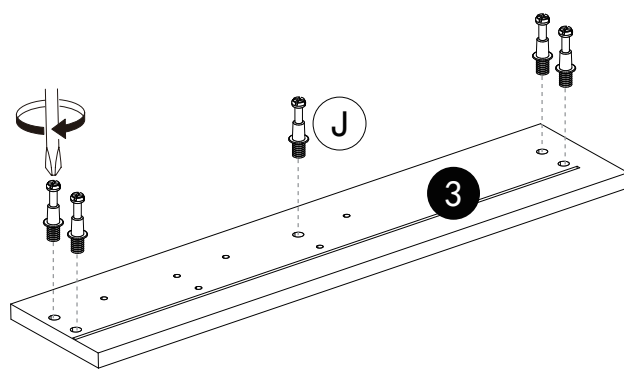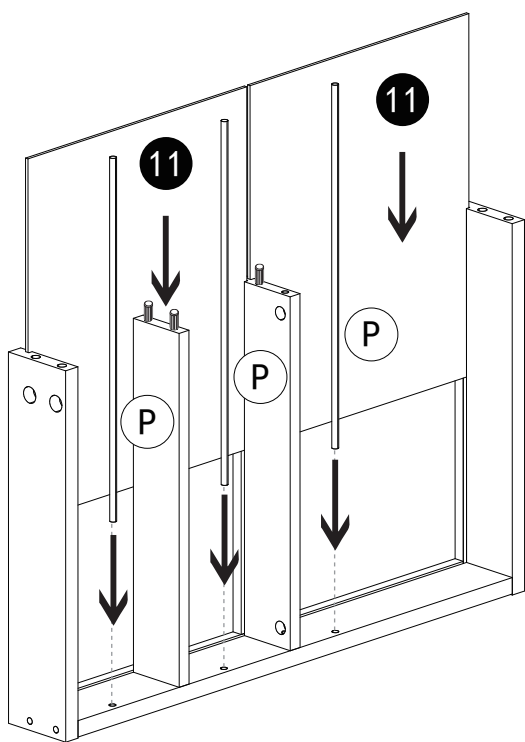


4



J		x6
K		x1
P		x3
F		x4

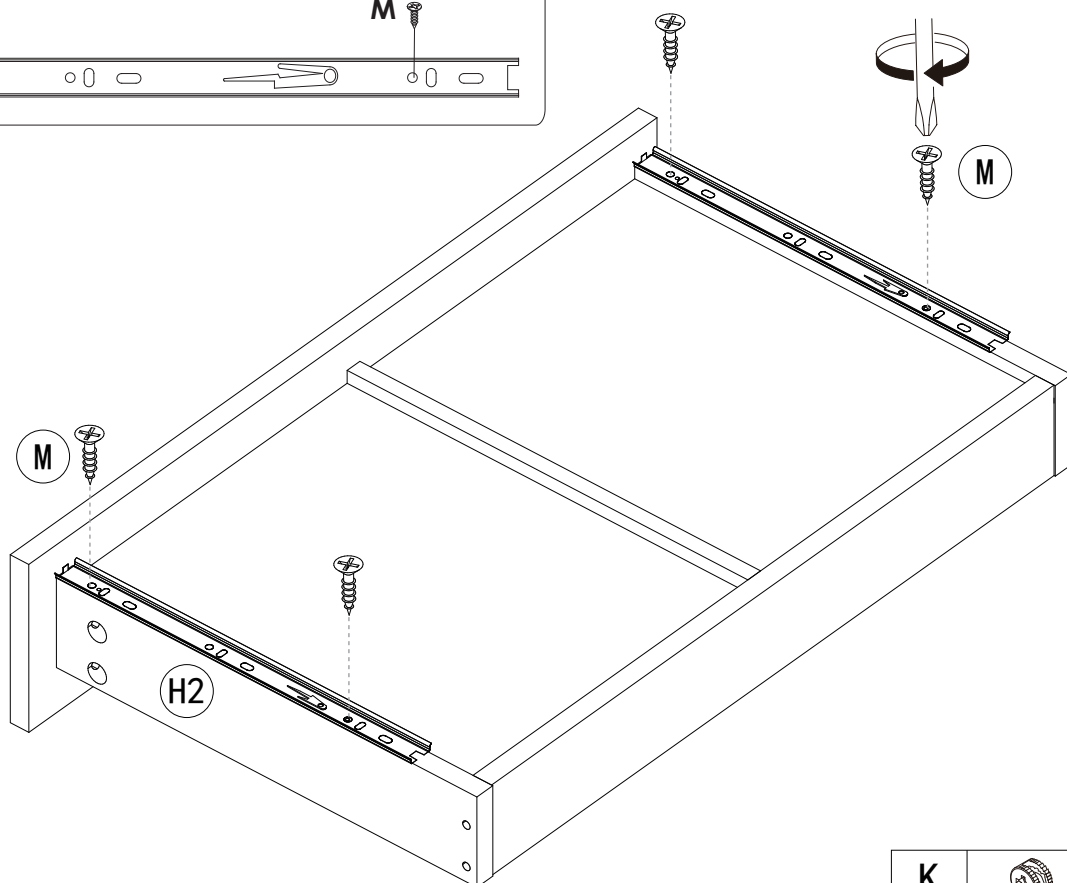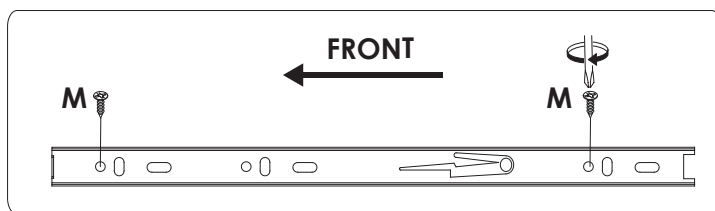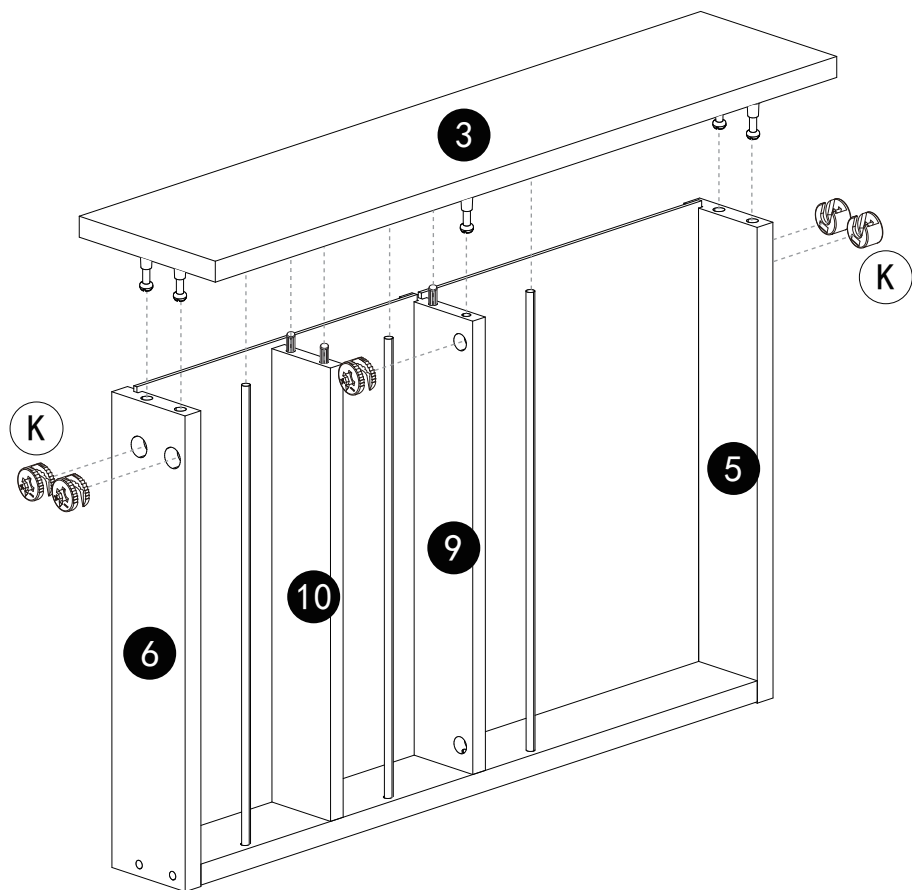STEP 18





K		x5
H2		x2
M		x4

STEP 19



1

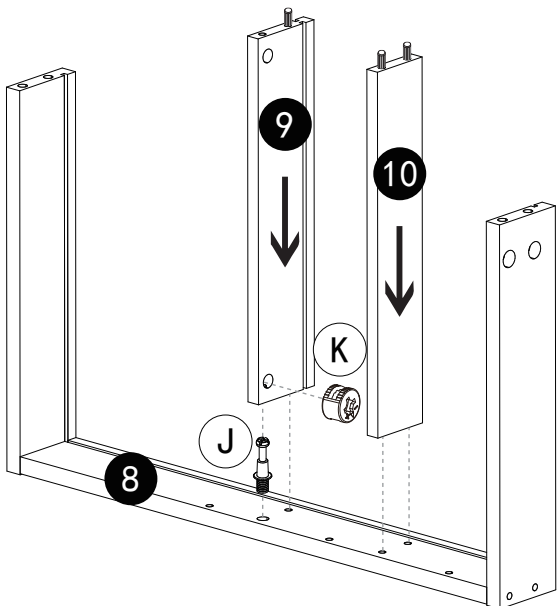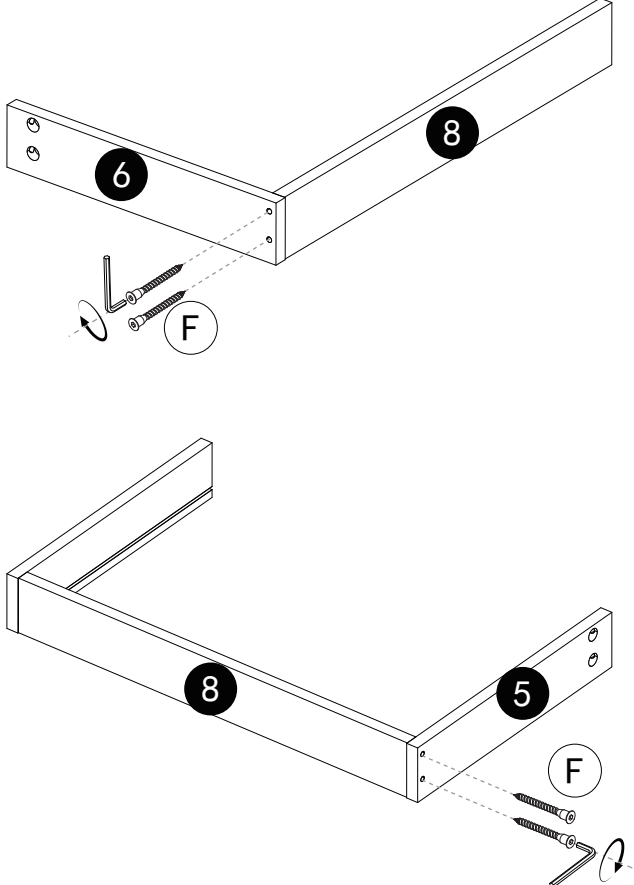



2






3

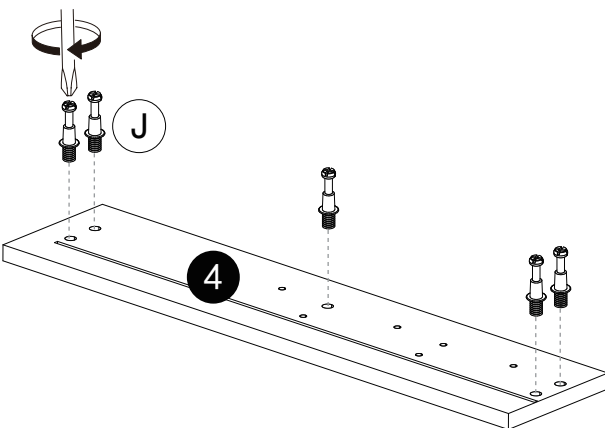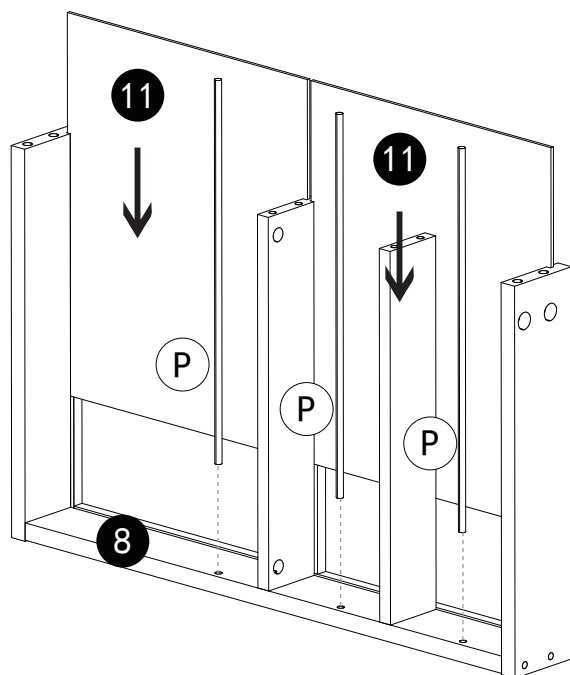


4








J		x6
K		x1
P		x3
F		x4

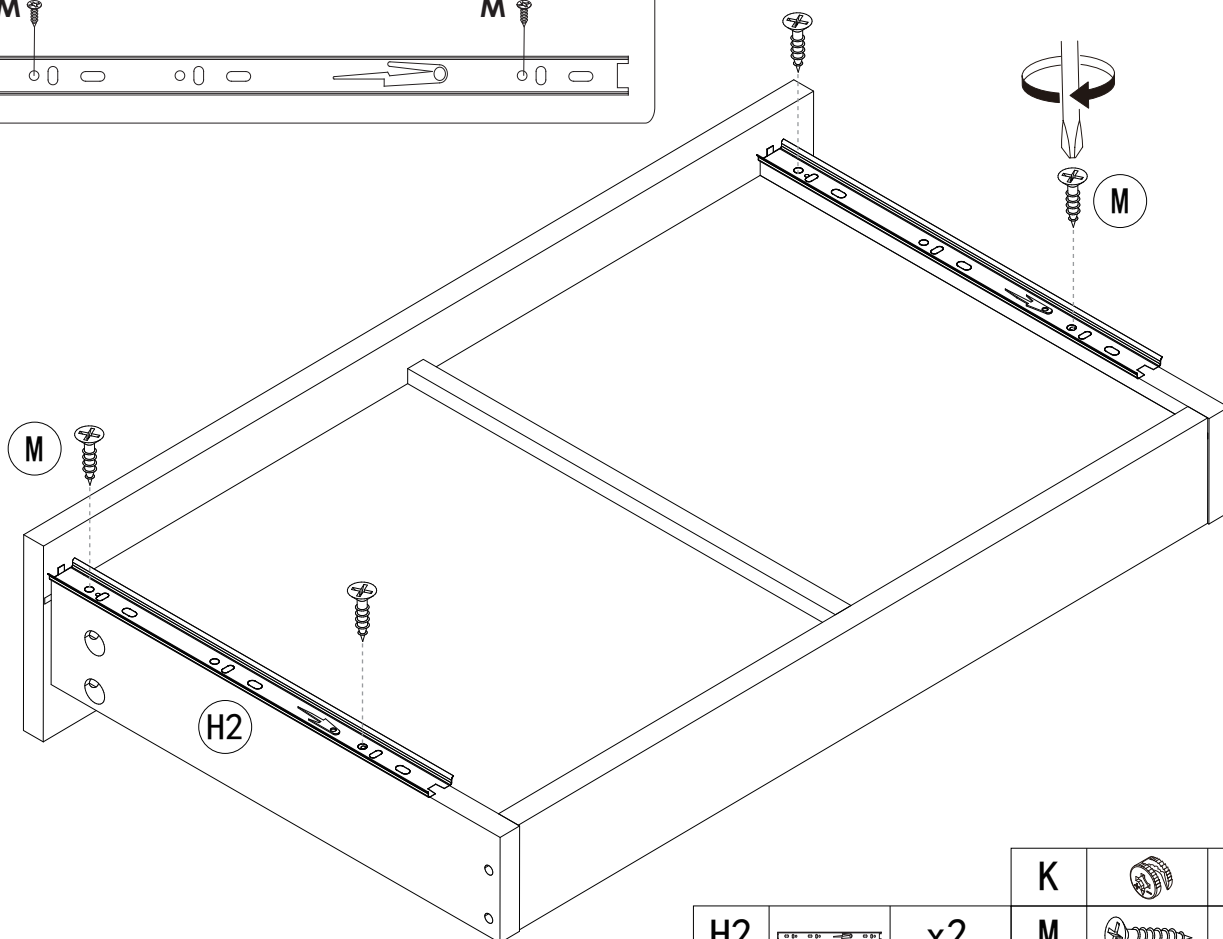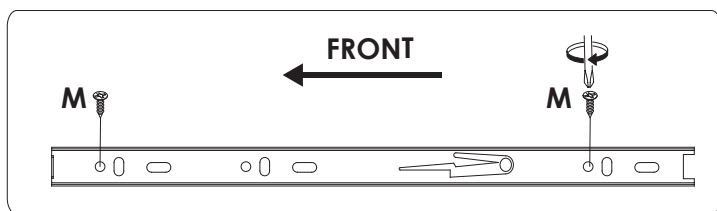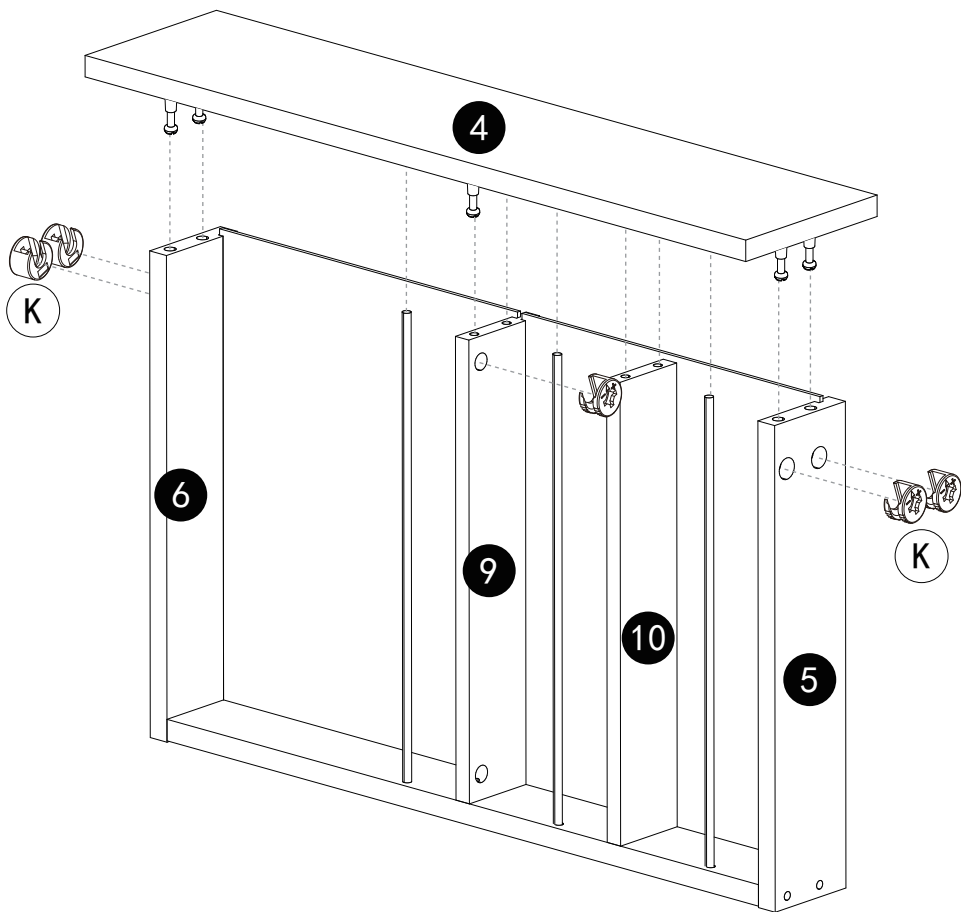
STEP 20



			K		x5
H2		x2	M		x4

STEP21

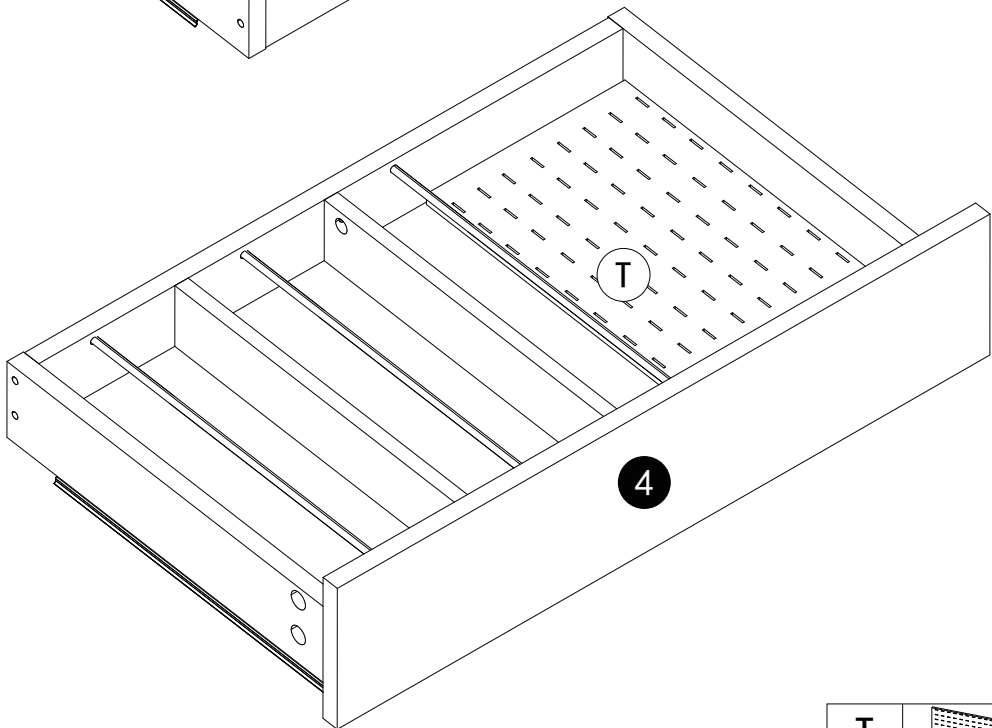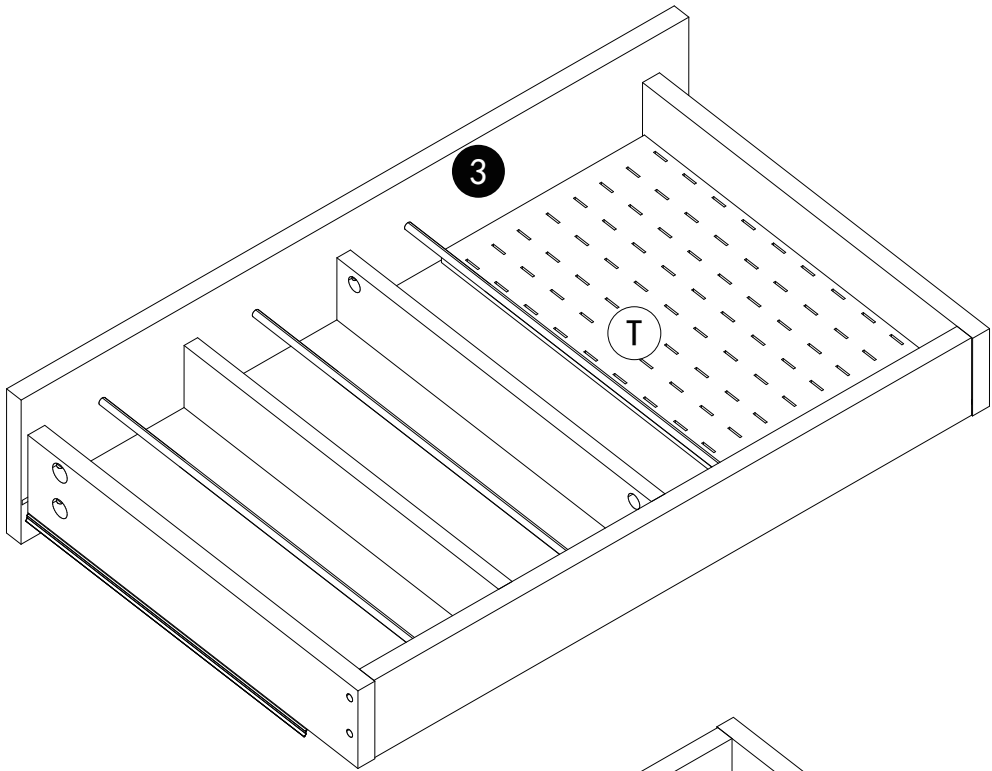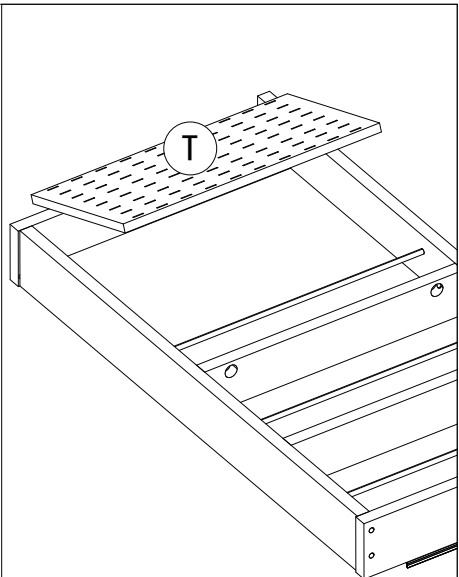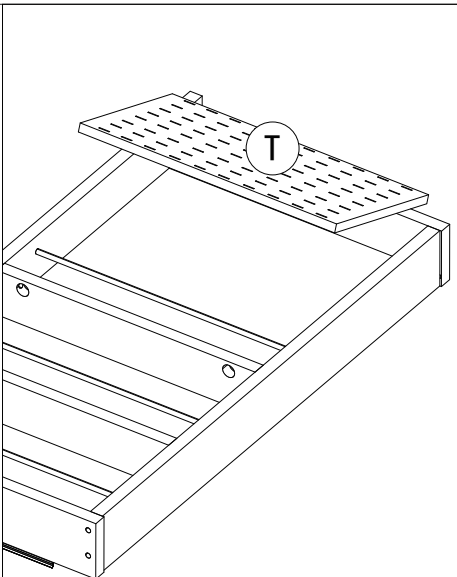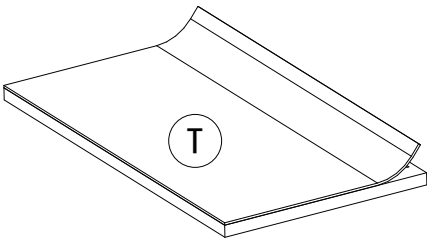


T		x2
---	---	----

STEP22


REMARK: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the step.

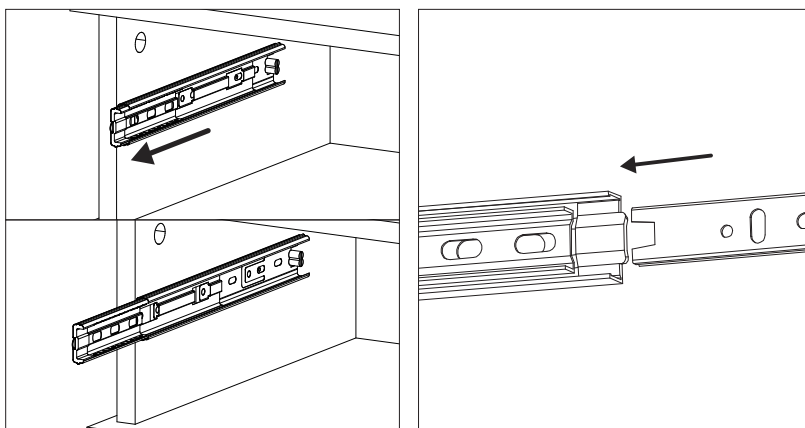

REMARK:


1. First, slide the slide and ball on both sides of the slide to the outside.
2. when installing the drawer, align both sides first, and then push both sides inward at the same time.

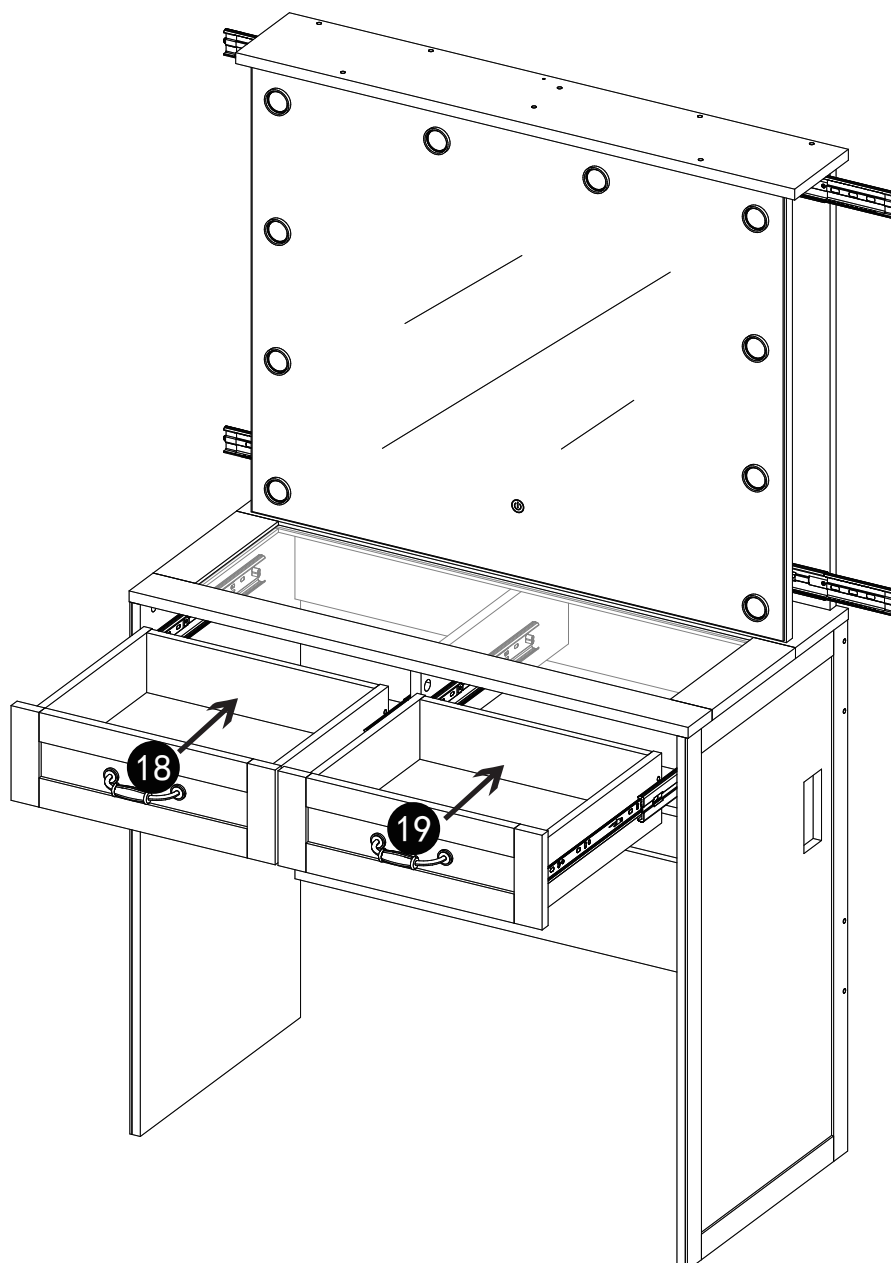

STEP23


REMARK: Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

★ If the drawer does not go in smoothly please take it out and repeat the step.


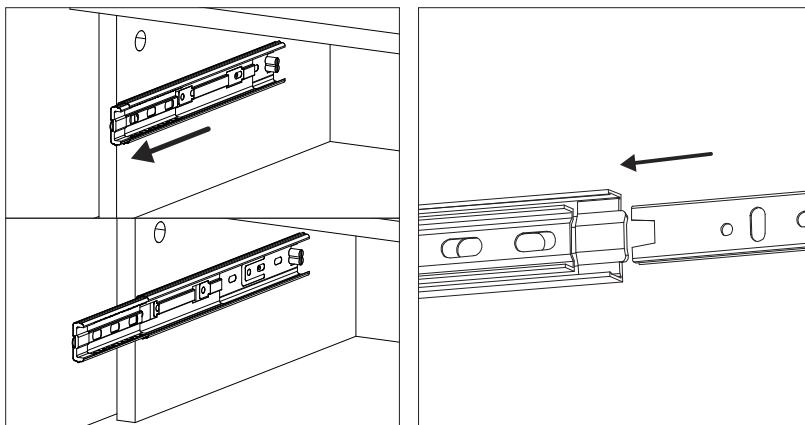





REMARK:

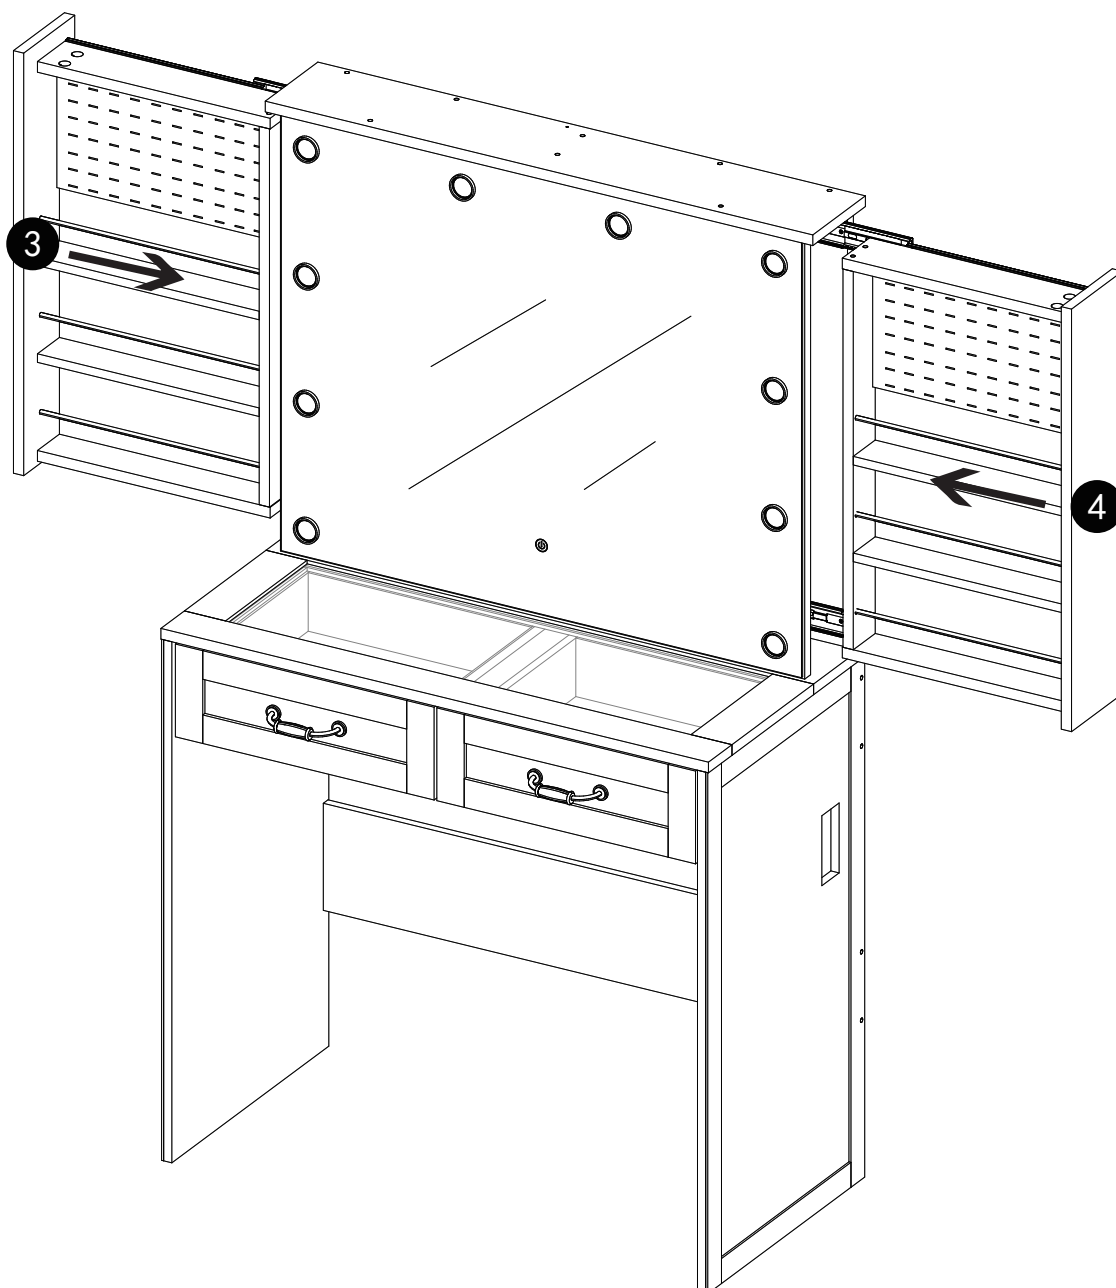1. First, slide the slide and ball on both sides of the slide to the outside.
2. when installing the drawer, align both sides first, and then push both sides inward at the same time.

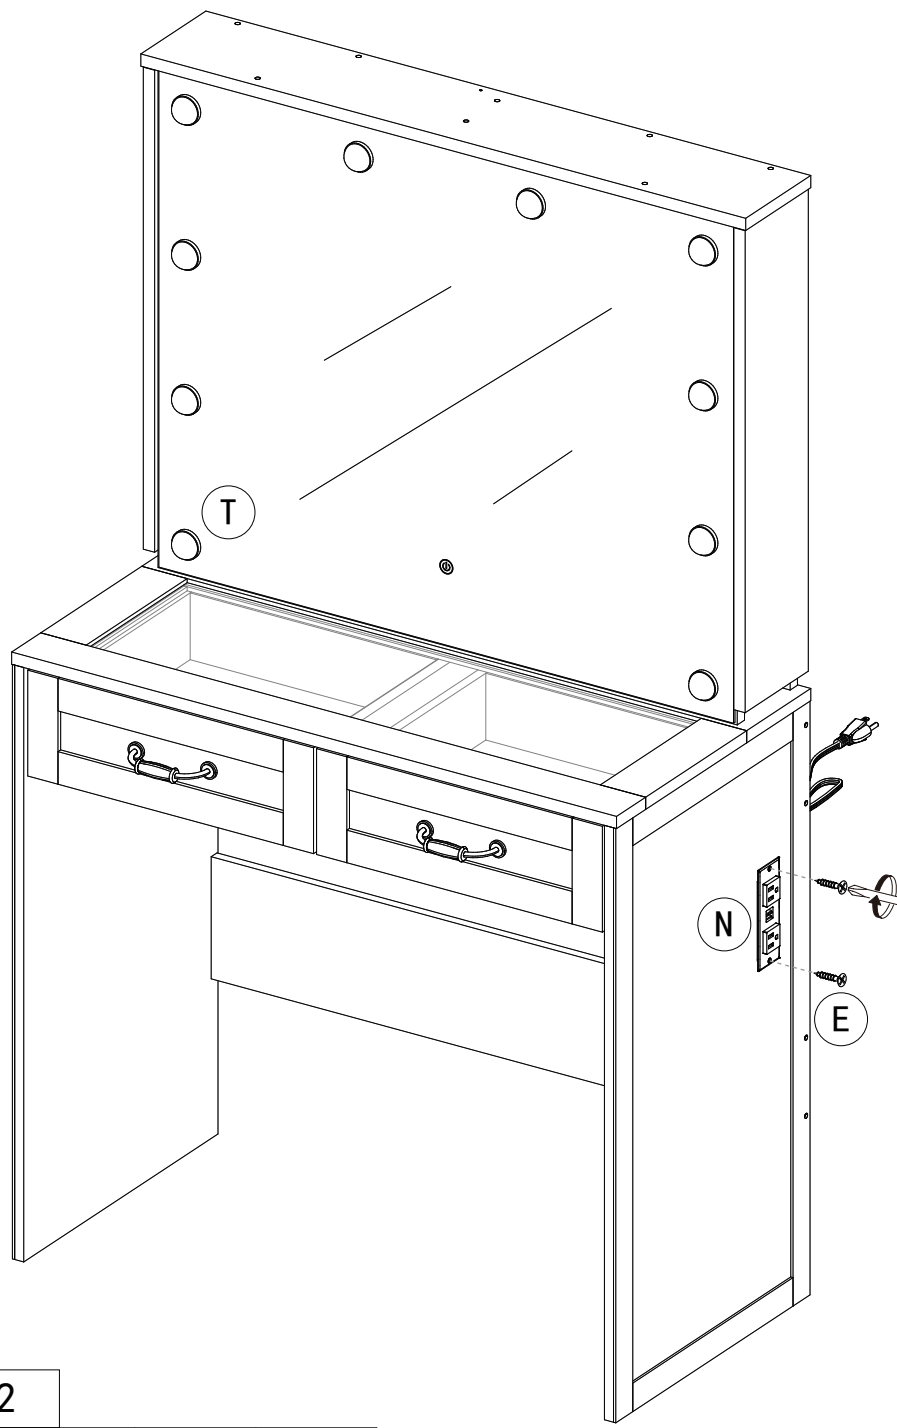
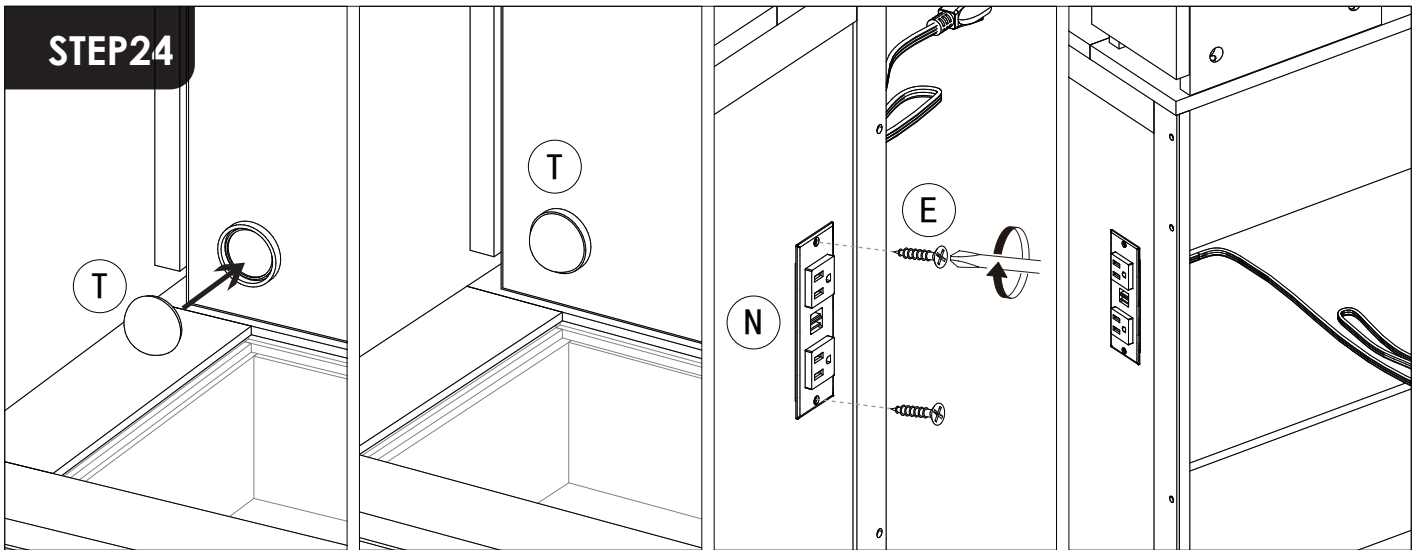



STEP24







E		x2			
N		x1	R		x10

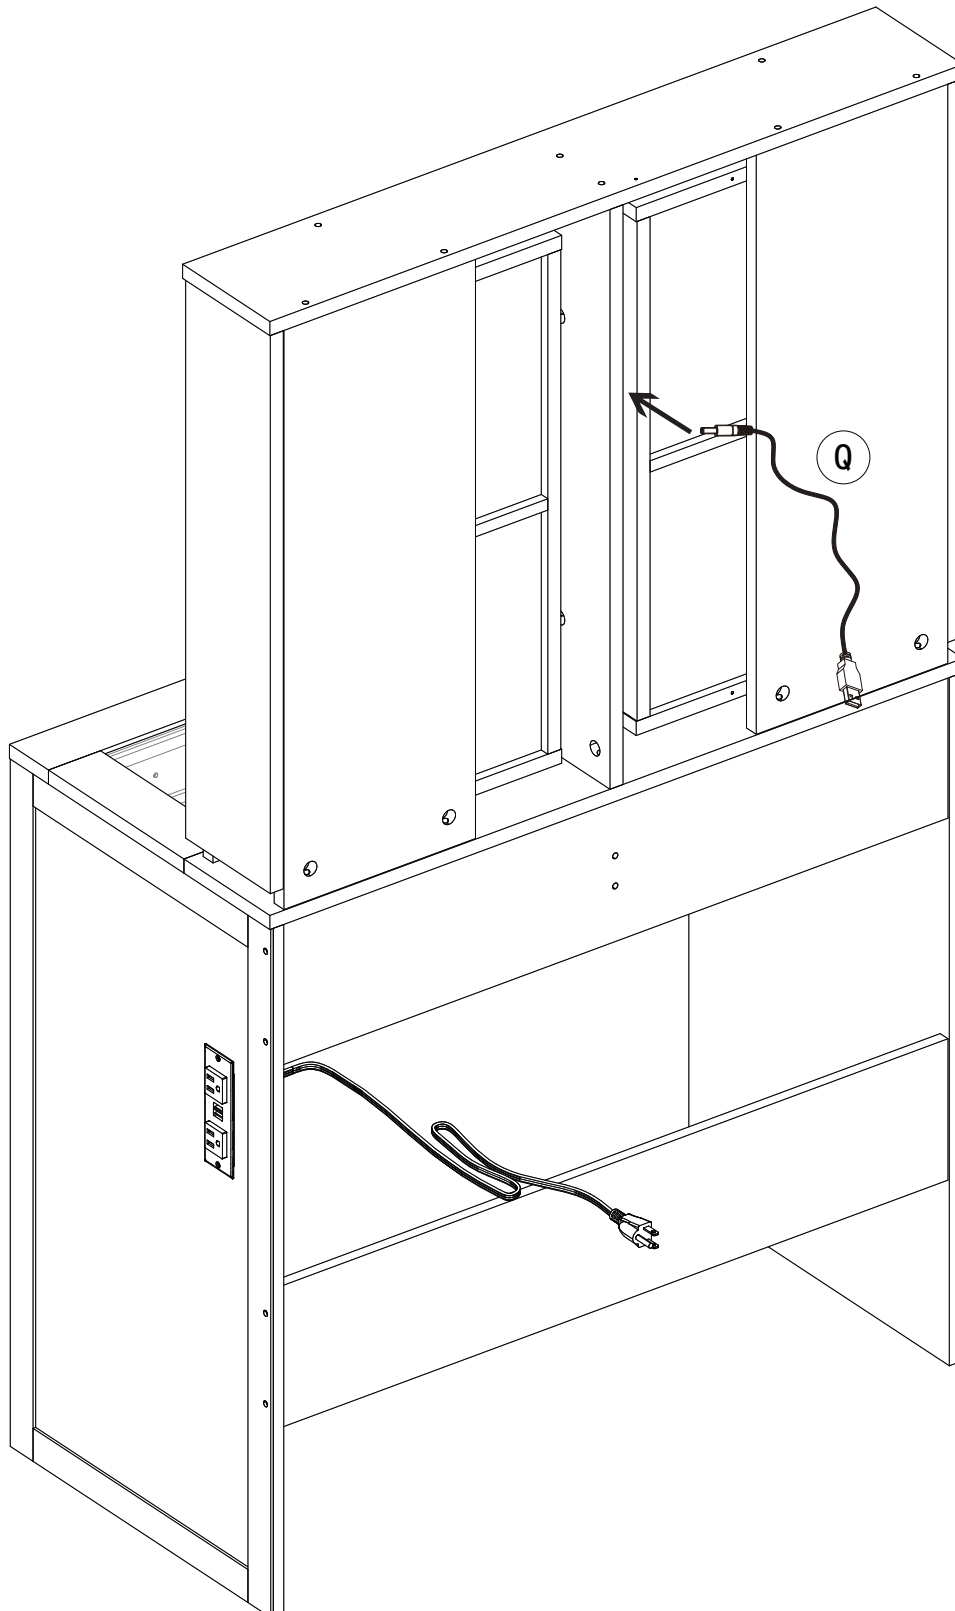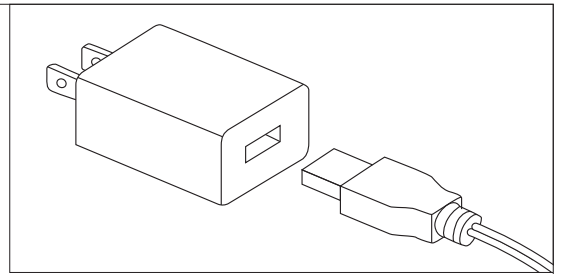



STEP25




Q		x1
---	---	----

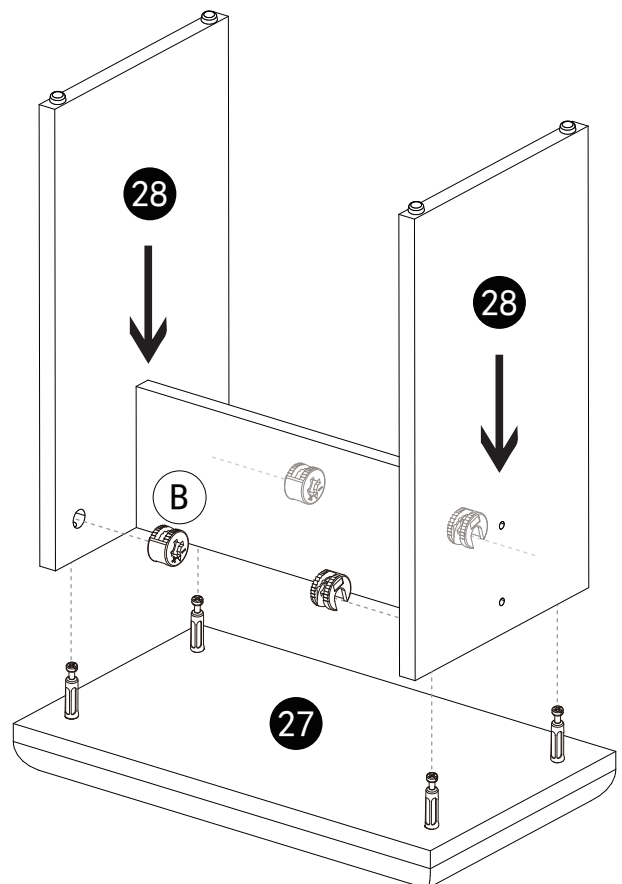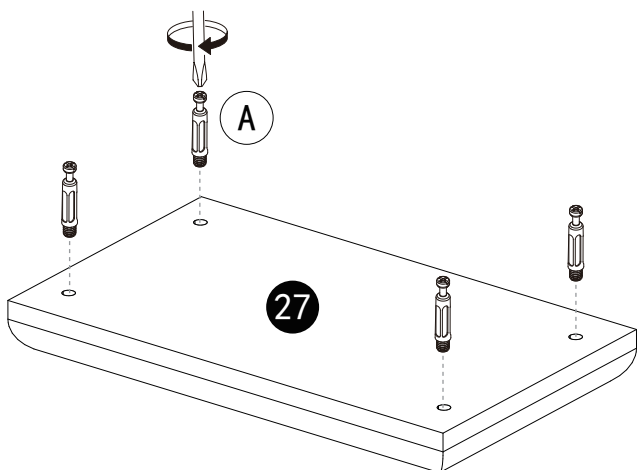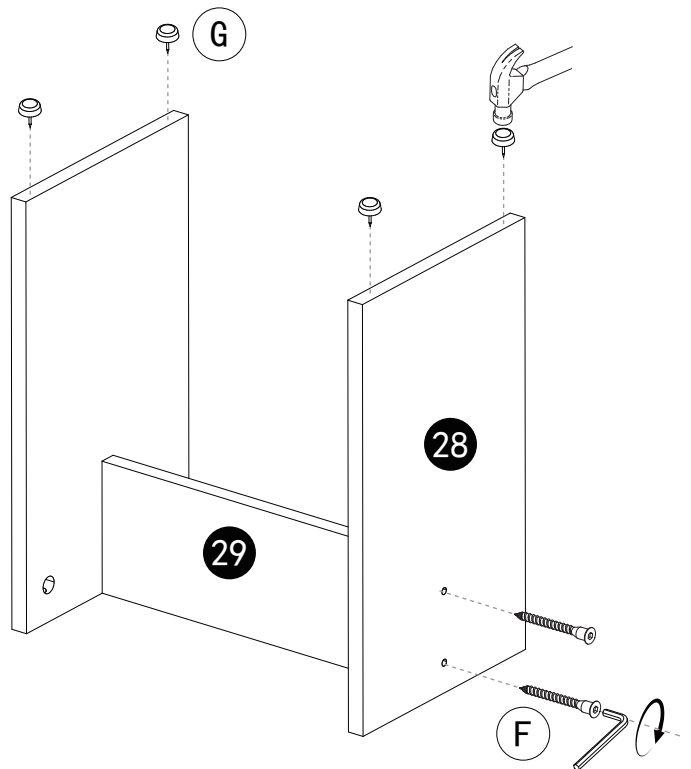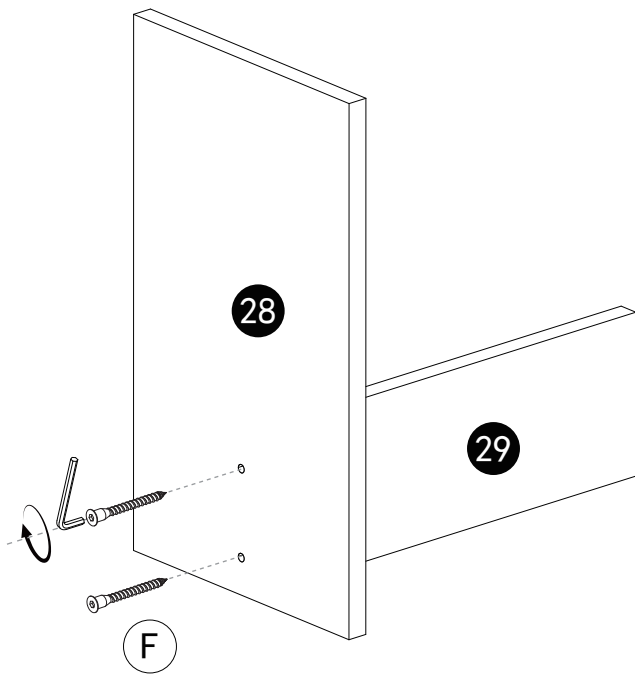
STEP26



F		x4			
A		x4			
B		x4	G		x4

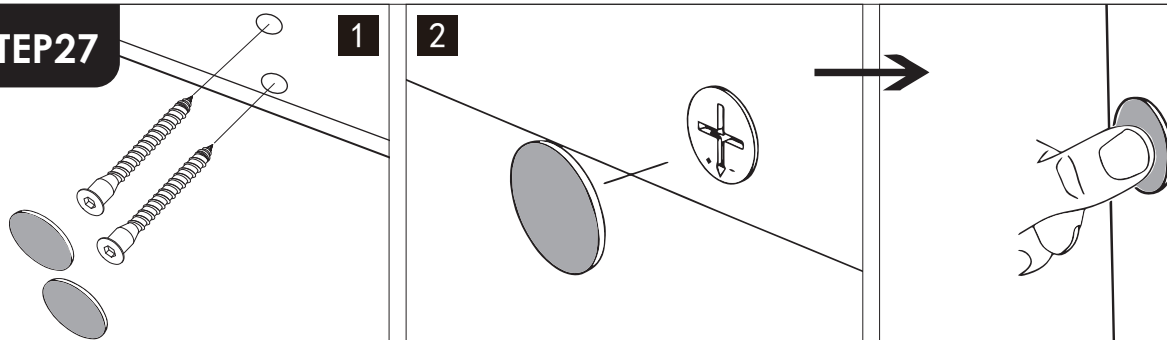STEP27

Add L fittings to all exposed holes on the front of the product




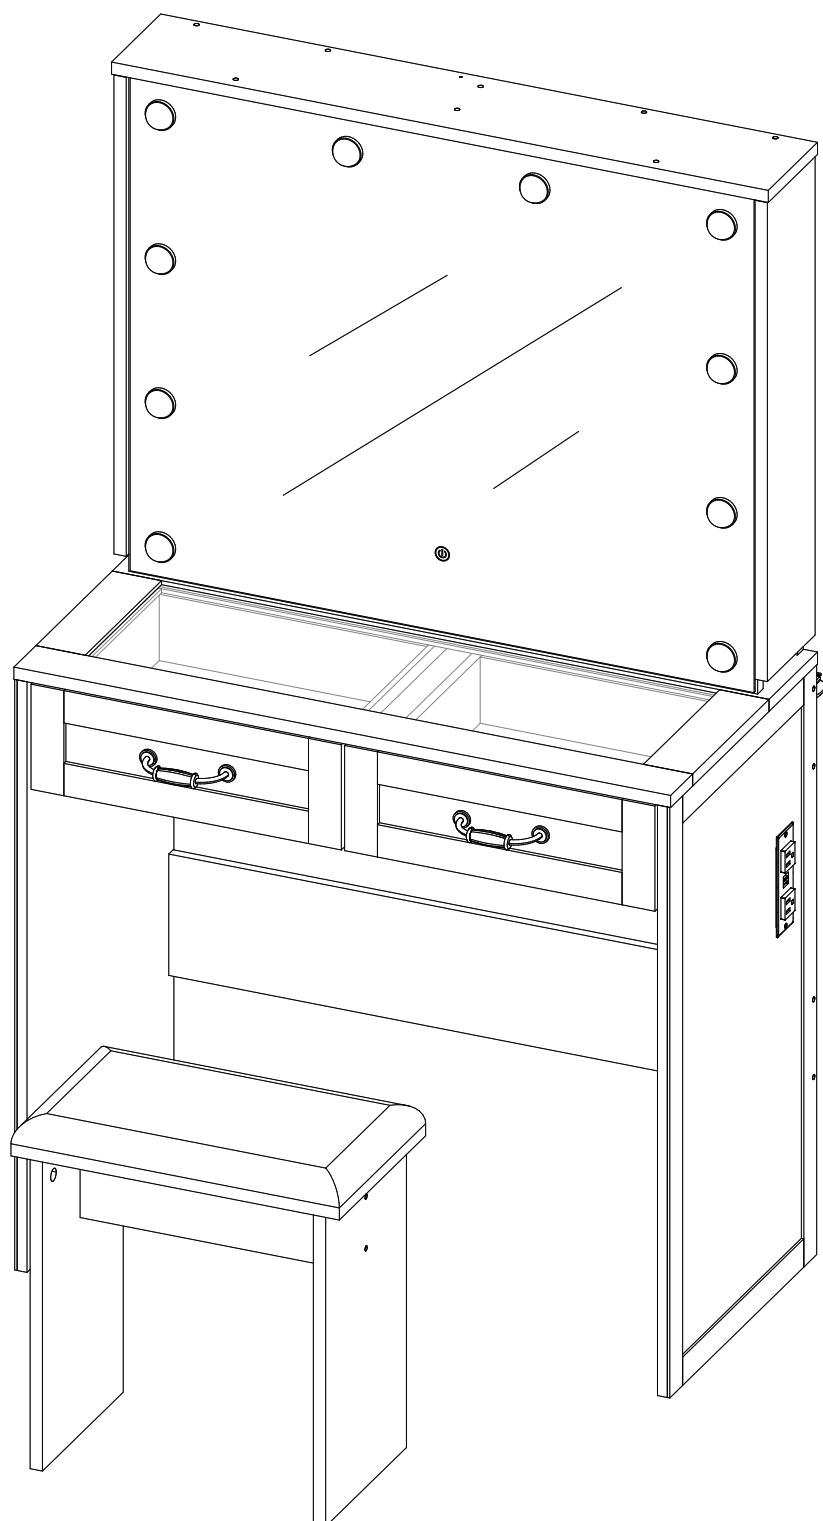
**L****x36**

STEP28

1

2

3

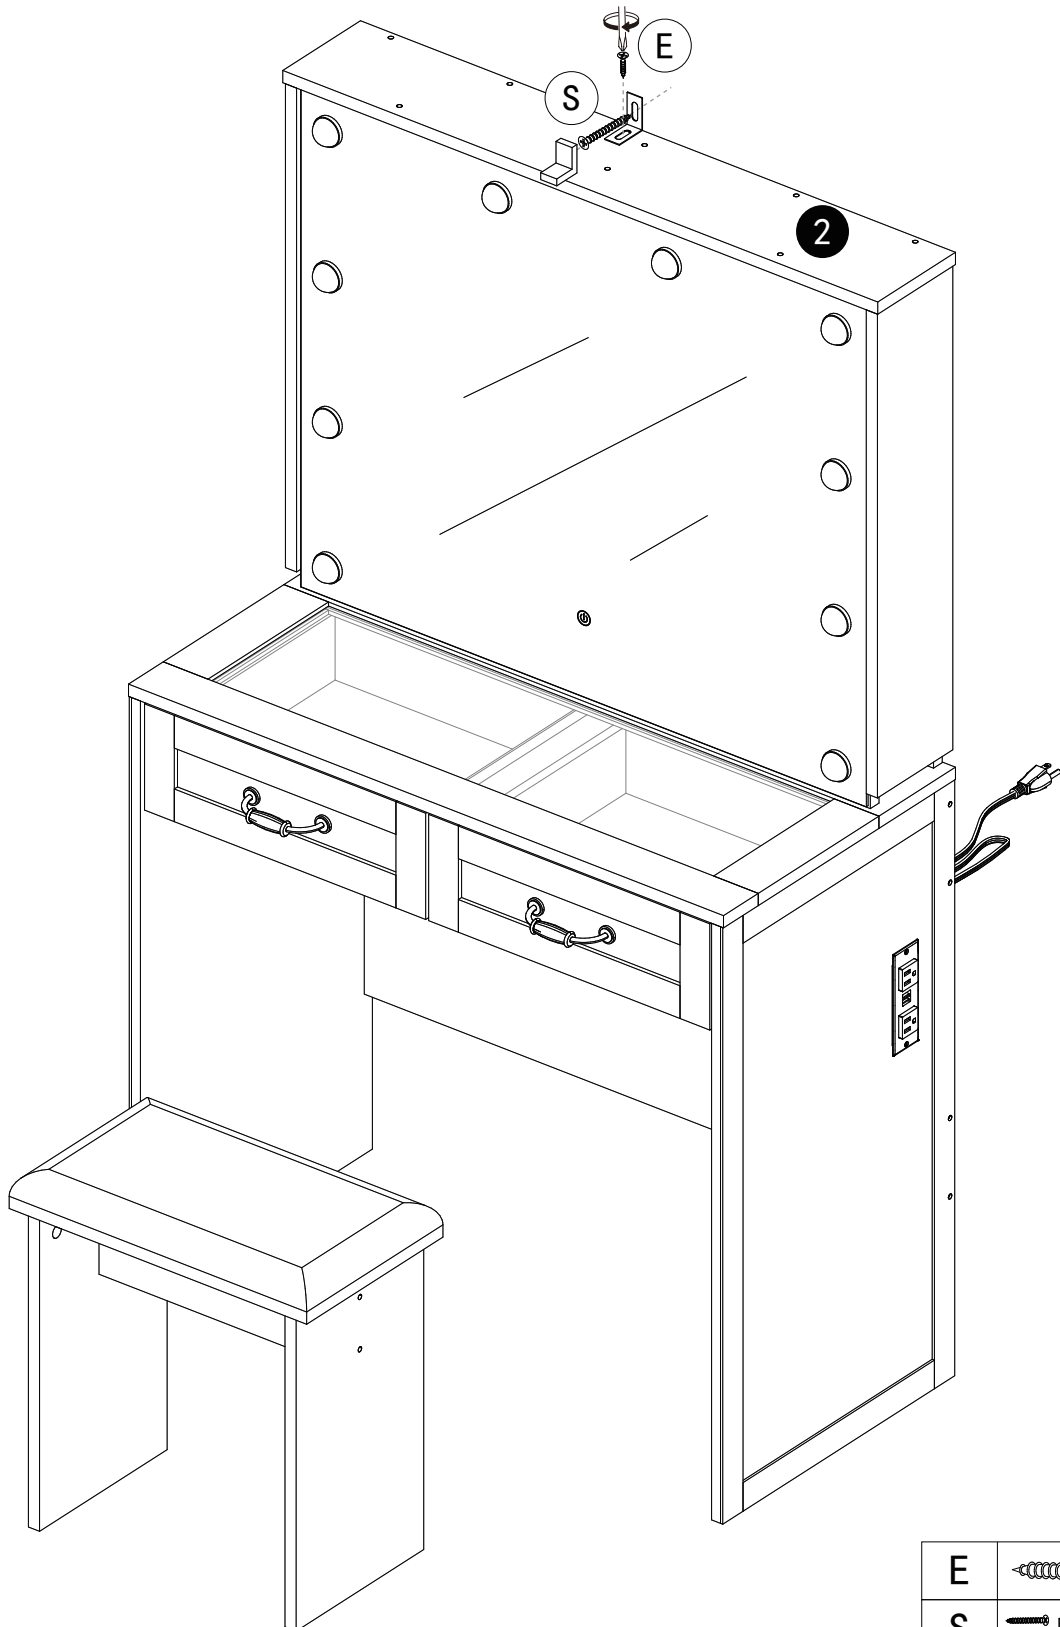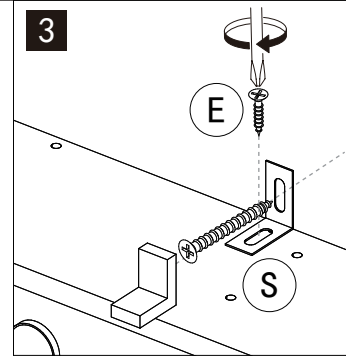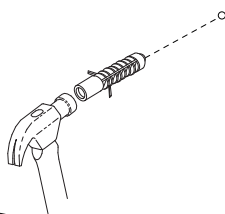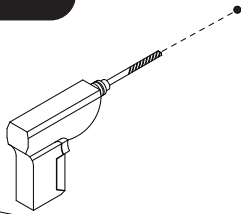

E		x1
S		x1