



AMS Fireplace inc.

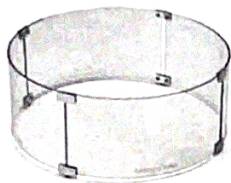

Round

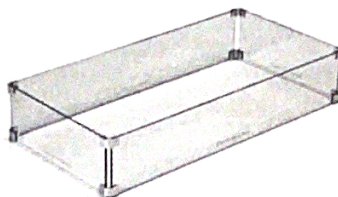

Rectangle

Items included:

- Glass panels
- Brackets with set screws and silicone washers

Tools needed:

- #2 Phillips screwdriver

Instructions:

1. Carefully remove the wind guard from the packaging and inspect for any damage such as chips or cracks. Place glass panels on a soft flat surface to prevent any damage.
2. Ensure that each bracket has 2 set screws in them with the silicon inserts attached to the back side.
3. Stand the glass panel vertically and slide the bracket onto the glass. The glass should be flush with the bottom of the brackets. Fig.1 and Fig.2
4. Using a #2 Phillips screwdriver, **loosely connect the brackets to the glass panels**. Repeat until the wind guard is fully assembled. Fig.1 and Fig.2
5. Tighten all screws starting at the bottom.
6. Now that your wind guard is fully assembled, center the complete assembly over your fire pit insert.

Warnings:

- Never place your wind guard directly on the fire pit insert.

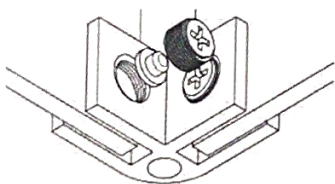


figure 1

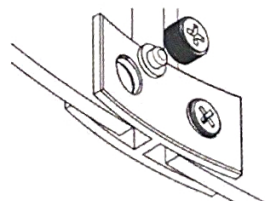


figure 2

- Always ensure the silicon insert is on the set screws.
- Always ensure there is a 1/2" gap between the glass panels.
- Always check the glass panels for cracks. DO NOT use glass panels with a crack.

Maintenance:

- Clean the glass 2-3 times per season or as needed.
- Clean with a non-abrasive glass cleaner and a clean lint-free cloth.
- Periodically check the set screws to ensure tight.