


Assembly Instructions

Storage rack

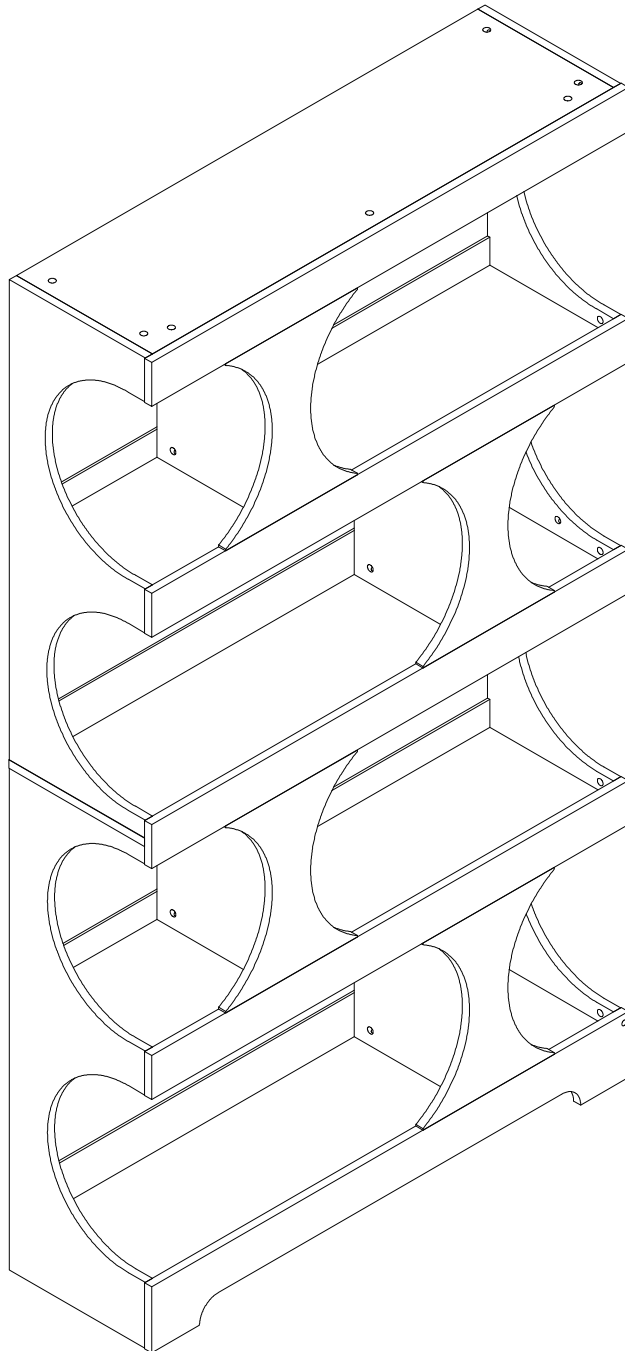




Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

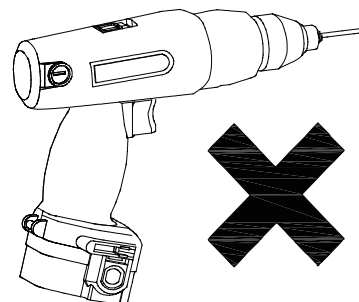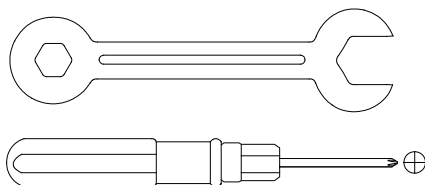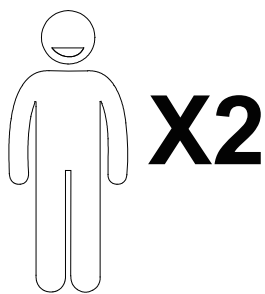


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

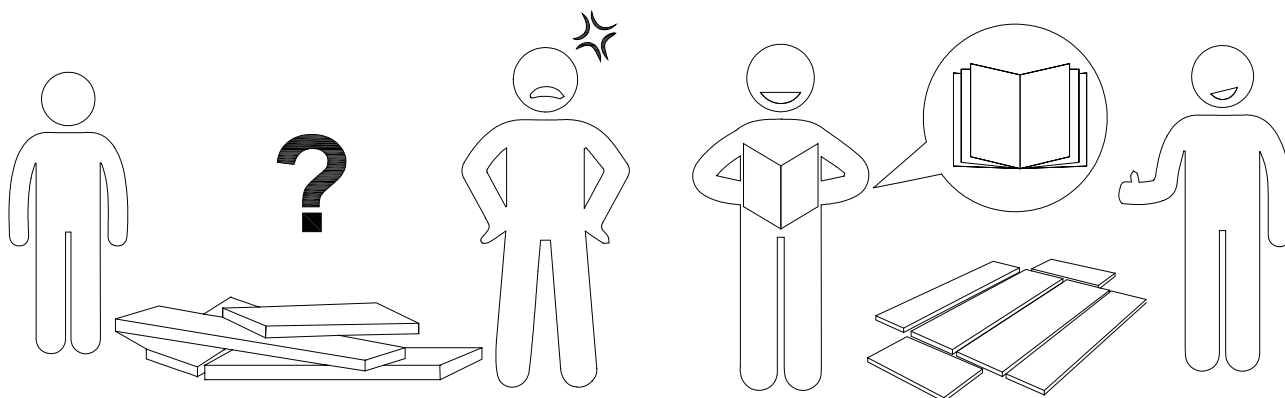

Install the Anti-Tip Straps






















Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

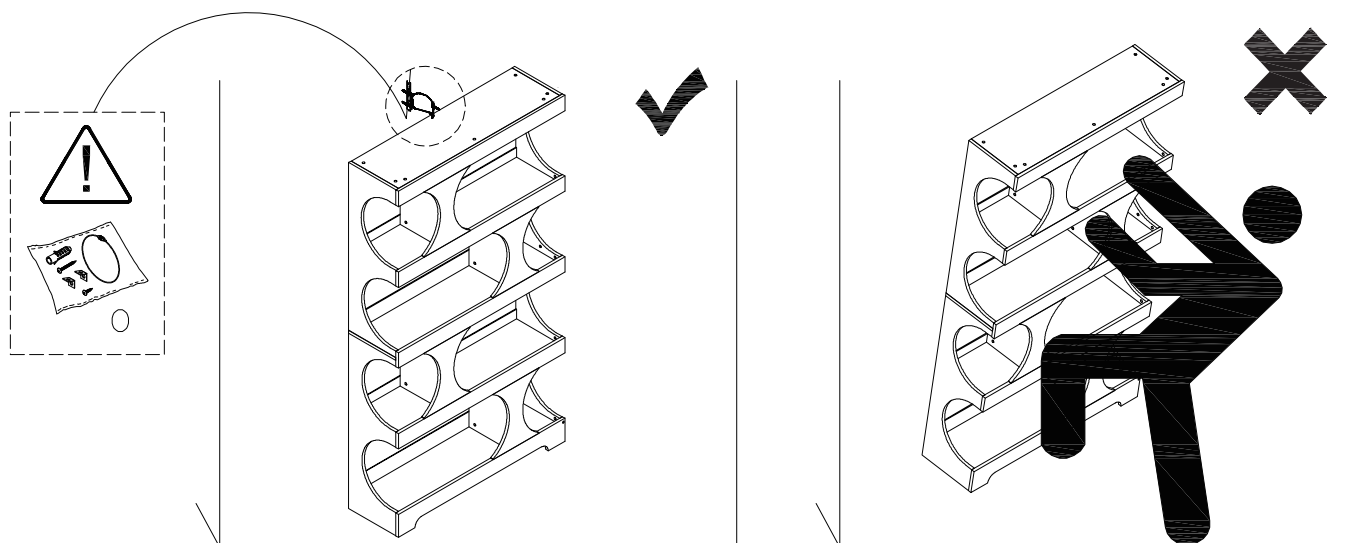






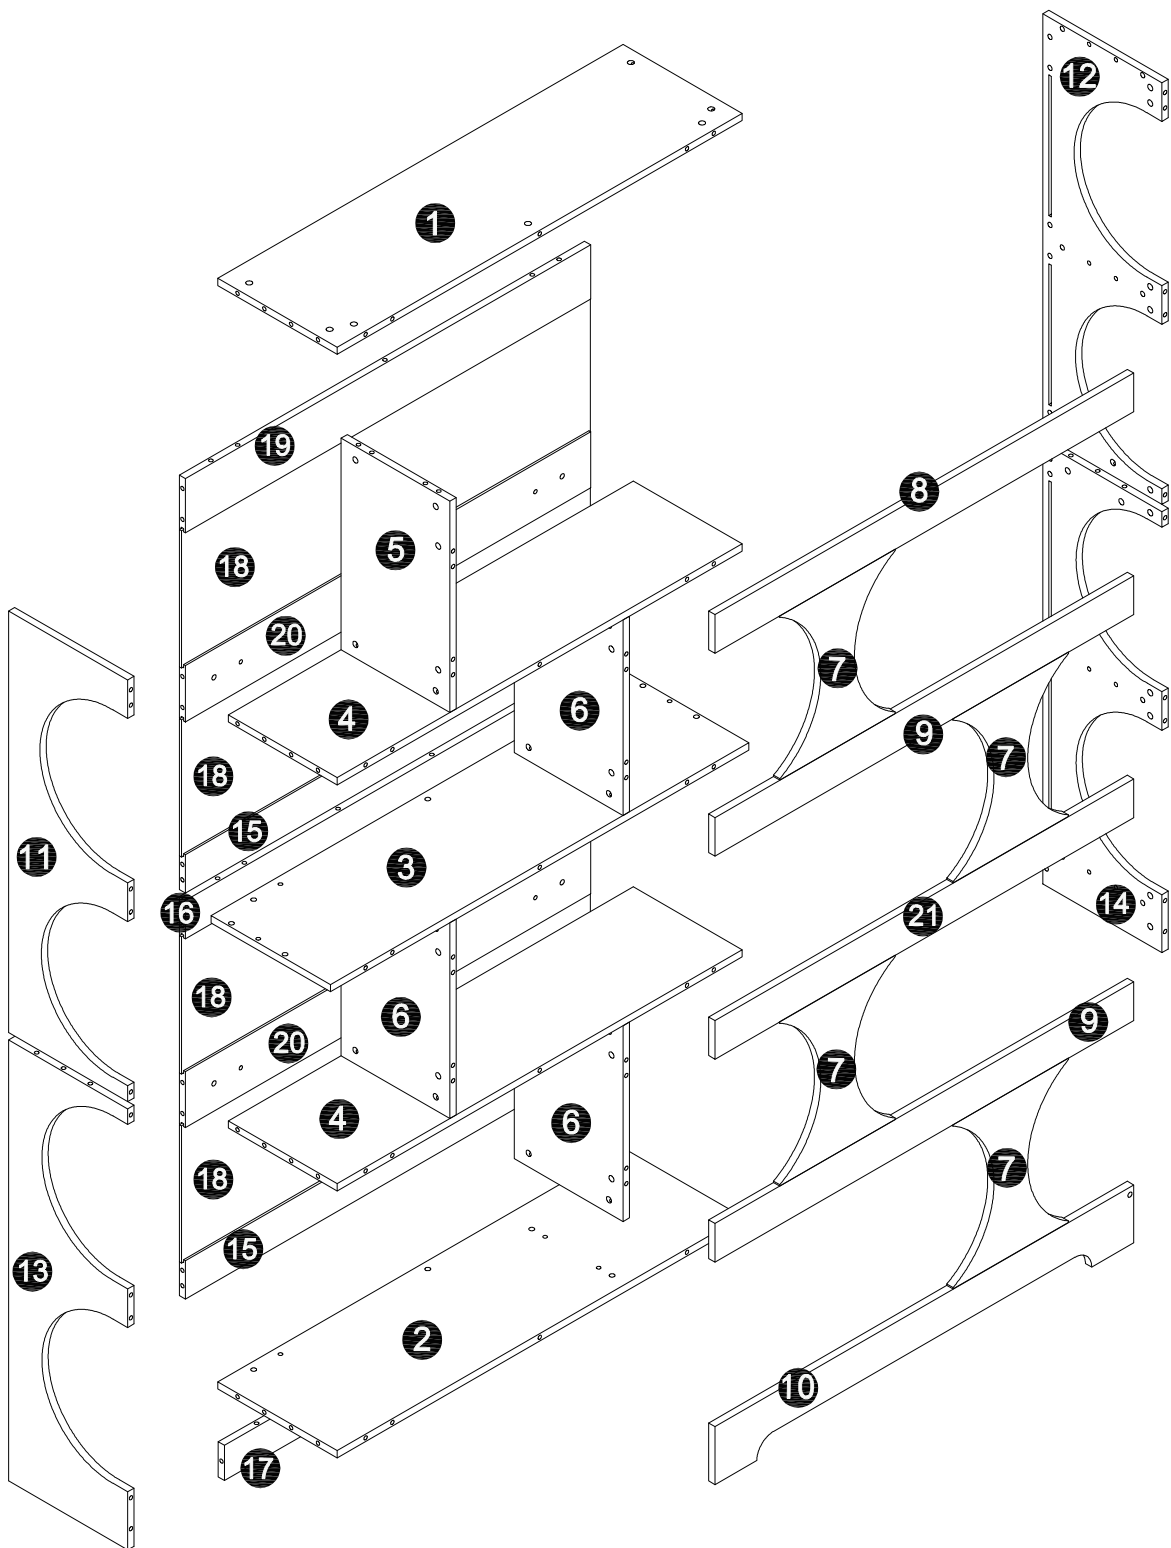
**⚠ Caution**




Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

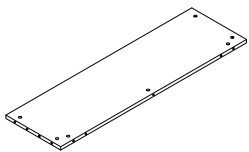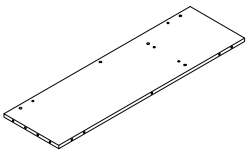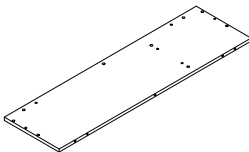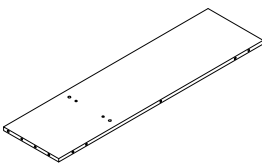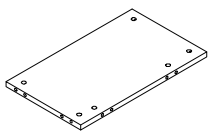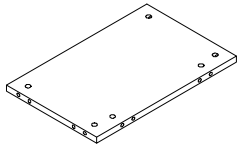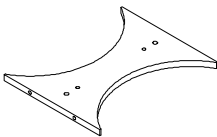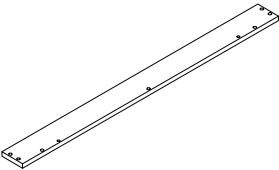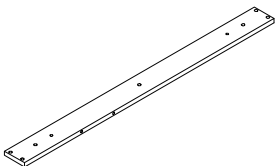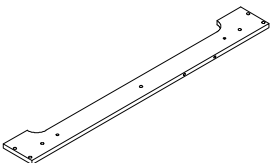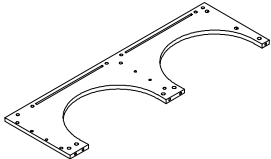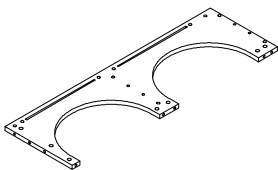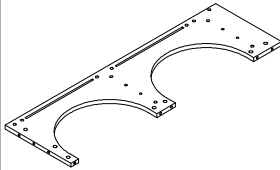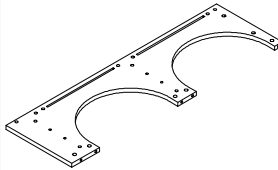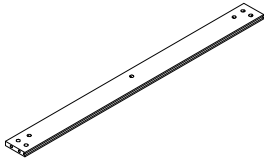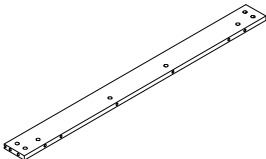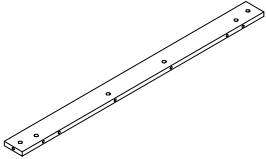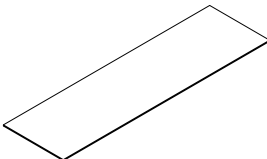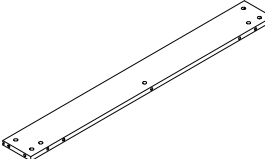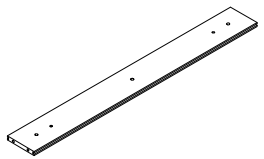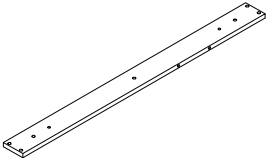1  1 pc	2  1 pc	3  1 pc	4  2 pcs	5  1 pc
6  3 pcs	7  4 pcs	8  1 pc	9  2 pcs	10  1 pc
11  1 pc	12  1 pc	13  1 pc	14  1 pc	15  2 pcs
16  1 pc	17  1 pc	18  4 pcs	19  1 pc	20  2 pcs
21  1 pc				


Hardware List

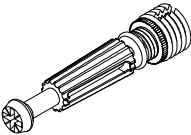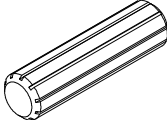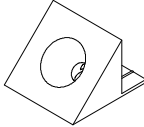A	B	C	D	E	F
					
M6x35mm	Ø12x10mm	Ø8x30mm	Ø3.5x14mm		Ø14x16mm
132+2 pcs	132+2 pcs	84+2 pcs	16+1 pcs	16+1 pcs	8 pcs

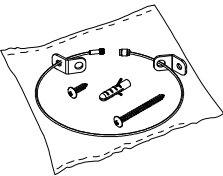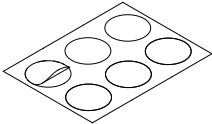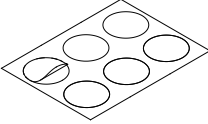
G	H	I	J		
					
	Screwdriver	Hole paste Ø18	Hole paste Ø18		
1 pc	1 pc	26 pcs	26 pcs		

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

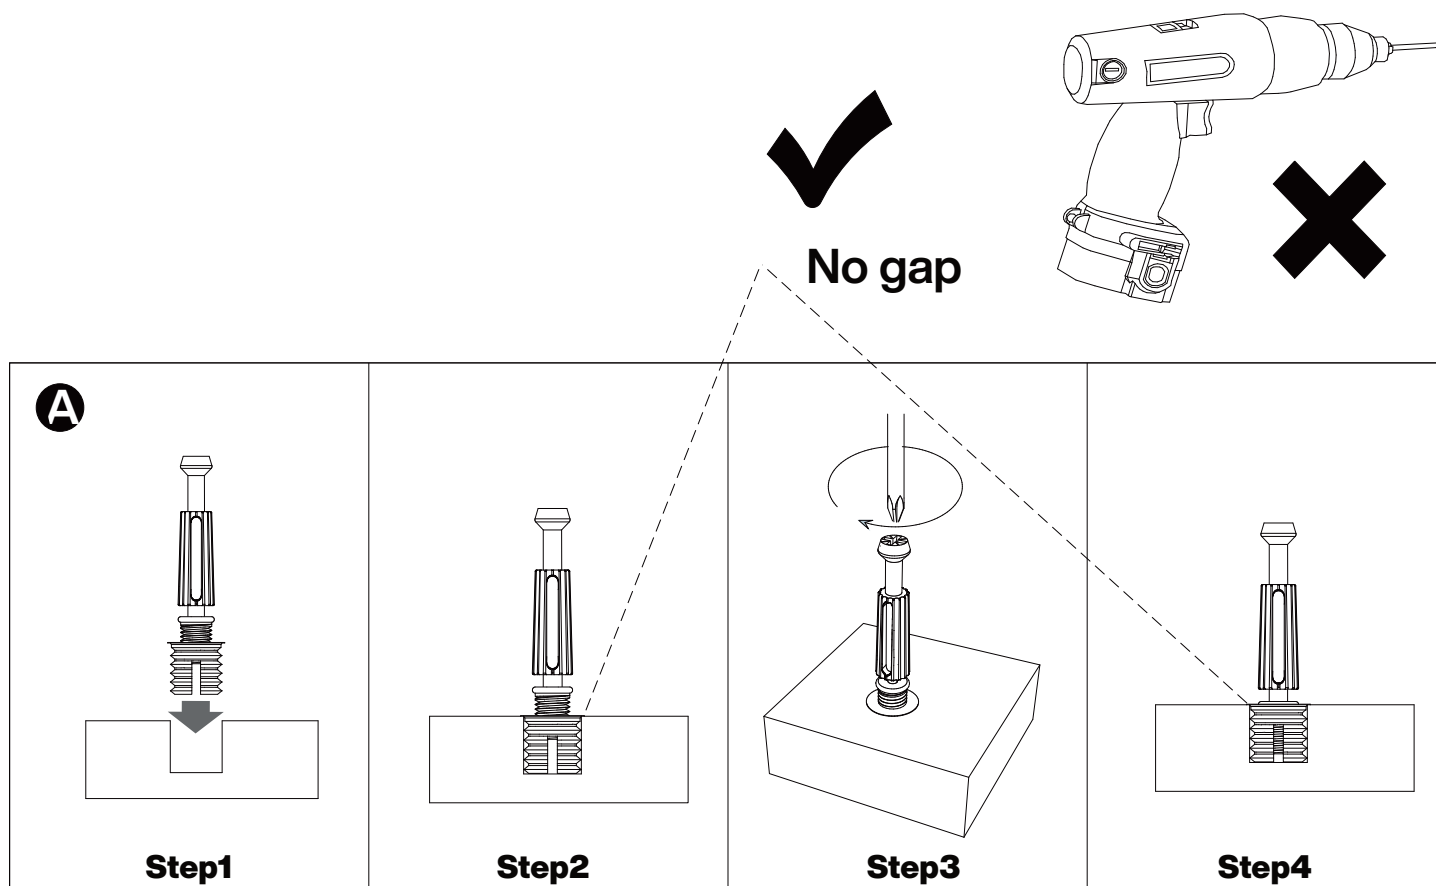


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

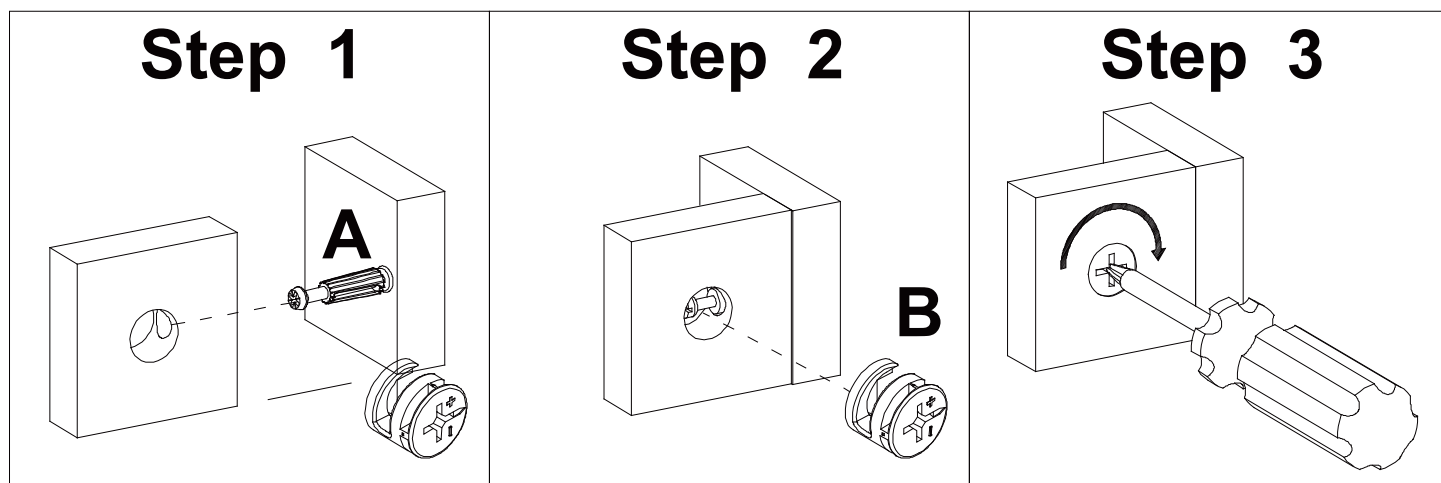



1

A	C
	
M6x35mm	Ø8x30mm
4 pcs	2 pcs

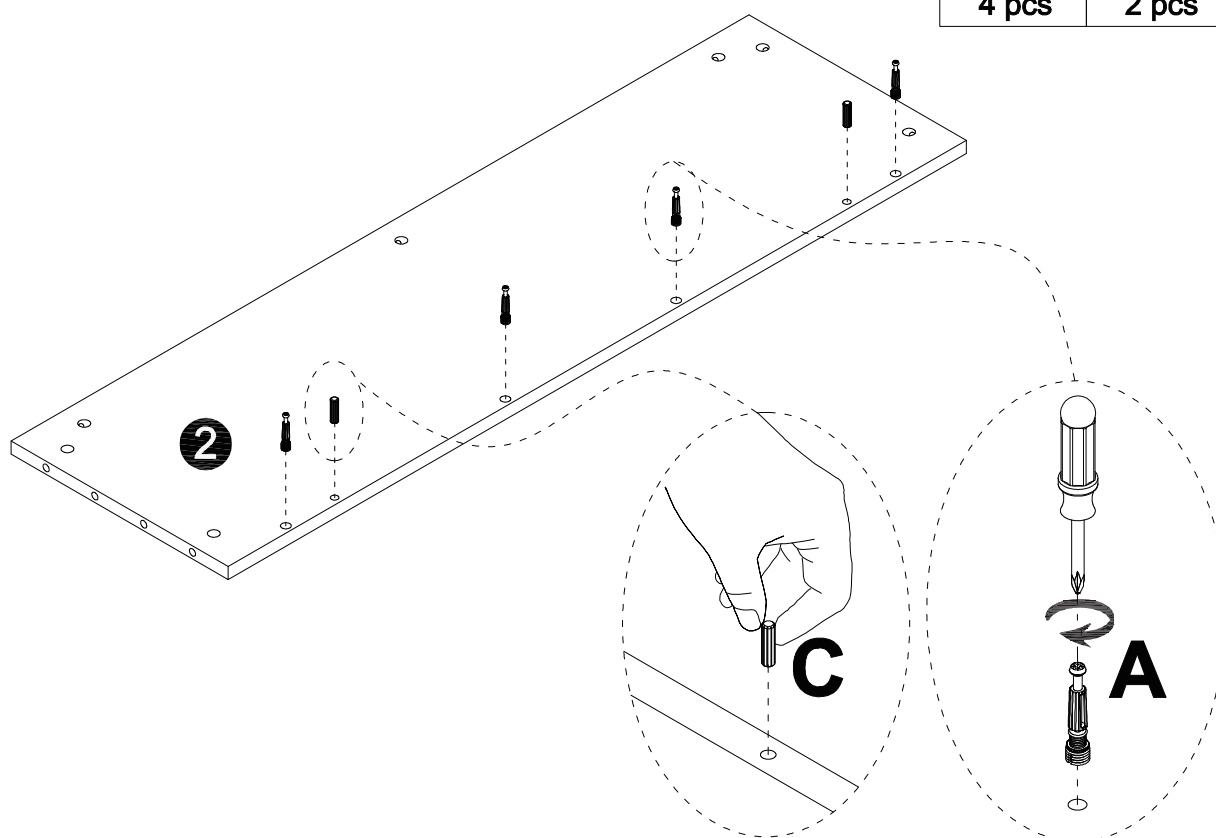
**2**


B

Ø12x10mm
4 pcs

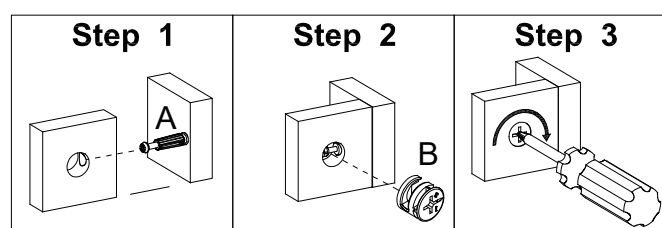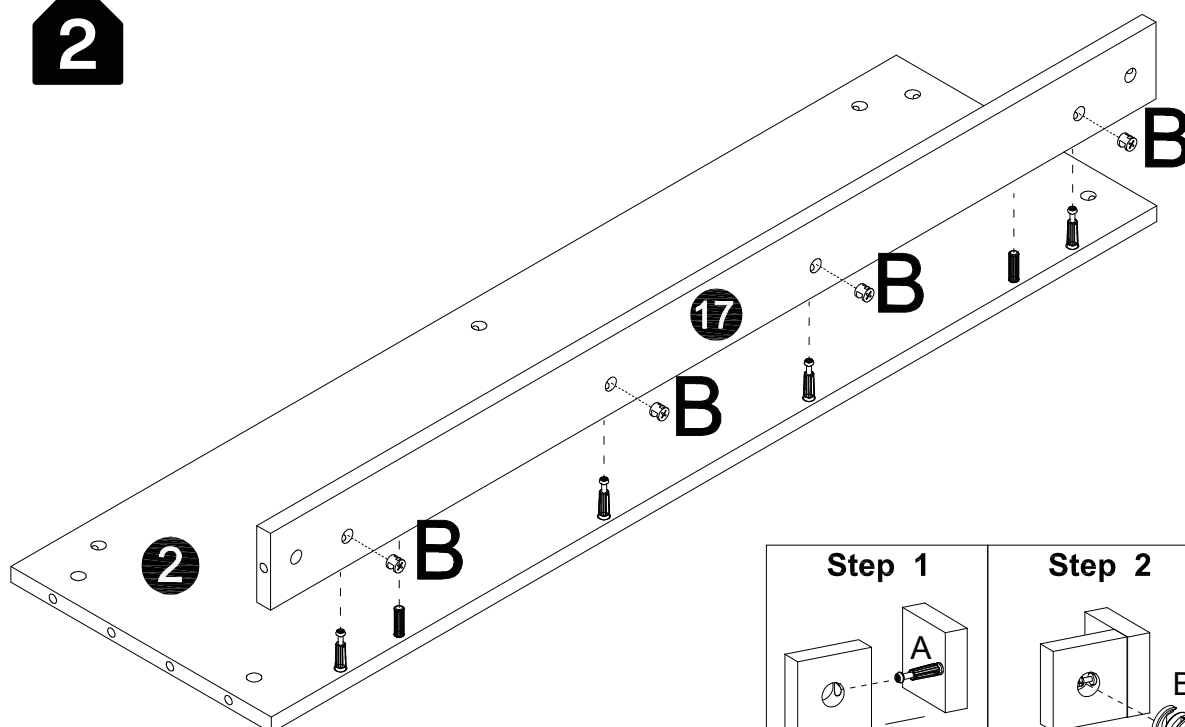

3



A	C
	
M6x35mm	Ø8x30mm
5 pcs	4 pcs

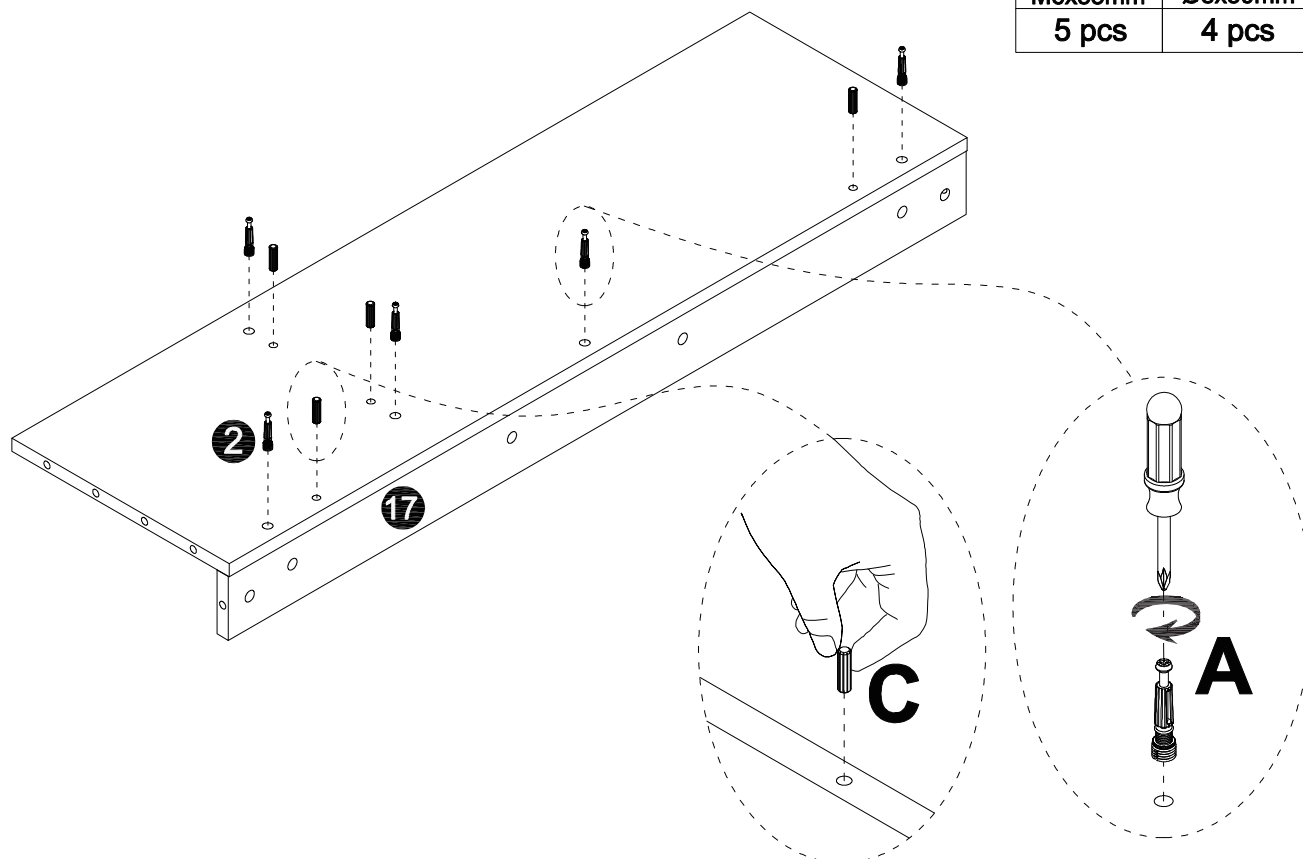


4

B

Ø12x10mm
3 pcs

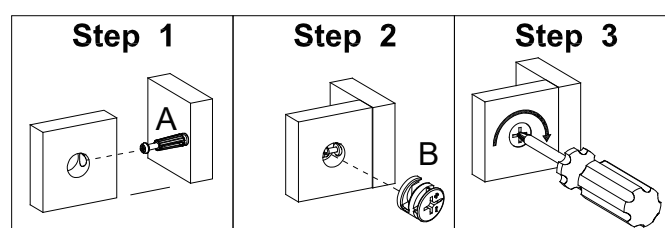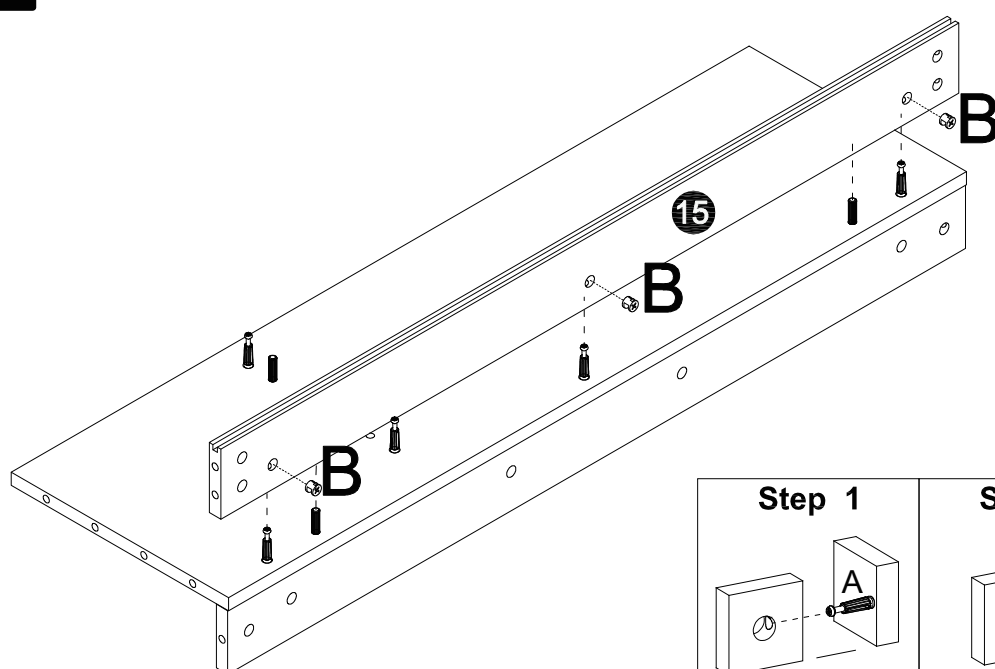

5

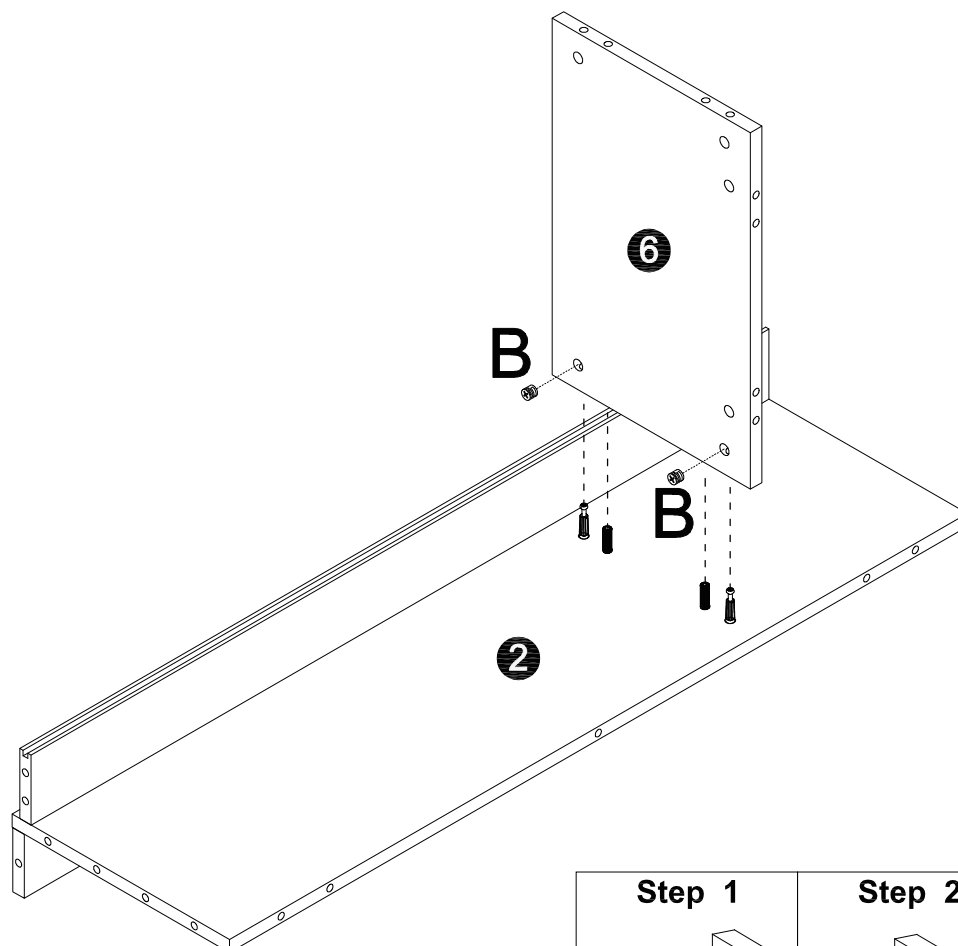


B




Ø12x10mm

2 pcs


Step 1

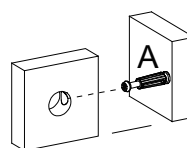


Step 2

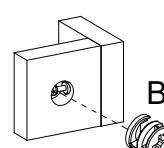


Step 3

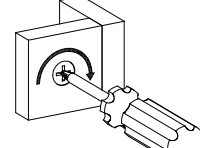

6

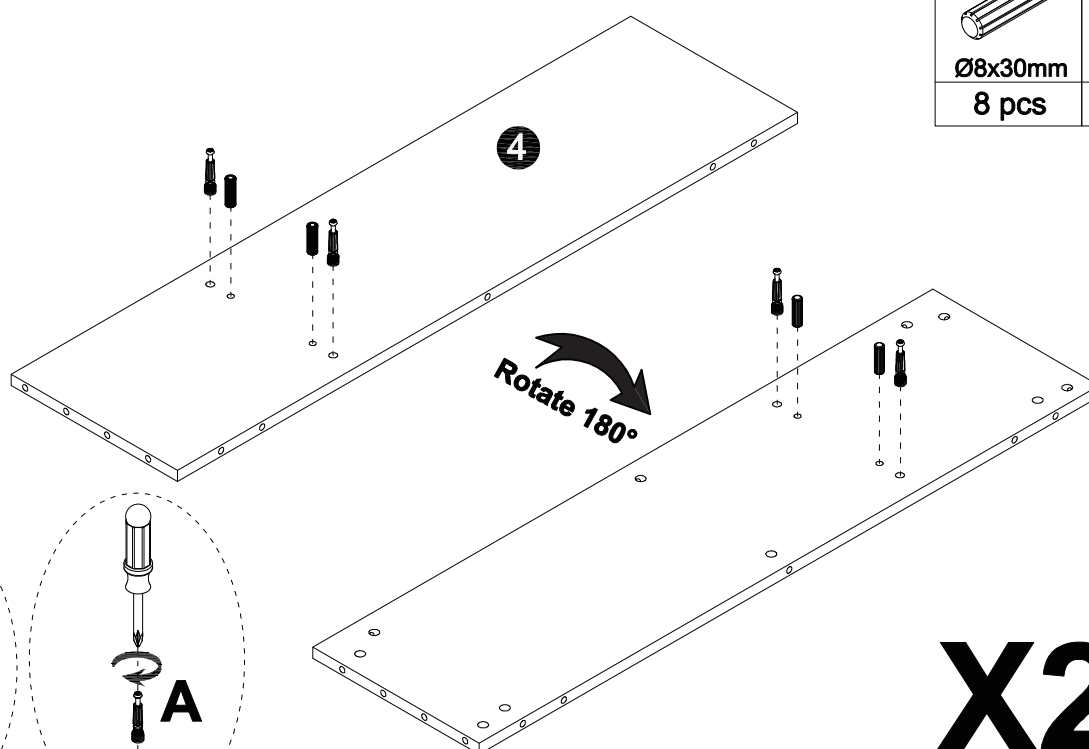


C



Ø8x30mm

8 pcs

A





M6x35mm


8 pcs

Rotate 180°


X2

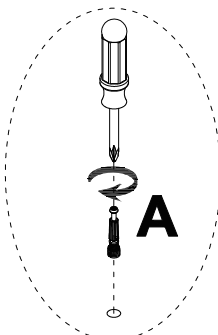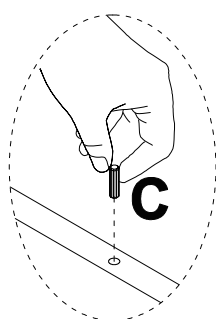


7

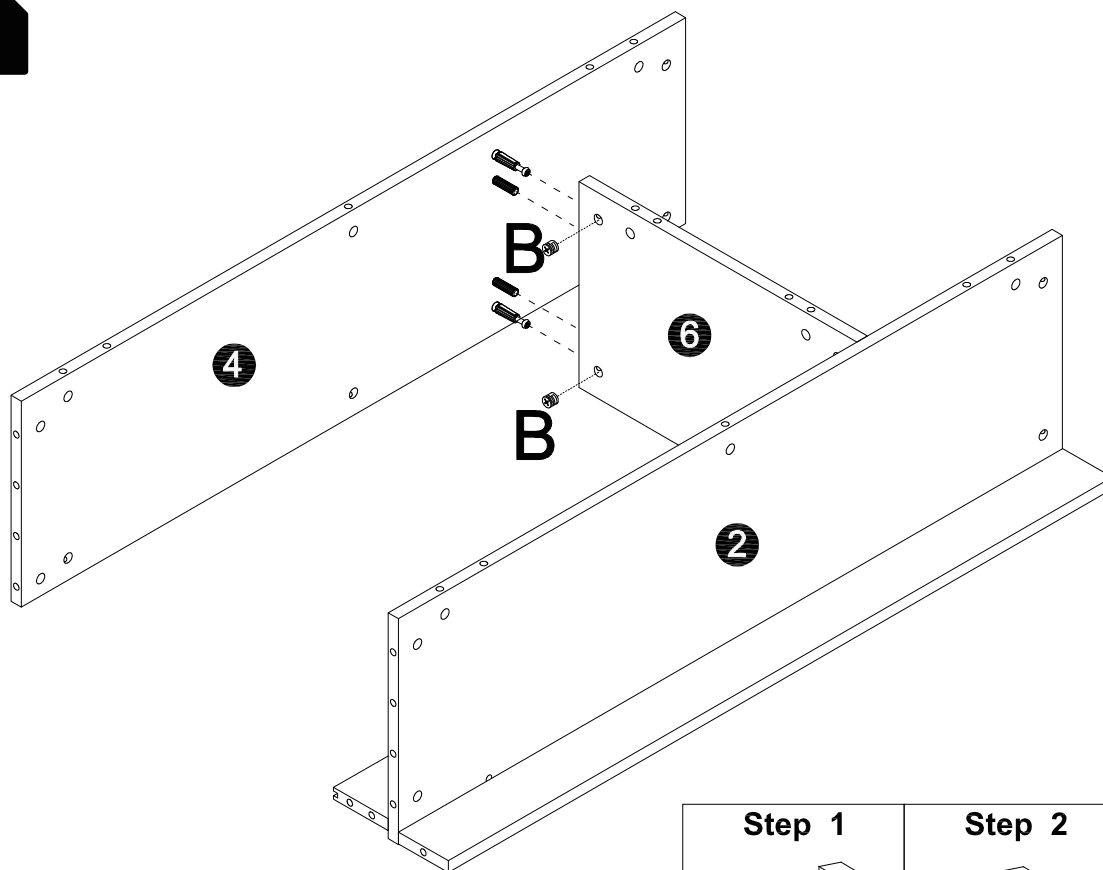

B
Ø12x10mm
2 pcs

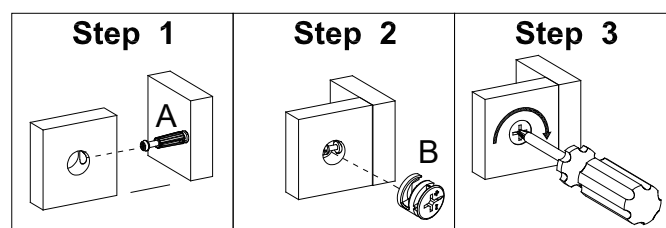


8

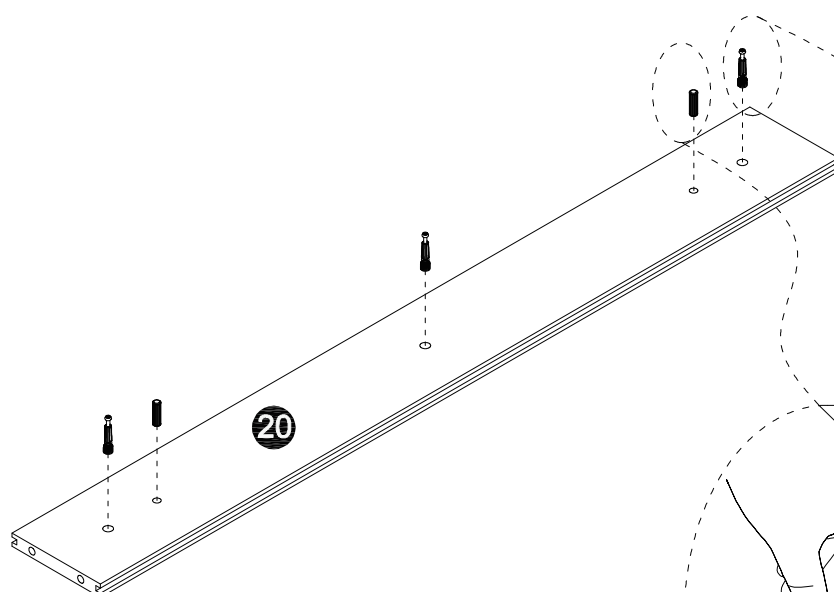


C	A
Ø8x30mm	M6x35mm
4 pcs	6 pcs

X2

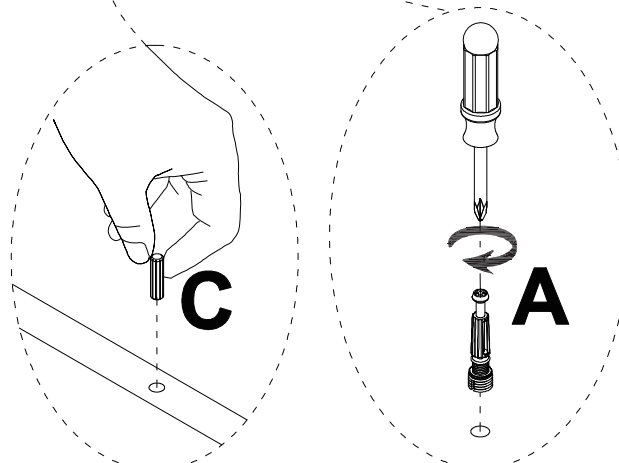


9

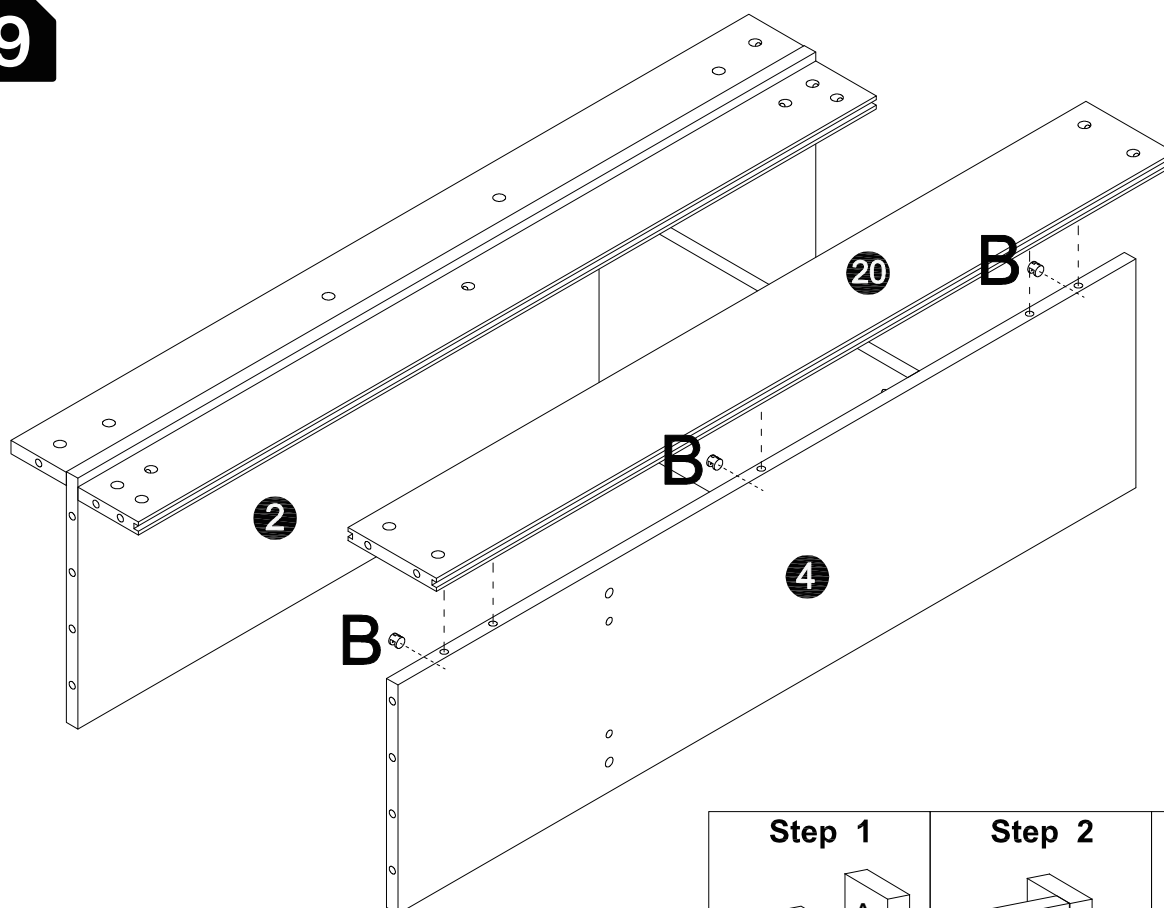


B

Ø12x10mm
3 pcs


Step 1

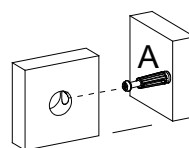


Step 2

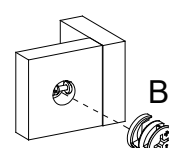




Step 3

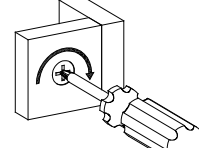


10

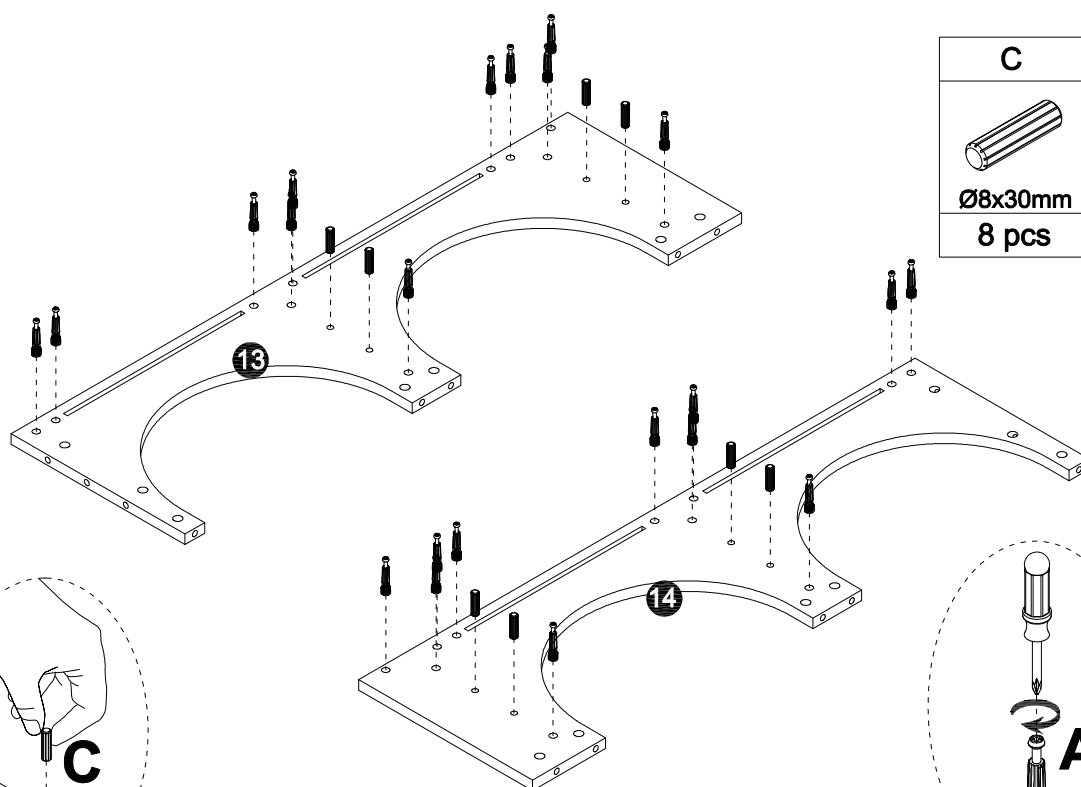

C	A
	
Ø8x30mm	M6x35mm
8 pcs	22 pcs

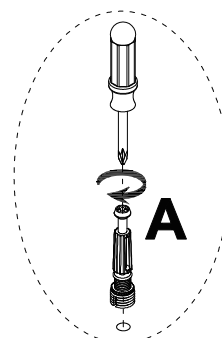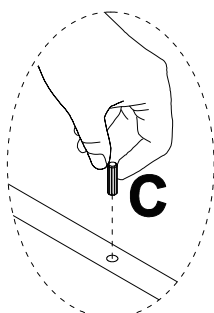


11

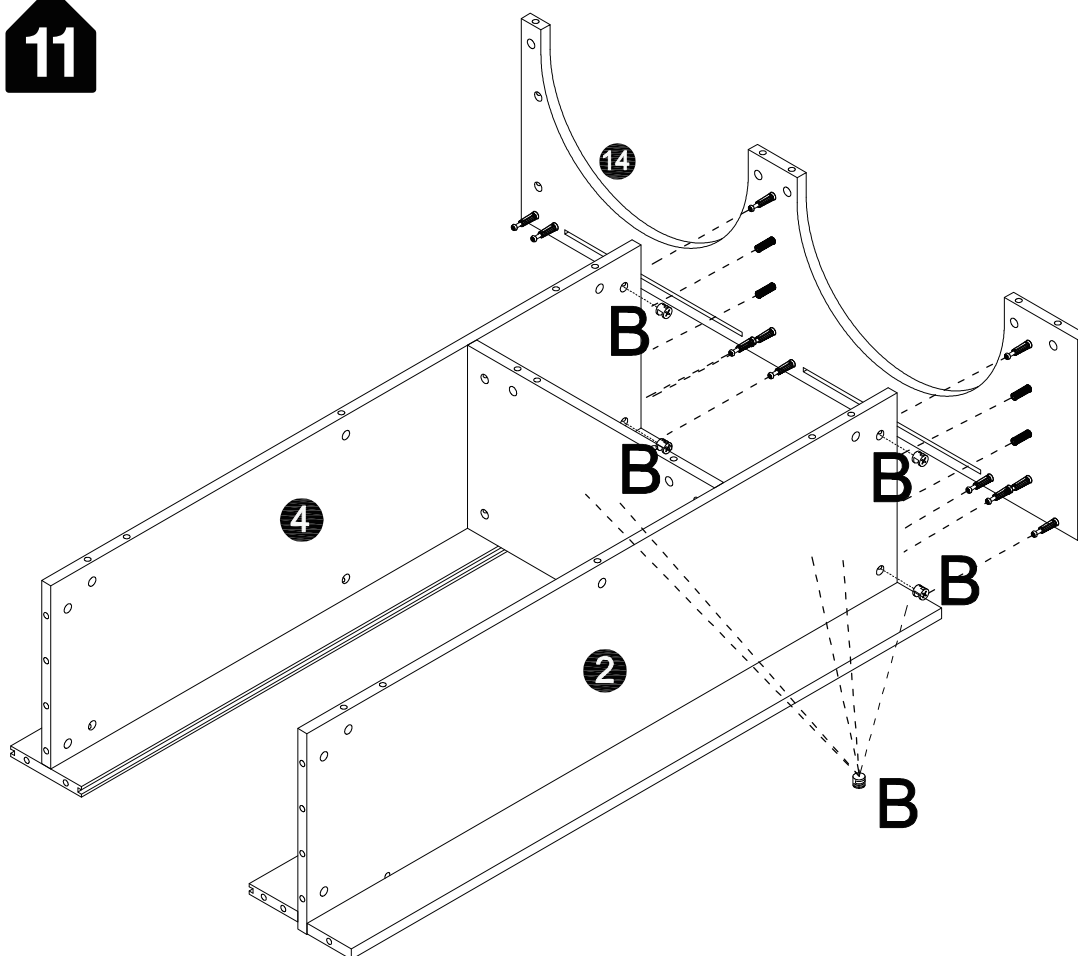


B

Ø12x10mm
9 pcs


Step 1

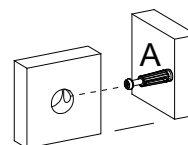


Step 2

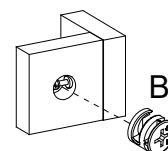

Step 3

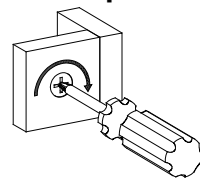


12

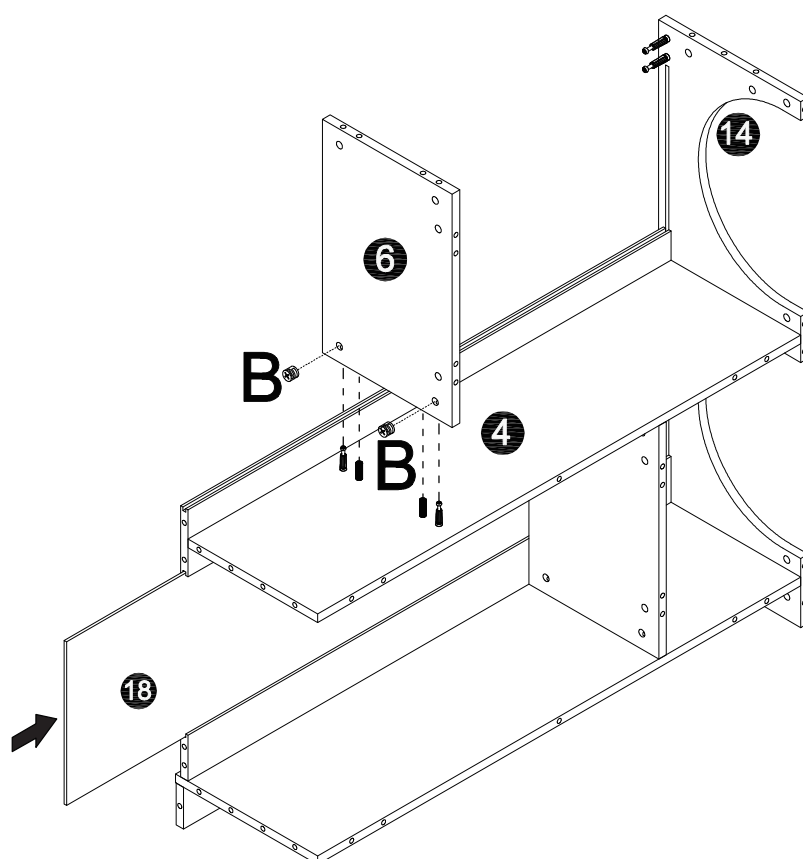

B

Ø12x10mm
2 pcs


13

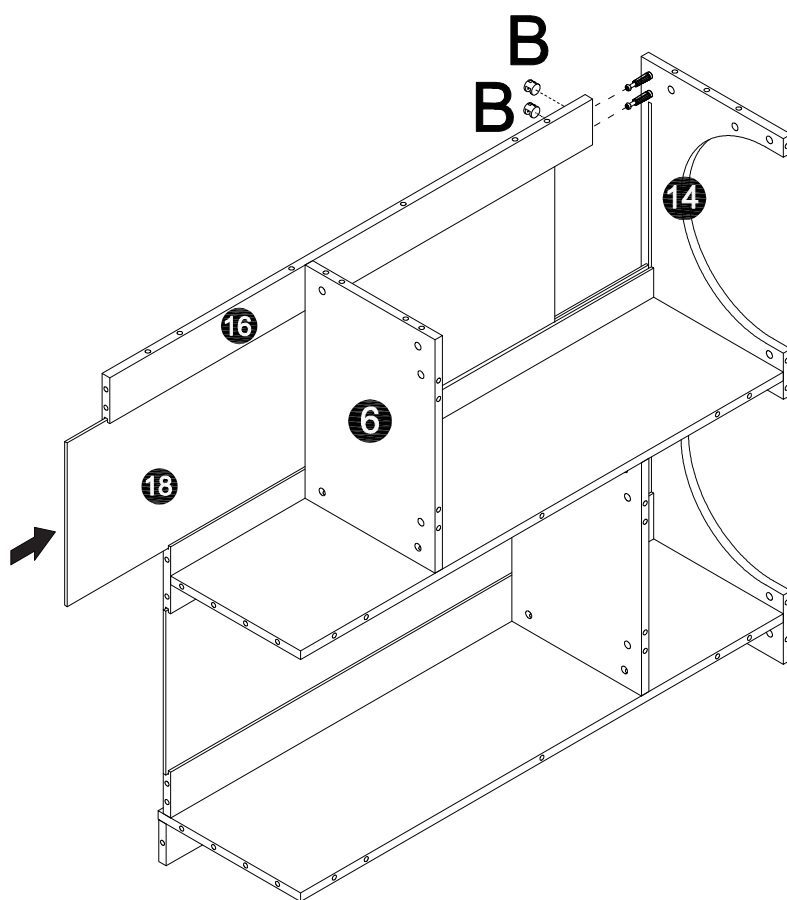


B

Ø12x10mm
2 pcs


Step 1

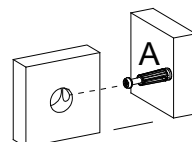


Step 2

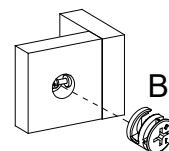

Step 3

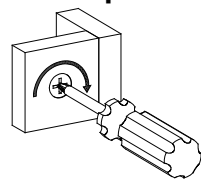

14

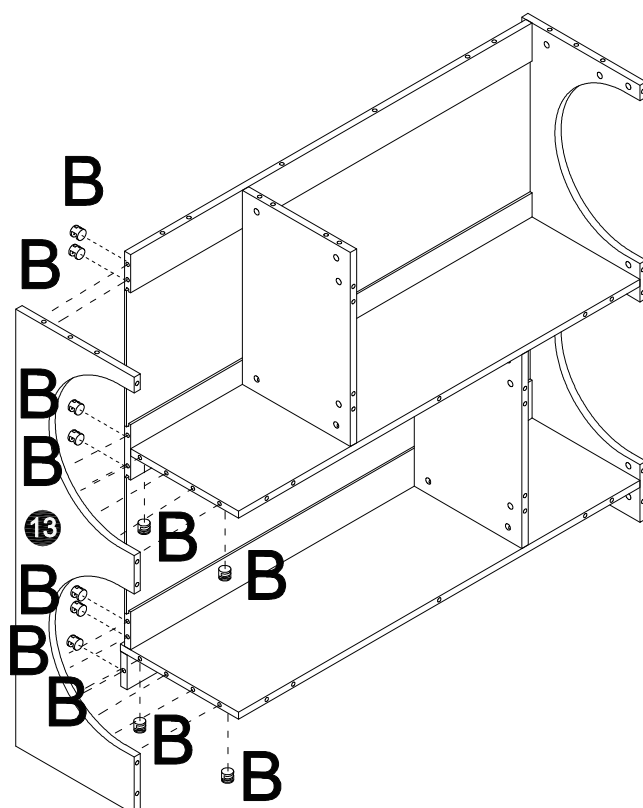


B

Ø12x10mm
11 pcs

15



C	A
	
Ø8x30mm	M6x35mm
12 pcs	19 pcs

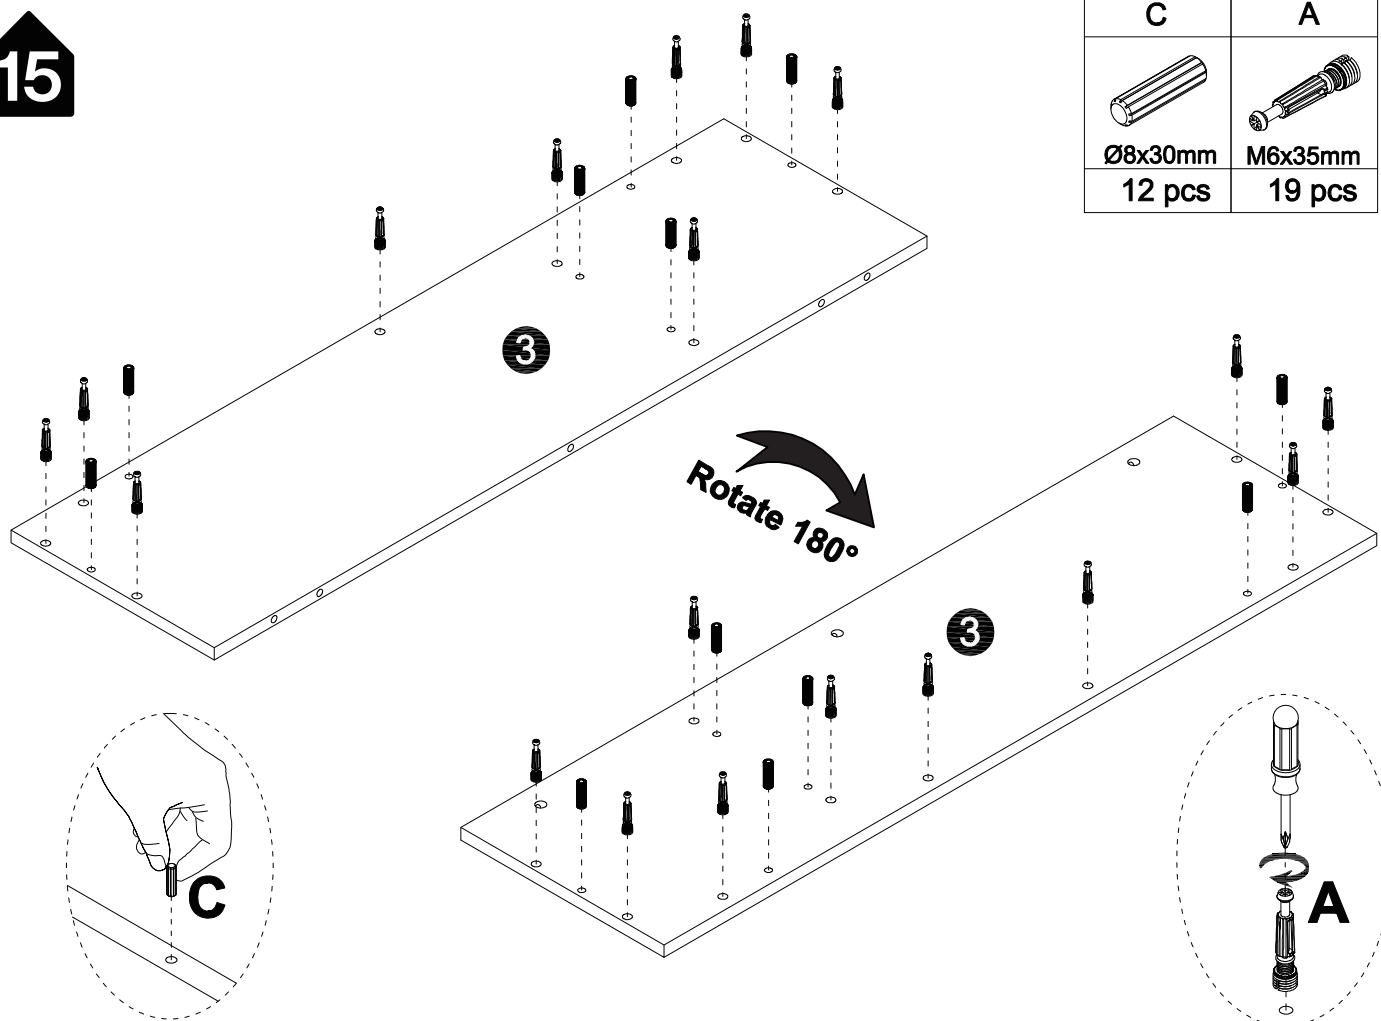


16


B

Ø12x10mm
10 pcs

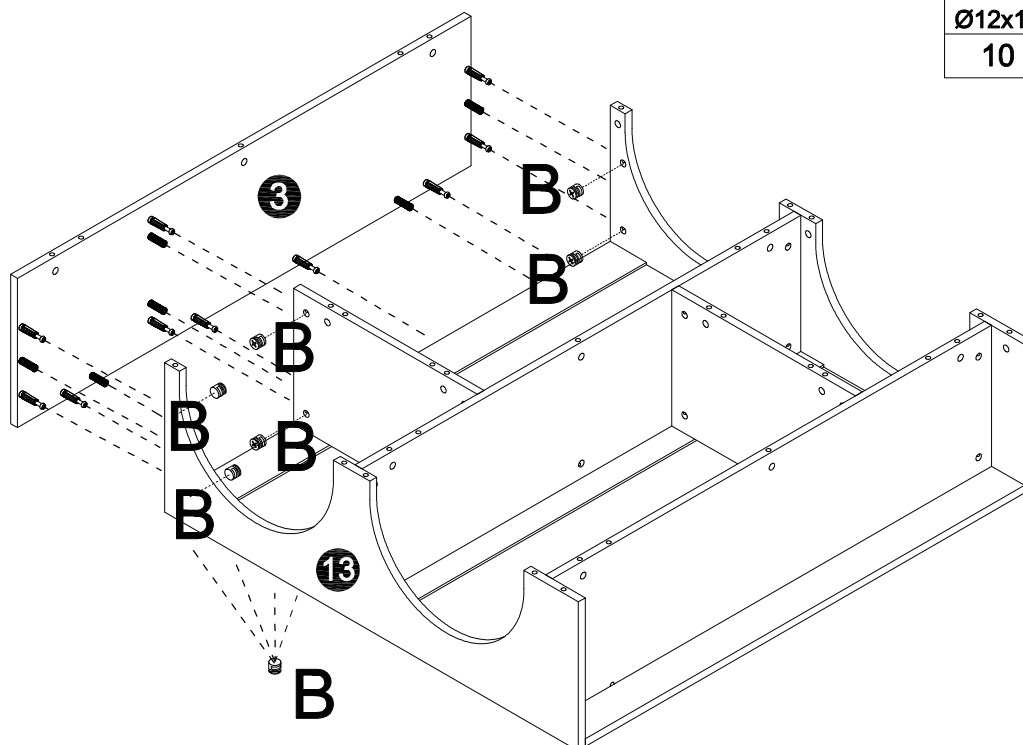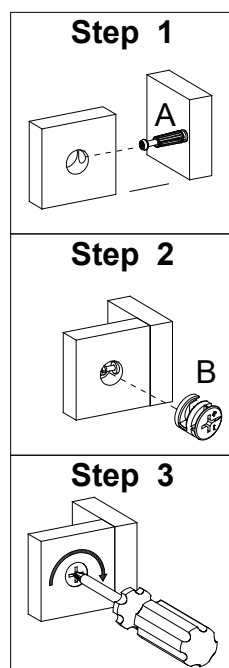

17



C	A
	
Ø8x30mm	M6x35mm
4 pcs	5 pcs





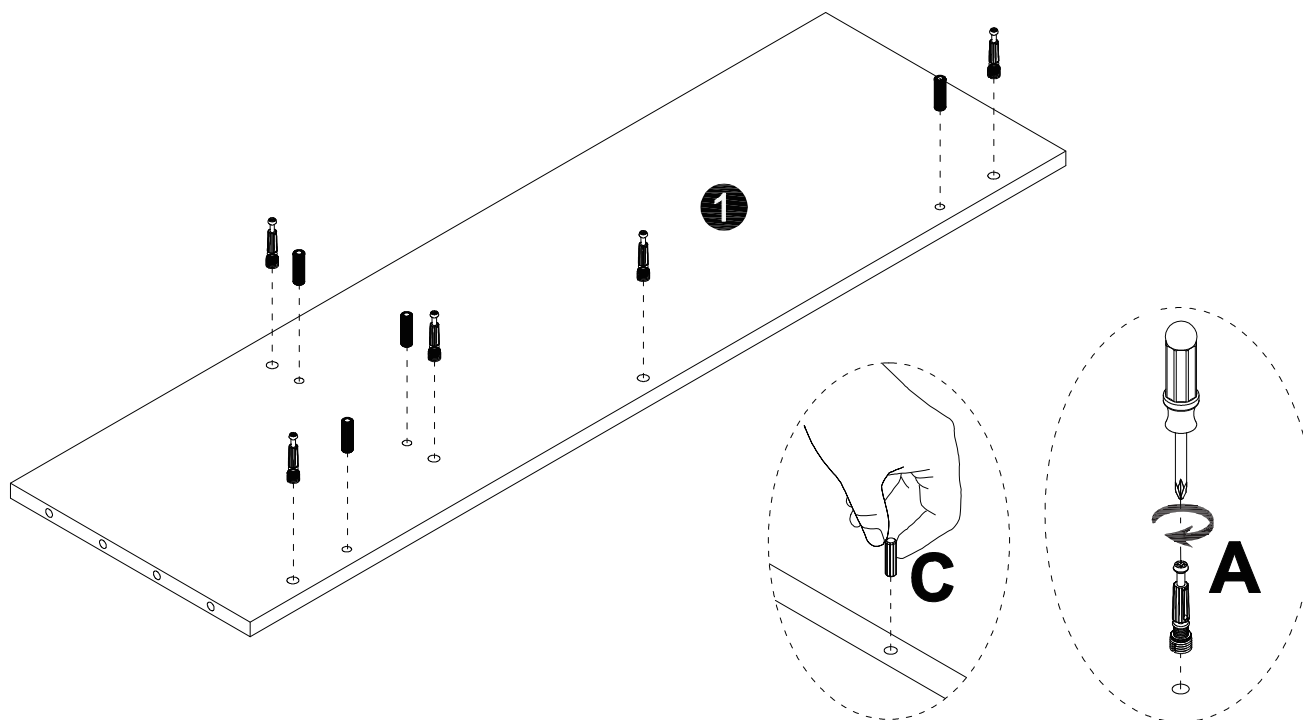



18

B

Ø12x10mm
3 pcs



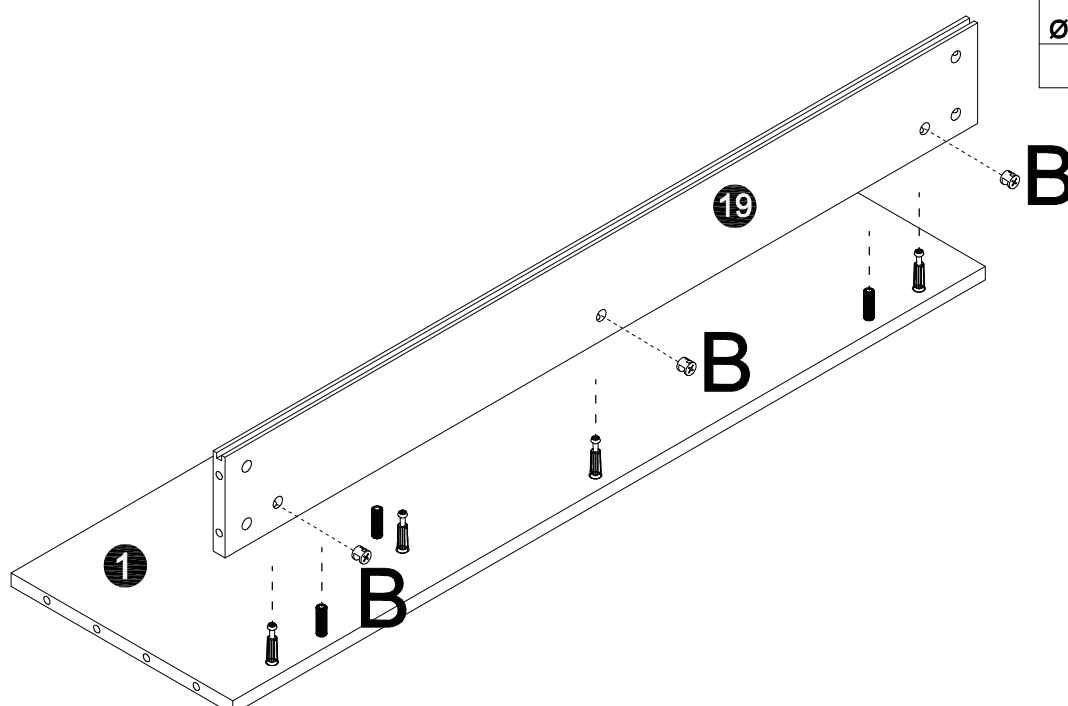
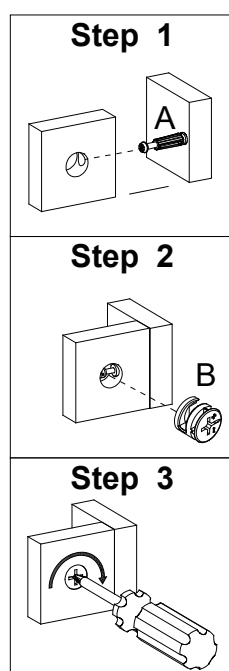


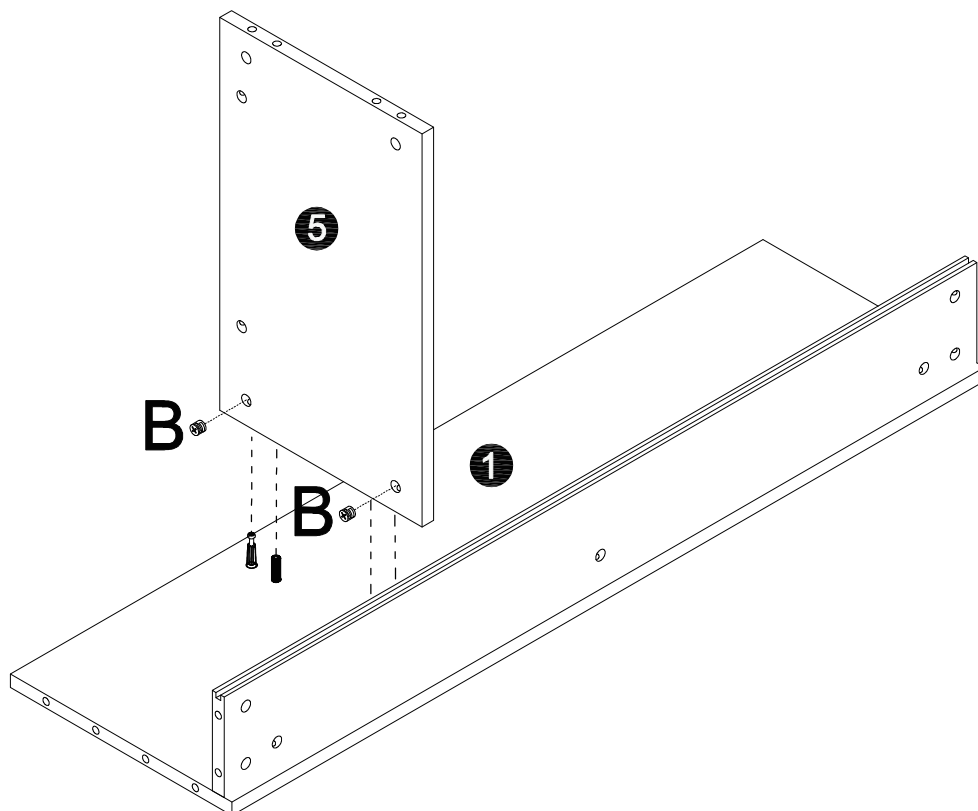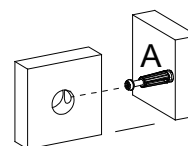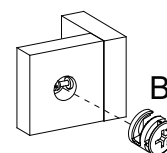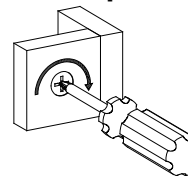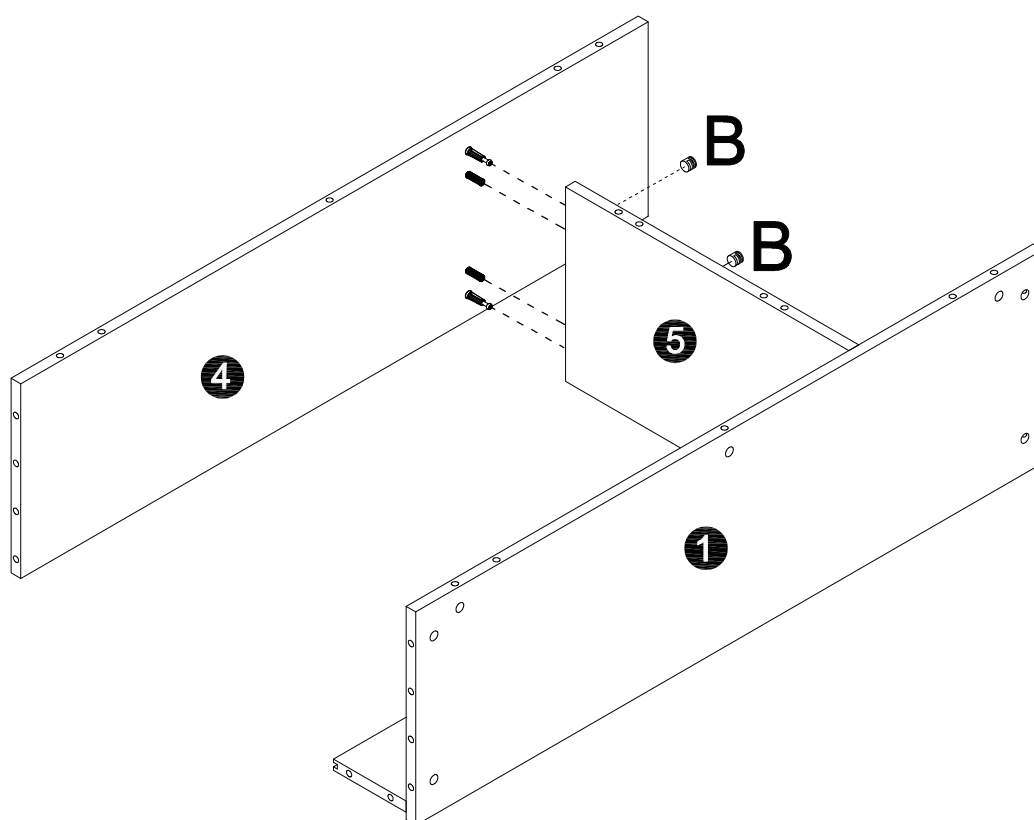19**B** $\varnothing 12 \times 10 \text{ mm}$ **2 pcs****Step 1****Step 2****Step 3****20****B** $\varnothing 12 \times 10 \text{ mm}$ **2 pcs**

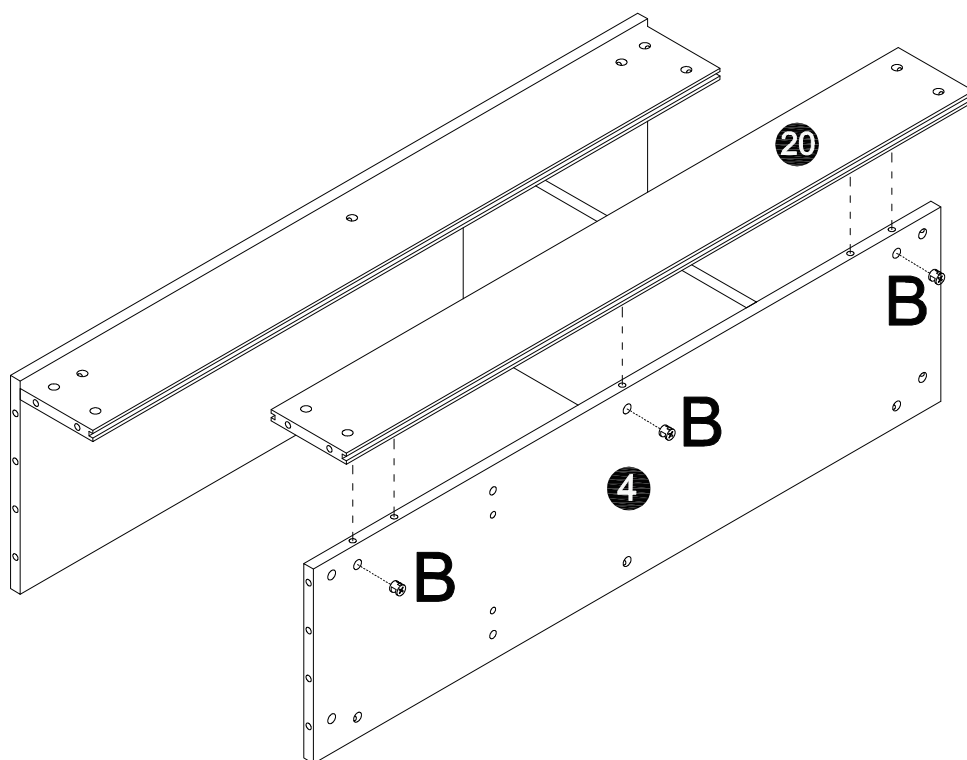
21



B


Ø12x10mm
3 pcs

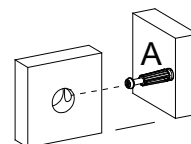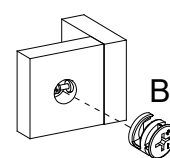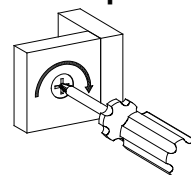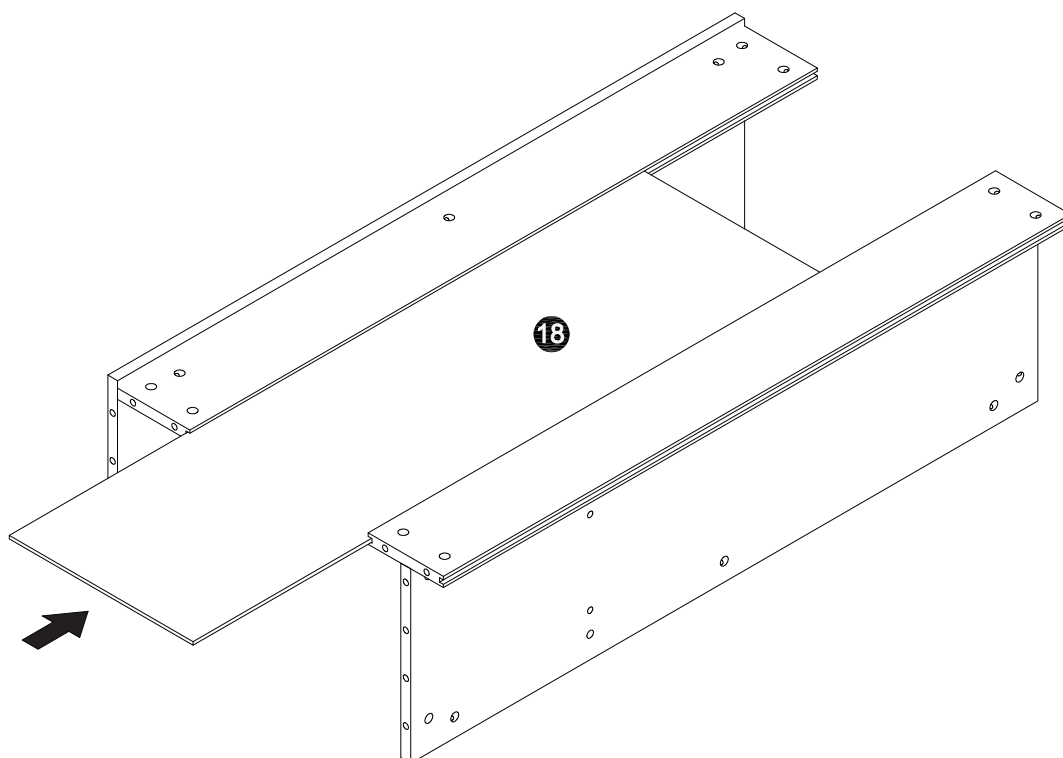Step 1**Step 2****Step 3****22**



23

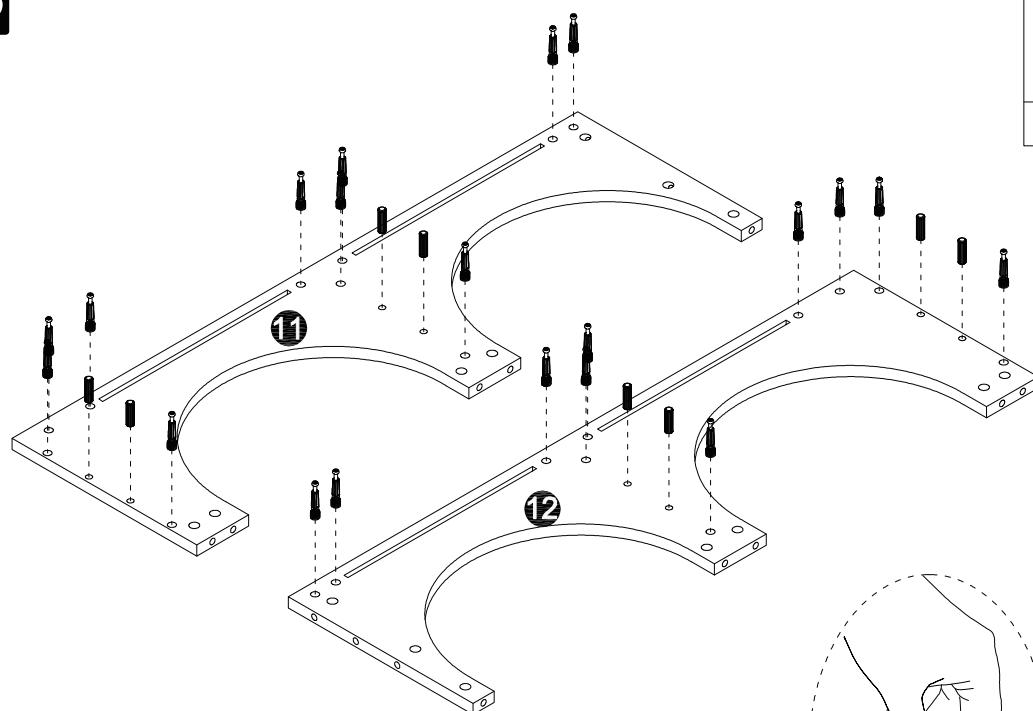

C	A
	
Ø8x30mm 8 pcs	M6x35mm 20 pcs

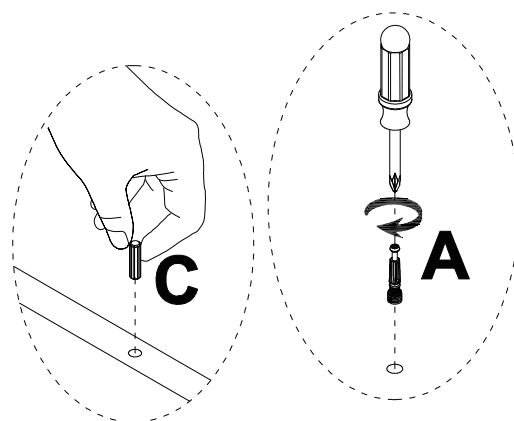



24

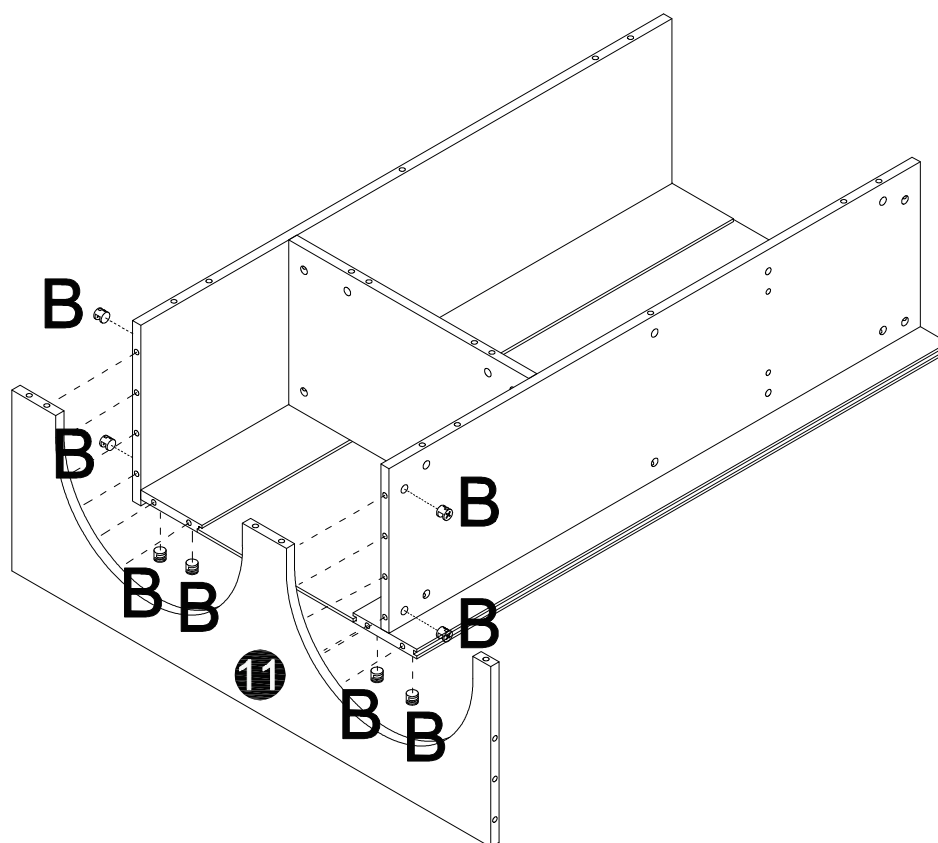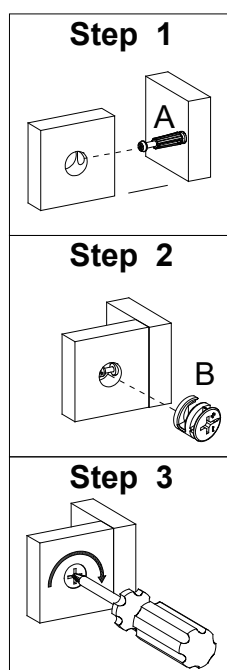


B

Ø12x10mm 8 pcs


25

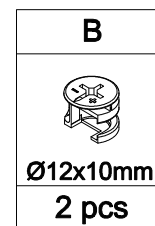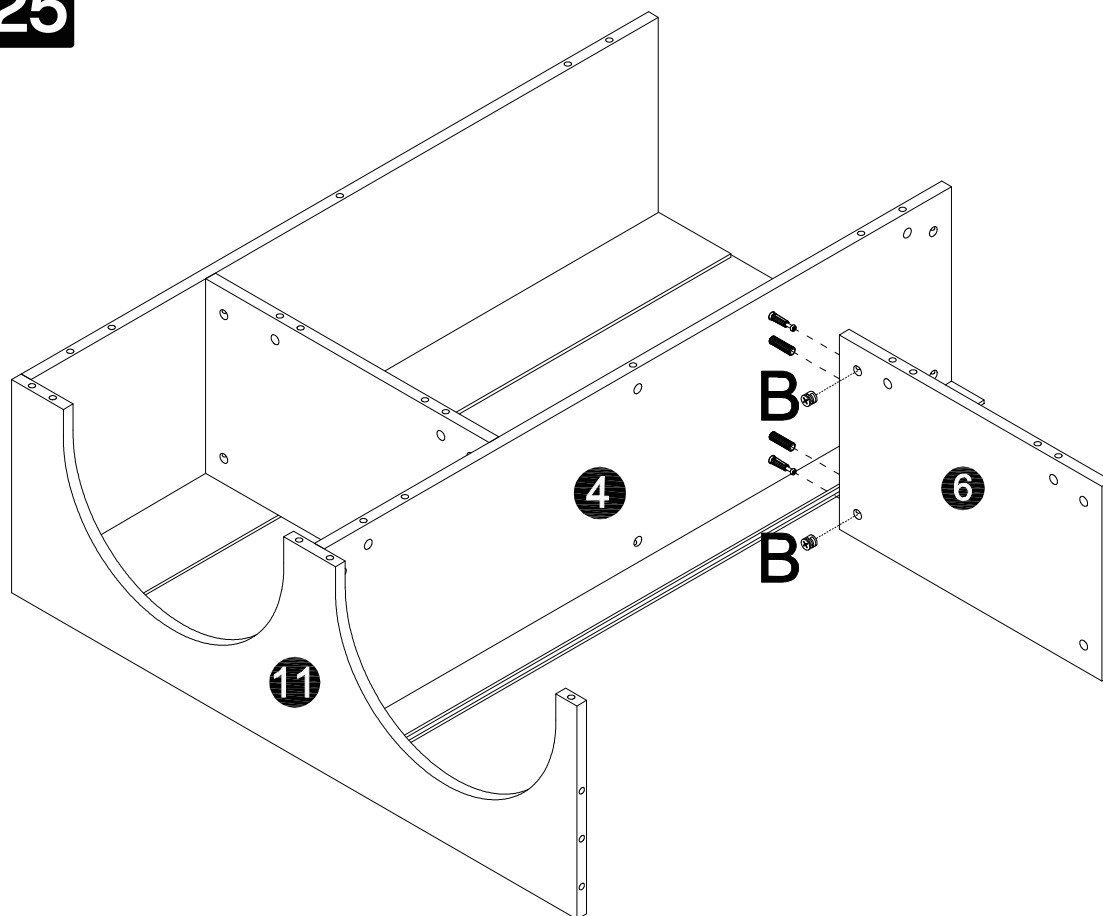


Step 1

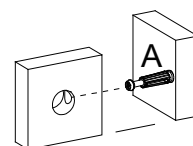



Step 2

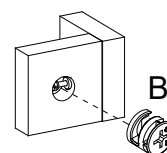


Step 3

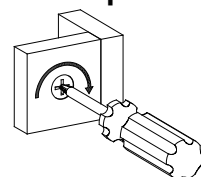

26

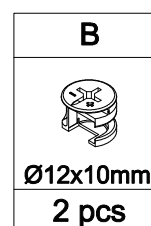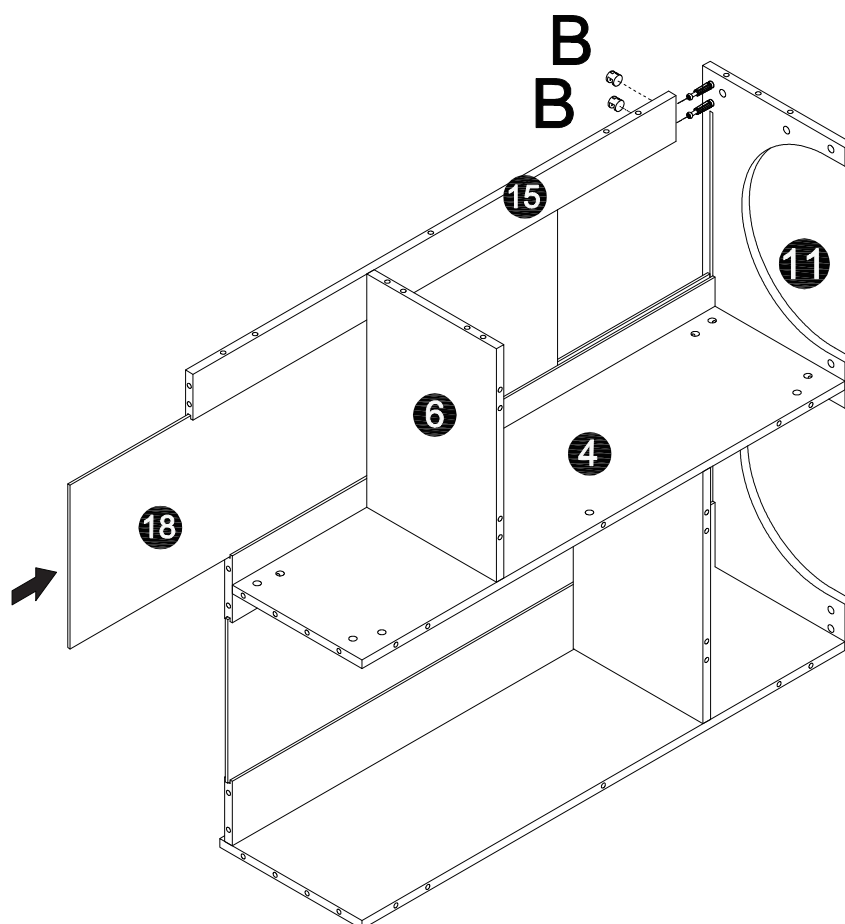


27

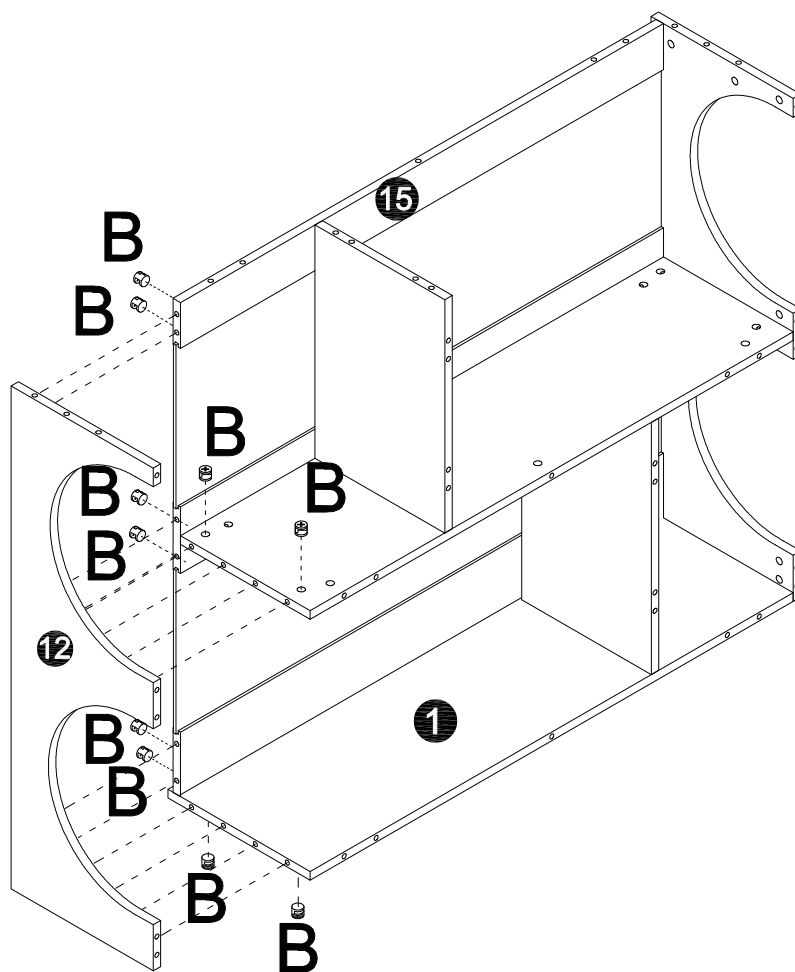

B

Ø12x10mm
10 pcs


28


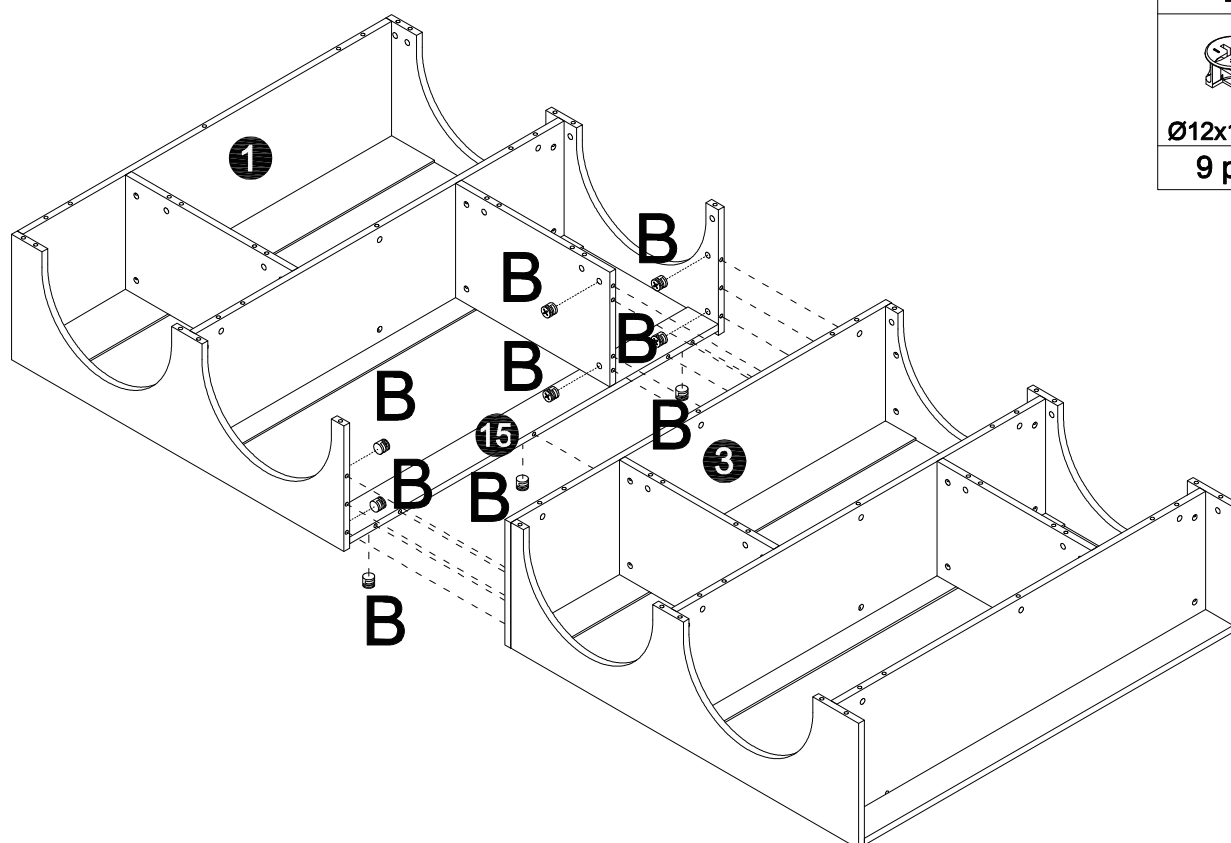




B

Ø12x10mm
9 pcs


29

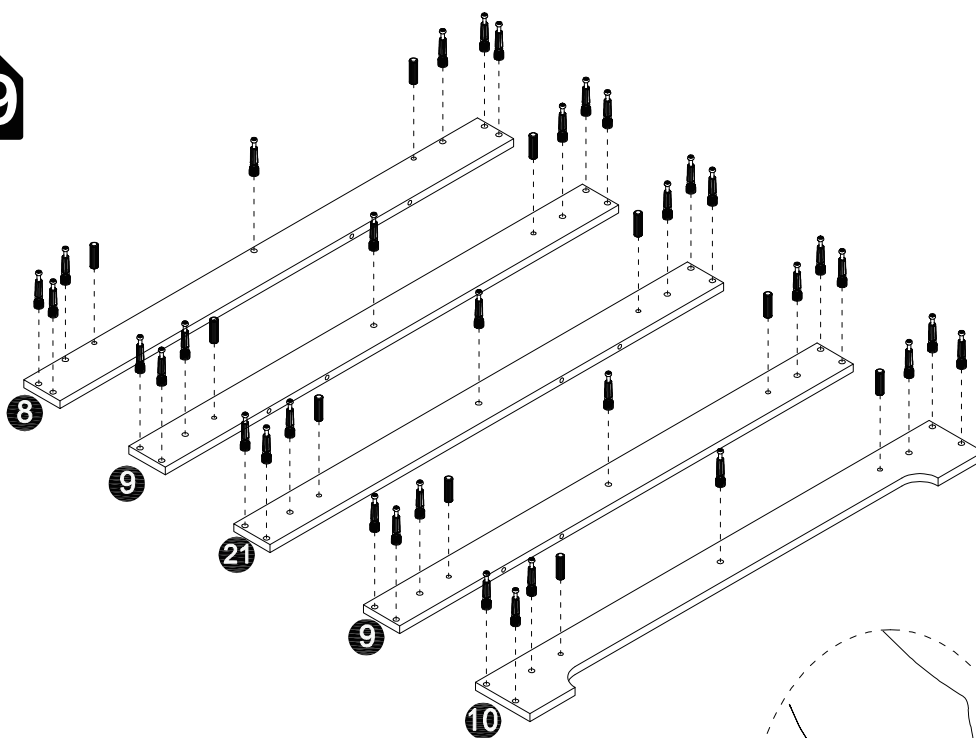


C	A
	
Ø8x30mm 10 pcs	M6x35mm 35 pcs

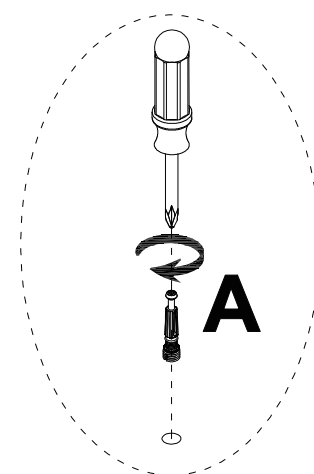
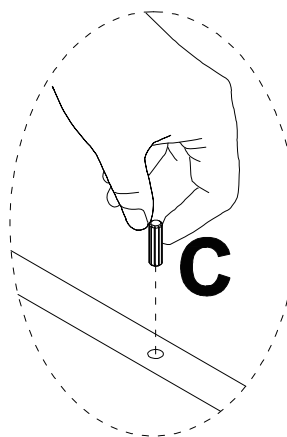


30

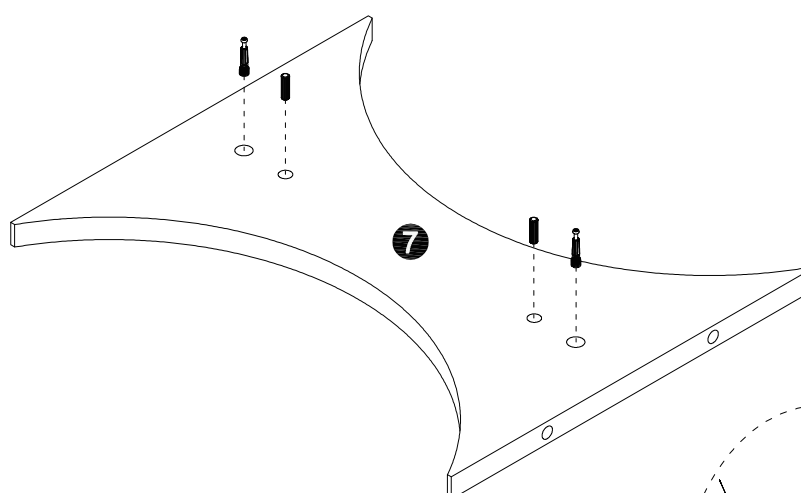


C	A
	
Ø8x30mm 8 pcs	M6x35mm 8 pcs



X4

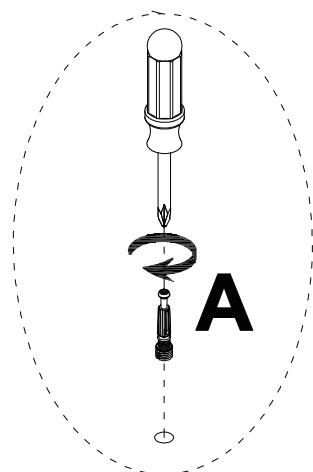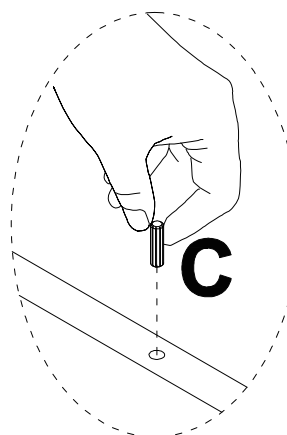


31

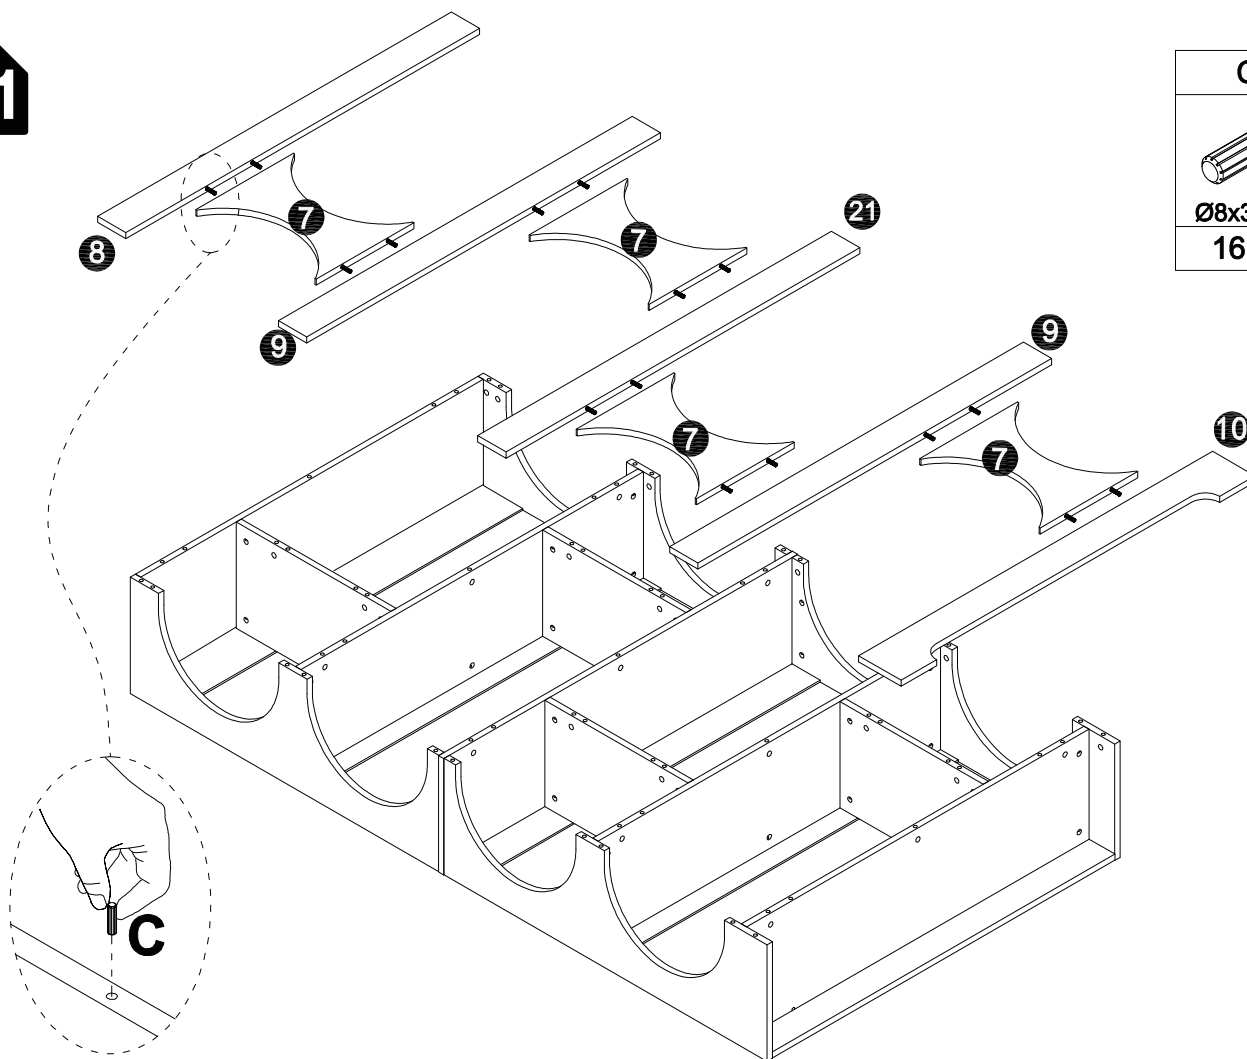


32

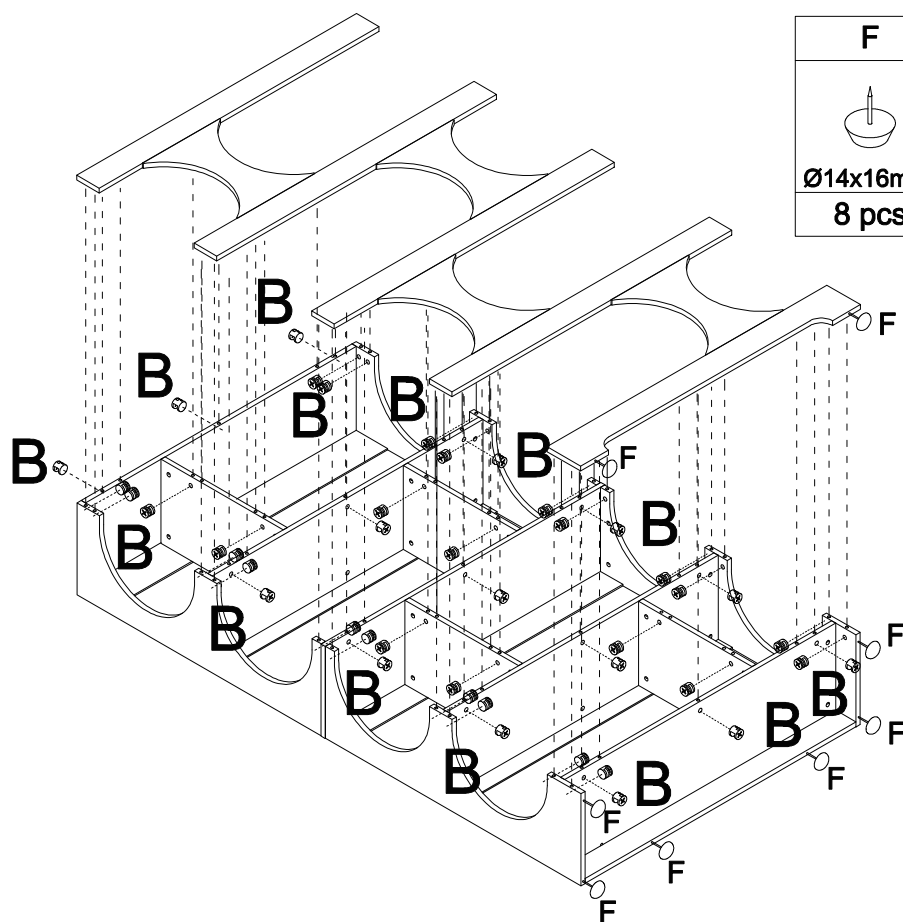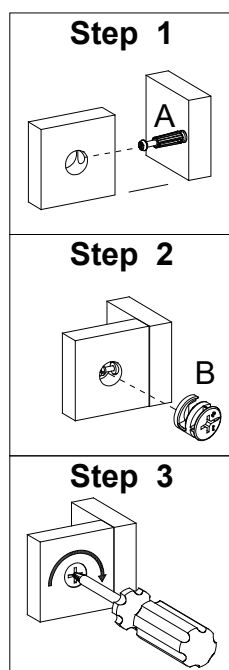


33

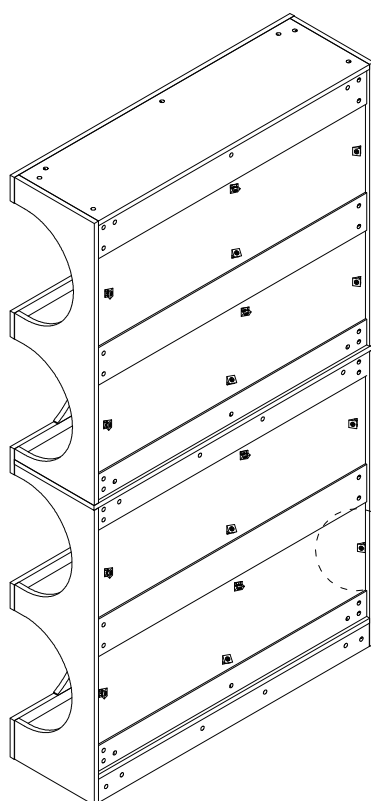

D	E
	
Ø3.5x14mm 16 pcs	16 pcs

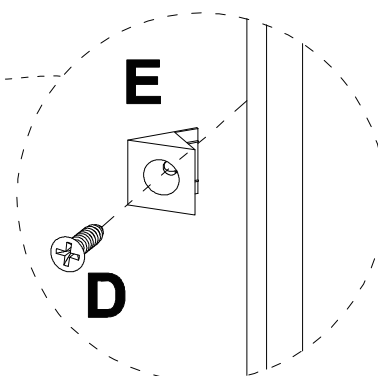






34

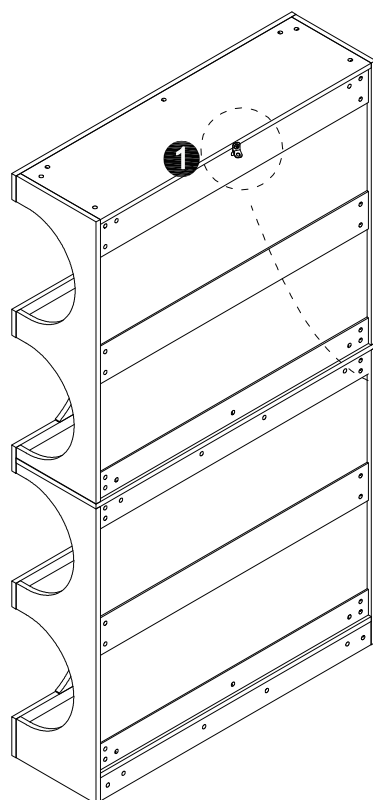

G

1 pc

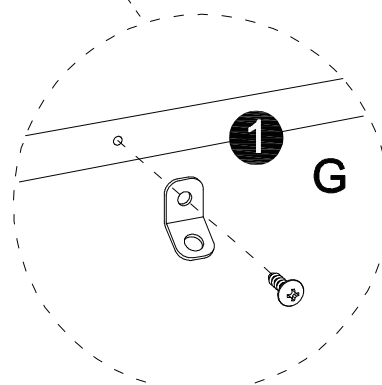

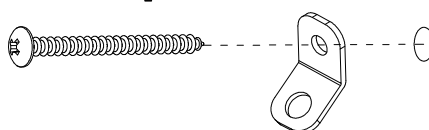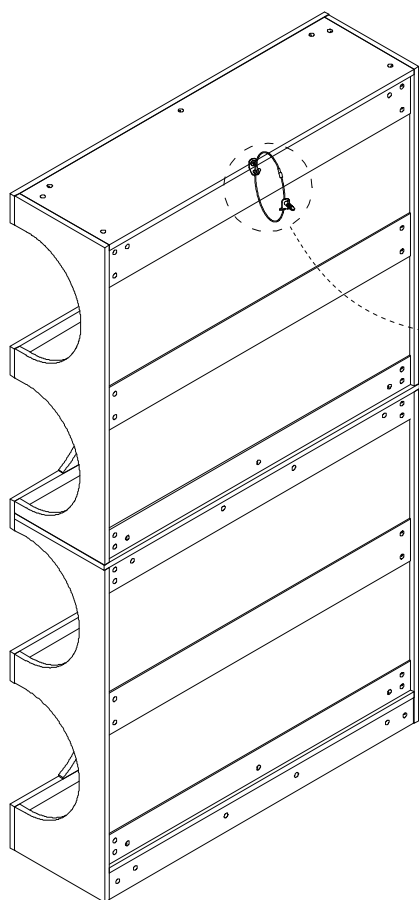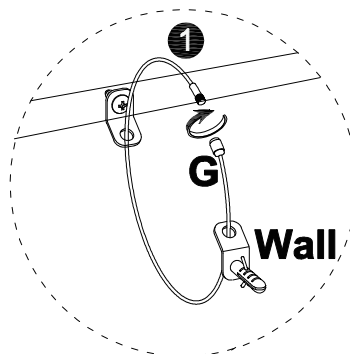35**Wall****Step1****Step2****Step3**

Thank you for your support!

