
## How to Measure Your Window for Cordless Fabric Roman Shades

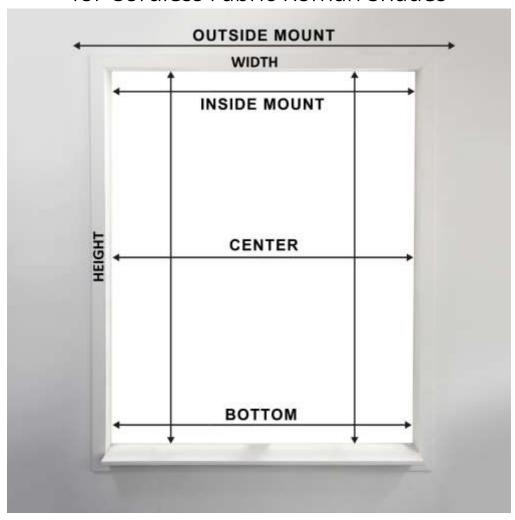

## Inside Mount (Inside your window recess)

- 1. <u>Width:</u> To find the width, measure the top, middle and bottom within your window recess. Use the narrowest width as your window-width.
- 2. <u>Height/Length:</u> To find the height, measure exact window-recess height at left, middle, and right side. Use the longest height as your window-height.
- 3. <u>Depth</u>: Minimum 1 inch required. If you want a flush mount a minimum of 1-3/4 inches is required.
- 4. **ORDERING**: Choose a width that is 1/4 inch or smaller than the window-width from above. Choose a height that is the same or longer than your window-height.
- \*Ordering a product that is more than 1 inch shorter in width than your window-width will create a large light gap, so think about what will satisfy your need.

## Outside Mount (Outside your window recess, on framework or the surrounding wall)

- 1. Determine where the blind is to be placed. You will need a minimum of 3/4 inch of flat mounting space above your window to accommodate the mounting hardware.
- 2. <u>Width:</u> Choose a product-width that is the same or greater than the width of your window recess. We recommend adding 2 to 6 inches extra to the measured-width to maximize light control and privacy.
- 3. <u>Height/Length:</u> Measure exact measured-height from the top of the proposed headrail location to the base of the sill. If there is no sill, measure where you would like the blind to drop. Add 2 to 6 inches to the height for optimum light control and privacy.
- 4. **ORDERING:** Choose a width that is the same or wider than the product-width from above. Choose a height that is the same or longer than your measured-height.

## All of our products ship exactly as ordered. There are no deductions.

Example: If you order a 24"Width x 60"Height/Length, then the product that you'll receive will be 24"Width x 60"Height/Length.