


## ASSEMBLY INSTRUCTIONS

BOX 05

- ASSEMBLY INSTRUCTIONS:**
- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
  - 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
  - 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
  - 4- DO NOT USE ABRASIVES SOLUTIONS;

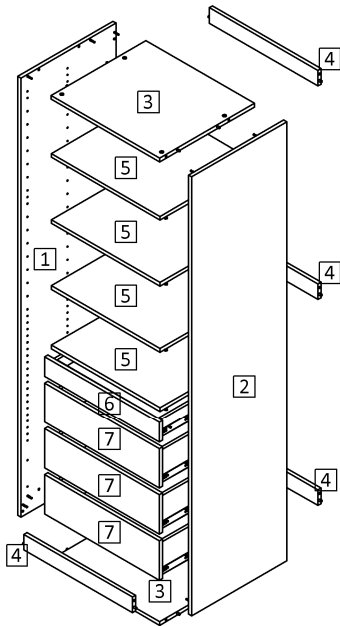



PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	4	SHELVES
6	1	SMALL DRAWER
7	3	REGULAR DRAWER






CABINET HARDWARES	16	16	16
	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

### CABINET ASSEMBLY

#### STEP 01 PREPARATION OF THE SIDE PANELS



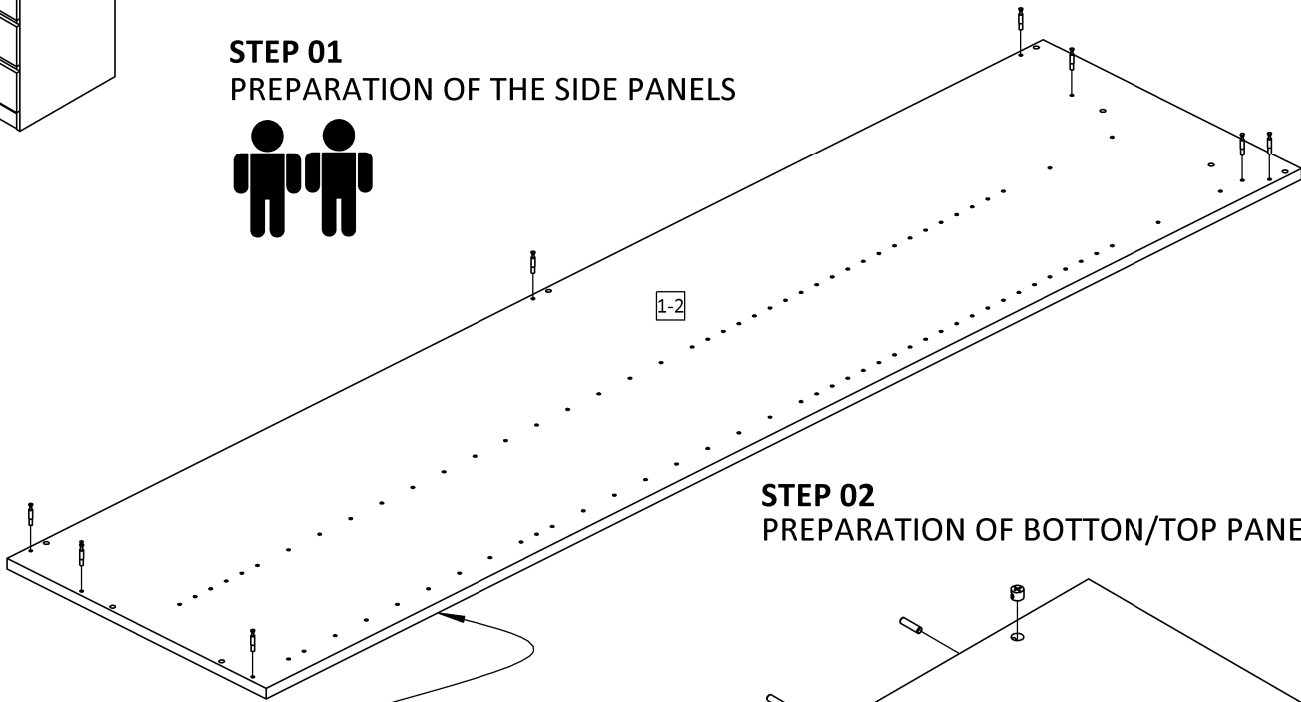
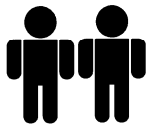


#### STEP 02 PREPARATION OF BOTTOM/TOP PANELS

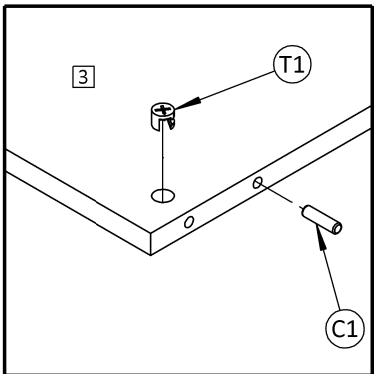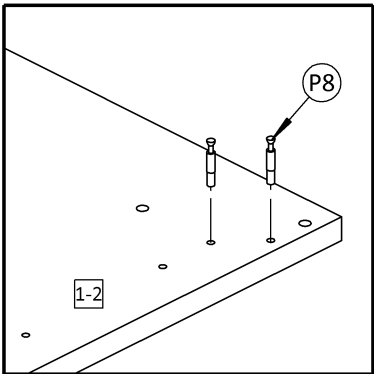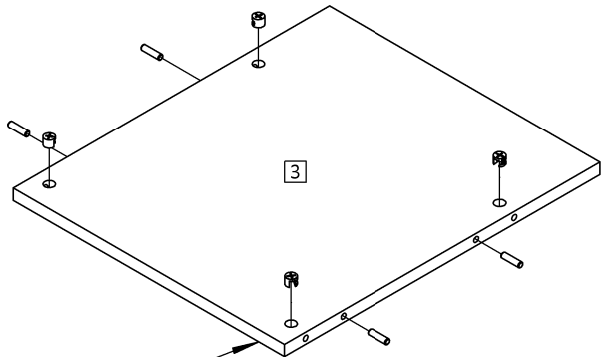

**ASSEMBLY INSTRUCTIONS**

BOX 05

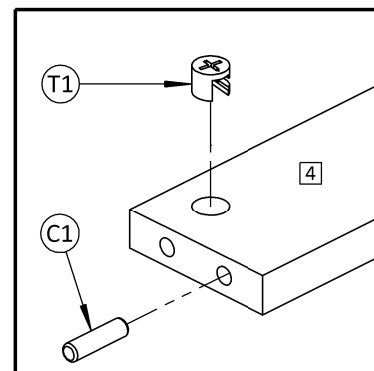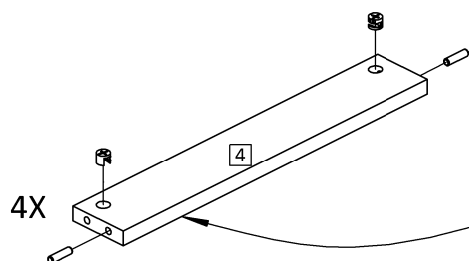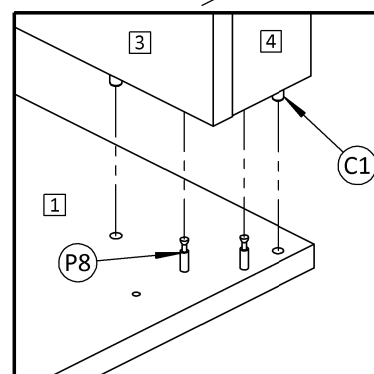
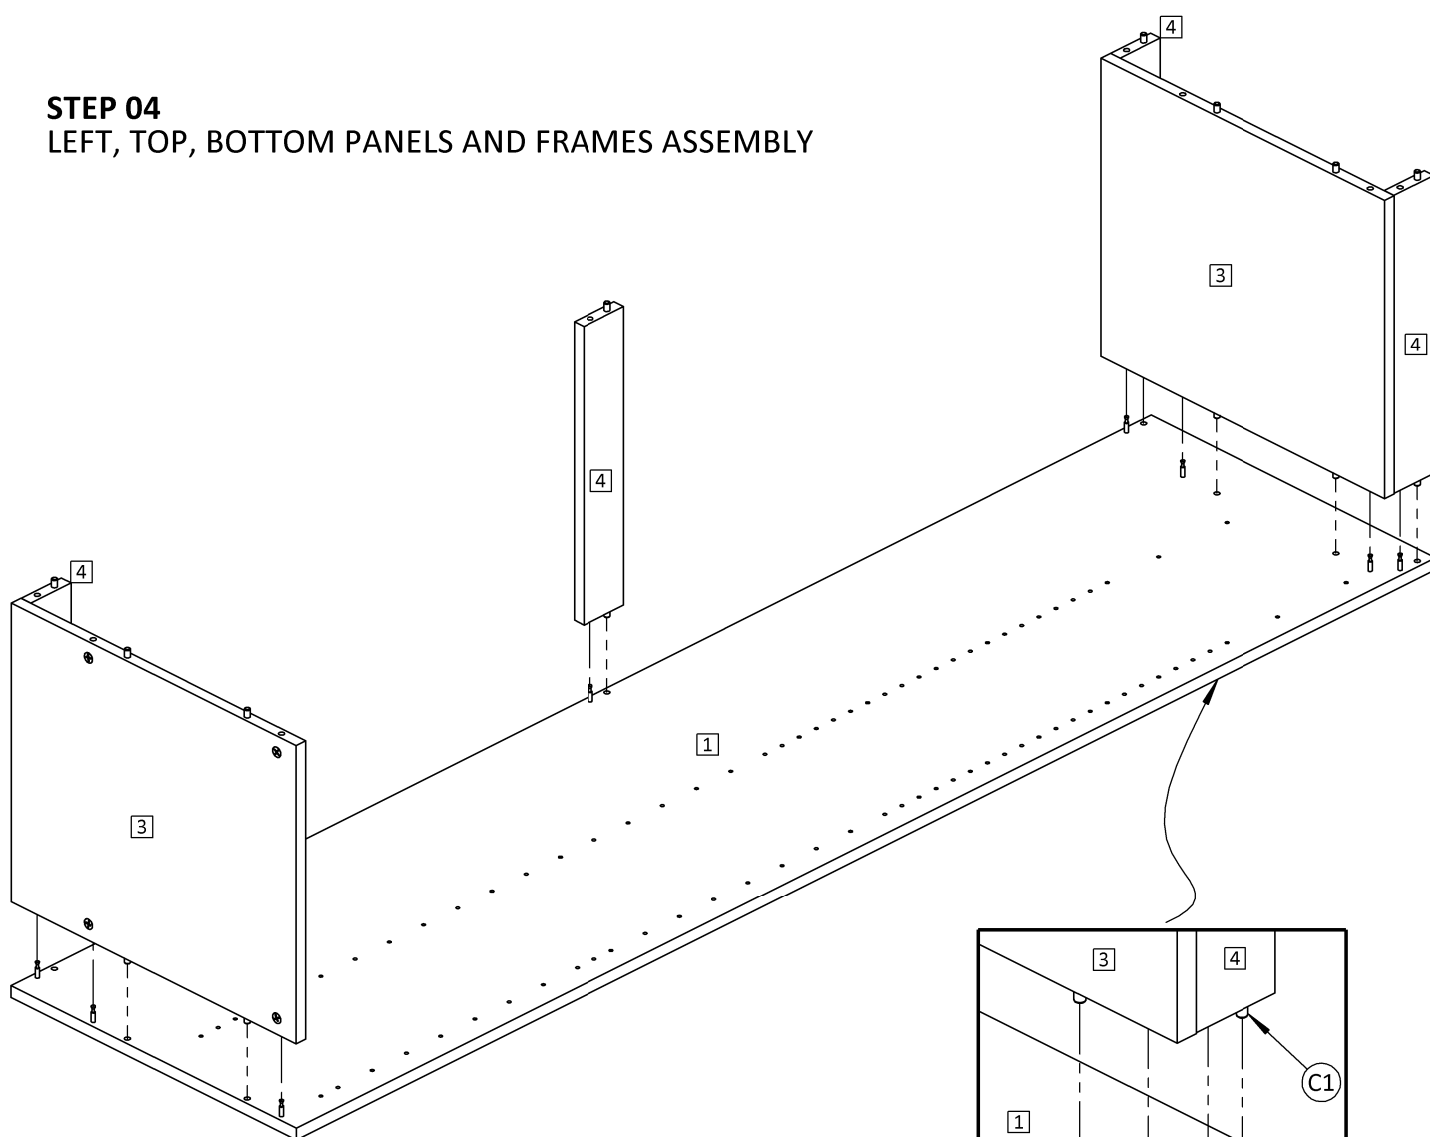
**STEP 03**  
PREPARATION OF THE FRAMES**STEP 04**  
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY



# ASSEMBLY INSTRUCTIONS



BOX 05

## STEP 05 RIGHT SIDE PANEL ASSEMBLY

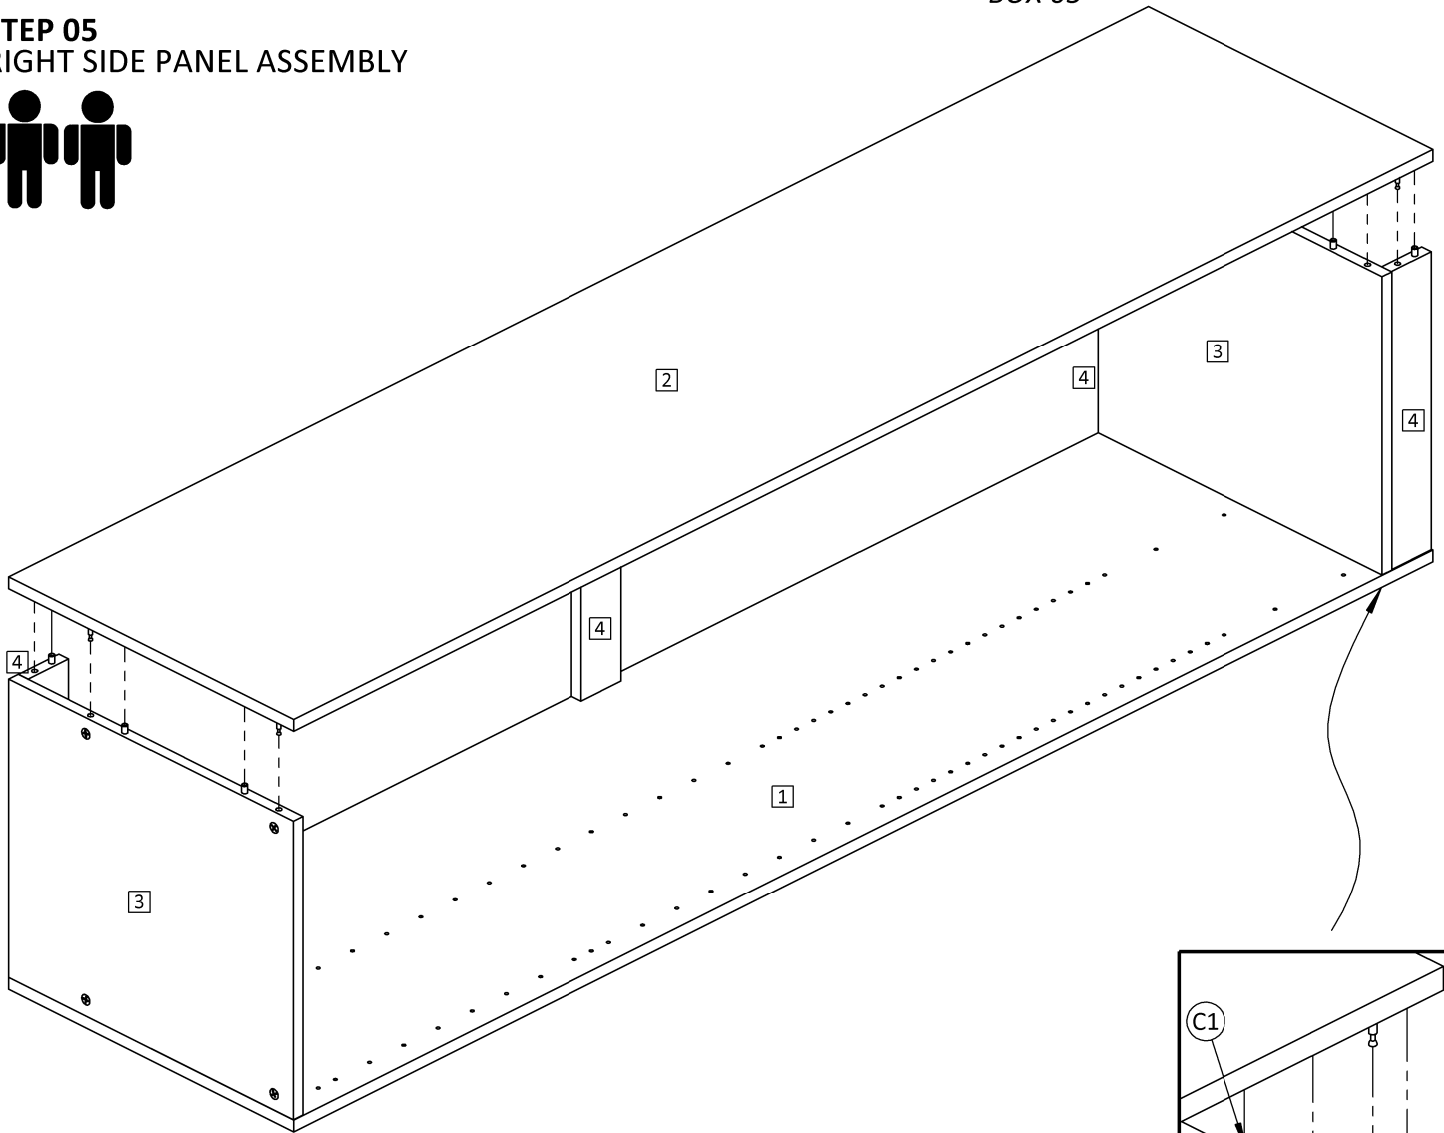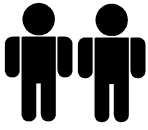

## DRAWERS ASSEMBLY


PART NUMBER 6,7 - REGULAR AND SMALL DRAWER

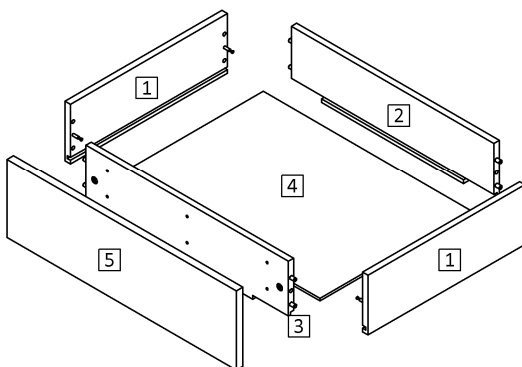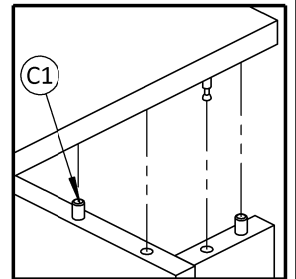

DRAWERS HARDWARES	18	06	12	12	24
	SCREW 9/64 X 1 1/4	SLIDER PIN	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

## STEP 06 PREPARATION OF DRAWER SIDE PANNELS

PART LIST		
PART NUMBER	QTY	DESCRIPTION:
1	2	DRAWER SIDE PANEL
2	1	DRAWER BACK PANEL
3	1	DRAWER INSIDE FRONT
4	1	DRAWER BOTTOM PANEL
5	1	DRAWER FRONT

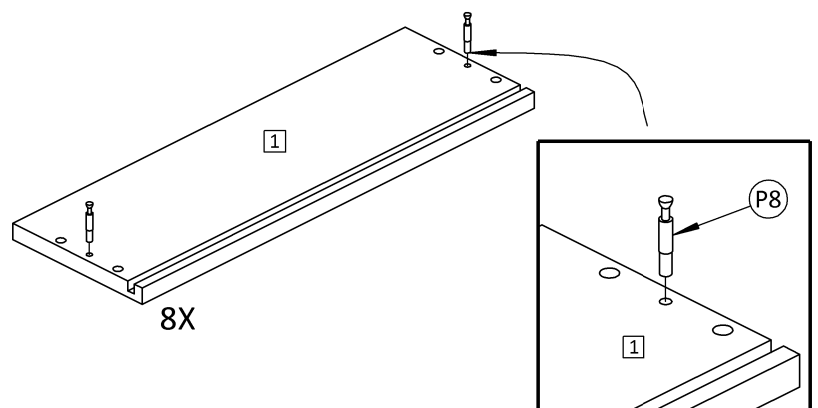


**STEP 07**


PREPARATION OF DRAWER BACK PANNEL  
AND DRAWER INSIDE FRONT

**ASSEMBLY INSTRUCTIONS**


BOX 05

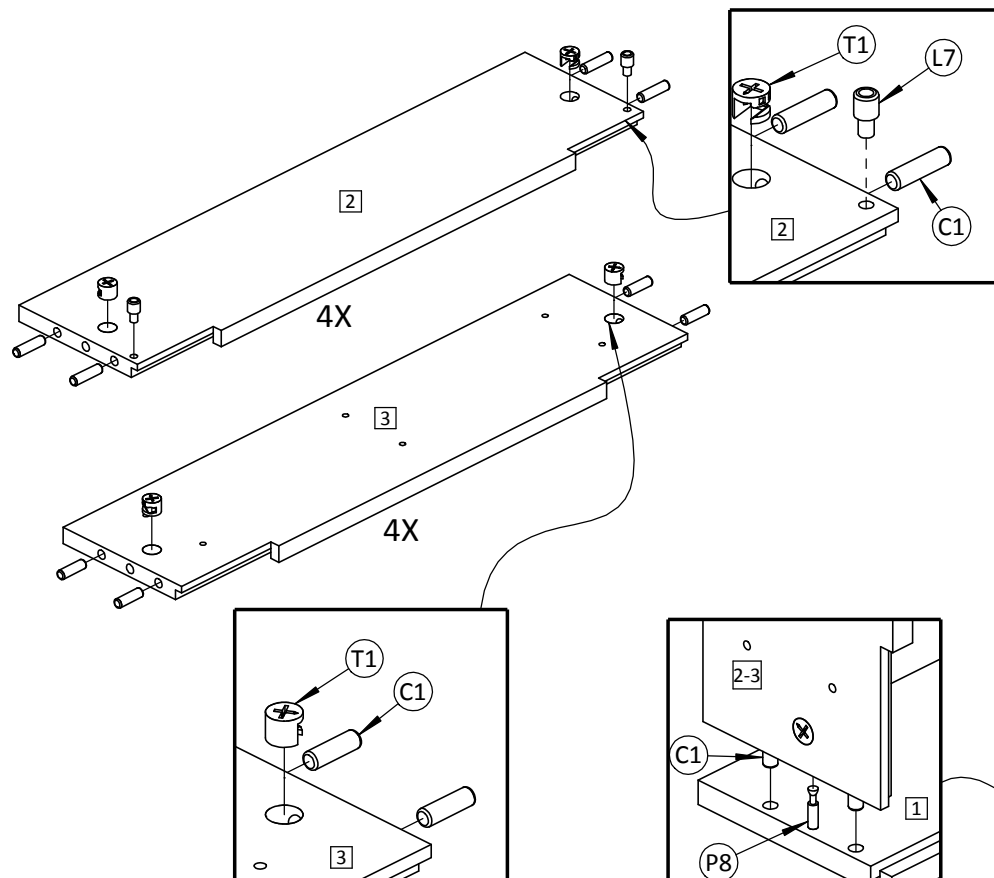**STEP 08**


DRAWER ASSEMBLY


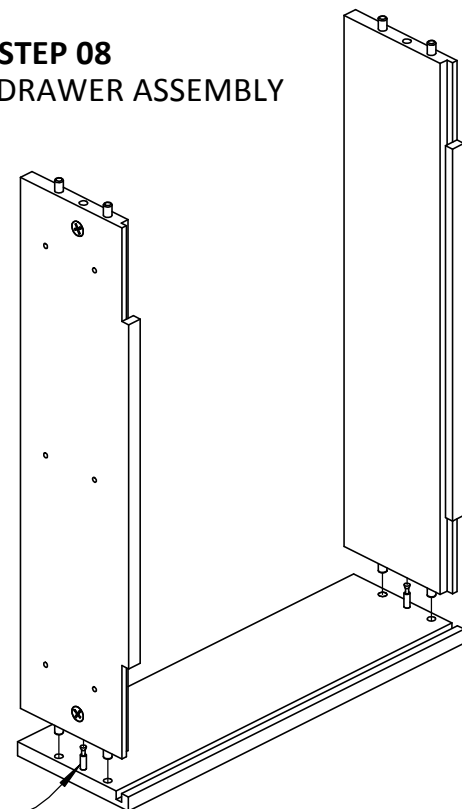
**STEP 09**

BACK PANNEL ASSEMBLY


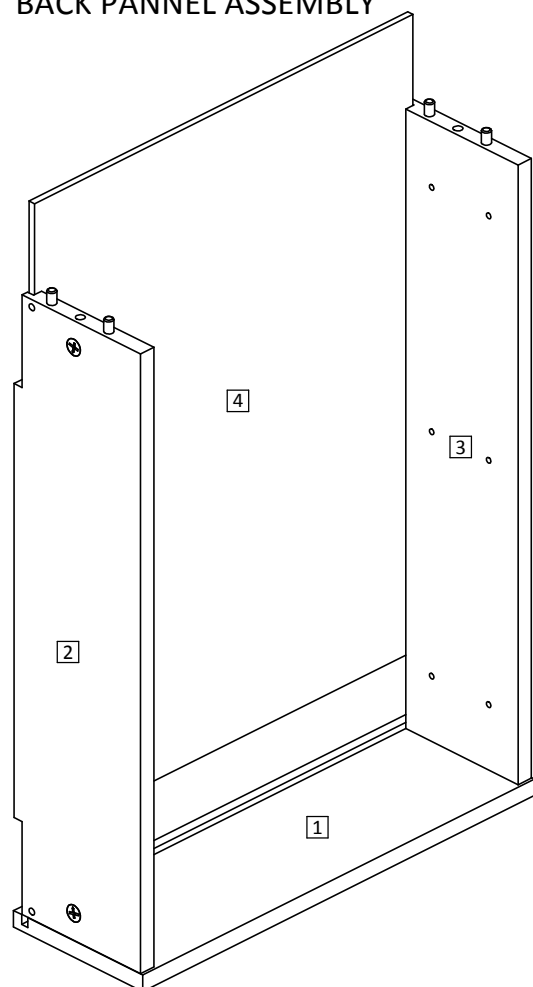
**STEP 10**

RIGHT SIDE PANNEL ASSEMBLY

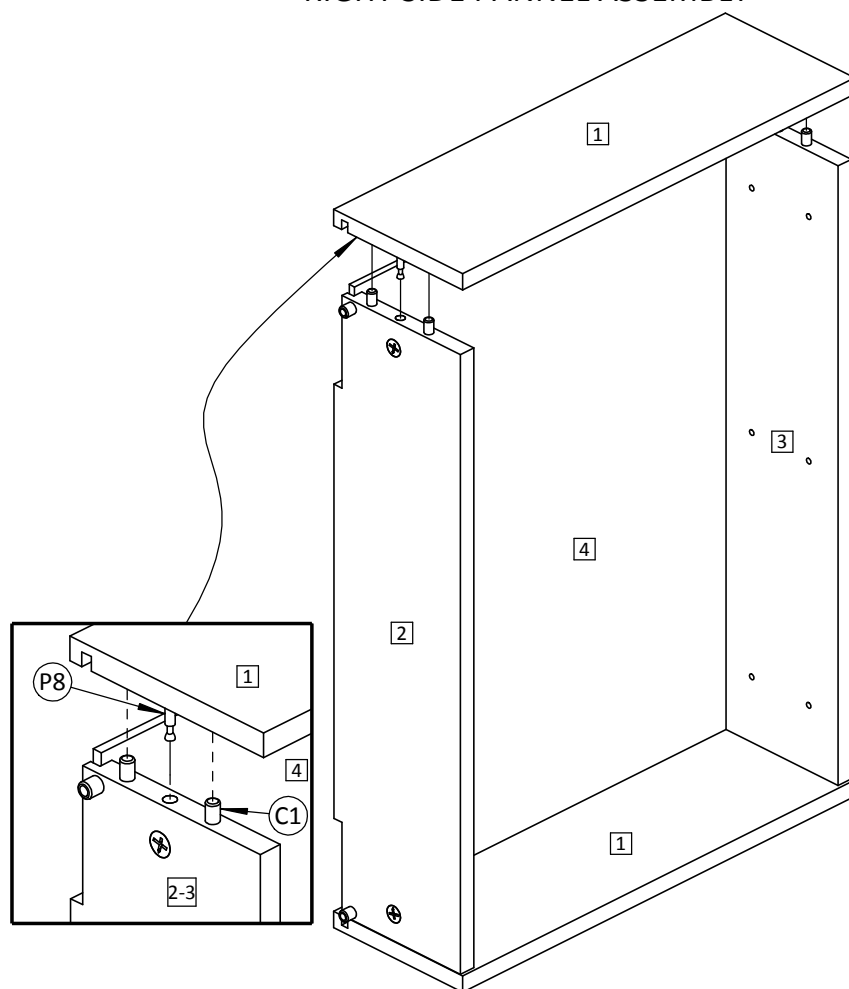

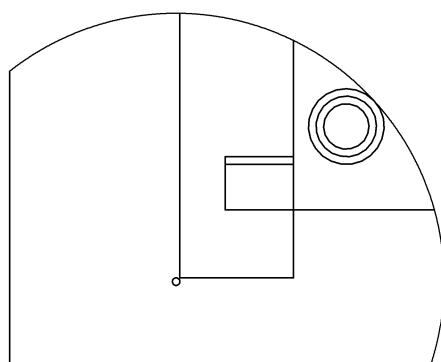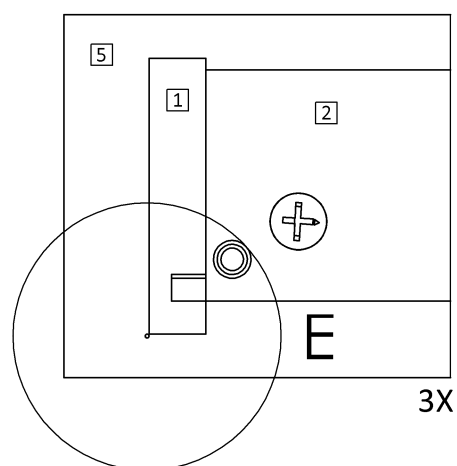**STEP 11**  
ASSEMBLING FRONT POSITION**DRAWER BACK VIEW**

DETALHE E

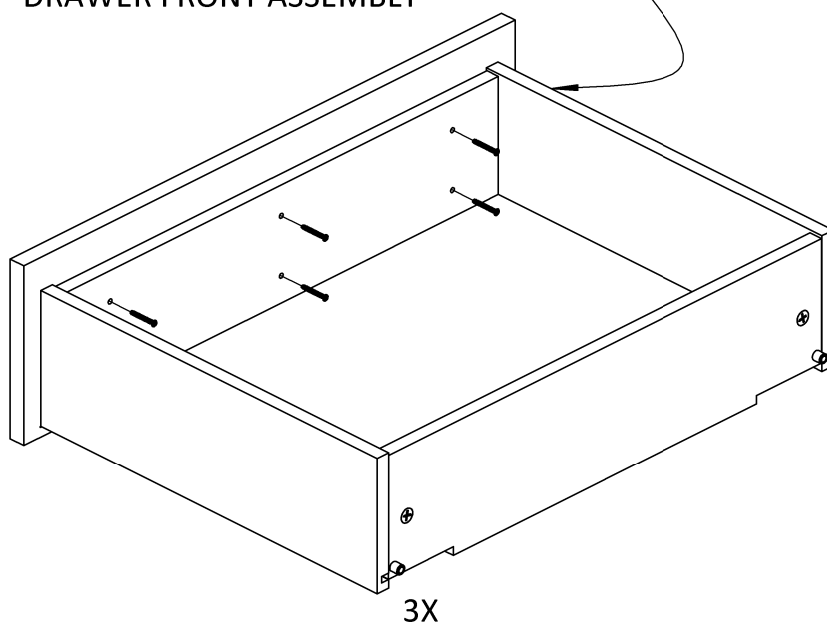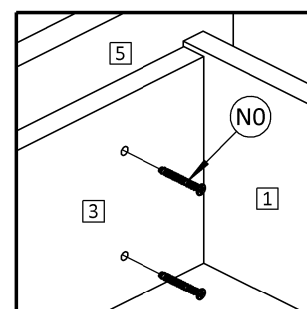**ASSEMBLY INSTRUCTIONS**  
BOX 05**STEP 12**  
DRAWER FRONT ASSEMBLY

# STEP 13 FIXING THE CABINET ON THE WALL

## FIXING THE CABINET

Rev.01



REF.: MCL013




DRILL THE WALL  
USING A DRILLER  
IN ORDER TO  
INSERT THE PLUG



## ASSEMBLY INSTRUCTIONS BOX 05




IT IS REQUIRED TO FIX  
THE CABINETS ON THE WALL  
RISK OF FALL!



FIXING CABINET HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

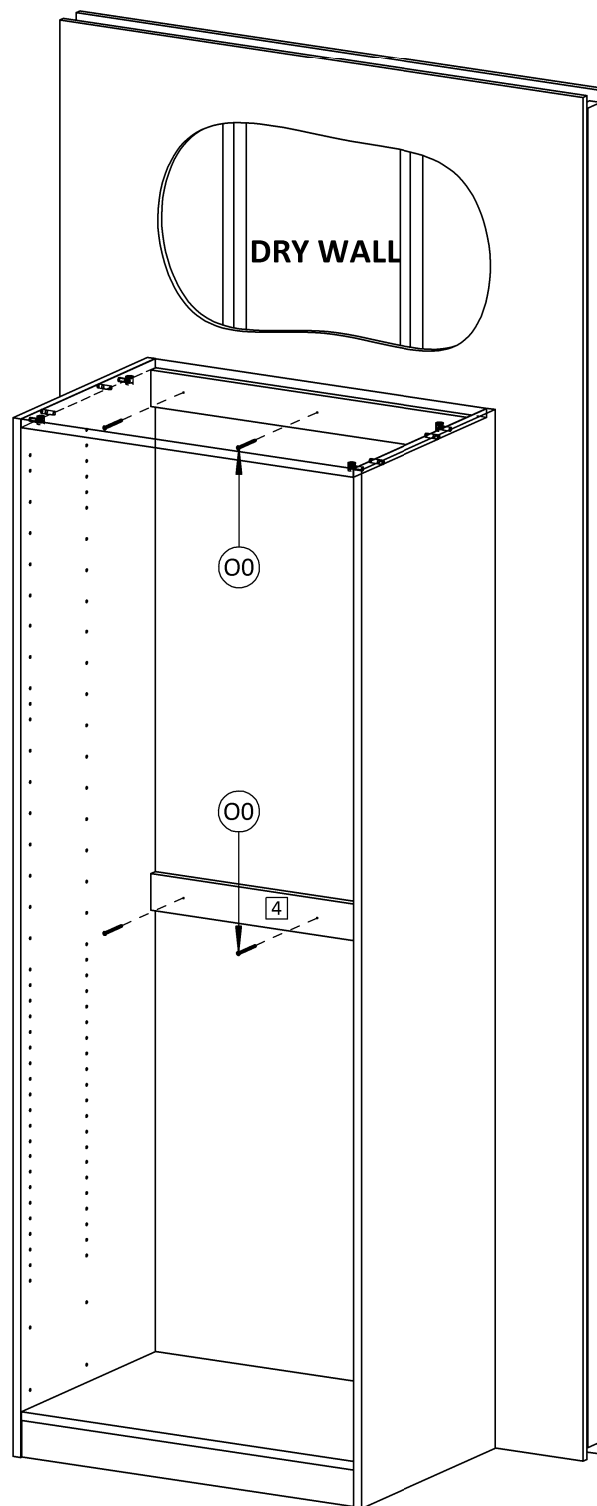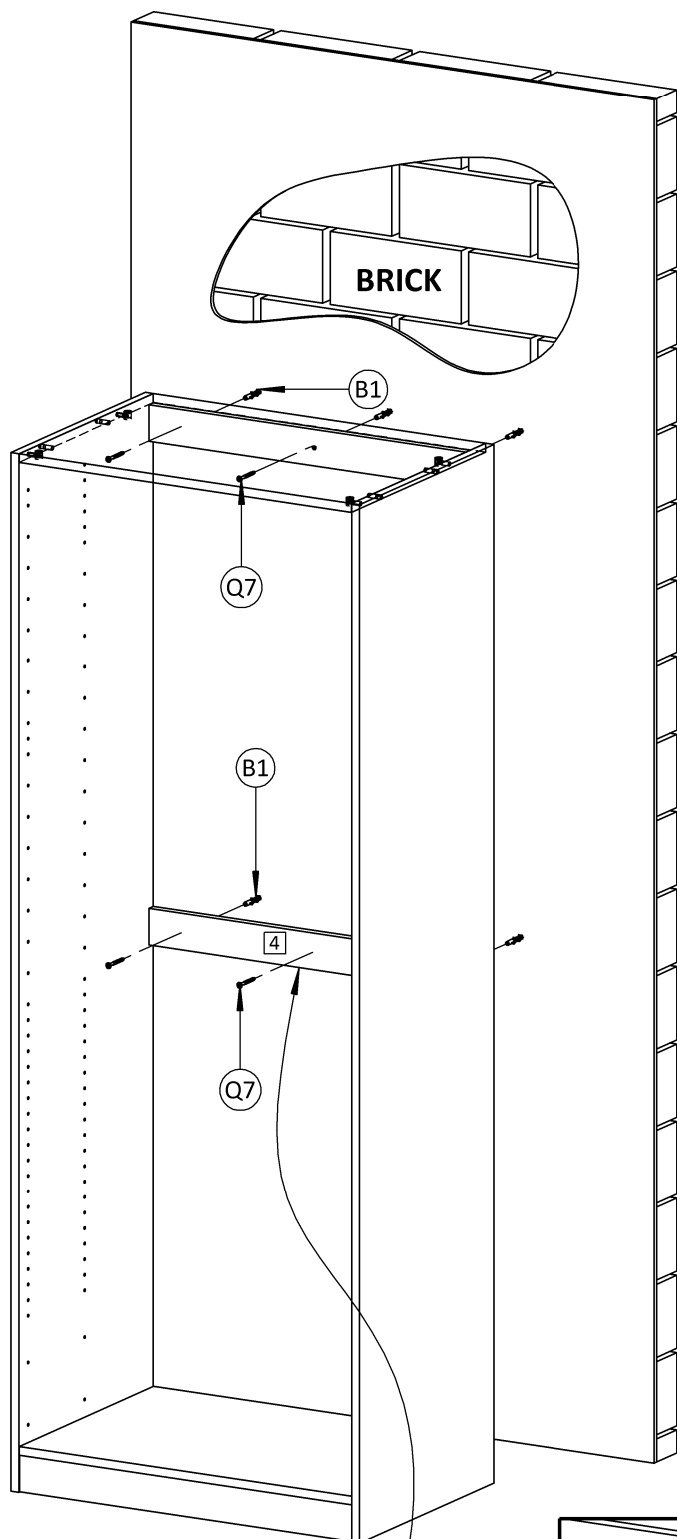

SCREW IN THE CENTER  
OF THE FRAME

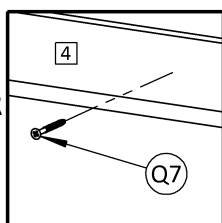

THE CABINET MUST ALWAYS BE  
SUPPORTED ON THE GROUND






# STEP 14

## JOINING THE CABINETS

# ASSEMBLY INSTRUCTIONS

## BOX 05

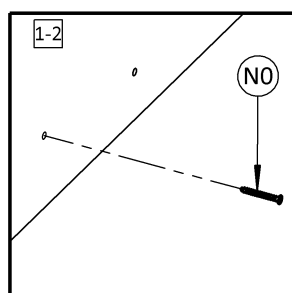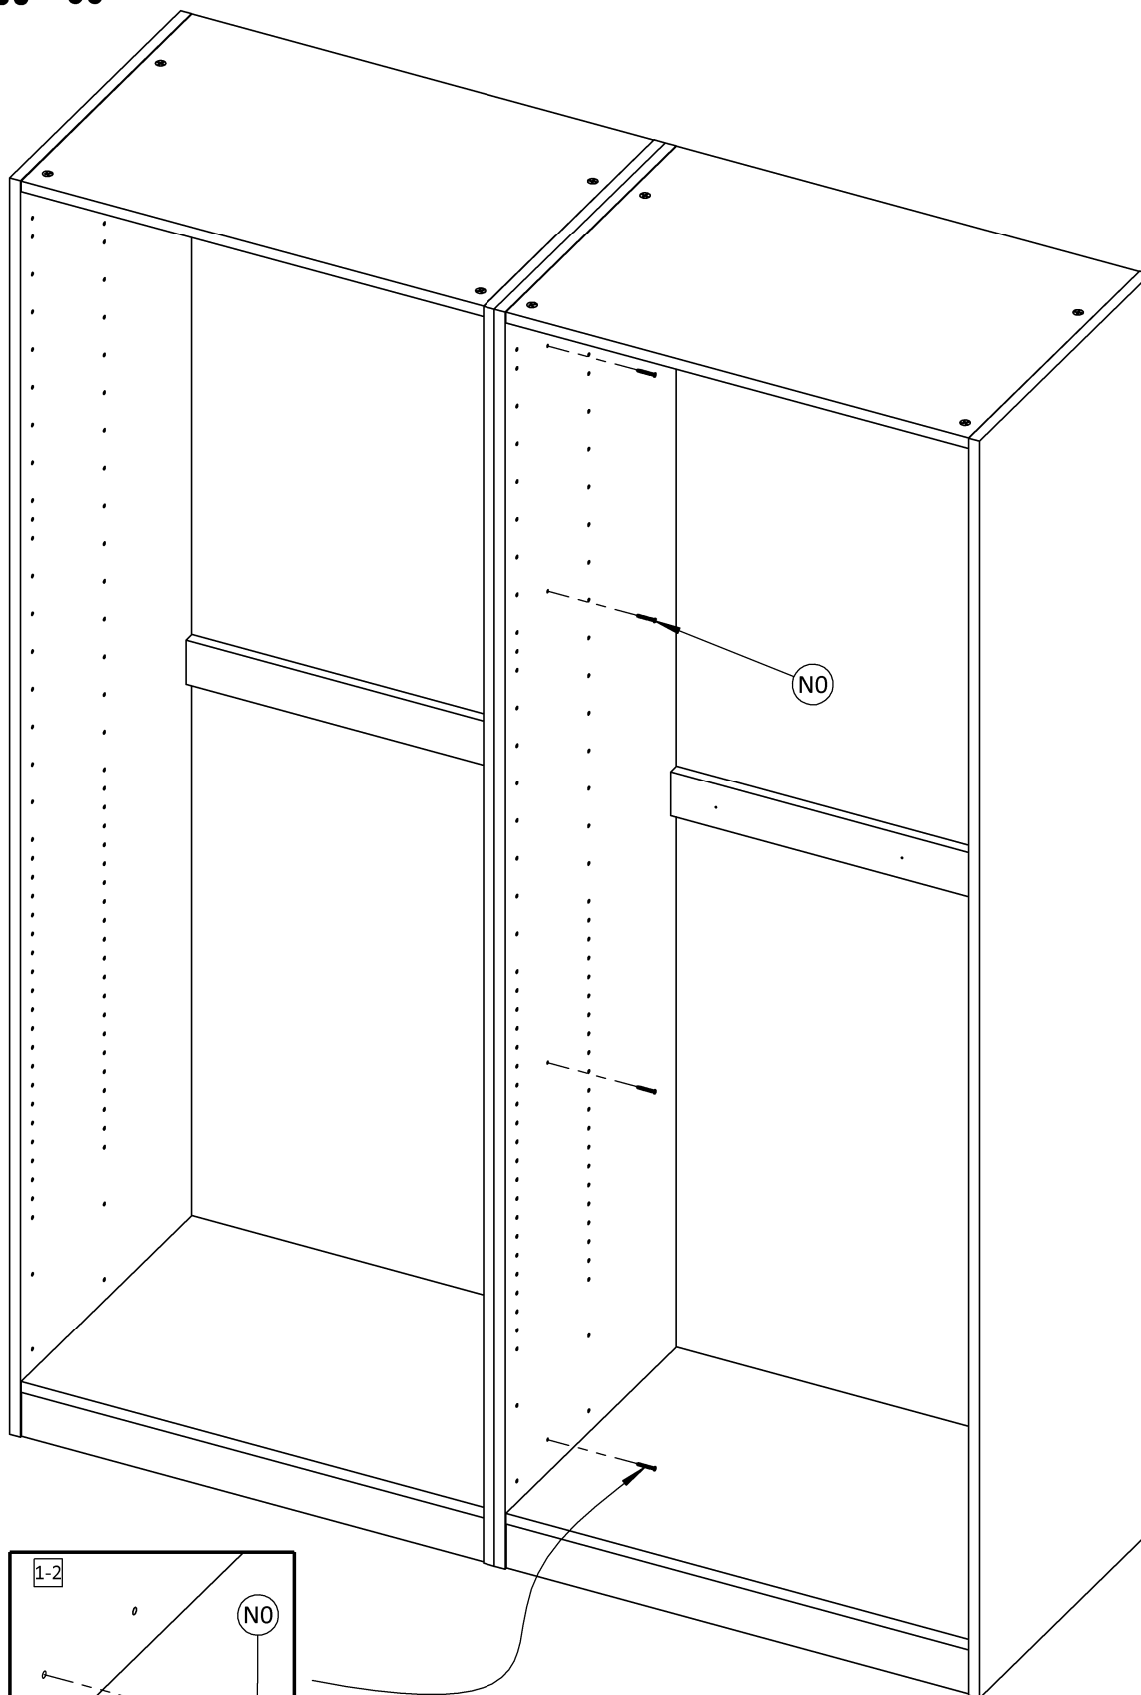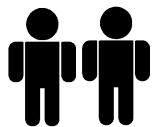






# ASSEMBLY INSTRUCTIONS

BOX 05

## STEP 15



FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

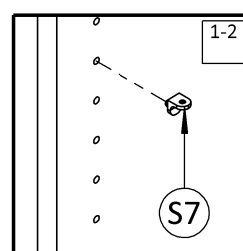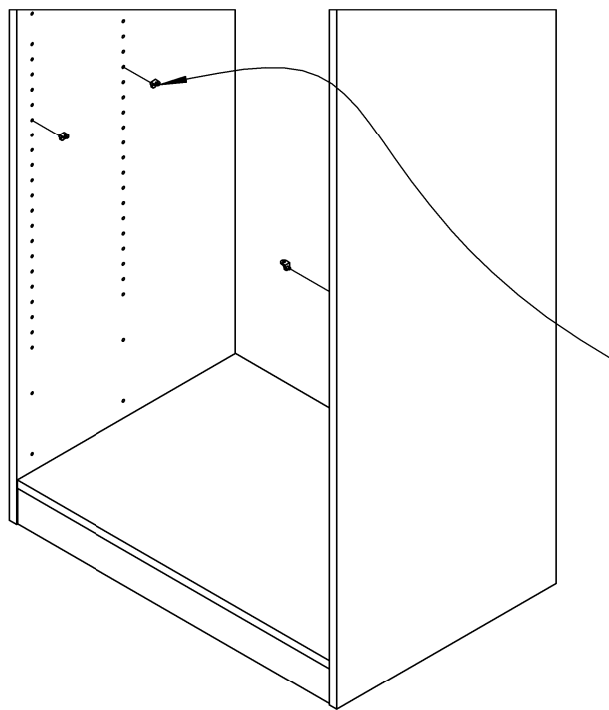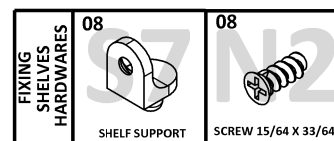

## STEP 16

FIT THE SHELF ON THE CLOSET

SCREW THE SHELF  
ON THE SUPPORT

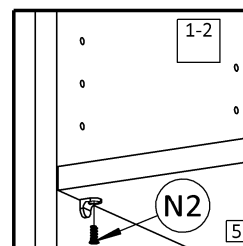
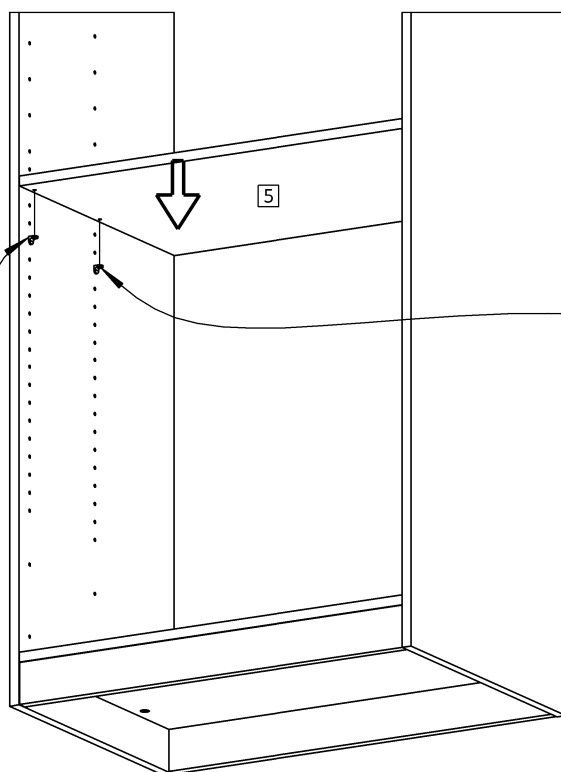




**STEP 17**  
FIX THE SLIDERS ON THE CLOSET



Rev.01 REF.: MCL013

**ASSEMBLY INSTRUCTIONS**  
BOX 05

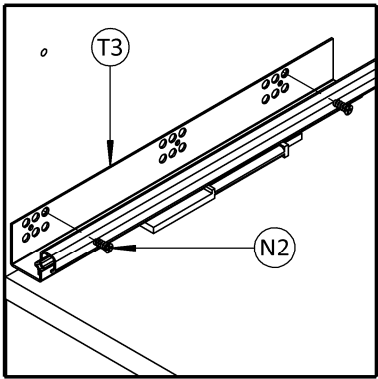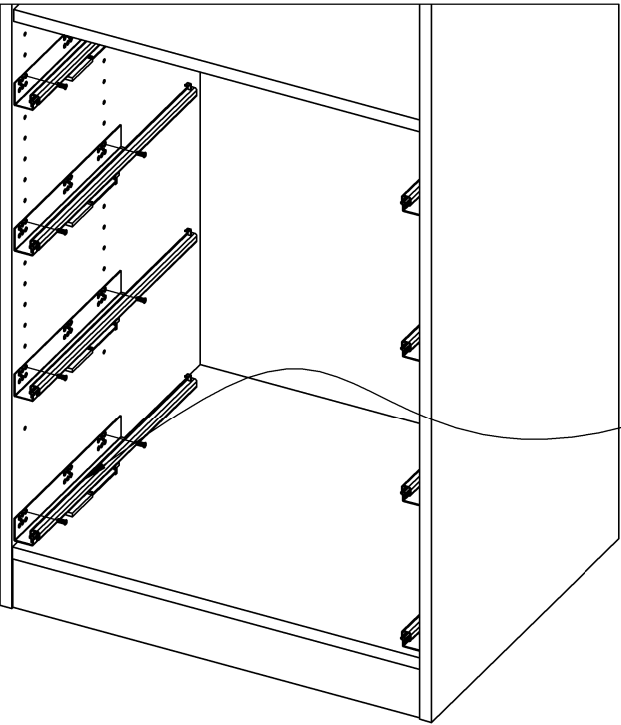

FIXING DRAWERS HARDWARES	03 (PAIR)	12
	SLIDER	SCREW 15/64 X 33/64

**STEP 18**  
FIT THE DRAWERS ON THE SLIDERS

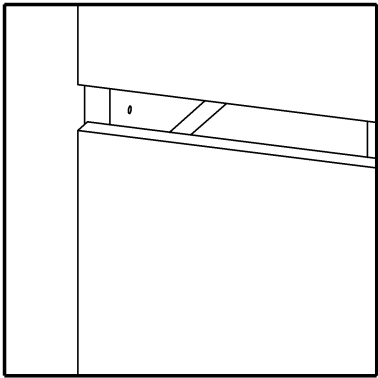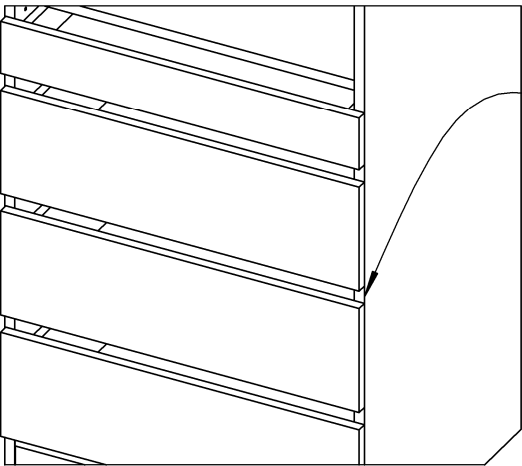

1,25" BETWEEN DRAWERS

**STEP 19**  
FIT THE PIN DRAWERS INTO THE SLIDER

