
INSTALLATION STEPS

FINAL INSTALLATION

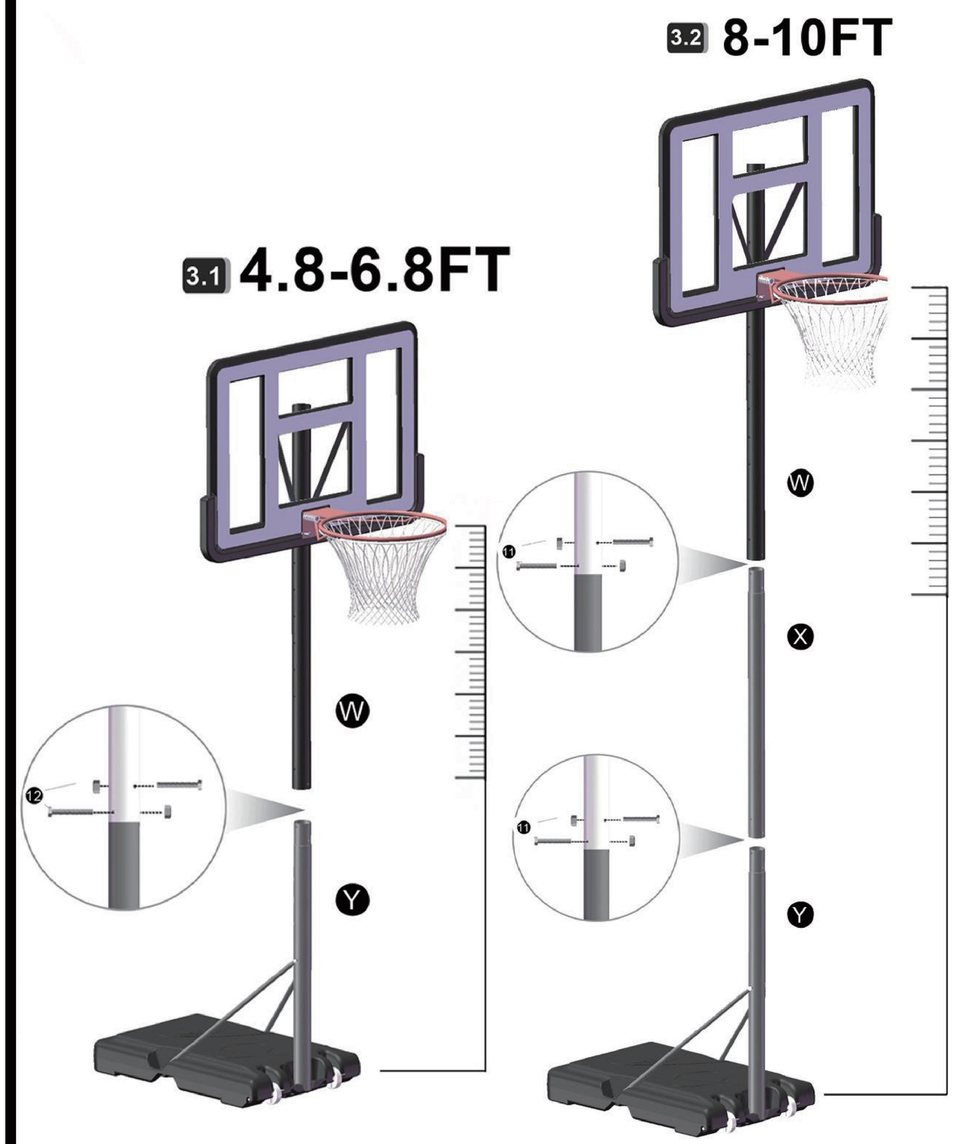

FT	CM
4FT 9	145CM
5FT 1	155CM
5FT 5″	165CM
5FT 9″	175CM
6FT 1″	185CM
6FT 5″	195CM
6FT 9″	205CM
8FT	245CM
8FT 4″	255CM
8FT 8″	265CM
9FT	275CM
9FT 4″	285CM
9FT 8″	295CM
10FT	305CM


S003-21A

PORTABLE BASKETBALL HOOP MANUAL




GET TO KNOW THE BASIC PARTS


BACKBOARD

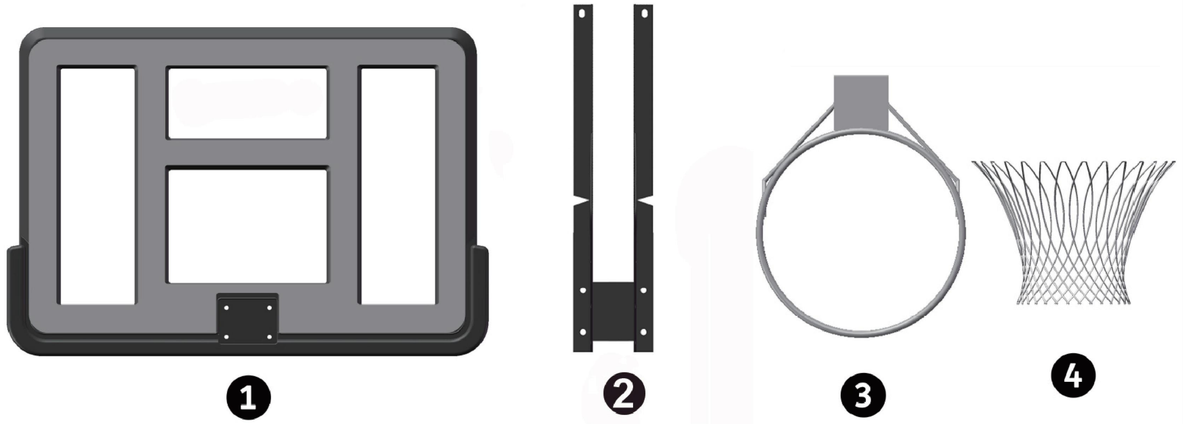

BASE

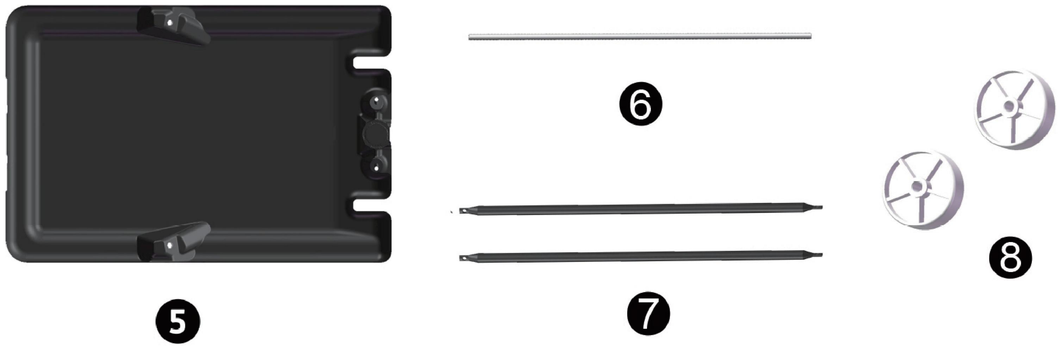


SUPPORT POLE

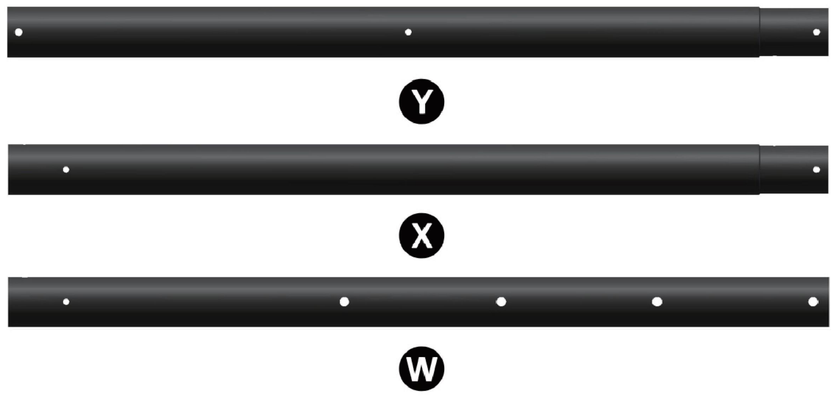


INSTALLATION STEPS

BACKBOARD

2.2

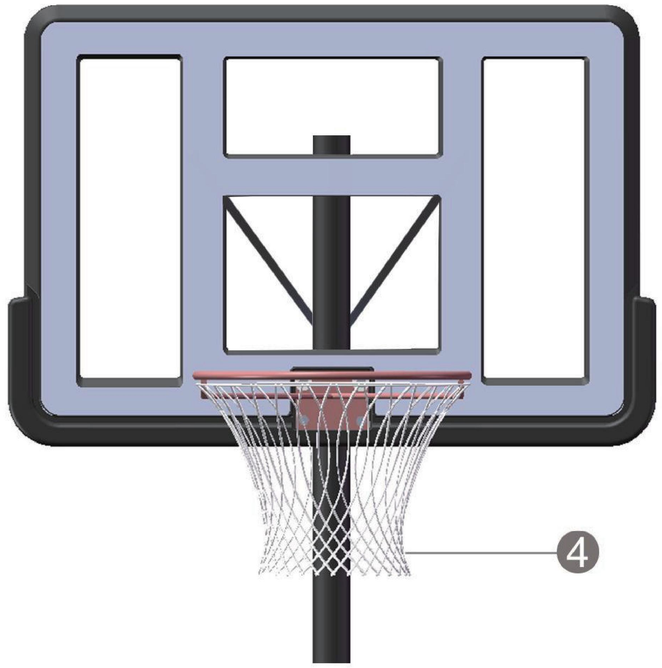


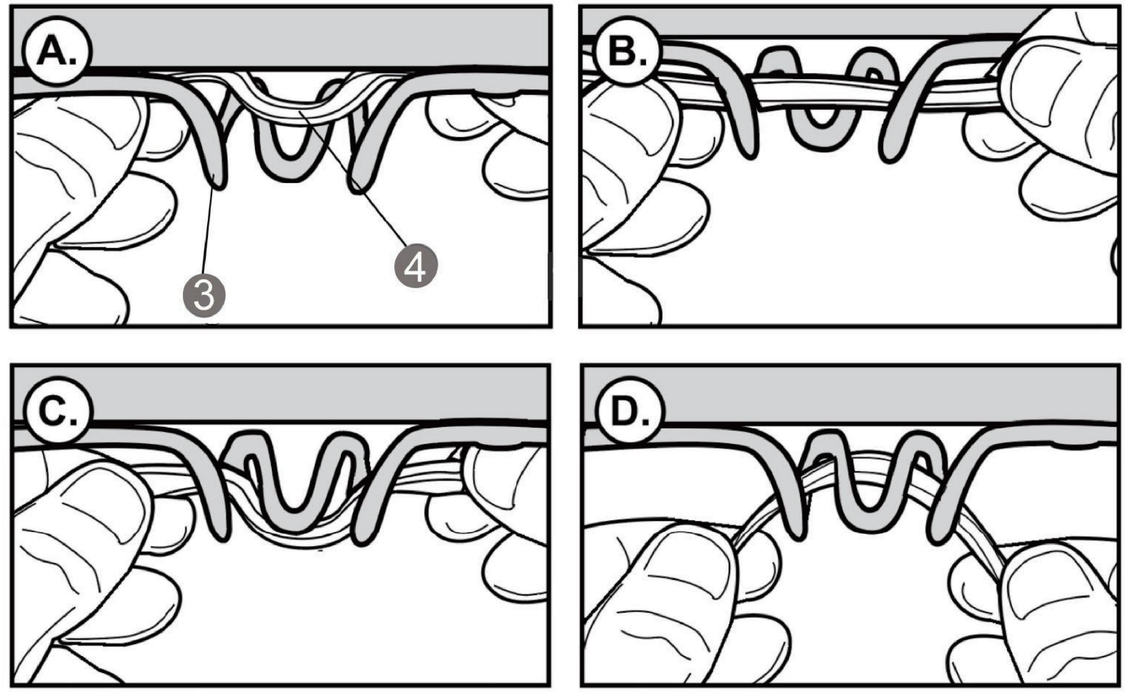

INSTALLATION STEPS


BACKBOARD

Needed Parts

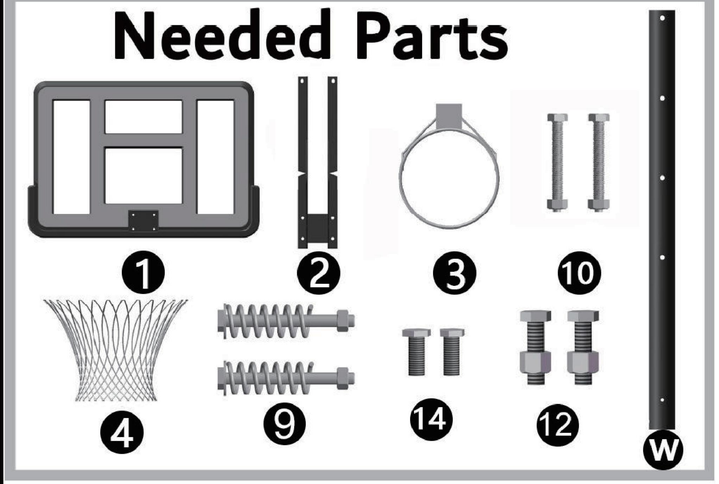



NOTE:

Please bend the ❷ into a Y shape before installation

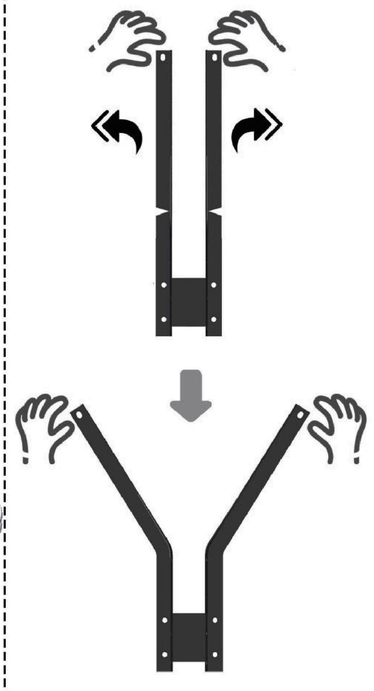


2.1

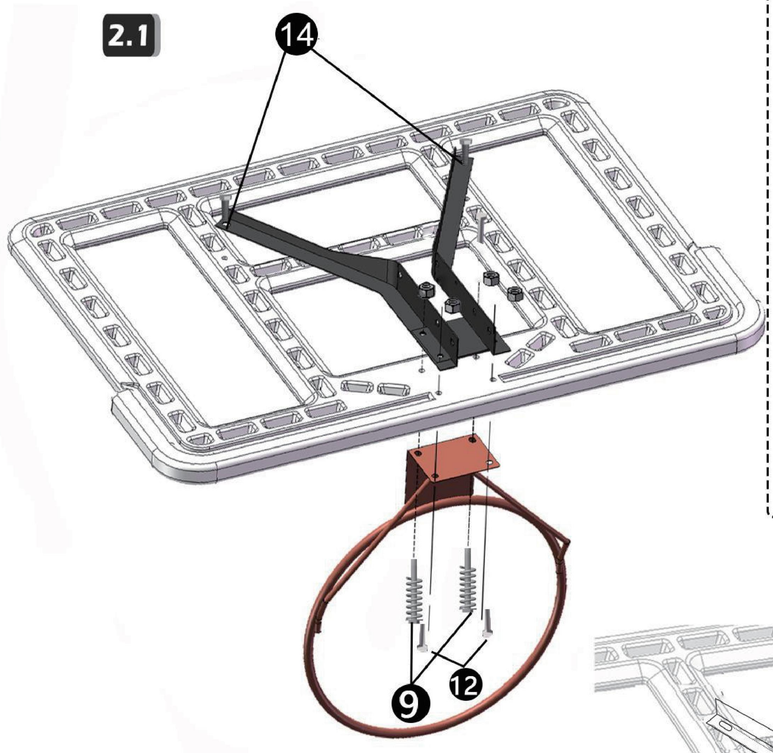

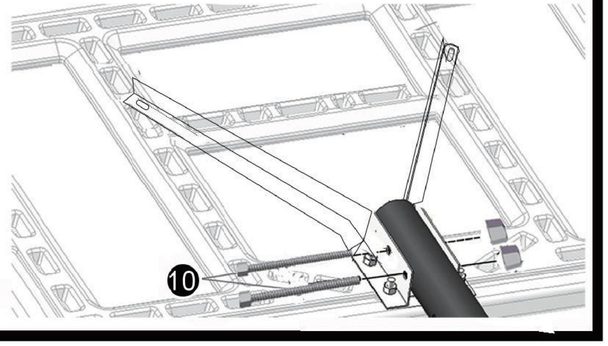

GET TO KNOW THE BASIC PARTS

SPARE PARTS

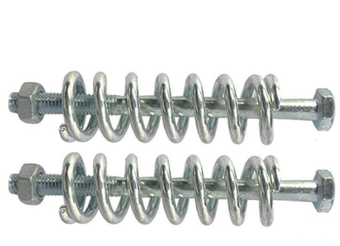

M8 x 110mm

❾



M8 x 90mm

❿



M8 x 80mm

⓫



M8 x 40mm

⓬



M8 x 20mm

⓭



M8 x 16mm

⓮

TOOLS NEEDED

Please prepare the following tools before assembly:

Note: All screws are designed to prevent loosening and must be installed and tightened with a wrench.



wrench



wrench




water pipe


INSTALLATION STEPS

BASE


Needed Parts

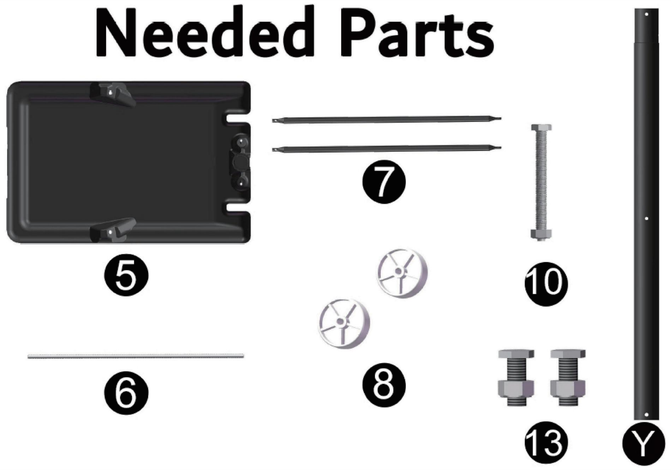


1.1

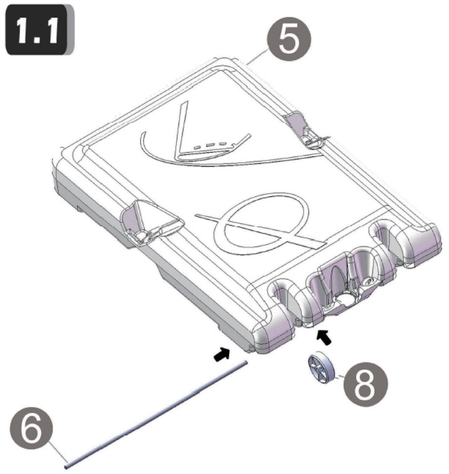


1.2

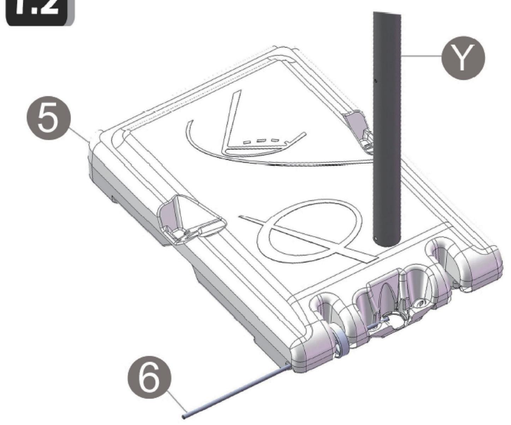


1.3

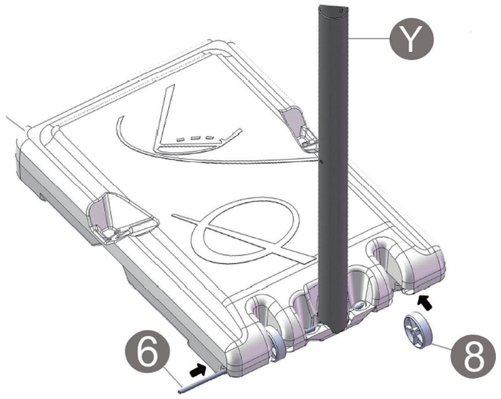

1.4

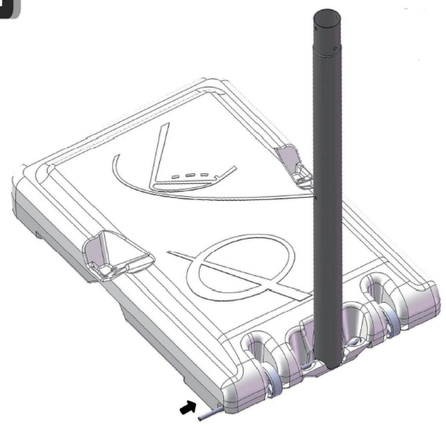


1.5

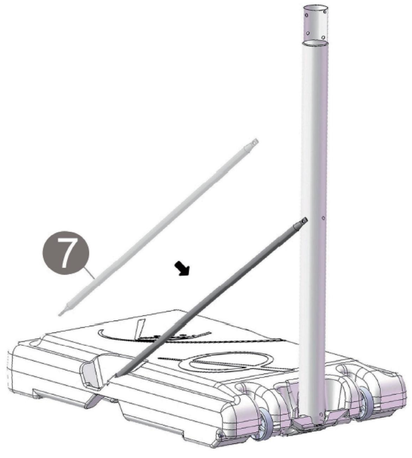

INSTALLATION STEPS

BASE


1.6

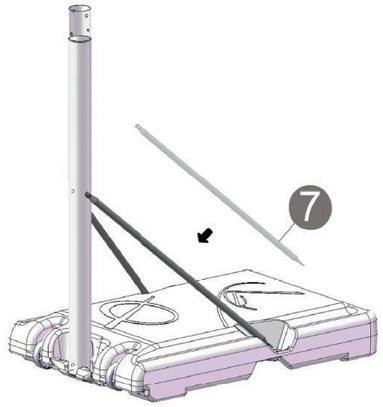

1.7



1.8

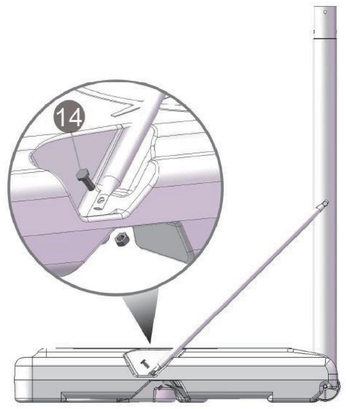

1.9

