



ASSEMBLY INSTRUCTION

White SOFA

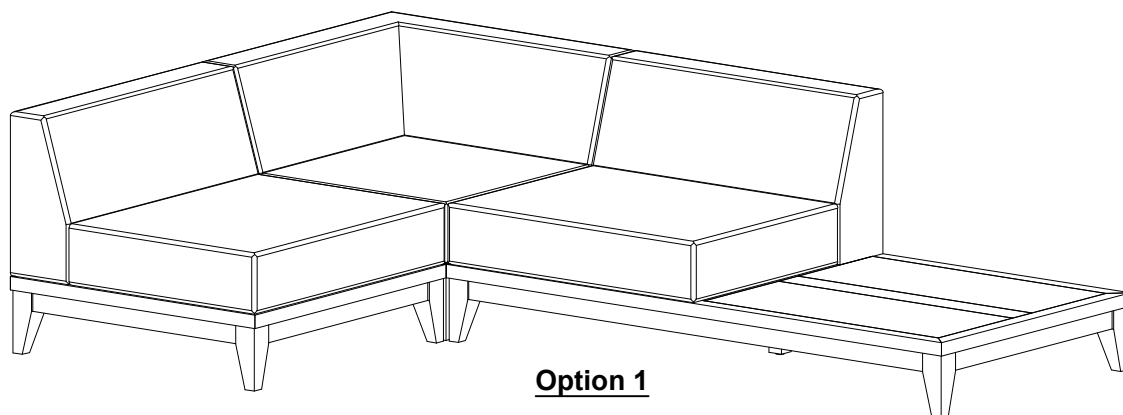


Option 1

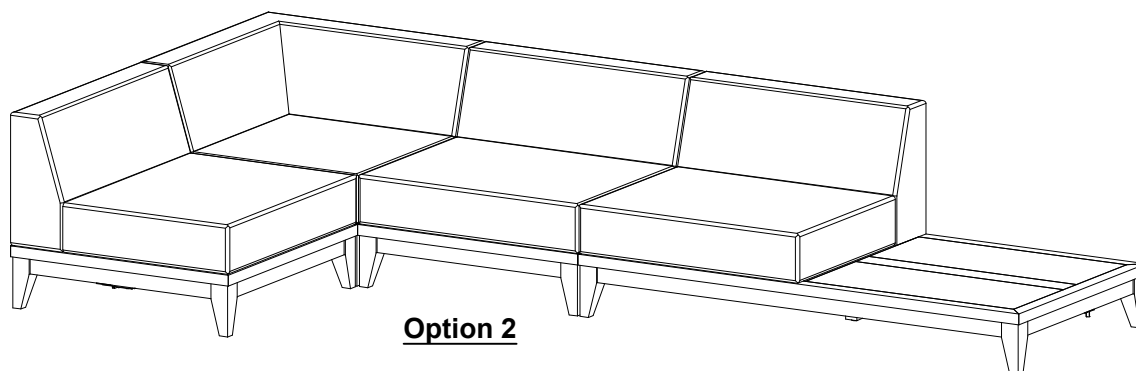


Option 2


Part List

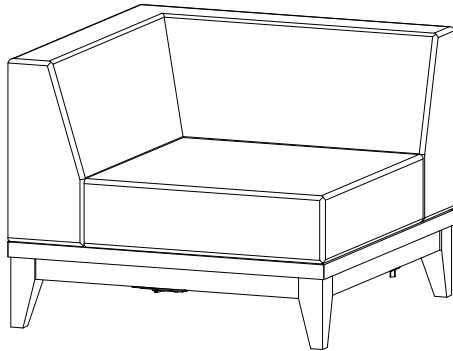

White Corner

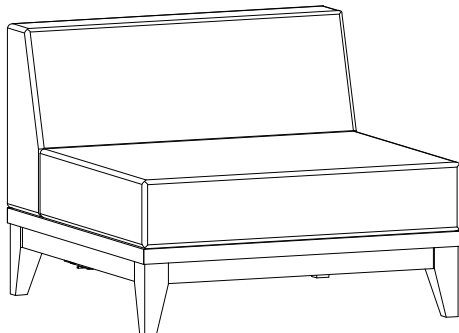


White Armless

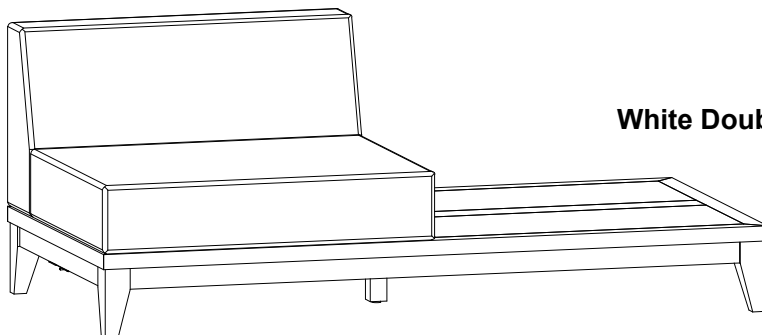


White Double

Start...

1

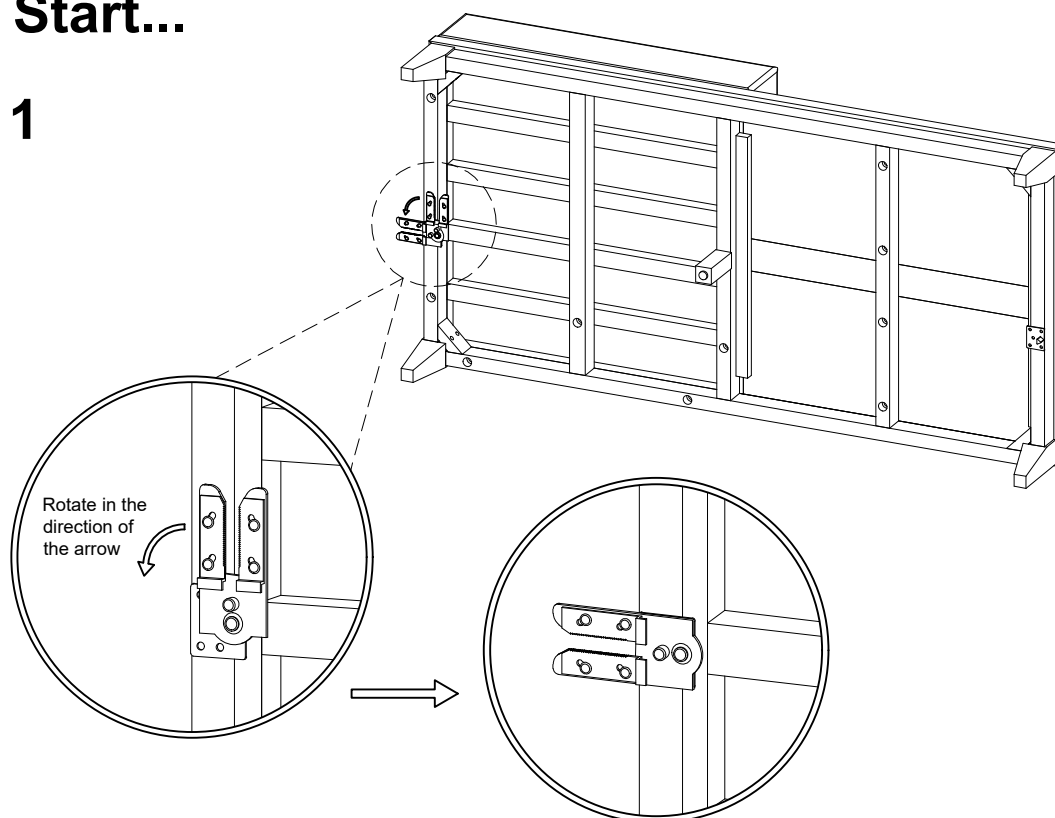

2

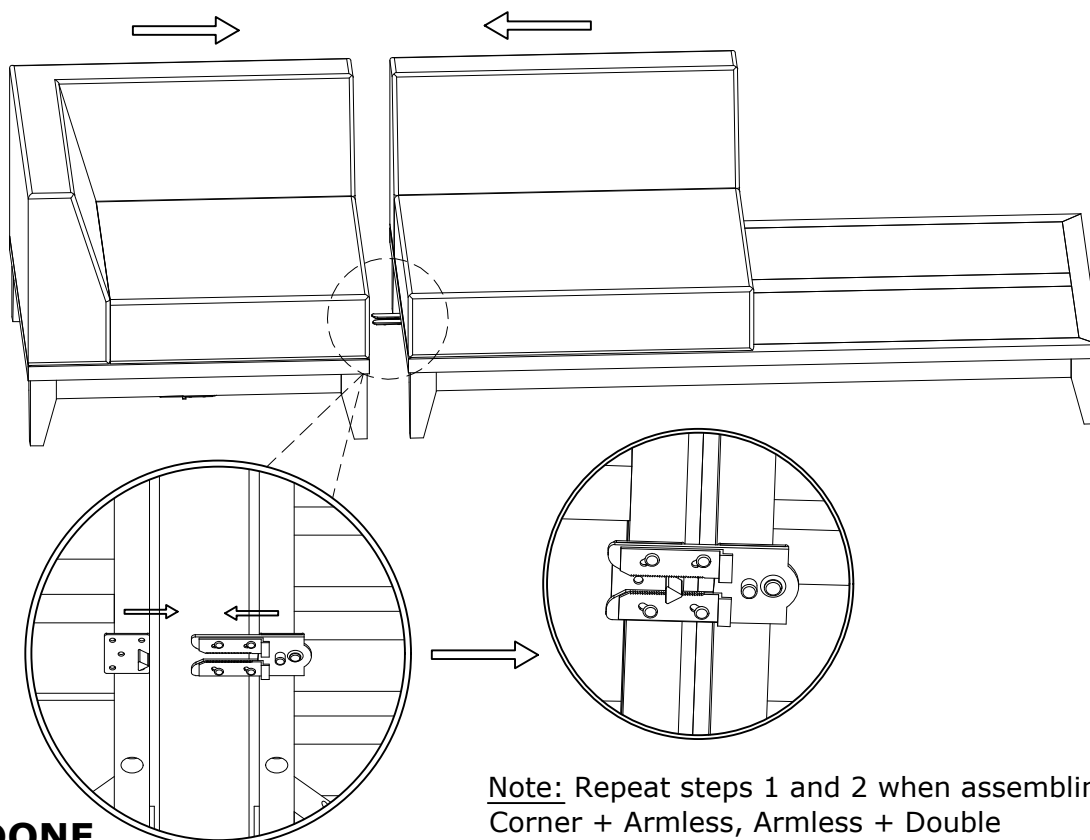


DONE

Note: Repeat steps 1 and 2 when assembling:
Corner + Armless, Armless + Double

White Double

Hardware List

#A x5pcs



Bolt M8x50mm

#B x5pcs



Washer M8x20

#C x5pcs




Spring Washer M8

#D x1pc




Allen Key

1

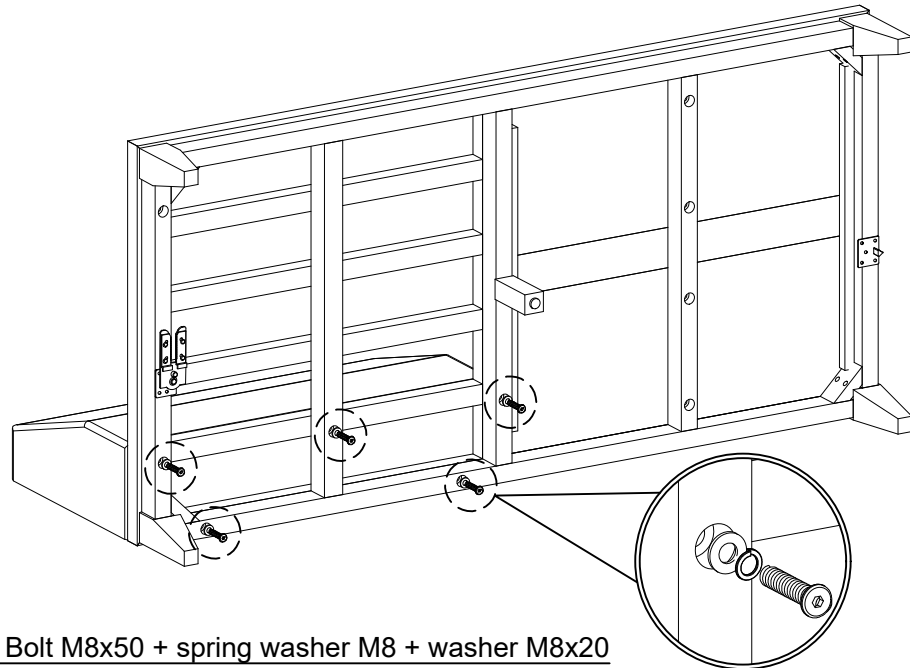

Use Bolt M8x50 + spring washer M8 + washer M8x20

2

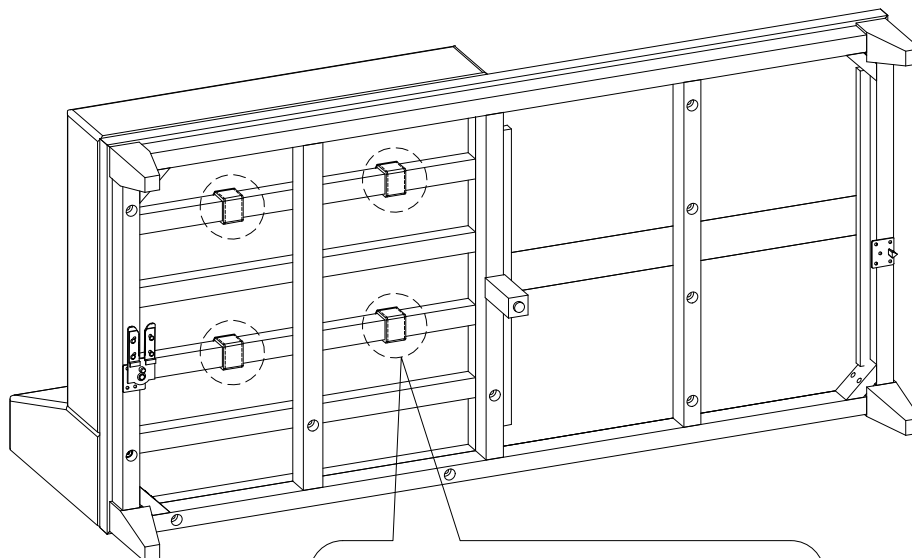


The seat cushion is kept fixed on the wooden frame with a velcro

DONE

White Armless

Hardware List

#A x5pcs



Bolt M8x50mm

#B x5pcs



Washer M8x20

#C x5pcs




Spring Washer M8

#D x1pc




Allen Key

1

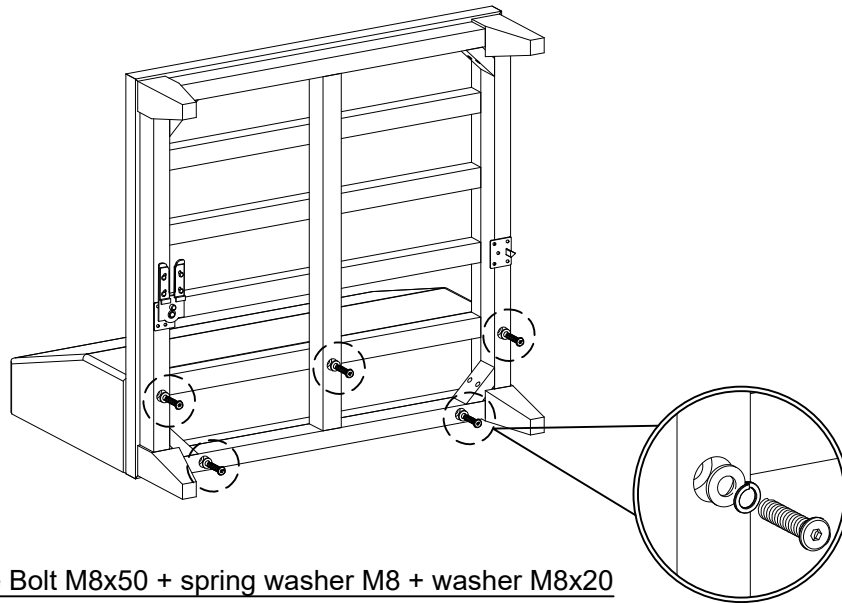

Use Bolt M8x50 + spring washer M8 + washer M8x20

2

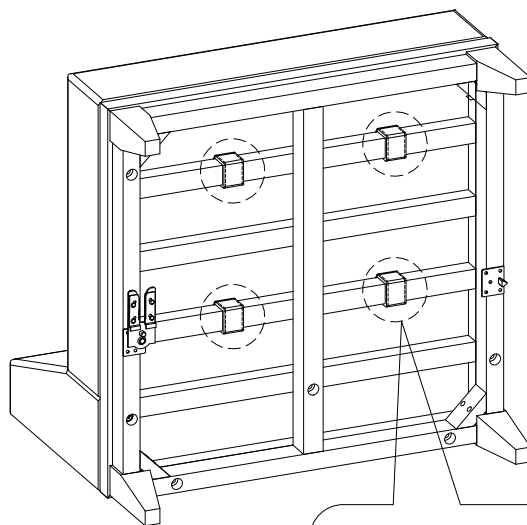

The seat cushion is kept fixed on the wooden frame with a velcro

DONE