


# ASSEMBLY INSTRUCTIONS














## Console Table

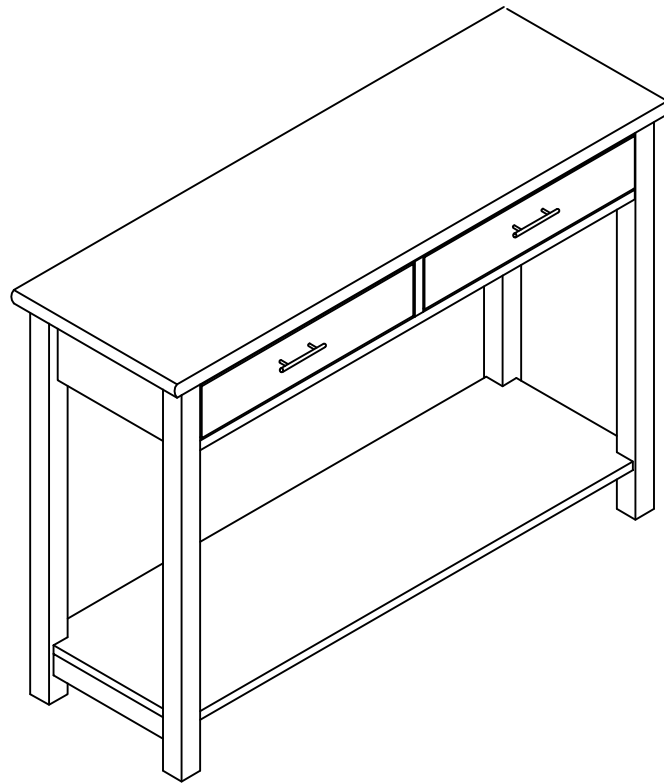





### NOTE TO CUSTOMERS:




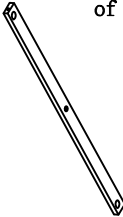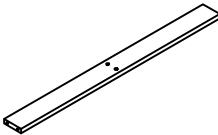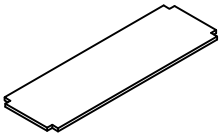






- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Please never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

## Part List

<p>A. Quantity of 1</p>  <p>Top Panel</p>	<p>B. Quantity of 1</p>  <p>Left Side Panel</p>	<p>C. Quantity of 1</p>  <p>Right Side Panel</p>	<p>D. Quantity of 1</p>  <p>Cross Bar</p>
<p>E. Quantity of 1</p>  <p>Cross Bar</p>	<p>F. Quantity of 1</p>  <p>Bottom panel</p>	<p>G. Quantity of 1</p>  <p>Back Panel</p>	<p>H. Quantity of 1</p>  <p>Divider</p>
<p>I. Quantity of 2</p>  <p>Drawer Front Panel</p>	<p>J. Quantity of 2</p>  <p>Drawer Side Panel</p>	<p>K. Quantity of 2</p>  <p>Drawer Side Panel</p>	<p>L. Quantity of 2</p>  <p>Drawer Back Panel</p>
<p>M. Quantity of 2</p>  <p>Drawer Bottom Panel</p>			

## Hardware List

<p>(1) Quantity of 2</p>  <p>Drawer Handle</p>	<p>(2) Quantity of 4</p>  <p>Bolt</p>	<p>(3) Quantity of 10</p>  <p>(8*30mm) Wood Dowel</p>	<p>(4) Quantity of 2</p>  <p>Bolt</p>
---	--	---	--

(5) Quantity of 4  1/4 "x2" Bolt	(6) Quantity of 13  Cam-Lock	(7) Quantity of 8  Flat Washer	(8) Quantity of 17  Cam-Bolt
(9) Quantity of 2  Screw	(10) Quantity of 8  Spring Washer	(11) Quantity of 4  Cam-Lock	(12) Quantity of 8  Screw
(13) Quantity of 4  (6*30MM) Wood Dowel	(14) Quantity of 4  1/4"x1.5" Bolt		





### Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

### To use Dowels:


1. Add glue (about  $\frac{1}{4}$  full ) in the hole(s) of each board to be joined.
2. Insert the Dowel(s) and join boards.
3. Wipe excess glue with a damp paper towel.

### To use Cam Locks:

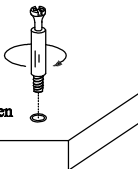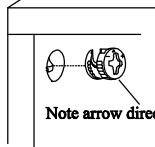1. Insert Cam Pin until snug  Do not over-tighten	2. Set boards together 	3. Insert Cam Lock  Note arrow direction	4. Turn Cam Lock clockwise (half a turn)  if it won't turn halfway, back out the Cam Pin $\frac{1}{4}$ turn and try Cam Lock again.
--	---	--	--

### STEP 1:


- 1). Assemble Divider (H) to Back Panel (G) using Wood Dowels (3), Cam-bolt (8) and Cam-lock (6).
- 2). Assemble Cross Bar (D) to Divider (H) using Bolts (4).
- 3). Assemble Cross Bar (E) to Divider (H) using Bolts (4) and Wood Dowel (3).

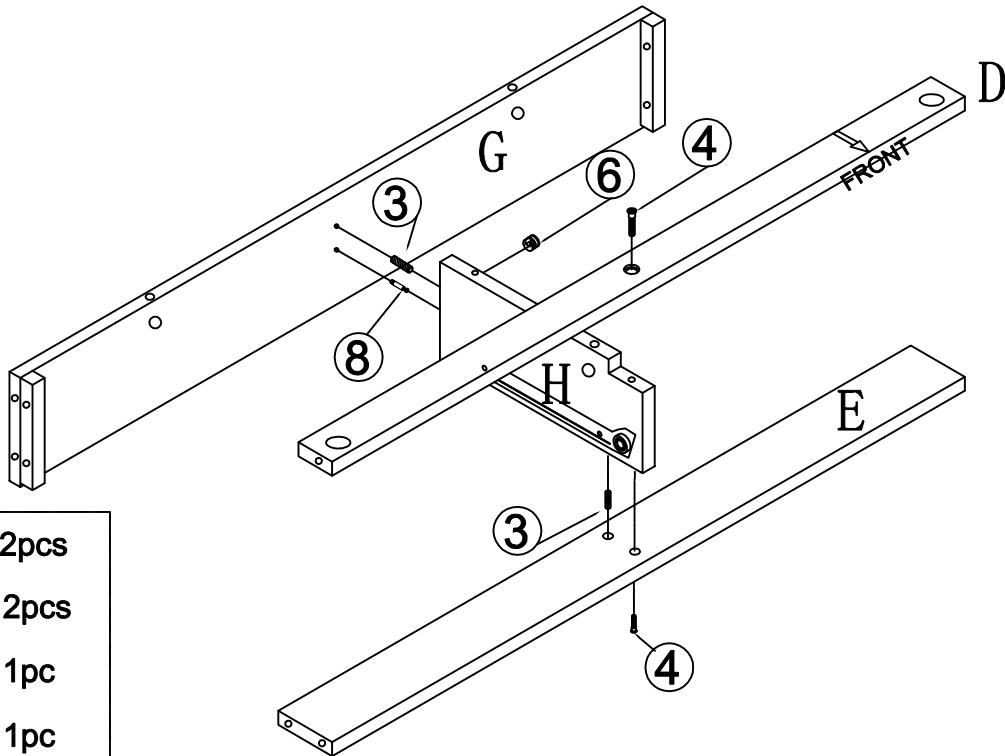

3		2pcs
4		2pcs
6		1pc
8		1pc

### STEP 2:


Insert Wood Dowels (3) and Cam-bolts (8) into the holes of Side Panels (B&C).

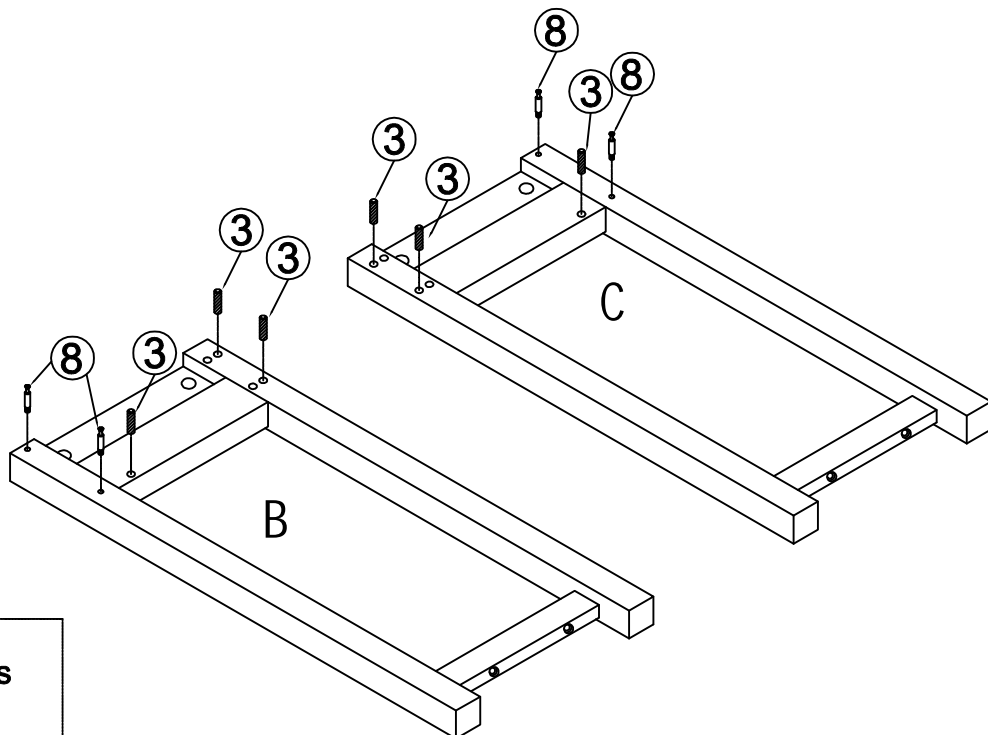






3		6pcs
8		4pcs
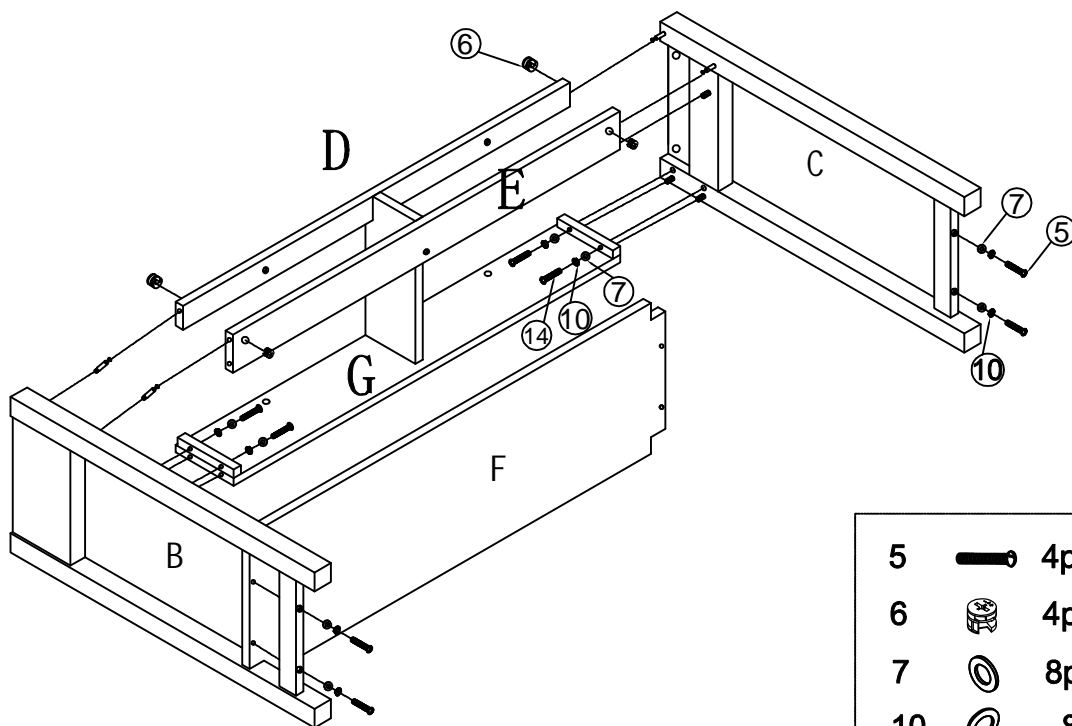
### STEP 3:


- 1). Assemble Cross Bars (D&E) to Side Panel(B) using Cam-bolt (8) and Cam-lock (6).
- 2). Assemble Back Panel (G) to Side Panel (B) using Bolts (14),Spring Washers (10) ang Flat Washers (7).
- 3). Assemble Bottom Panel (F) to Side Panel (B) using Bolts (5),Spring Washers (10) ang Flat Washers (7).
- 4). Repeat above step to assemble the other Side Panel (C).




5		4pcs
6		4pcs
7		8pcs
10		8pcs
14		4pcs

### STEP 4:


Insert Wood Dowels (3) and Cam-bolts (8) into the holes of Top Panel (A).

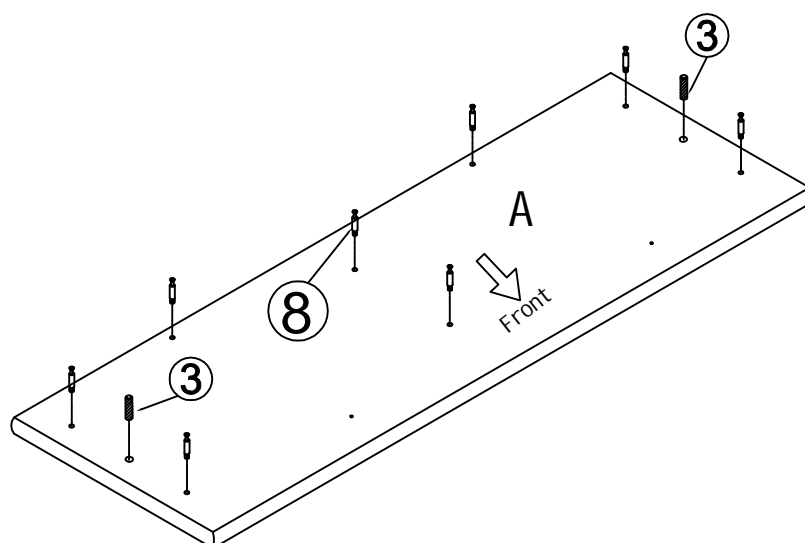

3		2pcs
8		8pcs

### STEP 5:


- 1). Attach Top Panel (A) to Side Panels (B&C), Back Panel (G) and Divider (H).
- 2). Insert Cam-locks (6) into the holes of Side Panels (B&C), Back Panel (G) and Divider (H) to catch Cam-bolts (8), then tighten Cam-locks (6).
- 3). Tighten Top Panel (A) to Cross Bar (D) using Screws (9).

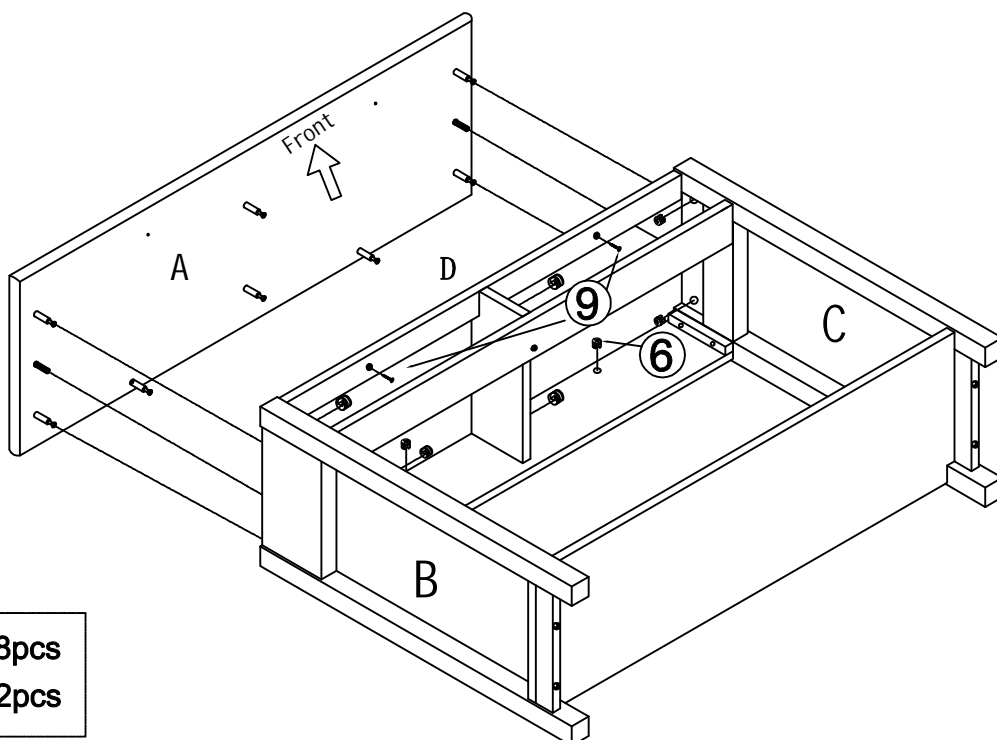






6		8pcs
9		2pcs
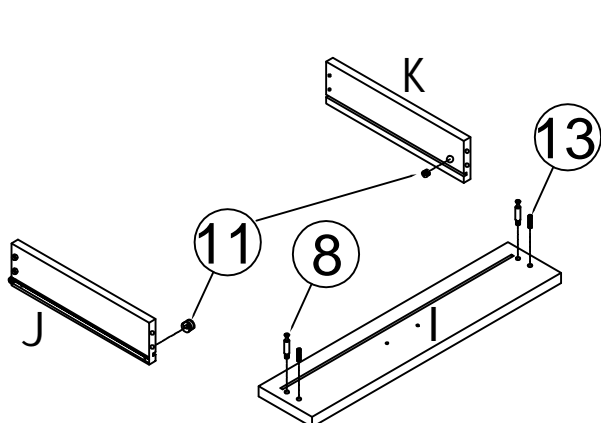
### STEP 6:

- 1). Assemble Drawer Side Panels (J&K) to Drawer Front Panel (I) using Wood Dowels (13), Cam-bolts (8) and Cam-locks (11).
- 2). Insert Drawer Bottom Panel (M) into the grooves of Drawer Side Panel (J&K) and Drawer Front Panel (I).
- 3). Attach Drawer Back Panel (L) to Drawer Side Panels (J&K) using Screws (12) .




8		4pcs
13		4pcs
11		4pcs
12		8pcs

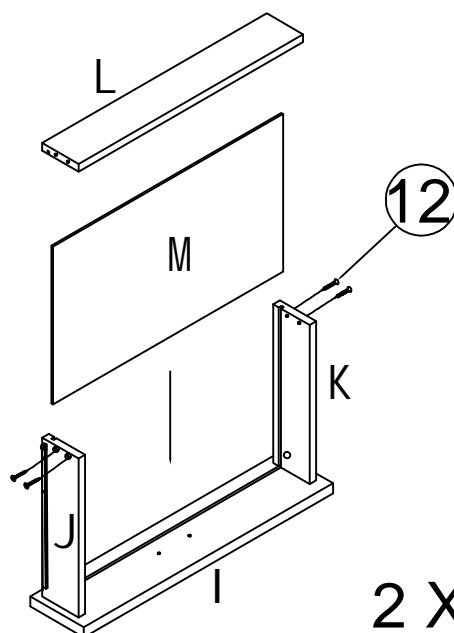

2 X

**STEP 7:**

Attach Drawer Handle (1) onto Drawer Front Panel (I) using Bolts (2) .

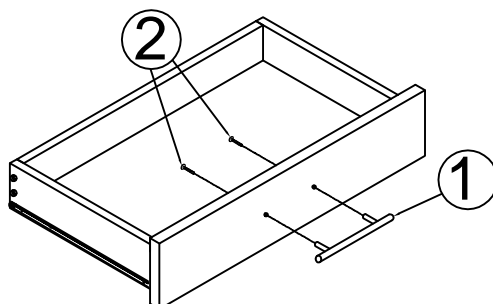

1  2pcs

2  4pcs

2 X

**STEP 8:**

Insert the drawer into this unit.

