


ASSEMBLY INSTRUCTIONS

24 INCH BATH VANITY (COMBO)


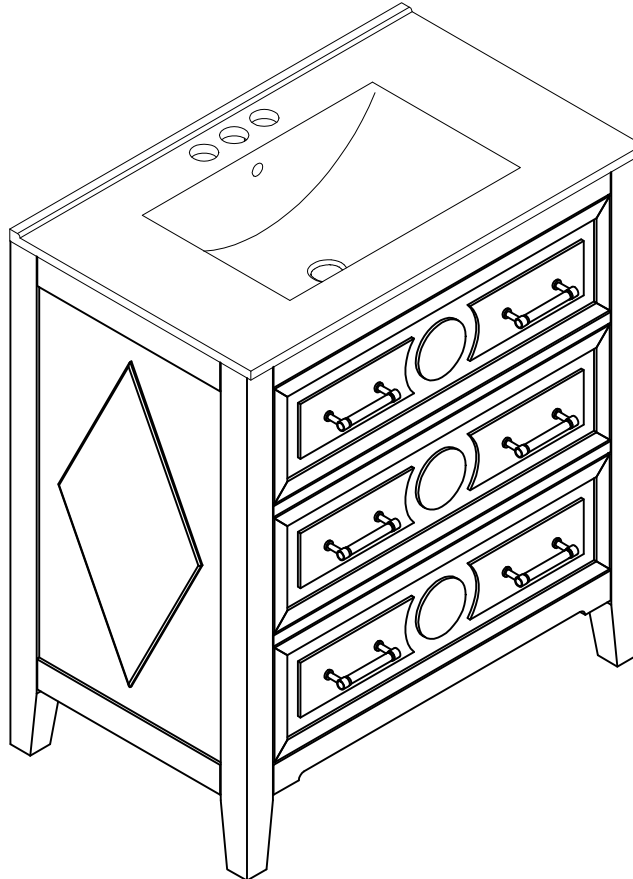


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

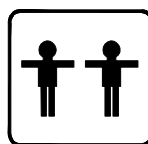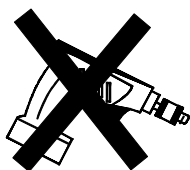


+

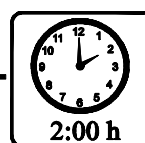

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation








Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions














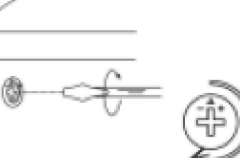
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET

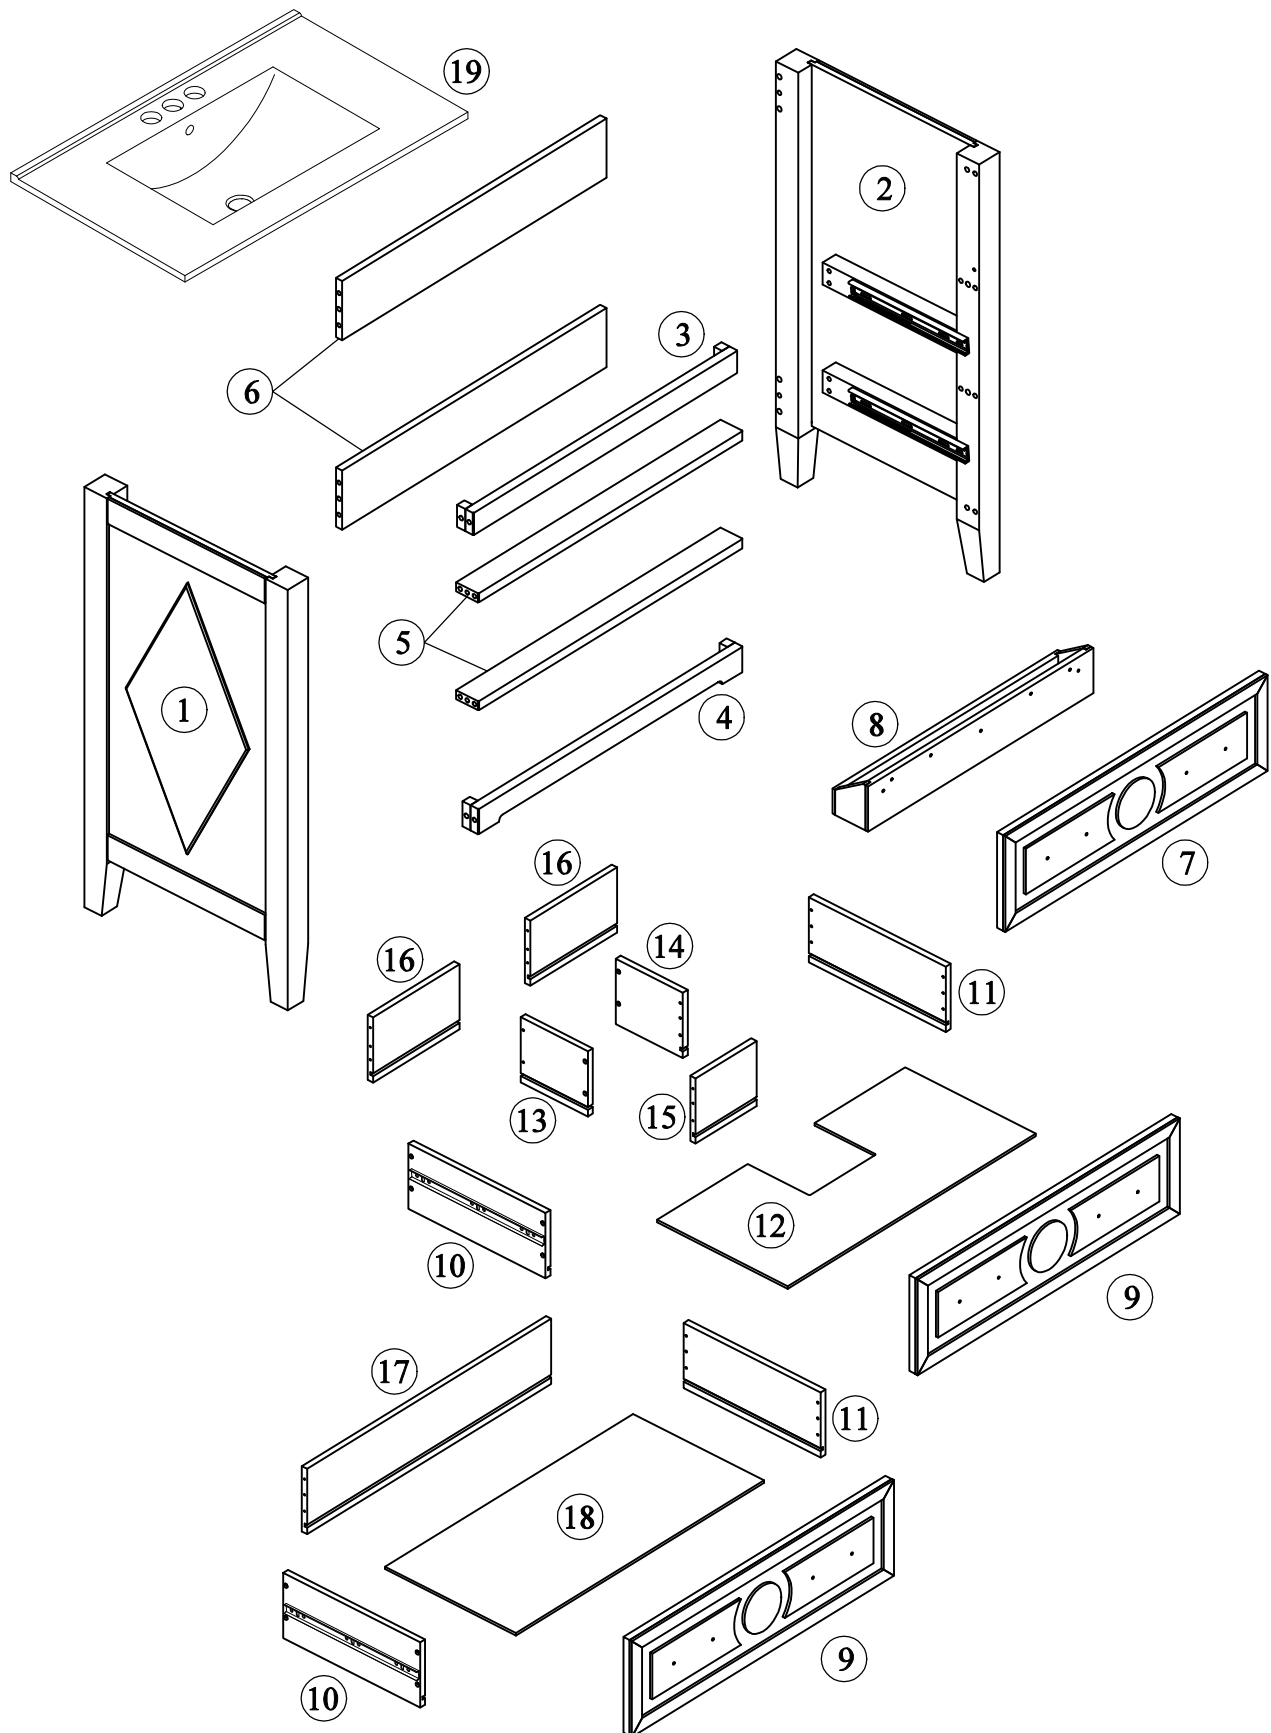


Identifying the Hardware-Identify the hardware using the illustrations below.

Part List - N710P371184

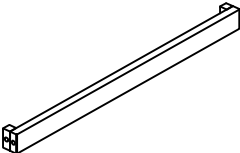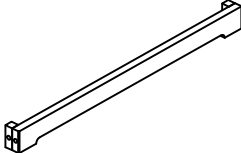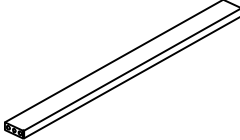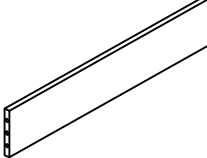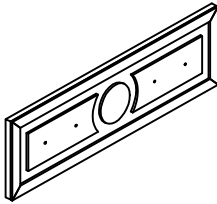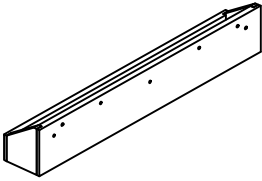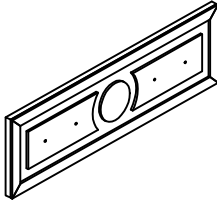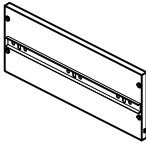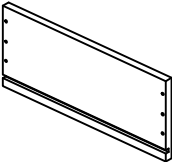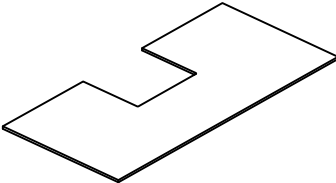1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Crossbar Front - 1pc		Bottom Crossbar Front - 1pc
5		6	
	Mid Crossbar Front - 2pcs		Rear Panel - 2pcs
7		8	
	Flip Drawer Face - 1pc		Flip Drawer - 1pc
9		10	
	Drawer Face - 2pcs		Drawer Side Panel (L) - 2pcs
11		12	
	Drawer Side Panel (R) - 2pcs		Top Drawer Panel Bottom - 1pc
13		14	
	Mid Drawer Side Panel (L) - 1pc		Mid Drawer Side Panel (R) - 1pc


Part List - N710P371184

15




Mid Drawer Panel - 1pc

16

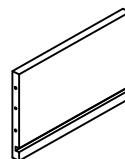


Top Drawer Panel Rear - 2pcs

17

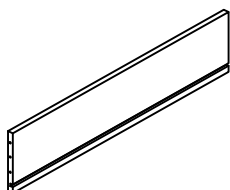


Bottom Drawer Panel Rear - 1pc

18

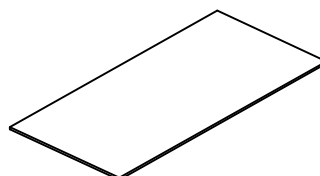








Bottom Drawer Panel Bottom - 1pc

19

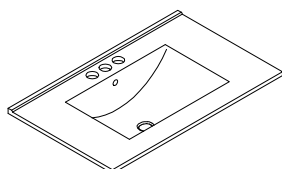


Sink - 1pc

Hardware List - N710P371184

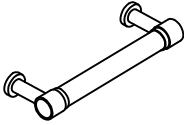




A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts (12pcs)	Three in one lock (12pcs)	Wood dowel (16pcs)
D  ø13x1/4"x28mm	E  ø1/4"x16x1mm	F  ø8xø4x19mm
Hex-Head bolts (4pcs)	Washer (4pcs)	Round head screw (2pcs)
G  ø8xø4x32mm	H 	I  ø5/32"x35mm
Round head screw (24pcs)	Handle (6pcs)	Handle screw(12pc)
M 	N 	O  ø6xø3x12mm
Duo Forte (1pc)	Rotary Hinge(2pcs)	Round head screw (8pcs)
P  4mm	Q 	R  ø6x30mm
Allen key (1pc)	Anti fall hardware (2sets)	Wood dowel (12pcs)

STEP: 1

A



12PCS

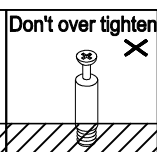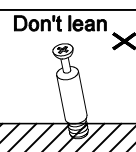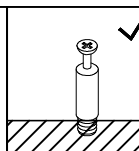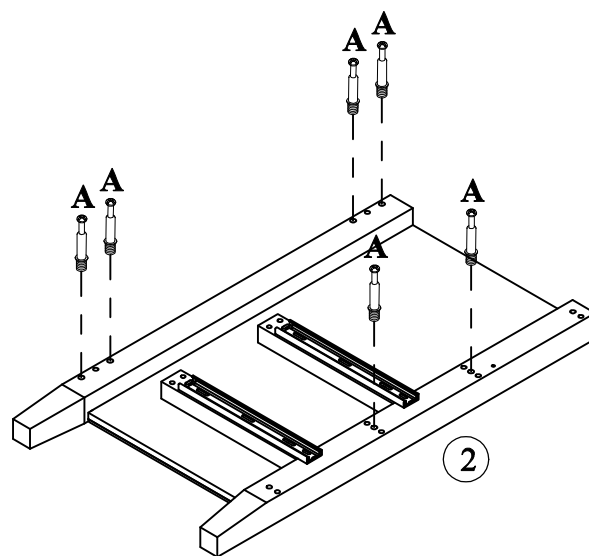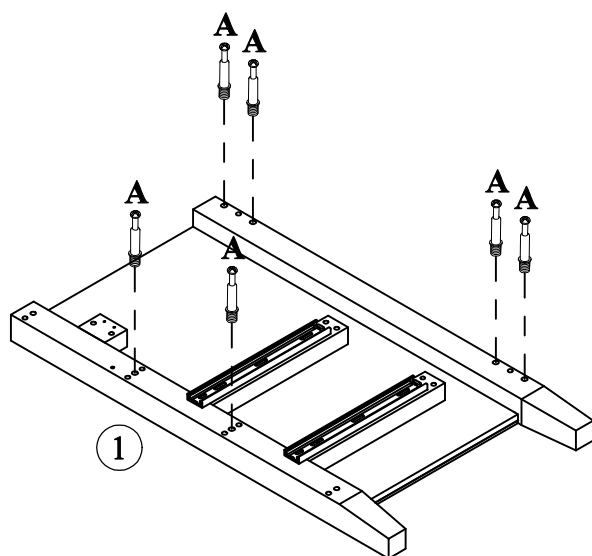

STEP: 2

B




6PCS

C



6PCS

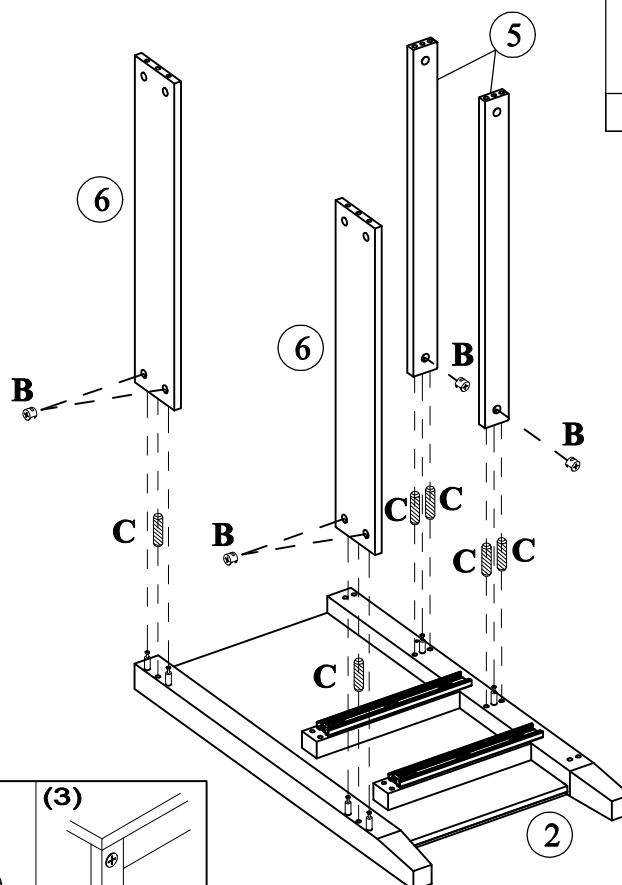

(1)




(2)




(3)




STEP: 3




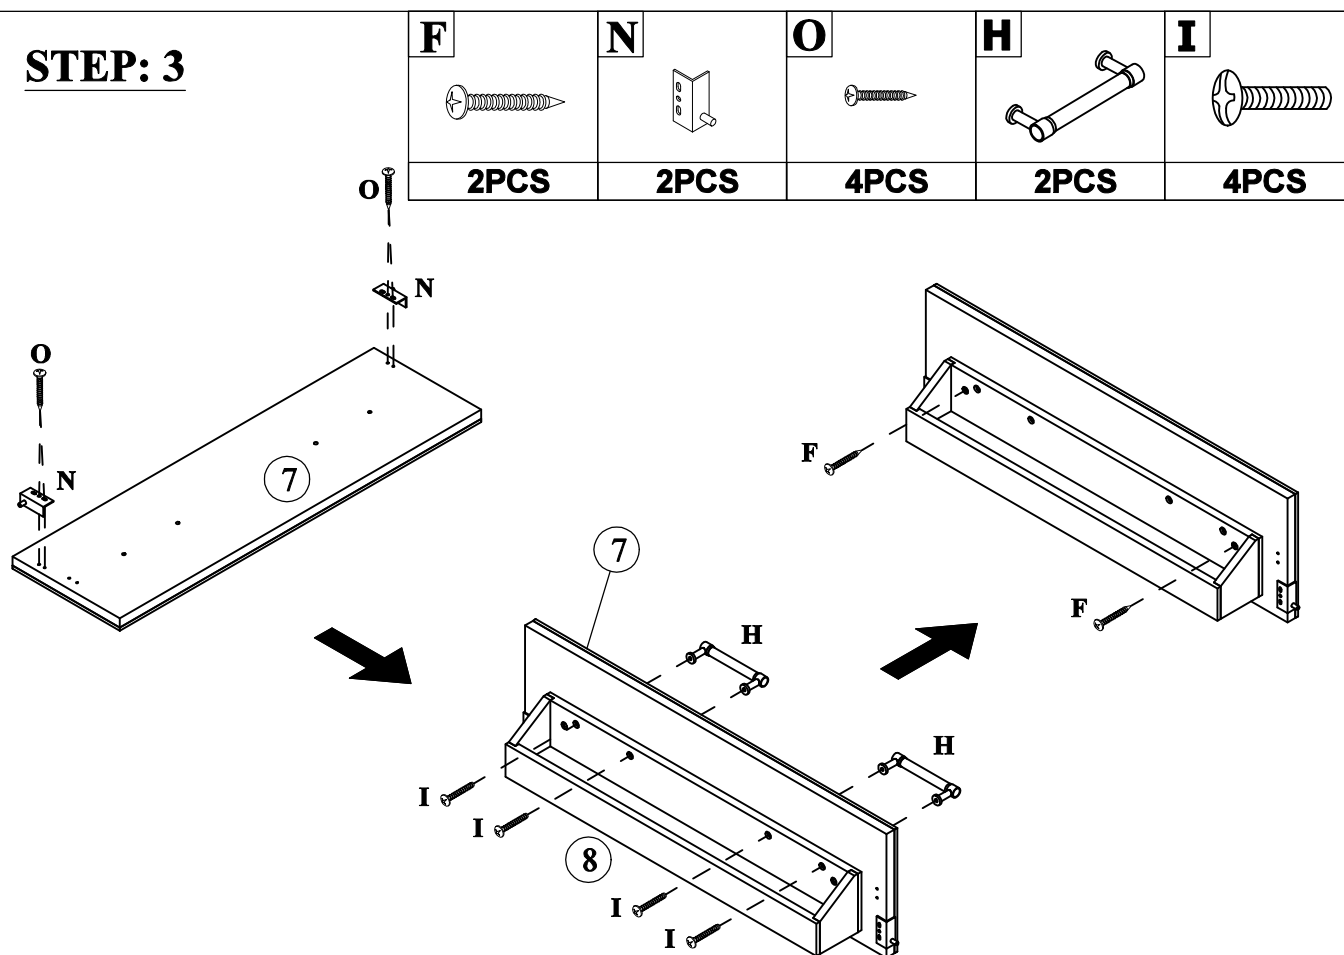


STEP: 4

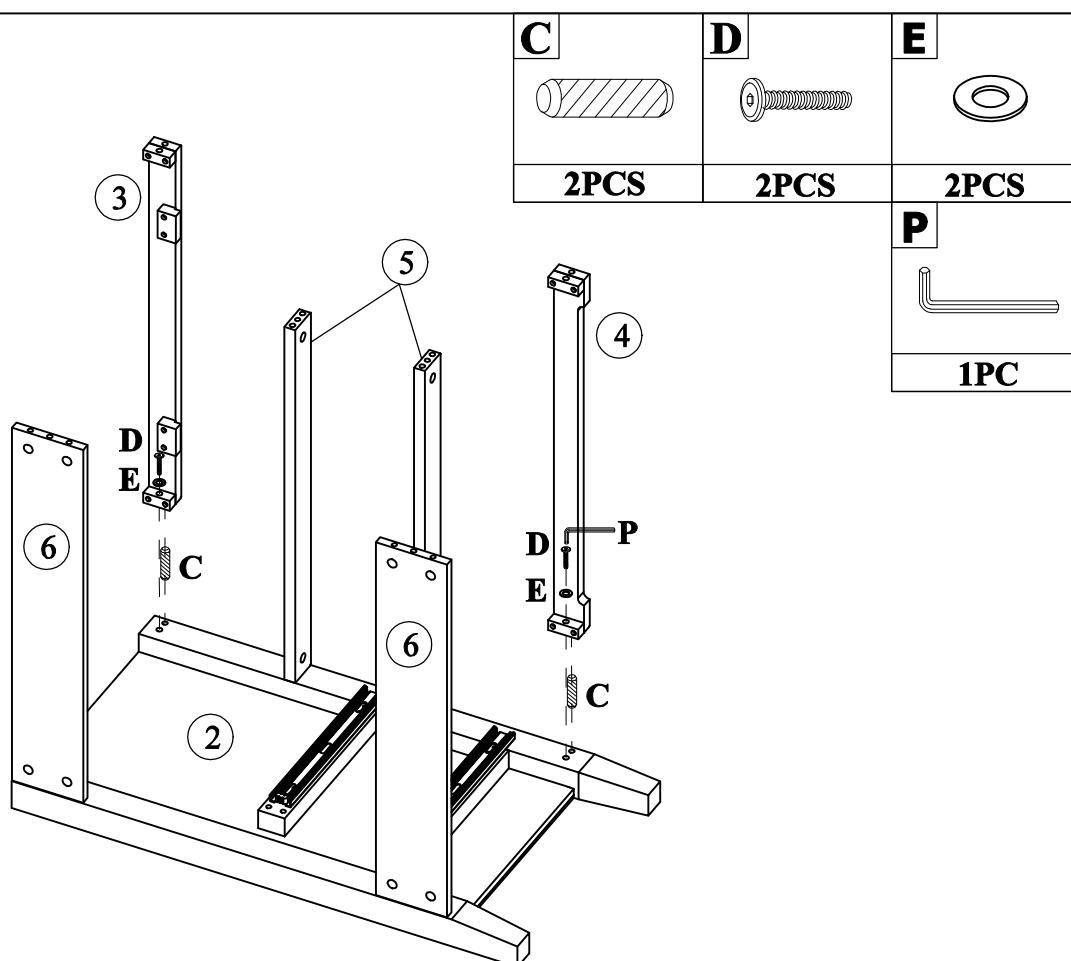



STEP: 5

B		C		D	
6PCS		8PCS		2PCS	
		P		E	
		1PC		2PCS	

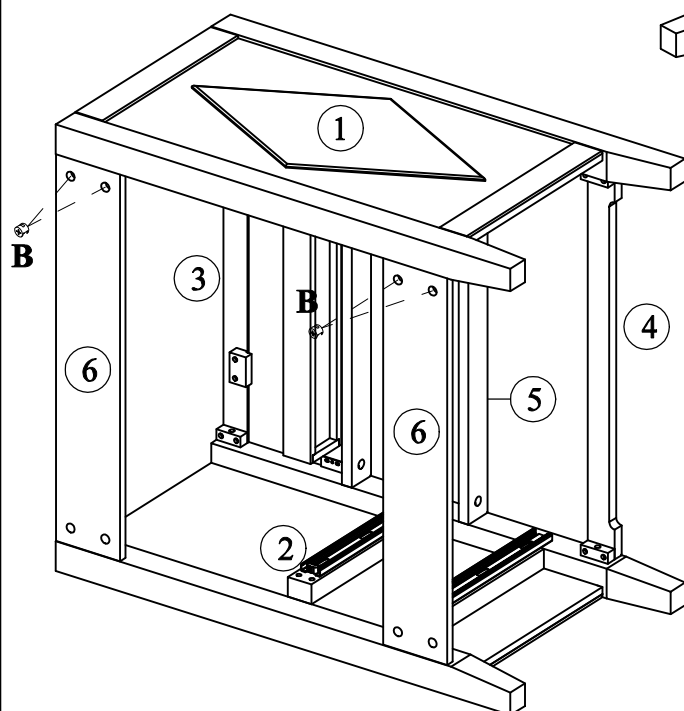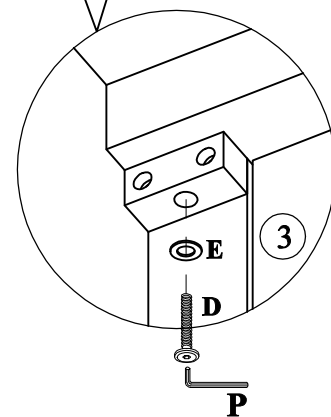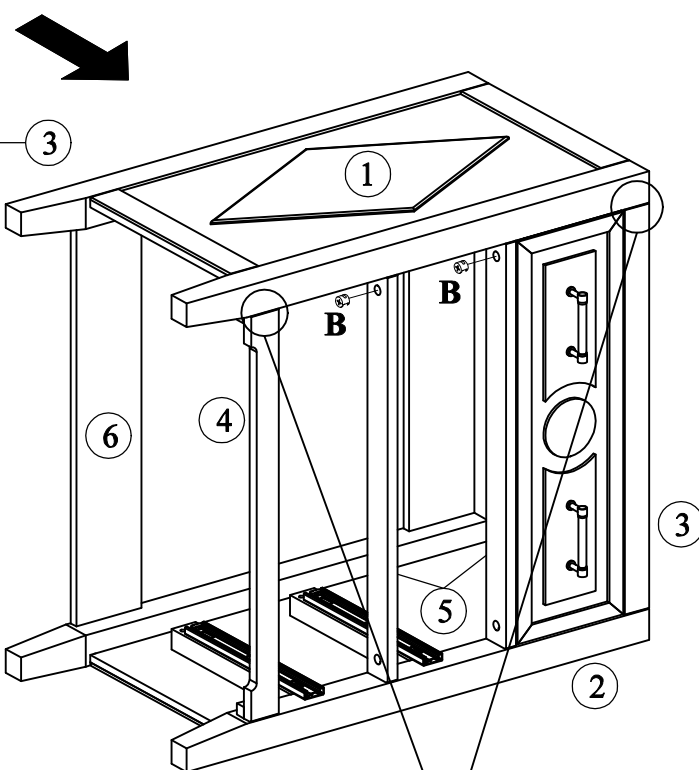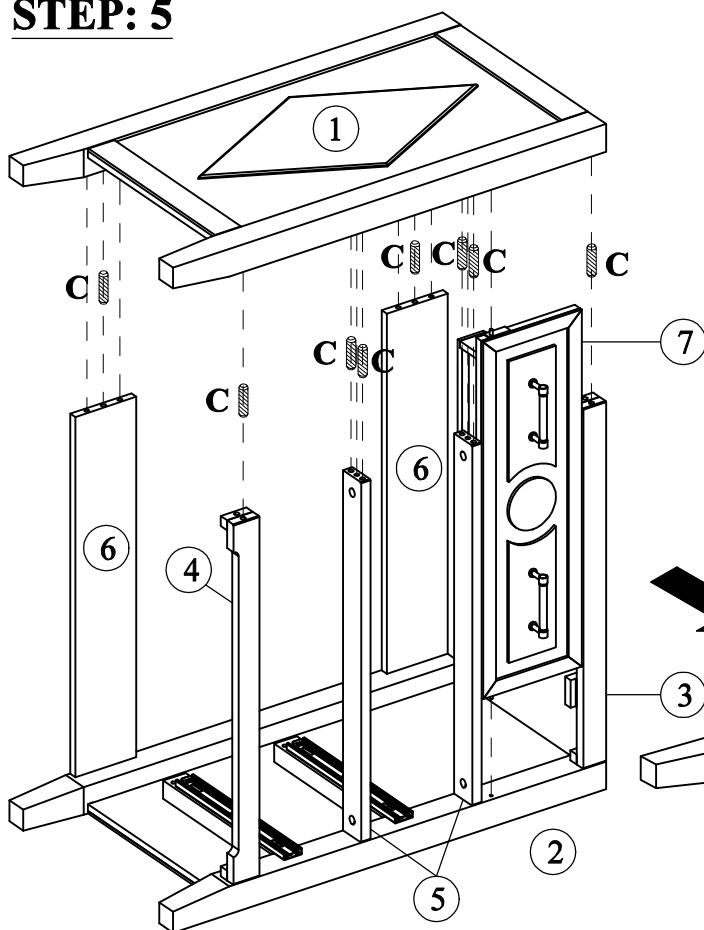


STEP: 6

M	O
	
1PC	4PCS


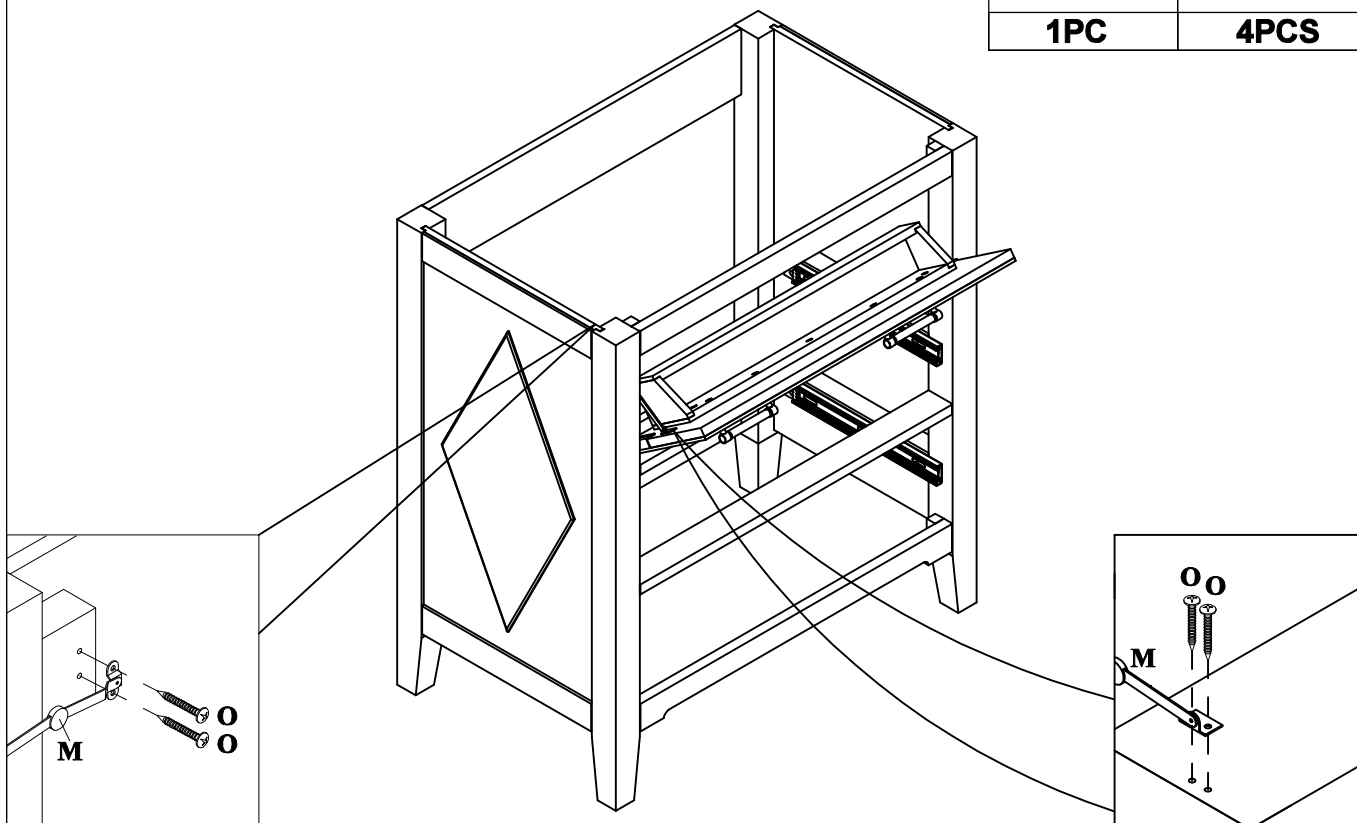



STEP: 7

R	G
	
4PCS	8PCS

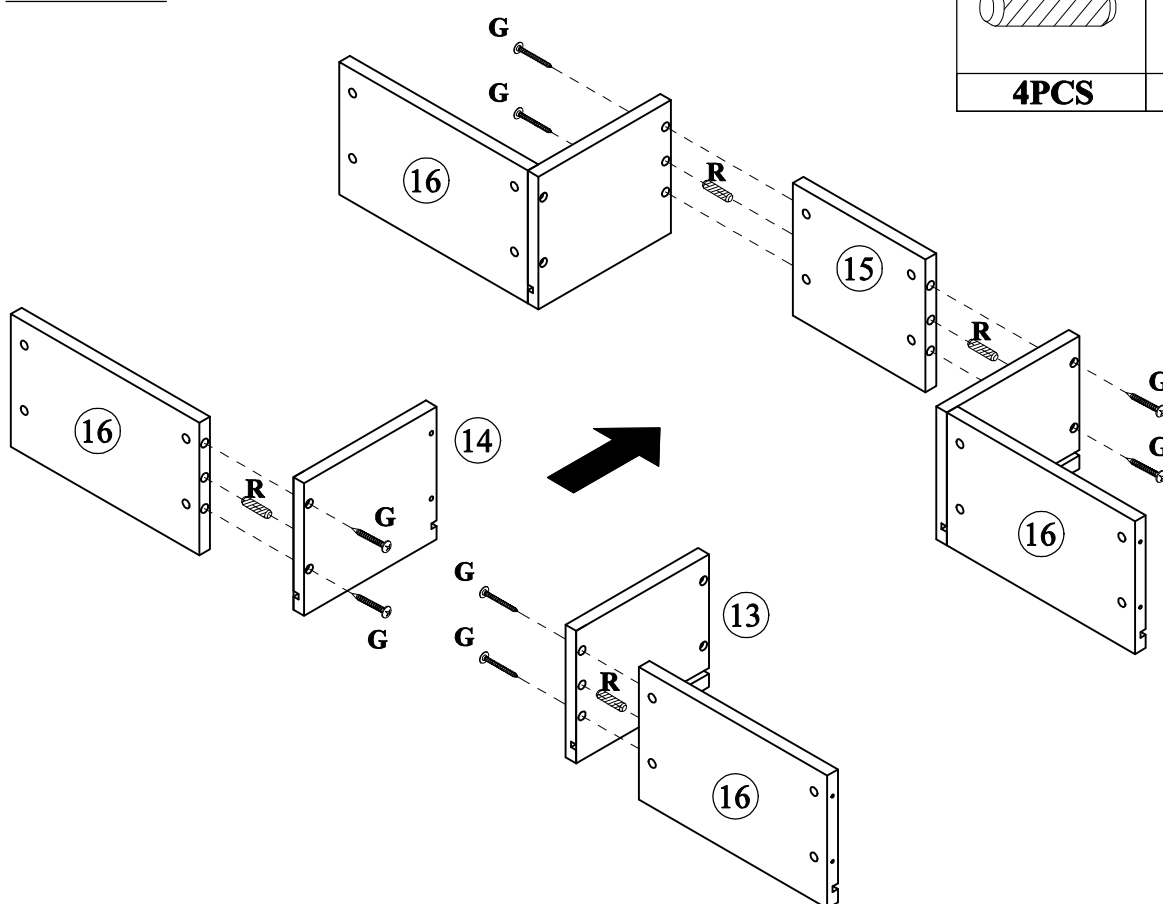



STEP: 8

H	I
	
4PCS	8PCS

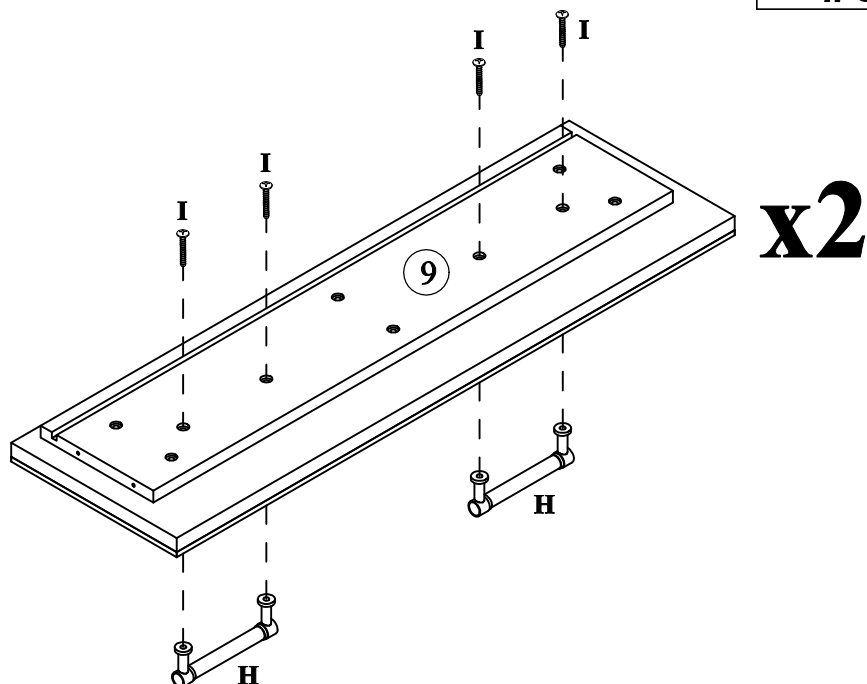


STEP: 9


R	G
	
4PCS	8PCS

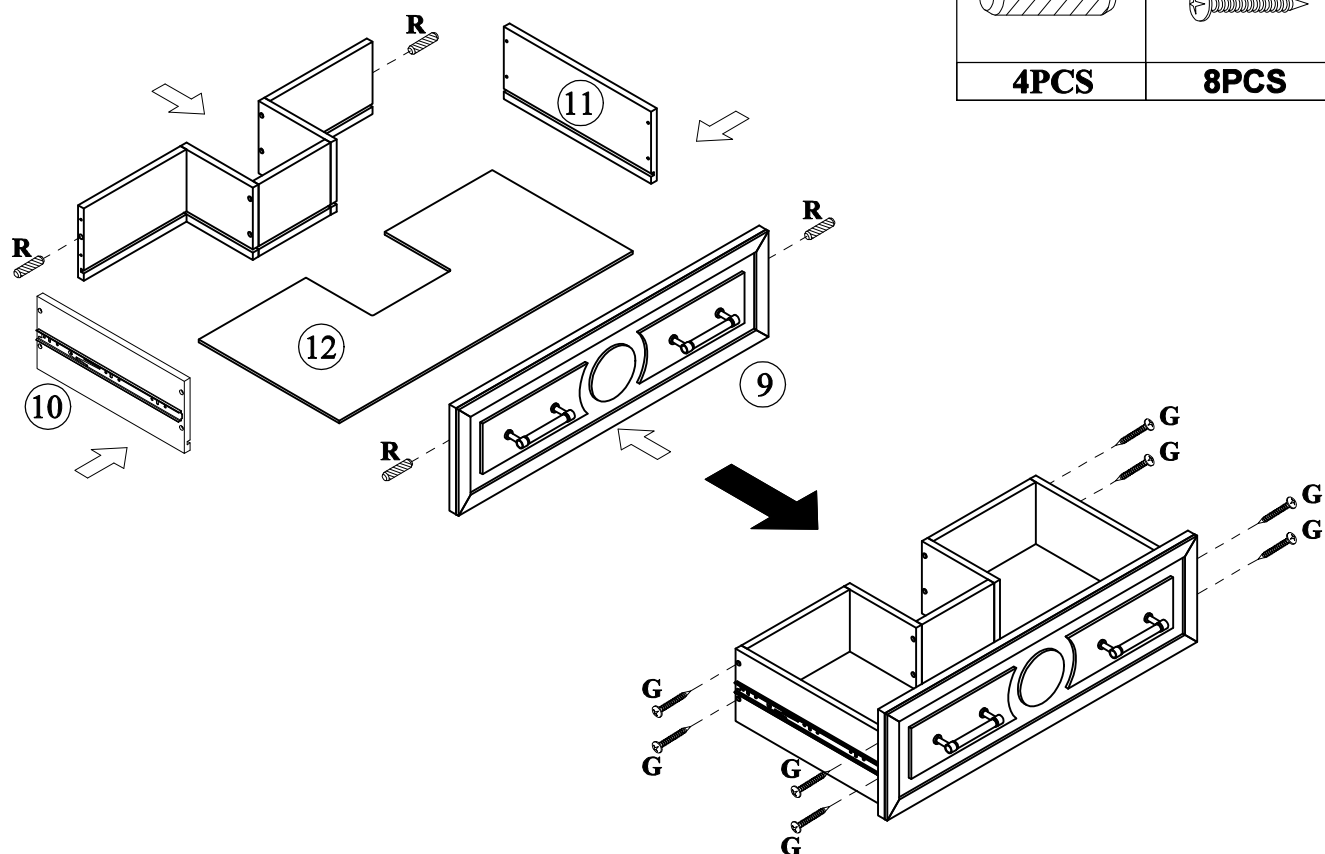



STEP: 10

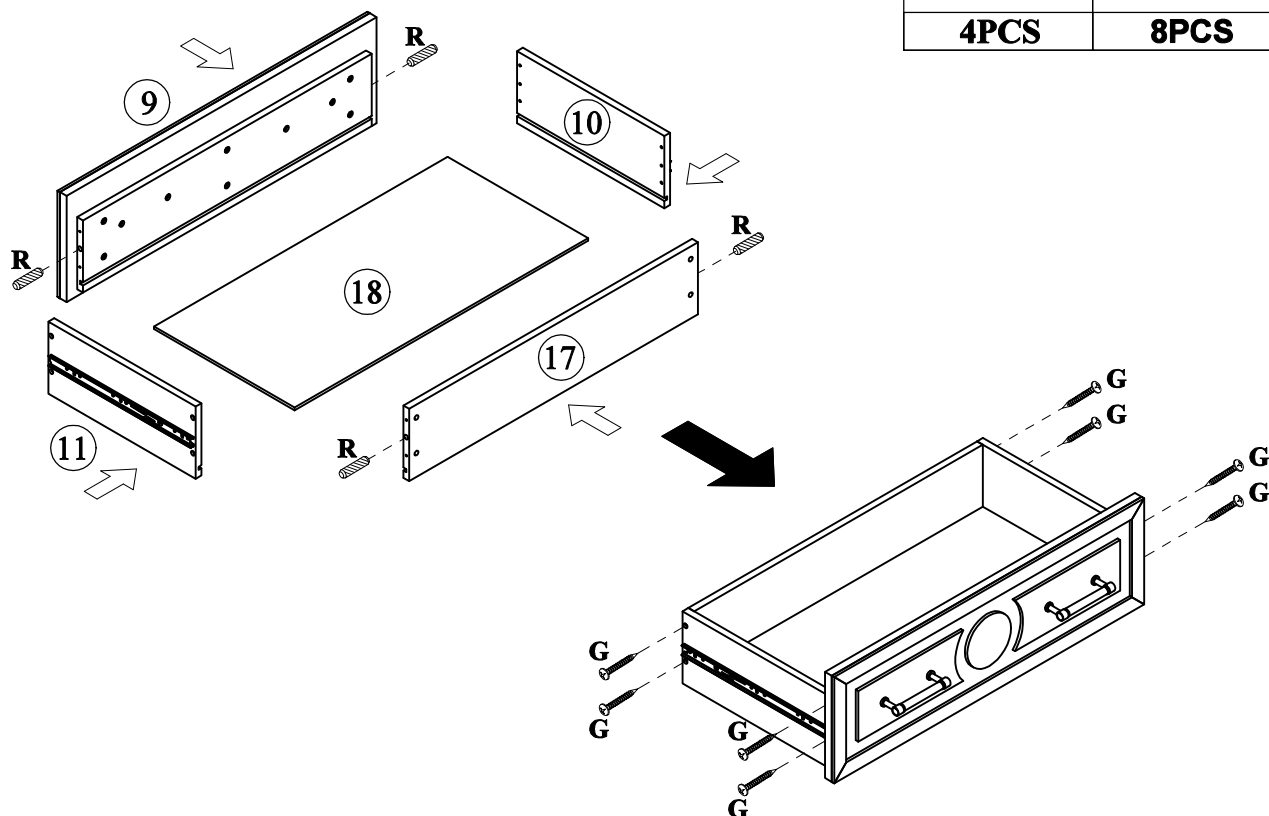

STEP: 11

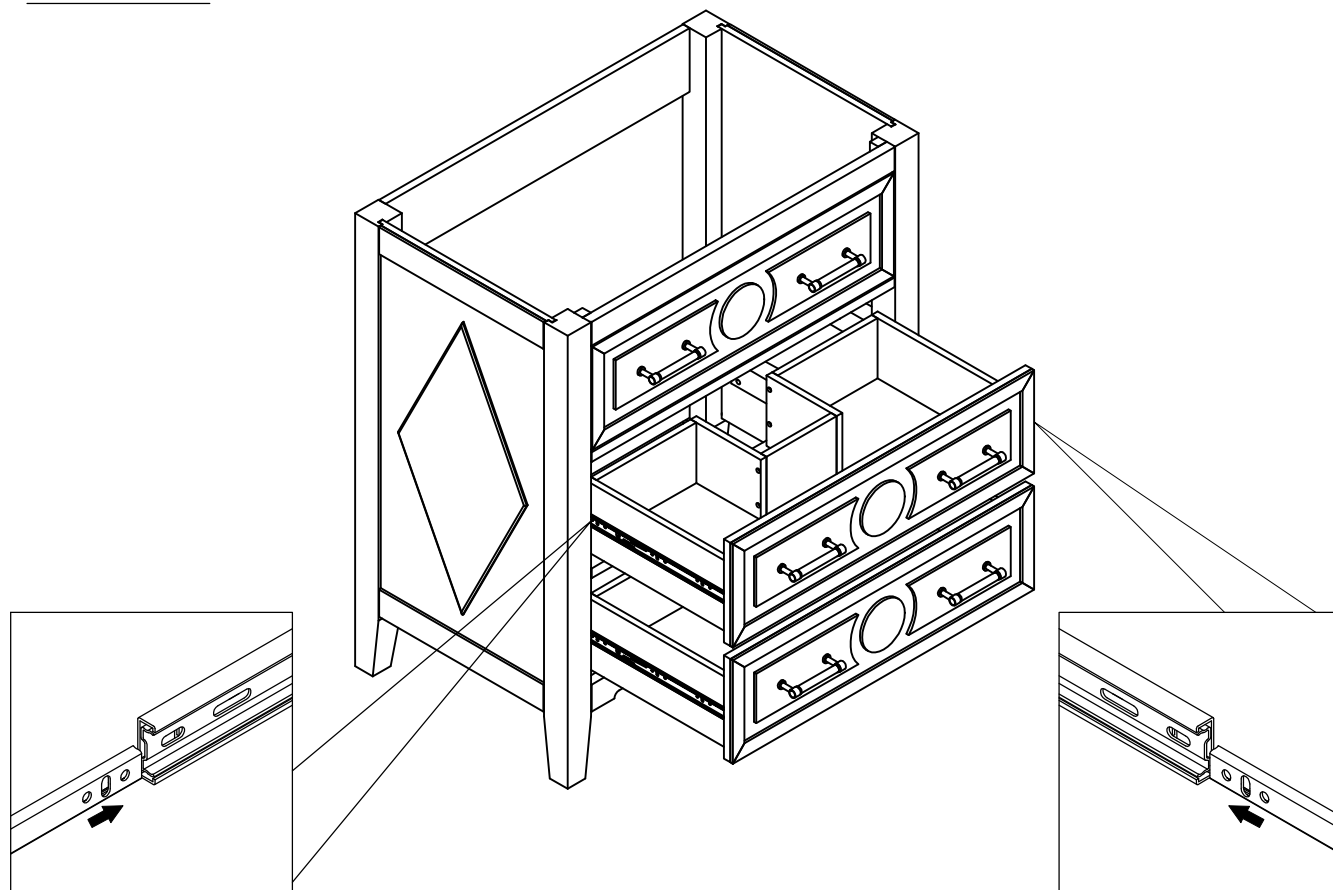


STEP: 12

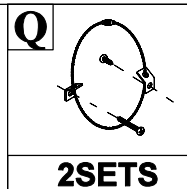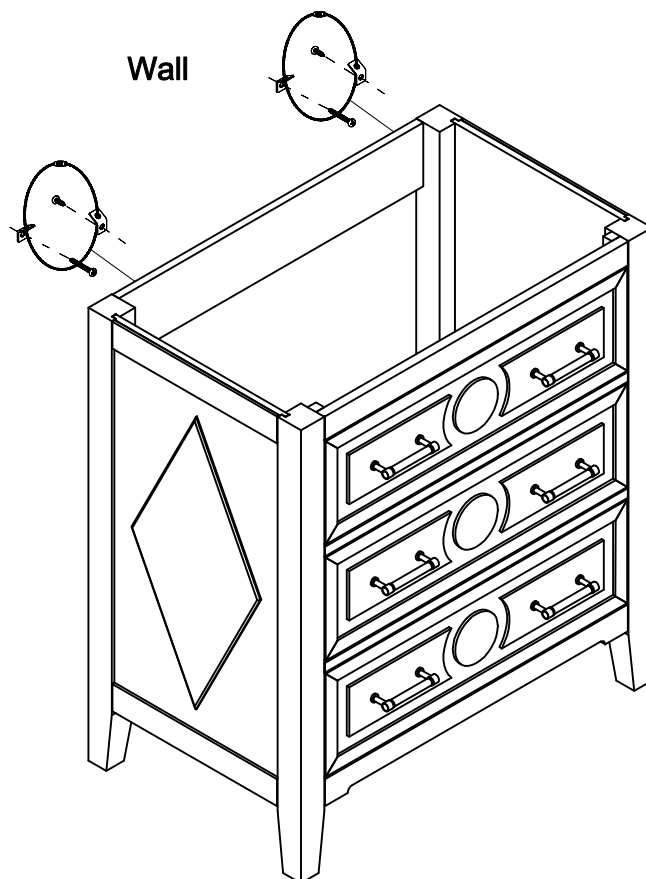

STEP: 13

Install the sink on the cabinet with glue.
Let stand for 24 hours

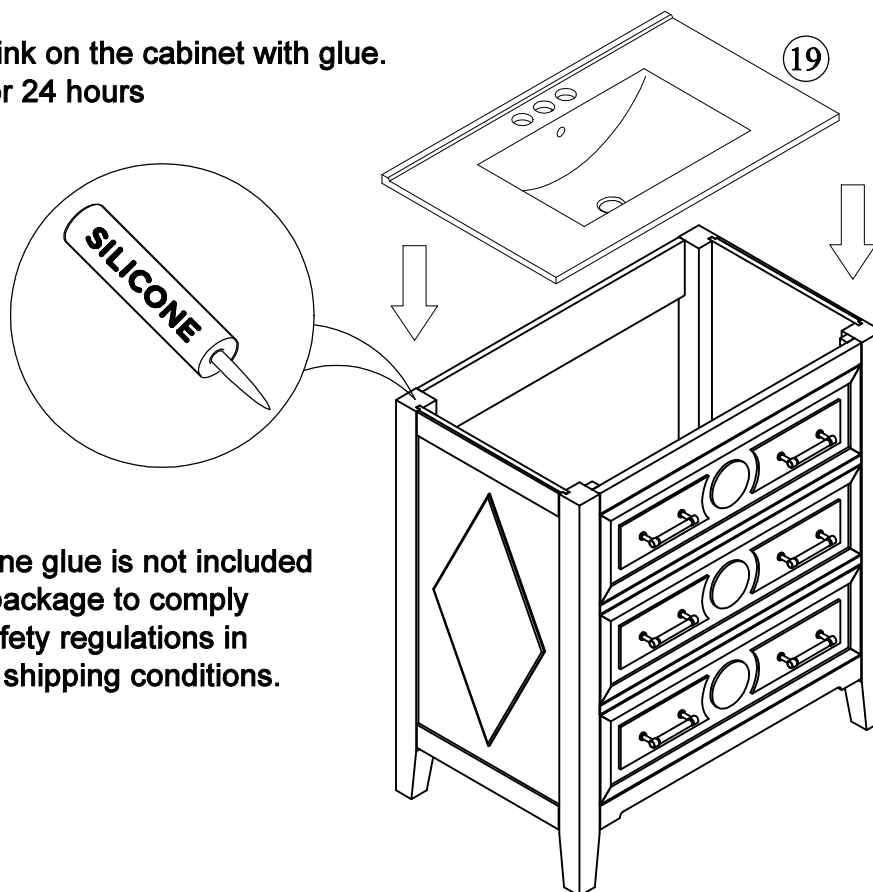

*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 14

