



Patio Furniture Sets

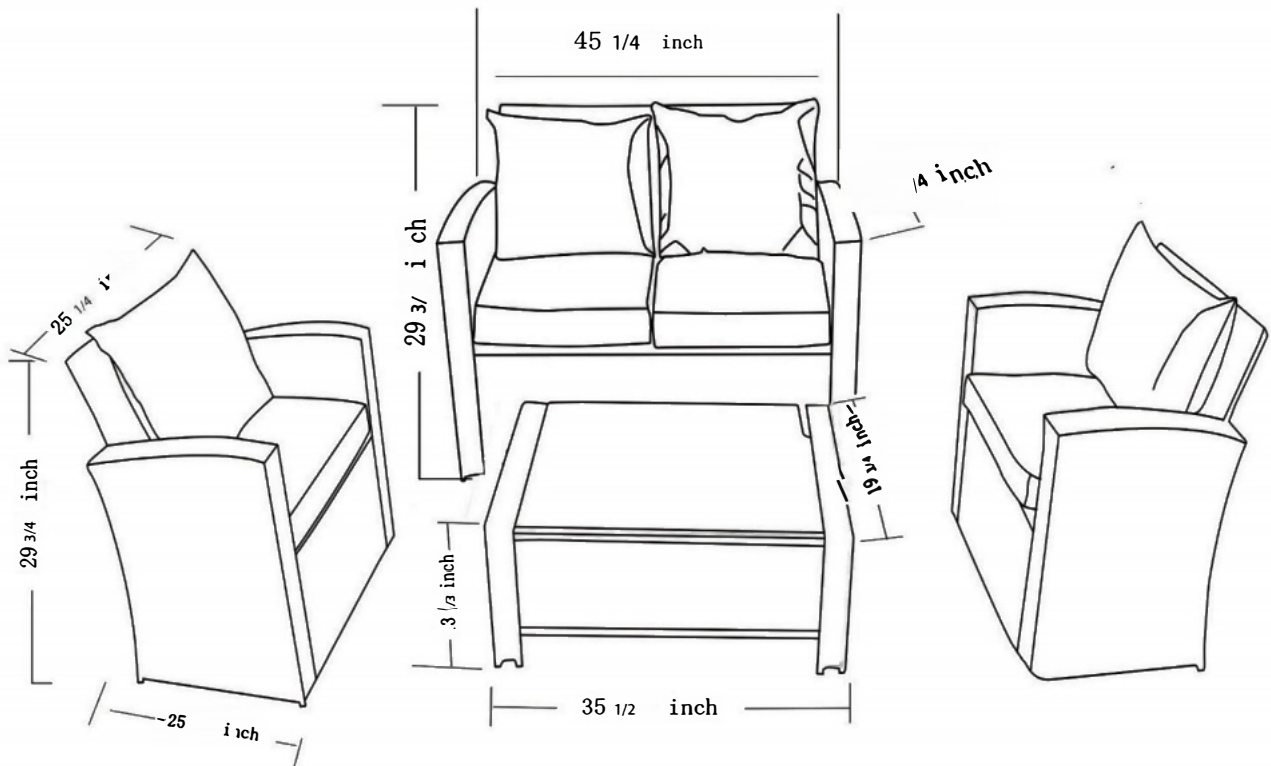

Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

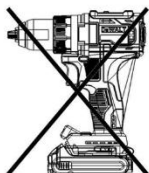

x 40



M6*35mm

x 6



M6*90mm

x 8



M6*15mm

x 54




M6mm



D x 1




4mm

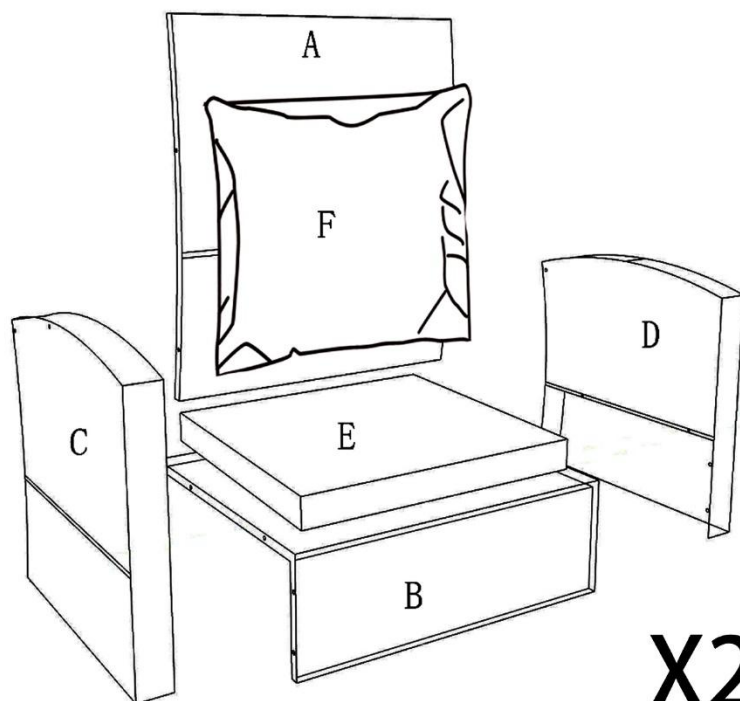


X2

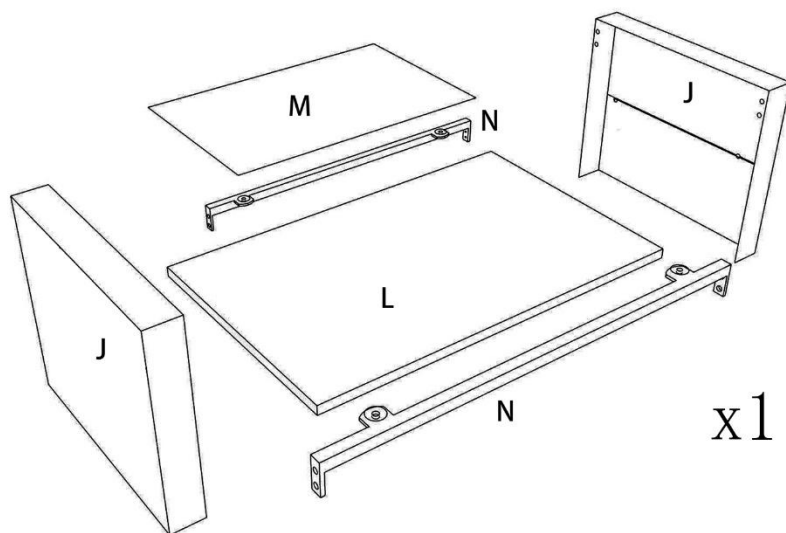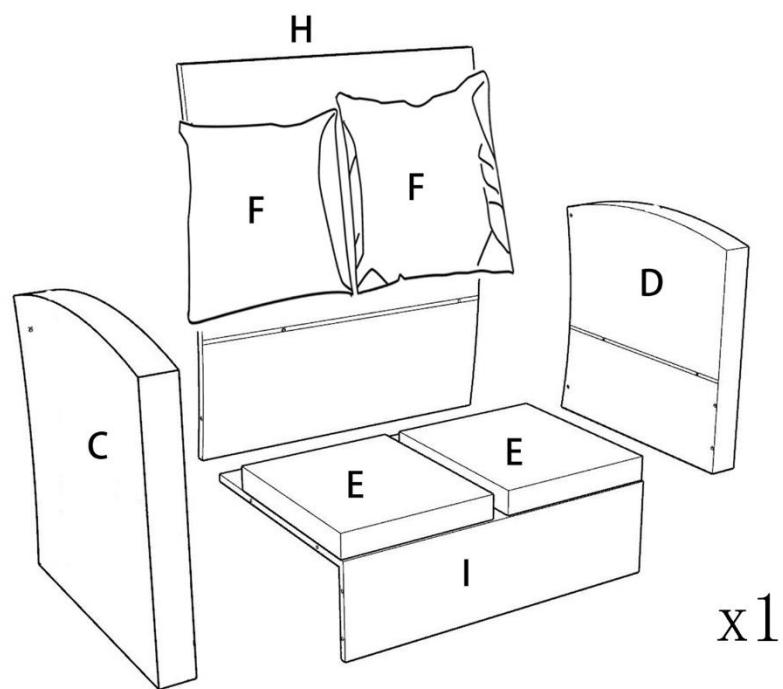


BOX:1/2

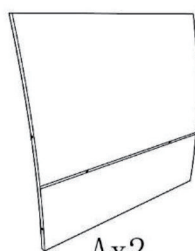


Ax2

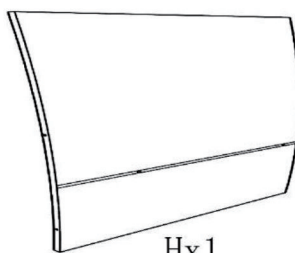


Hx1

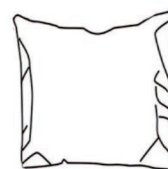

Fx2

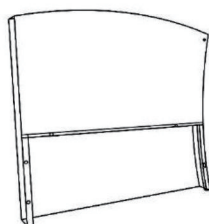


Cx2

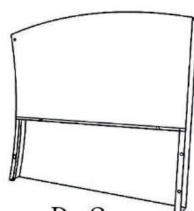


Dx2


BOX:2/2

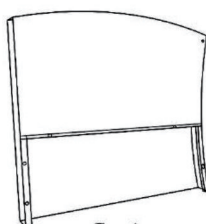


Cx1

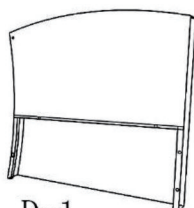


Dx1

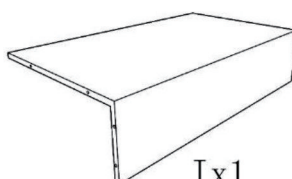


Ix1

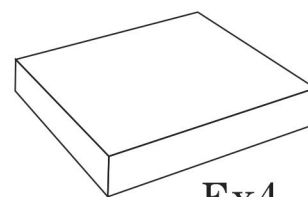

Ex4

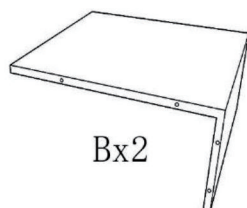


Bx2

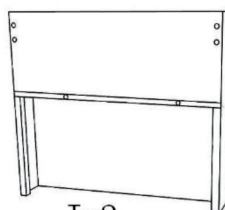


Jx2




Nx2



Lx1

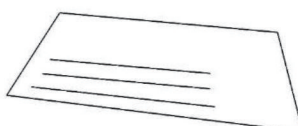

Mx1

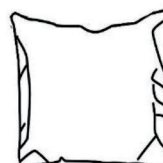


Fx2




1

x 4	x 4	x 1		
				
M6	M6x35	4mm		

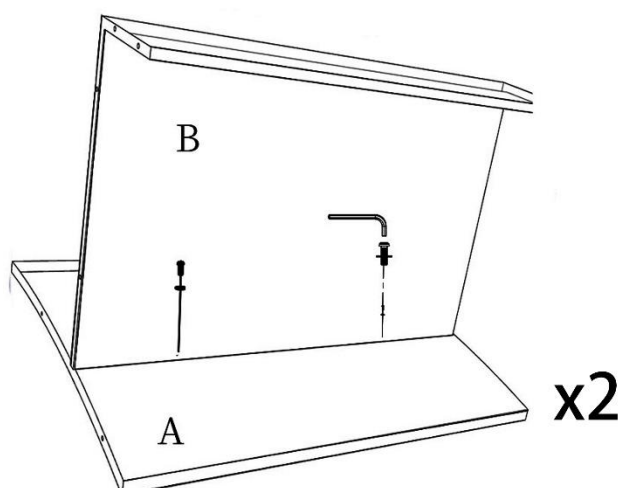


2

x 10	x 10	x 1		
				
M6	M6x35	4mm		

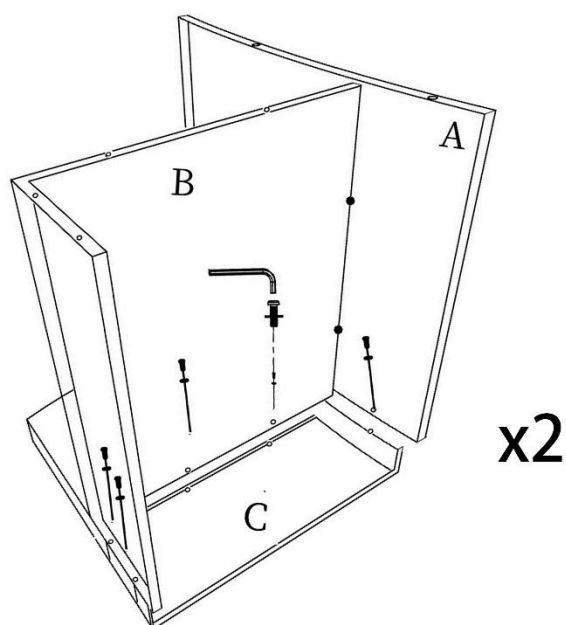


3

x 10	x 10	D x 1		
				
M6	M6x35	4mm		

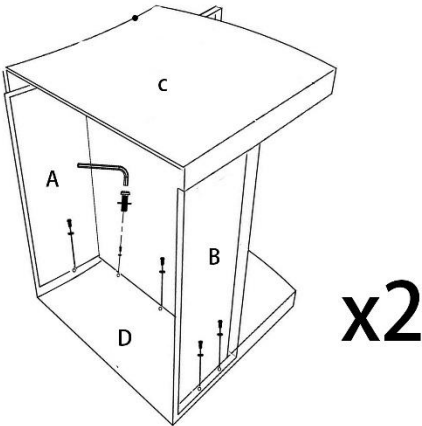


4

x 4	x 4	D x 1		
				
M6	M6x90	4mm		

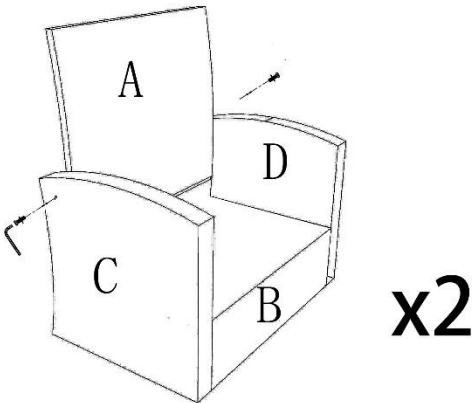


5

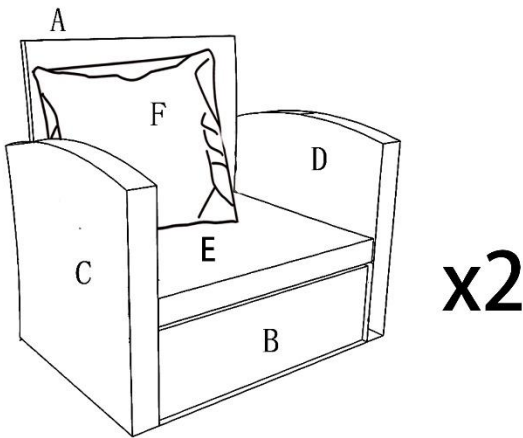


1

x 2	x 2	x 1		
				
M6	M6x35	4mm		

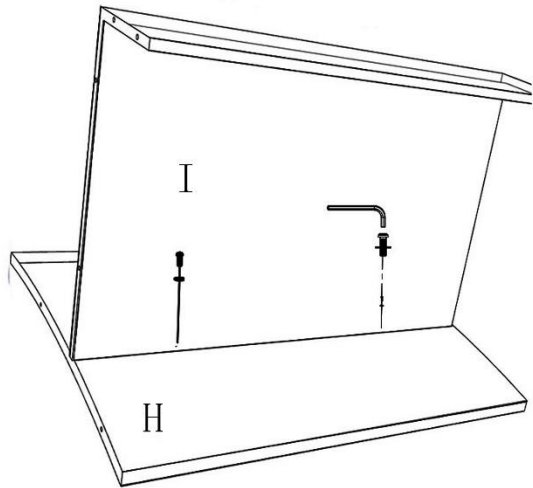


2

x 5	x 5	x 1		
				
M6	M6x35	4mm		

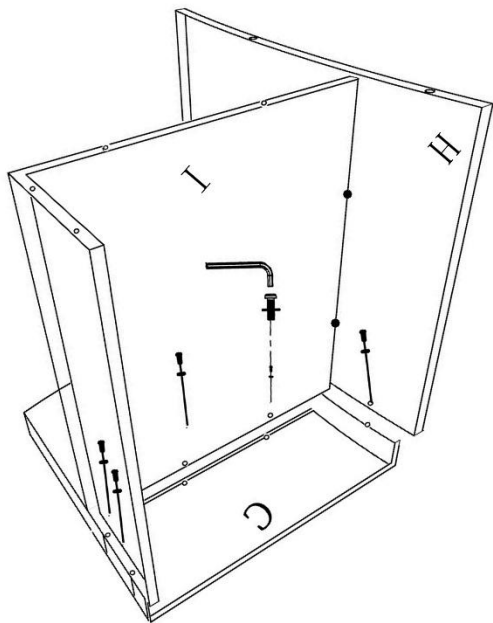


3

x 5	x 5	D x 1		
				
M6	M6x35	4mm		

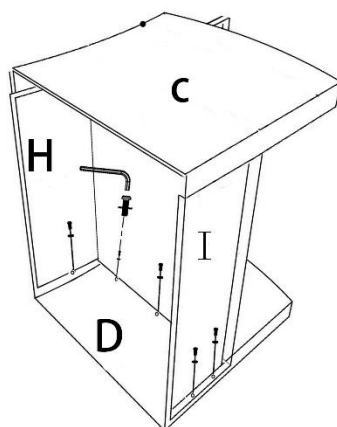


4

x 2	x 2	D x 1		
				
M6	M6x90	4mm		

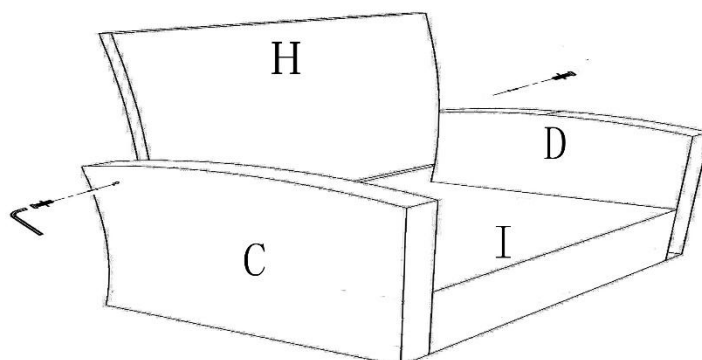


5

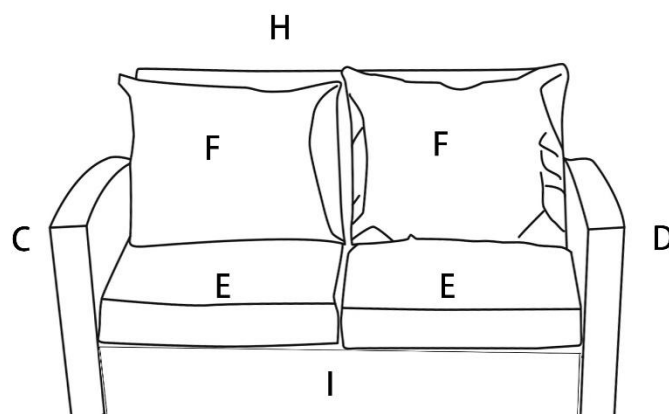


1

x 2	x 2	x 1		
				
M6	M6x35	4mm		

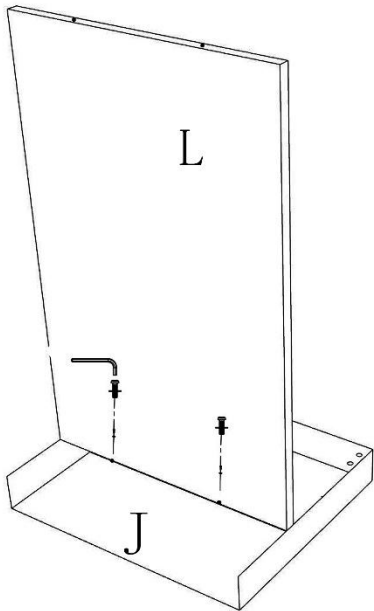


2

x 2	x 2	x 1		
				
M6	M6x35	4mm		

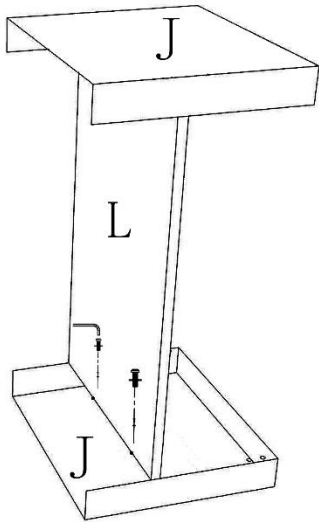

3

x 8	x 8	D x 1		
				
M6	M6x15	4mm		

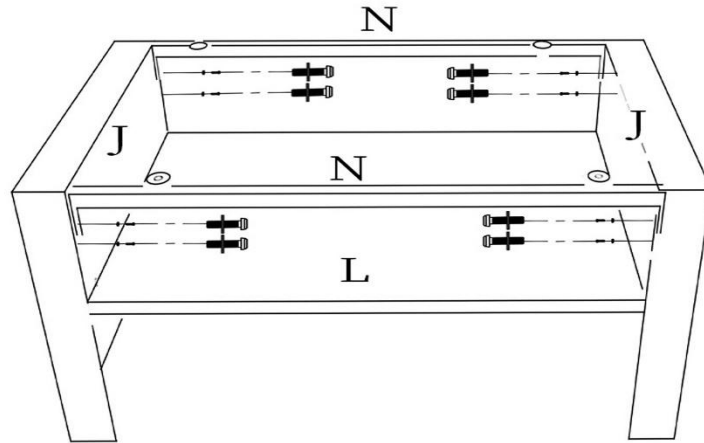

4

