

Metal Shelf Instructions



ACCESSORIES LIST					
CODE	PIC	QTY	CODE	PIC	QTY
A (Mirror)		1PCS	B (Plastic anchors)		5PCS
C (Tapping Screws)		5PCS	D (Plastic anchors for Gypsum walls)		5PCS


Please prepare all the shown tools before installation.




The product should be installed on the wall or ceiling that can bear heavy weight. Improper assembly or installation may result in personal or property damage.

Acceptable	Concrete walls, Wood stud walls, Brick walls
Not Recommended	Hollow walls(e.g., non-structural drywall, plasterboard)


Step 1
Measure distance between mirror hooks and mark on wall

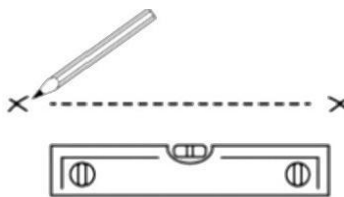

Step 2
Drill holes and insert anchors at marked points

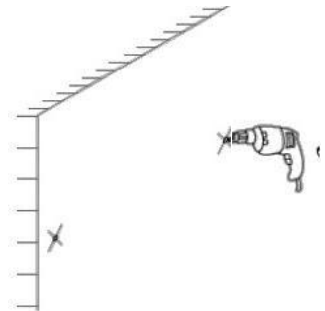

Step 3
Screw into anchors(B) and screws(C), leaving 3-5mm exposed

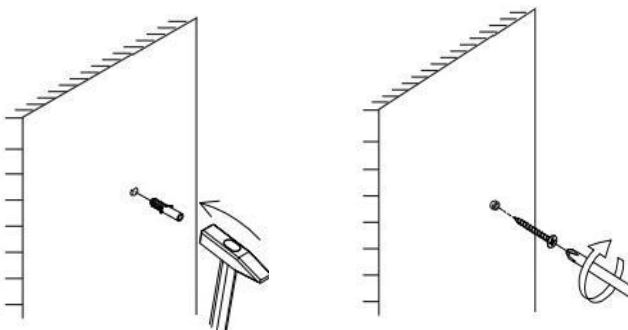

Step 4
Align the back brackets with the wall hooks.

