


DESK

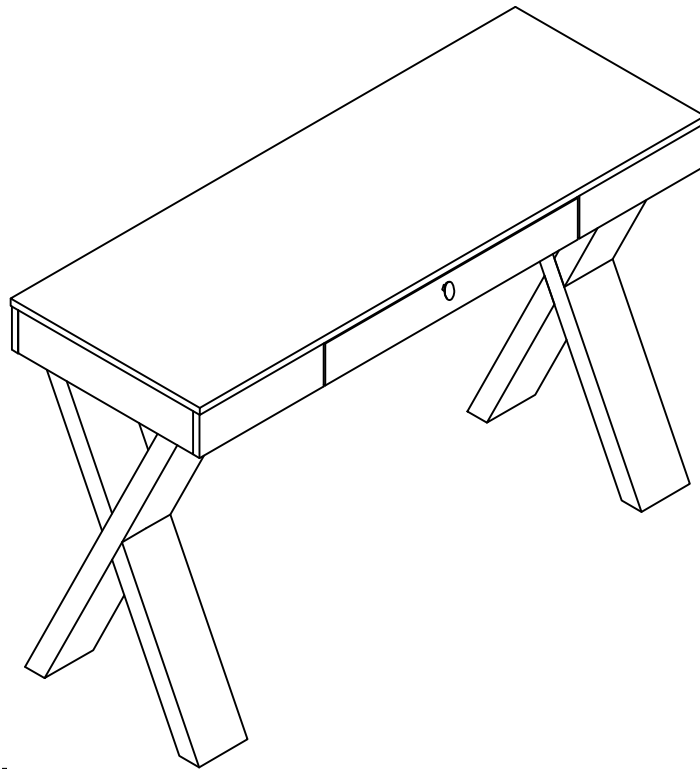













Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Please do not return to the store

Hardware List



(A)	
CAMBOIT(23PCS)	
(B)	
CAMLOCK(23PCS)	
(C)	
DOWEL(20PCS)	
(D)	
LONG SCREW(3PCS)	
(E)	
SHORT SCREW(16PCS)	
(F)	
BRACKET(4PCS)	
(G)	
PHILLIPS HEAD BOLT(8PCS)	
(H)	
FOOFPIN(4PCS)	
(I)	 RC
STICKERS(8PCS)	
(J)	
HANDLE(1PC)	
(K)	
HANDLE SCREW(1PC)	
(L)	
GLUE(1PC)	

Part List





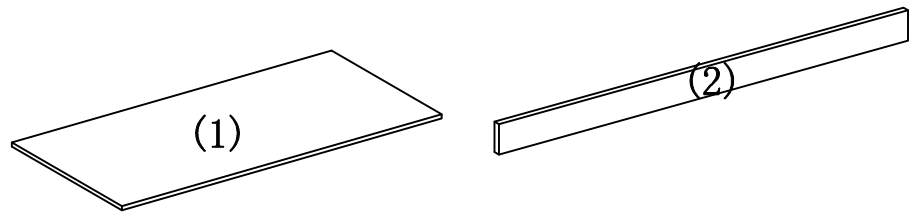


DESK TOP(1PC)

FRAME BACK RAIL(1)

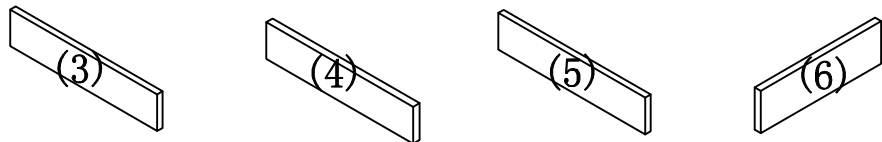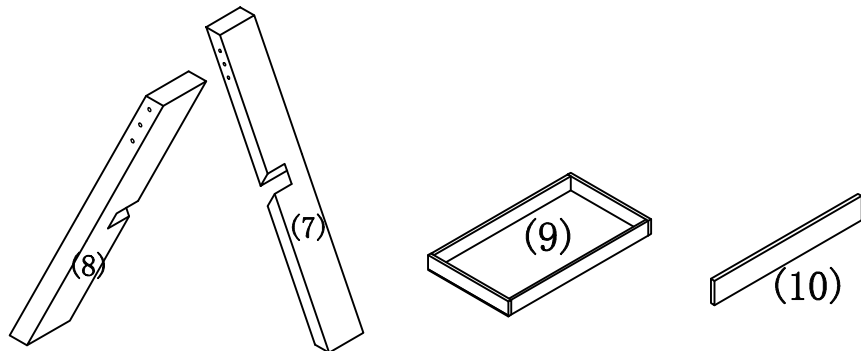
OUTER FRAME
(2PCS)INNER FRAME
RAIL-RIGHT(1PC)INNER FRAME
RAIL-LEFT(1PC)FRONT FRAME
RAILS (2PCS)INNER LEGS
(2PCS)OUTER LEGS
(2PCS)DRAWER ASSEMBLY
(1PC)DRAWER FRONT
(1PC)

Assembling the unit with camlocks and wood dowels.

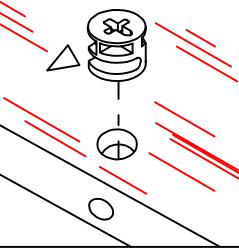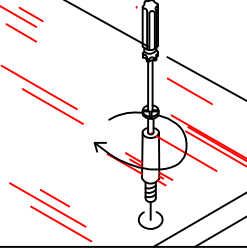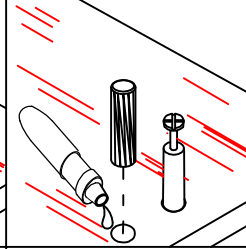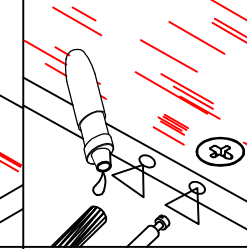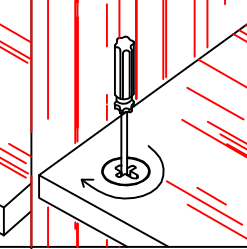				
Insert camlock, camlock must face bolt hole	Gently screw cam bolt into the threaded anchor	lightly glue one end of wood dowel and tap into holes.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1

1. Screw cambolts(A) and insert dowels(C) into front frame rails(6).
2. Attach front frame rails(6) to outer (3) and inner (4) and (5) frame rails, using care not to overtighten camlocks.

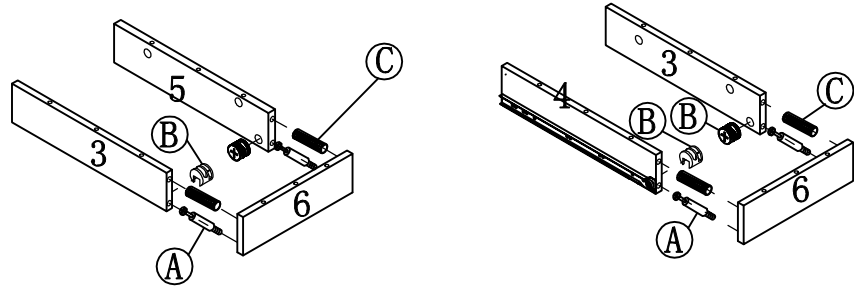


NOTE:

*REFER TO PAGE 3 FOR CAMLOCK INSTRUCTIONS.


Step2

1. Screw cambolts(A) and insert dowels(C) into frame back rail(2).
2. Connect frame back rail (2) to frame assemblies and gently tighten camlocks.

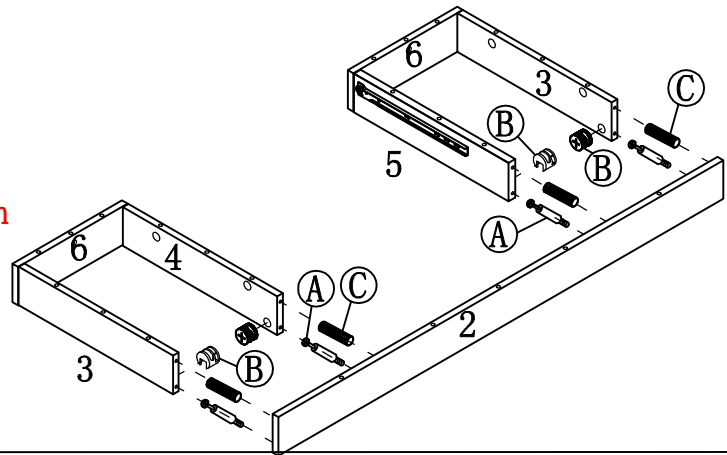

Step3


1. Place desk top(1) upside down on a soft surface.
2. Screw cambolts(A) and insert dowels (C) into desk top(1).
3. Place frame assembly onto desk top (1) and tighten camlocks.

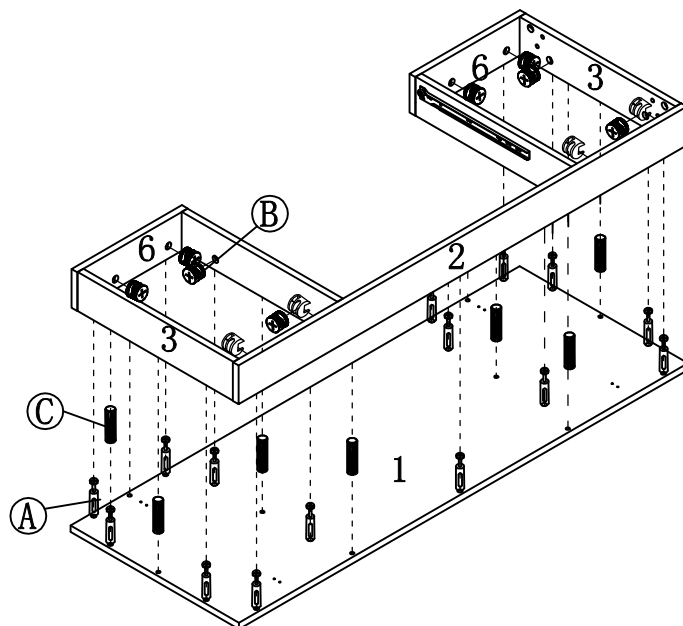

Step4

1.Connect outer legs (8) to inner legs (7) .

2.Attach brackets (F) to tops of legs as shown
(Flat parts of brackets face up) using short screws
(E) .

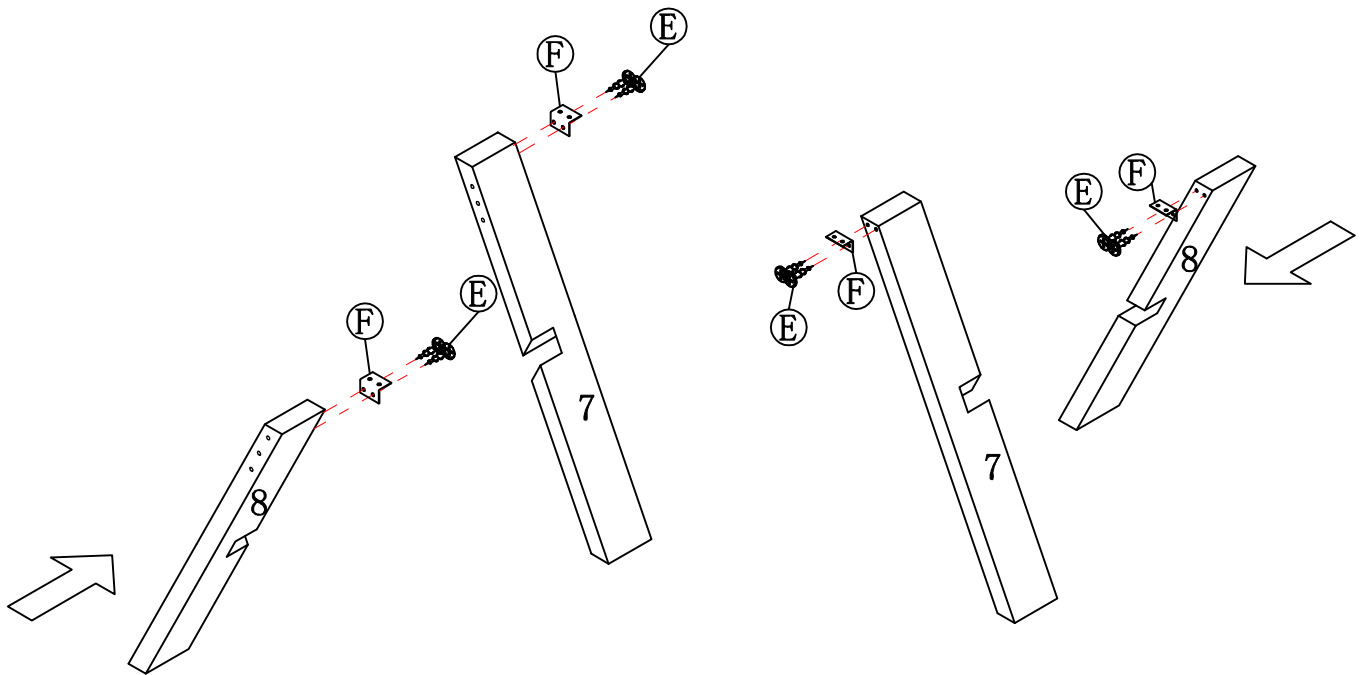


Step5

1.Insert dowels (C) into leg assemblies.


2.Fasten leg assemblies to desktop using
philips head bolts (G).

3.Brackets will be on inside
of Desk in contact with top.

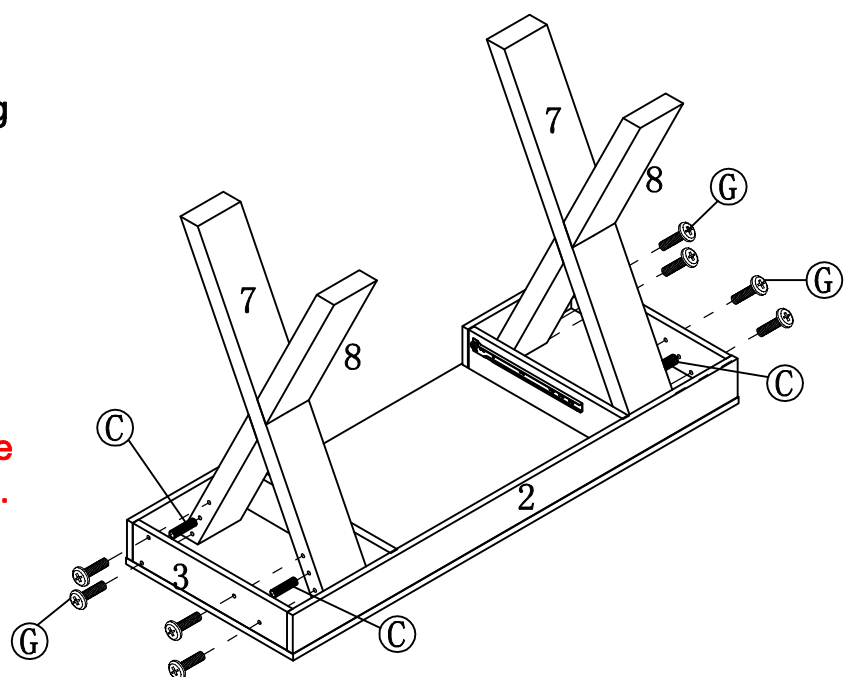


Step6

1. Screw brackets into desk top with short screws (E).
2. Gently **tap foot pins (H)** into legs.

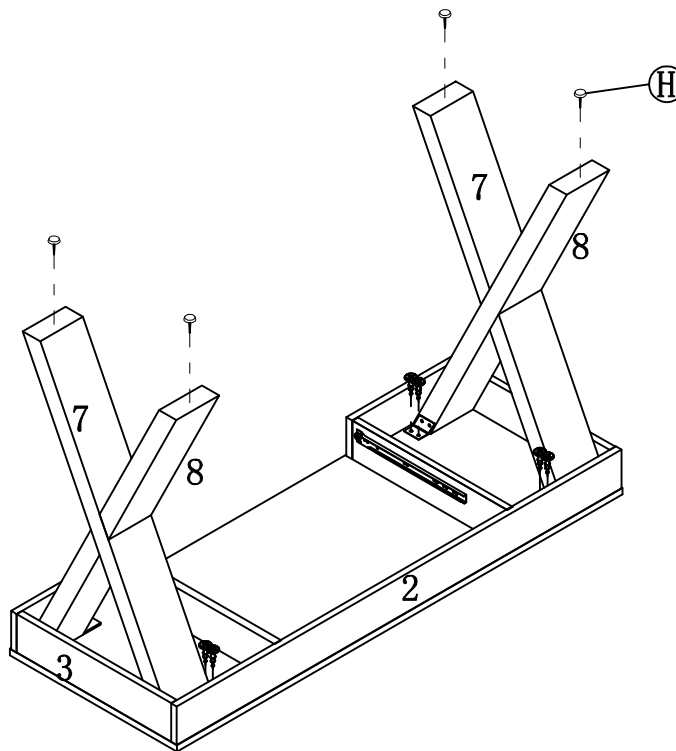

Step7

1. Attach handle (J) to drawer front (10) using handle screw (L).
2. Fasten drawer front (10) to drawer assembly (9) using long screws (D).

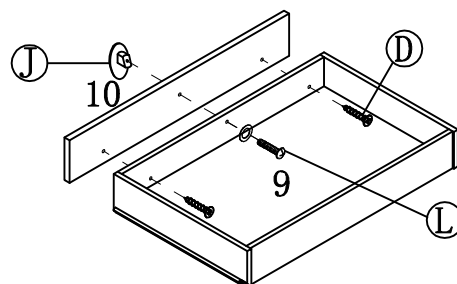

Step8

1. Carefully insert drawer into desk.
2. Enjoy your new desk.

