



Assembly Instructions

PACKAGED

- (A) 8-Bolt  (E) 1- Connection Plate 
 (B) 8-Lock Washer  (F) 4-Wood Screws 
 (C) 8-Flat Washer  (G) 1set- Anti-tipping kit. 
 (D) 6-Wood Screws 




(H) 1-Secretary Top



(I) 1-Secretary Base



(J) 2-Left Legs




(K) 2-Right Legs




(L) 2-Side Structure




(M) 1-Centre Structure

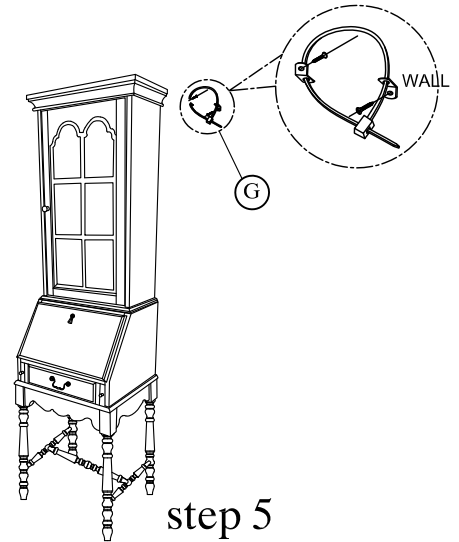


step 5

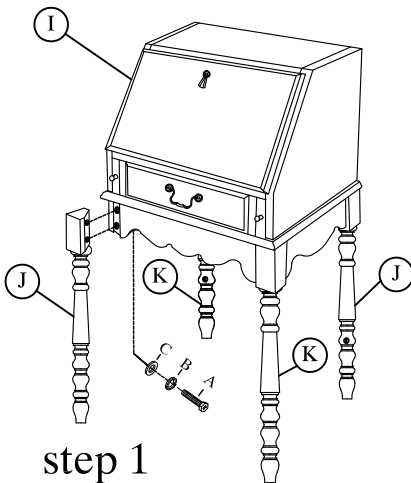


step 1

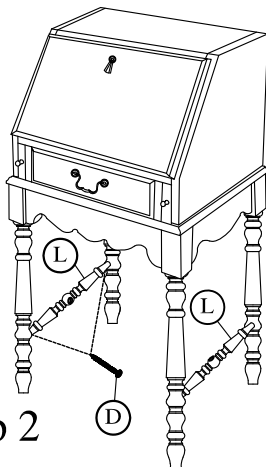

step 2

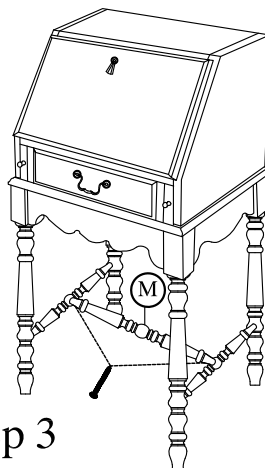

step 3

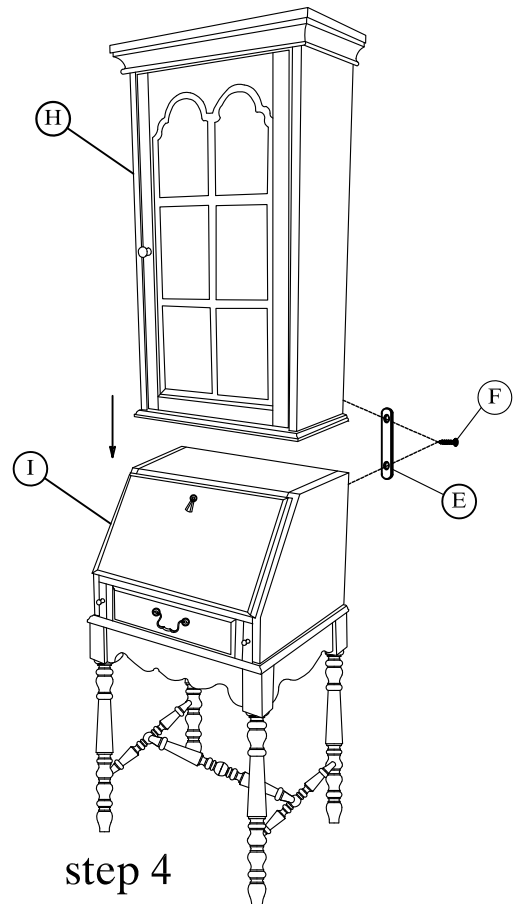

step 4

(*)Caution:DO NOT OVERTIGHTEN