
Assembly Instructions

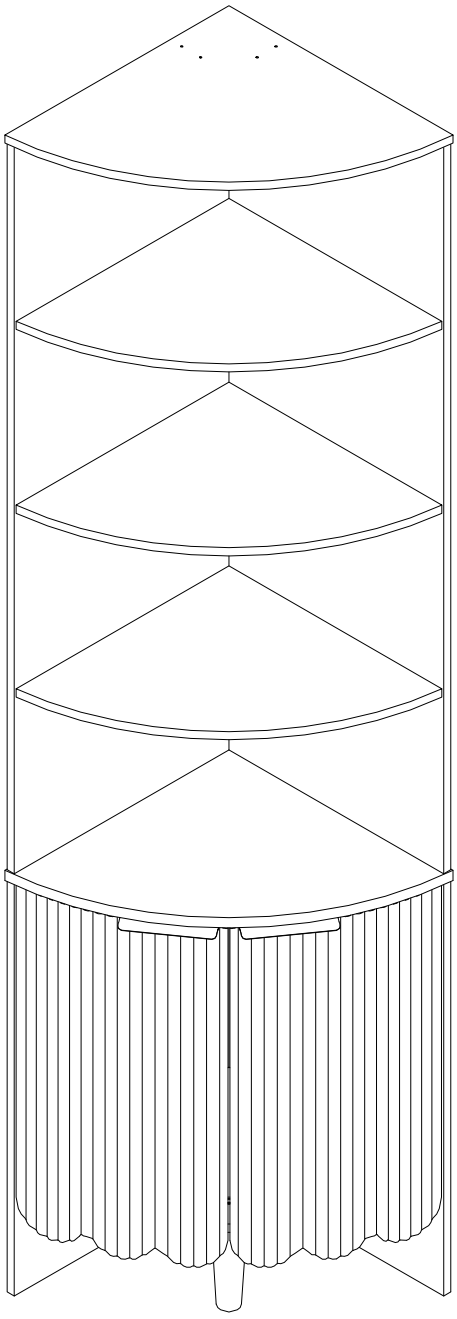

⚠	“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

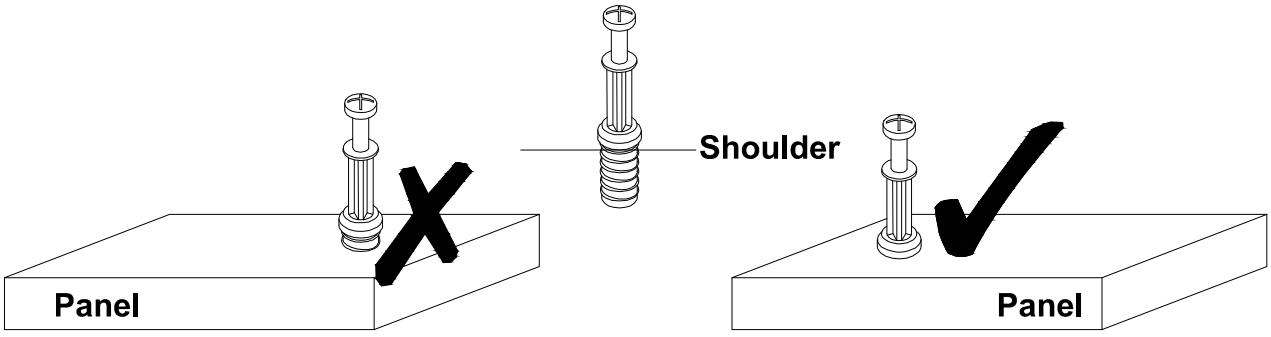


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

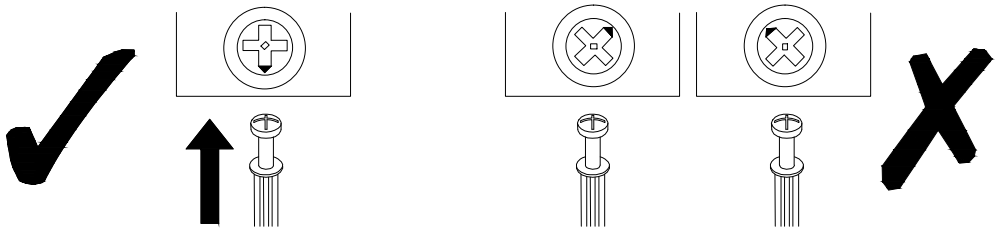


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

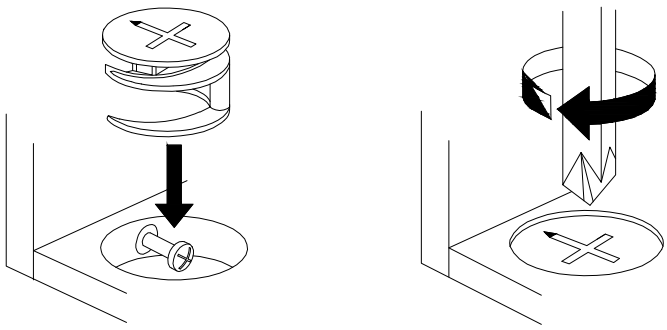

Turn cam lock clockwise to tighten.











Product structure

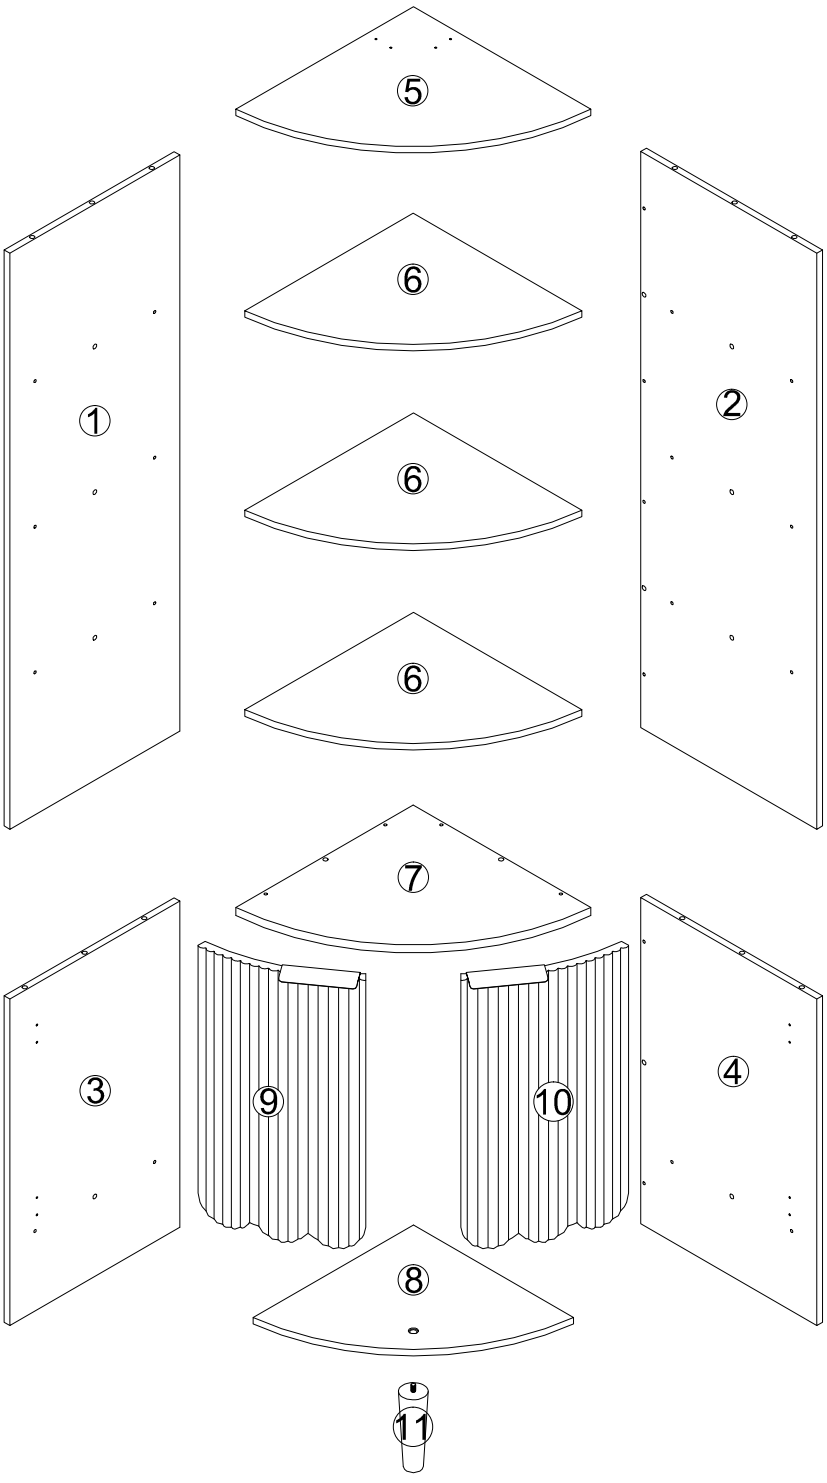


⚠	“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”

Part List


⚠	“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

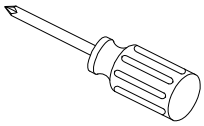No. A Quantity:34 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:34 Pcs Cam φ15 	No. C Quantity:35 Pcs Sticker Ø20 	No. D Quantity:17 Pcs Dowel 8*30mm 
No. E Quantity:4 Pcs Large curved door hinge 	No. F Quantity:28 Pcs Screw M3.5*12mm 	No. G Quantity:4 Pcs Screw M3.5*14mm 	No. H Quantity:2 Pcs Handle 
No. I Quantity:4 Pcs Foot Pad Ø12 	No. J Quantity:2 Pcs Magnetic Door Catcher 	No. K Quantity:1 Pc Screwdriver 	No. L Quantity:2 Sets Hardware anti-falling belt 


STEP 1

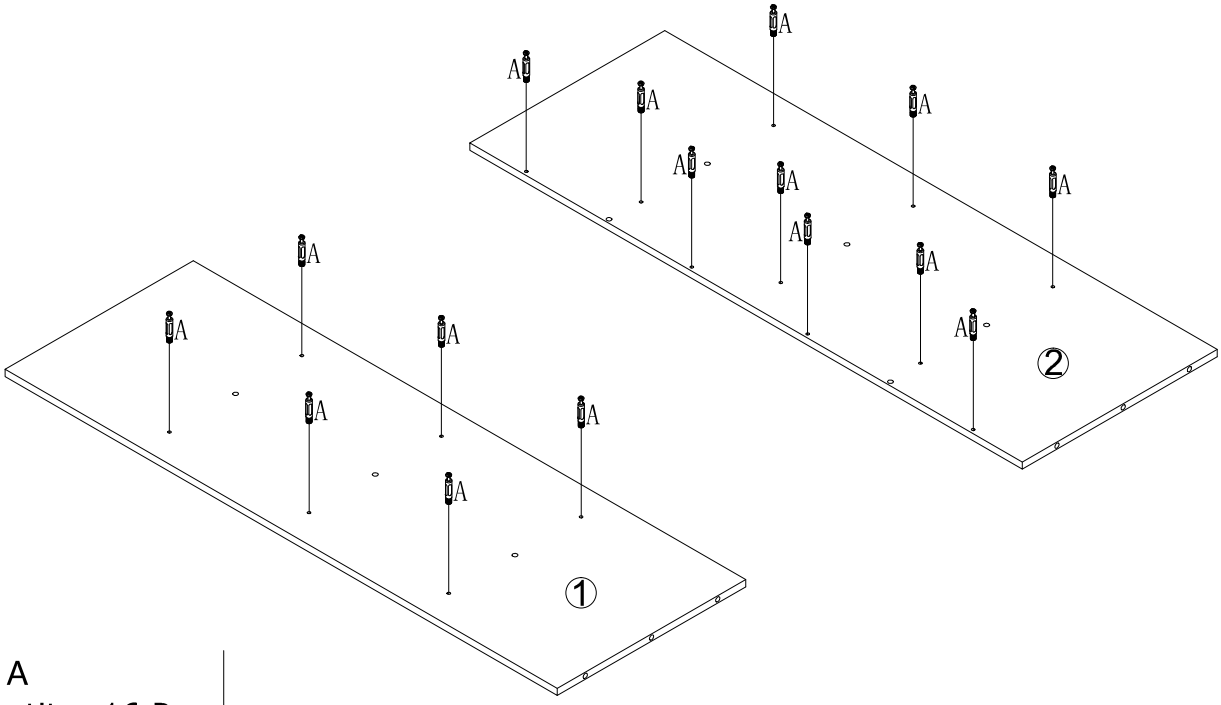


No. A
Quantity: 16 Pcs
8*28 mm




STEP 2

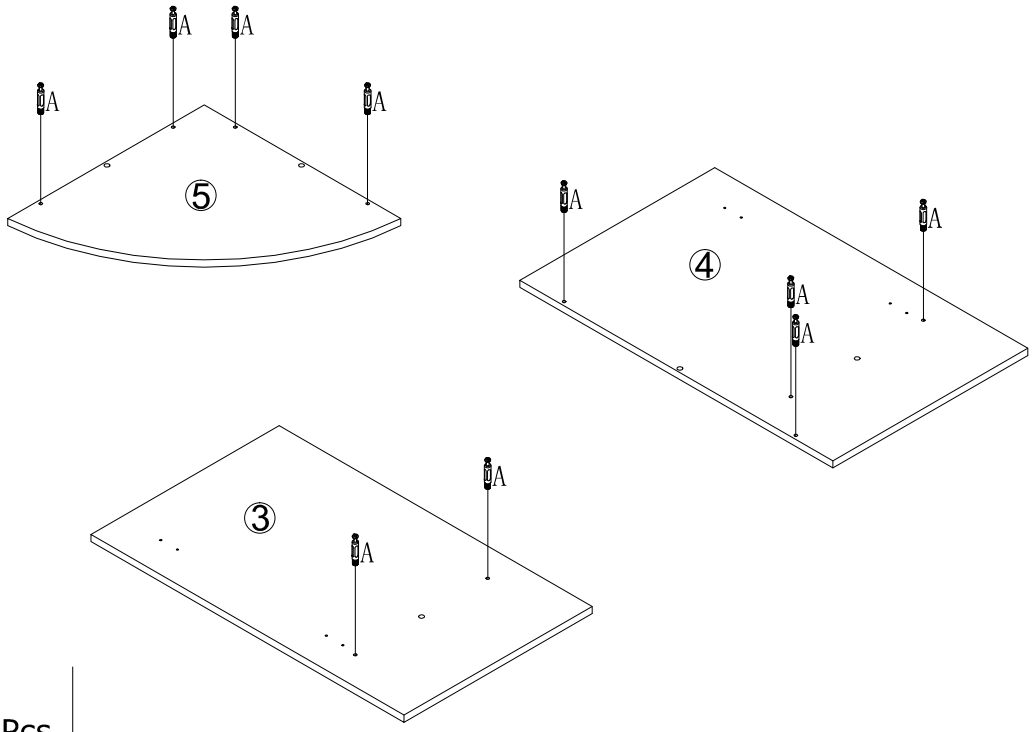

No. A
Quantity: 10 Pcs
8*28 mm



STEP 3

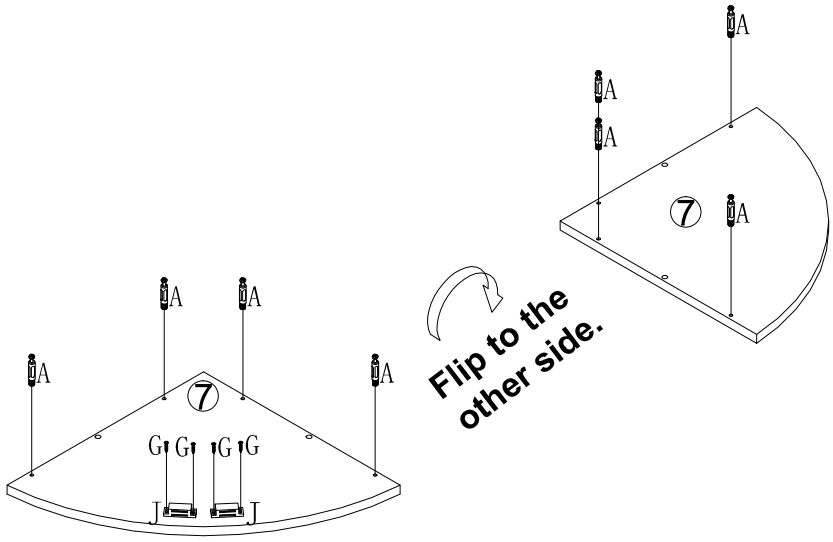


No. A
Quantity: 8 Pcs
8*28 mm



No. G
Quantity: 4 Pcs
M3.5*14mm




No. J
Quantity: 2 Pcs



STEP 4


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20




No. D
Quantity: 3 Pcs
8*30mm



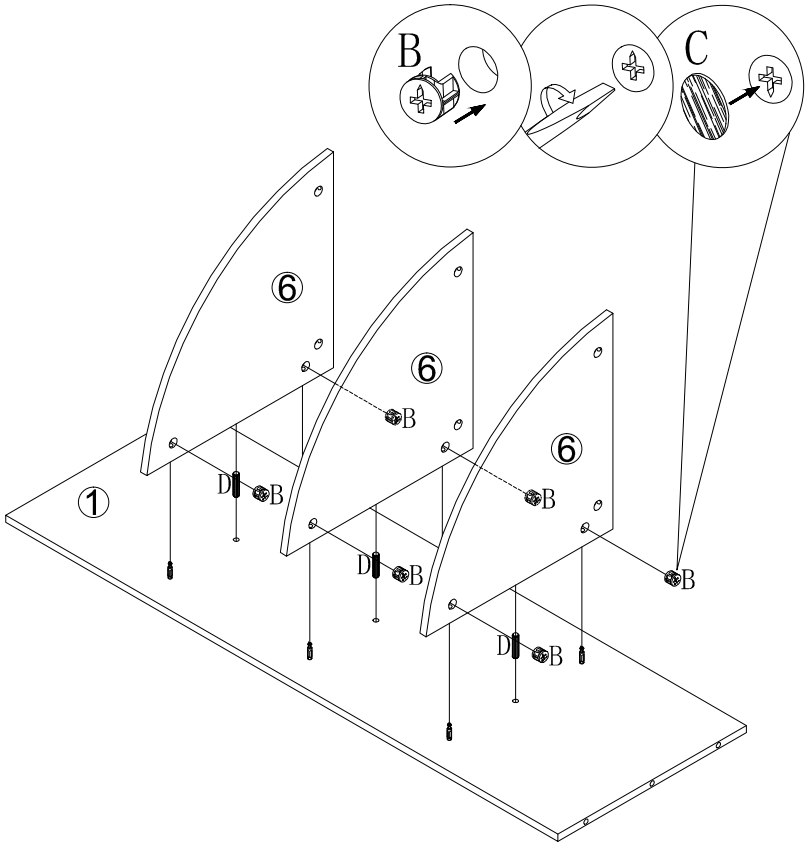

STEP 5


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20




No. D
Quantity: 5 Pcs
8*30mm



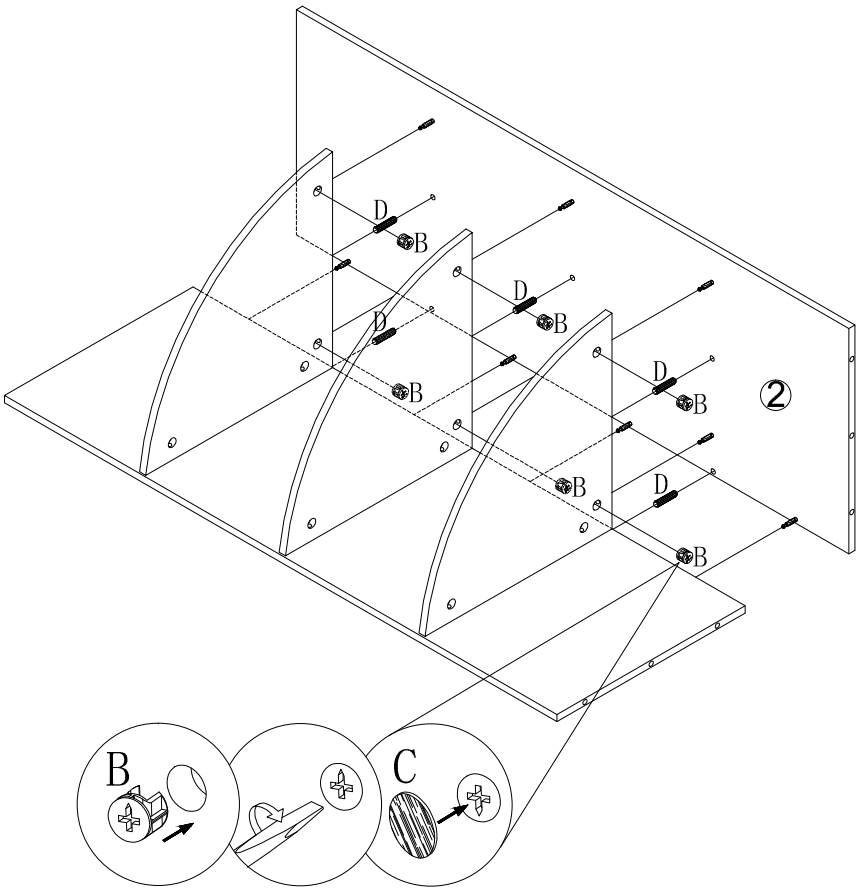

STEP 6


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



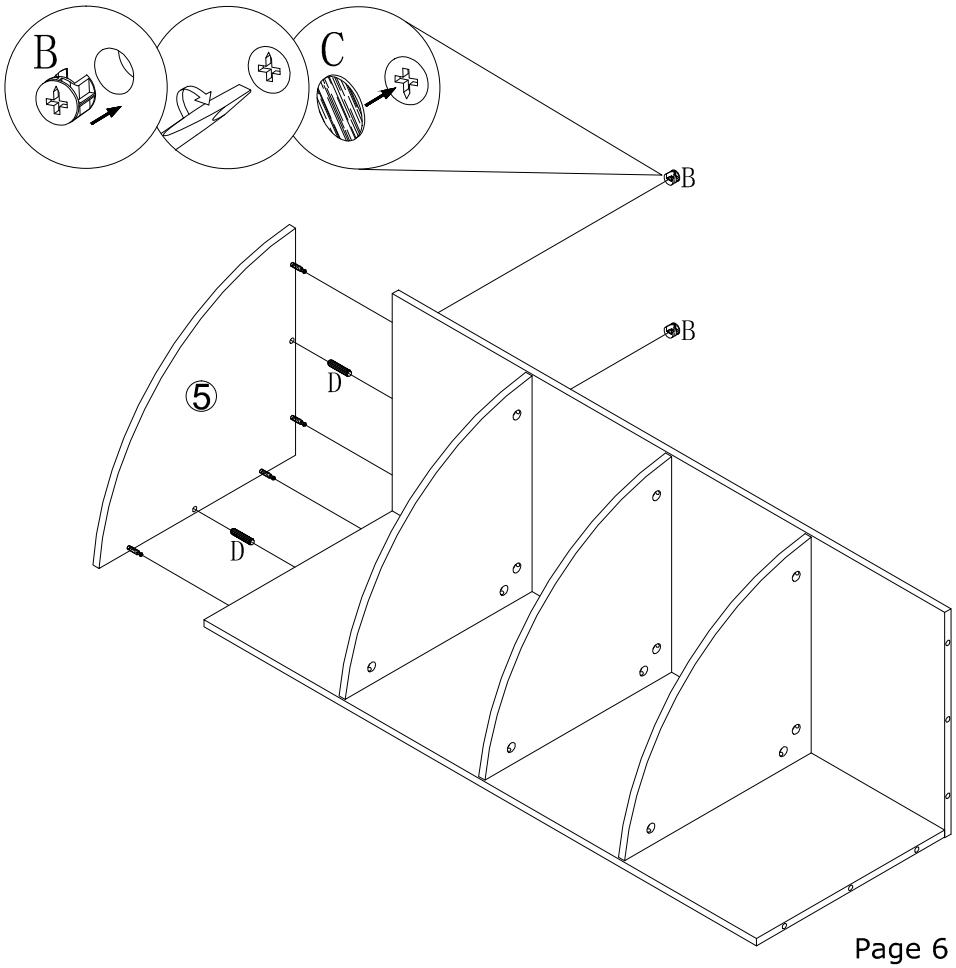

STEP 7


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



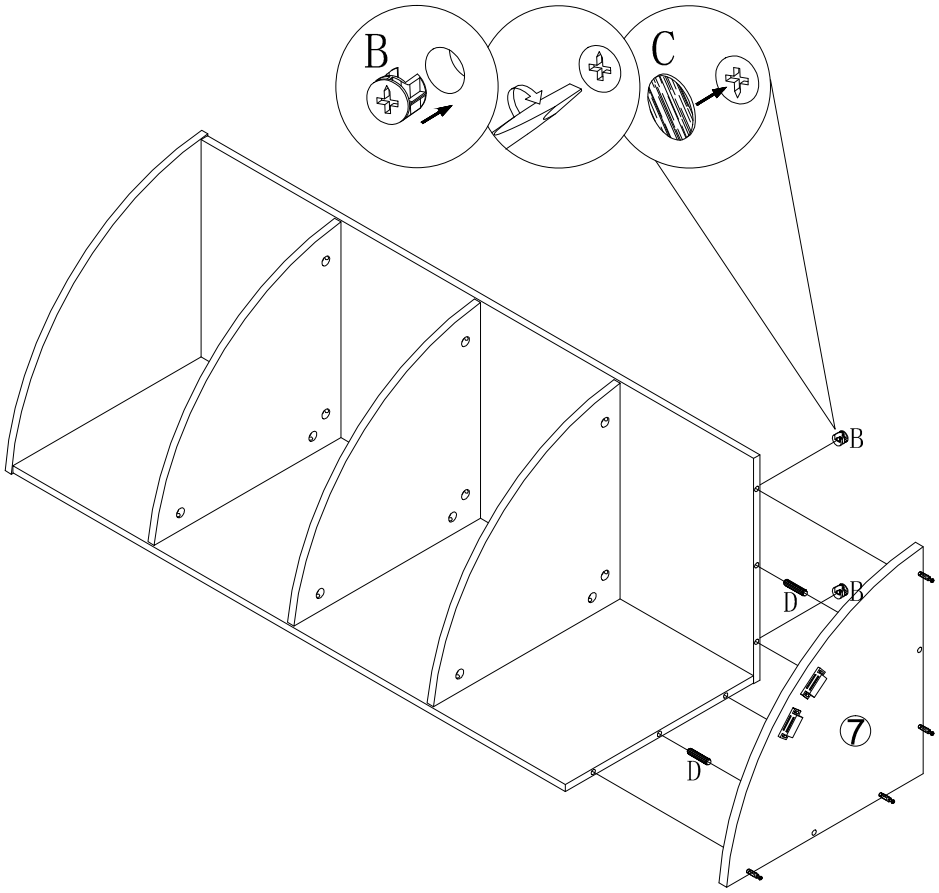

STEP 8


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 1 Pc
8*30mm



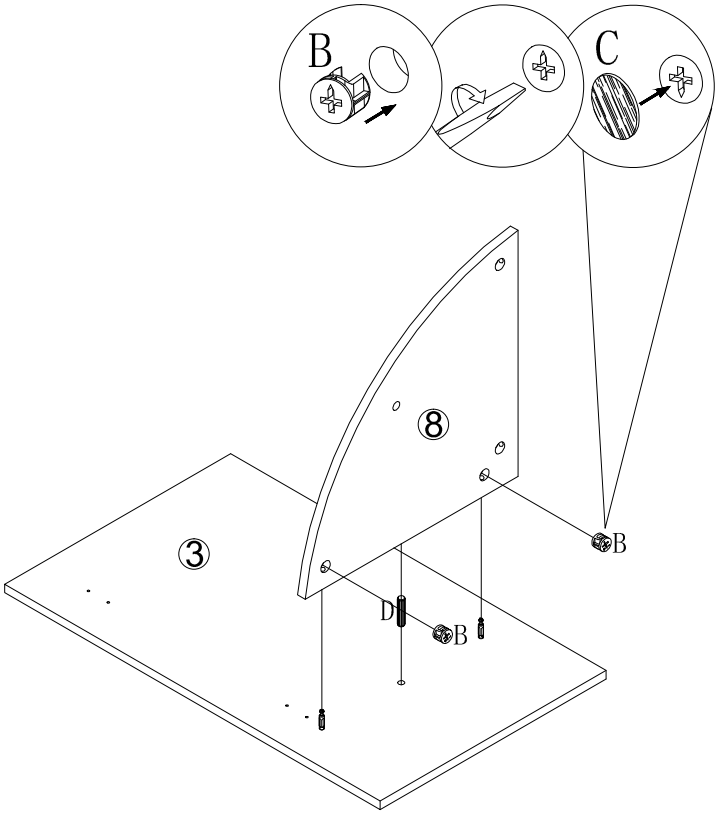

STEP 9


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm



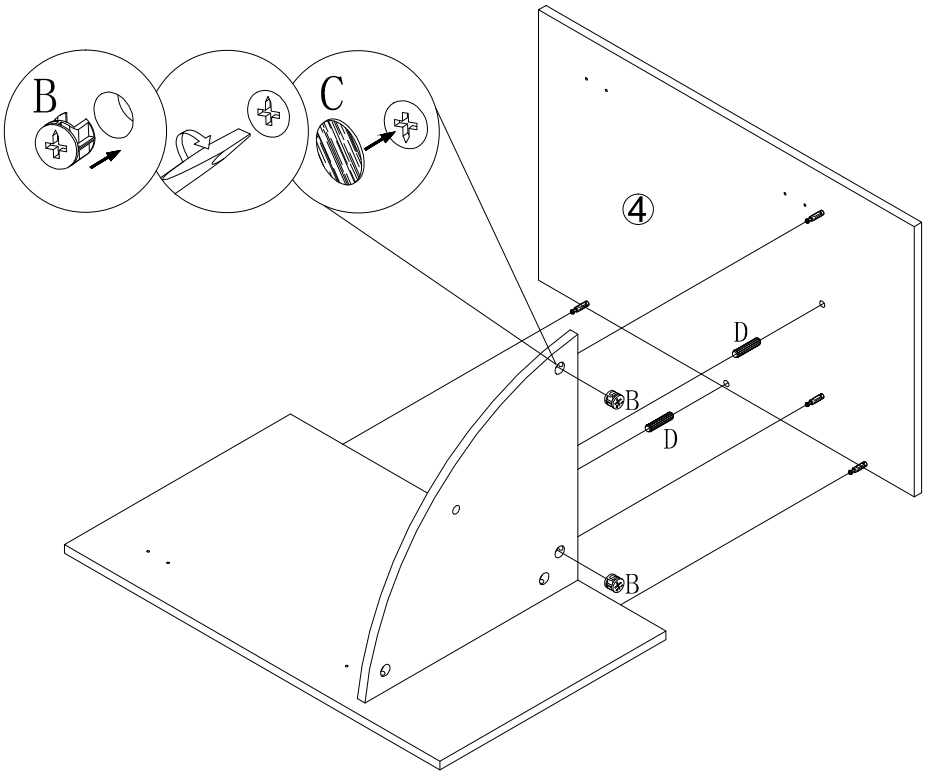

STEP 10


No. B
Quantity: 2 Pcs
Ø15




No. C
Quantity: 2 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm




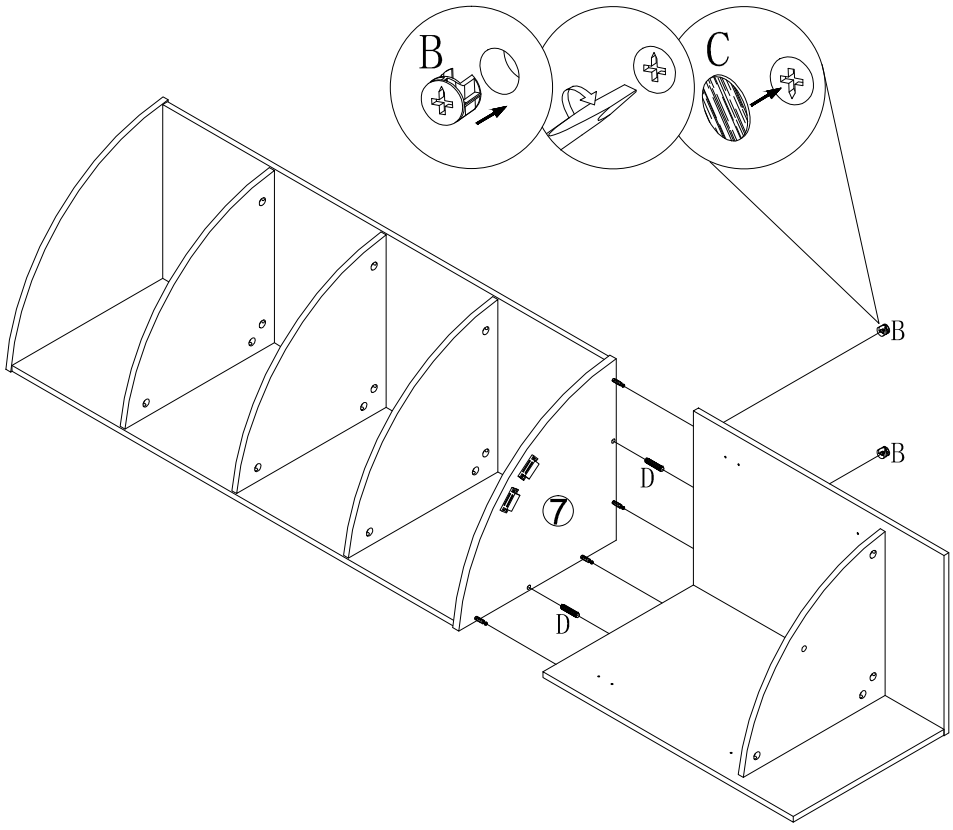

STEP 11

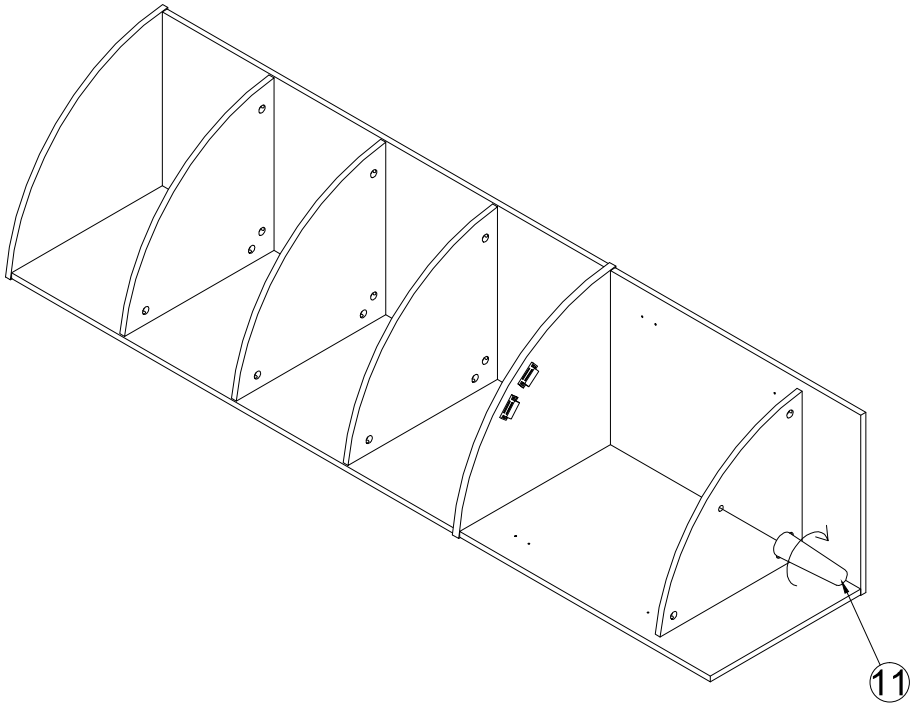


STEP 12

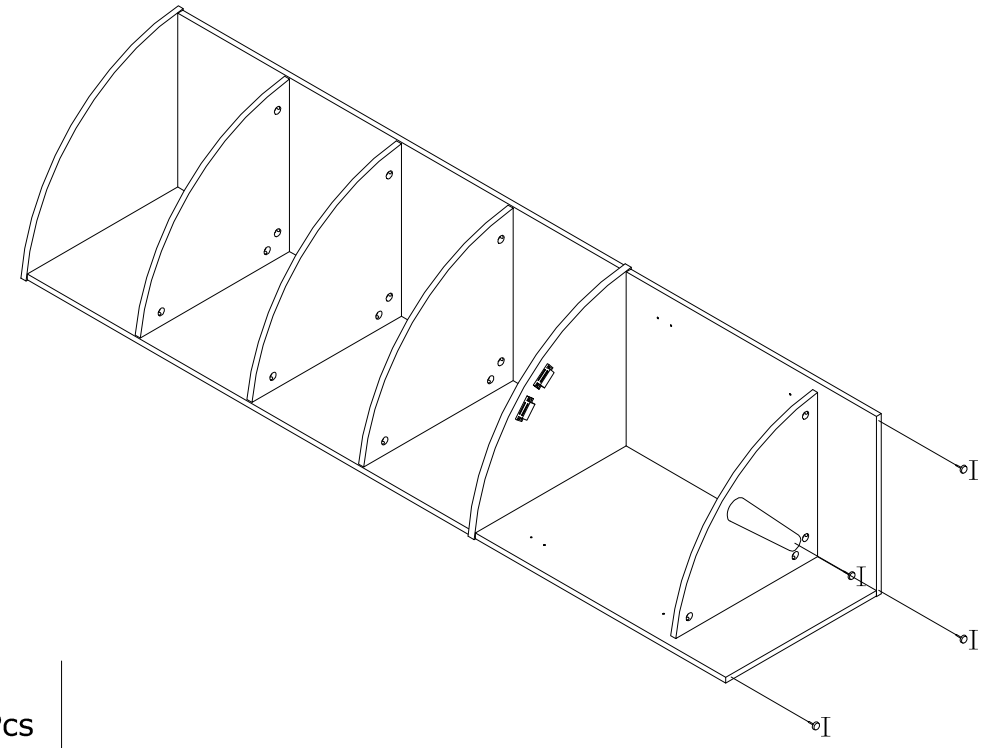


No. I
Quantity: 4 Pcs
Ø15



STEP 13

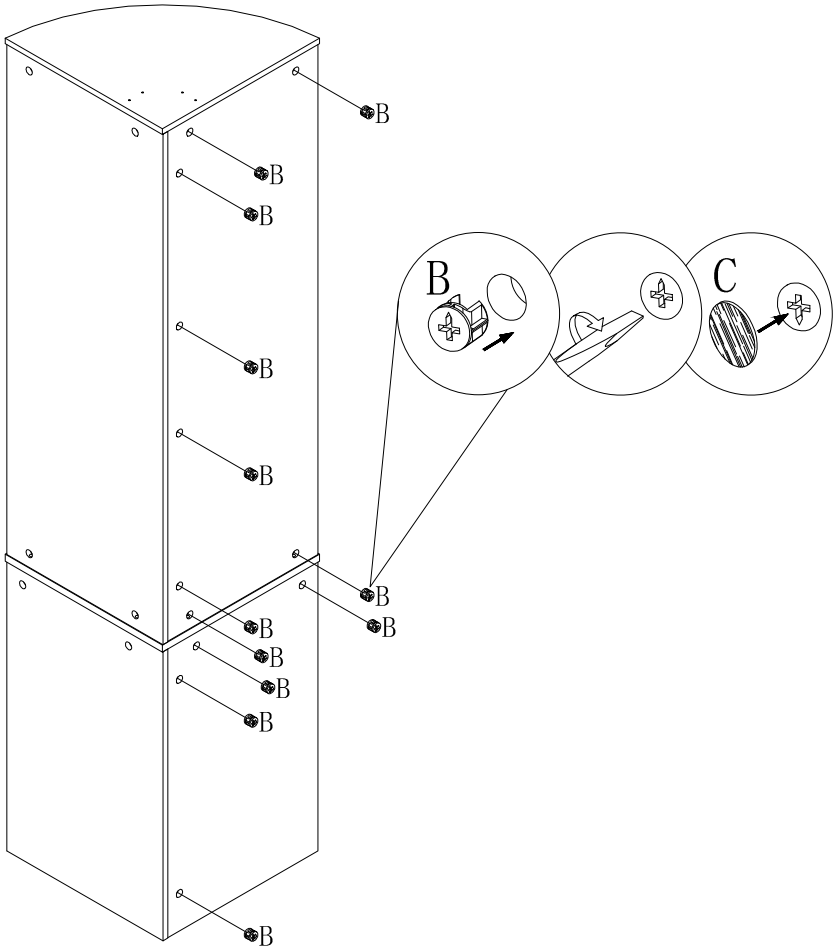


No. B
Quantity: 12 Pcs
Ø15



No. C
Quantity: 12 Pcs
Ø20




STEP 14

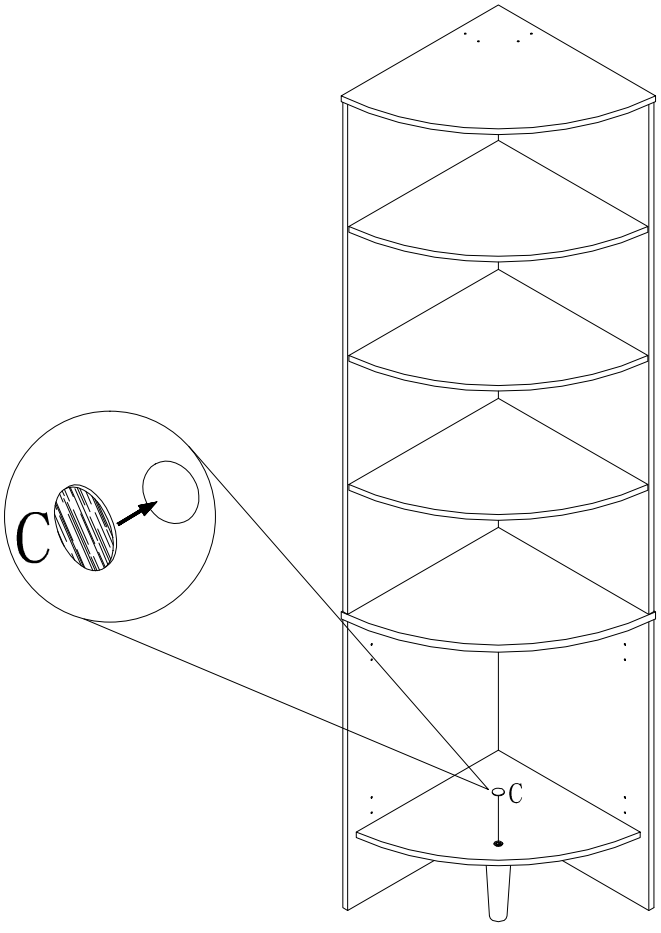


No. C
Quantity: 1 Pc
Ø20



The way to adjust the door by hinge.

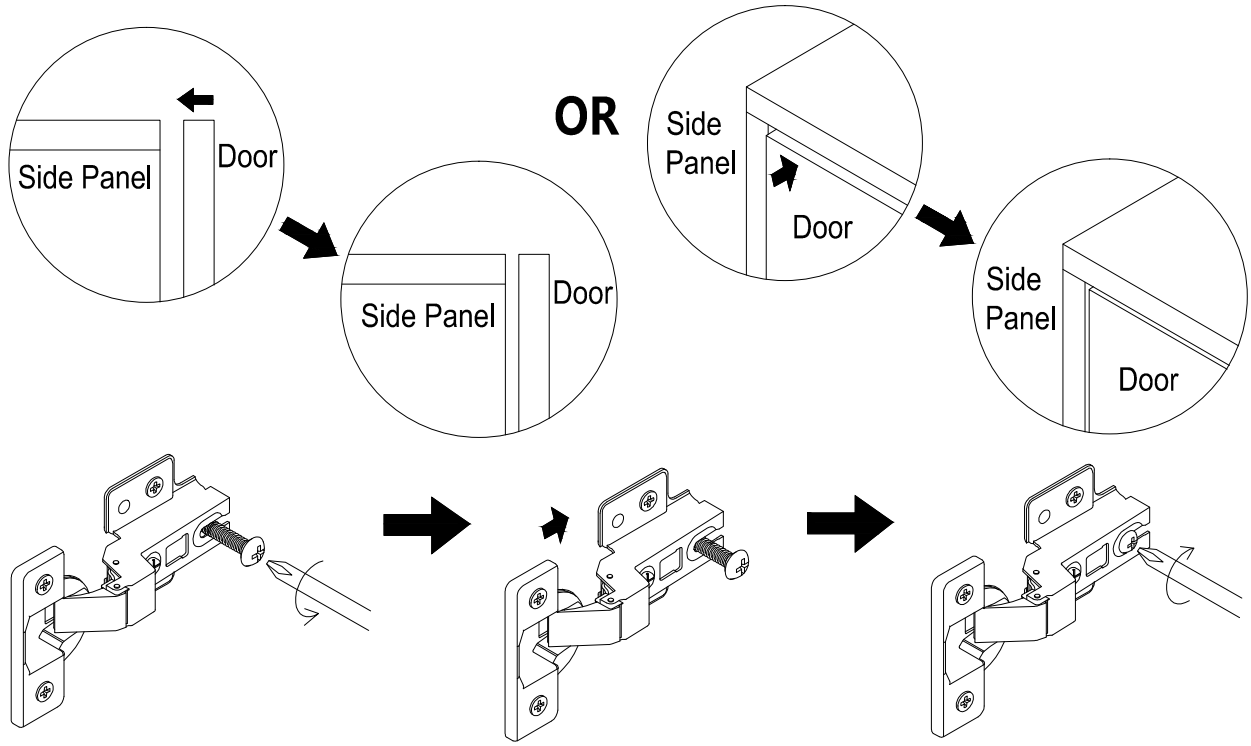


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.

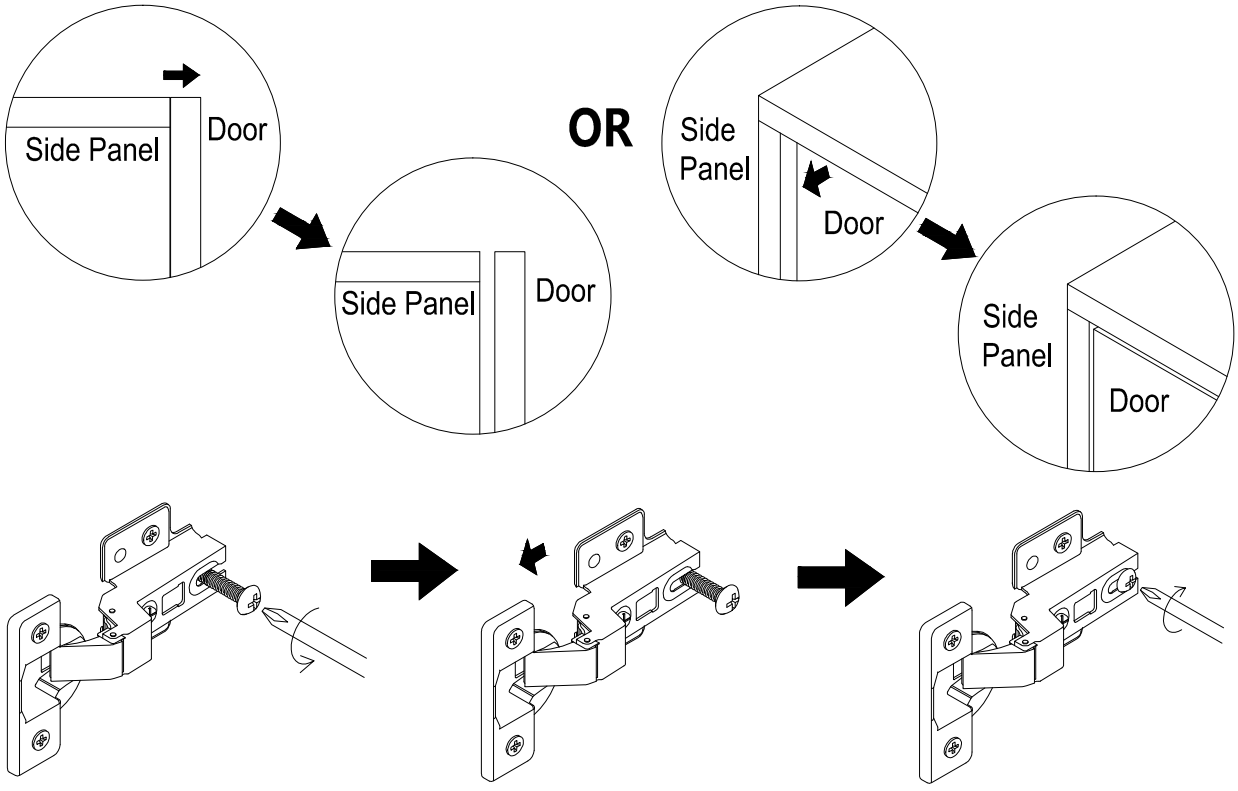


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.


IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

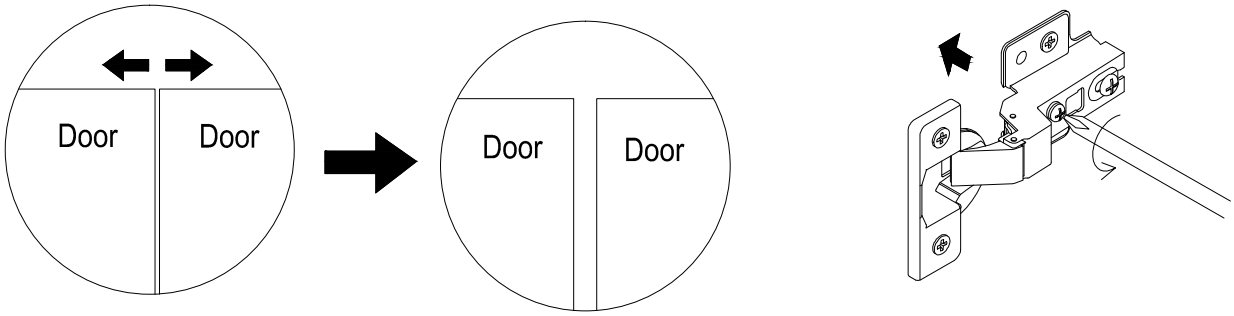

If the gap is too small between two doors, loose the front screw as shown.

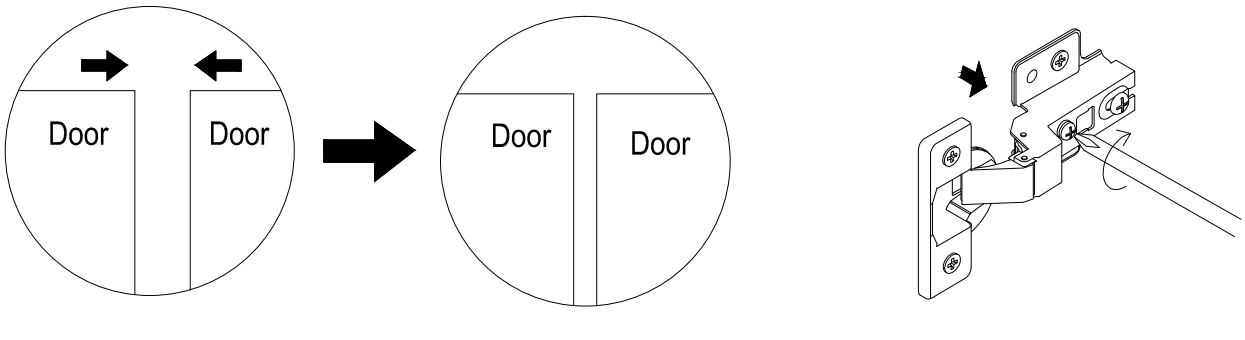

If the gap is too small between two doors, loose the front screw as shown.

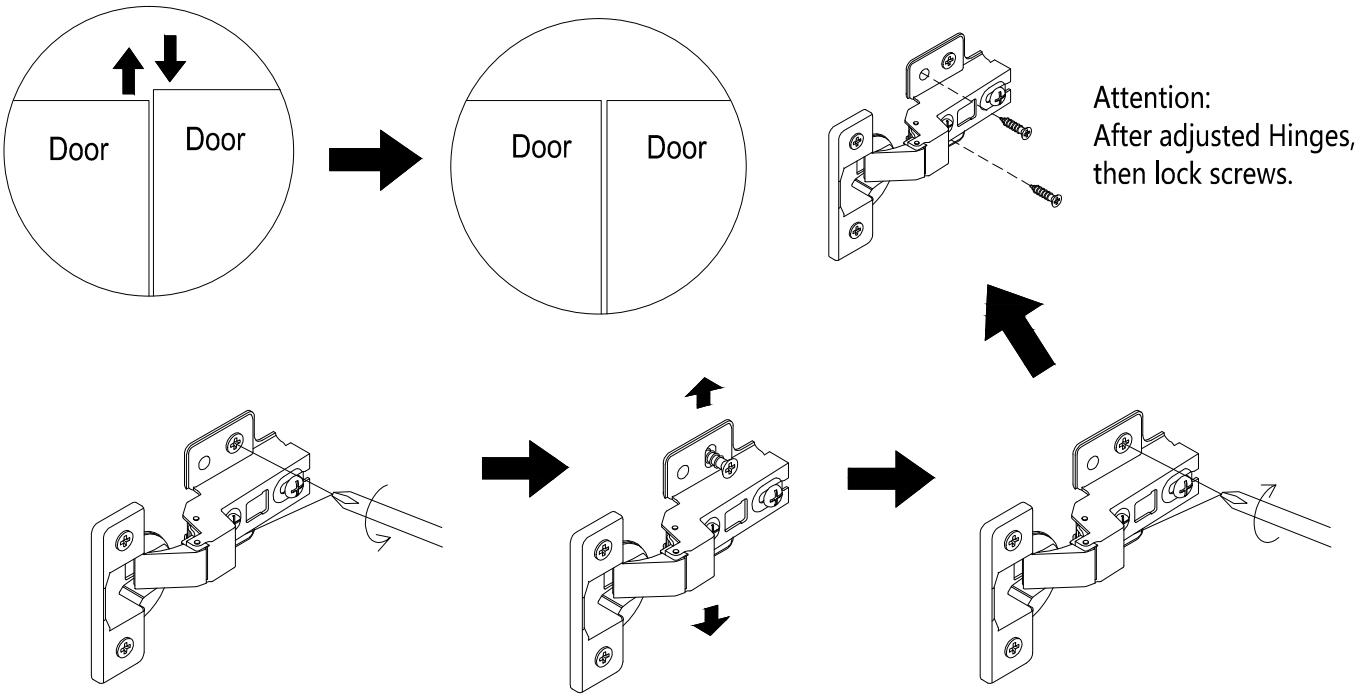


Attention:
After adjusted Hinges, then lock screws.

If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.Screw front two screws on wing when all are in place.

STEP 15


No. E
Quantity: 4 Pcs





No. F
Quantity: 12 Pcs
M3.5*12mm




No. H
Quantity: 2 Pcs



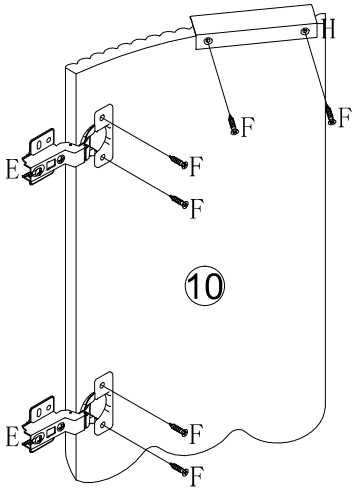


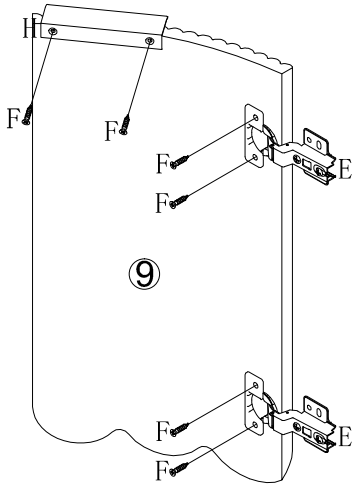


STEP 16

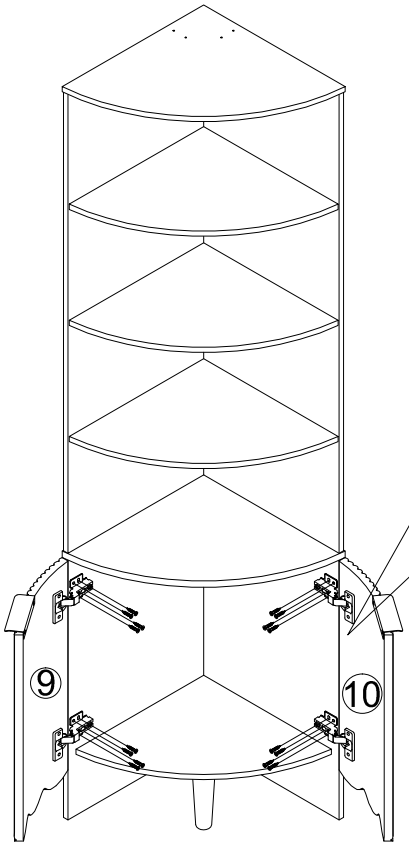

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

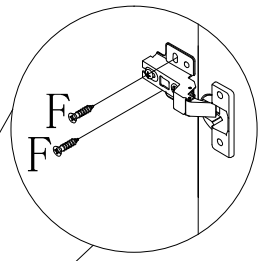

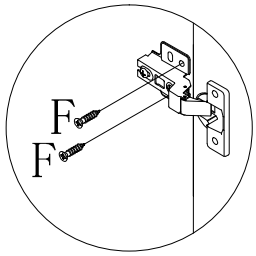


No. F
Quantity: 16 Pcs
M3.5*12mm




If you encounter difficulties during adjustment, please refer to the guidance on pages 11 and 12 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.


STEP 17

WARNING: ALWAYS LIFT the cabinet when moving it. NEVER DRAG it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

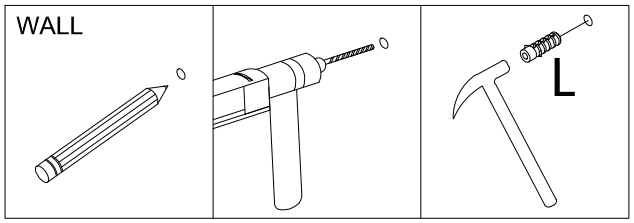


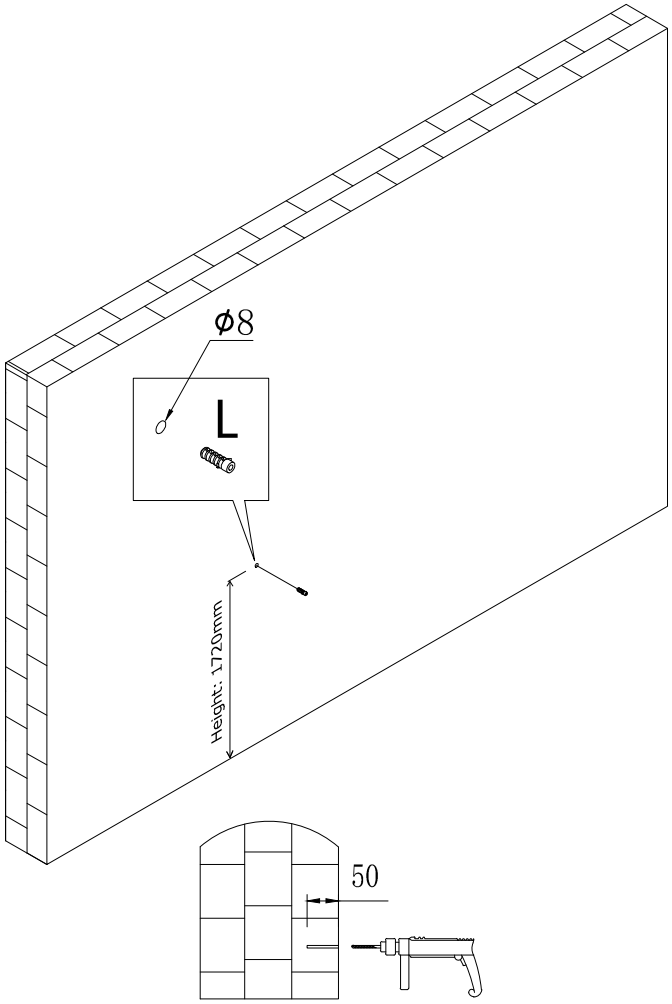

1.The customer must mark the desired mounting positions on the wall,then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors tocomplete the installation.

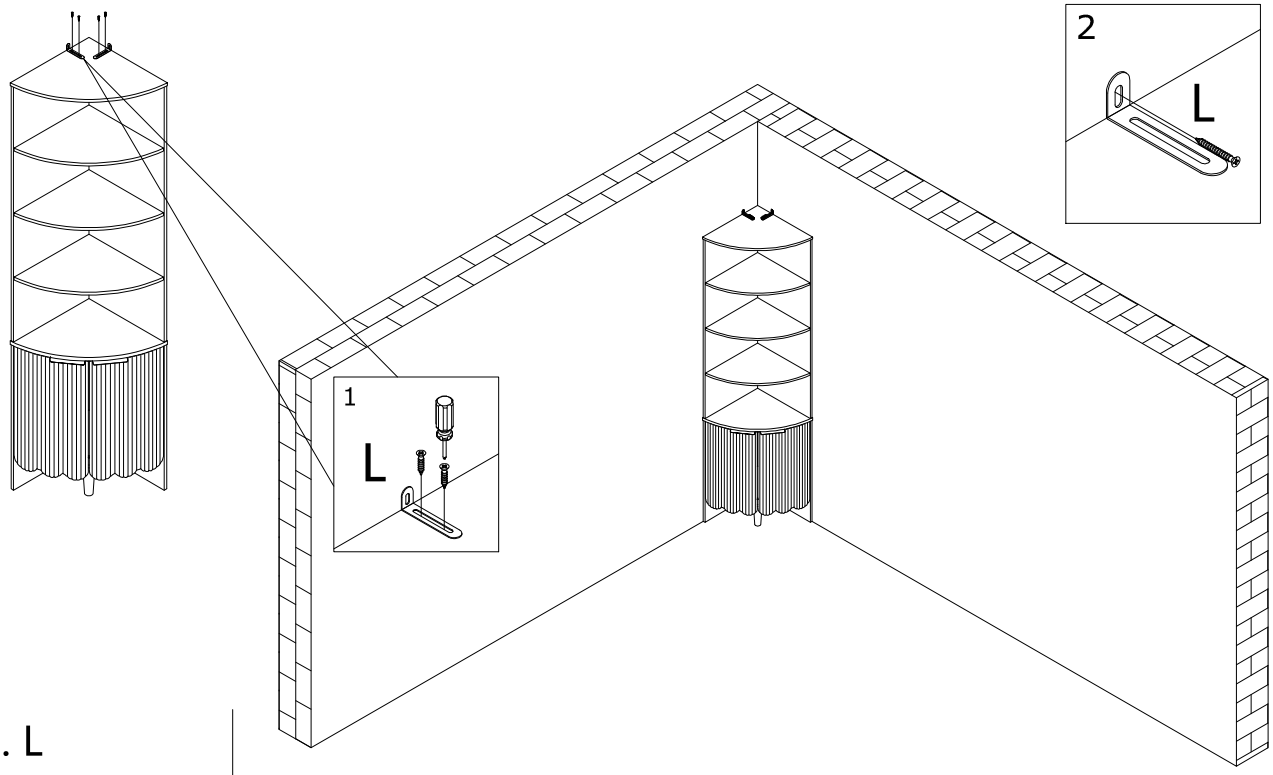

No. L
Quantity:2 Sets



Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.