

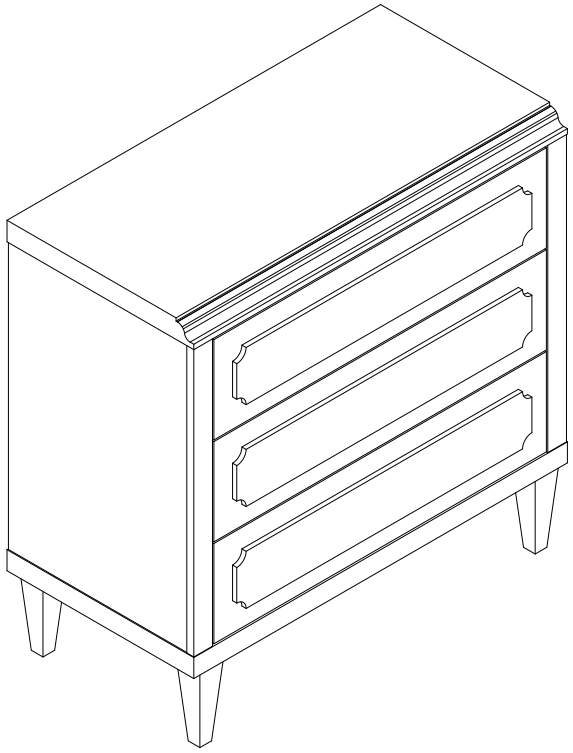



ASSEMBLY INSTRUCTIONS

IMPORTANT : please read this manual carefully before beginning assembly of this product.keep this manual for future reference.


WHAT'S IN THE BOX

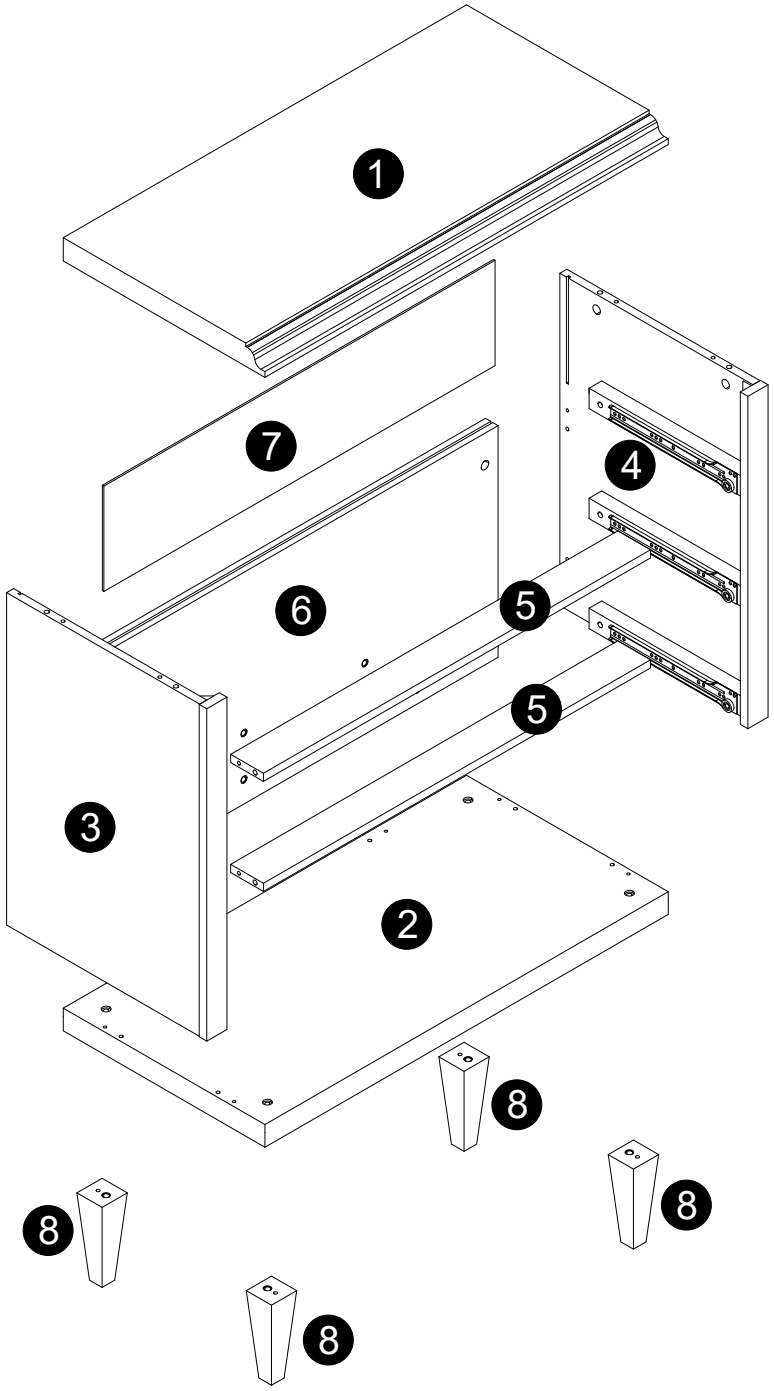

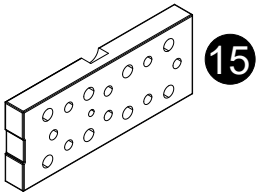

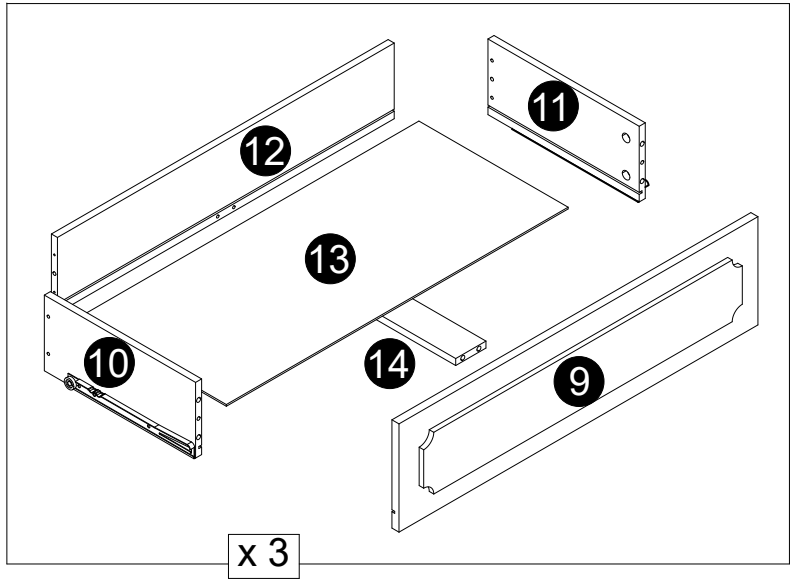

WHAT'S IN THE BOX



Wooden dowel
Ø6x30mm
A x 34



Cam bolt
Ø6x35mm
B x 38




Cam lock
Ø15x9mm
C x 38



Plastic wedge
D x 4



Flat-head screw
Ø3x16mm
E x 4



Door push
F x 3



Screw
Ø3.5x14mm
G x 6



Glue tube
H x 1



Screw
Ø4 x 30mm
I x 12



Screw
Ø4 x 50mm
J x 4



Bolt
Ø1/4x40mm
K x 4



Bolt
Ø1/4x55mm
L x 4



Hex key
M x 1



Footpads
N x 4




Screw
Ø4*12
O x 2




Screw
Ø4*25
P x 2



Plastic strap
Q x 2




Nut
R x 2

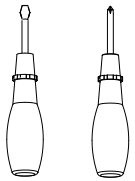


Tools Required
(Not included)

●The provided glue(H) is to secure wood dowels(A) in place .
When first inserting dowels, locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel .
Wipe away excess glue immediately.

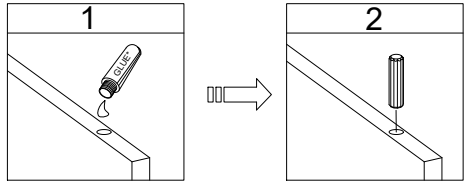


● In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together.
Wipe away excess glue immediately.

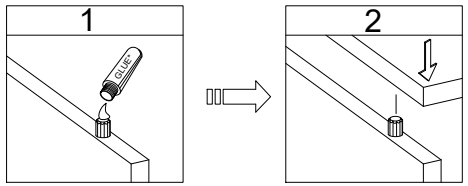


1

INSTALLATION STEPS


●Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

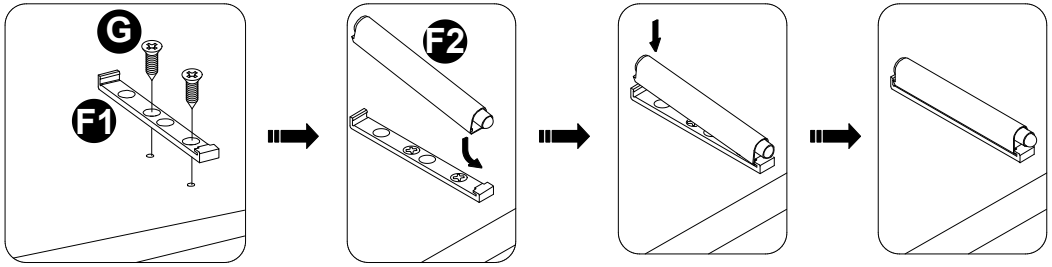



Step 1 Step 2 Step 3 Final Assembly

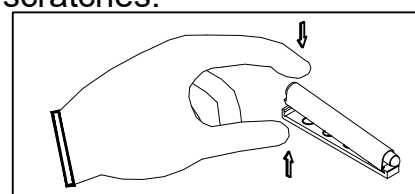


Warm Caution:
The bottom of the rebounder is relatively soft. If the rebounder cannot be fastened properly, please hold the tail end of the rebounder with your fingers and press firmly.

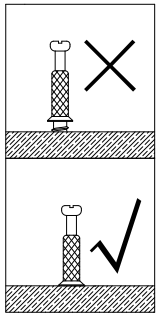

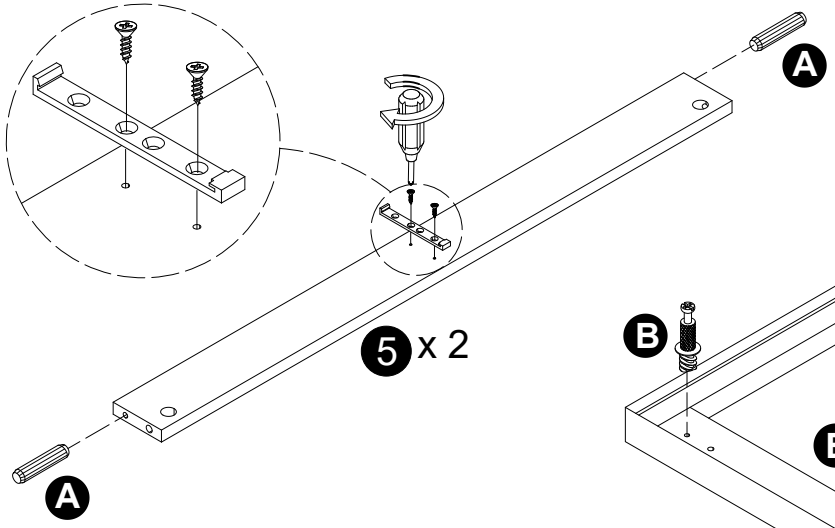

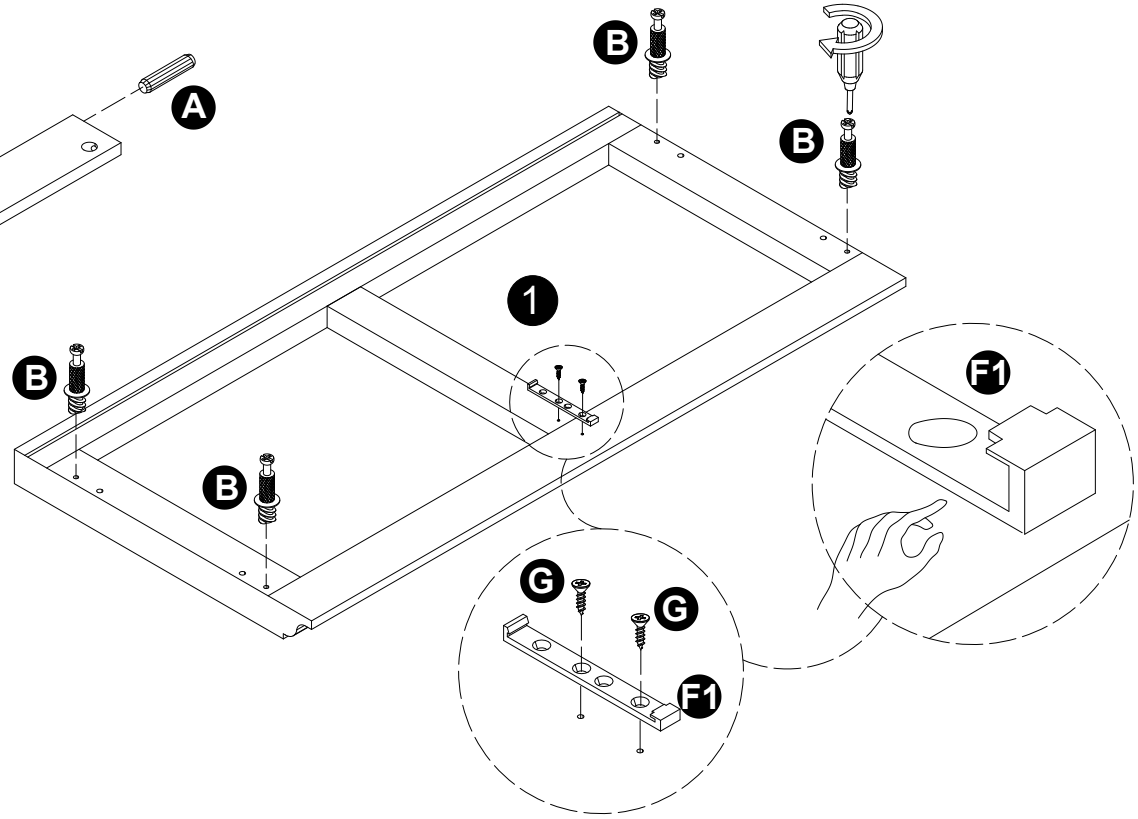


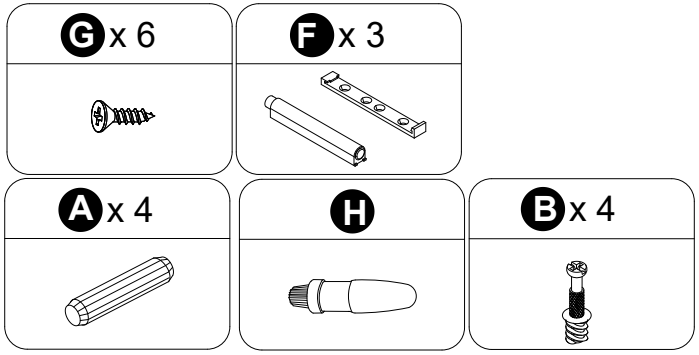



· Screw cam bolts (B) into panel (1).
· Insert dowels (A) into panels (5).
· Attach part (F) to panels (1,5) with screws (G).


2

INSTALLATION STEPS

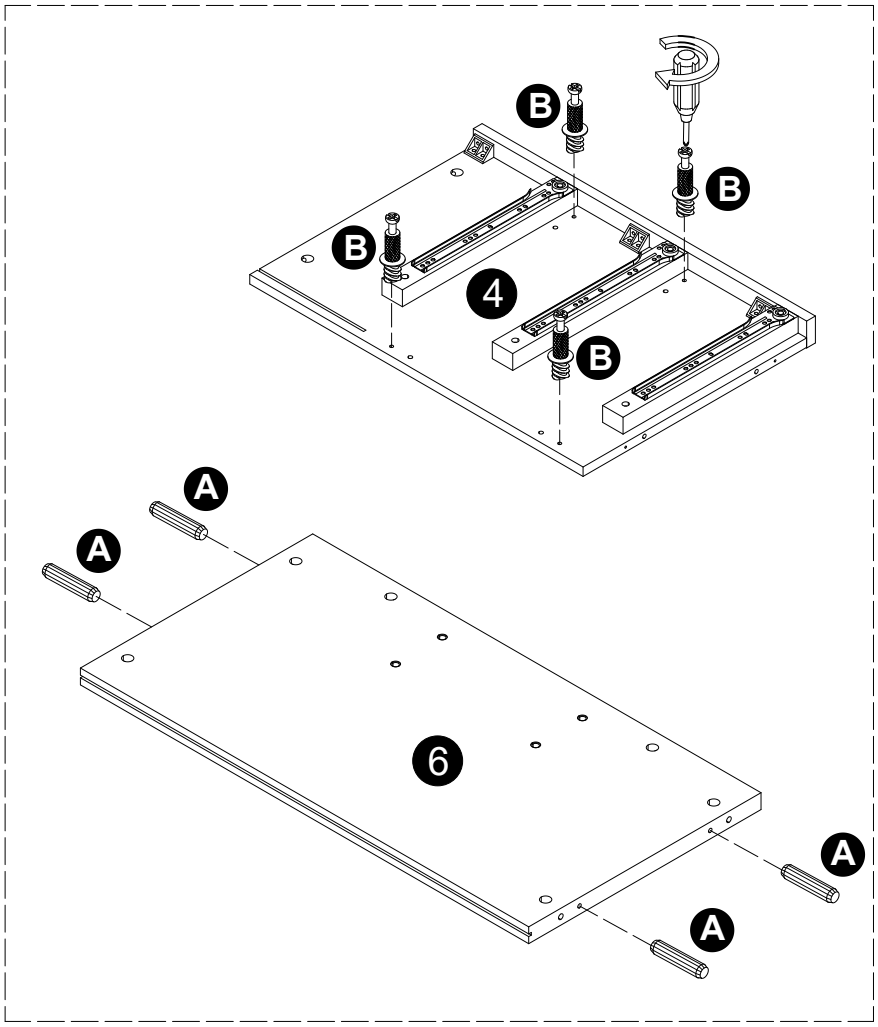

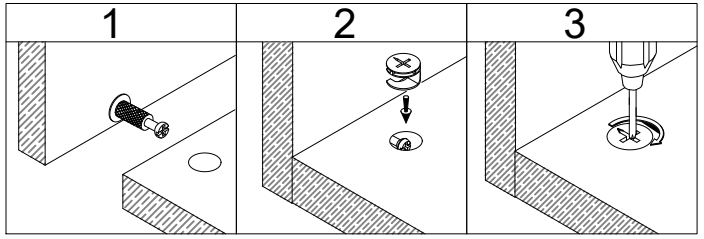

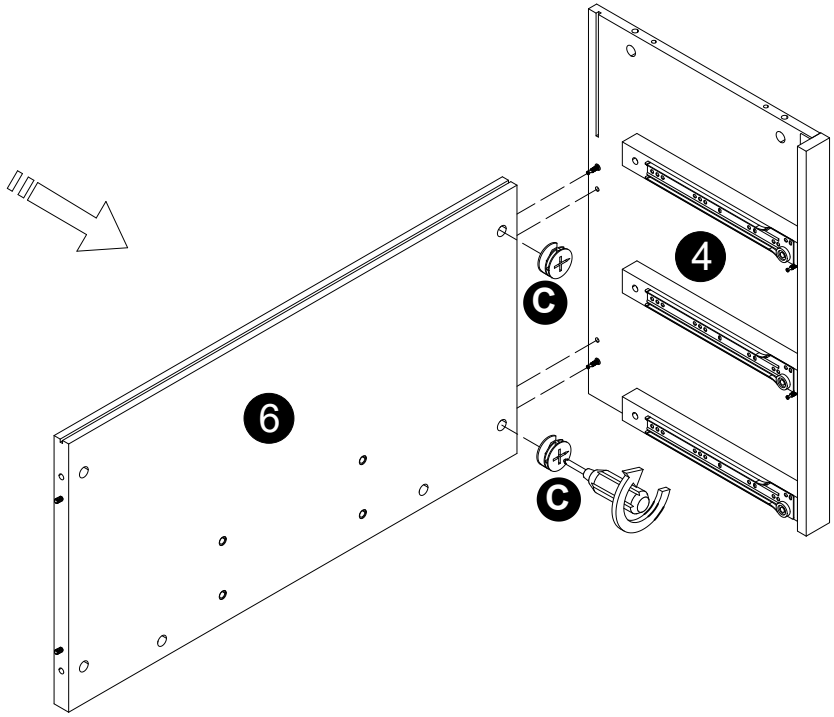


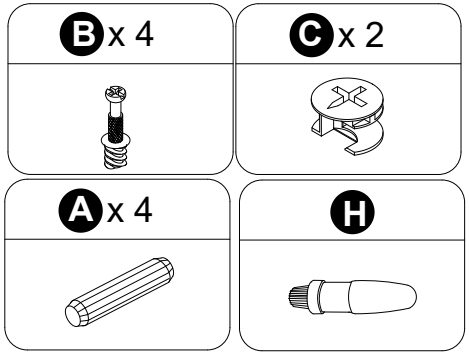



· Screw cam bolts (B) into panel (4).
· Insert dowels (A) into panels (6).
· Attach panel (4) to panel (6).
· Insert and secure cam locks(C) to panel (6) to lock it.

3


INSTALLATION STEPS

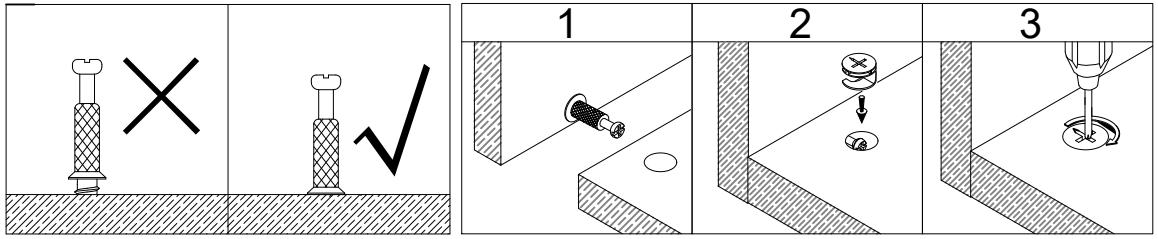

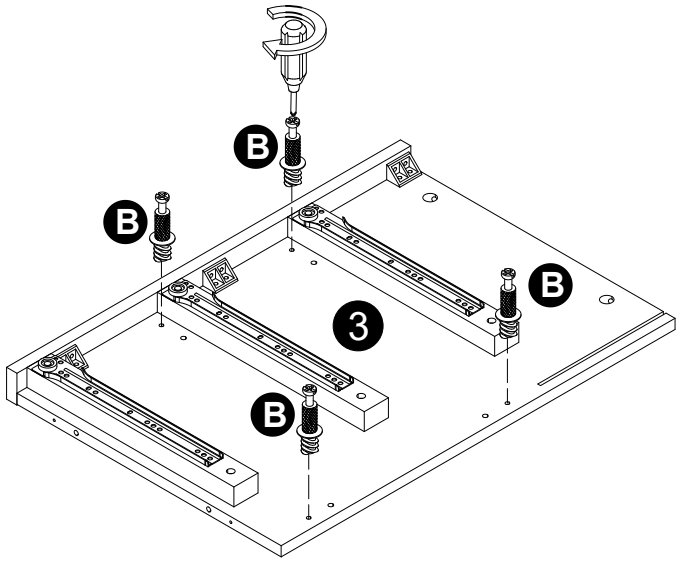

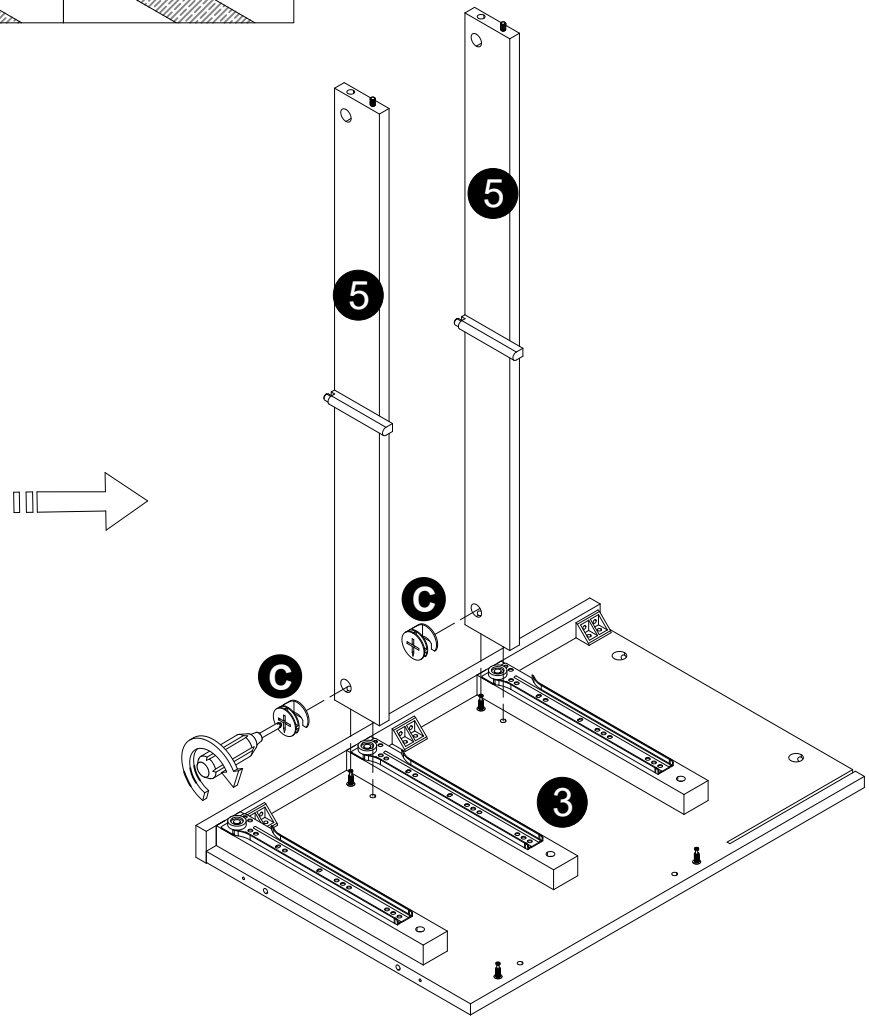



· Screw cam bolts (B) into panel (3).
· Attach panels (5) to panel (3).
· Insert and secure cam locks(C) to panels (5) to lock it.


B x 4	H	C x 2
		

4


INSTALLATION STEPS

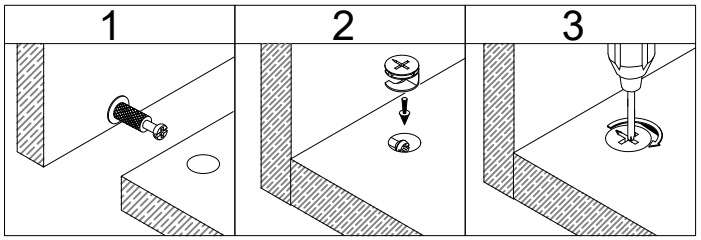

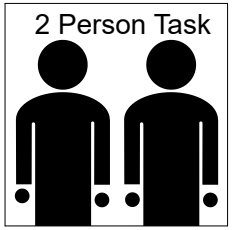

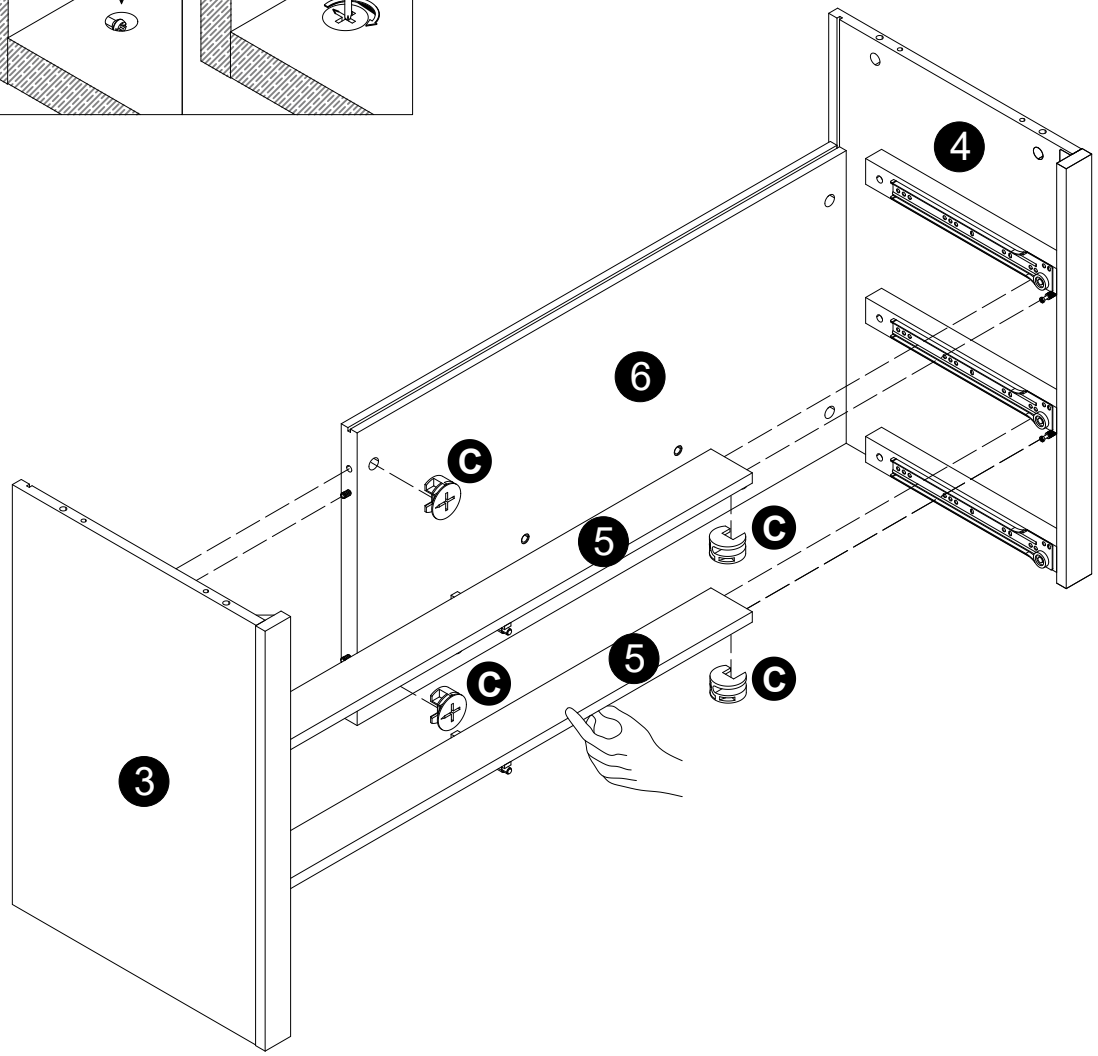



· Attach panels (3,5) to panels (4,6).
· Insert and secure cam locks(C) to panels (5,6) to lock it.

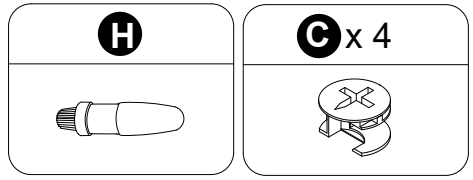


5

INSTALLATION STEPS

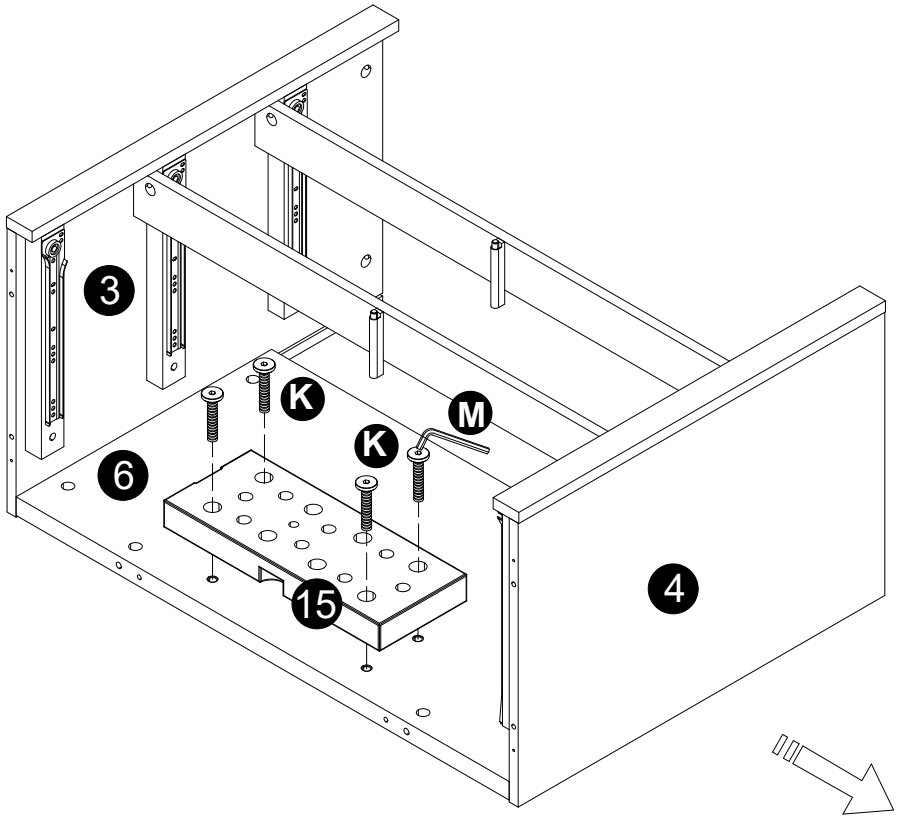

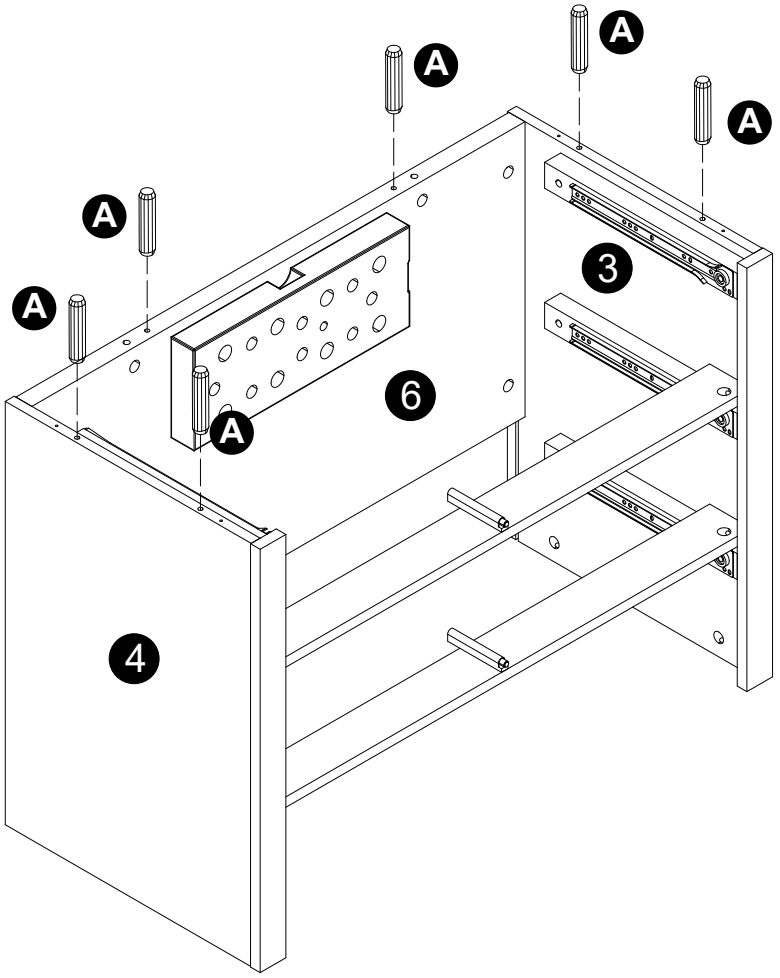


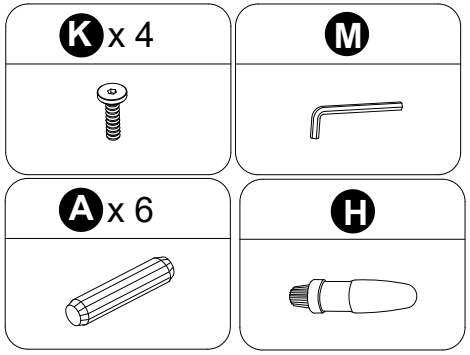



· Attach part (15) to panel (6) with parts (K,M) correctly.
· Insert dowels (A) into panels (3,4,6).


6


INSTALLATION STEPS

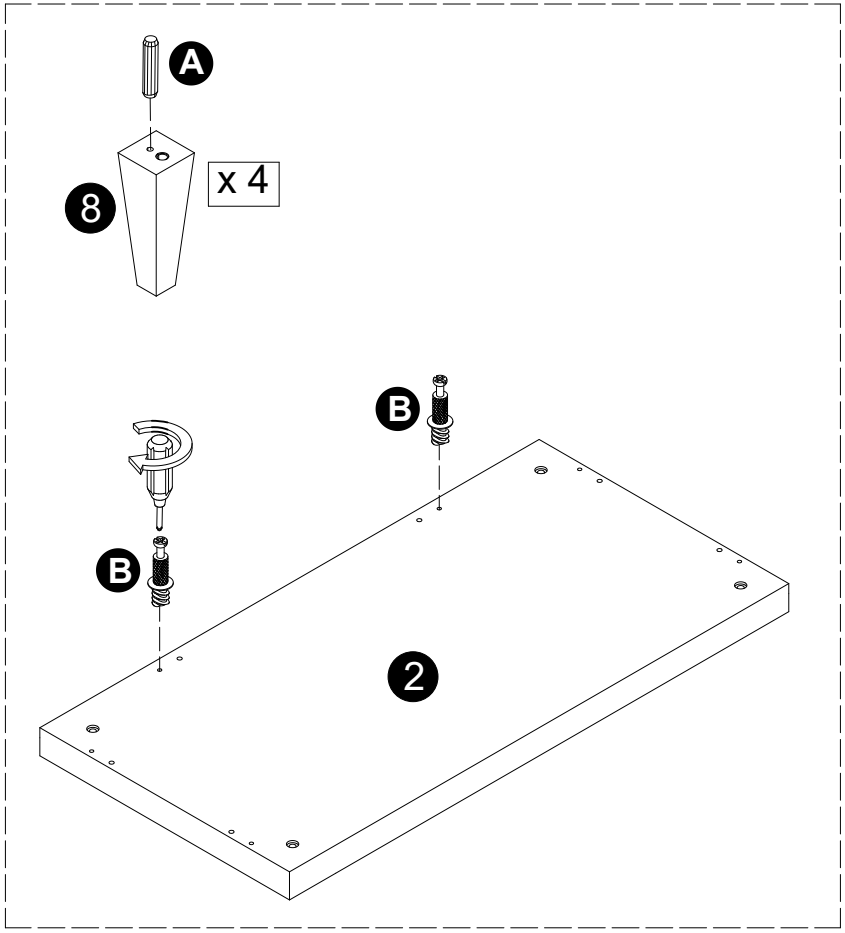

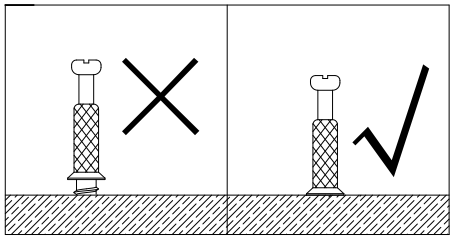

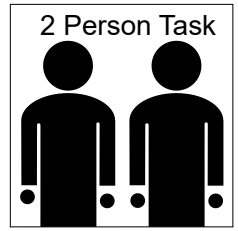

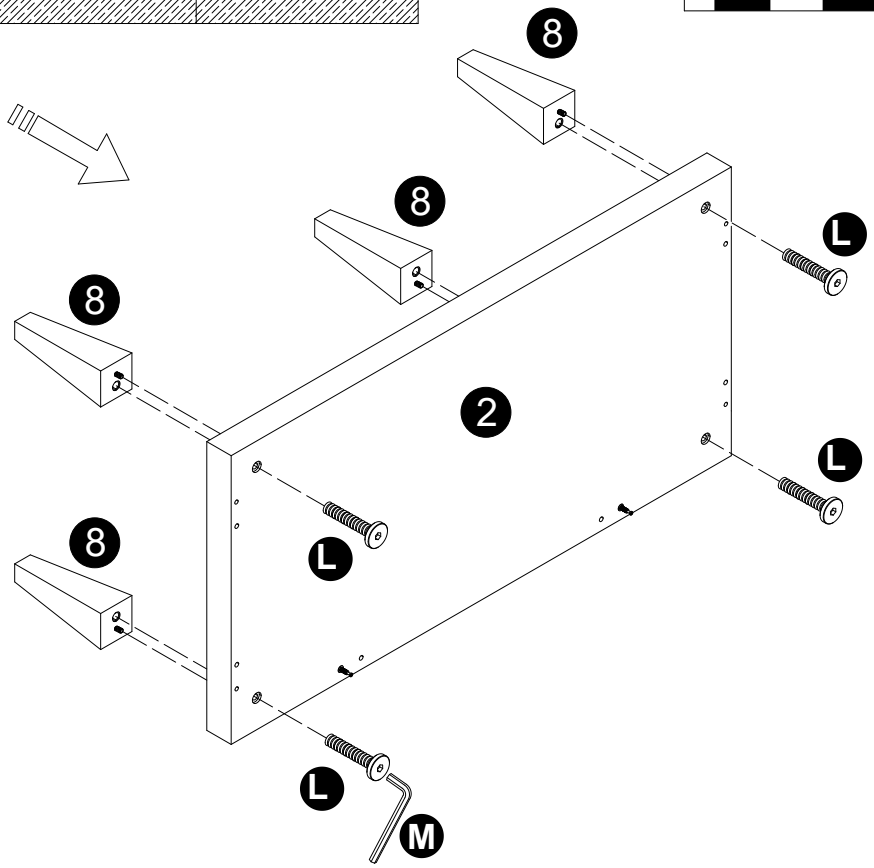


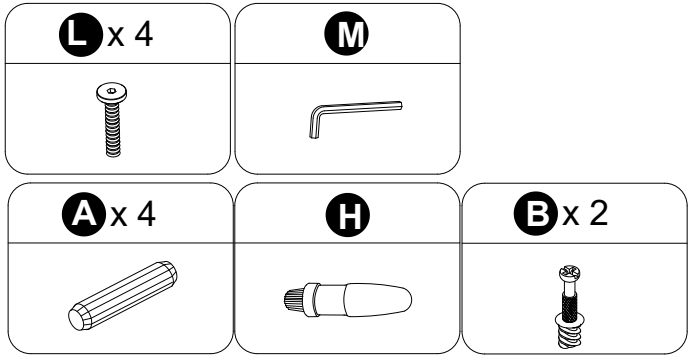


· Insert dowels (A) into legs (8).
· Screw cam bolts (B) into panel (2).
· Attach legs (8) to panel (2) with parts (L,M).

7

INSTALLATION STEPS

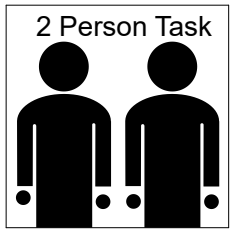

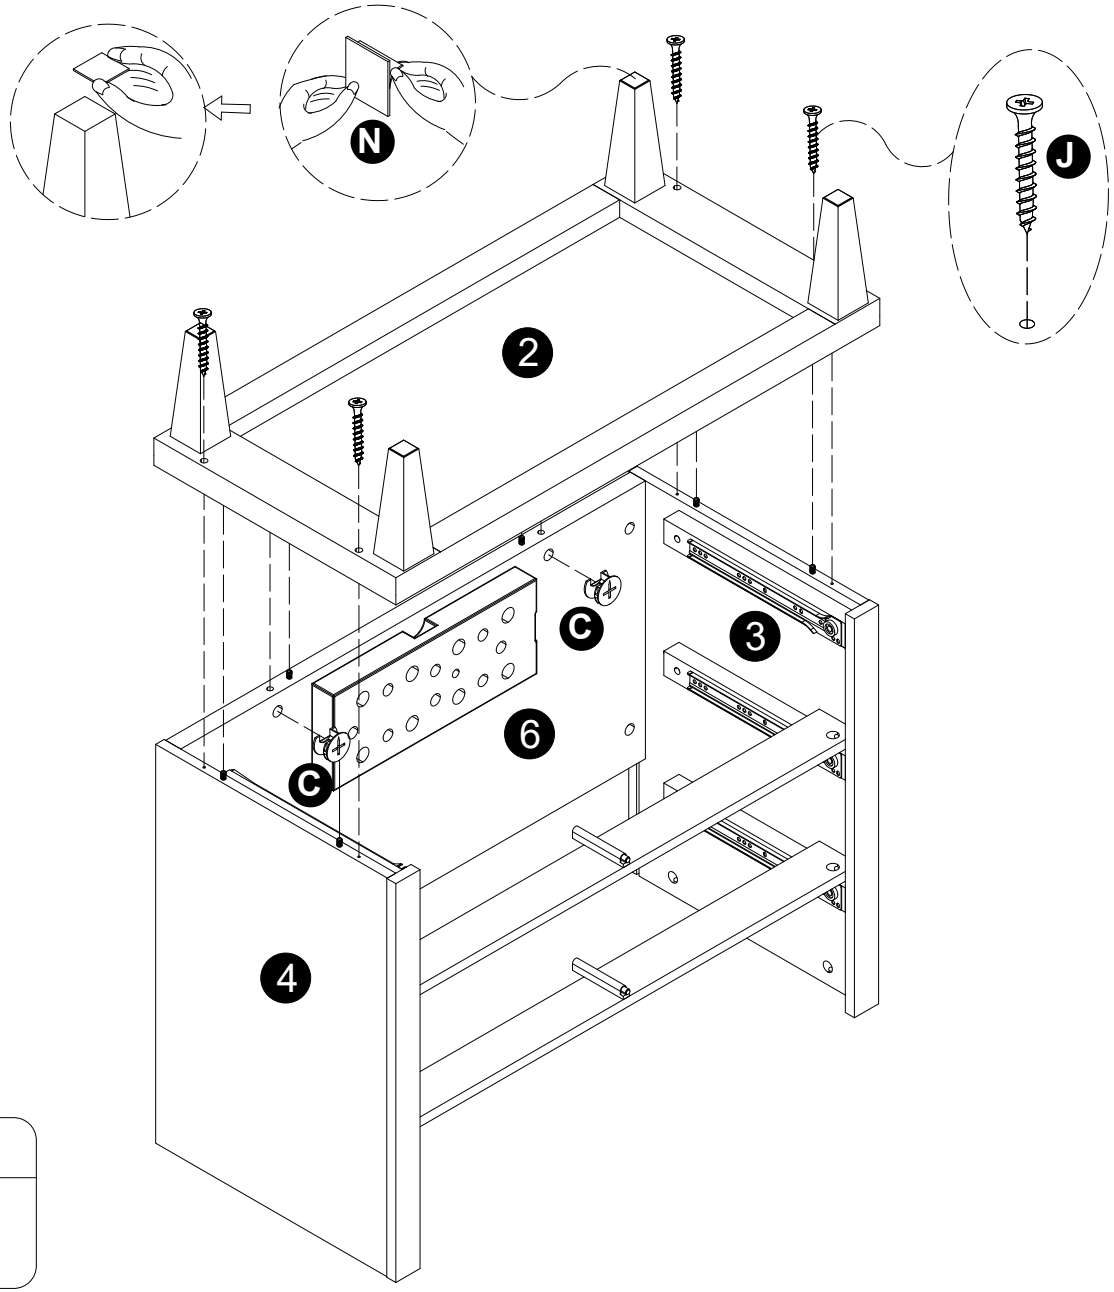


J x 4	N x 4
	
H	**C** x 2
	


· Attach panel (2) to panels (3,4) with screws (J).
· Insert and secure cam locks(C) to panel (6) to lock it.
· Stick the skid pads (L) on the bottom of the legs.

8

INSTALLATION STEPS

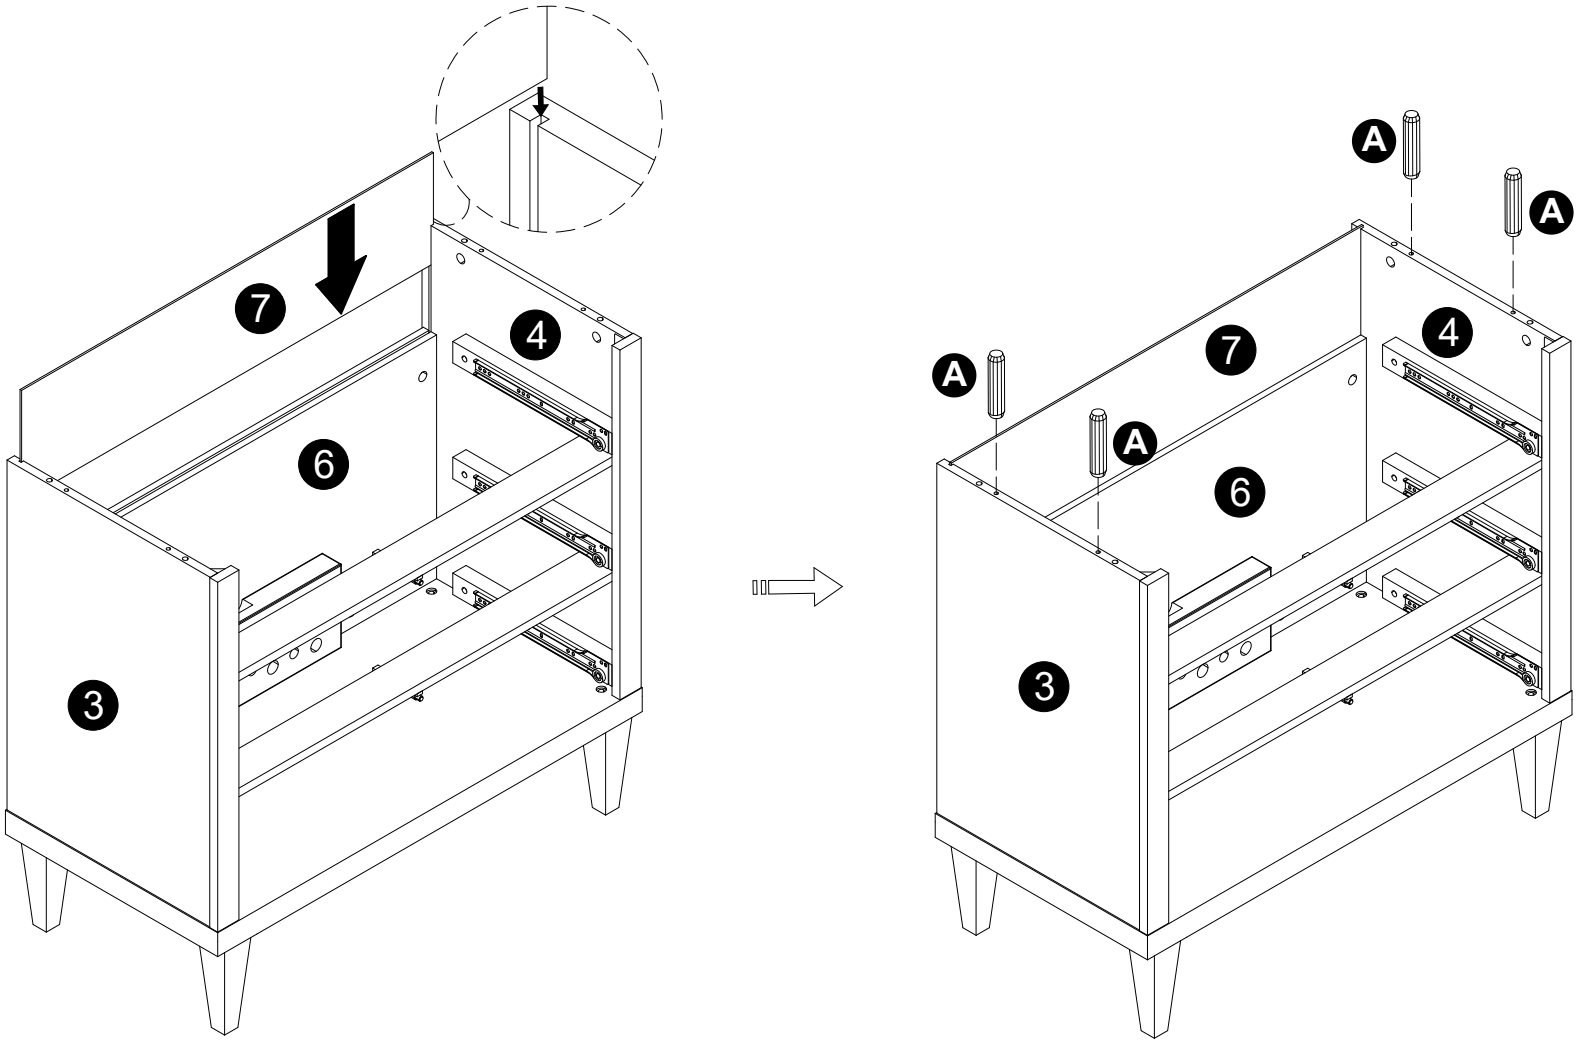



· Carefully slide part (7) into place along the back of the assembly.
· Insert dowels (A) into panels (3,4).


A x 4	H
	


9

INSTALLATION STEPS

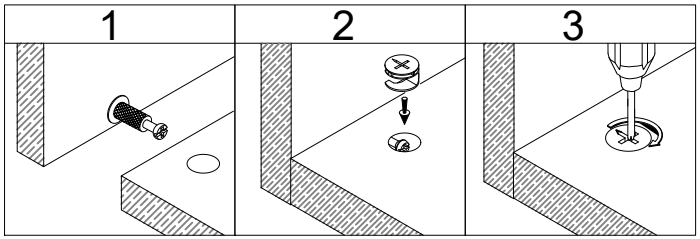

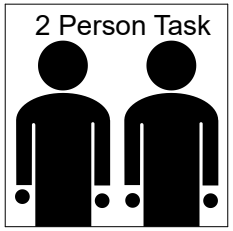

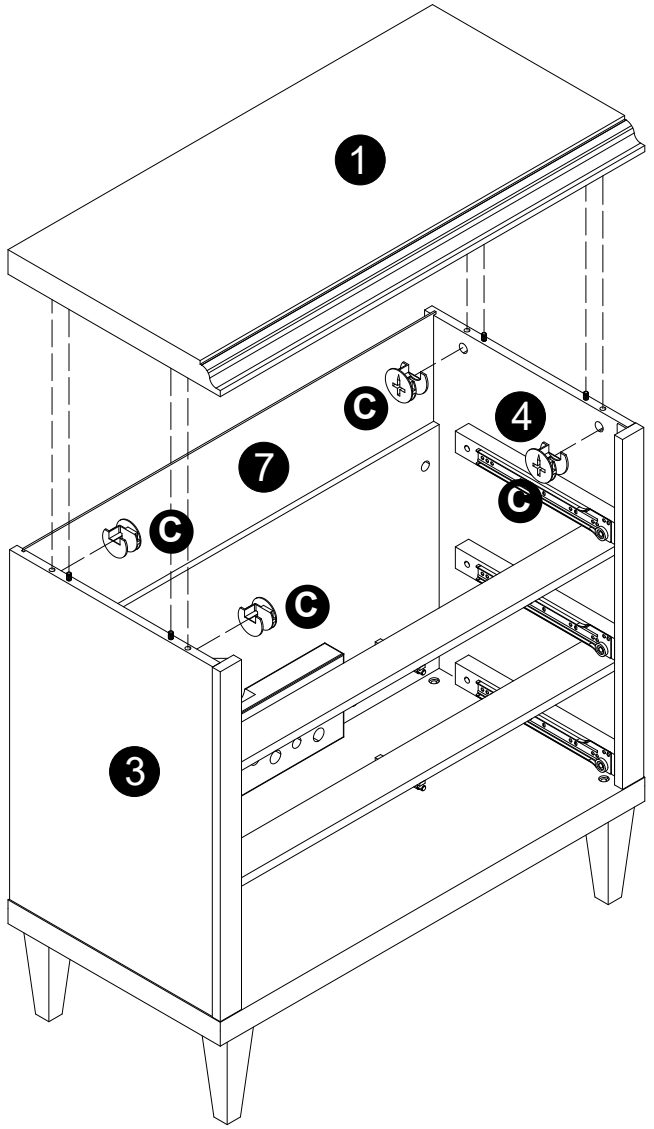

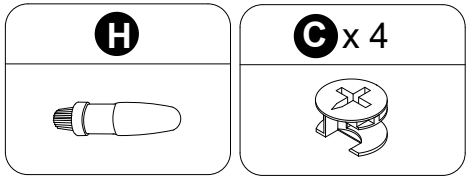


· Attach panel (1) to panels (3,4).
· Insert and secure cam locks(C) to panels (3,4) to lock it.

10

INSTALLATION STEPS

NOTE: Ensure the cabinet body is stable, please make sure to lock the plastic wedge.

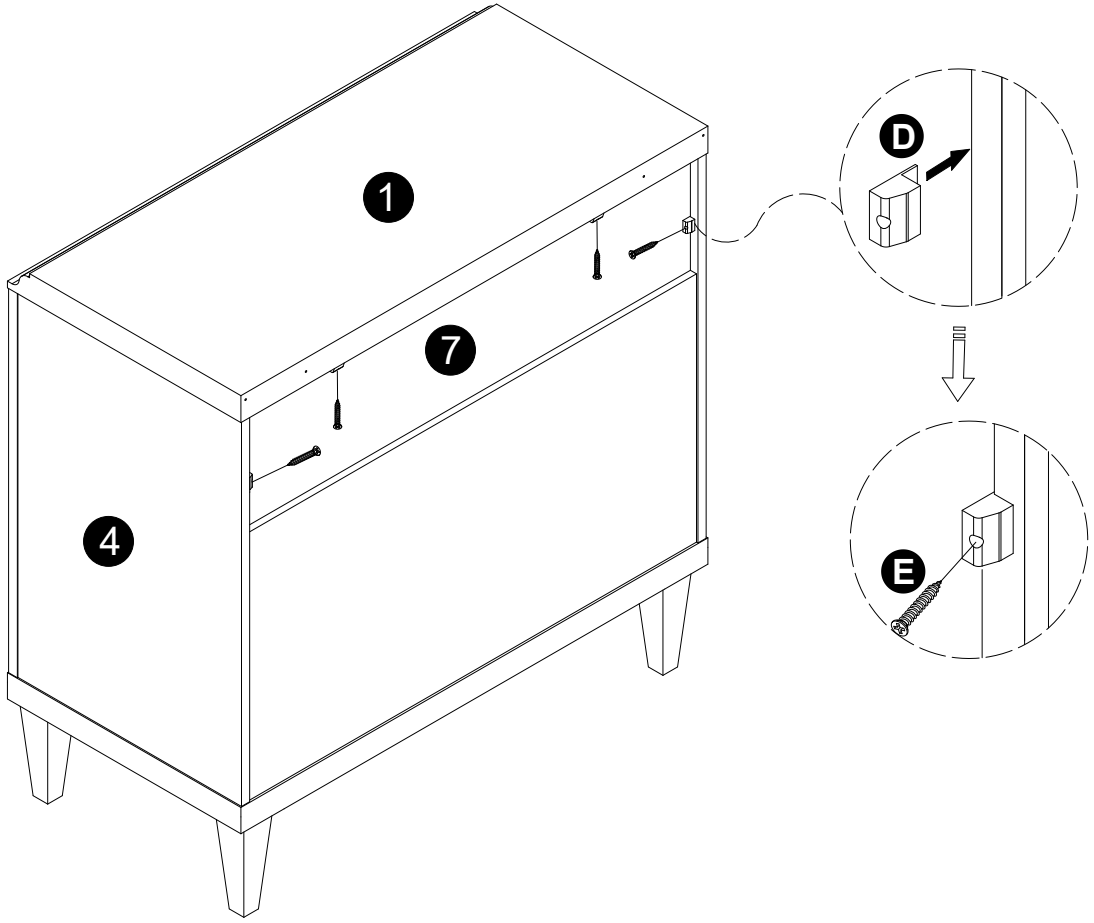



· Secure parts (D) with screws (E) as per diagram.


D x 4	E x 4
	


11

INSTALLATION STEPS

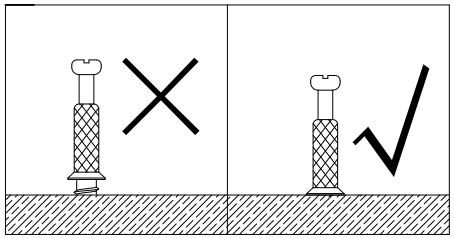


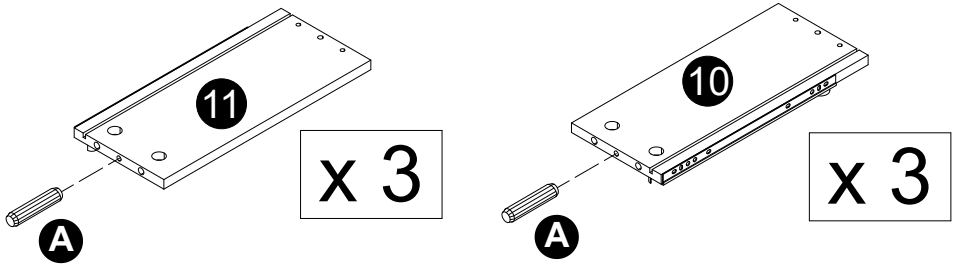

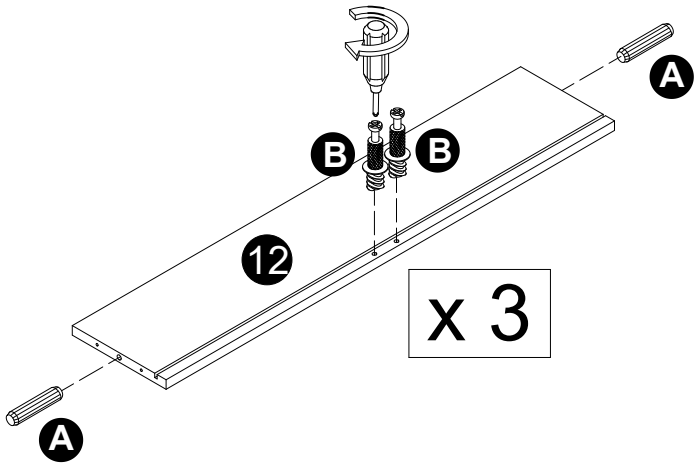

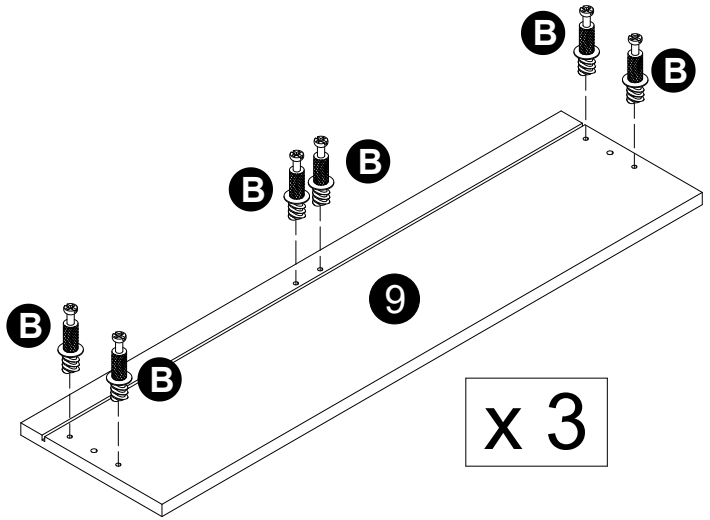



· Screw cam bolts (B) into panels (9,12).
· Insert dowels (A) into panels (10,11,12).

A x 12	H	B x 24
		

12

INSTALLATION STEPS

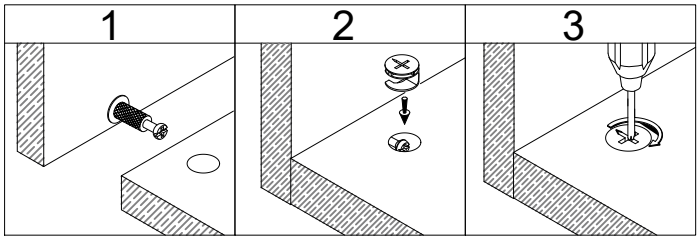



H	I x 12	C x 6
		


· Attach panels (10,11) to panel (12) with screws (I) correctly.
· Attach panel (14) to panel (12).
· Insert and secure cam locks(C) to panel (14) to lock it.


13

INSTALLATION STEPS

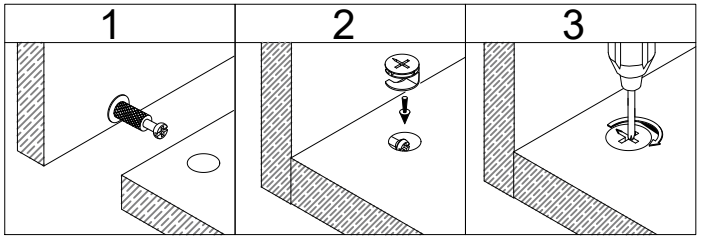

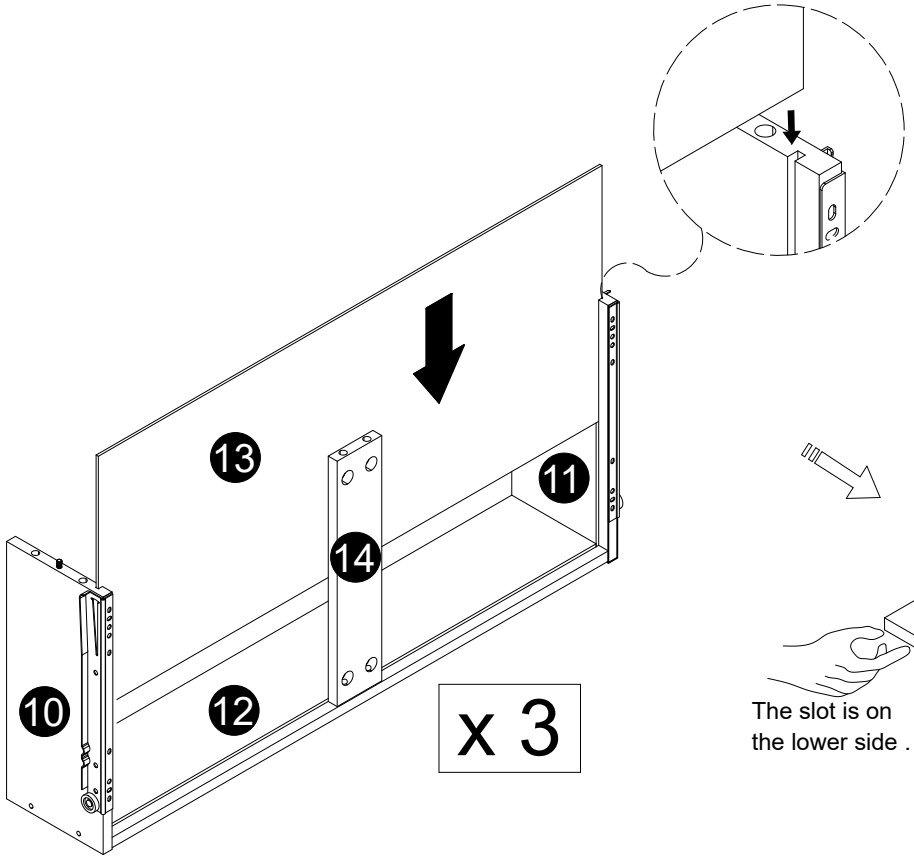

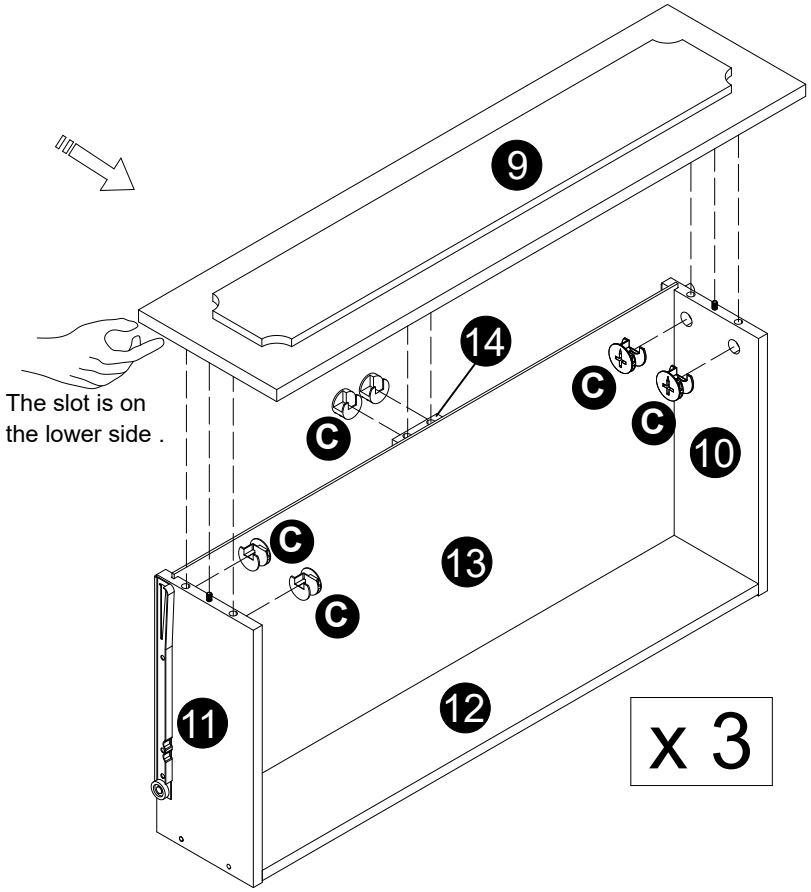


H	C x 18
	

· Carefully slide part (13) into place along the back of the assembly.
· Attach panel (9) to panels (10,11,14).
· Insert and secure cam locks(C) to panels (10,11,14) to lock it.

14


INSTALLATION STEPS


NOTE: Never open more than one drawer at a time.

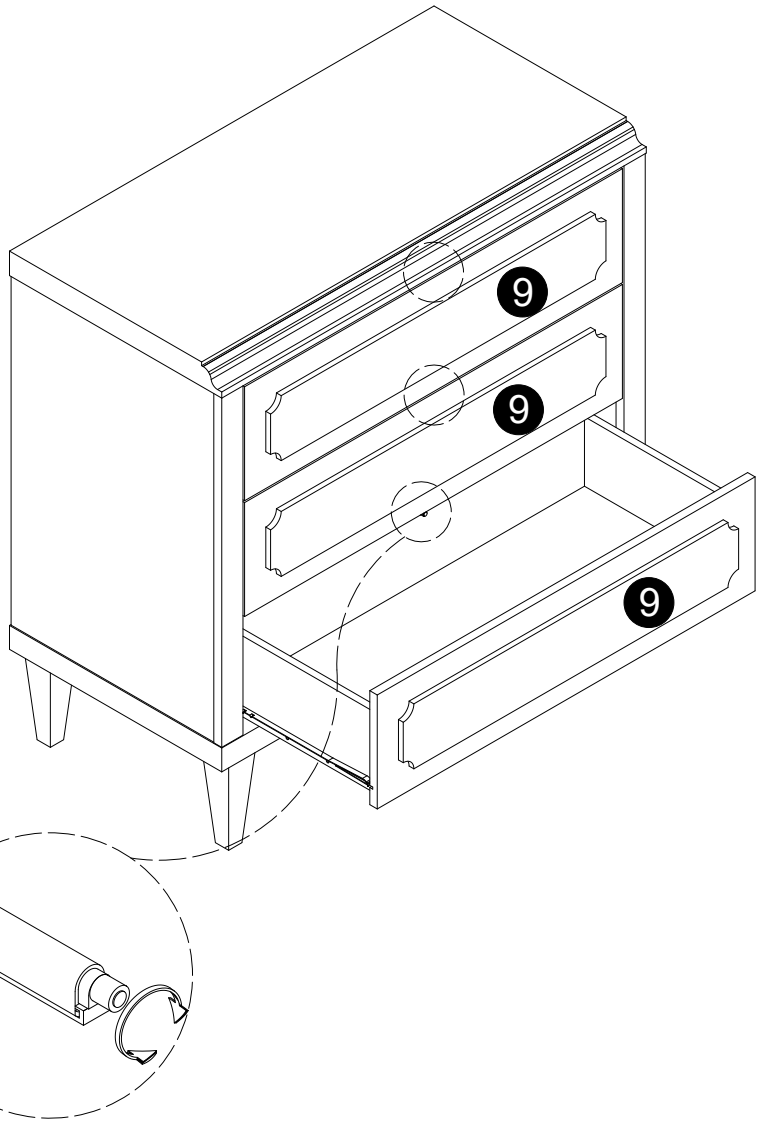


•Adjust part (F) to achieve the door panel is flat.

1.Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

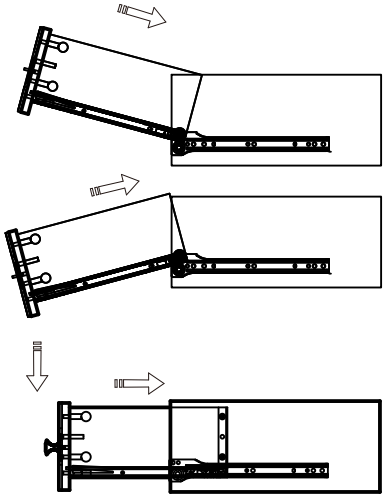


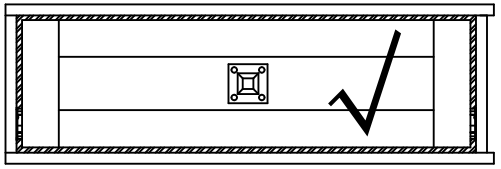

2.If the following occurs, redo the first two step.

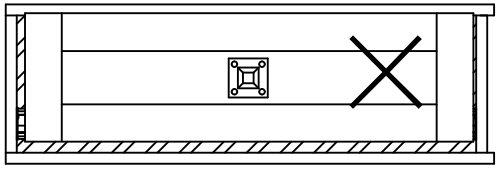

(both wheel are off the rails)

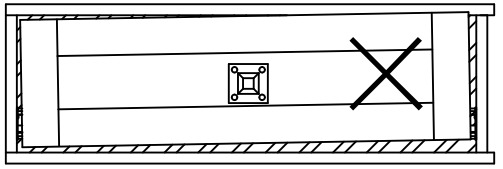


(one wheel is off the rail)


15

INSTALLATION STEPS


Step 1

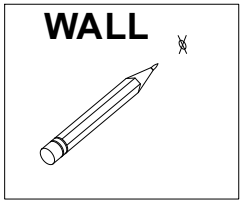


Step 2

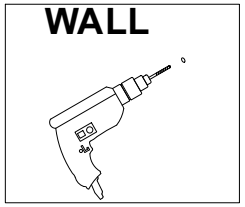


Step 3

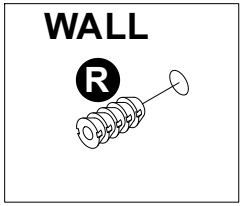

Step 4

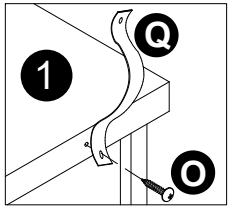


Step 5

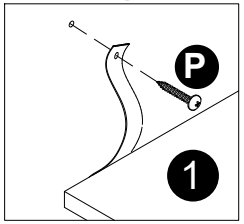

WARNING

Serious or fatal crushing injuries can occur from furniture tipover.
To prevent tipover:
* Install tipover restraint provided
* place heaviest items in the lowest drawers
* Unless specifically designed to accomodate, do not set TV or other heavy objects on the top of this product
* Never allow children to climb or hang on drawers, door, or shelves.
Use of tipover restarints may only reduce, but not eliminate the risk of tipover

Tools required: Phillips screwdriver, Power Drill, 15/64” Drill Bit and Rubber Mallet.

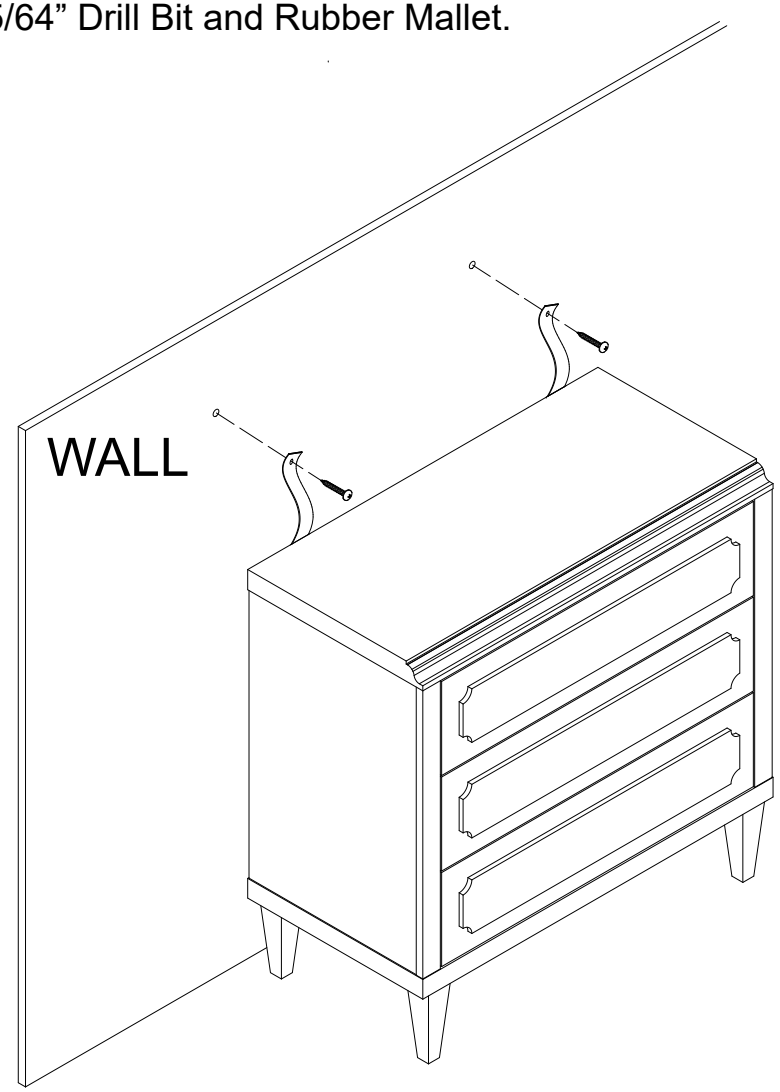

O x 2	P x 2	Q x 2	R x 2
			