


NUDE

Assemble Explain

1

Prepare the integrants three long sticks and three short ones, one of the long stick with logo(B).

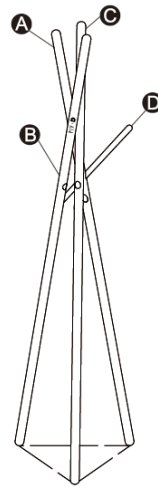


4

Take out another long stick (C), place it at the right side of (B) long stick with logo, touches the logo point, they should be seen as equilateral triangle after three long sticks placed together on the ground.



2

Take out long stick(A) and long stick with logo(B), cross at the logo, stick (B) on the front.

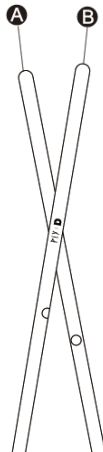

5

Take short (D) goes through long stick with logo(B)'s hole and touches the correspond hole on long stick (C), rotated do not push.

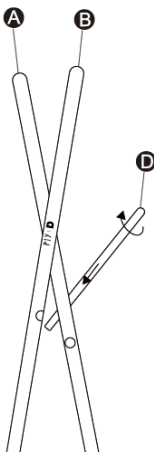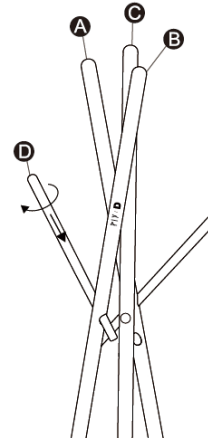

3

Hold the cross point. Take out a short one(D), plug slowly into the corresponding holes in (B) without pushing it to the bottom.



6

The last short (D) goes through long stick (C)'s hole and touches the correspond hole on long stick(A). Push short ones in and screw them down. Congratulation! you finished install NUDE.