
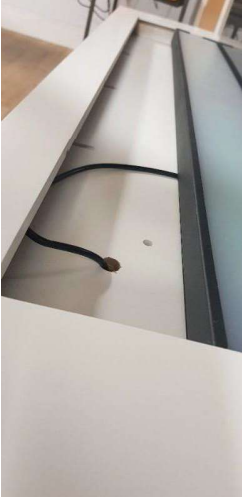
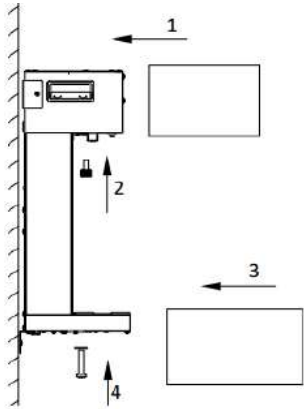


NOTE: Follow these instructions after fitting the fire to the wall.

<p>Figure 1</p> 	<ol style="list-style-type: none">1) At the bottom right side of the fire unit, you will see a small metal plate secured by 2 screws. Remove these two screws and pull out the LED cable.2) Push the male connector from the fire into the female connector from the base plinth together. They will click into place as shown in figure 1.
<p>Figure 2</p> 	<ol style="list-style-type: none">3) Thread the cable through the metal plate, ensuring that both connectors are in the space, and resecure the metal plate to the fire.4) Slide the lower mantle onto the fire pushing it all the way back to the wall, making sure the cable sits between the mantle and fire base, as shown in figure 2.
	<ol style="list-style-type: none">5) Fix the lower mantle section with the two M5*25 screws and washers supplied.