

AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.


The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.

Best Regards,
Customer Care Specialist


ASSEMBLY INSTRUCTION

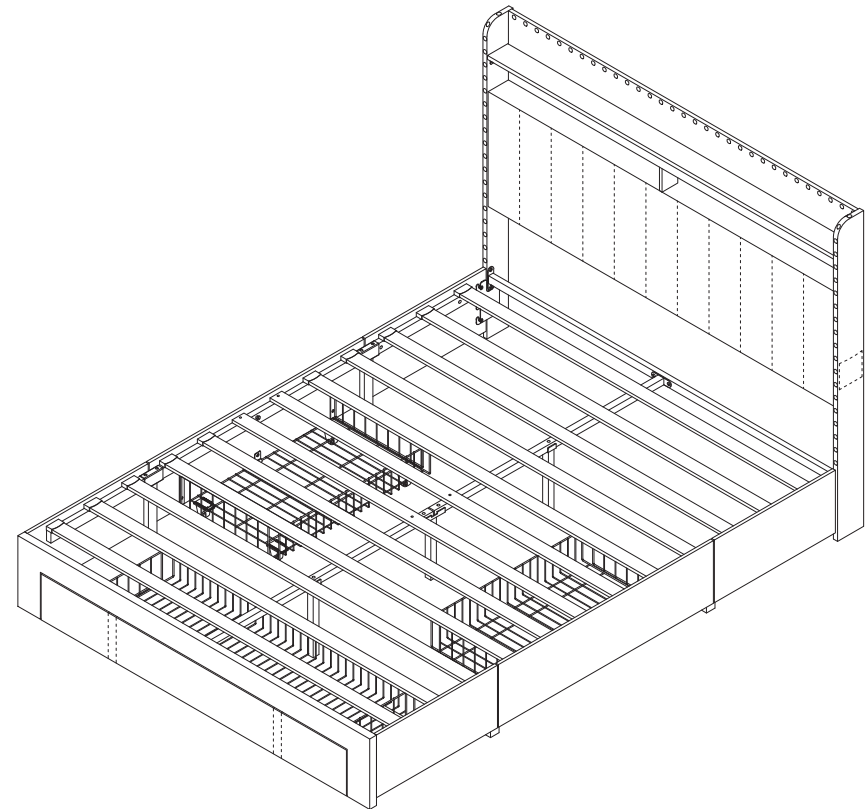




WARNING

Need Two Or More People To Complete Assembly

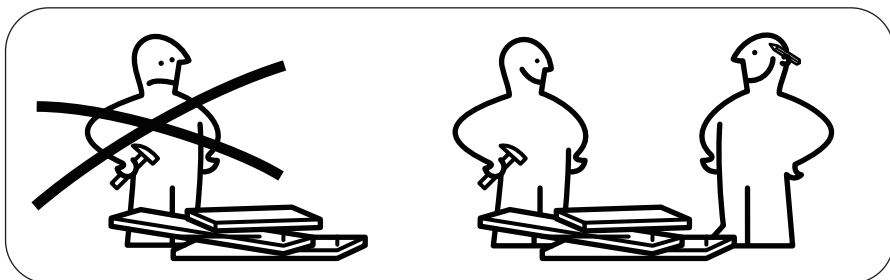


Assemble Item On a Clean Flat Surface

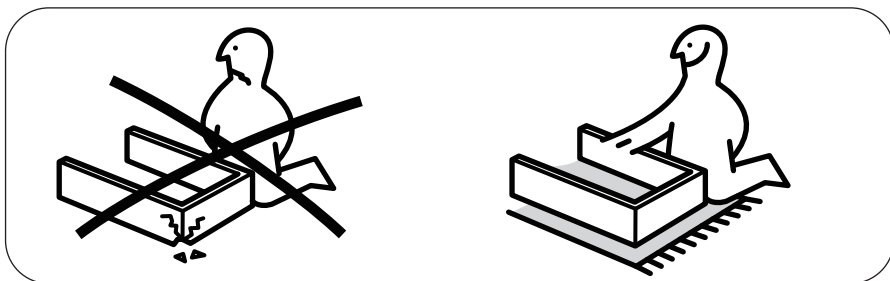

- Please check you have all hardware before assembling.
- Please ensure you have the name of the item and hardware part required and quantity.
- If you have any questions, please contact us by original purchase platform. we will reply you ASAP.



EXPLODED DRAWING:

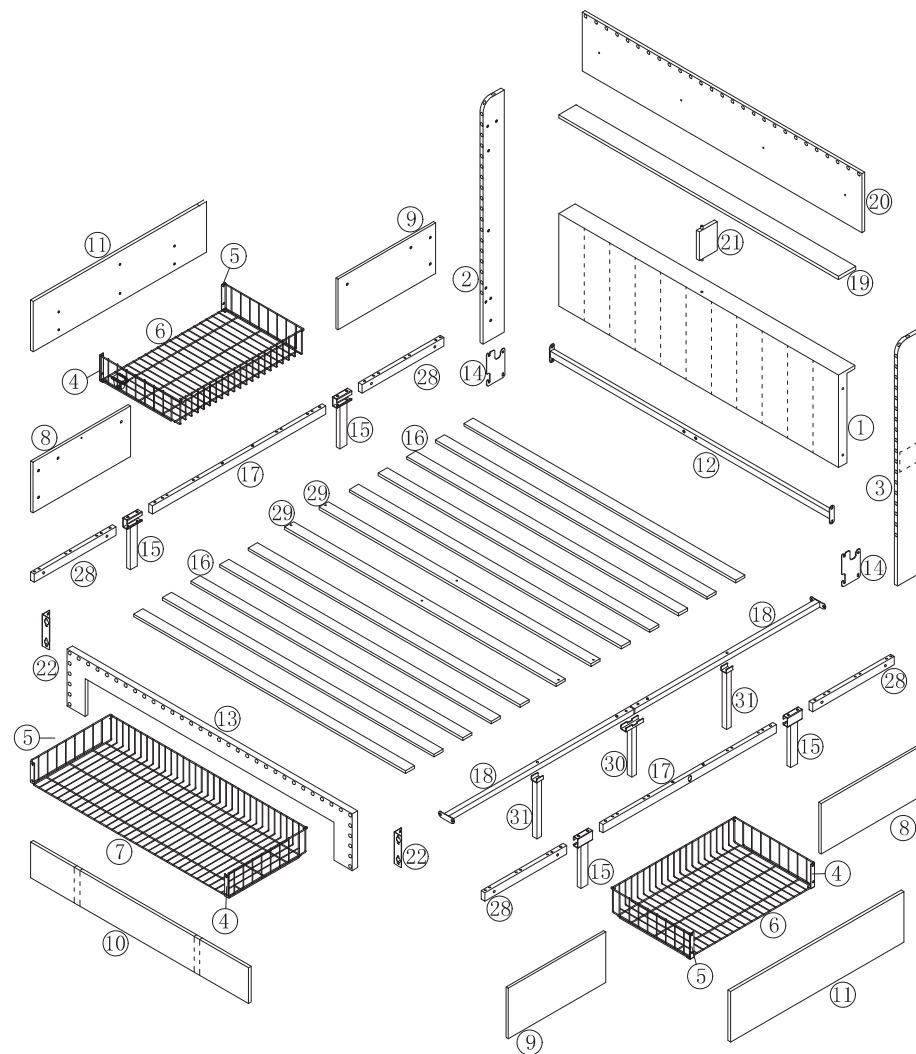

Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition.



If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

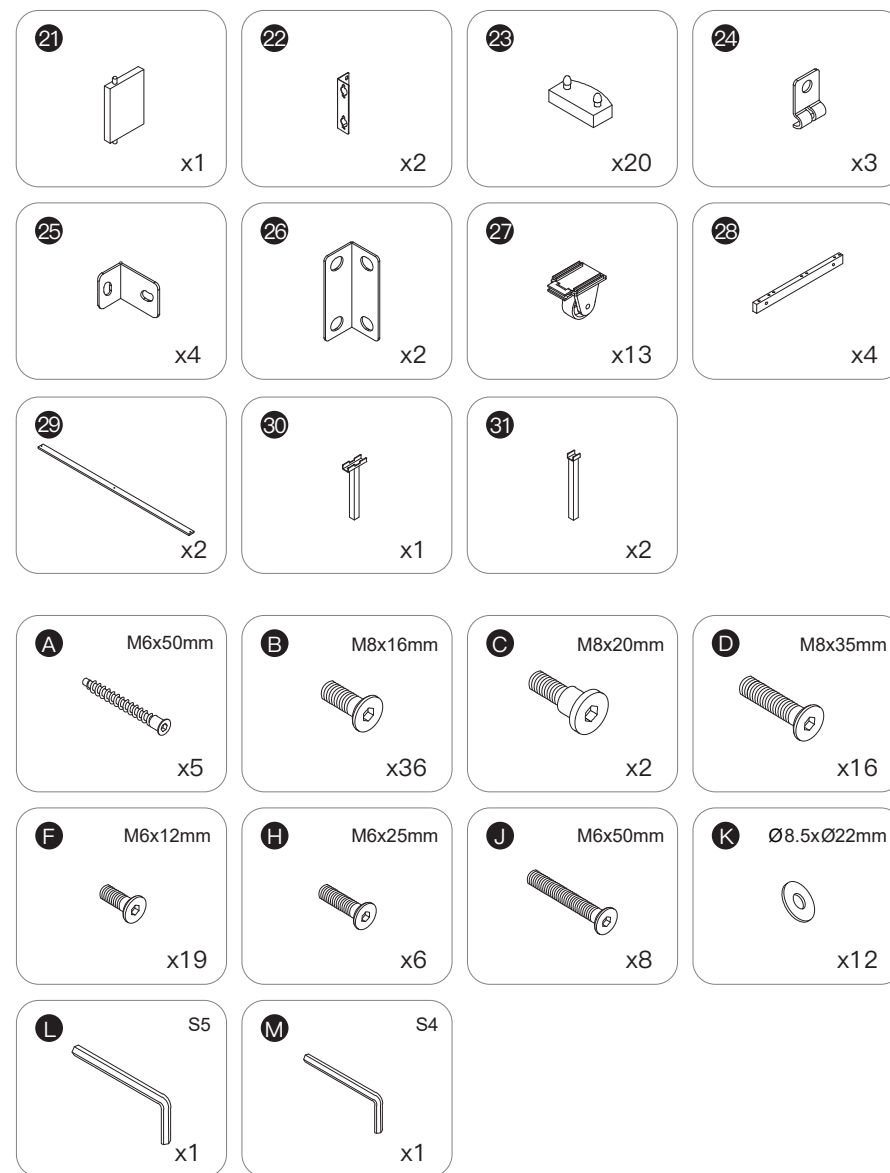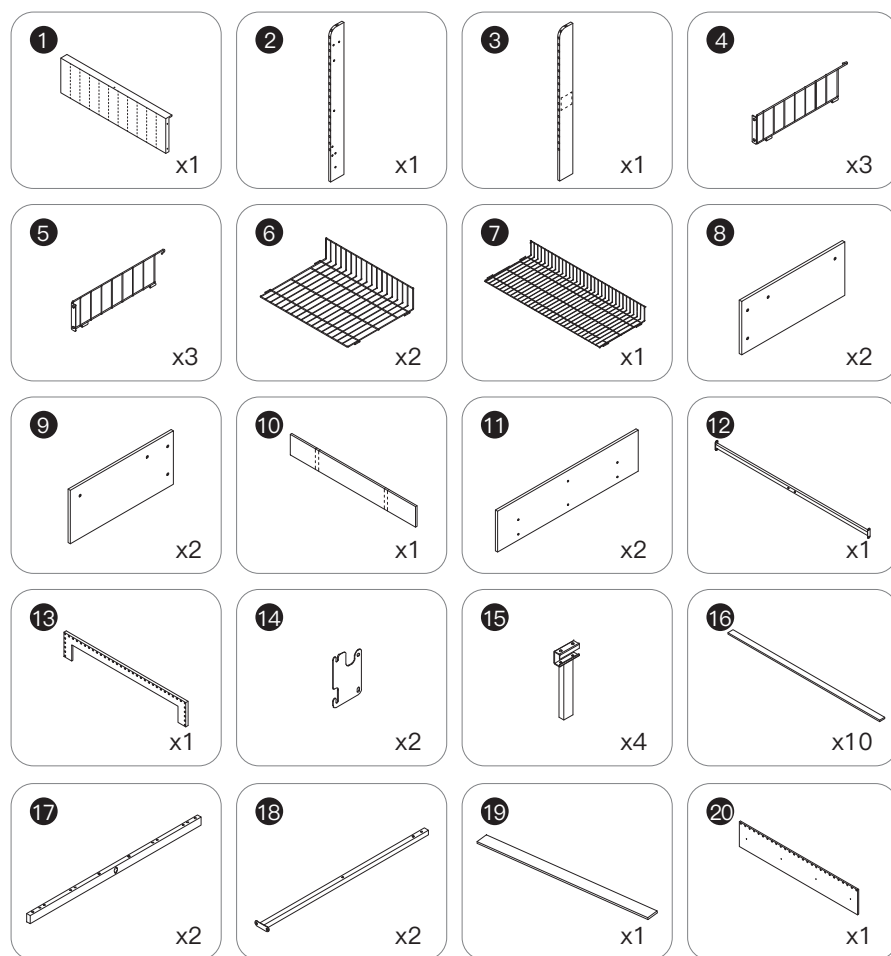


Step 1

Connect part ② and part ③ with part ①, use part ④ and part ⑤ to screw them.

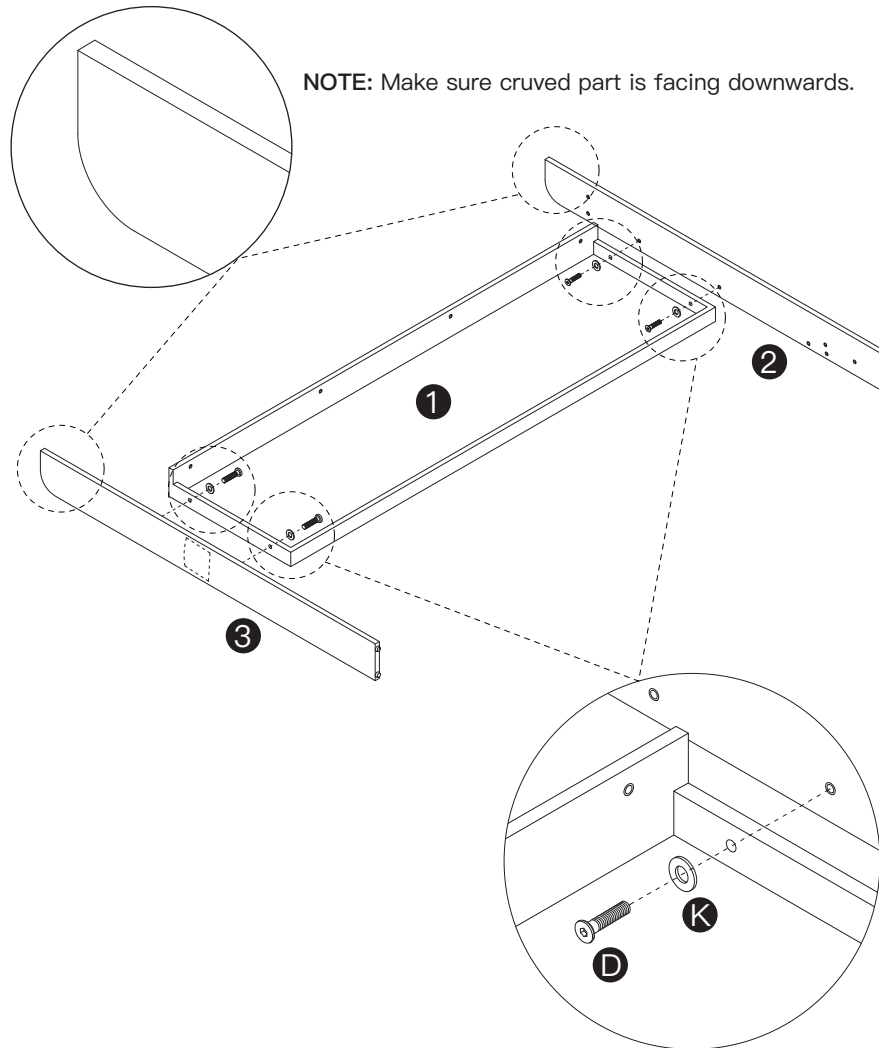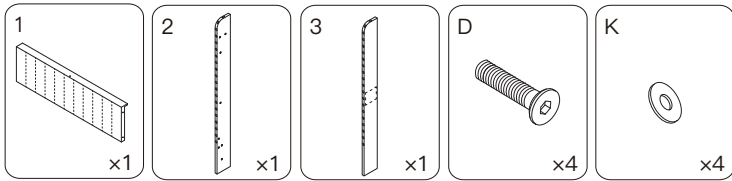


Step 2

Install part ⑥ on part ① with part ⑦, use part ⑧ to screw them.

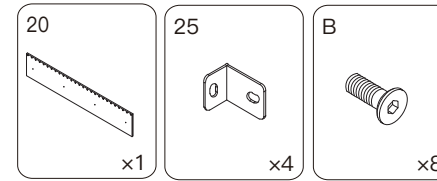


I

Install part ⑦ on part ①, use part ⑧ to screw them.

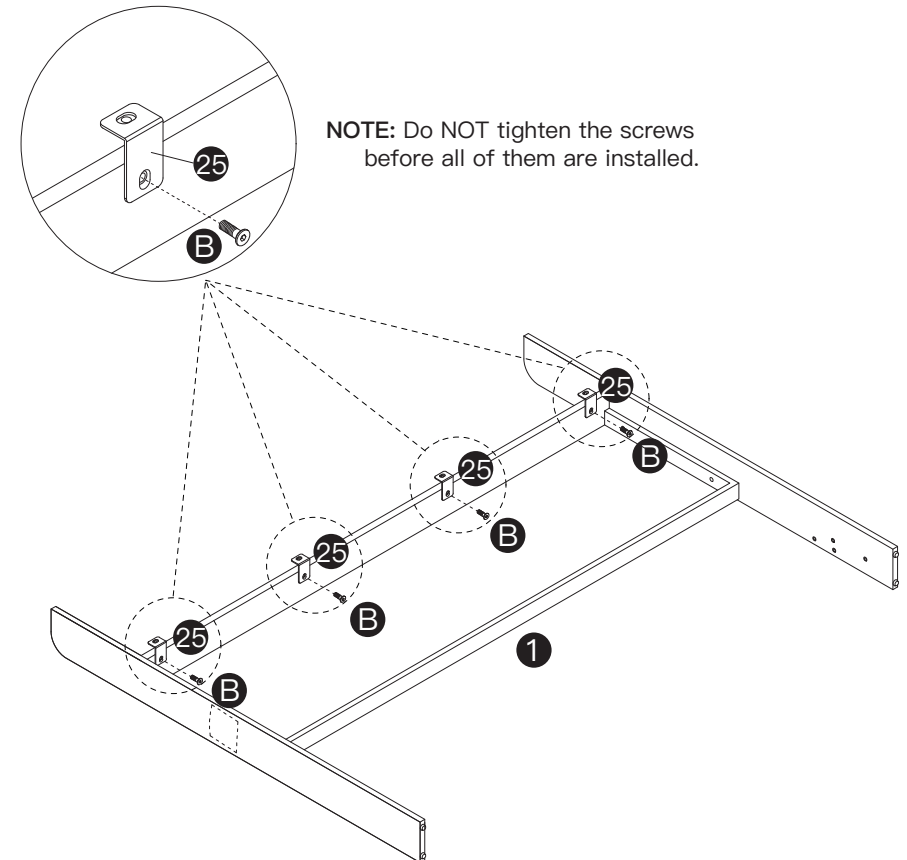



II

Connect part 20 and part 25, use part B to screw them.


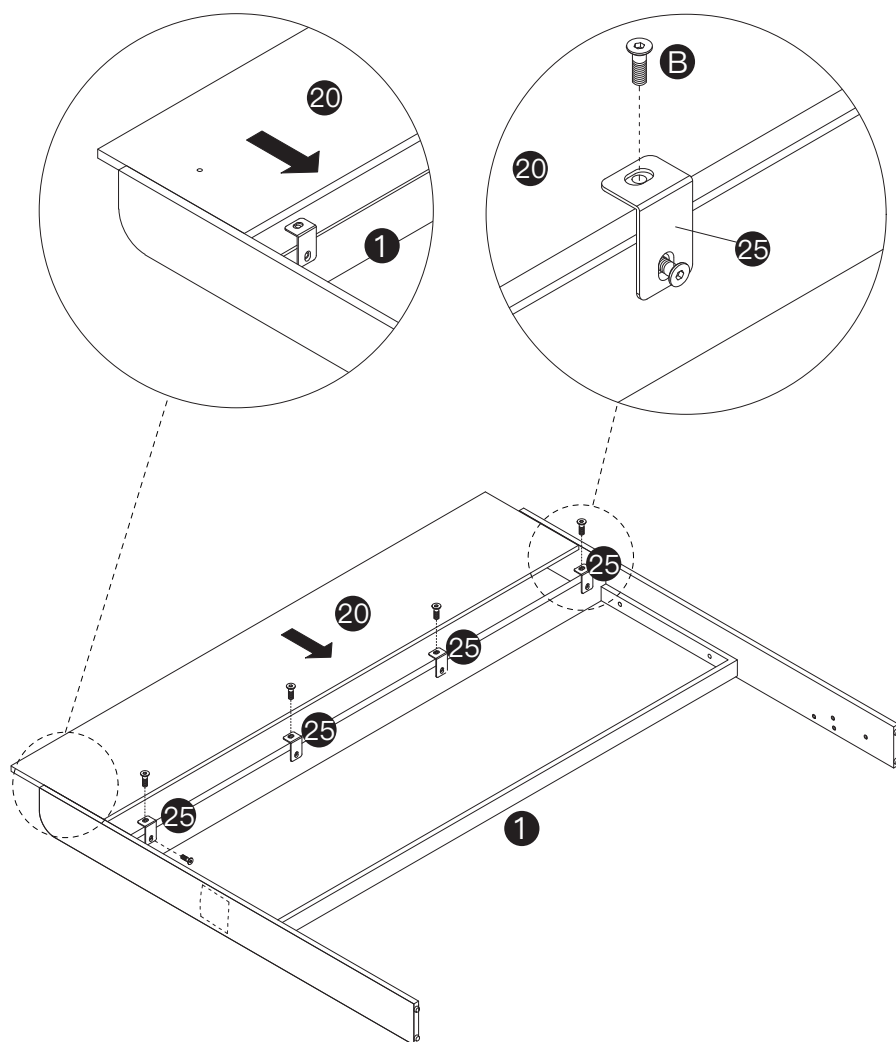


Step 3



Install part 21 on part 20, use part A to screw them.

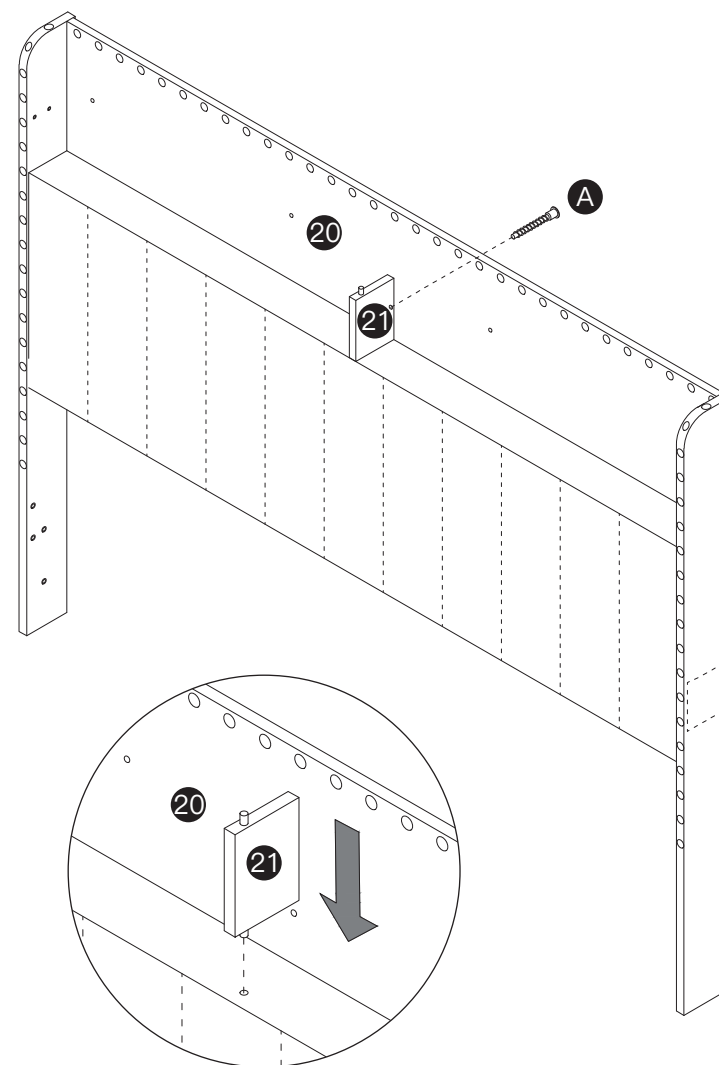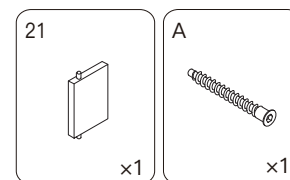

Step 4 Install part 26 on part 19, use part F to screw them.

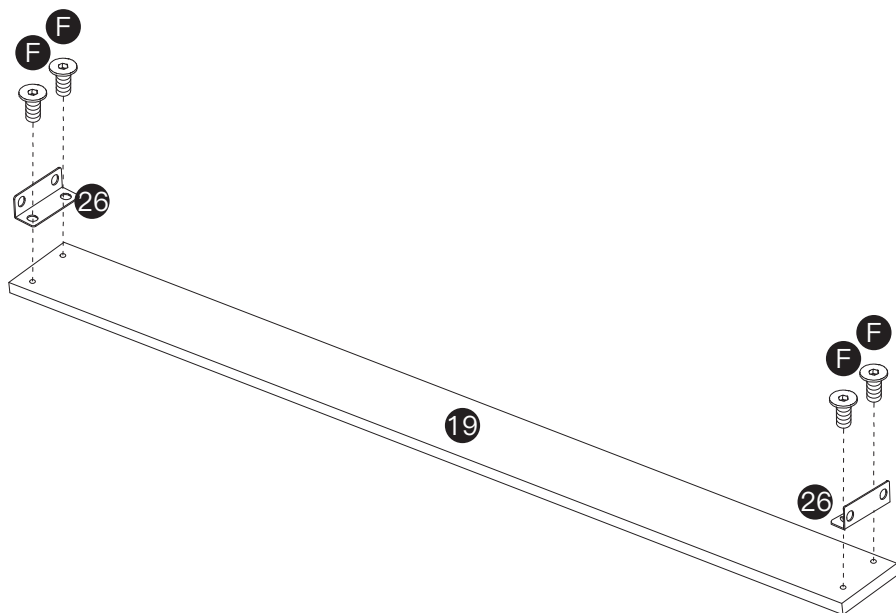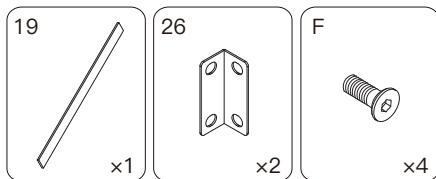

Step 5 Install part 19 on part 20, use part A to fix them. (DO NOT TIGHTEN)

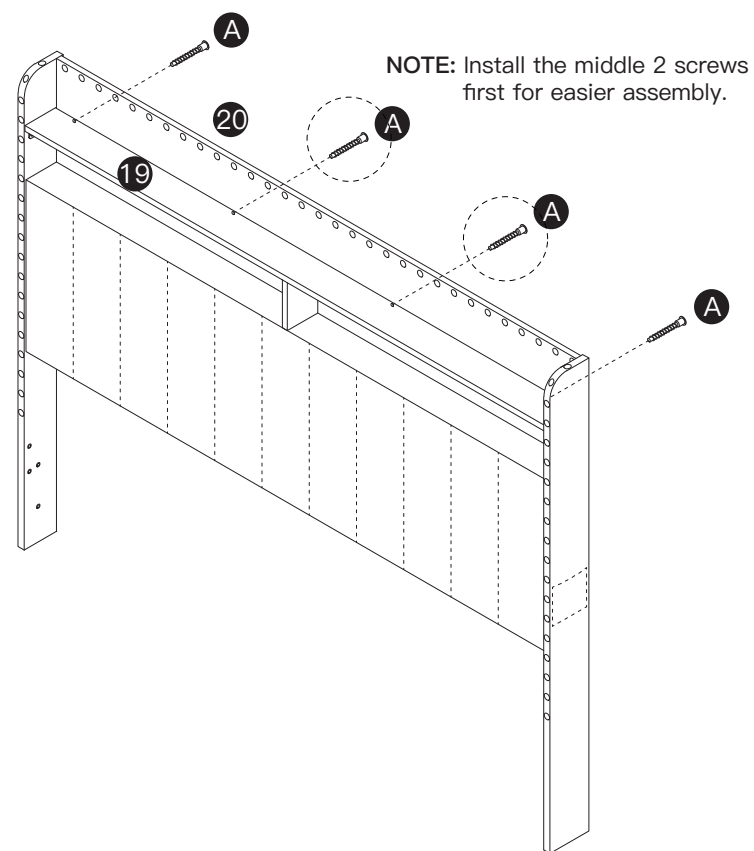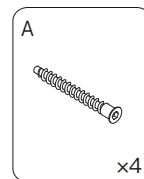

Step 6


Connect part 26 and part 2 & part 3 respectively, use part B to screw them.

B




x4

NOTE: Do NOT tighten the screws before all of them are installed.

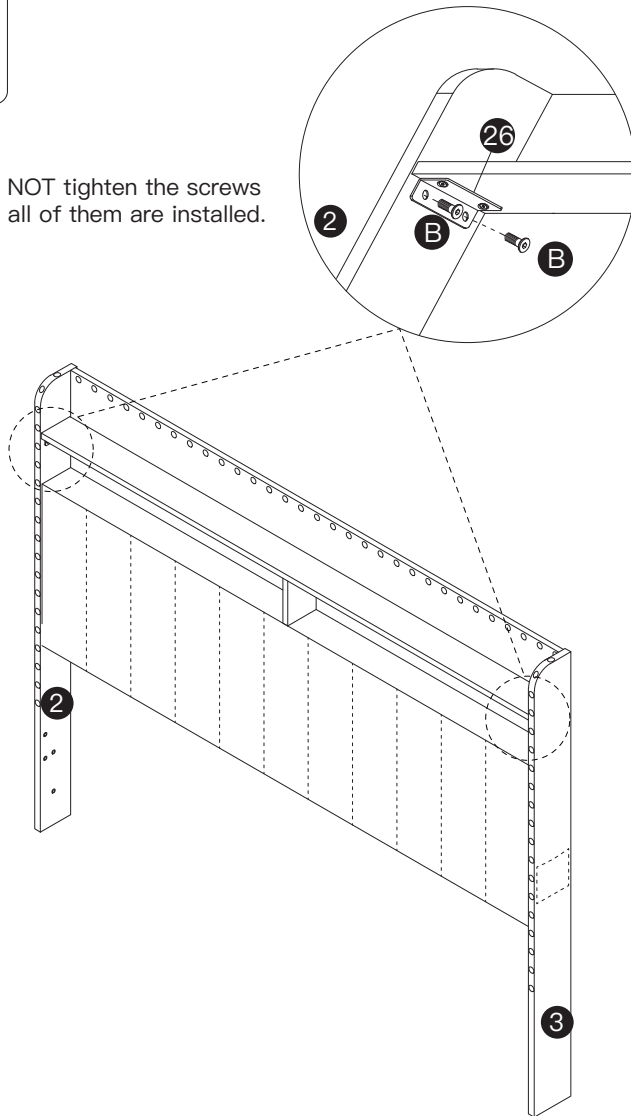


Step 7

Tighten part A to lock them.

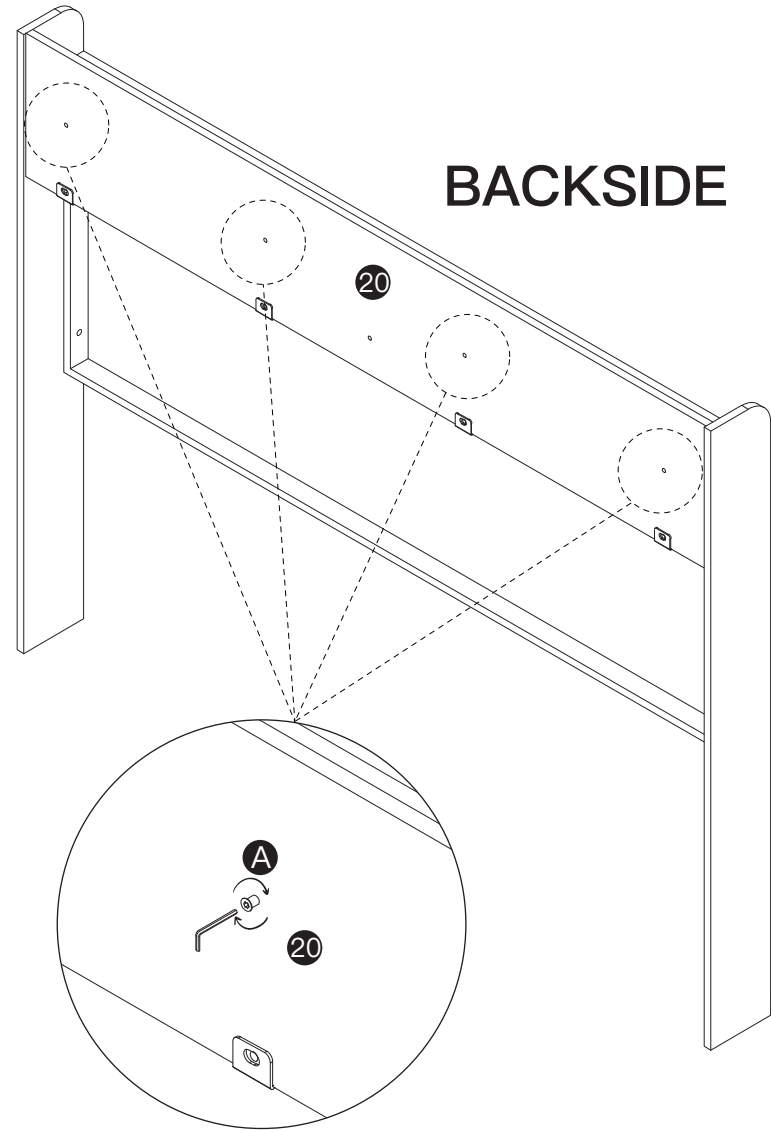


Step 8

Install part 14 on part 2 and part 3 respectively, use part B to screw them.

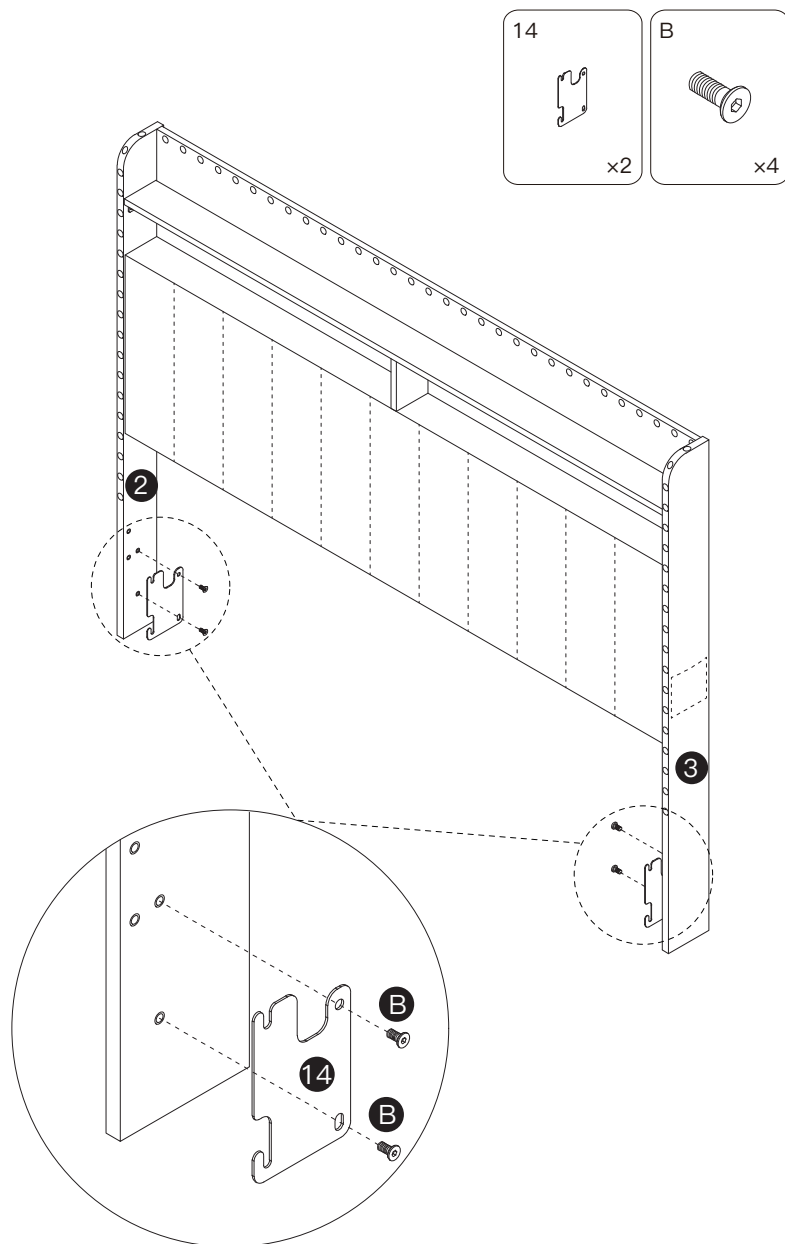

Step 9



Connect part 2 and part 3 with part 12, use part B to screw them.

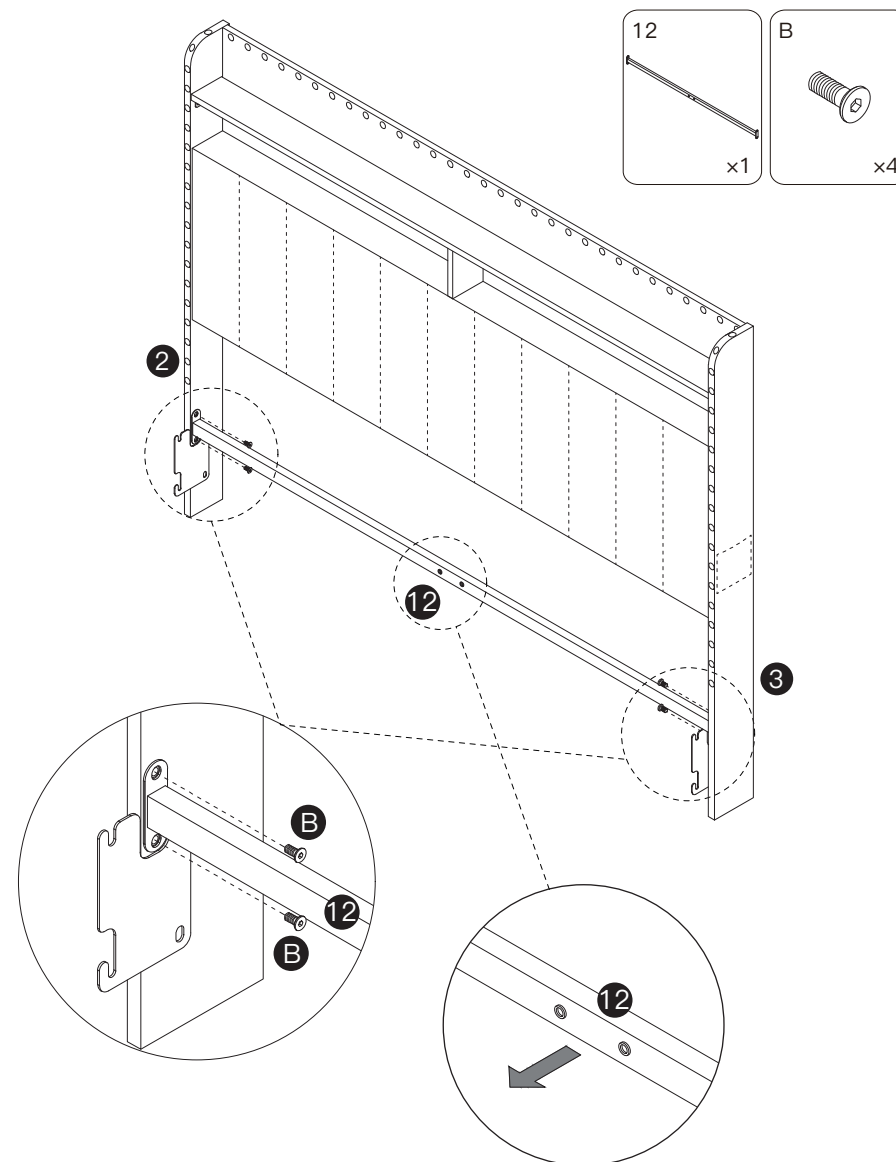

NOTE:
Make sure the round holes of part 12 are facing front side.



Step 10

Insert part **17** and part **28** into part **15** in the order as shown above, use part **J** to screw them.

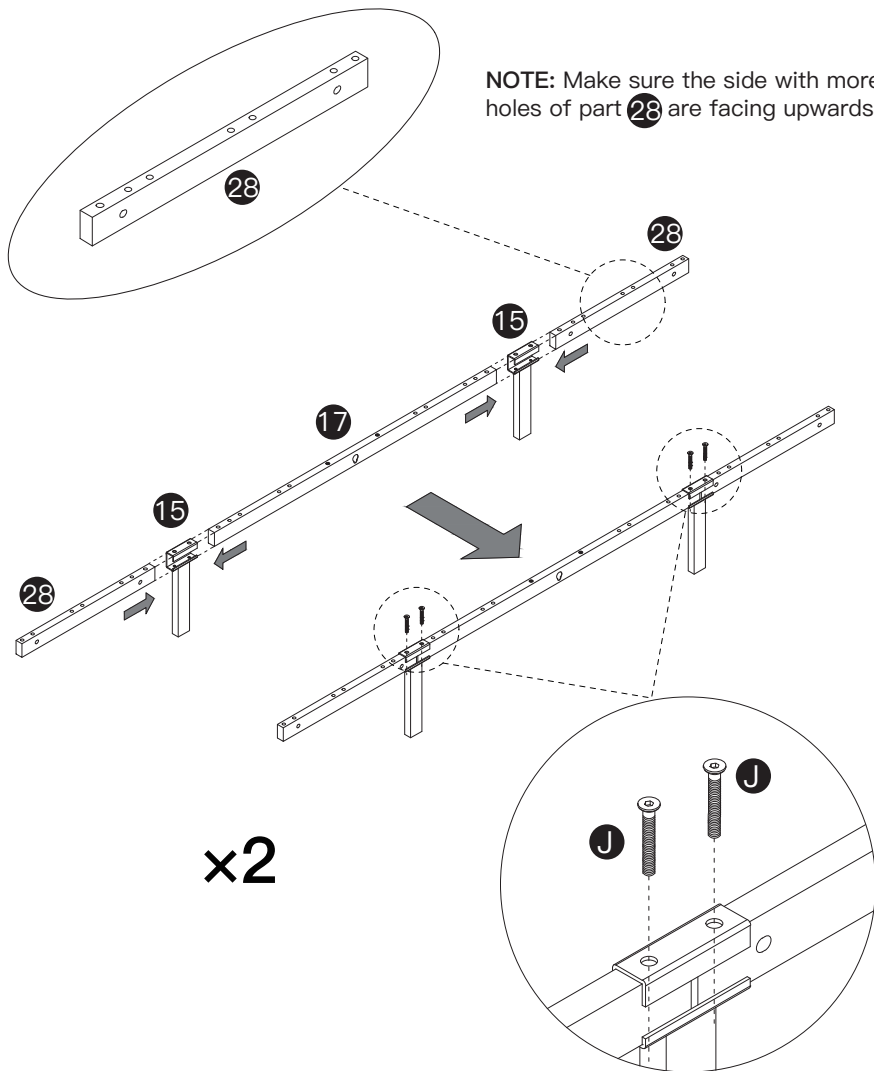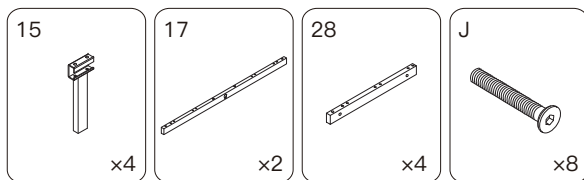



Step 11

Install part **8** and part **9** on part **28**, use part **D** and part **K** to screw them.

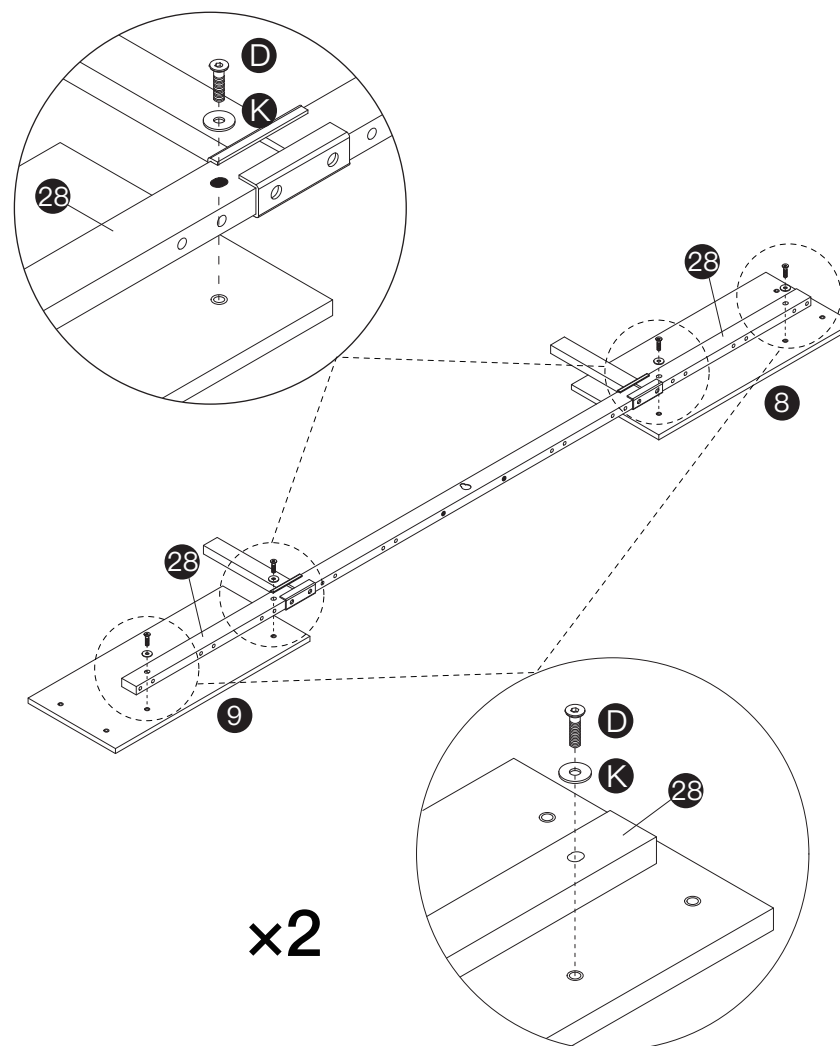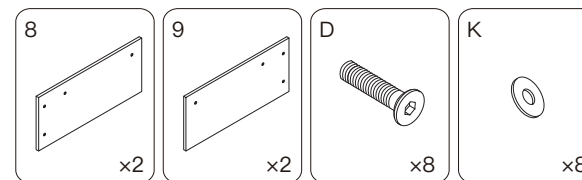



Step 12

Install part 31 on part 18, connect part 18 with part 30, use part D to screw them.

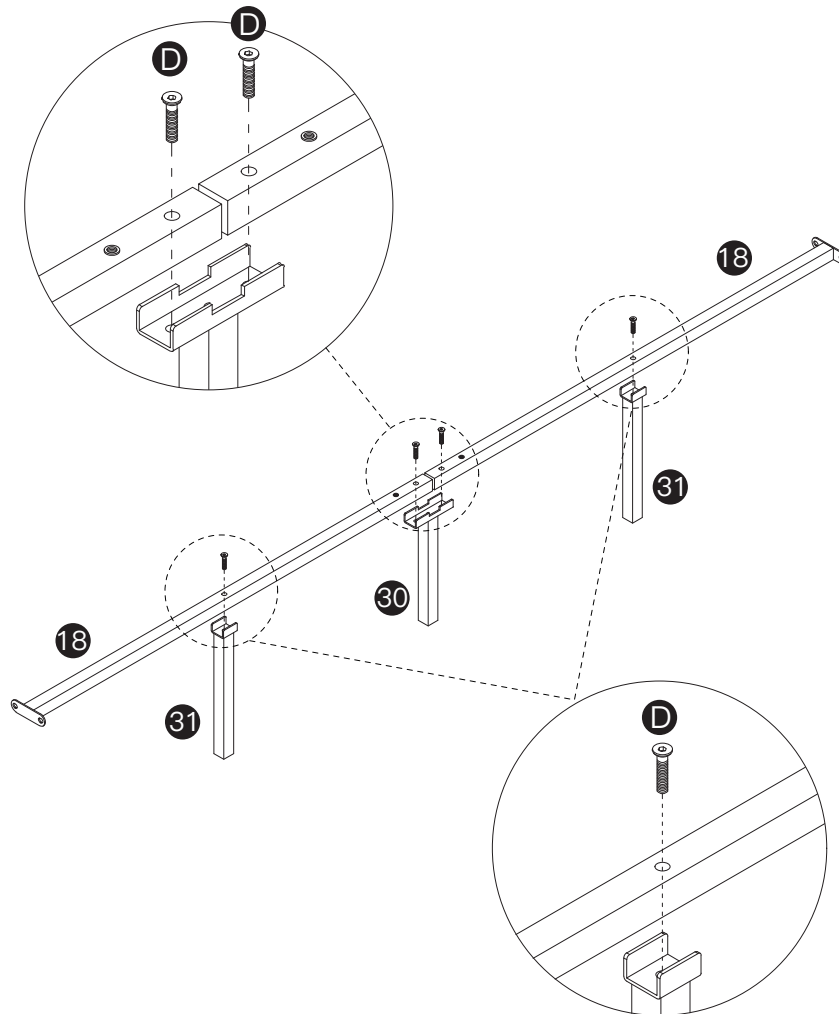
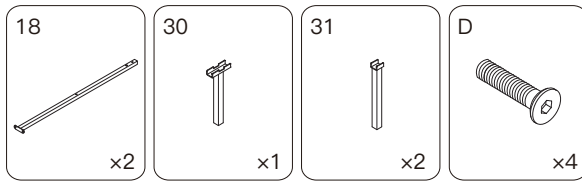


Step 13


Install ONE part 22 on each part 8 and part 9 respectively, use part B to screw them.

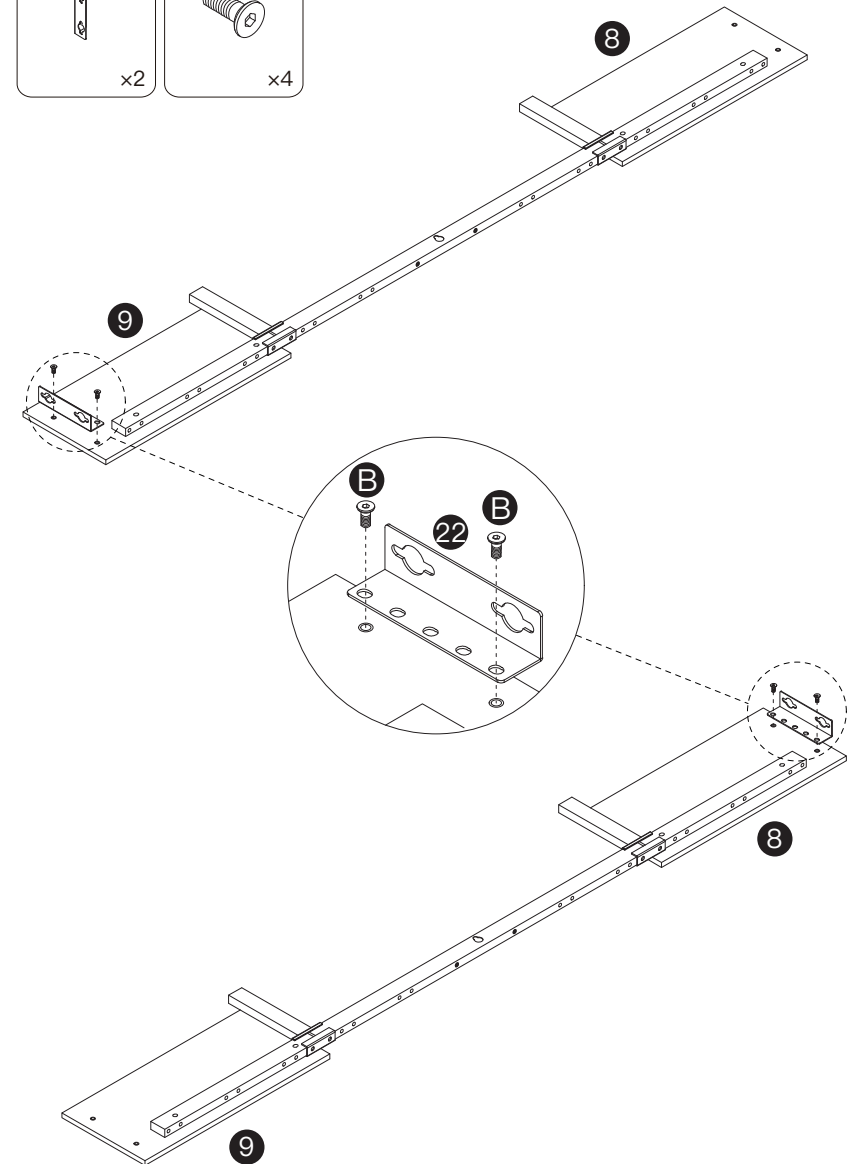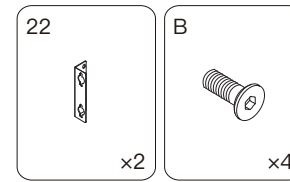

Step 14 Install part 18 on part 12, use part B to screw them.

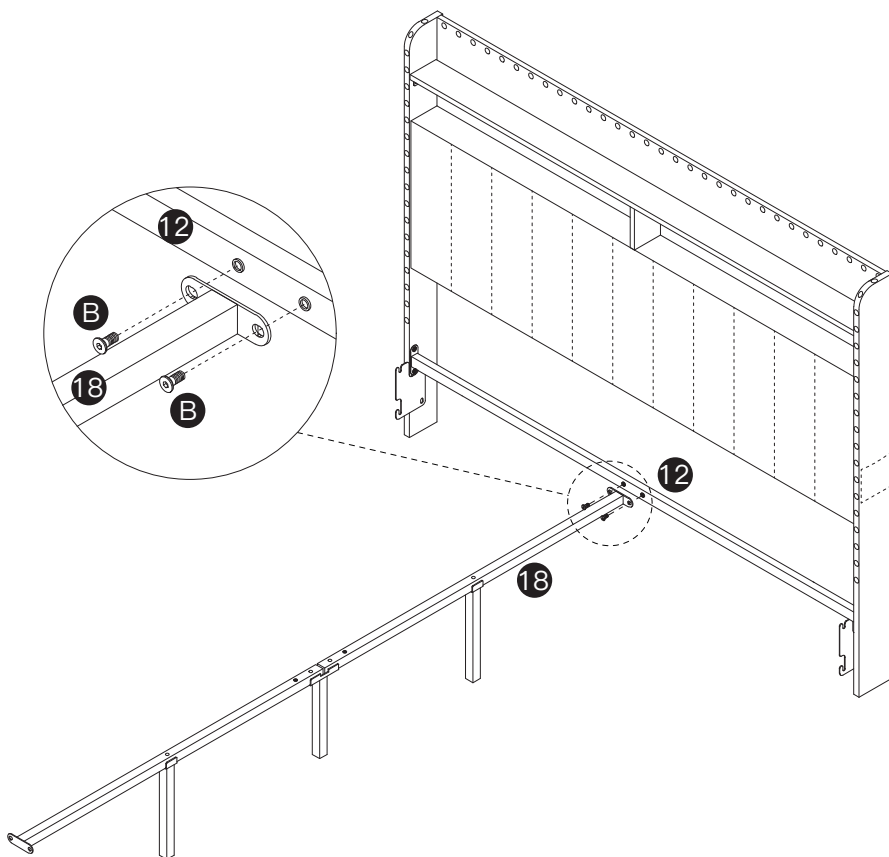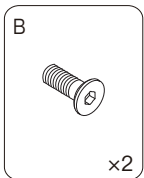


Step 15 Install part B on part 8 and part 9 respectively (do not tighten), mount them onto part 14, then screw them tight.

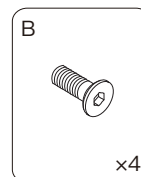


I

Install part B on part 8 and part 9 respectively.
(DO NOT TIGHTEN)

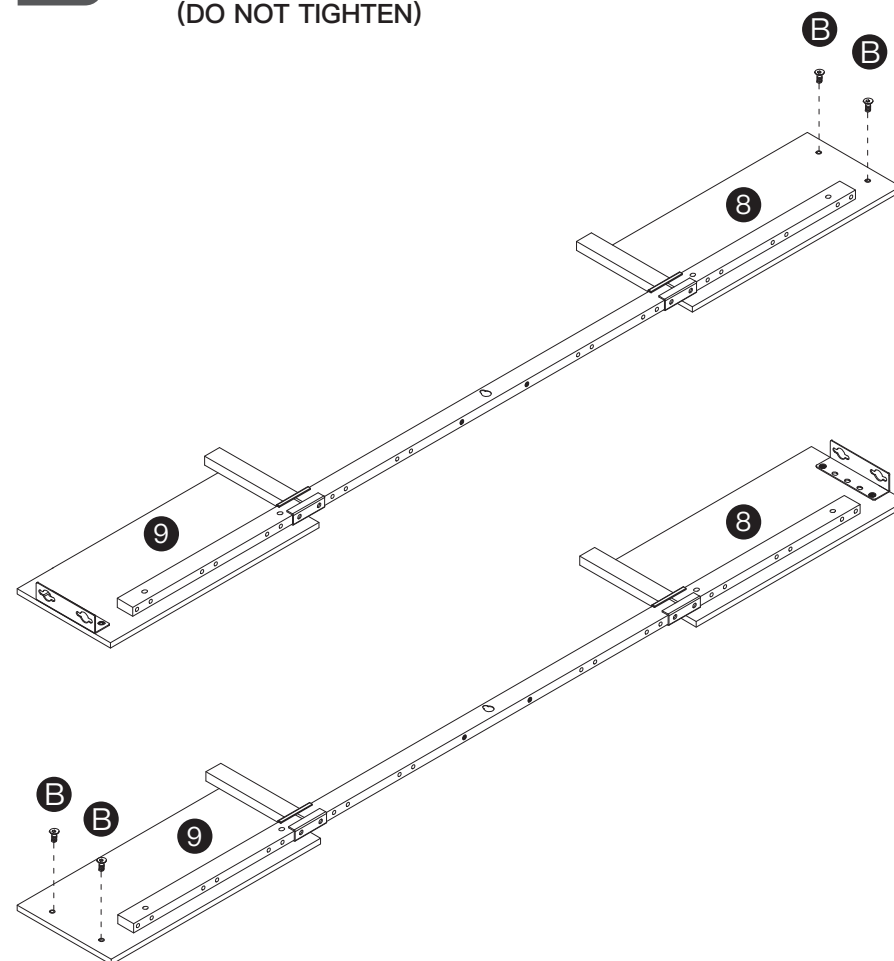


II

Mount them onto part 14.

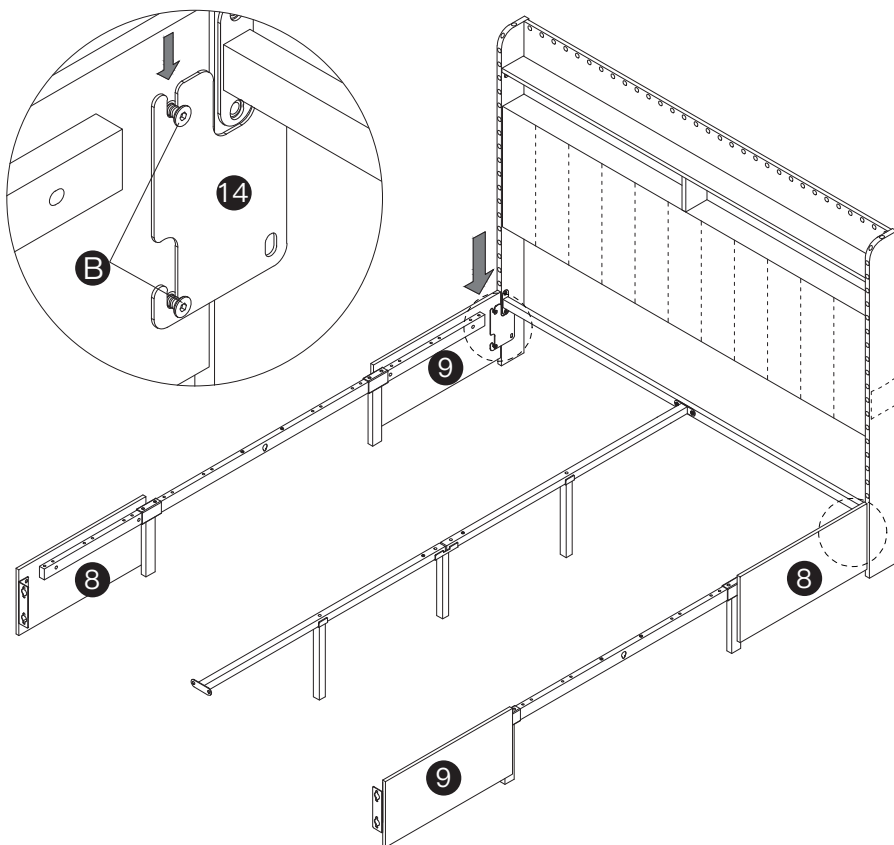




III

Screw them tight.


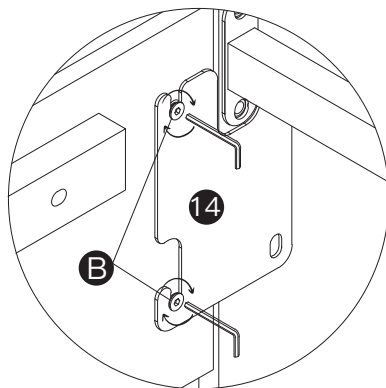


Step 16




Connect part 8 and part 9 with part 13, use part 22 and part B to fix them.

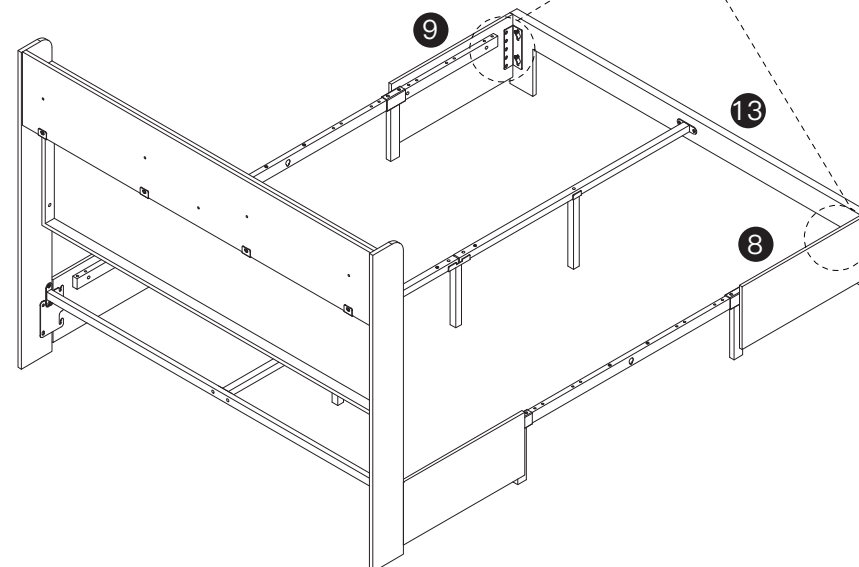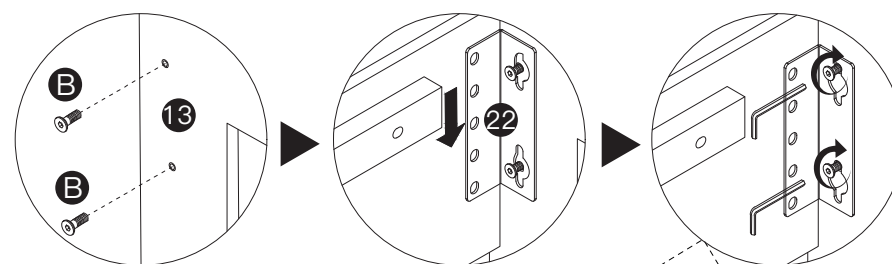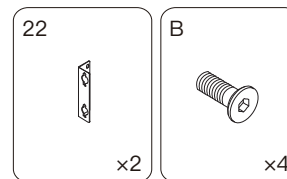



Step 17 Connect part 13 and part 18, use part B to screw them.

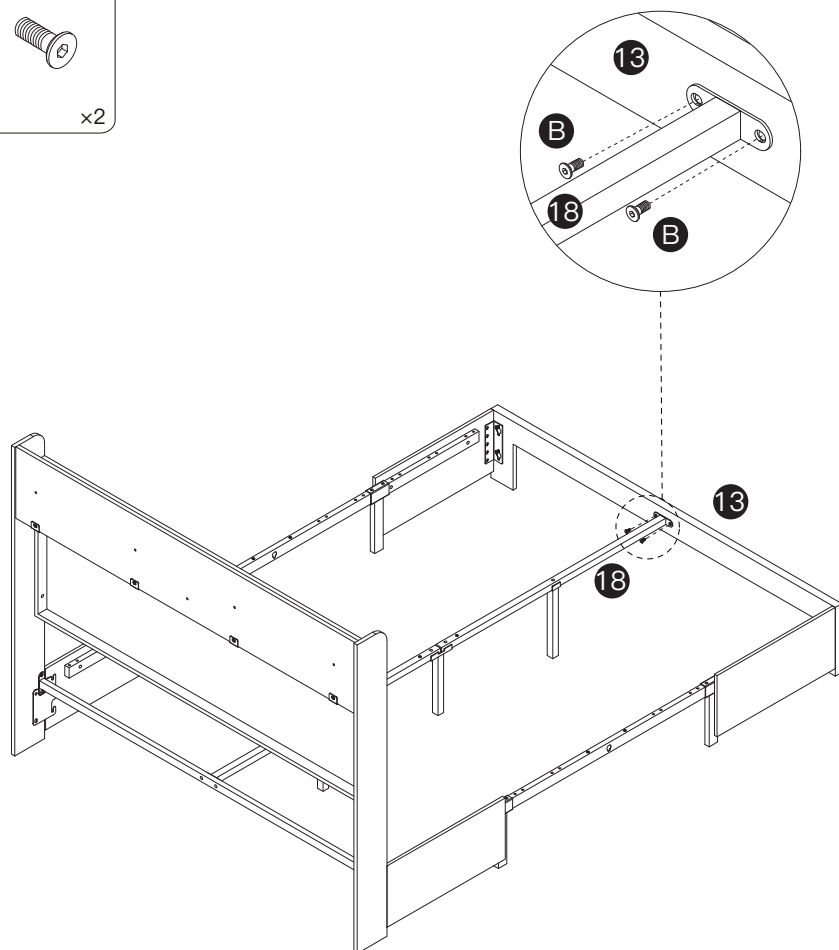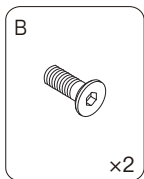


Step 18 Install part 29 on part 17 and part 18, use part H to screw them.

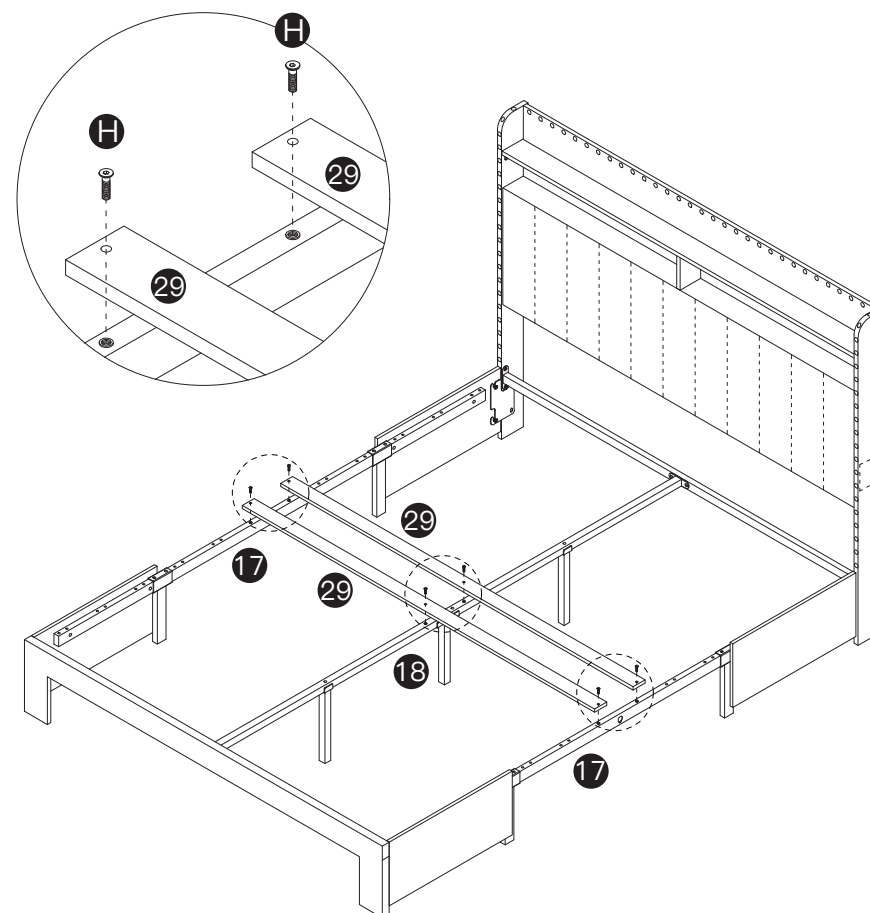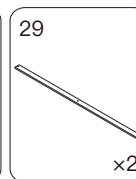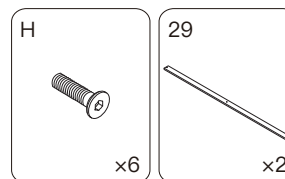



Step 19 Insert part 23 into part 16.

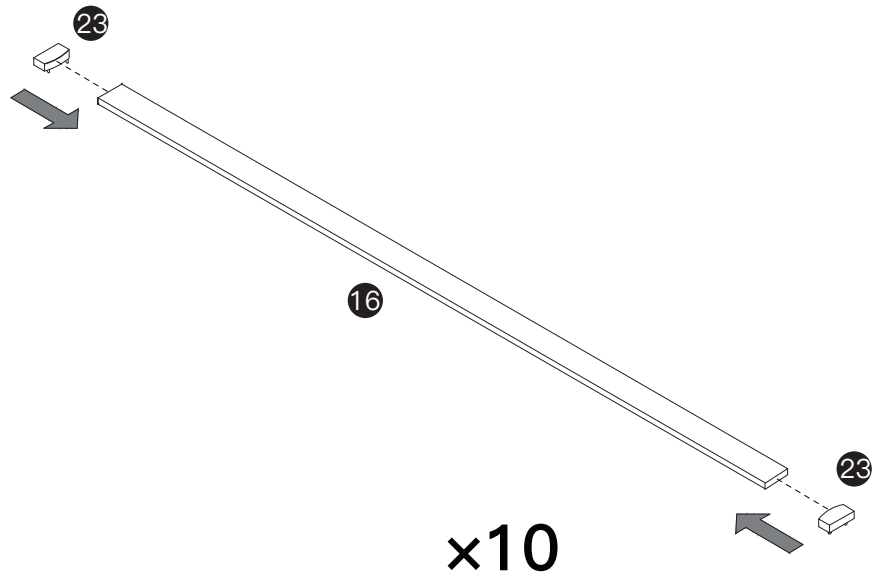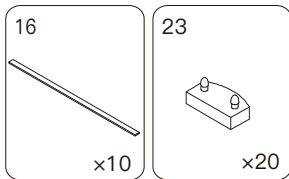

Step 20 Install the part 16 on the bed frame.


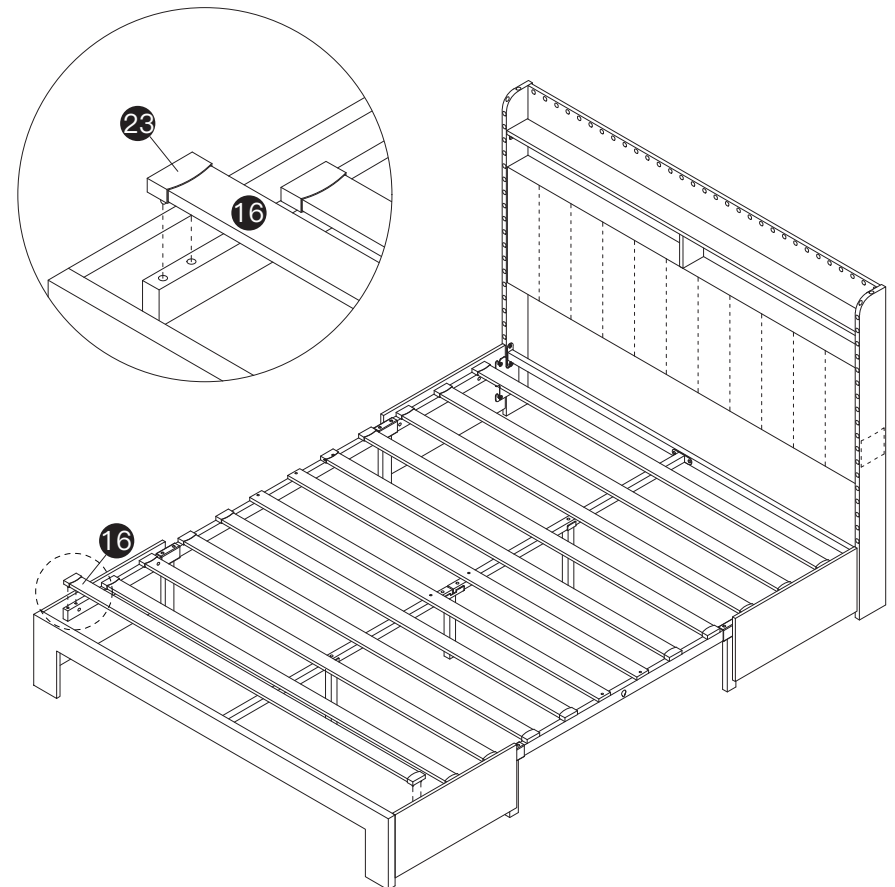


Step 21 Install part 4 & 5 on part 6 and part 7 respectively.

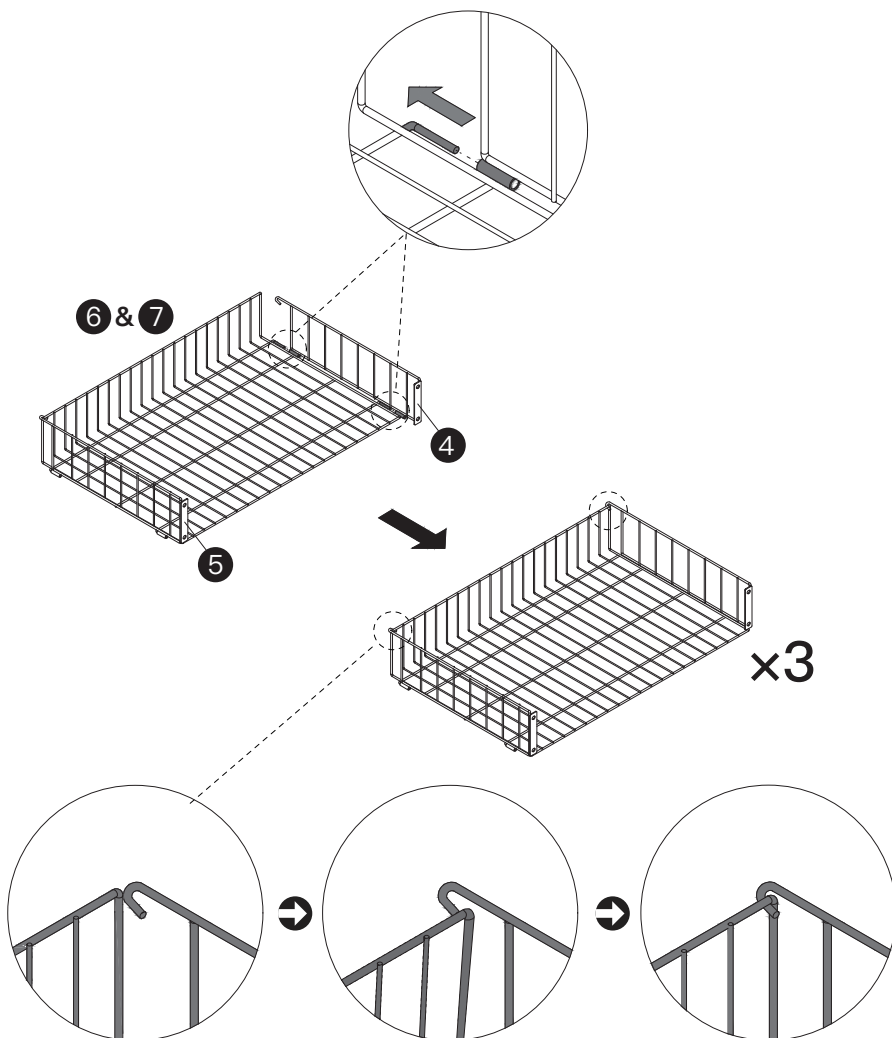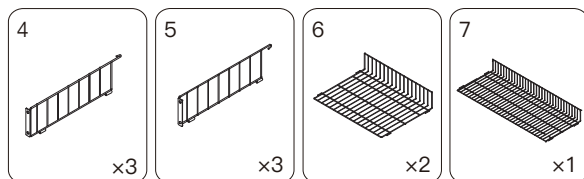


Note: Bend the frame to connect each other when necessary.

Step 22 Flip over and install part 27 on part 6.

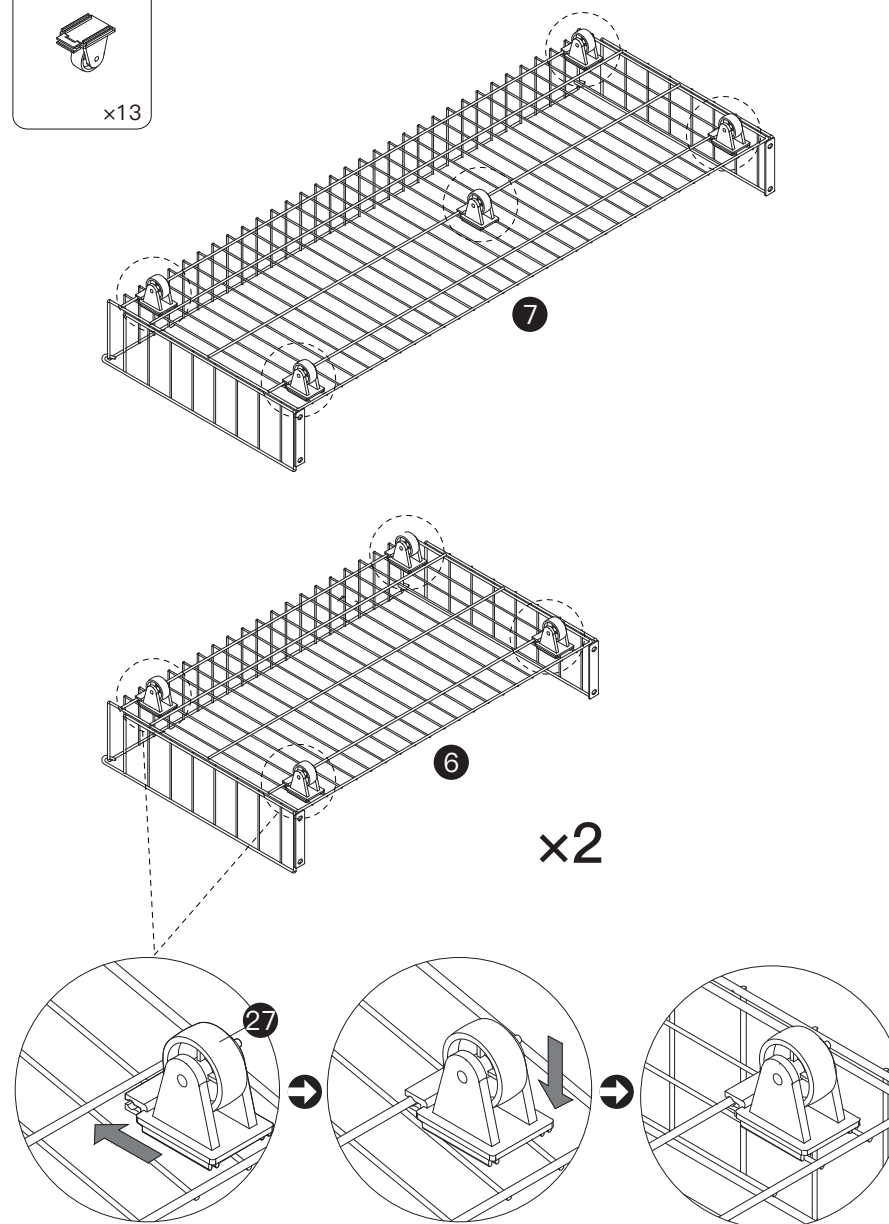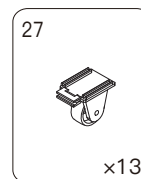


Step 23

Install the front panel (part 10 & 11), use part F to screw them.

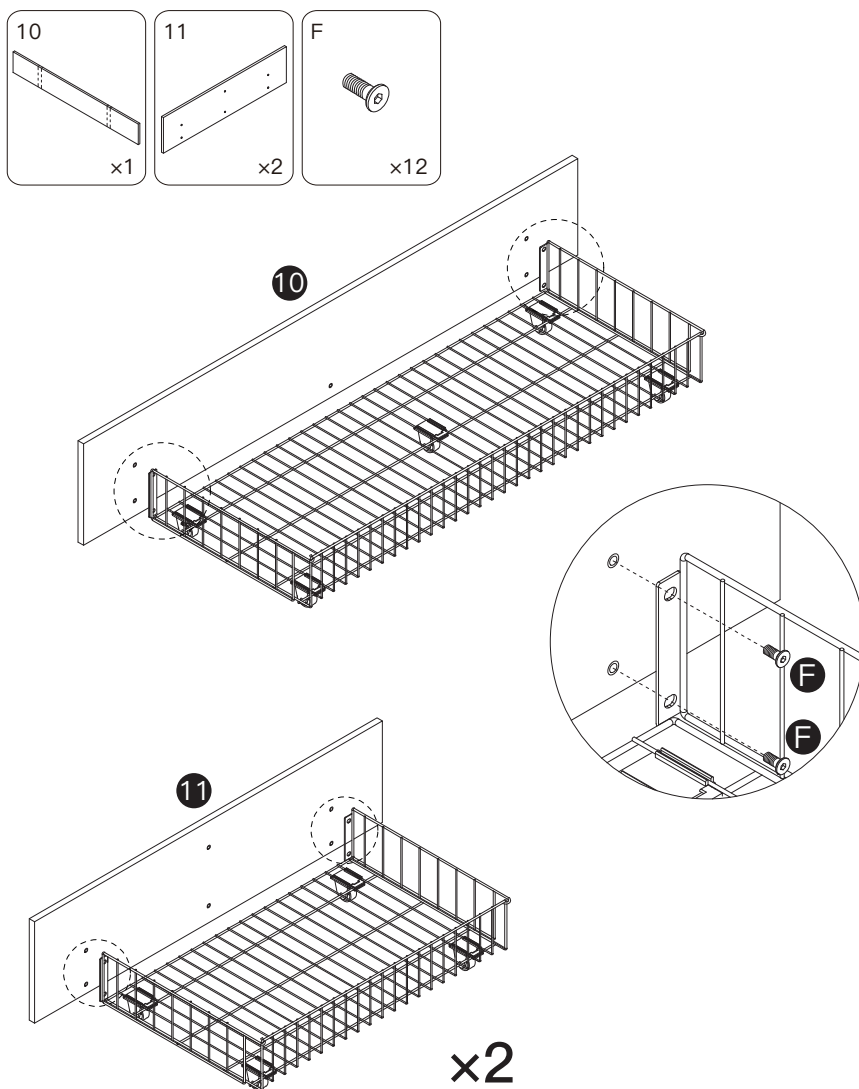


Step 24

Connect the front panel and drawer frame with part 24, use part F to screw them.

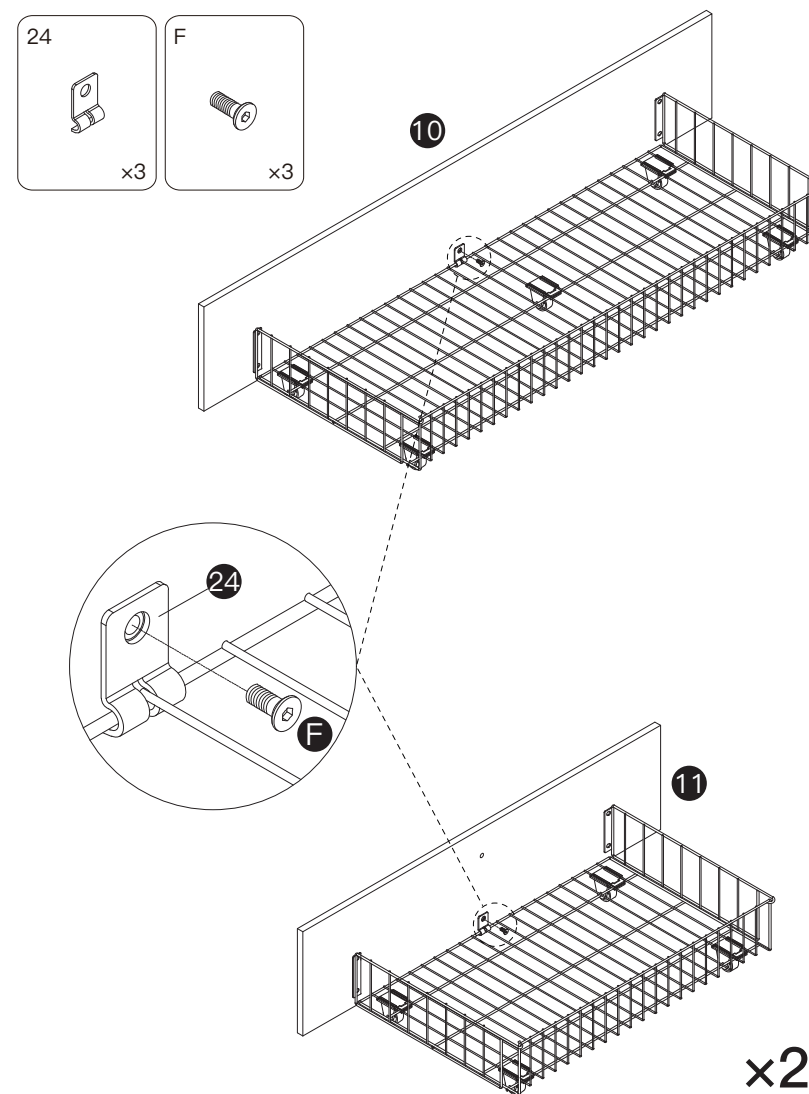


Step 25

Install part **C** on part **11**.

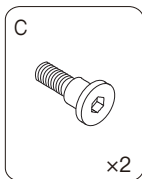

Note:

The pin (part **C**) is design to leave a protrusion part outside in order to lock the drawer.

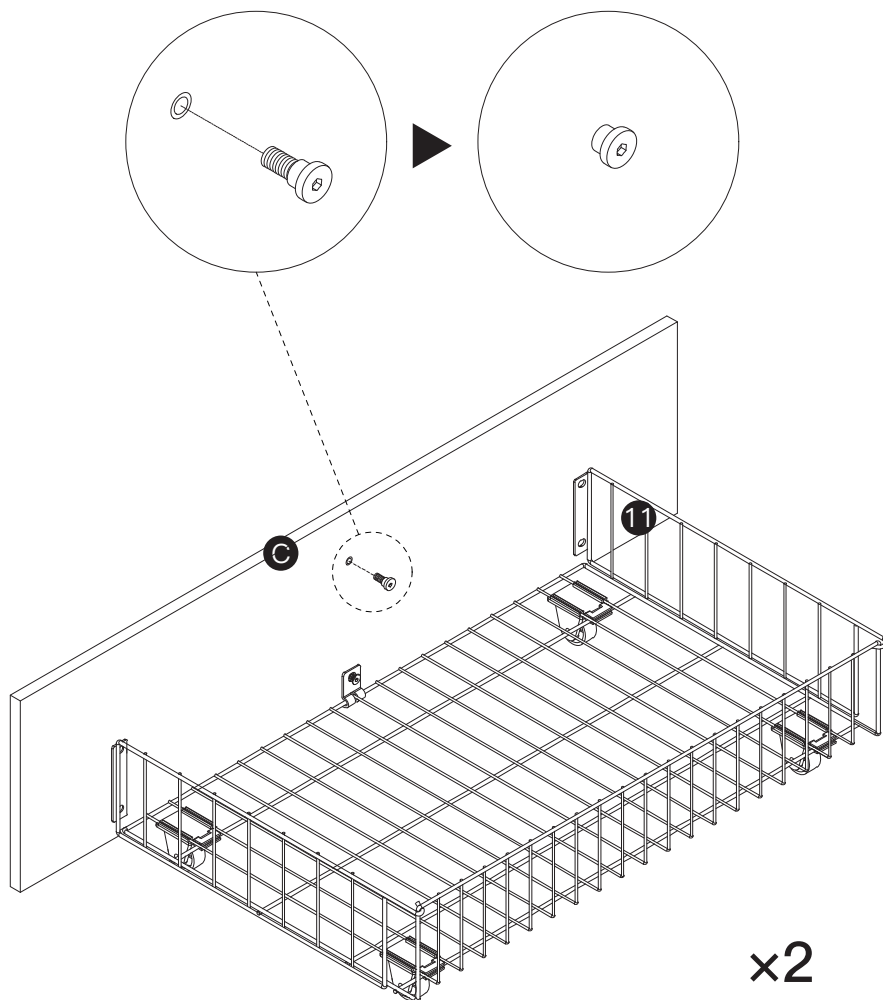

Step 26

Lift the drawer and align the pin (part **C**) with the gourd hole, then snap it in.

