


Installation & Assembly

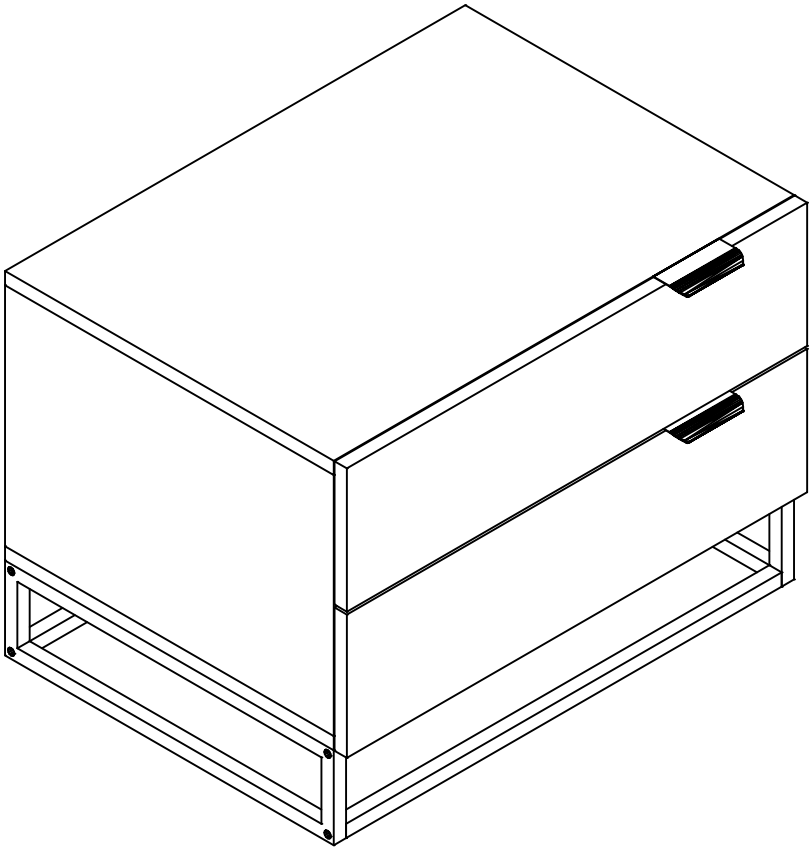



Thanks for purchasing one of ourproducts,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws beforeall screws are in place).

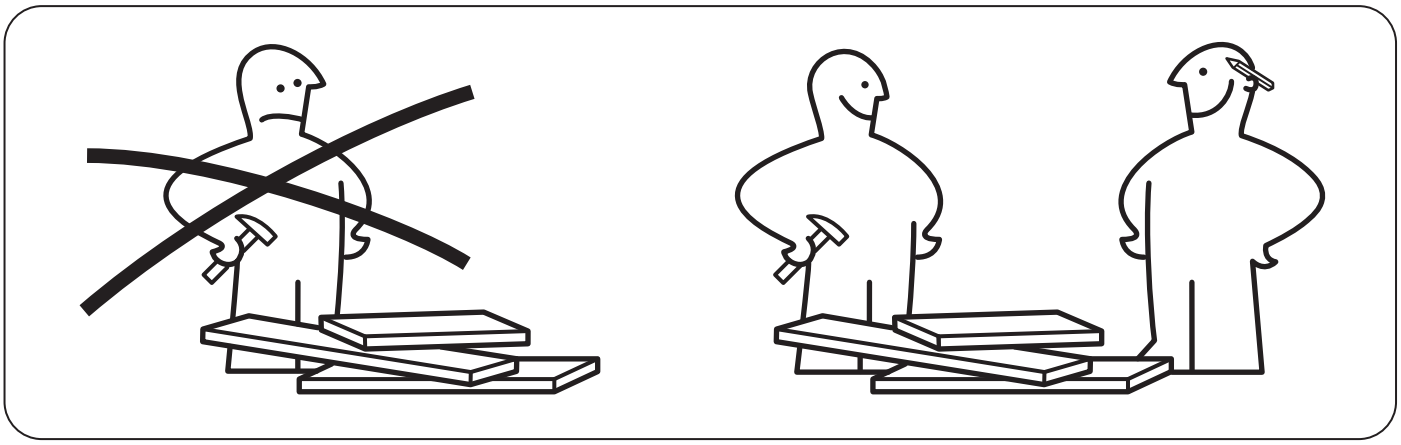

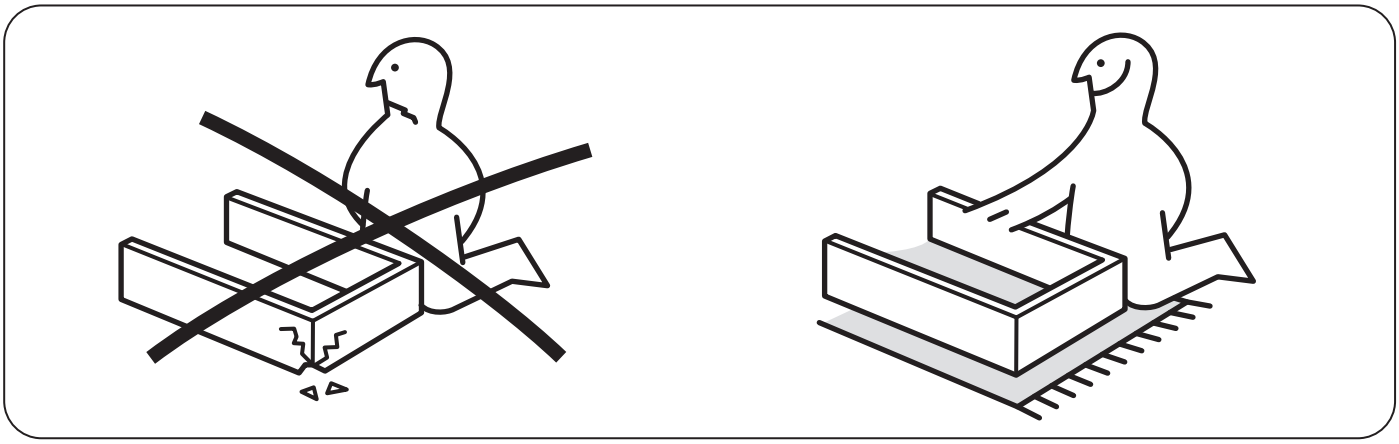


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer










To Assemble the Unit
Wooden Hammer

PAGE1
Exploded View

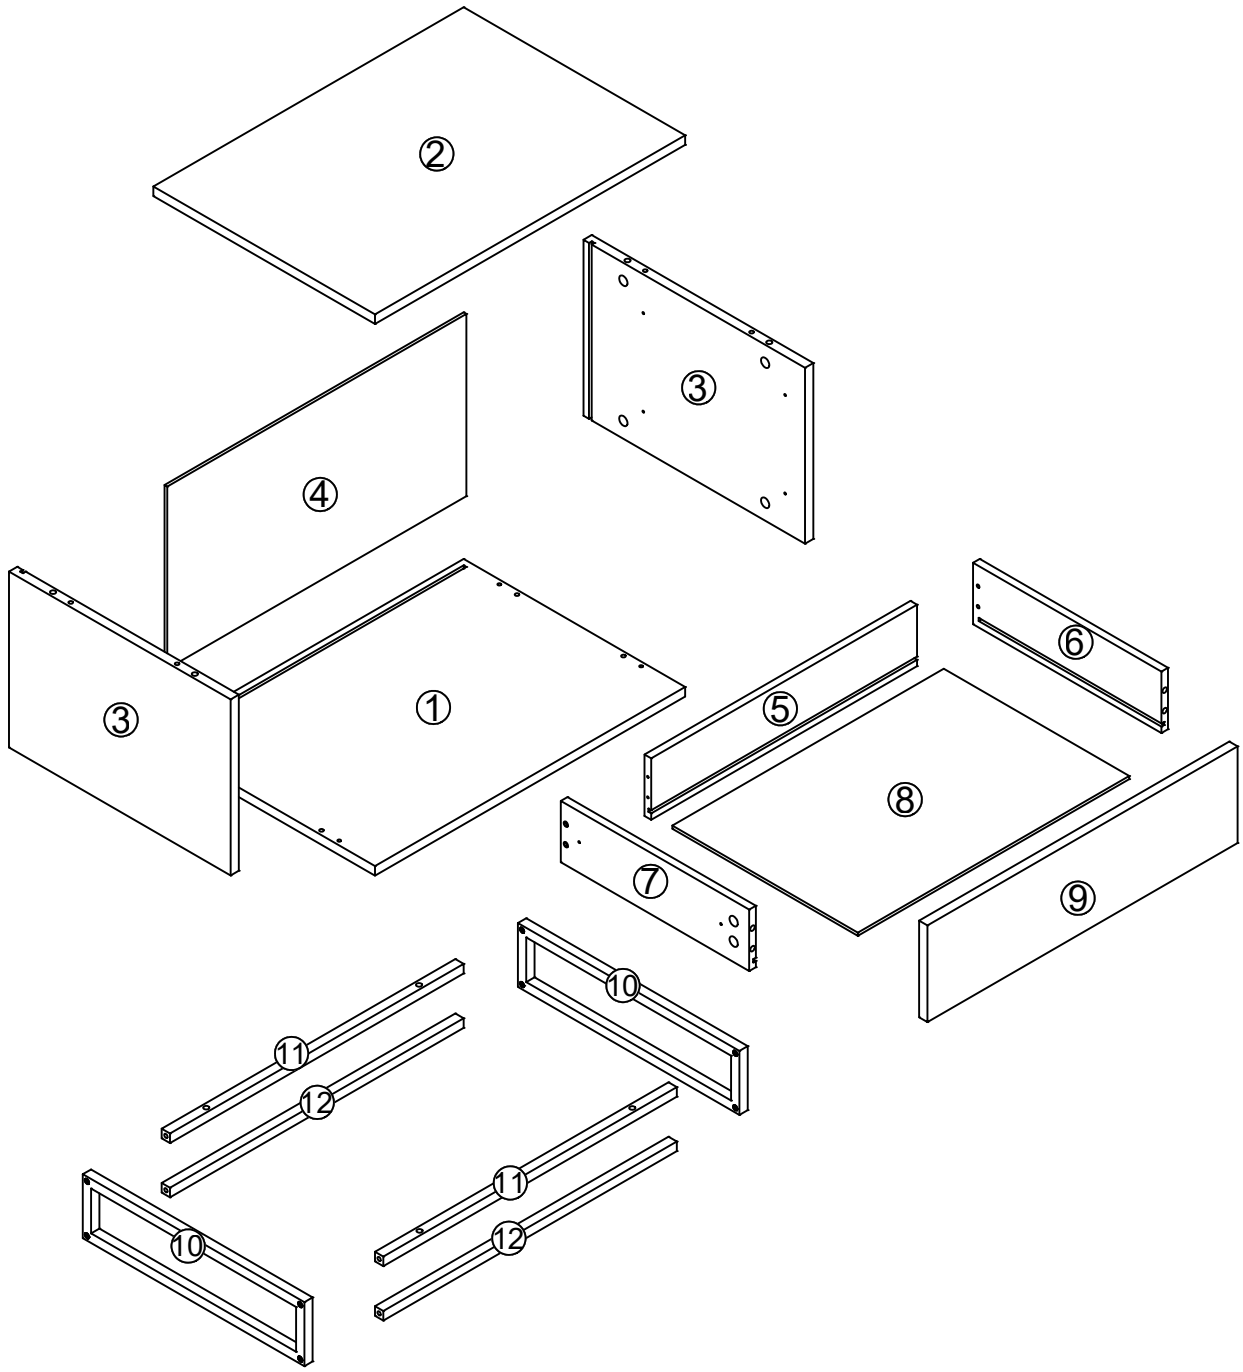


PAGE2
will require these parts

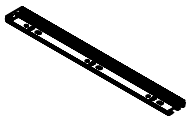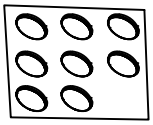
A  16+2PCS	B  16+2PCS	C  M6X30MM 8+2PCS	D  M3.5X12M 20+2PCS
E  M3.5X30M 8+2PCS	F  M6X25M 12+1PCS	G  (3*16MM) 4PCS	H  4PCS
I  2PCS	J  8PCS		

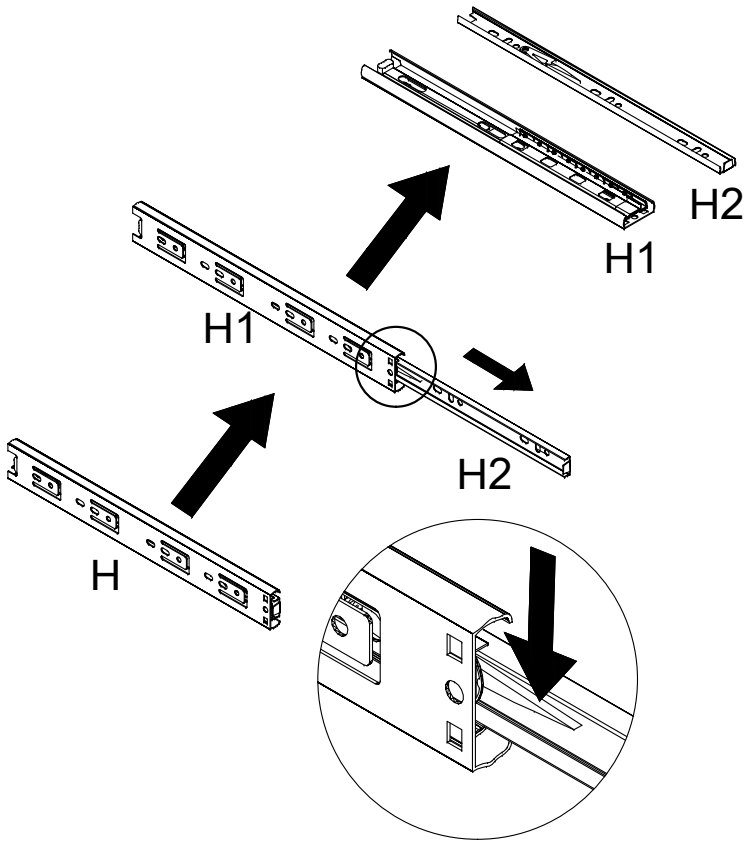


PAGE3


STEP1 will require these parts

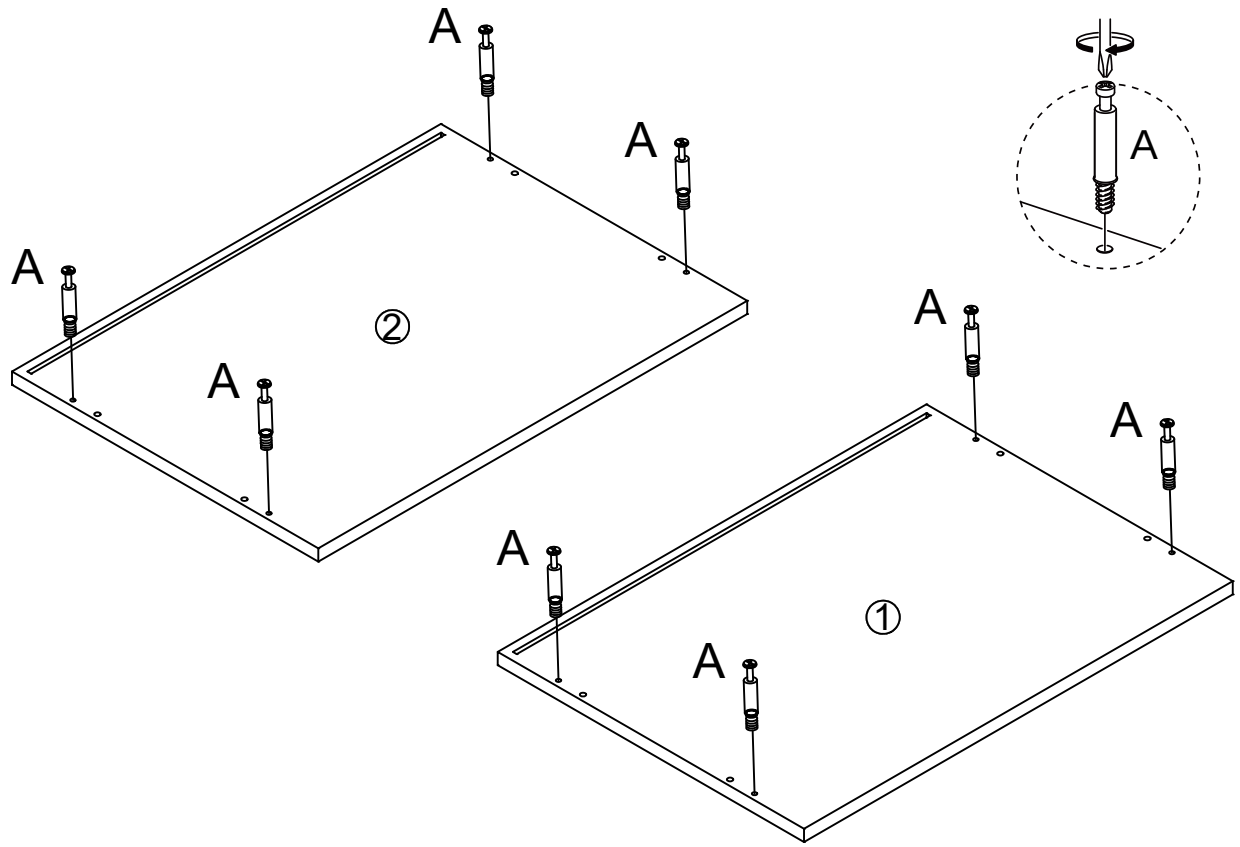

	AX8

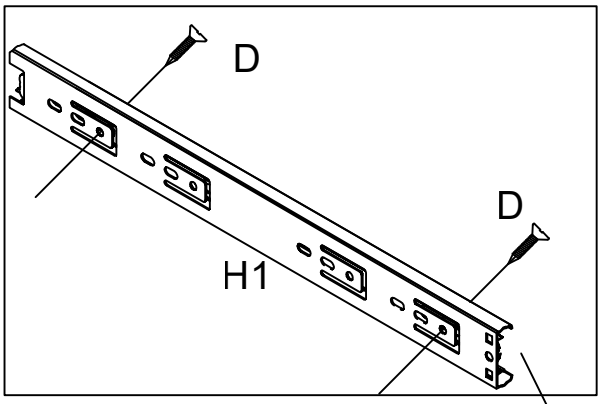


frint

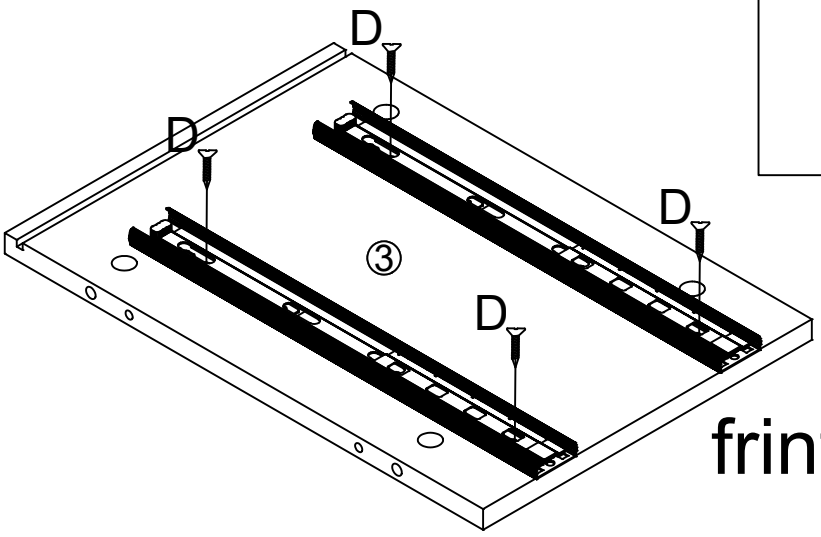


frint

	DX8
	H1X4


STEP2 will require these parts

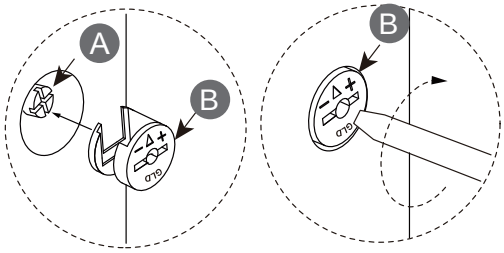


Attention:
Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

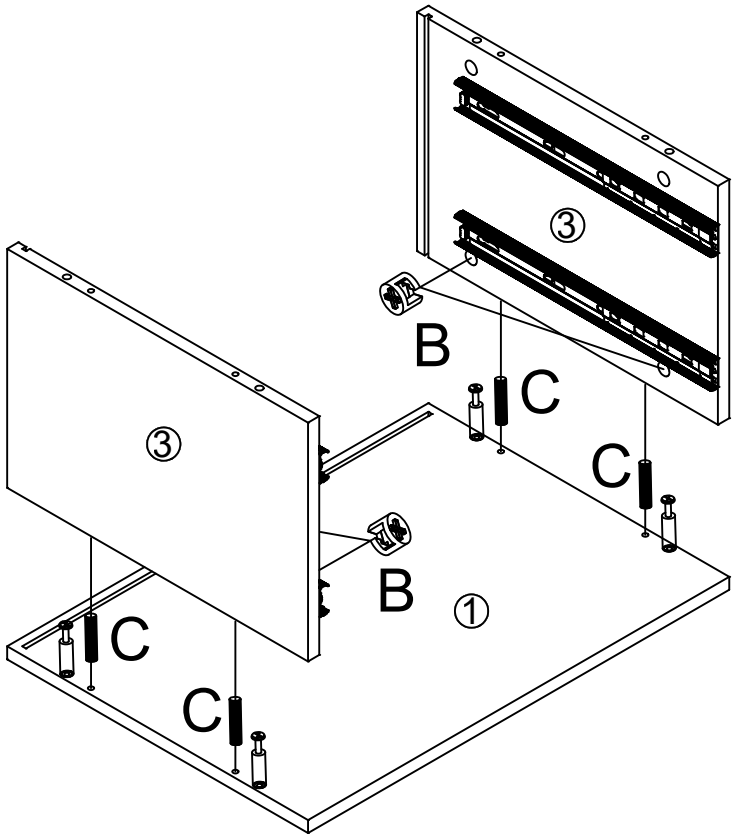


	BX4
	CX4

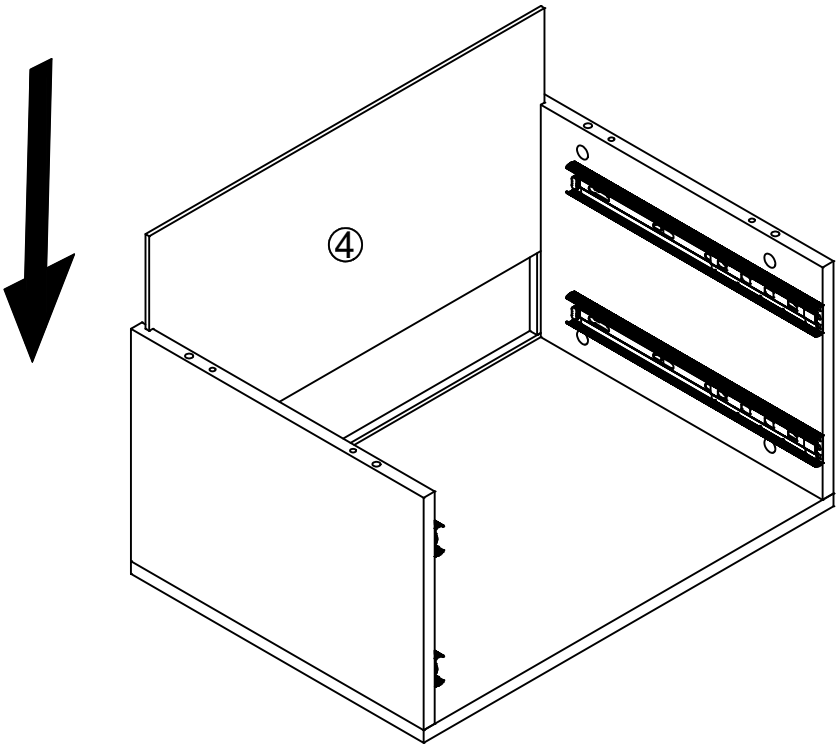


STEP3 will require these parts

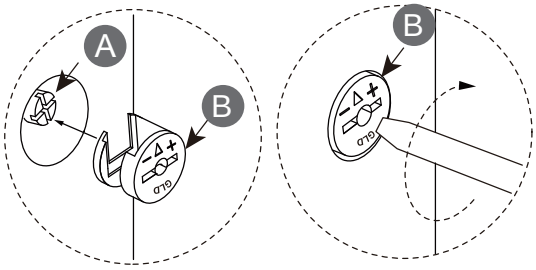

Attention:
Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

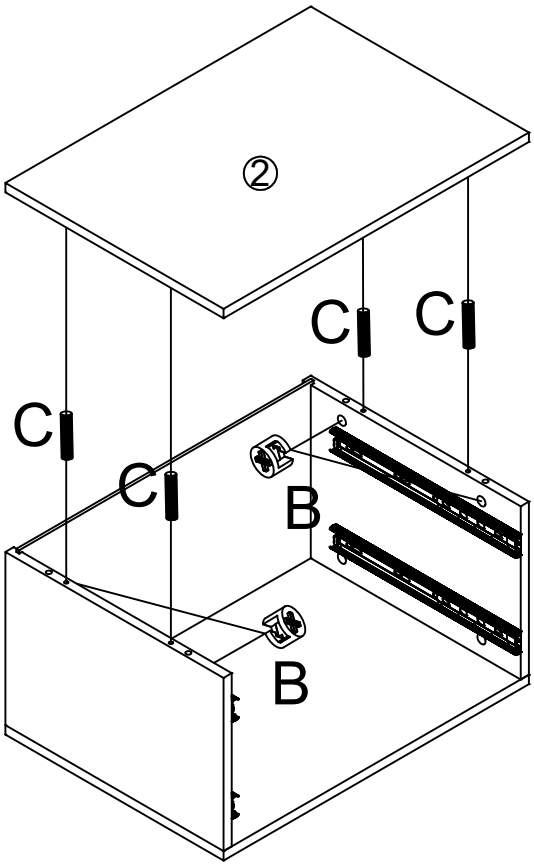


	BX4
	CX4

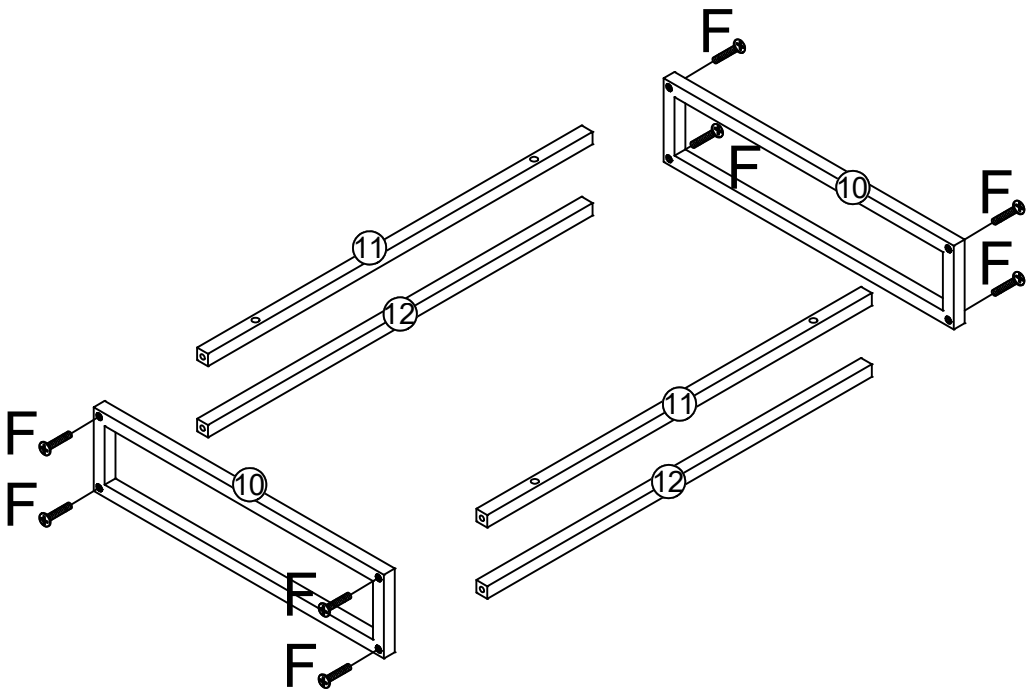



	FX8

STEP4 will require these parts

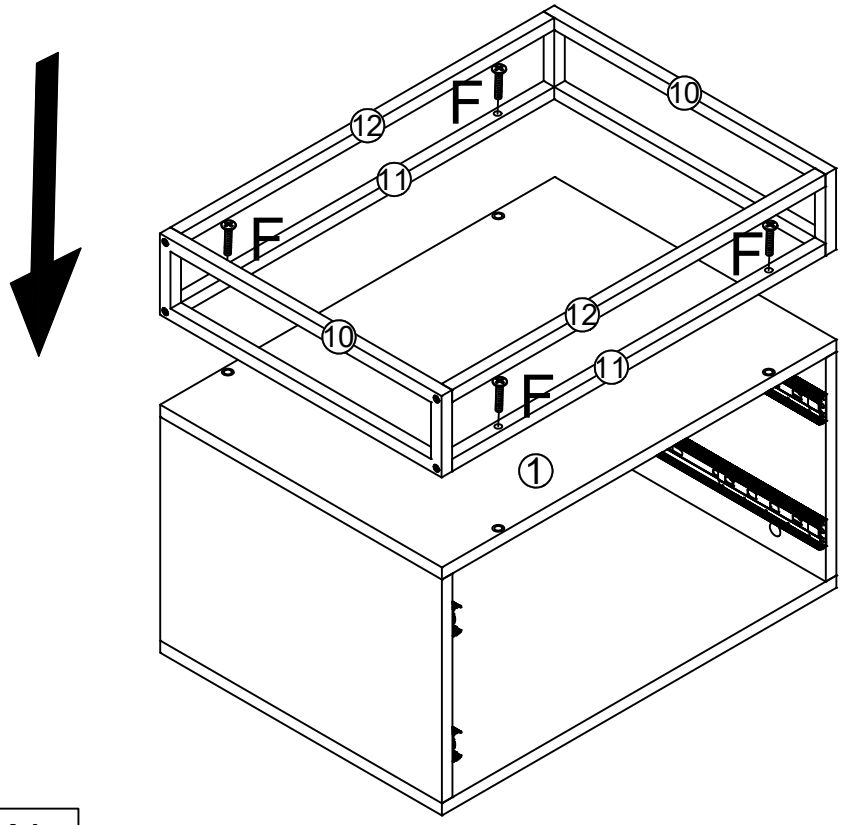


	FX4

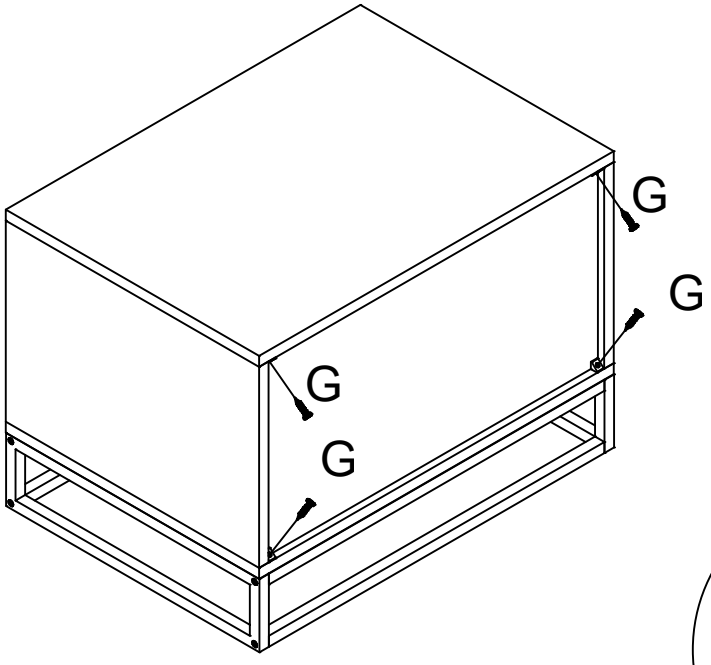



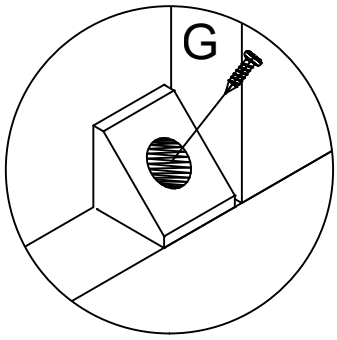



	GX4


STEP5 will require these parts

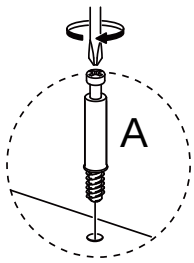

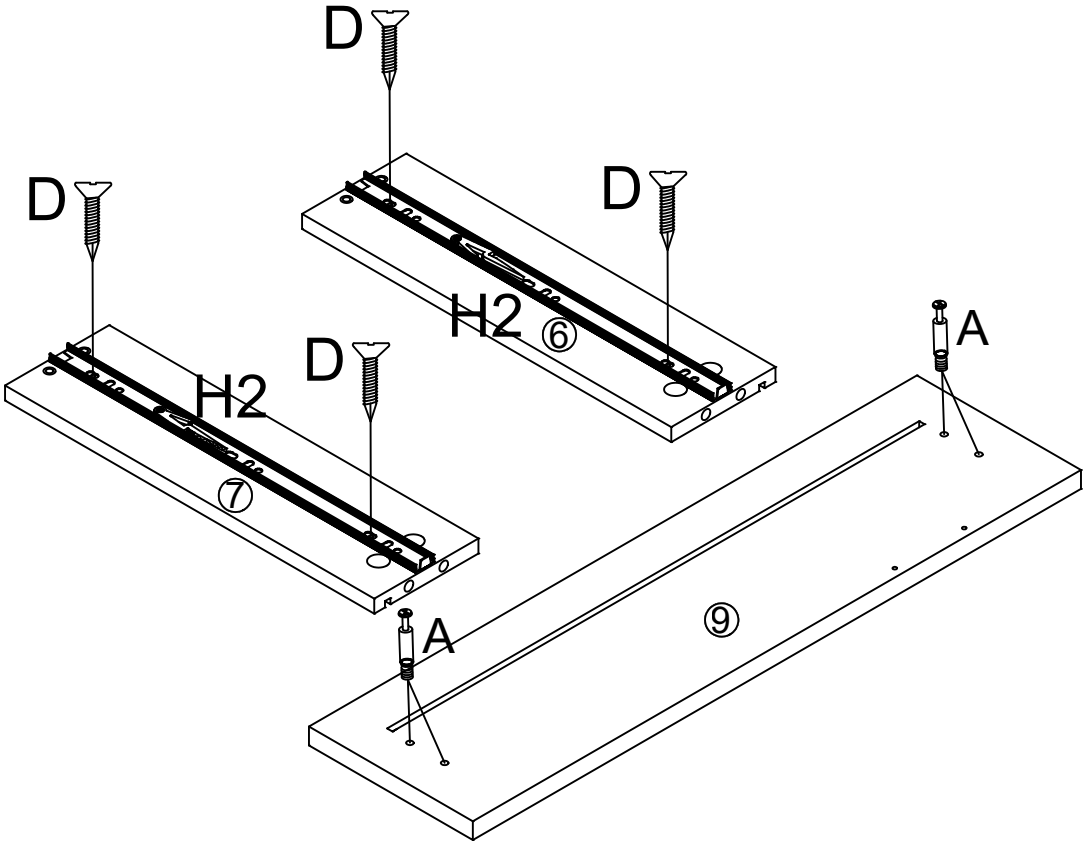


	AX8
	DX8
	H2X4

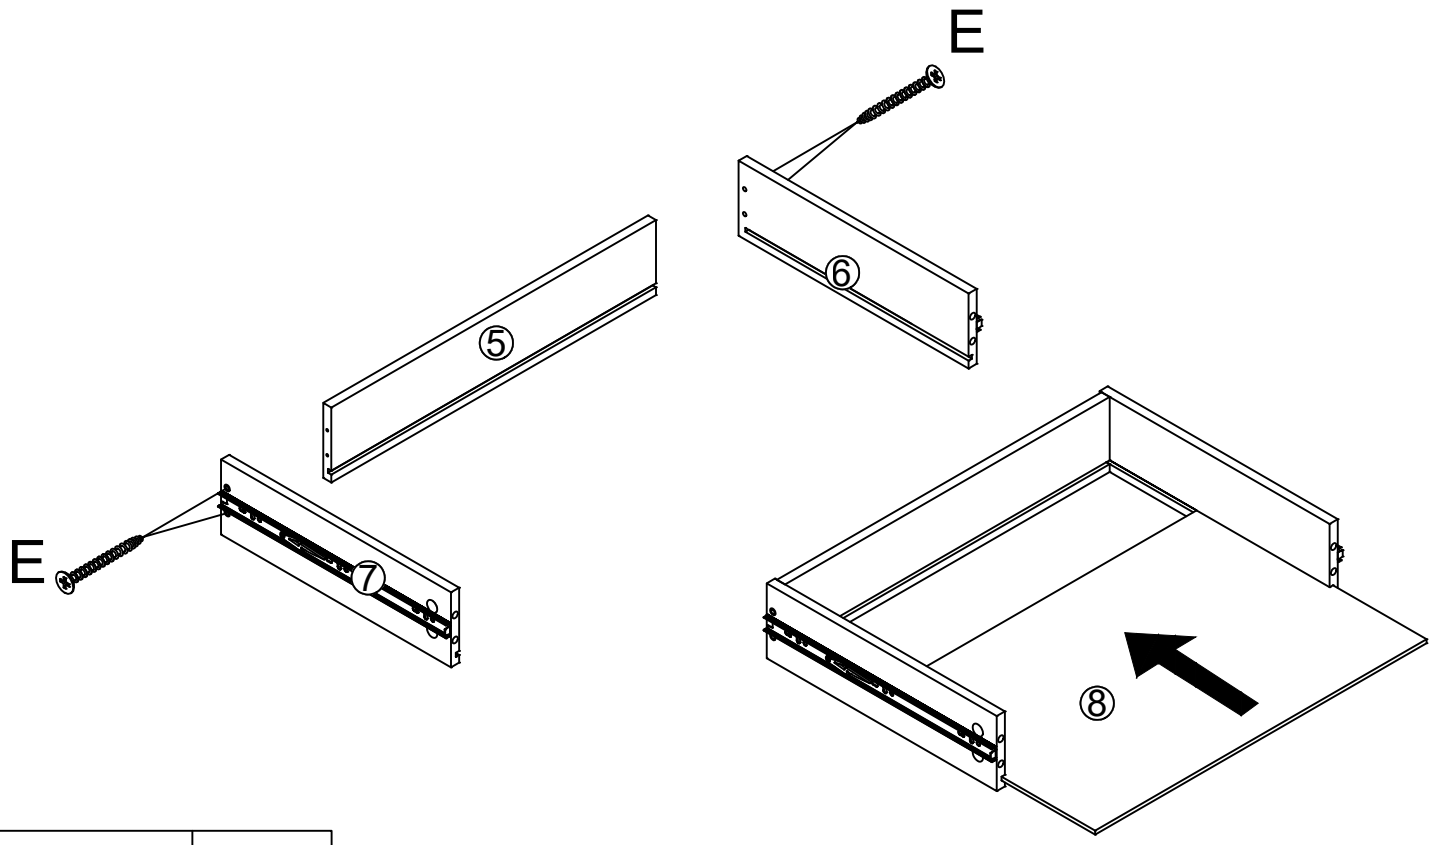


	EX8


STEP6 will require these parts

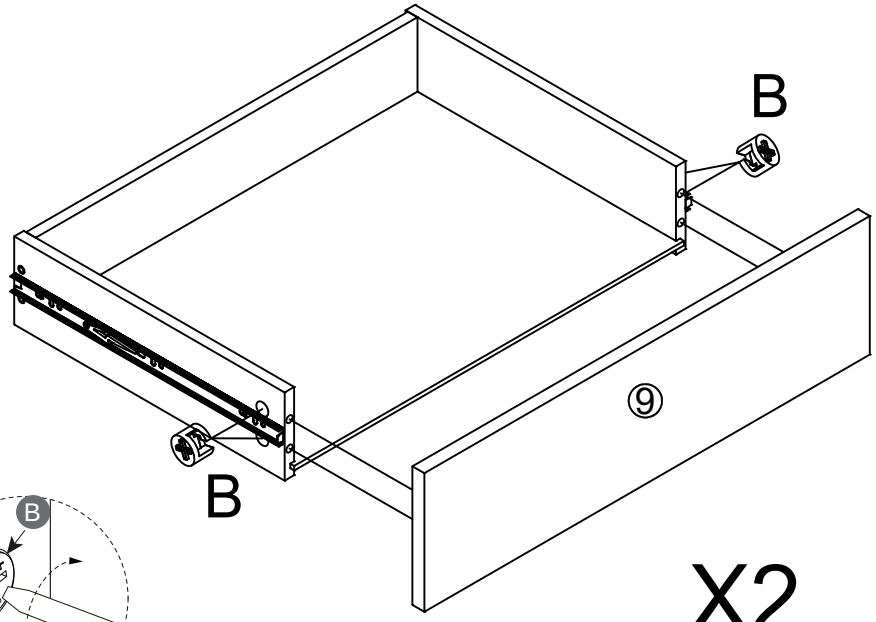

X2

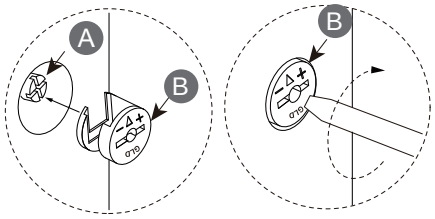

Attention:
Put (B) into the hole and turn (B) clockwise to lock (A) tightly.

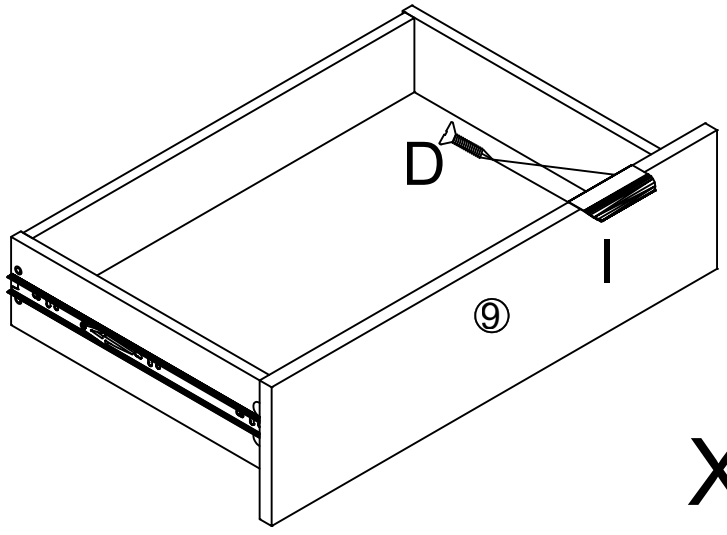


X2

	DX4
	IX2

PAGE9


STEP7 will require these parts


请把"J"粘贴在图中几处

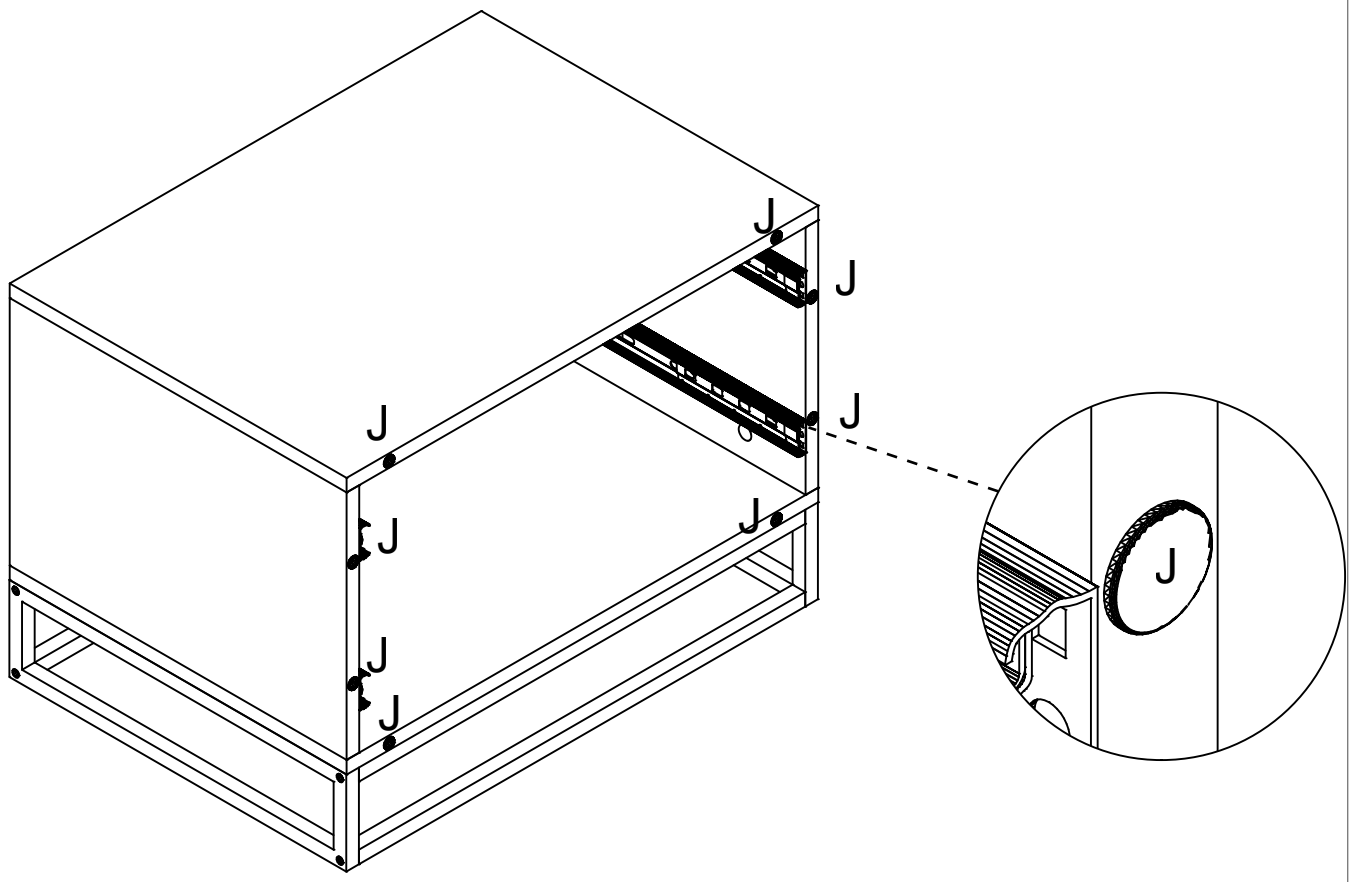

	JX8

STEP8 will require these parts

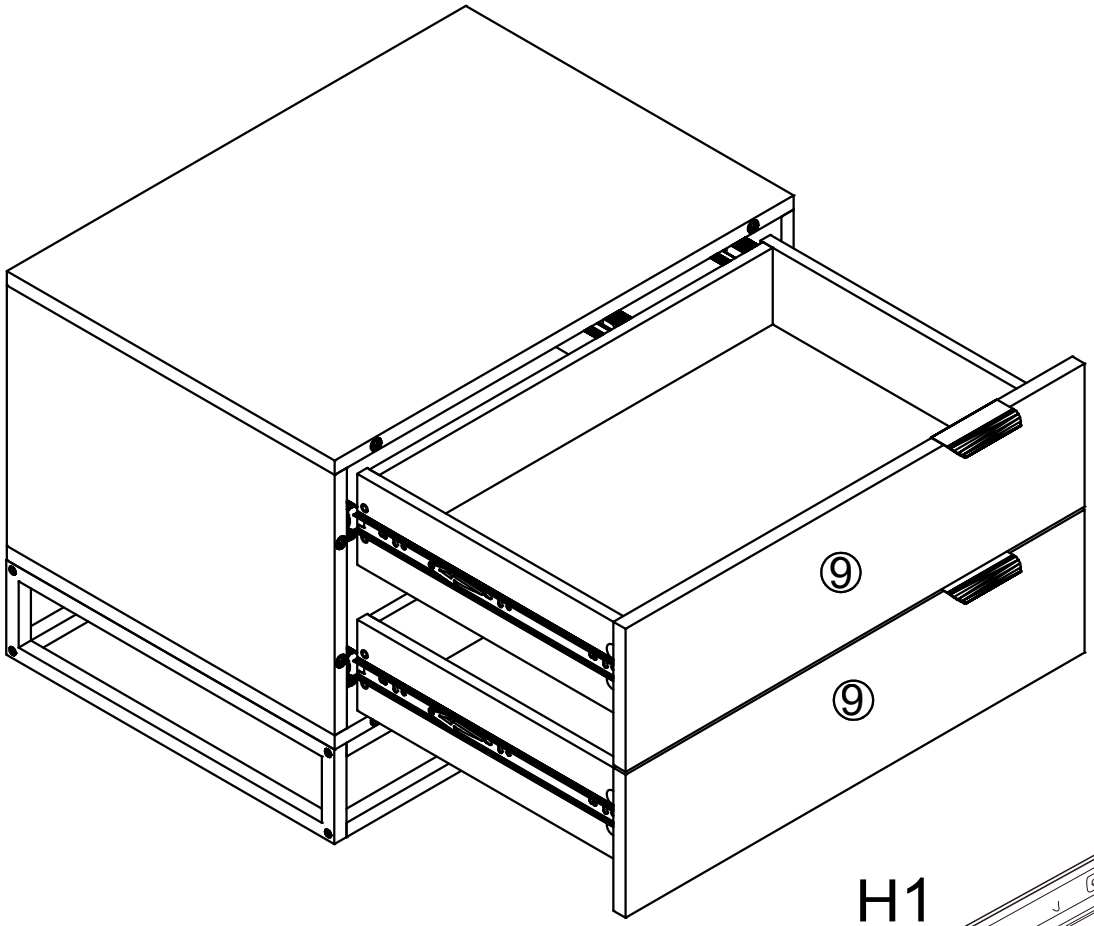


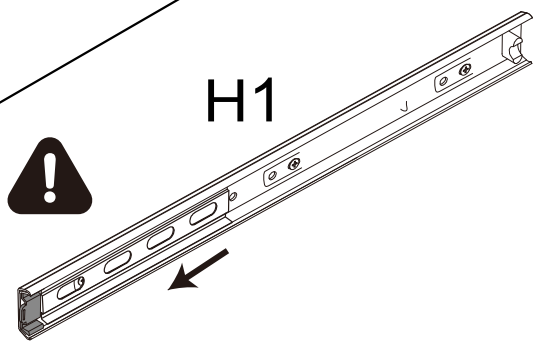

Make sure all the sliders on the front end

EN: 1, Drawers must be **horizontally put into** the cabinet
2, Make sure both side sliders **match well** to avoid damage

Wrong: "H1" and "H2 " are not be horizontally placed and pushed

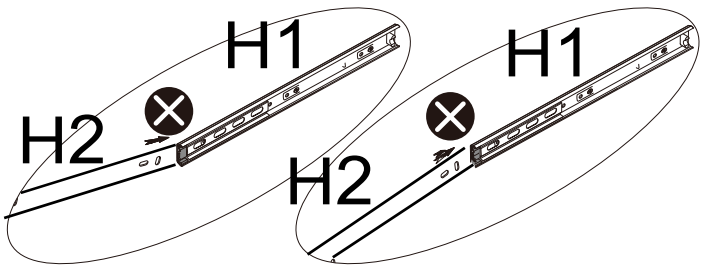

Right: Push "H2 "and "H1" horizontally until you hear a "click"

