


ASSEMBLY INSTRUCTION FOR DX-JW0184 P1

Tribesigns
Edge


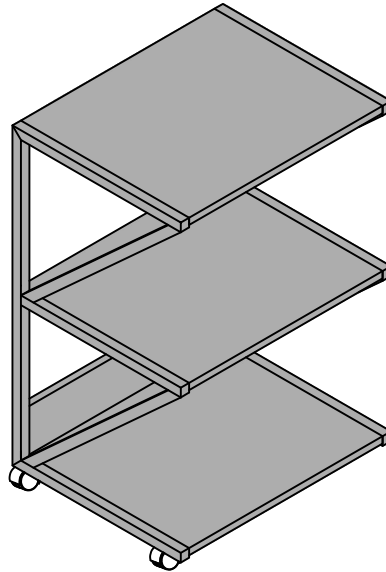


Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together


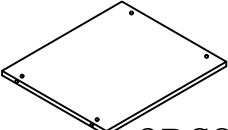
<p>1</p> <p>2PCS</p>	<p>2</p> <p>3PCS</p>	<p>3</p>	<p>B</p> <p>M5X50 16PCS</p>	<p>Y</p> <p>1SET</p>

Y	1SET
1	<p>2PCS</p>


Step1

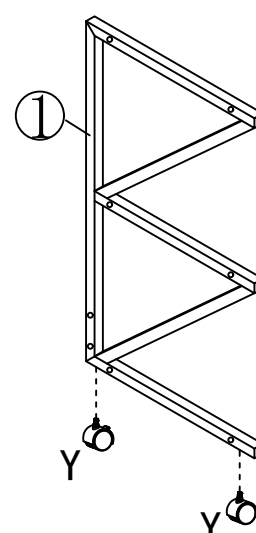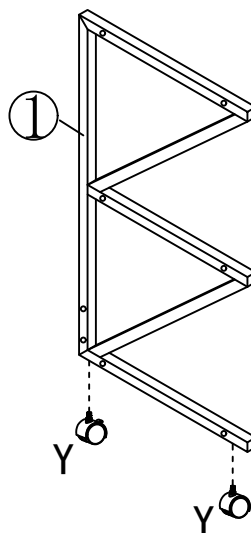
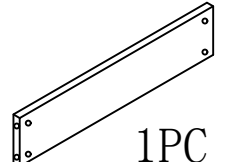


ASSEMBLY INSTRUCTION FOR DX-JW0184 P2


B	 12PCS
2	 3PCS

Step2

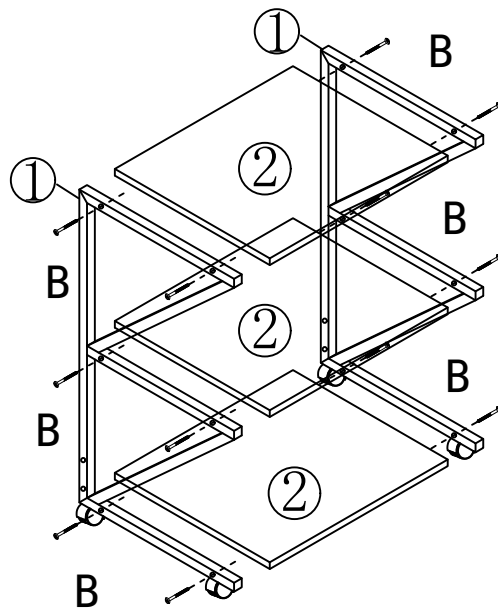


B	 4PCS
3	 1PC

Step3

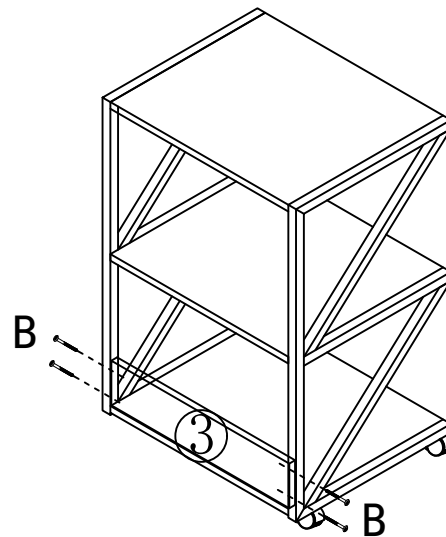

Step4

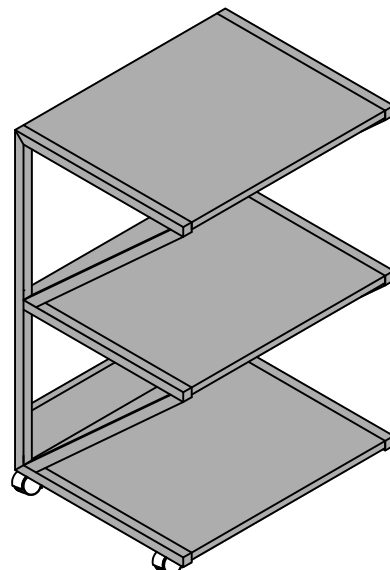

Thanks for choosing Tribesigns File cabinets , your satisfaction is our priority.
If you have any installation problems or any damages caused by shipping, feel free to
contact us at “ support@tribesigns.com“, our friendly customer service will solve
problem for you
www.tribesigns.com