






ASSEMBLY INSTRUCTION







DINING CHAIR

IMPORTANT NOTE :


BEFORE YOU BEGIN, PLEASE READ AND FOLLOW THE ASSEMBLY INSTRUCTIONS CAREFULLY.

- IDENTIFY AND SEPARATE ALL PARTS BEFORE DISCARDING PACKAGING.
- PLACE WOODEN PARTS ON A CLEAN SOFT SURFACE TO AVOID SCRATCHING THE PARTS.
- DO NOT USE POWER TOOL FOR ASSEMBLY.
- AS WITH ALL FURNITURE , OCCASIONALLY CHECK TO INSURE HARDWARE IS TIGHT.

PARTS LIST (1 UNIT)					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
1	CHAIR BACK 	1 PC	4	SIDE APRON 	2 PCS
2	CHAIR FRONT LEG 	1 PC	5	STRETCHER 	2 PCS
3	CHAIR SEAT 	1 PC			

HARDWARE LIST (1 UNIT)					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
A	JCBC SCREW 50MM 	4 PCS	D	SCREW 38MM 	4 PCS
B	SPRING WASHER 	4 PCS	E	SCREW 32MM 	3 PCS
C	FLAT WASHER 	4 PCS	F	ALLEN KEY 	1 PC

FULLY SET UP

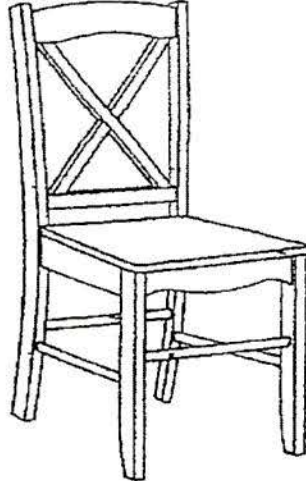


PAGE 1/2

Thank you for purchasing our product!


ASSEMBLY INSTRUCTIONS

STEP 1

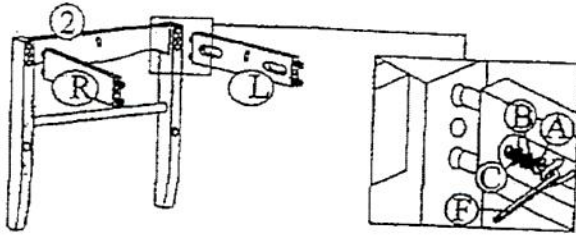


LOOSELY ATTACH (L/R) SIDE APRON (4) TO FRONT LEG (2) USING JCBC SCREW (A), SPRING WASHER (B), FLAT WASHER (C) AND ALLEN KEY (F)

STEP 2

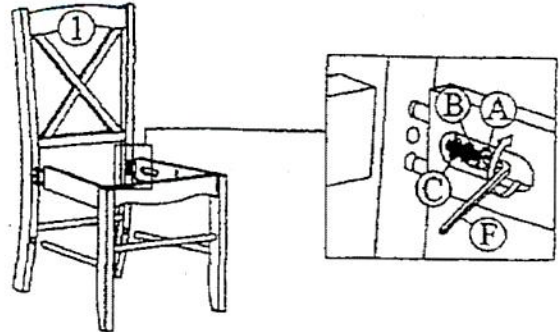


LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE APRON (4) TO CHAIR BACK (1) USING JCBC SCREW (A), SPRING WASHER (B), FLAT WASHER (C) AND ALLEN KEY (F).

STEP 3

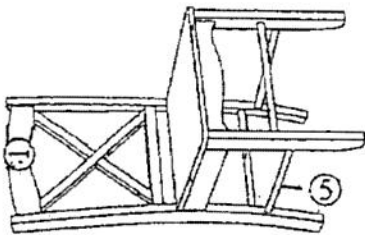

PLACE TWO STRETCHERS (5) IN THE HOLES IN CHAIR BACK (1) ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRETCHERS (5) IN PLACE COMPLETELY TIGHTEN ALL SCREWS.

STEP 4

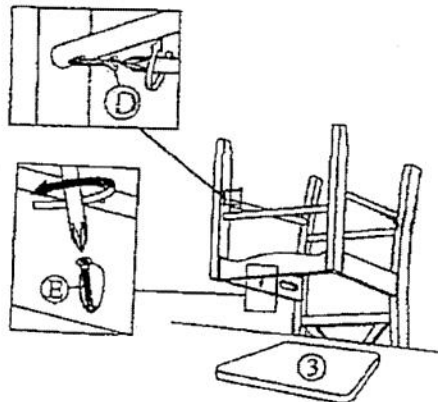

TURN STRETCHERS SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38MM SCREWS (D) ATTACH WOODEN SEAT USING 32MM SCREWS (E).