



12'×16' WOOD-LOOKING FINISH  
HARDTOP GAZEBO WITH DOUBLE ROOF

# ASSEMBLY MANUAL



MODEL#: LGMF8222

Missing part? Damaged? Contact us via email at

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

[www.domioutdoorliving.com](http://www.domioutdoorliving.com)




1. Three or more people are required for assembly.



5. Use the hex keys in the box.



2. You will need one or more stepladders.




6. Please use a Phillips screwdriver.



3. Wearing protective gloves is recommended.



7. Do not fully tighten screws prior to complete assembly.




4. You may need a safety hat.



8. For ease of construction, you may need to use a drill.

## 12x16' ANCHOR BLUEPRINT

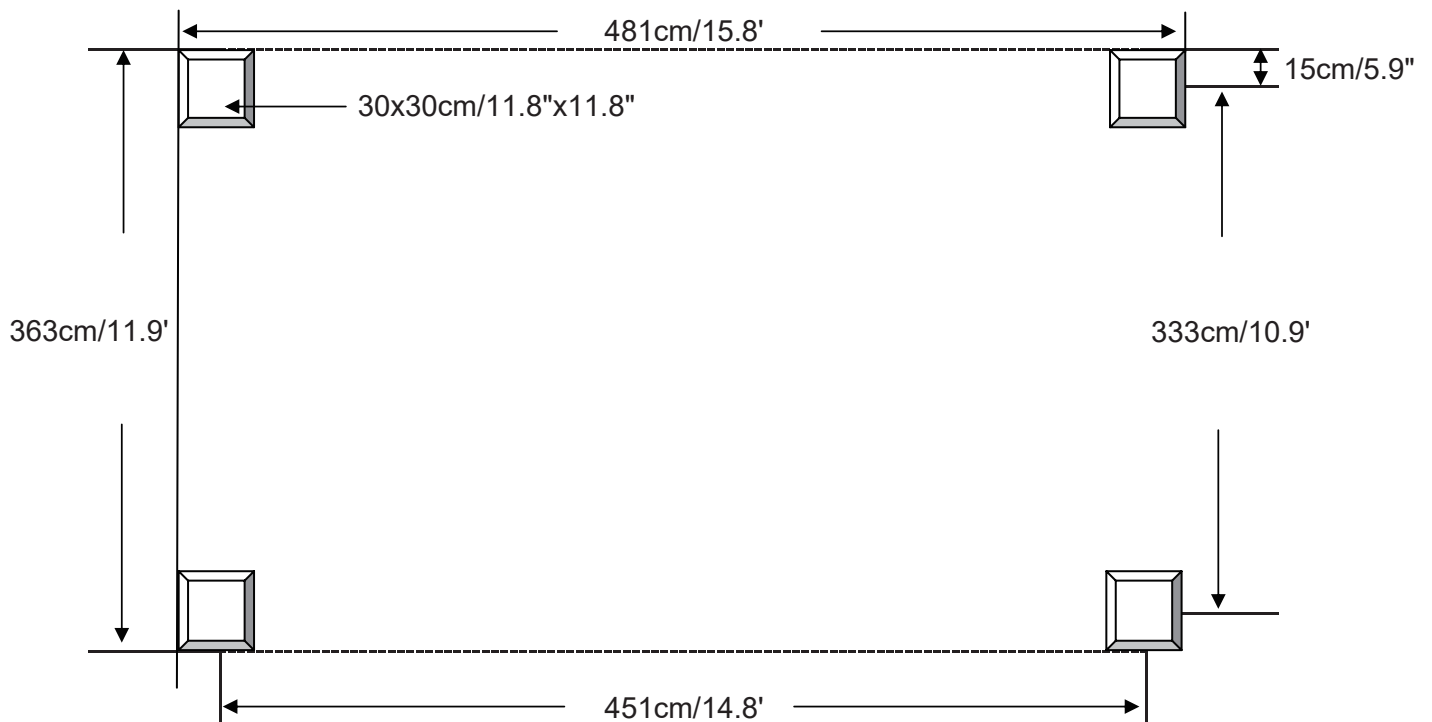



A (x4)



J1 (x4)



B (x2)



J2 (x4)




B1 (x2)



K (x1)




B2 (x2)



K1 (x1)



C (x2)



L (x4)



C1 (x2)



M (x4)



C2 (x2)



N (x4)



D (x2)



N1 (x4)



D1a x2



D1 (x2)



D2 (x2)



E (x2)



E1 (x2)



E1a x2



E2 (x2)



F (x4)




G (x4)



H (x4)










H1 (x4)









H2 (x1)

ITEM	DESCRIPTION	QTY
A	Pole	4
B	Beam	2
B1	Joint Bar	2
B2	Sidewall Track	2
C	Beam	2
C1	Jointer Bar	2
C2	Sidewall Track	2
D	Beam	2
D1	Jointer Bar	2
D1a	Jointer Bar	2
D2	Sidewall Track	2
E	Beam	2
E1	Jointer Bar	2
E1a	Jointer Bar	2
E2	Sidewall Track	2
F	Union Bar	4
G	Corner Cover	4
H	Joint Cover	4
H1	Joint Cover	4
H2	Silcone Rubber	1
J1	Corner Solidifyng Bar	4
J2	Corner Solidifyng Bar	4
K	Inside Roof Connector	1
K1	Outside Roof Connector	1
L	Base	4
M	Corner roof bar	4
N	Roof Bar	4
N1	Roof Bar	4

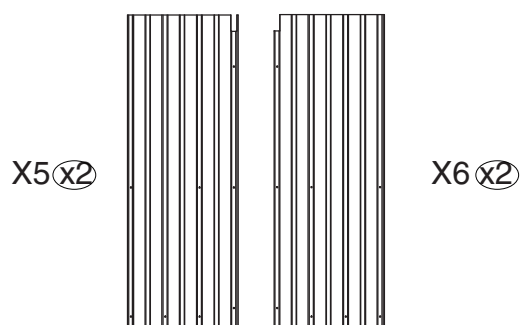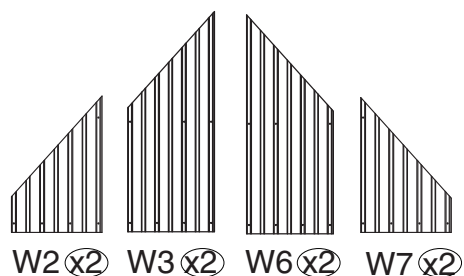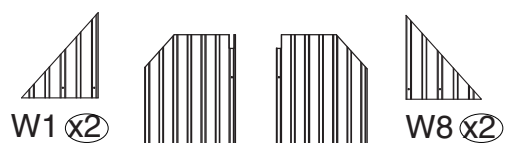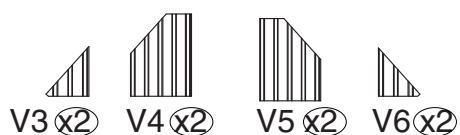


ITEM	DESCRIPTION	QTY
P	Finishing Bar	2
P1	Net Frame	2
Q	Finishing Bar	2
Q1	Net Frame	2
Q2	Net Frame	2
R	Finishing End	8
S	Spacer	136
T1	Finishing Bar	2
T2	Finishing Bar	2
U1	Solidifying Bar	4
U2	Solidifying Bar	4
U3	Iron Angle	4
U4	Iron Angle	6
U5	Solidifying Bar	2
v	Roof Panel	2
v1	Roof Panel	2
v2	Roof Panel	2
v3	Roof Panel	2
v4	Roof Panel	2
v5	Roof Panel	2
v6	Roof Panel	2
w1	Roof Panel	2
w2	Roof Panel	2
w3	Roof Panel	2
w4	Roof Panel	2
w5	Roof Panel	2
w6	Roof Panel	2
w7	Roof Panel	2
w8	Roof Panel	2
x5	Roof Panel	2
x6	Roof Panel	2



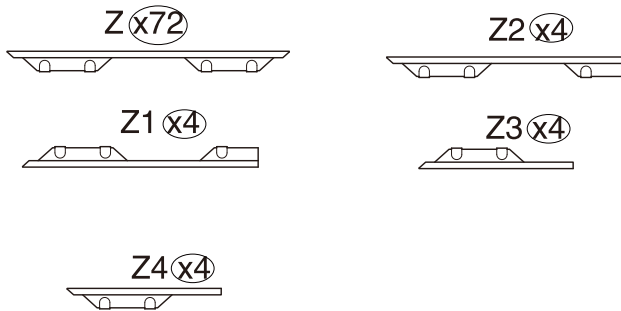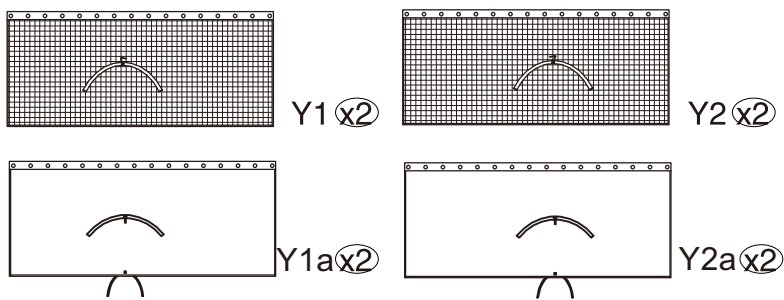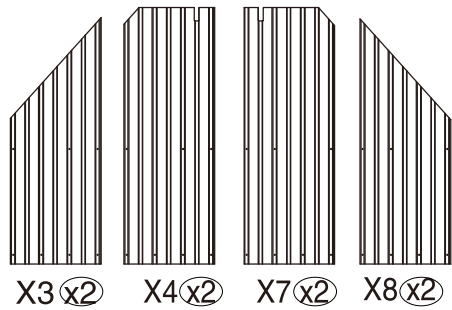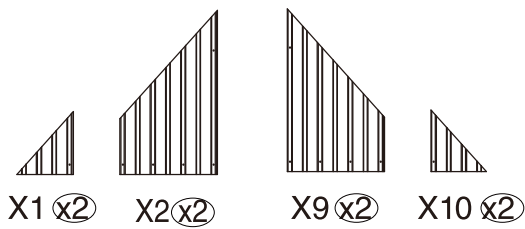



ITEM	DESCRIPTION	QTY
X1	Roof Panel	2
X2	Roof Panel	2
X3	Roof Panel	2
X4	Roof Panel	2
X7	Roof Panel	2
X8	Roof Panel	2
X9	Roof Panel	2
X10	Roof Panel	2
Y1/Y2	Mosquito Sidewall	4
Y1a/Y2a	Solid Sidewall	4
Yb	Strap	4
Z	Metal Bracket	72
Z1	Metal Bracket	4
Z2	Metal Bracket	4
Z3	Metal Bracket	4
Z4	Metal Bracket	4
1#	Screws	259+4
2#	Screws	16+2
3#	Screws	16+2
4#	Hook	128
5#	Screws	84+2
6#	Screws	8+1
7#	Screws	40+2
8#	Screws	4+1
9#	Screws	24+2
10#	Screws	4+1
11#	Screws	12+1
	Allen key/ Wrench	4

## Parts Required:


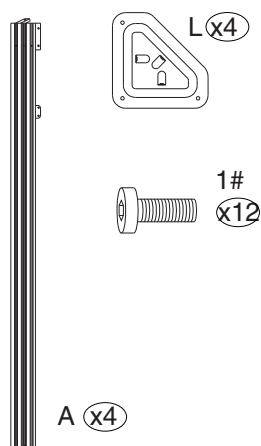


## Step 1:

Set up poles (Part A) with stand plates (Part L) using screws 1# as shown in diagram.

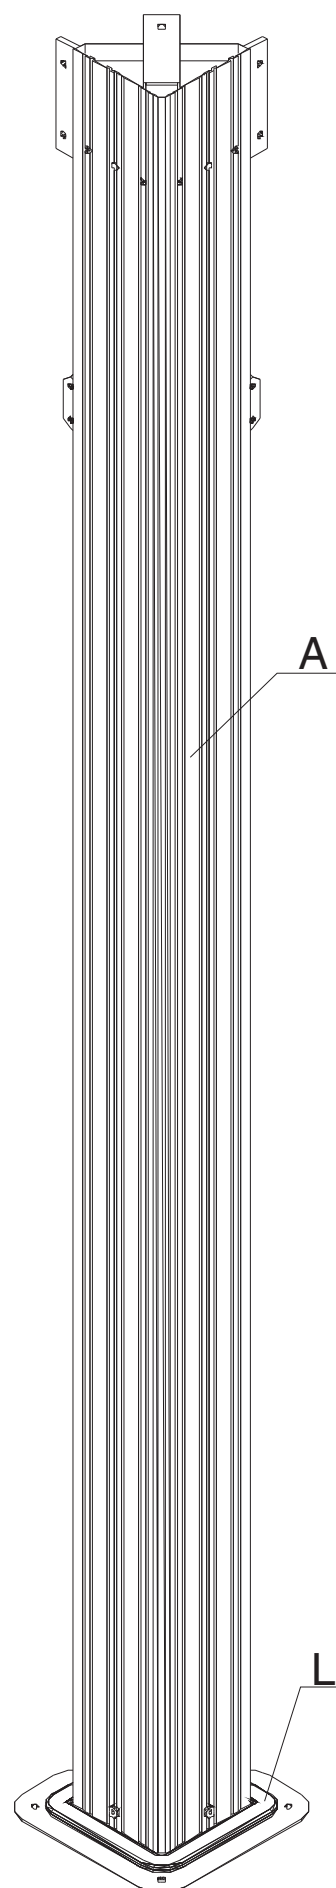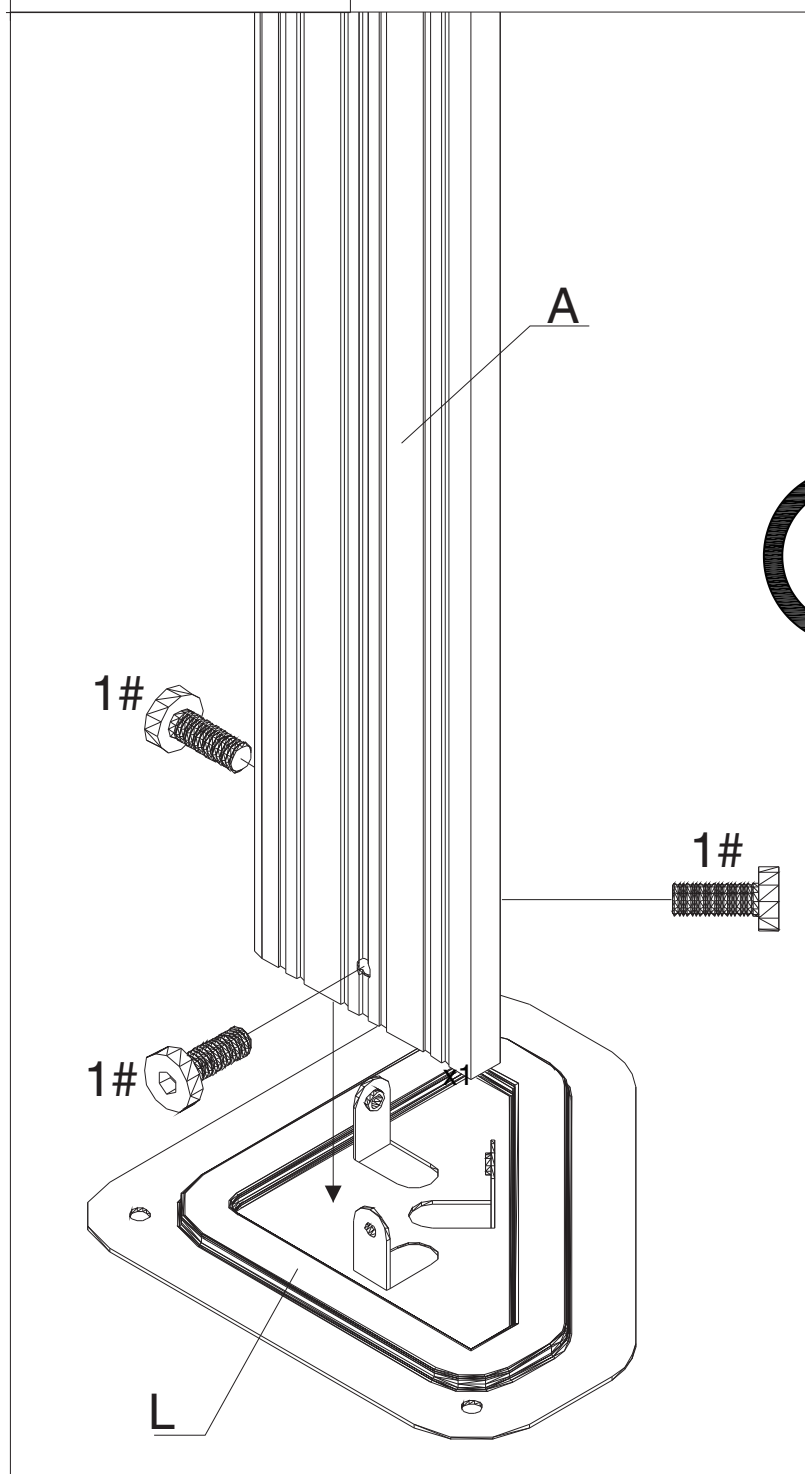


## Parts Required:

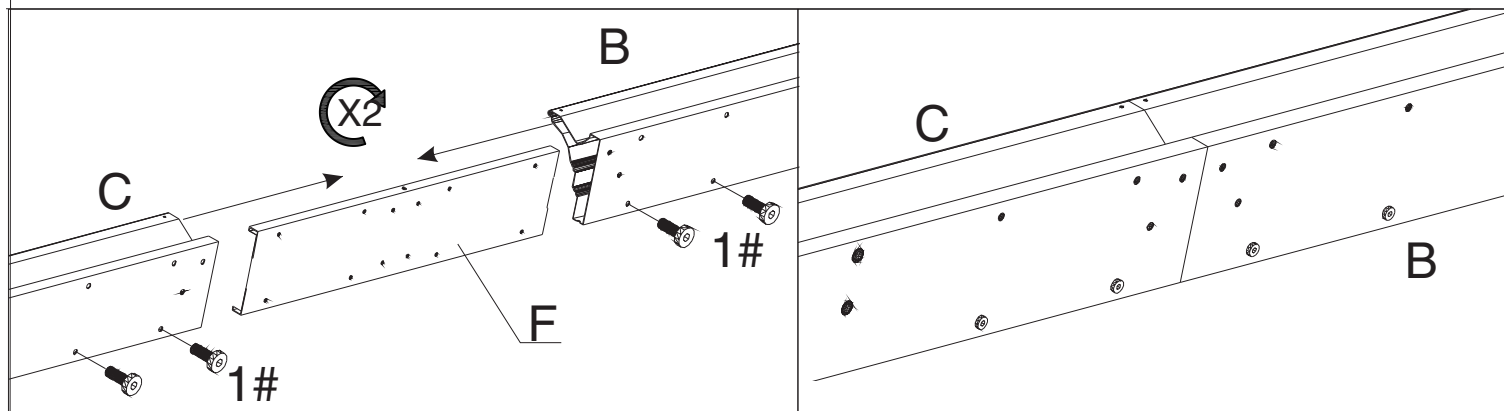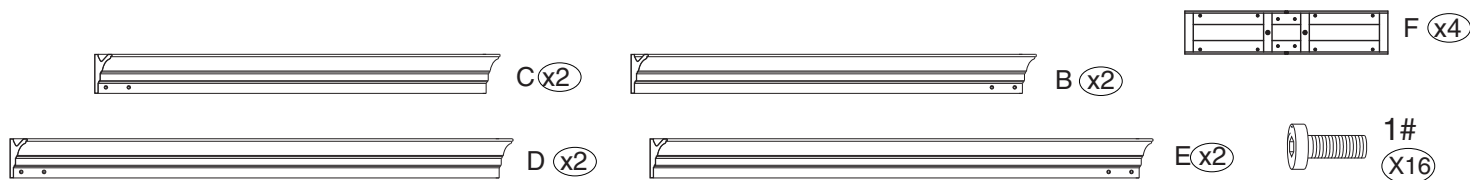






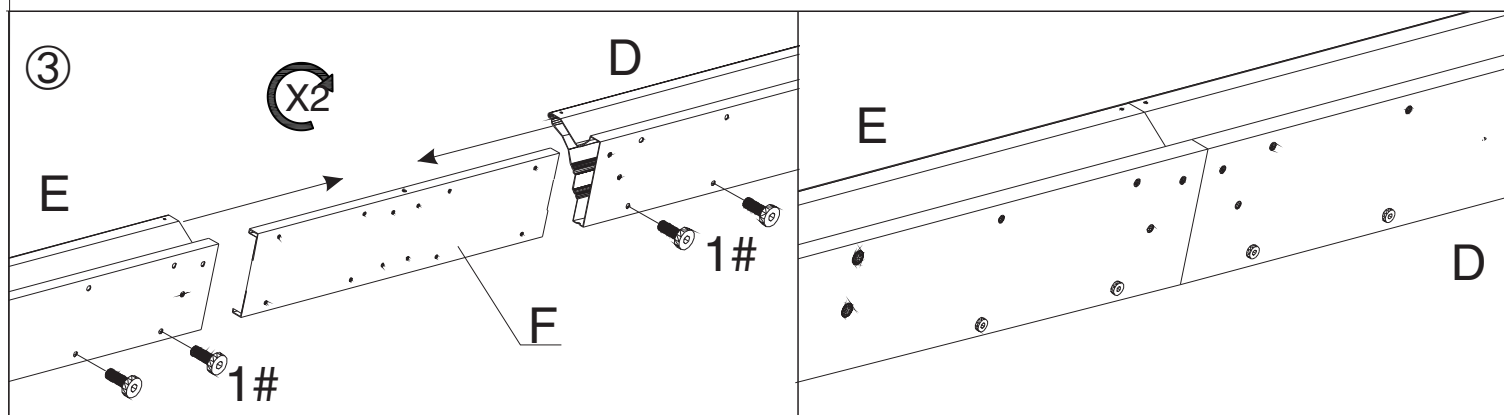





## Step 2:

Connect (Part C) and (Part B) into one beam using union bar (Part F) with screws 1# as shown in diagram.




Connect Part E and Part D into one beam using union bar (Part F) with screws 1# as shown in diagram.


Parts Required:

	B1 (x2)		D1 (x2)		1#
	B2 (x2)		D2 (x2)		(x104)
	C1 (x2)		E1 (x2)		
	C2 (x2)		E2 (x2)		
			D1a (x2)		E1a (x2)

Step 3:

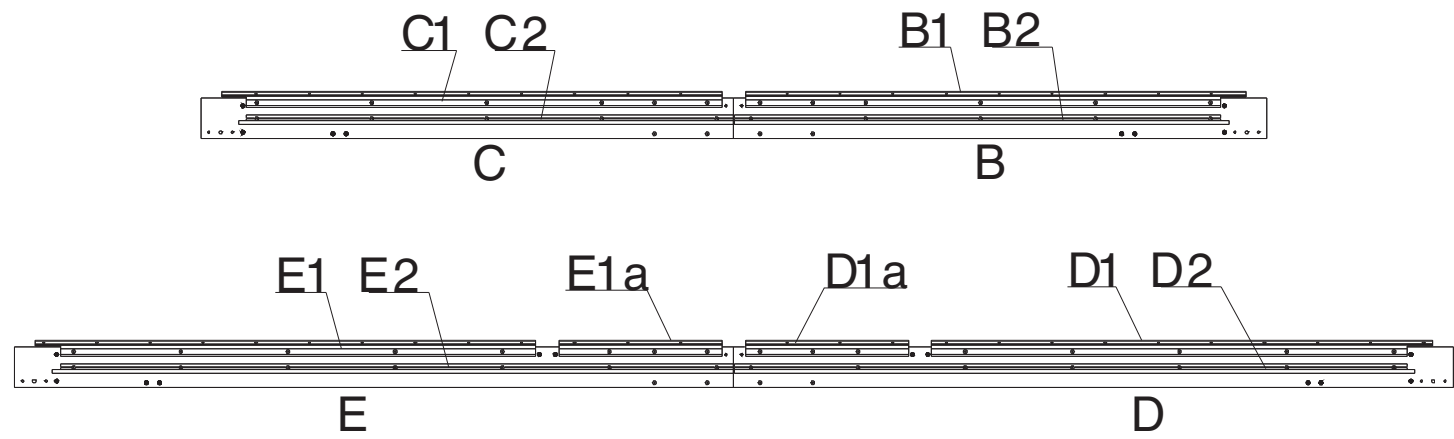

Connect parts (E2&D2) to the finished beam (part E& part D) using screws 1# as shown in diagram. Replicate the same steps for parts (C2 & B2), attaching them to the finished beam (C & B) using screws 1#.

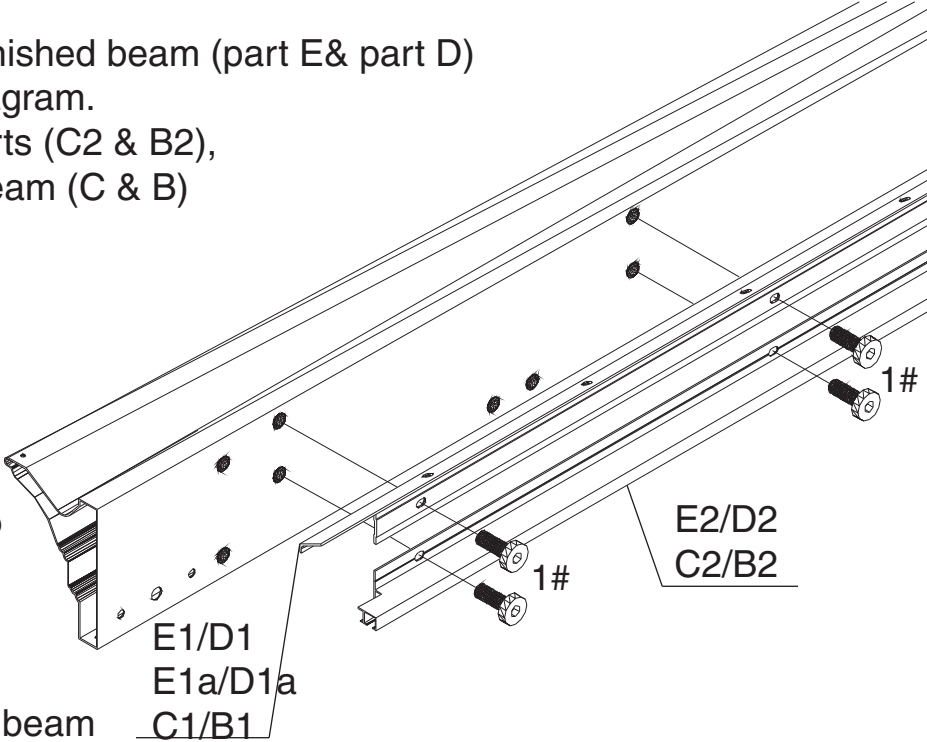


Attach parts (E1,E1a ,D1&D1a) to finished beam (E & D) using screws 1#.

Attach parts (C1 & B1) to finished beam (C & B) using screws 1#.

Parts Required:






2#  
x16



3#  
x16

Step 4:

Use screws (2# & 3#) to connect poles and beams together as shown in diagram.

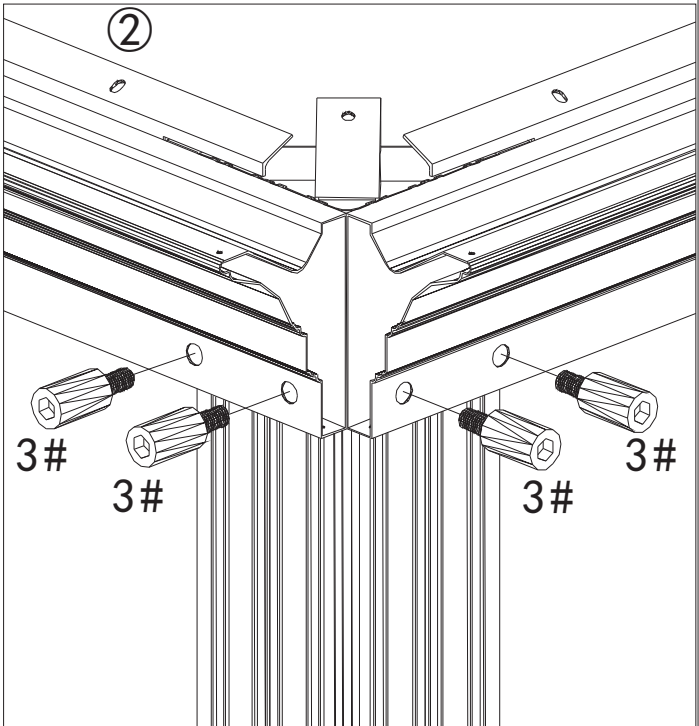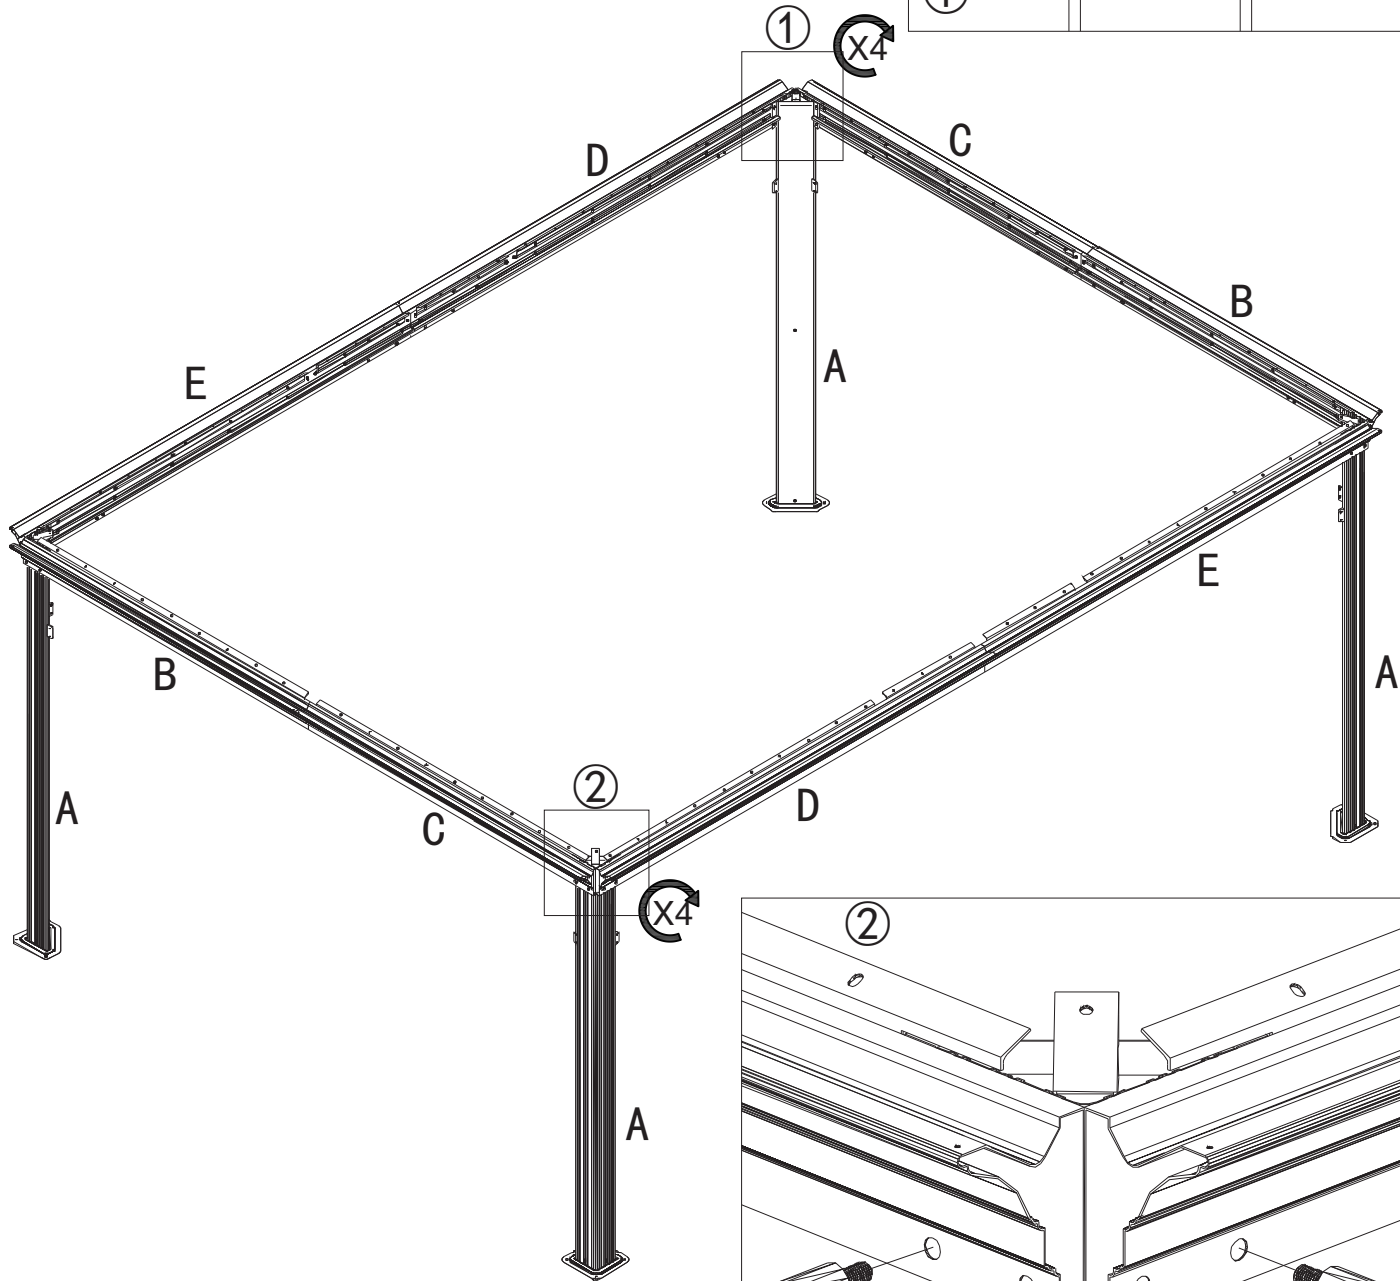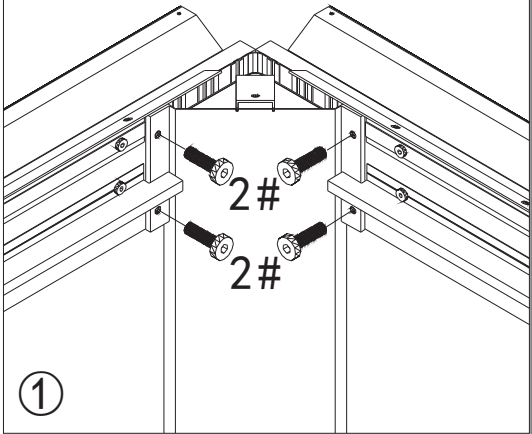

Tip:  
At least two people  
for this step.


## Parts Required:




J1 (x4)



J2 (x4)




1# (x32)

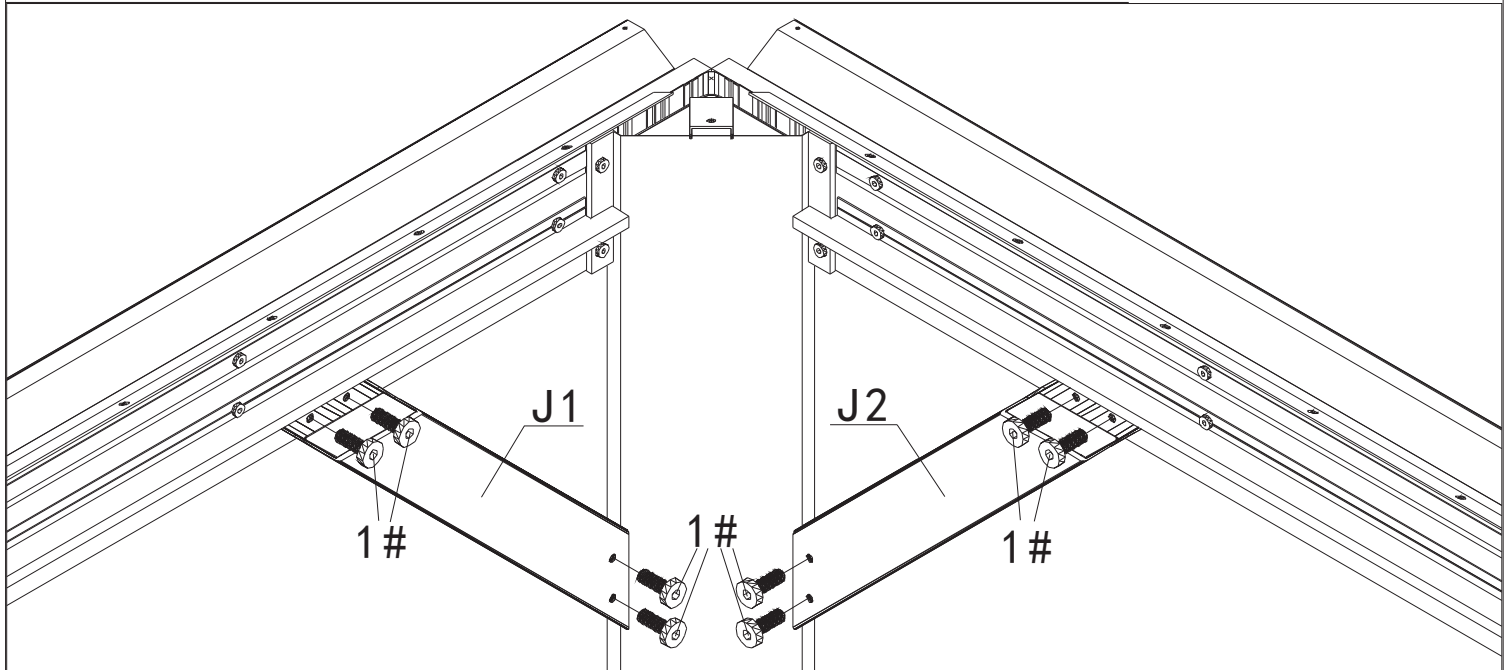

## Step 5:

Affix the frame with corner solidifying bars (Parts J1 & J2) using screws 1# as shown in diagram.

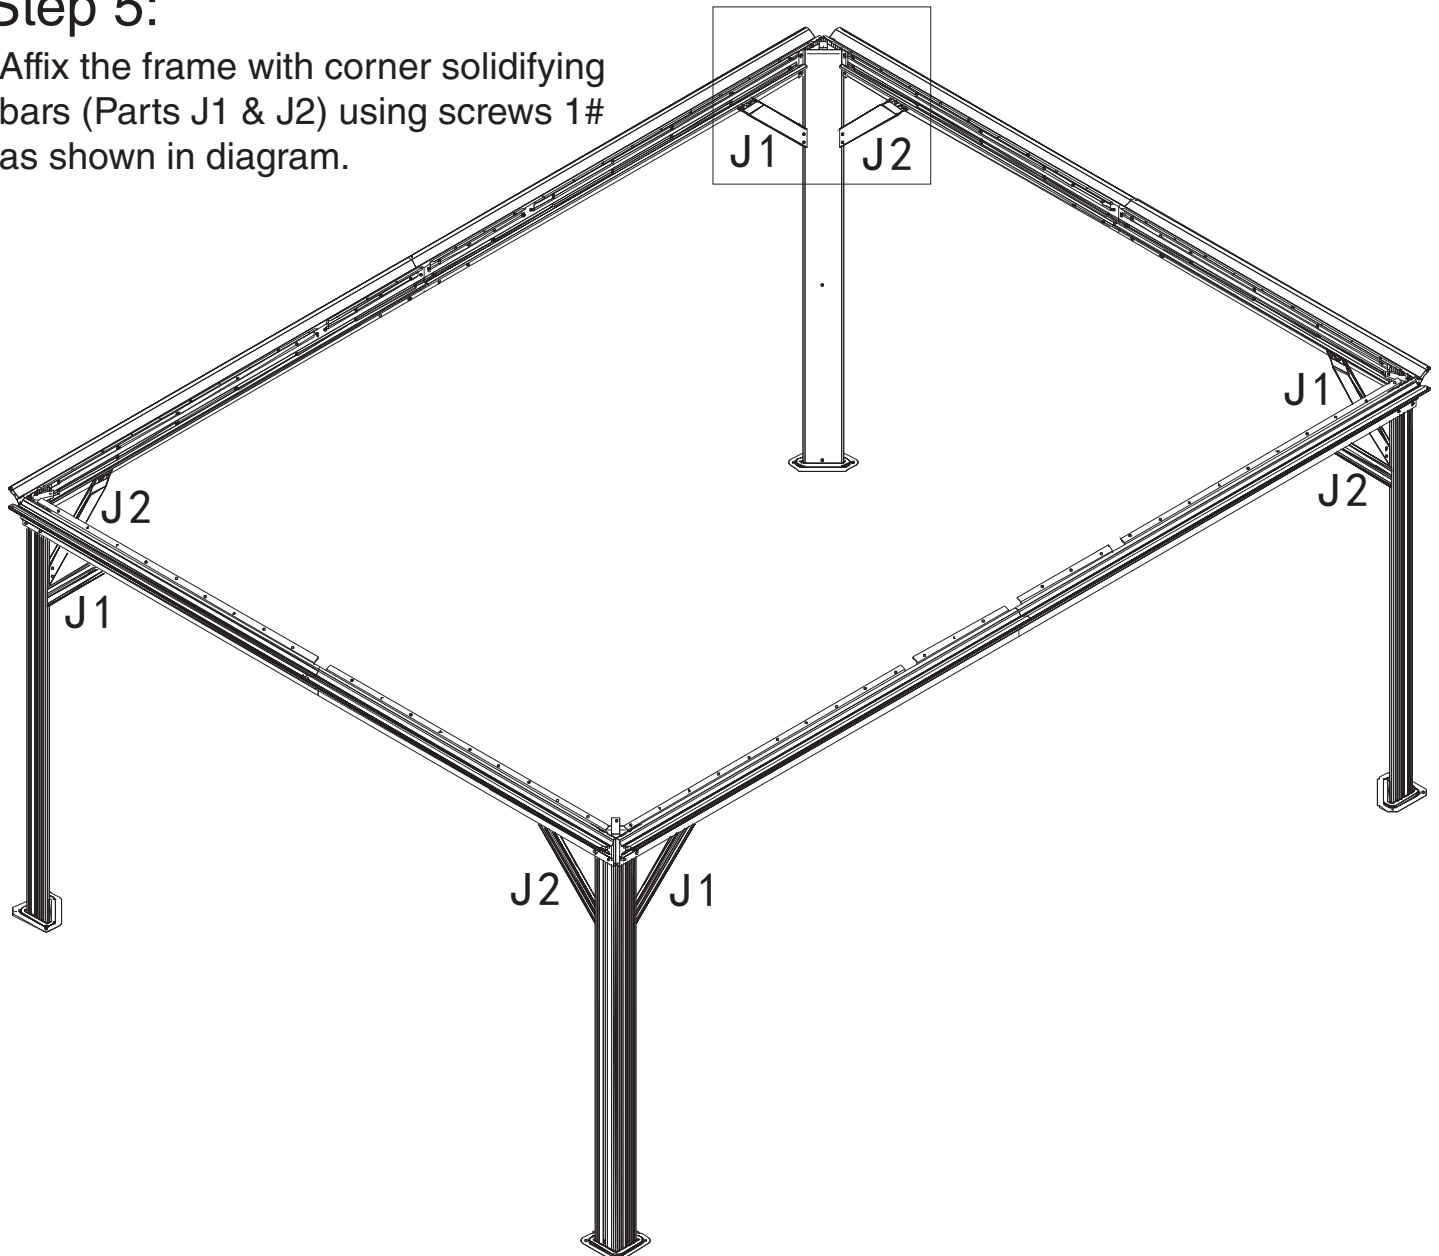

## Parts Required:



G (x4)




H (x4)




8#  
(x4)



9#  
(x24)

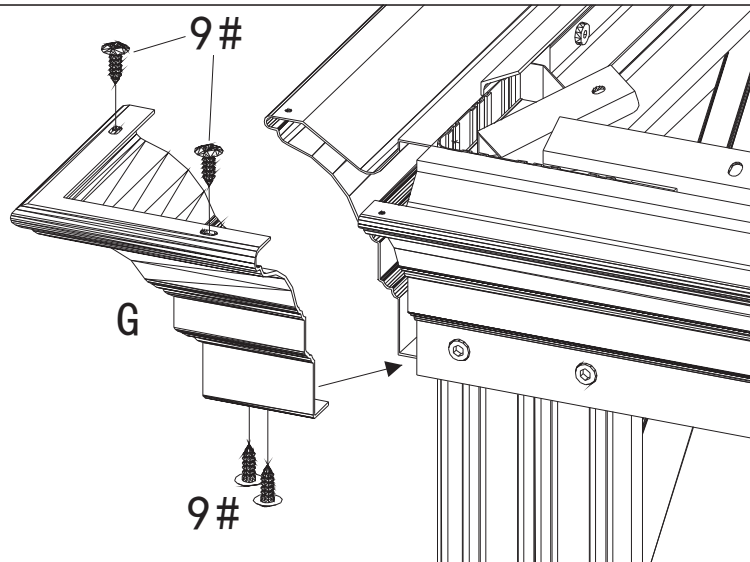

①

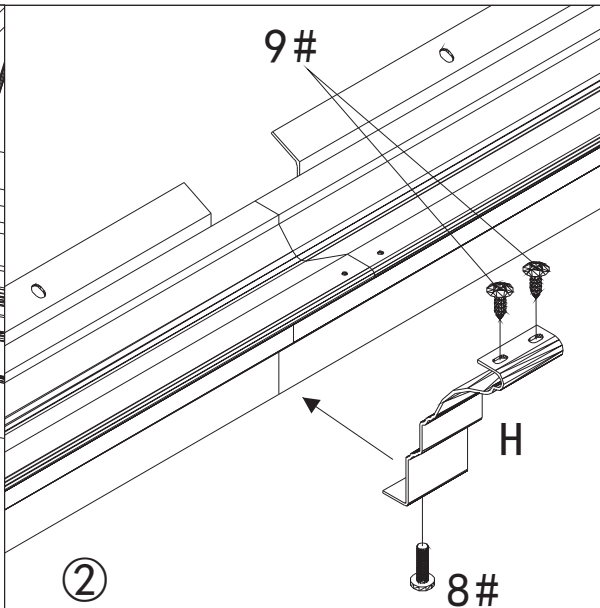


②

## Step 6:





Finish connecting beams using corner covers (Part G) and screws 9# as shown in diagram.

Affix middle beams using joint cover (Part H) and screws 9# and 8# as shown in diagram.

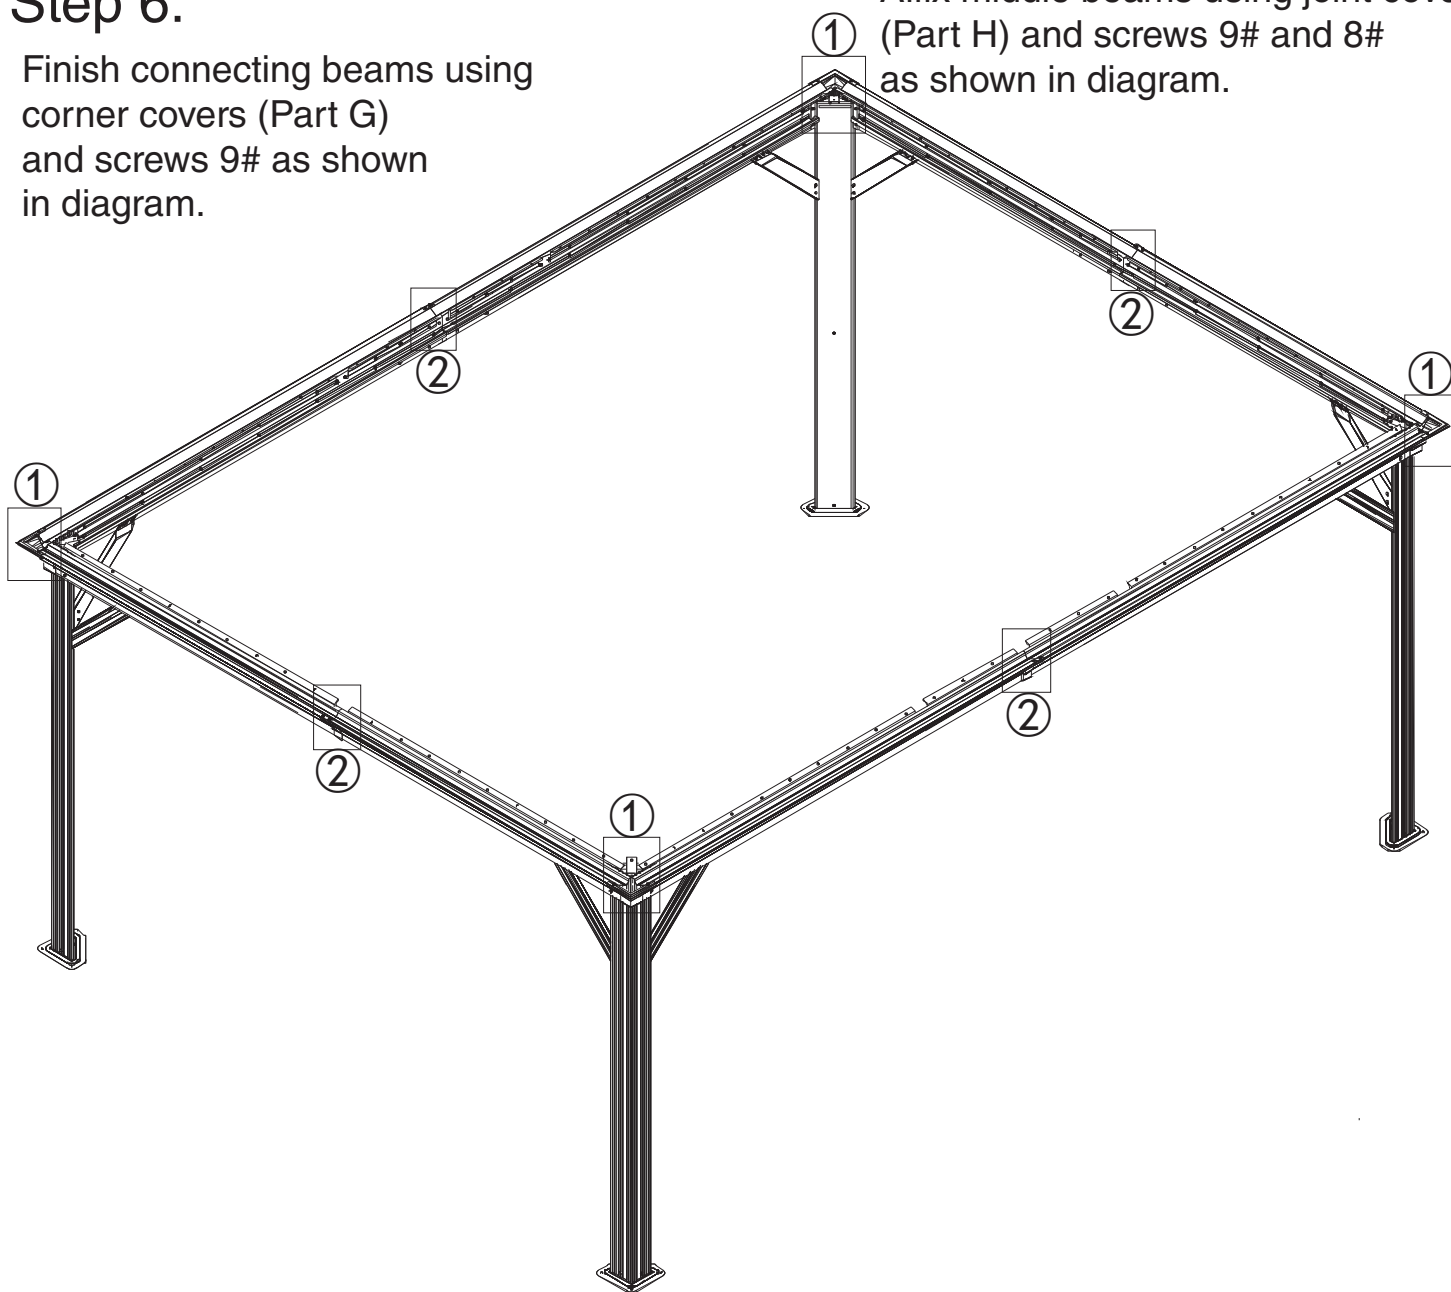




## Parts Required:

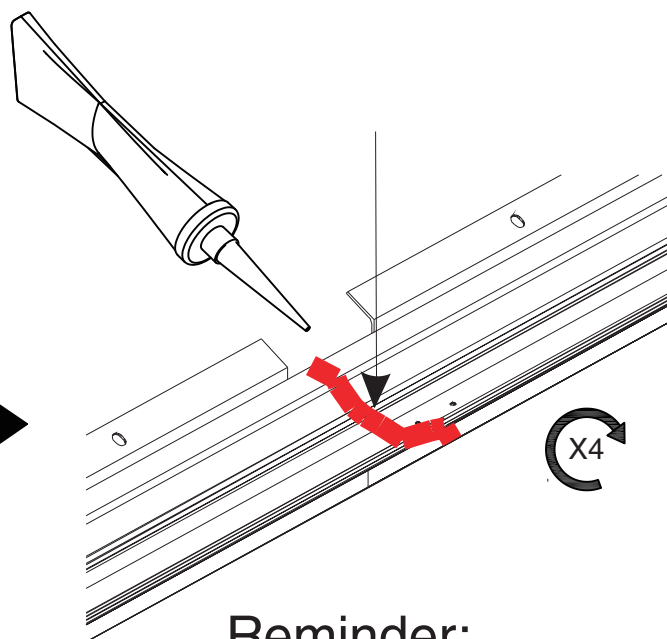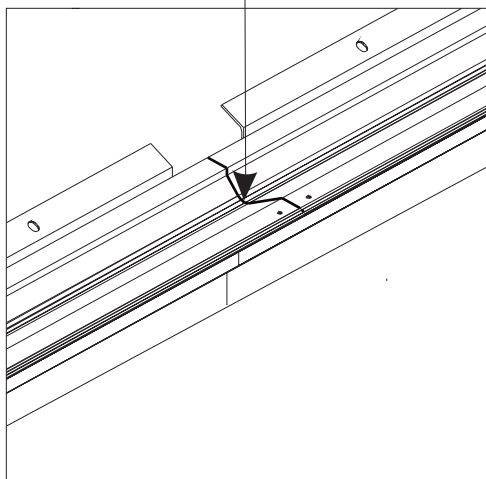


## Reminder:

with silicone rubber to seal  
after finishing the assembly  
it will be better for no water  
leaking in heavy rain.

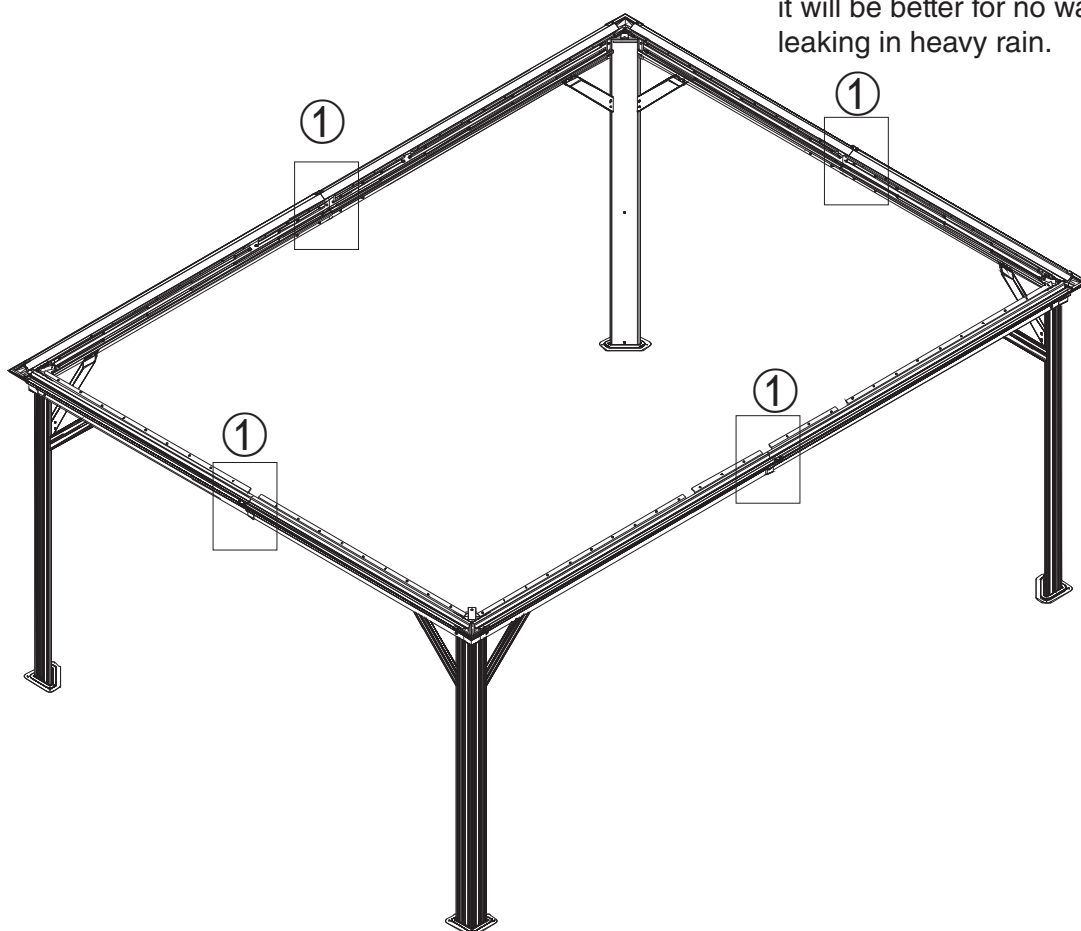




# Parts Required:



4#  
x128





H1 x4

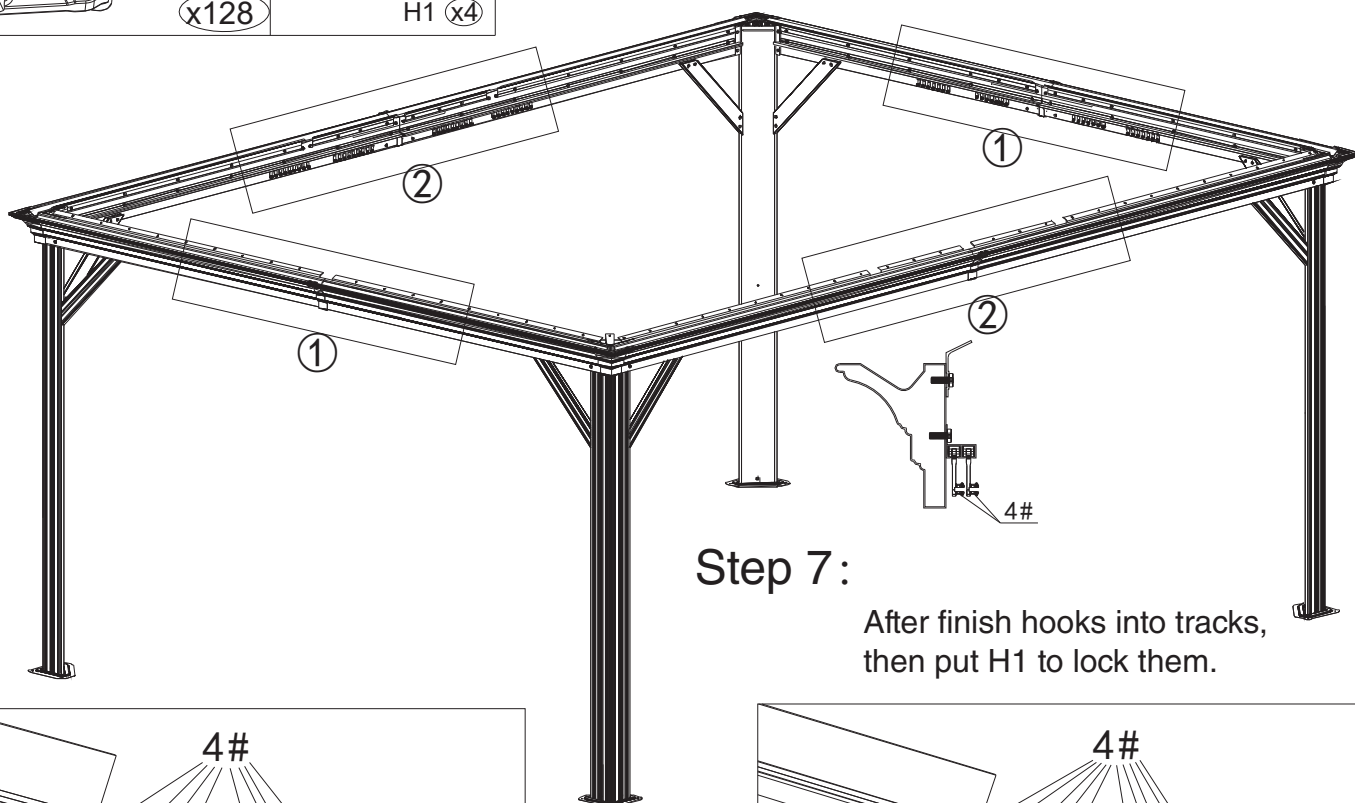


## Step 7:


After finish hooks into tracks,  
then put H1 to lock them.

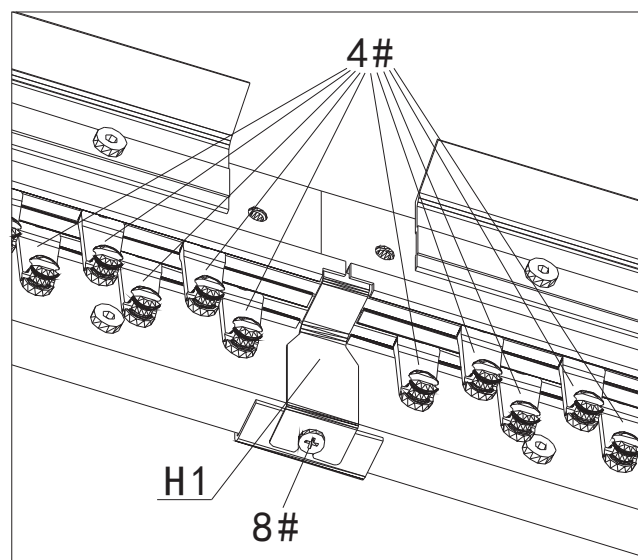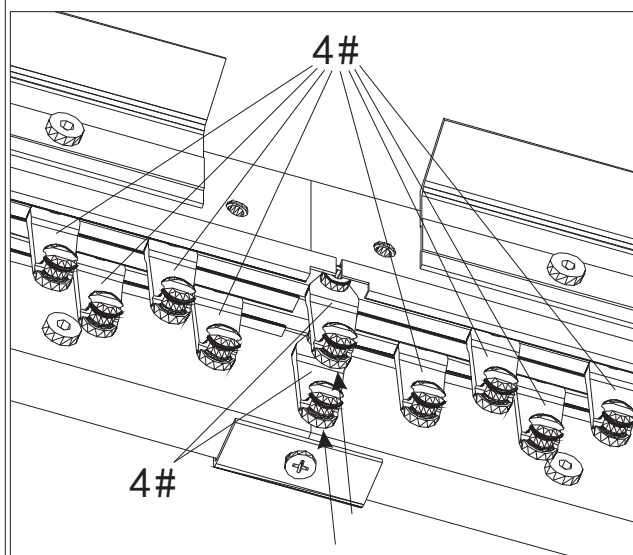


### ① Put 7 hooks to each slot of sidewall track (part C2&Part B2)

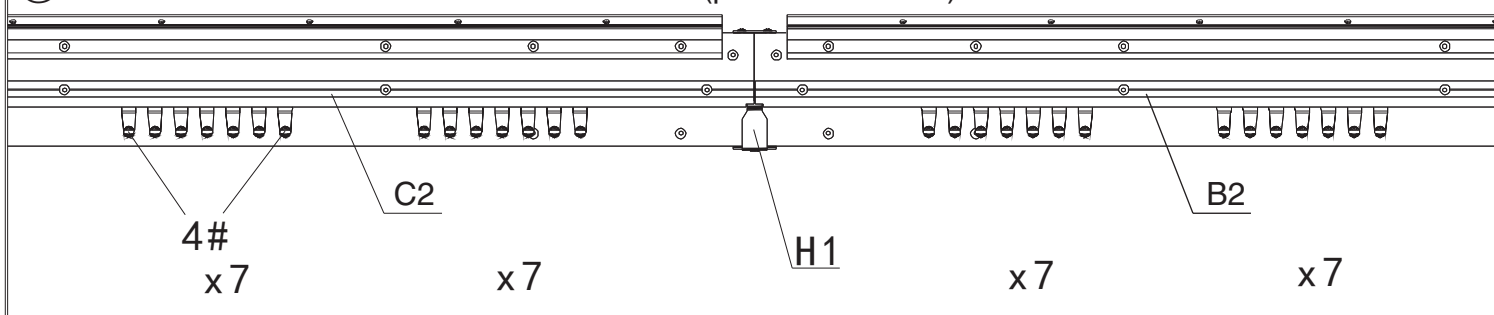


### ② Put 9 hooks to each slot of sidewall track (part E2&Part D2)

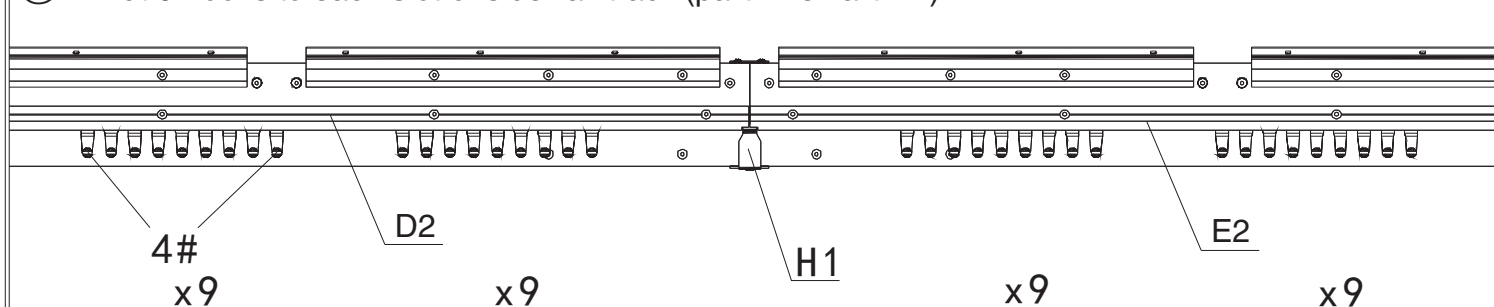


Parts Required:

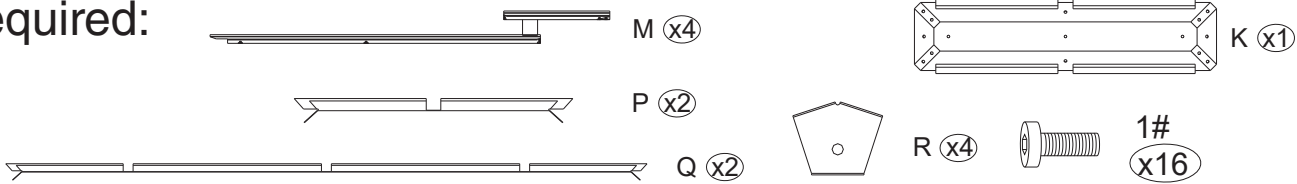


Step 8: Set up roof frame

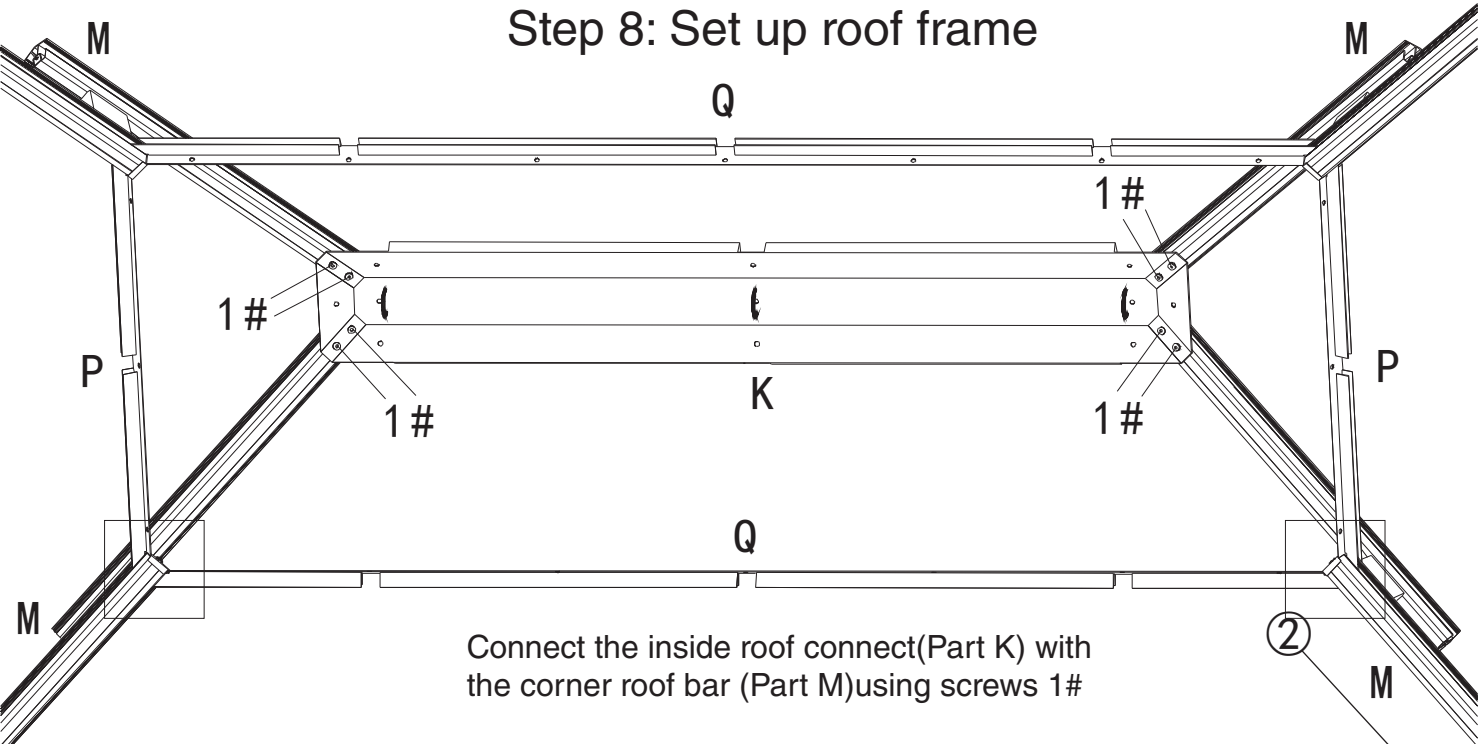


Connect the inside roof connect(Part K) with the corner roof bar (Part M) using screws 1#

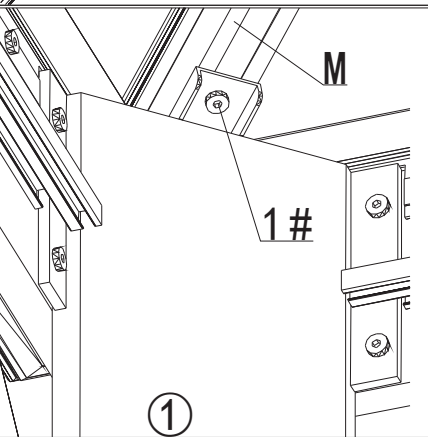

Attach corner roof bar (Part M) to main frame using screw 1# as shown in diagram


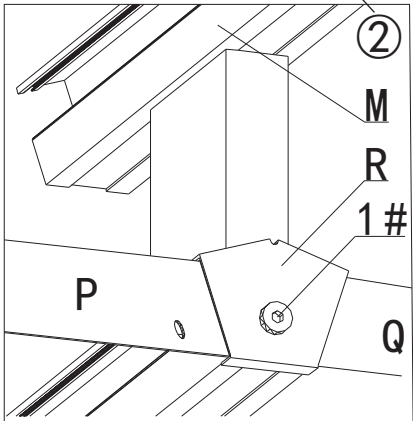


Attach finishing bar (Part P&Q) with finish end (Part R) using screws 1# to corner roof bar (Part M) as shown in diagram.


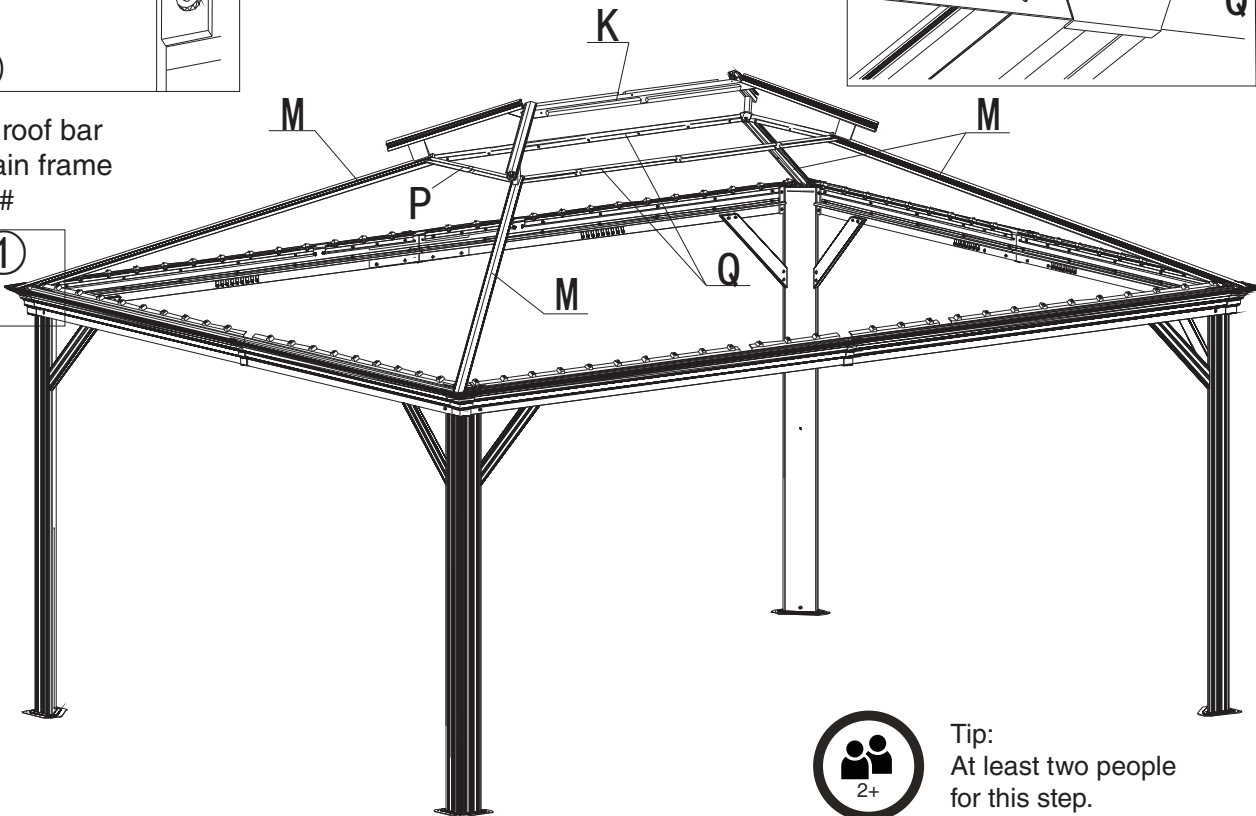


Tip:  
At least two people  
for this step.

Parts Required:





Upward View

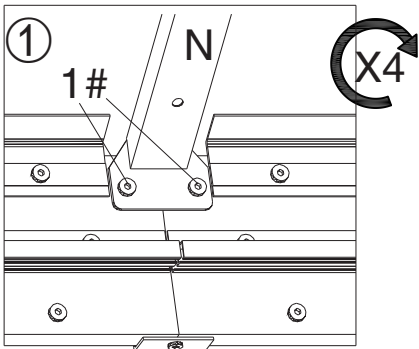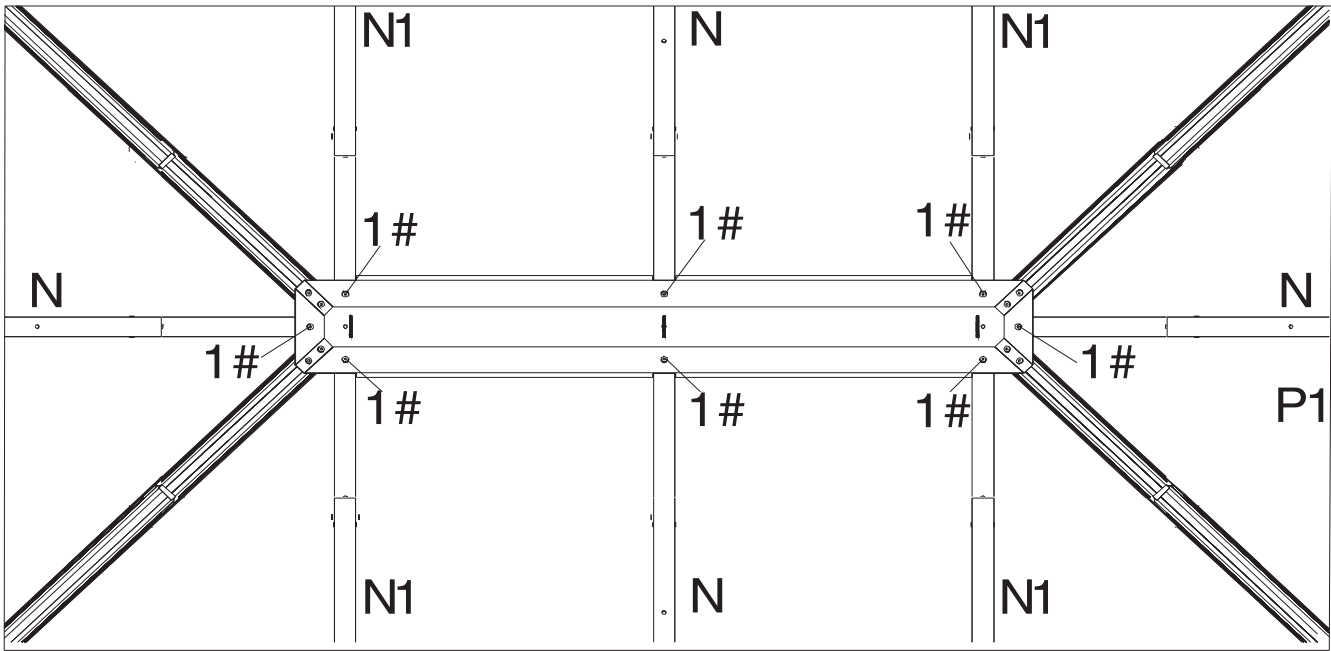


Step 9:

Attach roof bar (Part N&N1) to main frame using screw 1#.

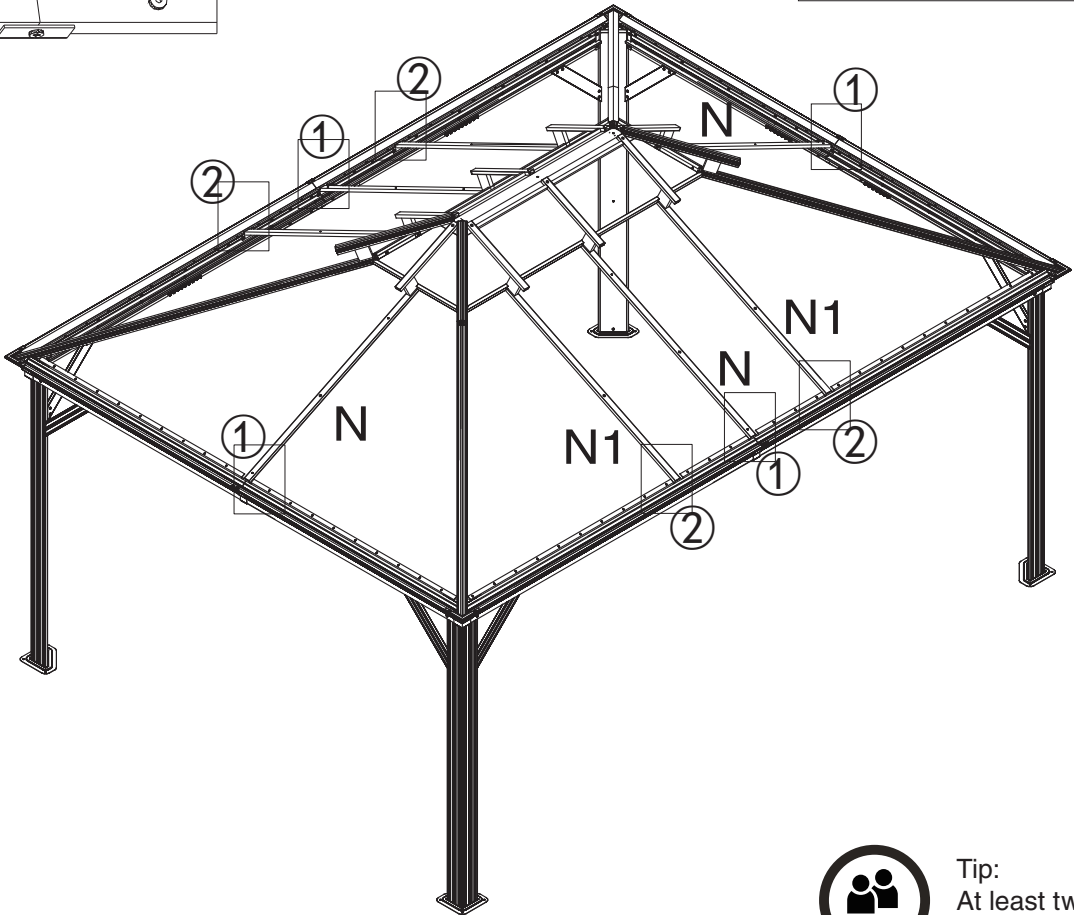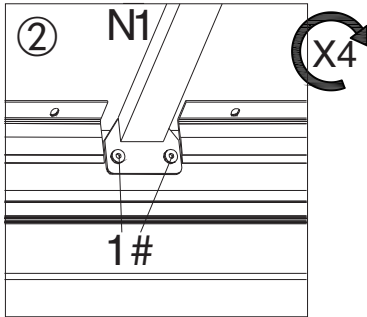

Tip:  
At least two people  
for this step.


## Parts Required:




K1 (x1)



1#  
(x3)

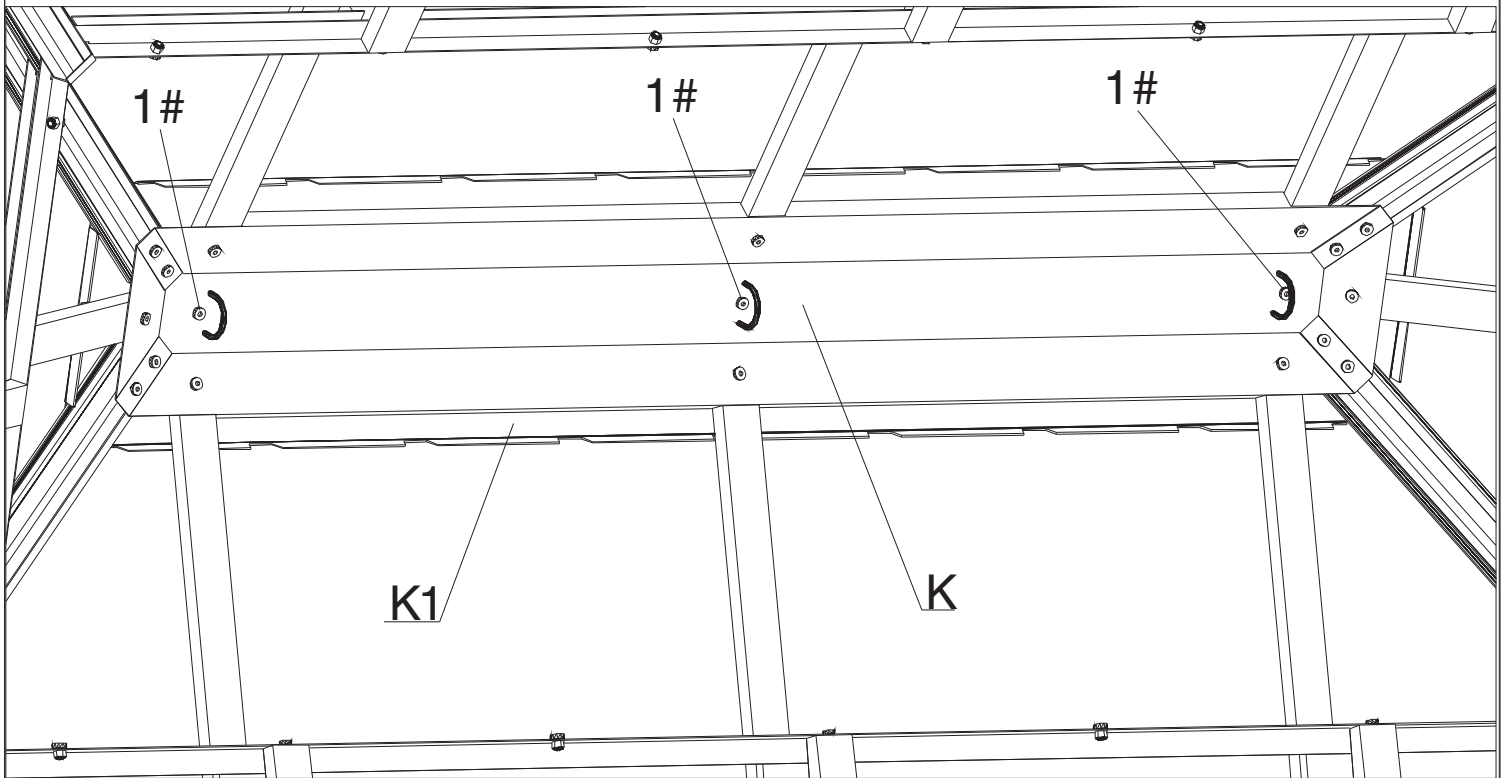




**Step 10:** Connect outside roof connector (Part K1) to inside roof (Part K) using screw 1# as shown in diagram.

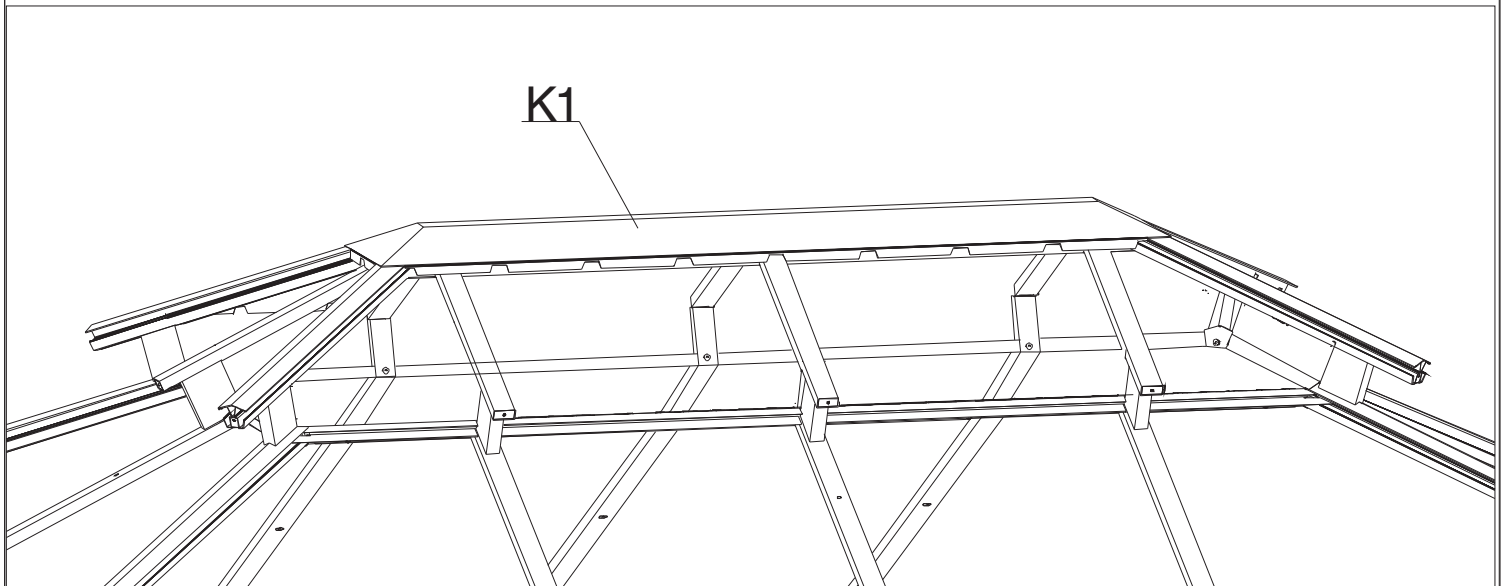





# Parts Required:



**Step 11:** Cover metal bracket (Part Z,Z1,Z2) to roof panels as shown in diagram.

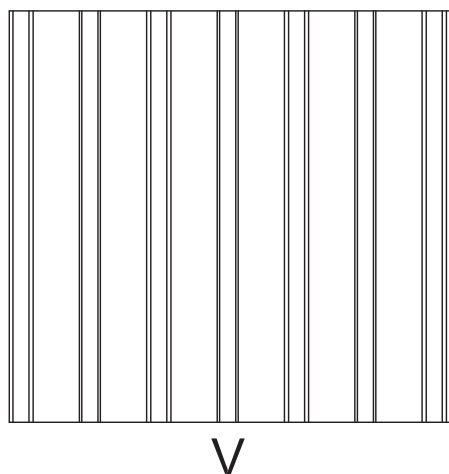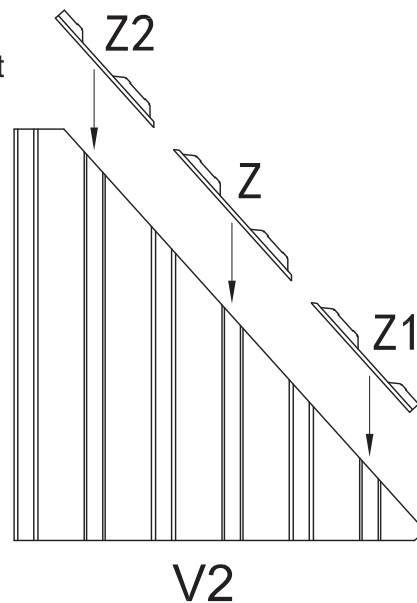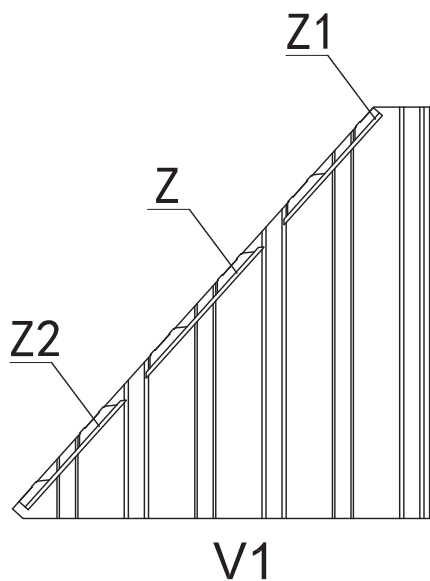

**Tip:**  
Wearing protective gloves is recommended.

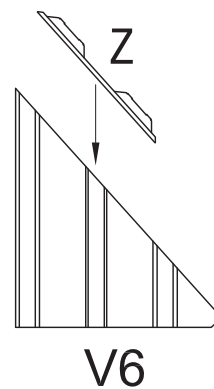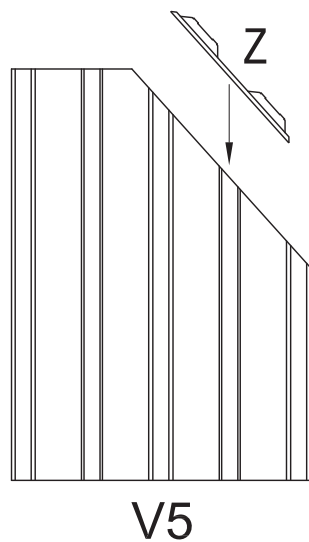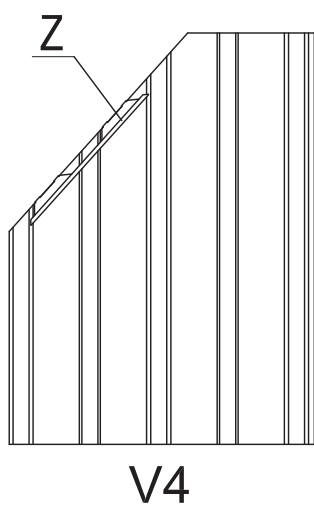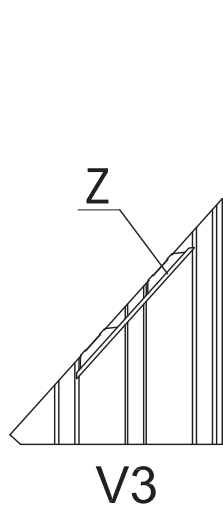


# Parts Required:

T1 (x2)

T2 (x2)


R (x4)

1# x12

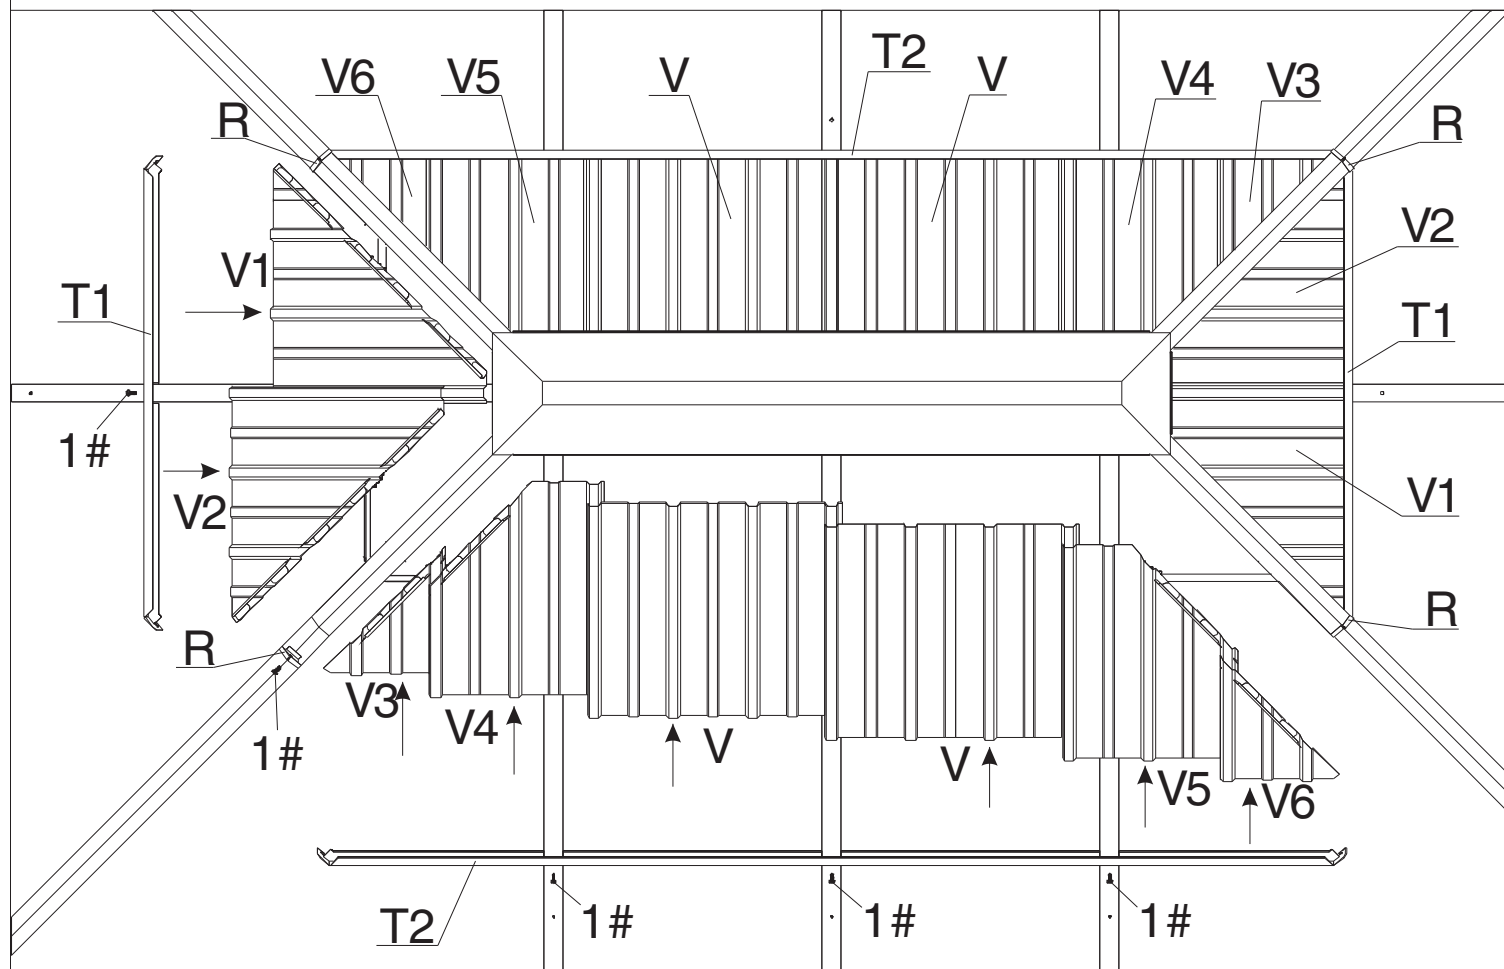


## Step 12:

Push the roof panels (Part v1,v2,v3,v4,v5,v6) to upper roof as shown in diagram.

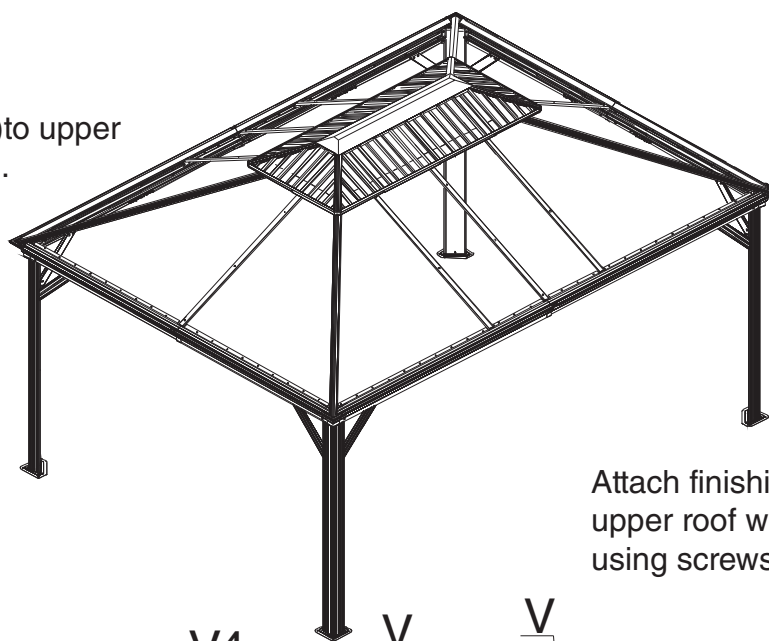

Attach finishing bar (Part T1&T2) to upper roof with finish end (Part R) using screws 1# as shown in diagram.

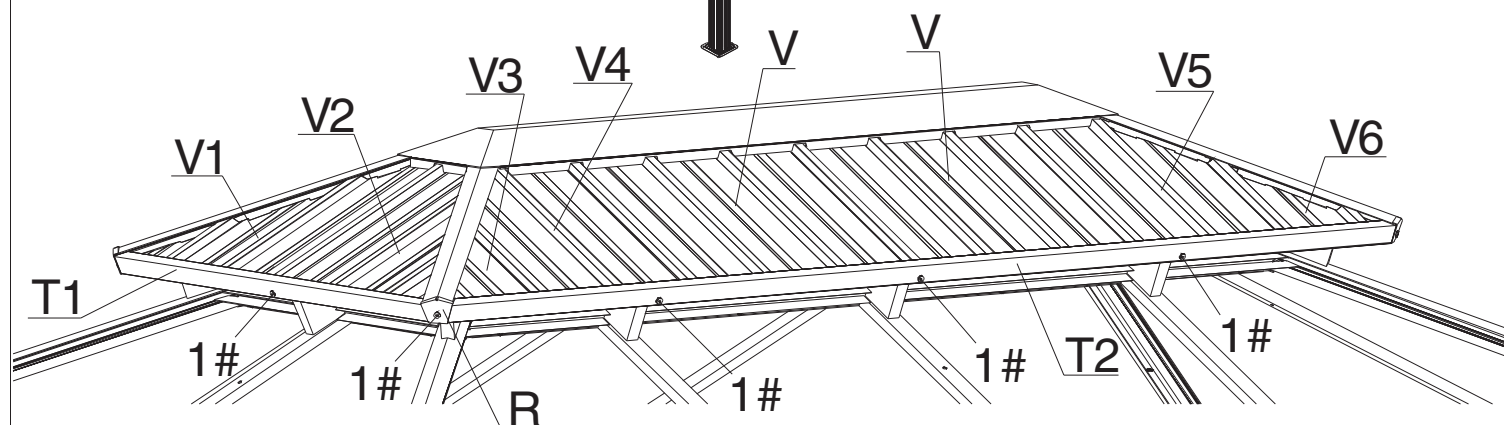



# Parts Required:

U1 (x4)


U2 (x4)

U5 (x2)

U3 (x4)

U4 (x6)

1# (x32)



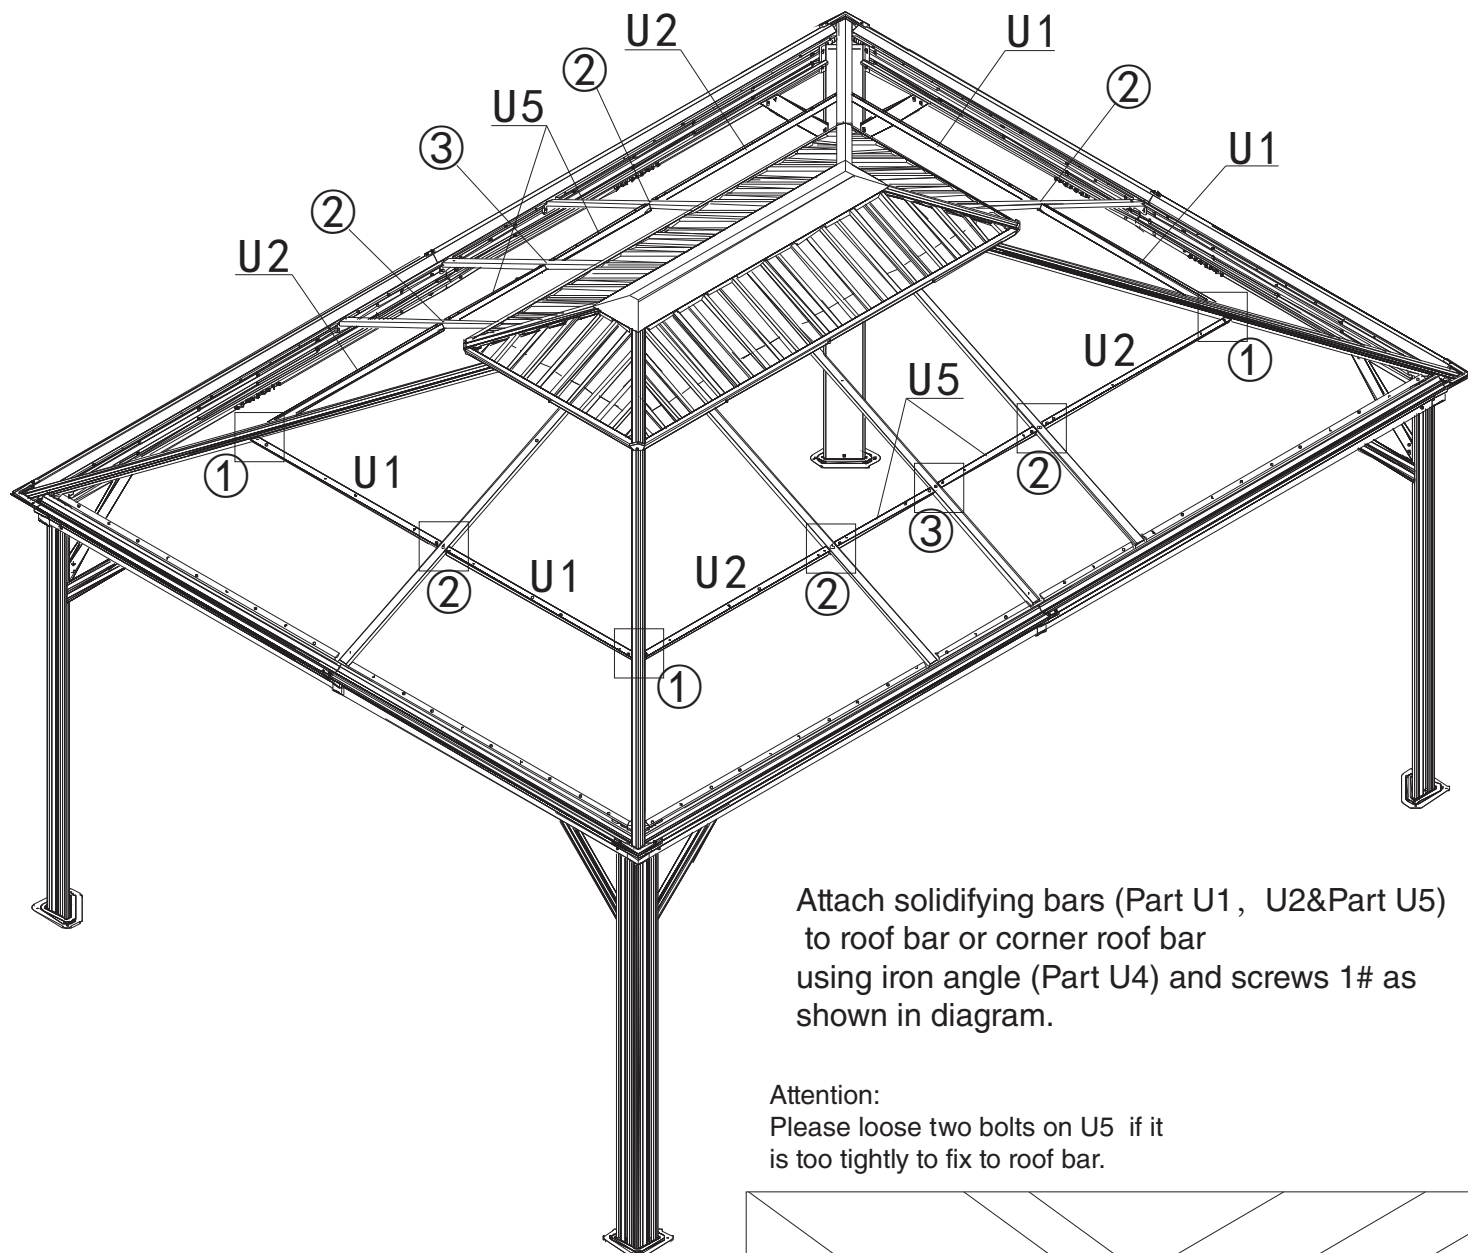


Attach solidifying bars (Part U1 , U2&Part U5) to roof bar or corner roof bar using iron angle (Part U4) and screws 1# as shown in diagram.


Attention:  
Please loose two bolts on U5 if it is too tightly to fix to roof bar.

## Step 13:


Affix solidifying bars to corner bar using iron angle (Part U3) and screw 1# as shown in diagram.

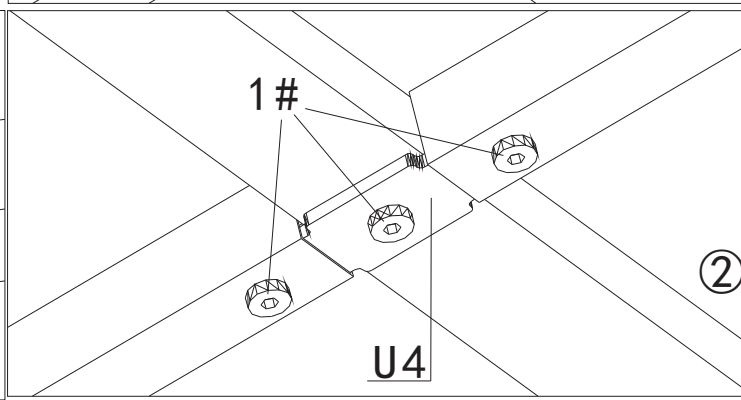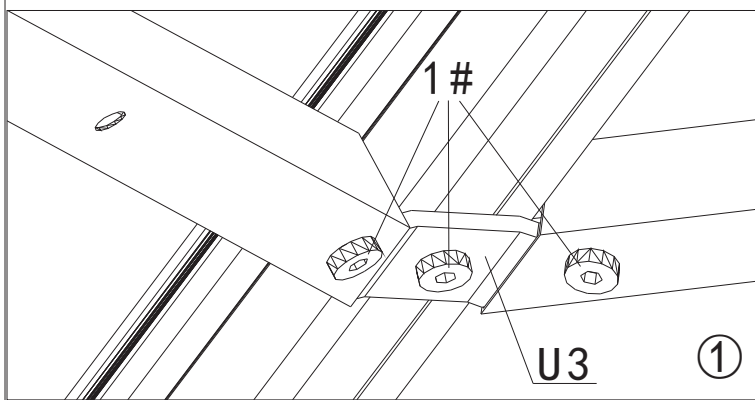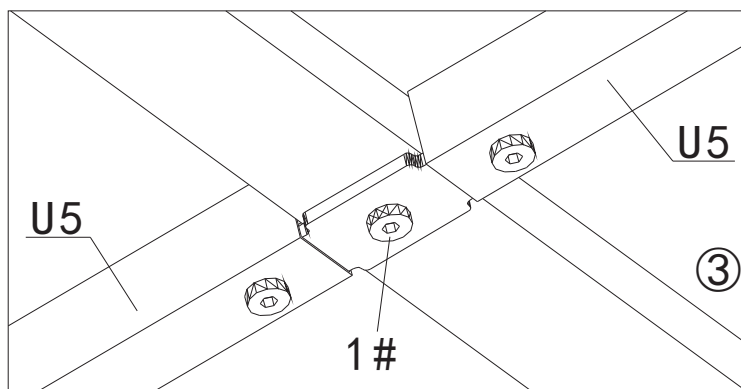

Parts Required:

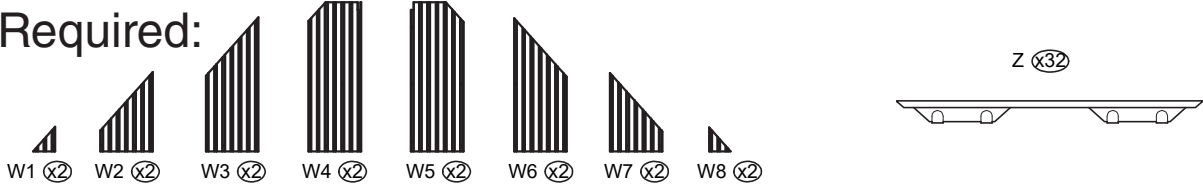


**Step 14:**  
Cover metal bracket  
(Part Z) to roof panels as  
shown in diagram.

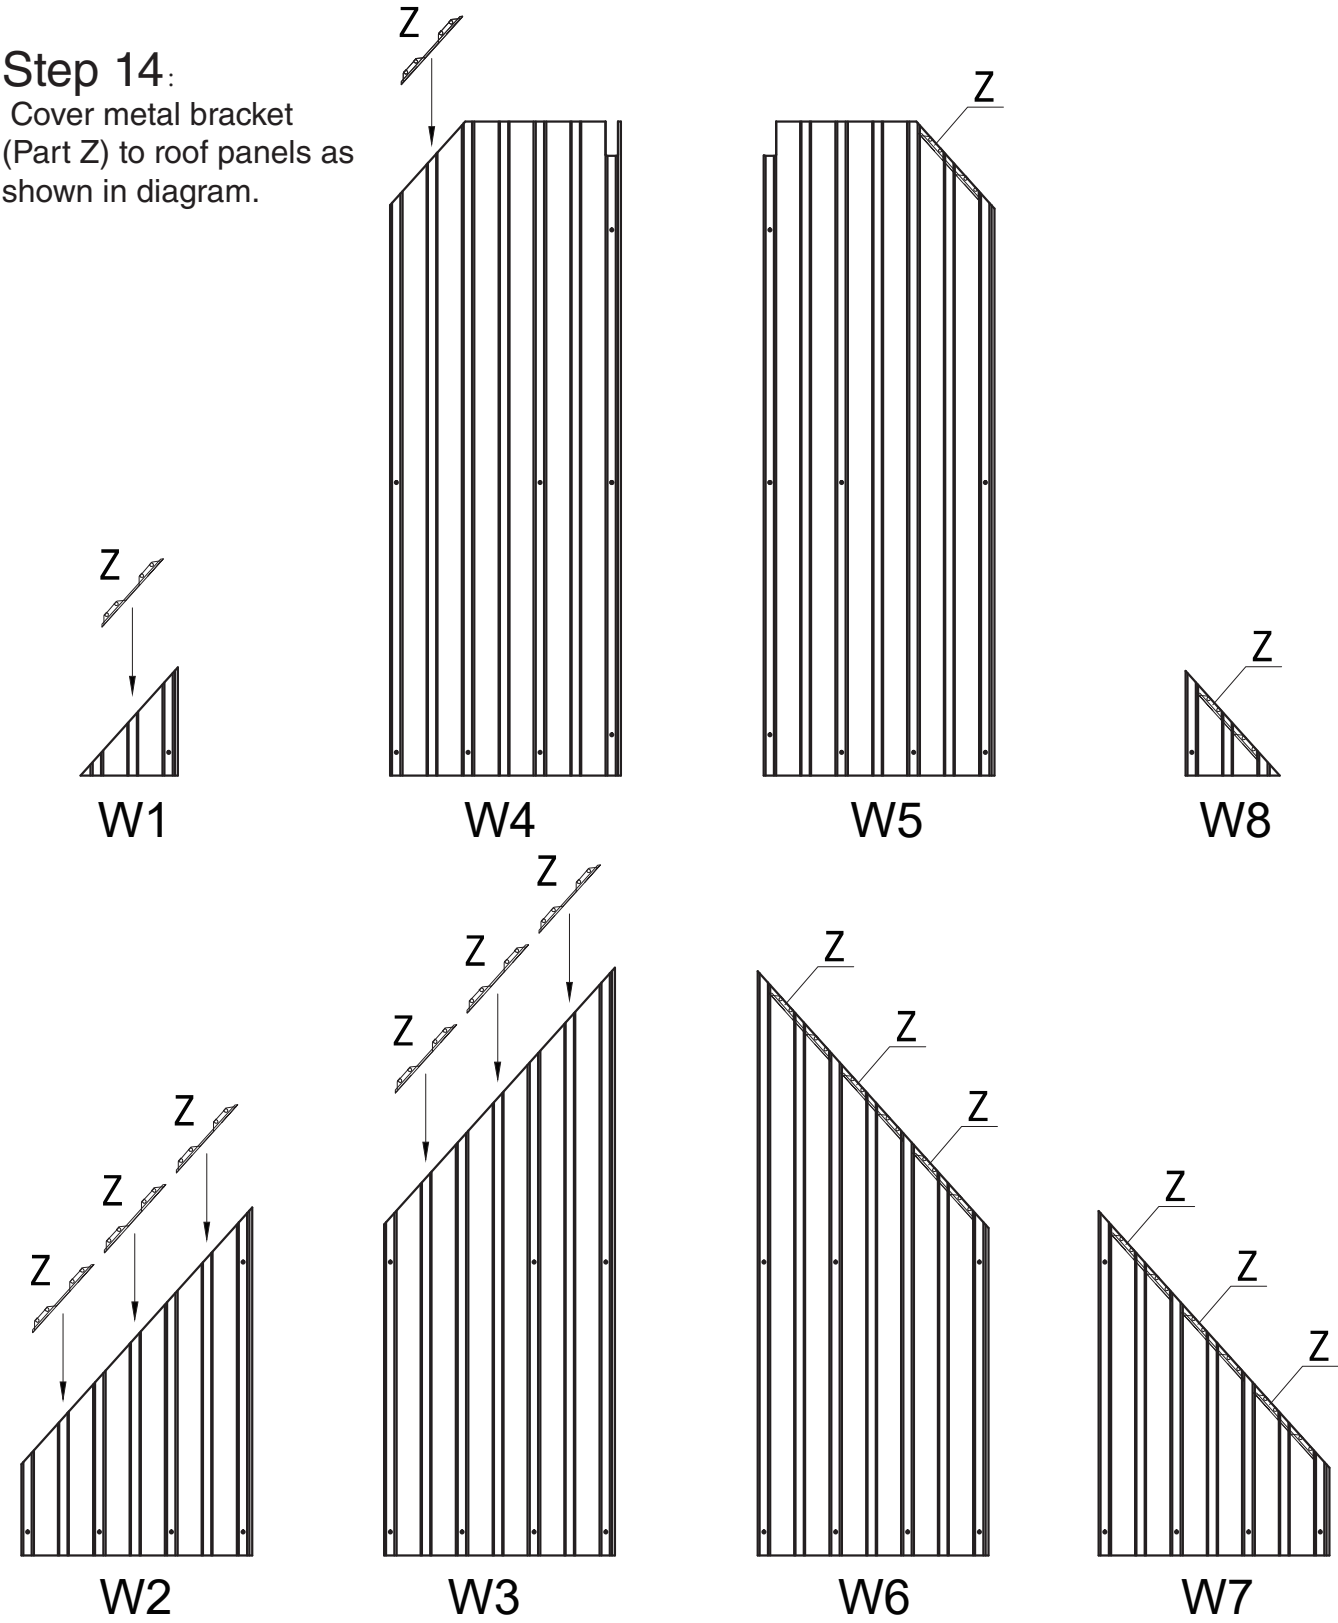


**Tip:**  
Wearing protective gloves is  
recommended.




## Parts Required:

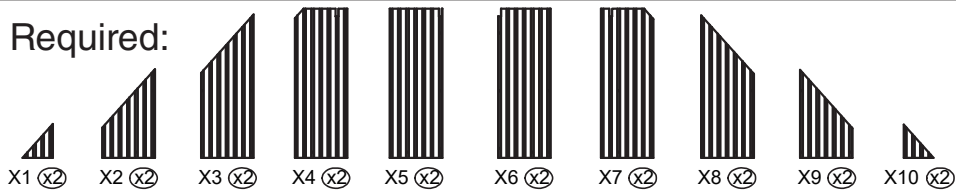


Z3

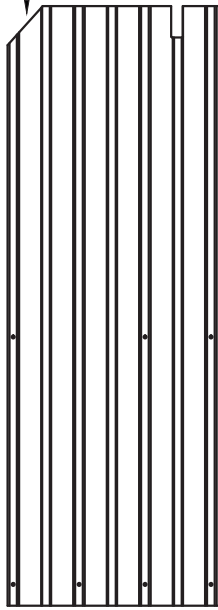


X4

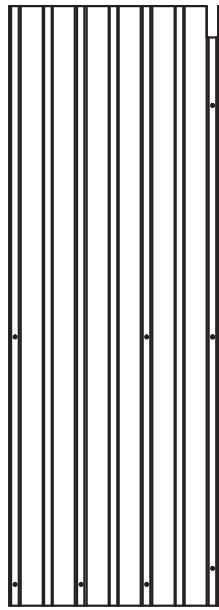

X5

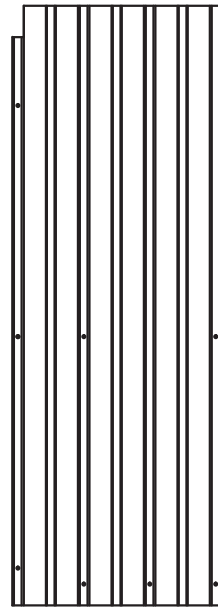

X6

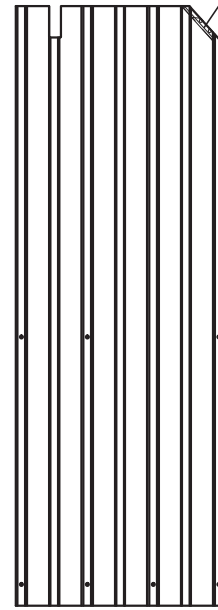


X7


Z4

## Step 15:


Cover metal bracket  
(Part Z,Z3,Z4) to roof panels as  
shown in diagram.

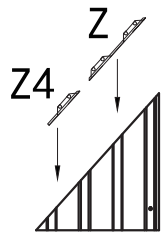


X1

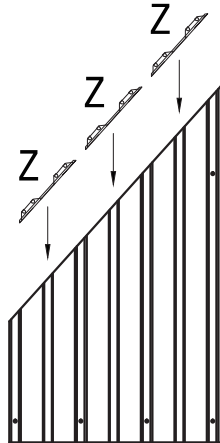


X2

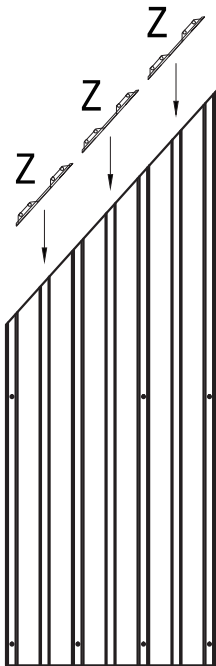


X3

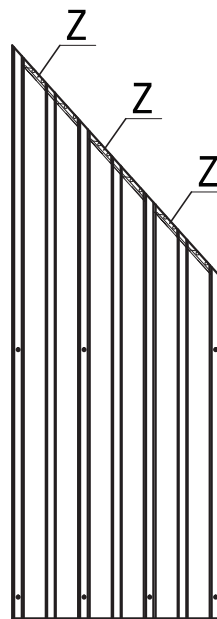

X8

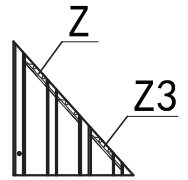


X10

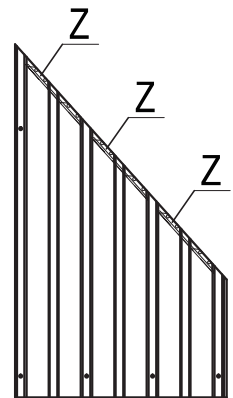

X9

## Overall roof assembly:

Please put the panels on the frame anti-clockwisely

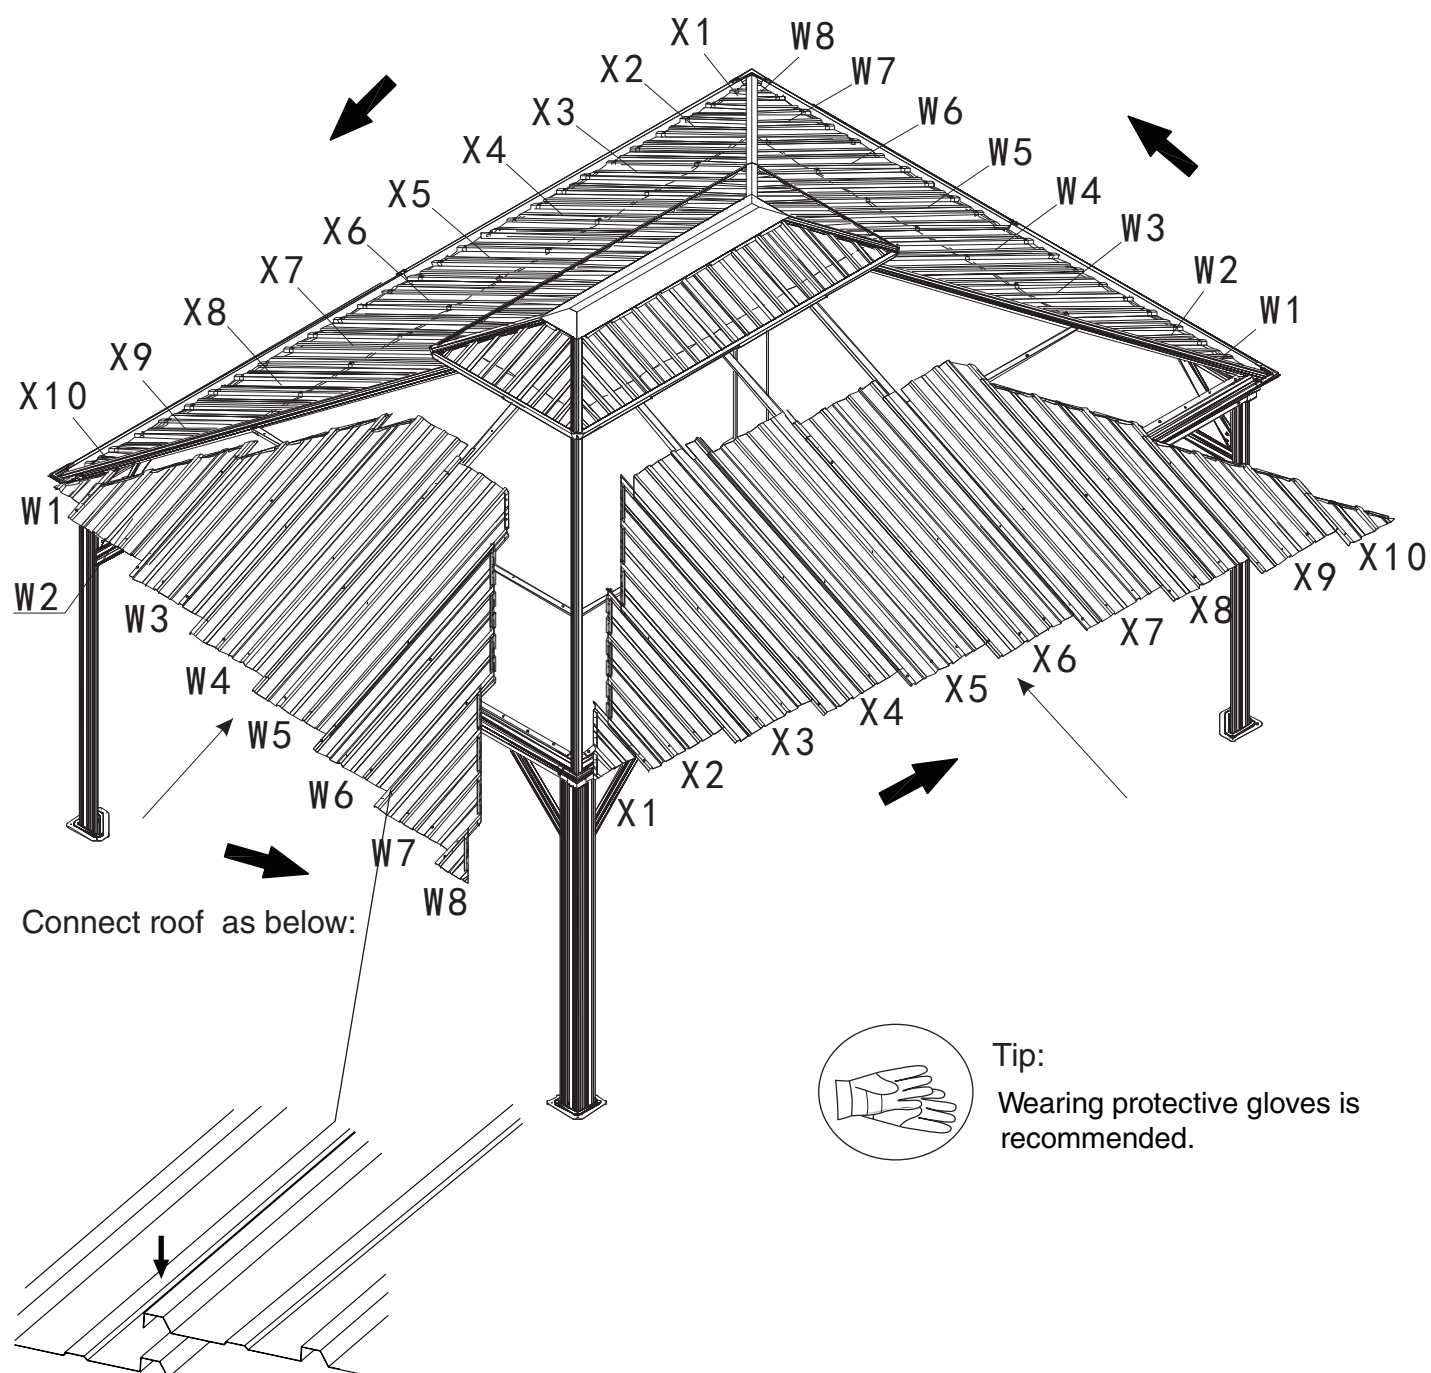


Parts Required:




**Step 16:**  
Affix roof panels using screws and spacers (Part S) as shown in diagram.

**Attention:**  
Put on one roof panel and fasten it accordingly before attaching second roof panel.

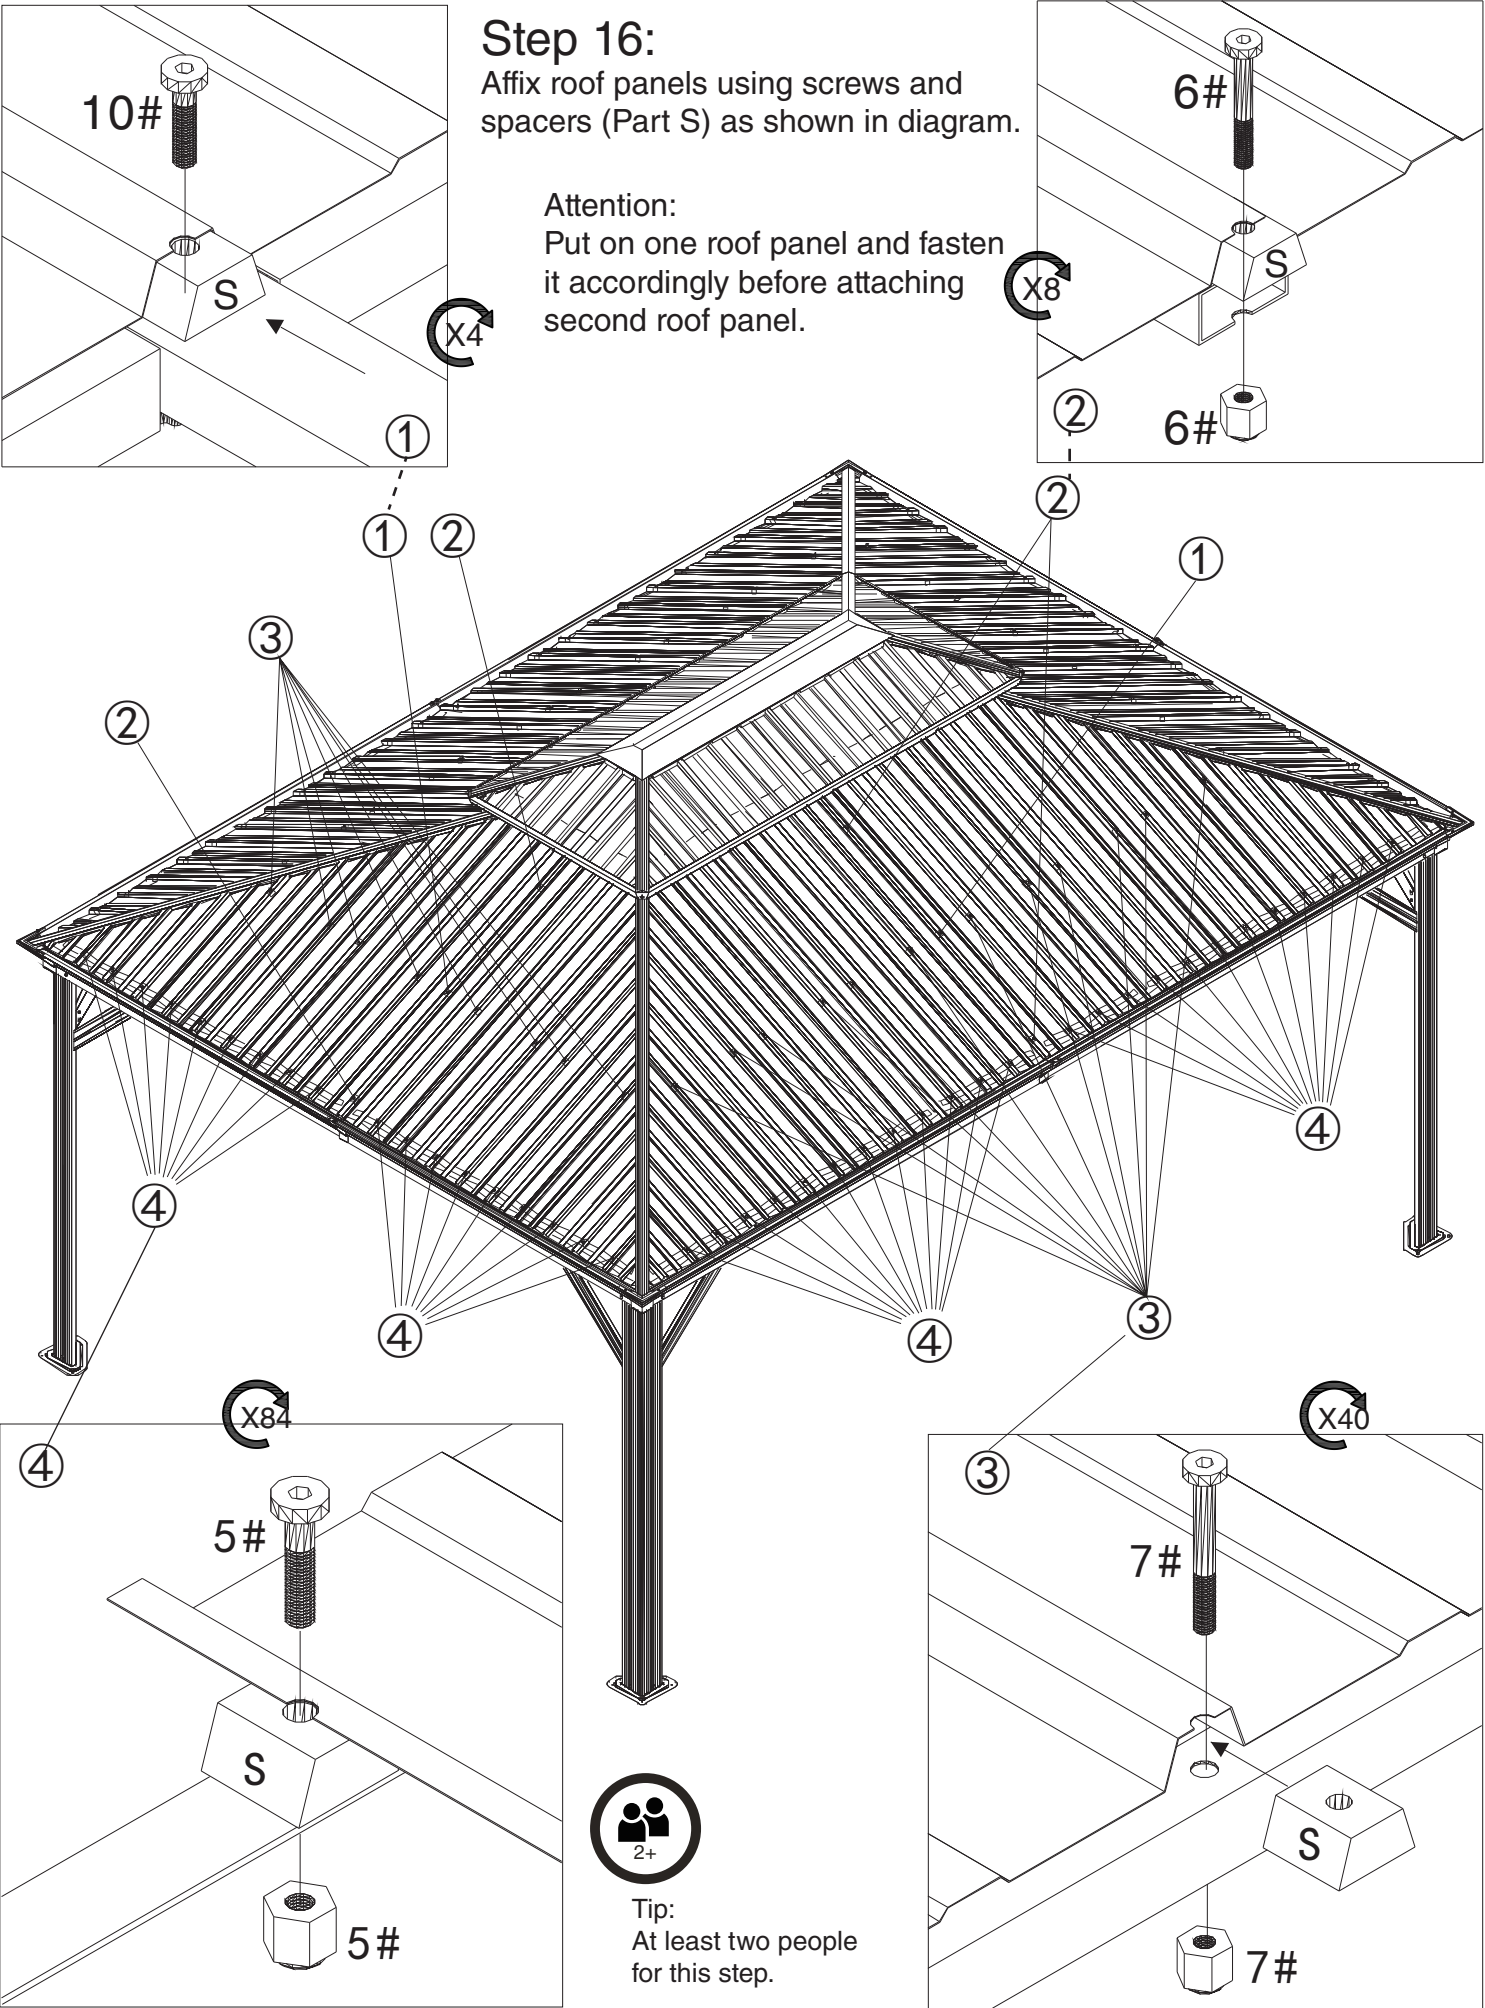


**Tip:**  
At least two people  
for this step.


Parts Required:



P1 (x2)



Q1 (x2)



Q2 (x2)




1#

(x8)





11#

(x12)

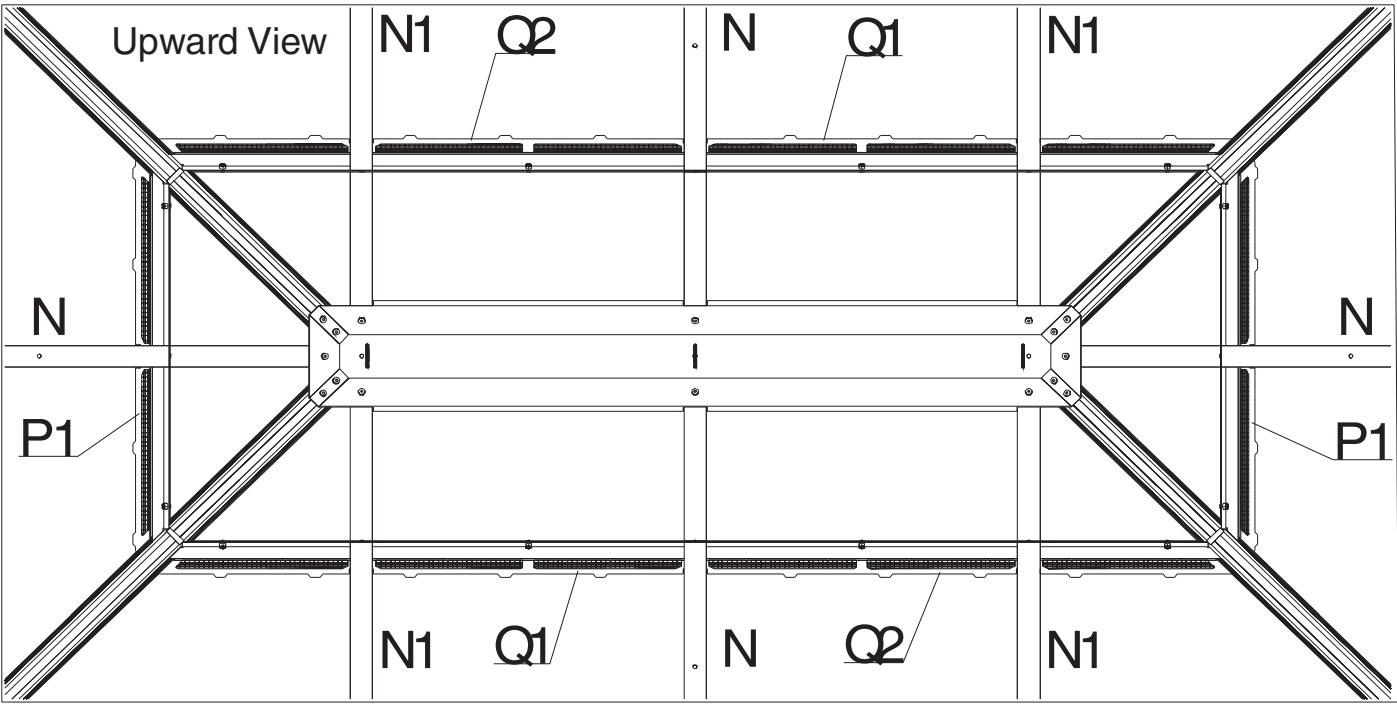


Step 17:






Attach net frames (Part P1,Q1&Q2) to finishing bars (Part P &Q) using screws 1#&11# as shown in diagram.

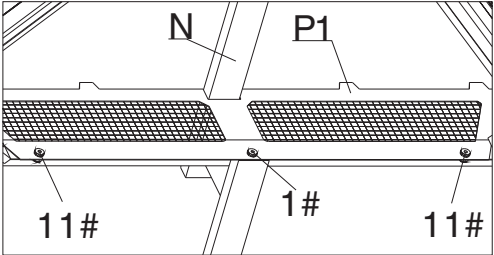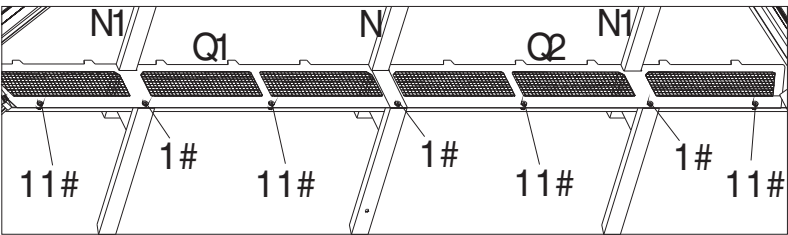




Perspective:

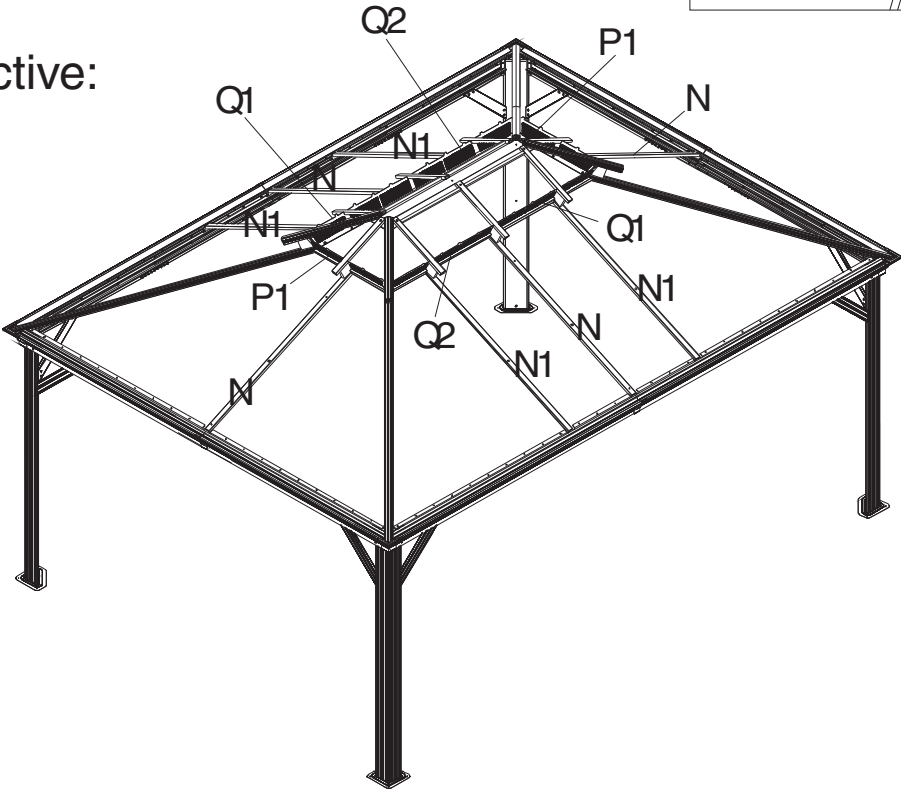

Parts Required:

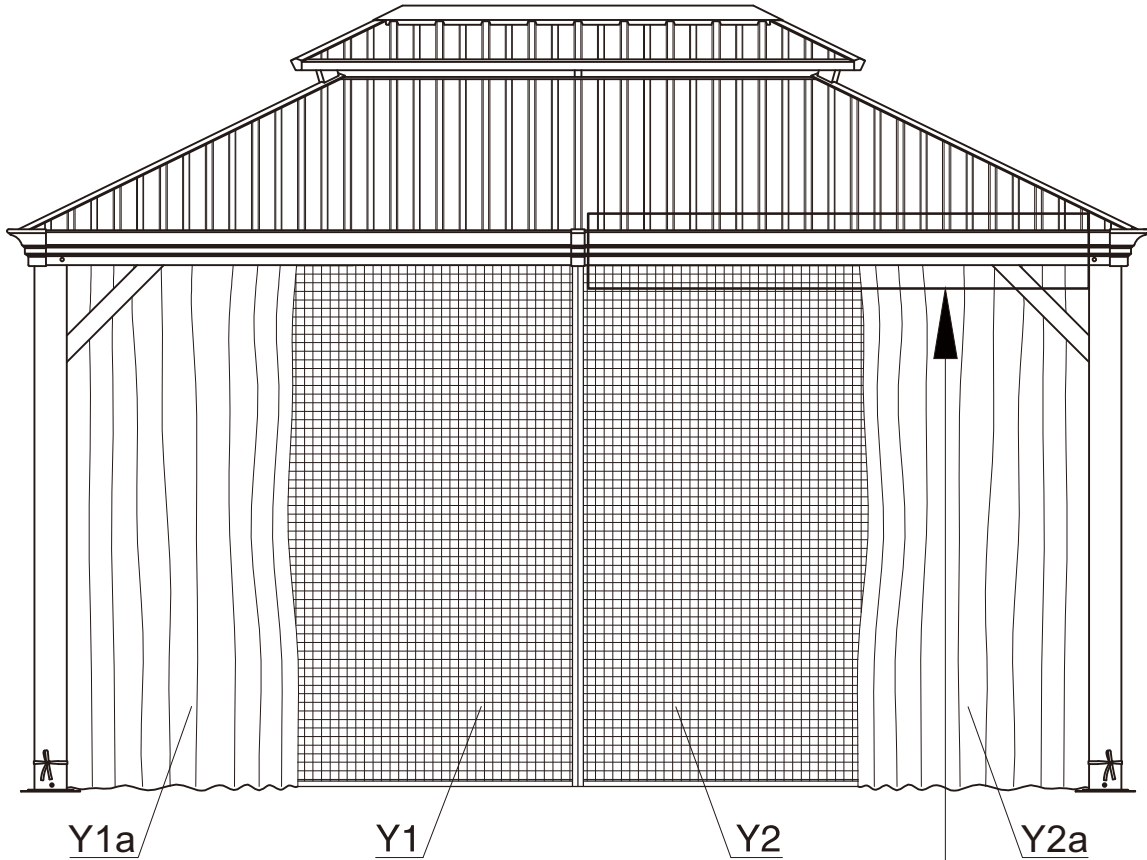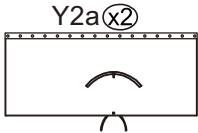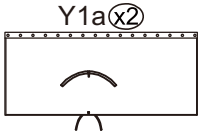

**Step 18:**  
Hang up mosquito sidewalls and solid sidewalls as shown in diagram.






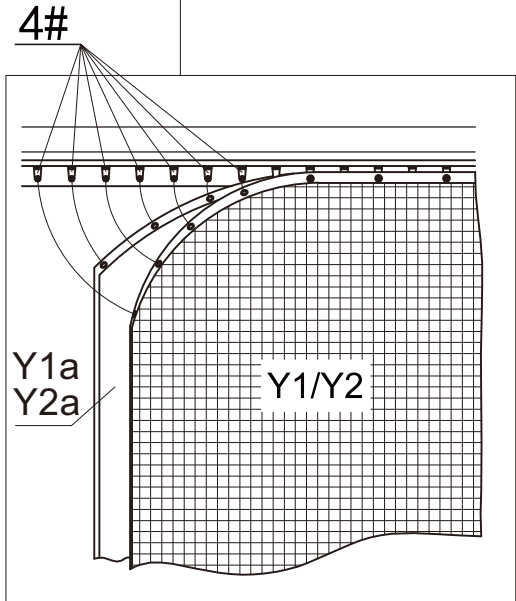
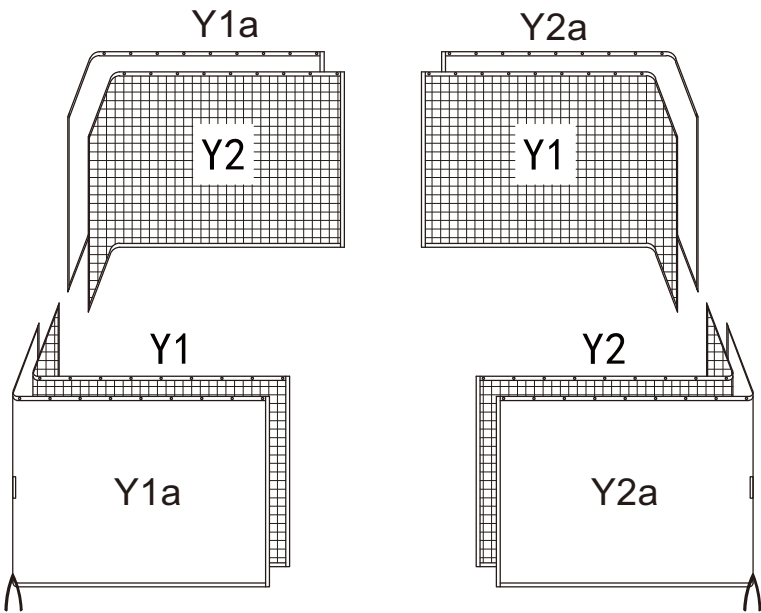
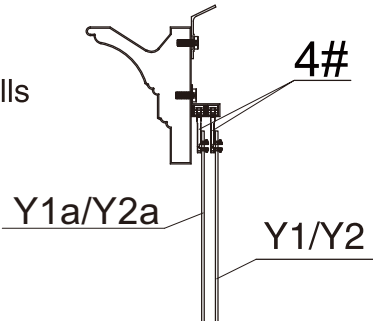




Parts Required:



Step 19: When you close the curtain, please refer to below steps to fix with poles as shown in diagram.

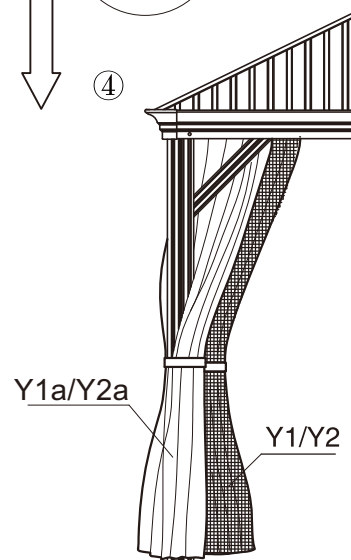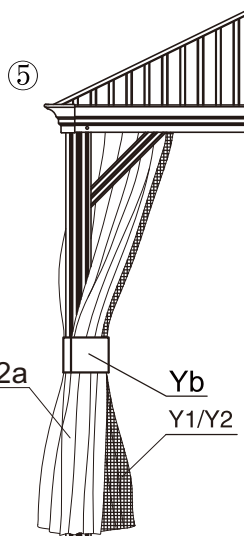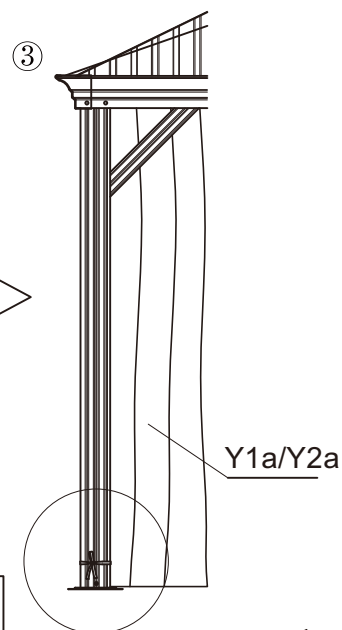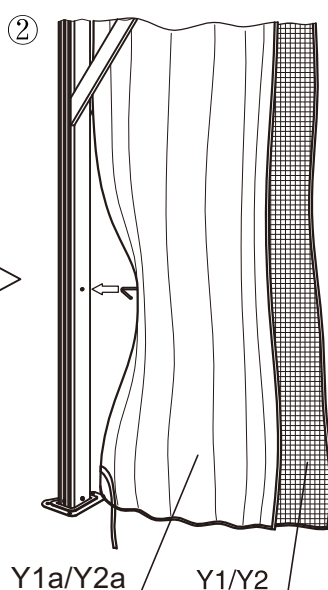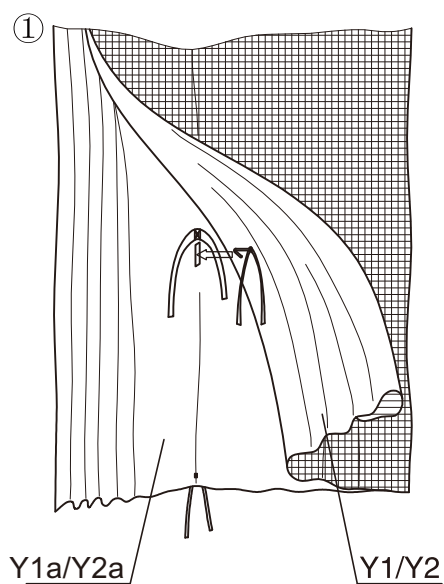

In the end, Check all screws are fixed tightly before using.



## Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

**Support:**  

**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

**Business cooperation contact email:**

[marketing@domioutdoorliving.com](mailto:marketing@domioutdoorliving.com)

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.