


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

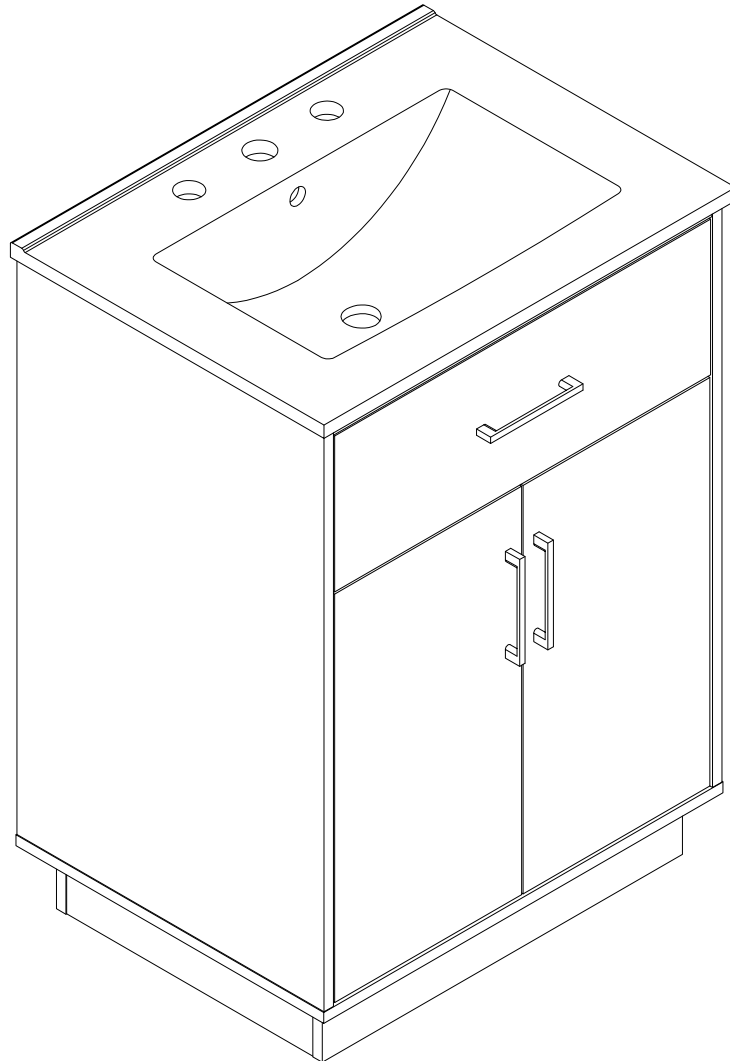

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
- * Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions








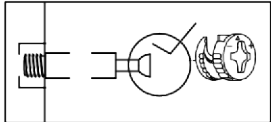

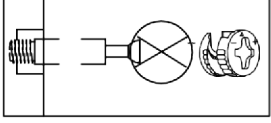

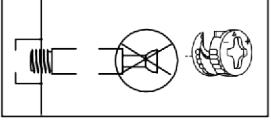

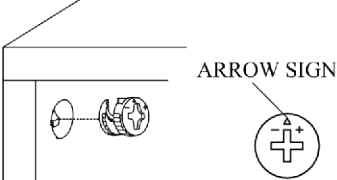
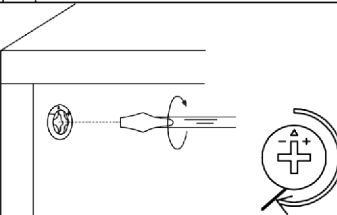
		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View














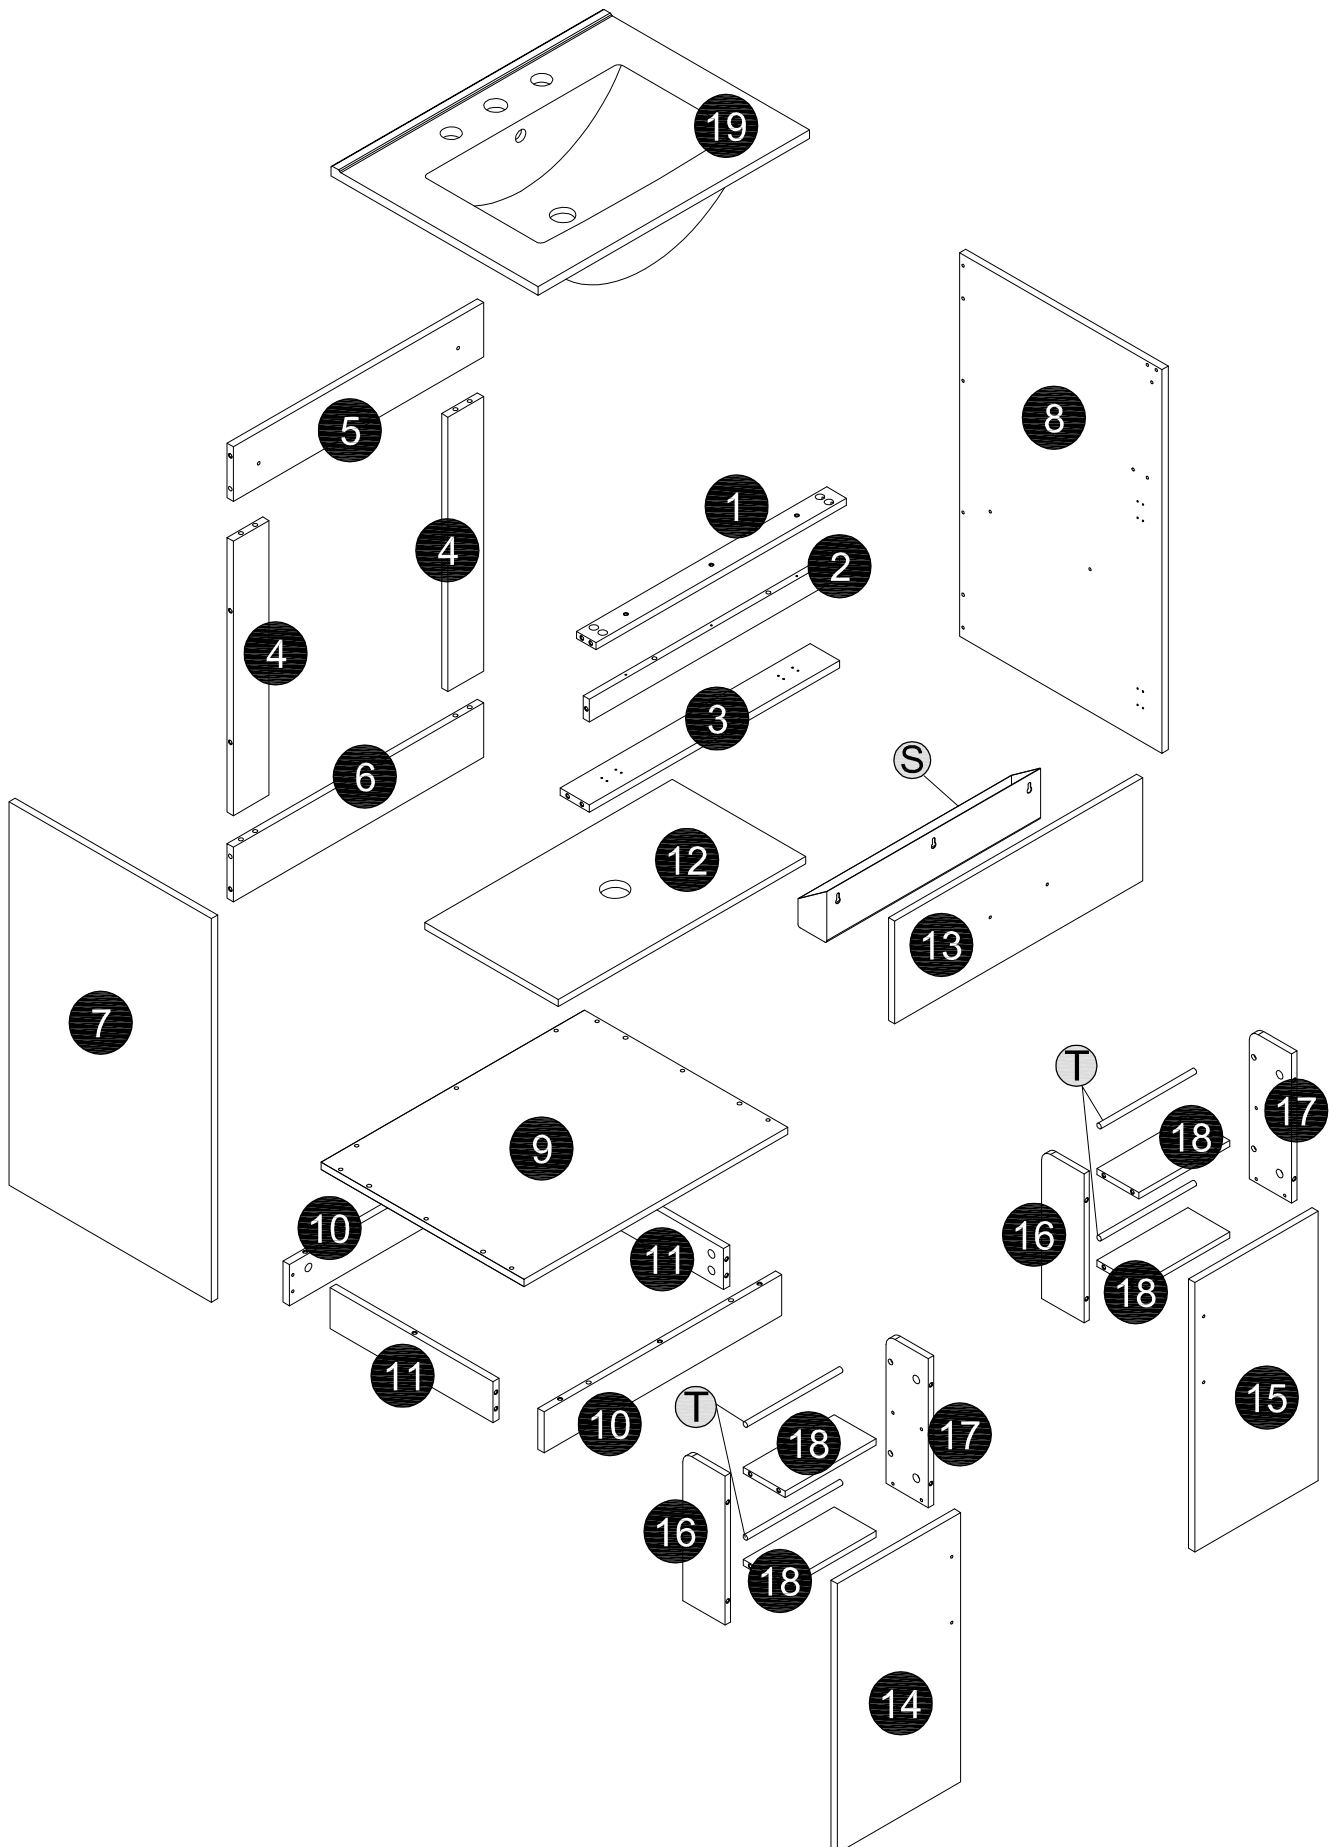


Note: Don't tighten all screws during installation.



Part Lists

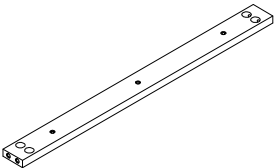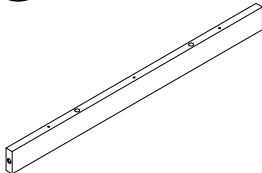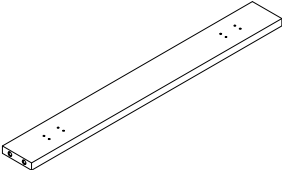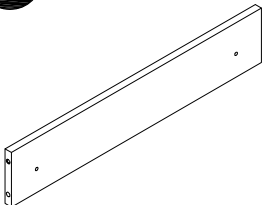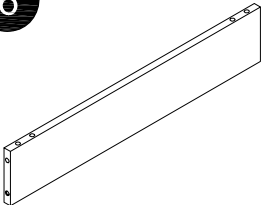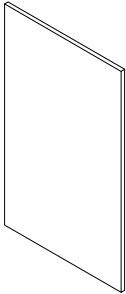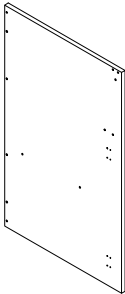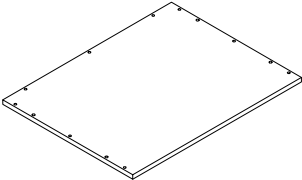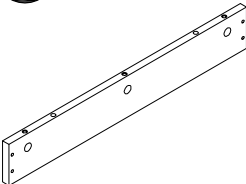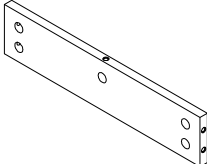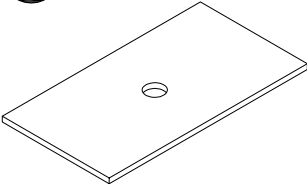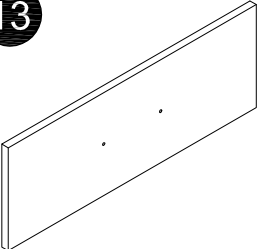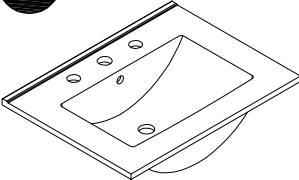1  1PC	2  1PC	3  1PC	4  2PCS
5  1PC	6  1PC	7  1PC	8  1PC
9  1PC	10  2PCS	11  2PCS	12  1PC
13  1PC	14  1PC	15  1PC	16  2PCS
17  2PCS	18  4PCS	19  1PC	


Part Lists

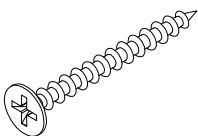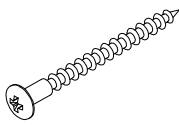A	X58+2		$\varnothing 6 \times 34 \text{ mm}$
B	X58+2		$\varnothing 15 \times 9.5 \text{ mm}$
C	X22+1		$\varnothing 8 \times 30 \text{ mm}$
D	X6		$\varnothing 35 \text{ mm}$
E	X36+1		$\varnothing 8 \times 15 \text{ mm}$
F	X9		$\varnothing 6 \times 40 \text{ mm}$
G	X3		
H	X6		5/32" x 18mm
I	X4		
J	X4		
K	X1		
L	X19		$\varnothing 4 \times 12 \text{ mm}$
M	X3		$\varnothing 8 \times 35 \text{ mm}$
N	X4		$\varnothing 13 \times 4 \text{ mm}$
O	X2		$\varnothing 8 \times 40 \text{ mm}$
P	X2		$\varnothing 5 \times 55 \text{ mm}$
Q	X1		
R	X1		




Accessories

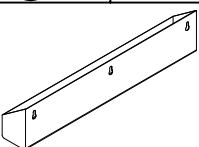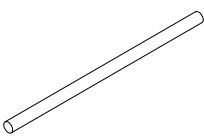S	X1		
T	X4		$\varnothing 10 \times 214 \text{ mm}$


Step 1

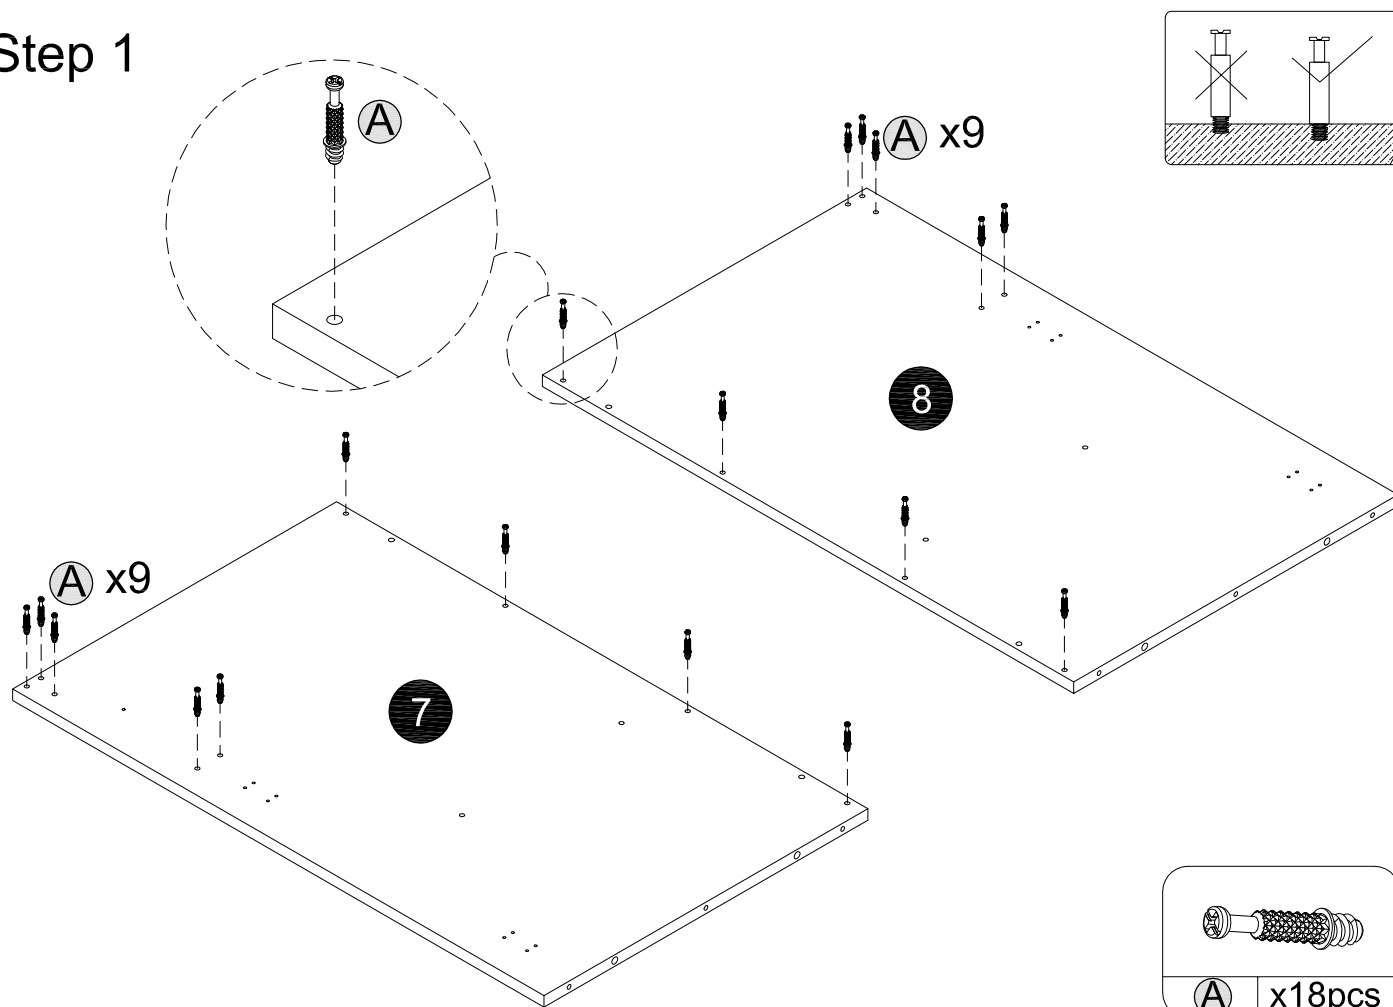


Step 2

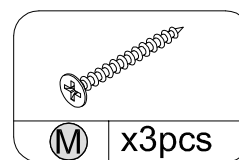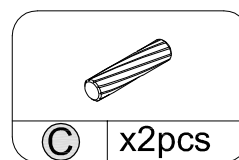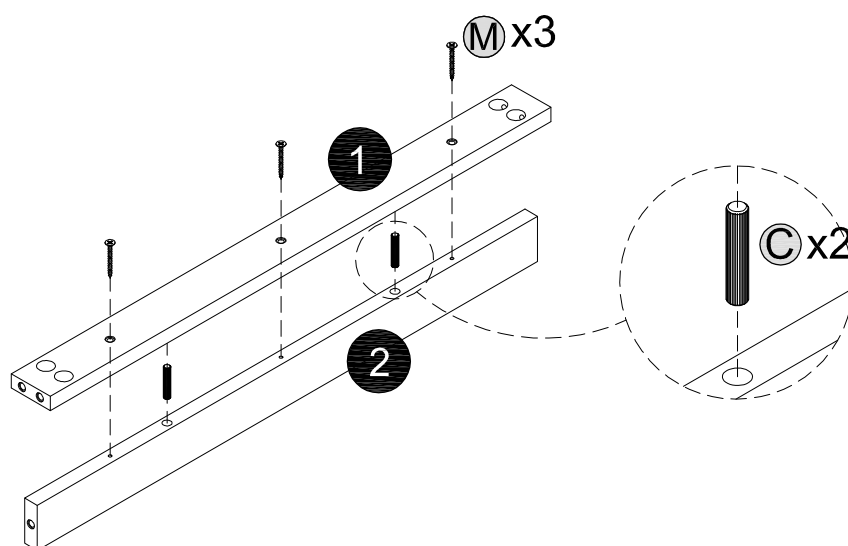



Step 3

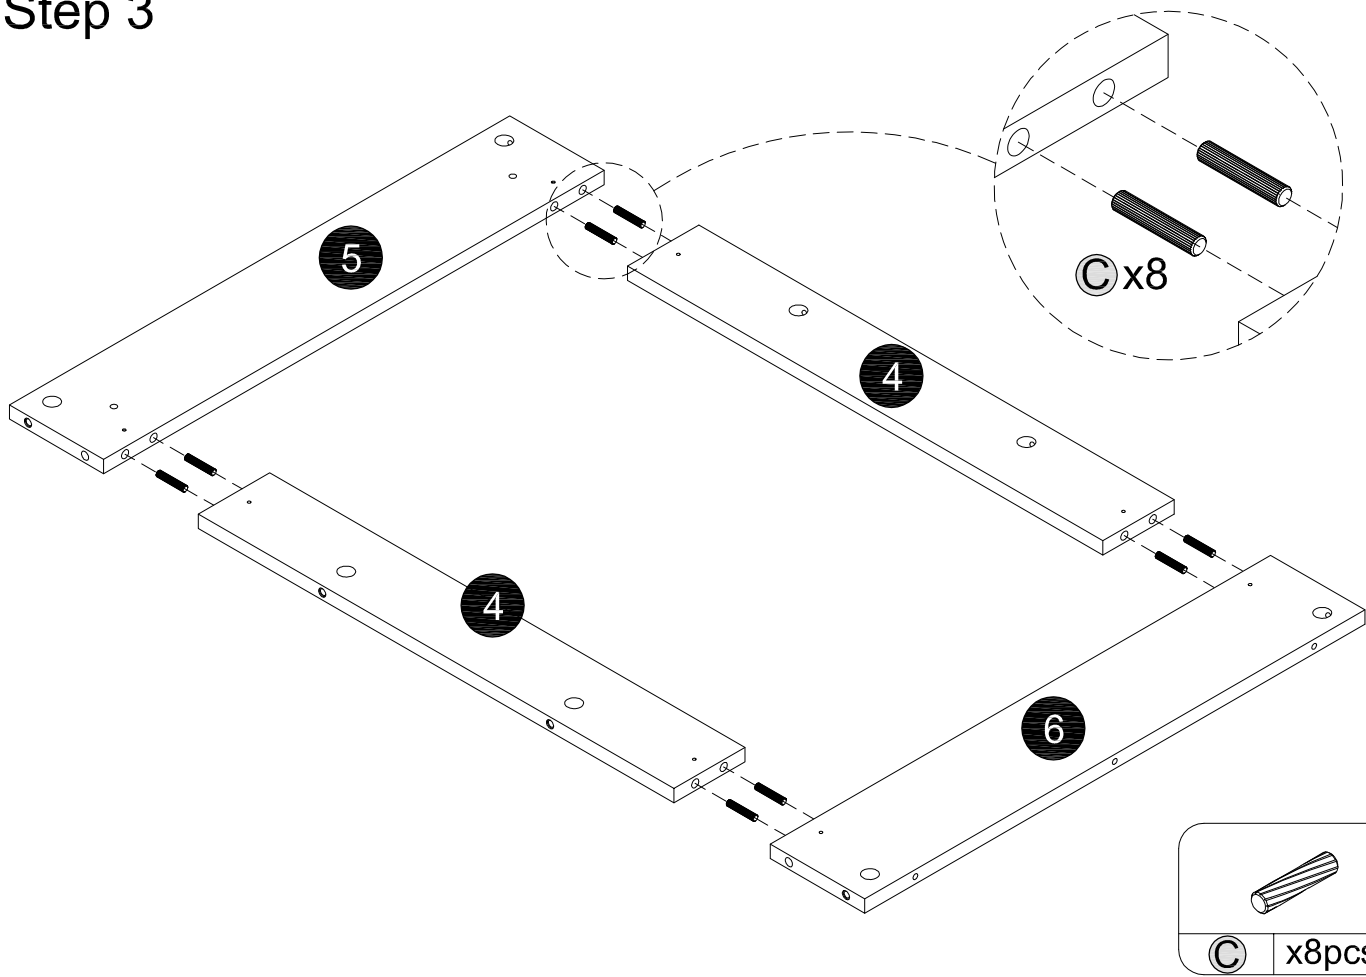




Step 4

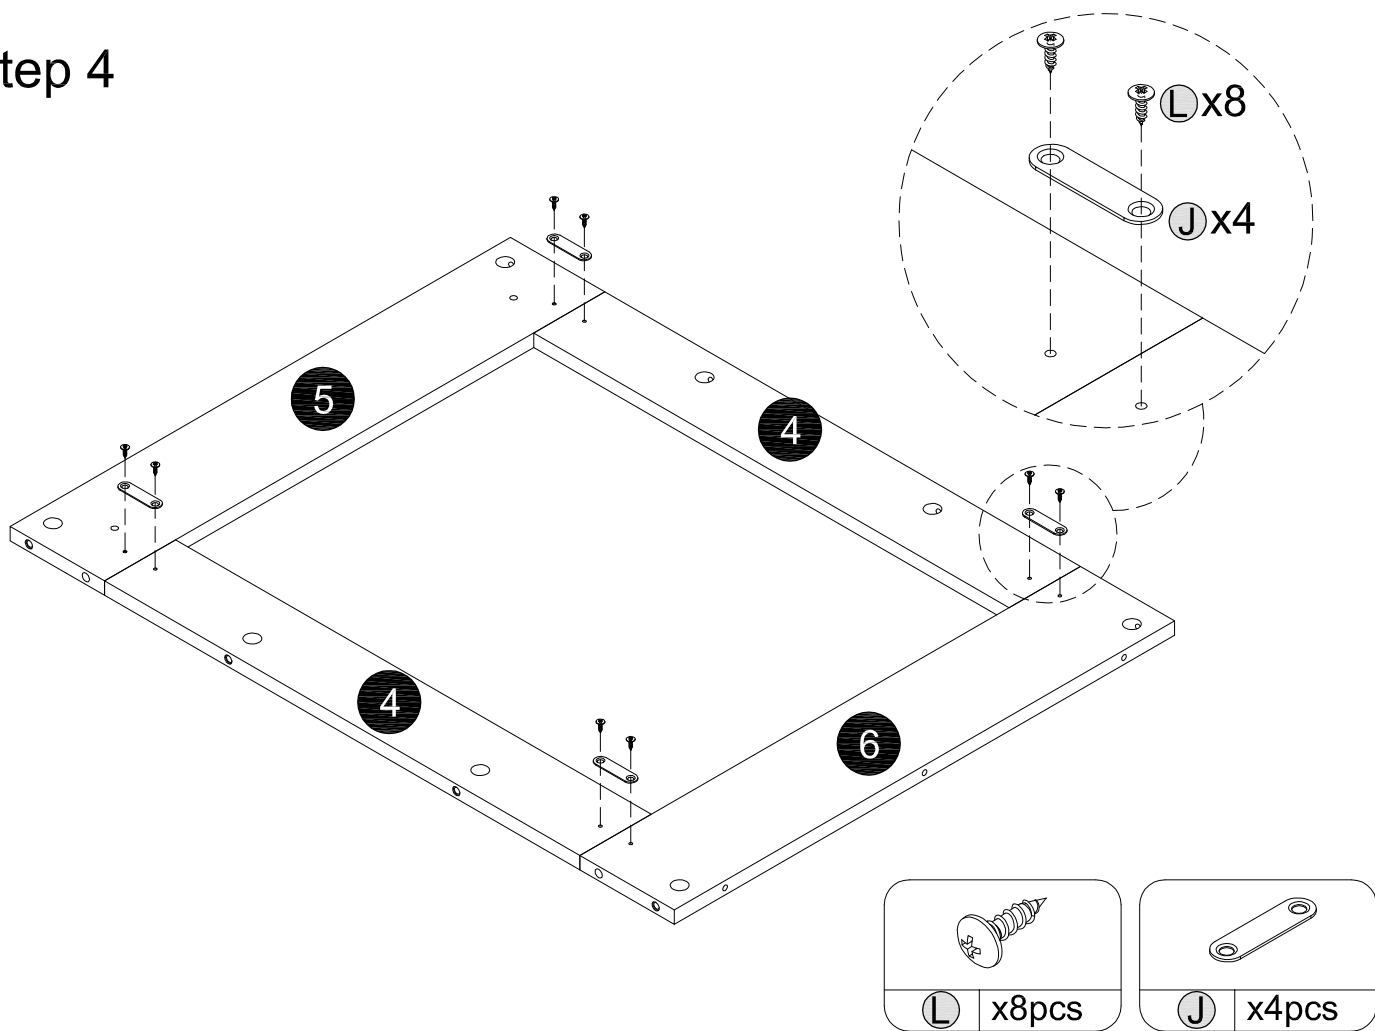




Step 5

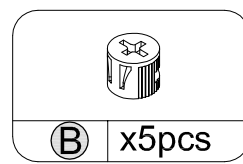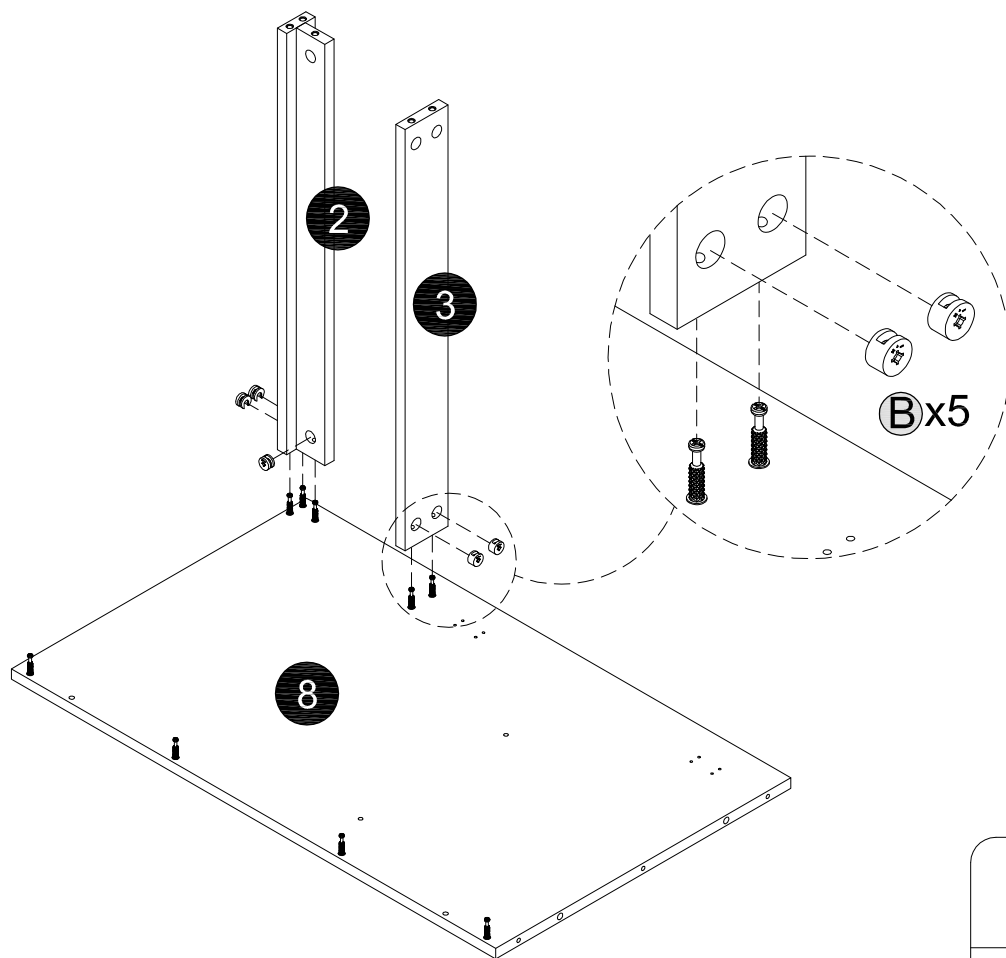





Step 6

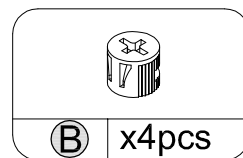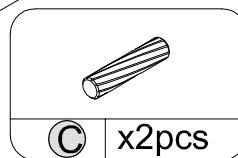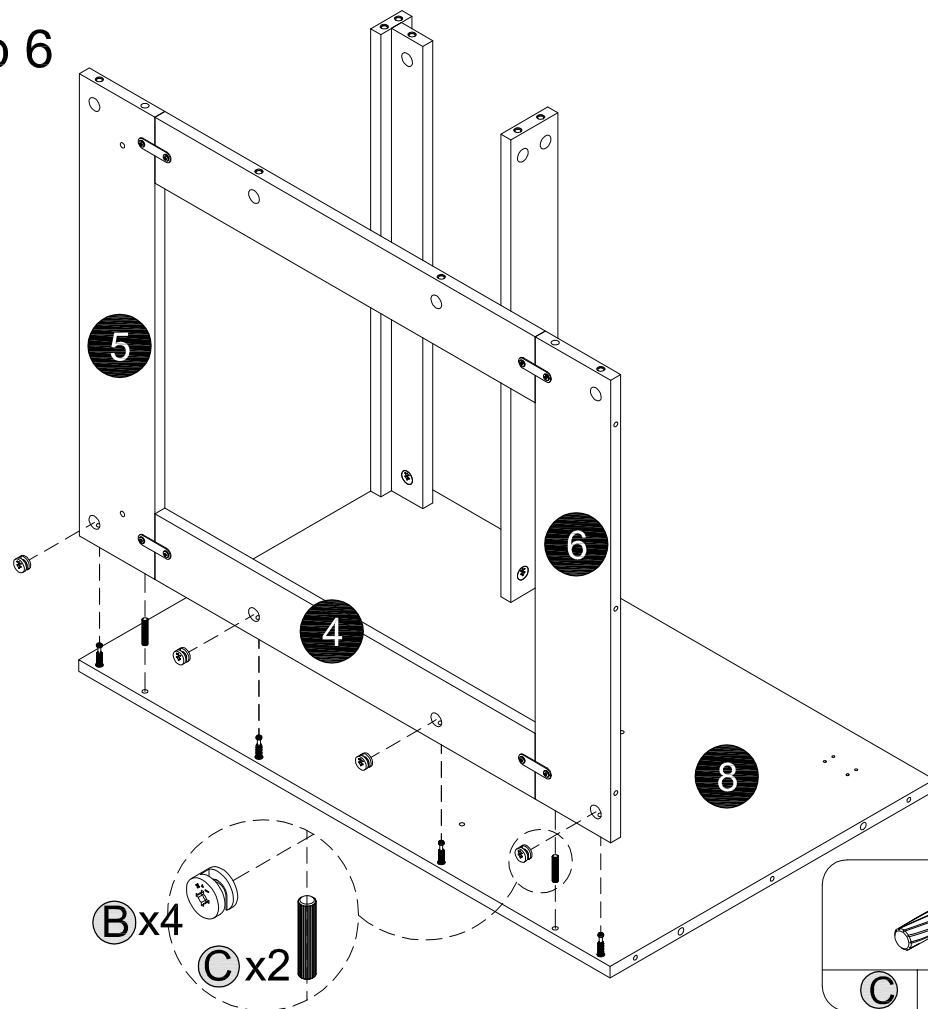


Step 7

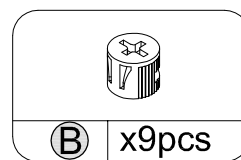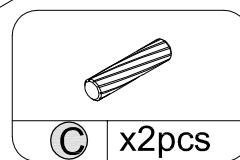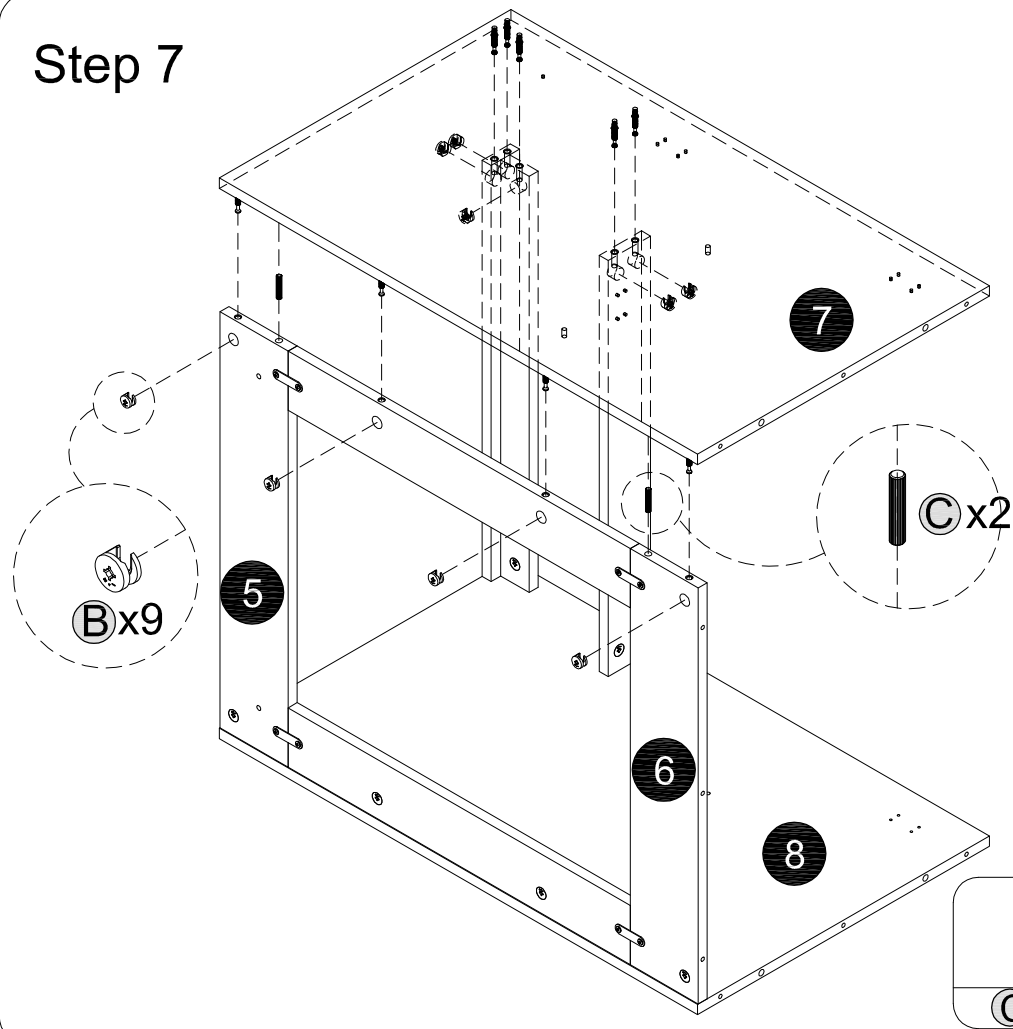


Step 8

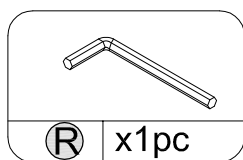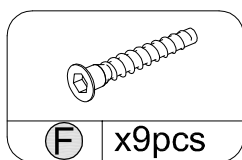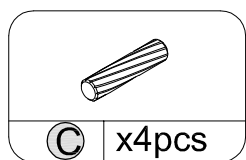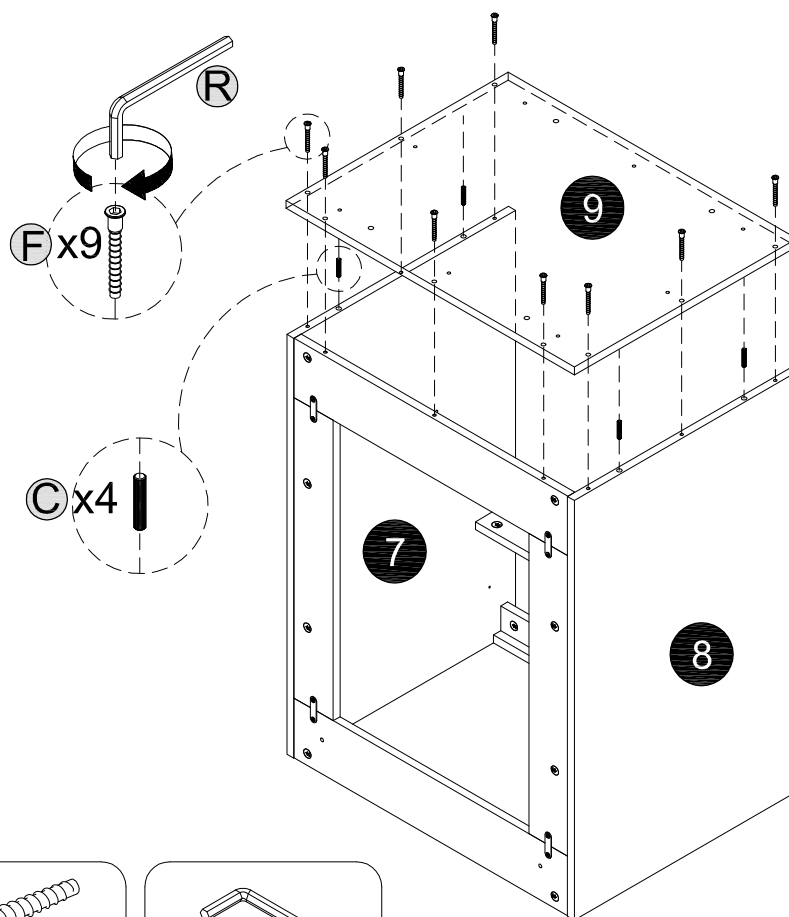


Step 9

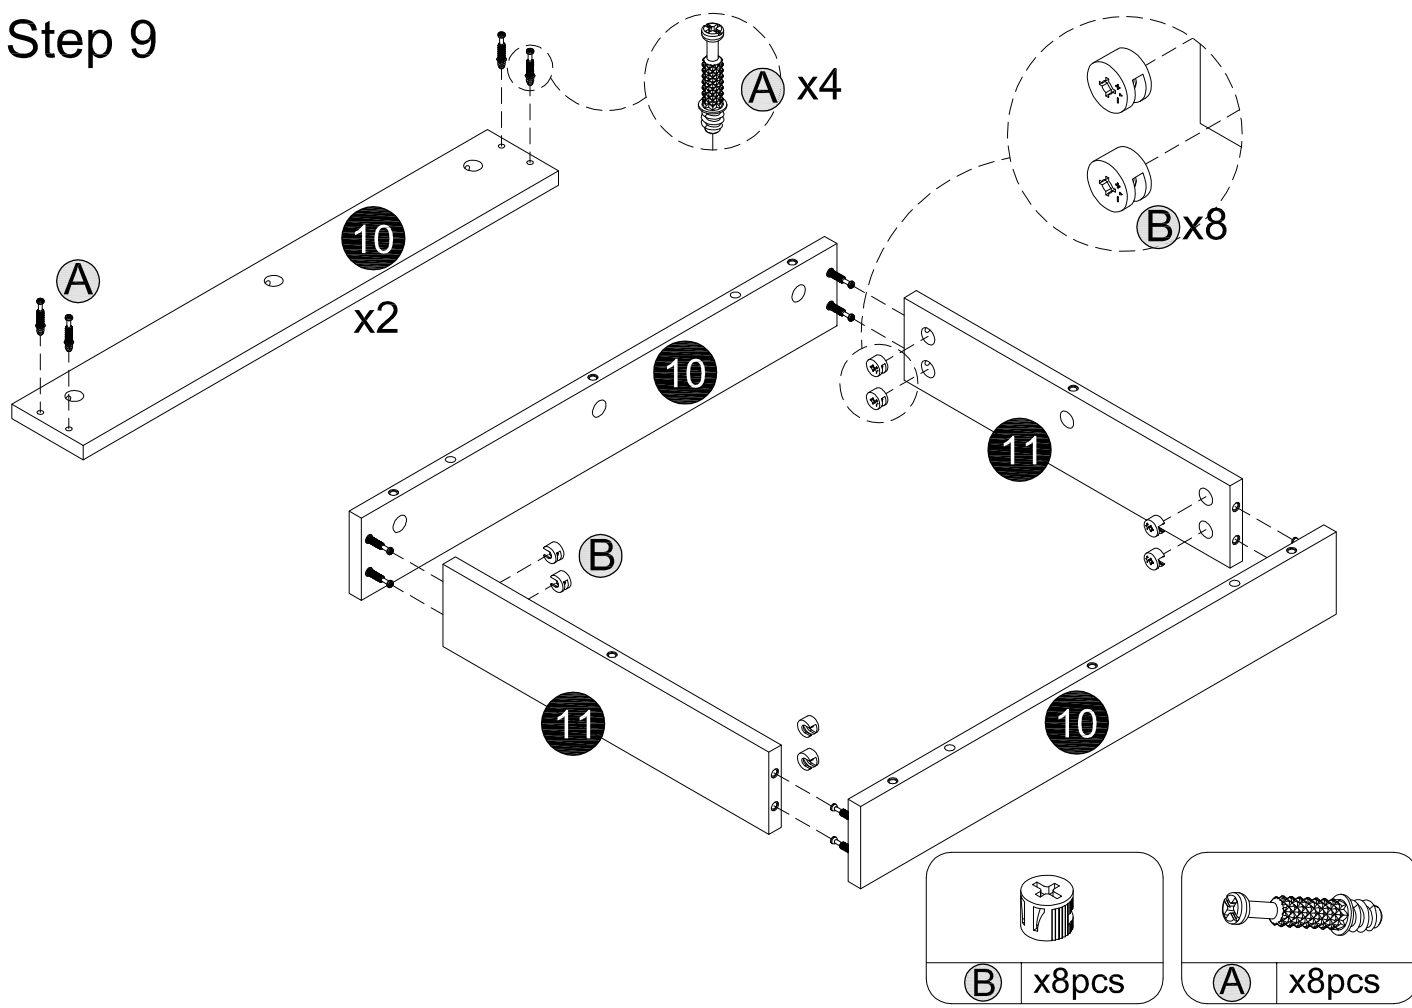


Step 10

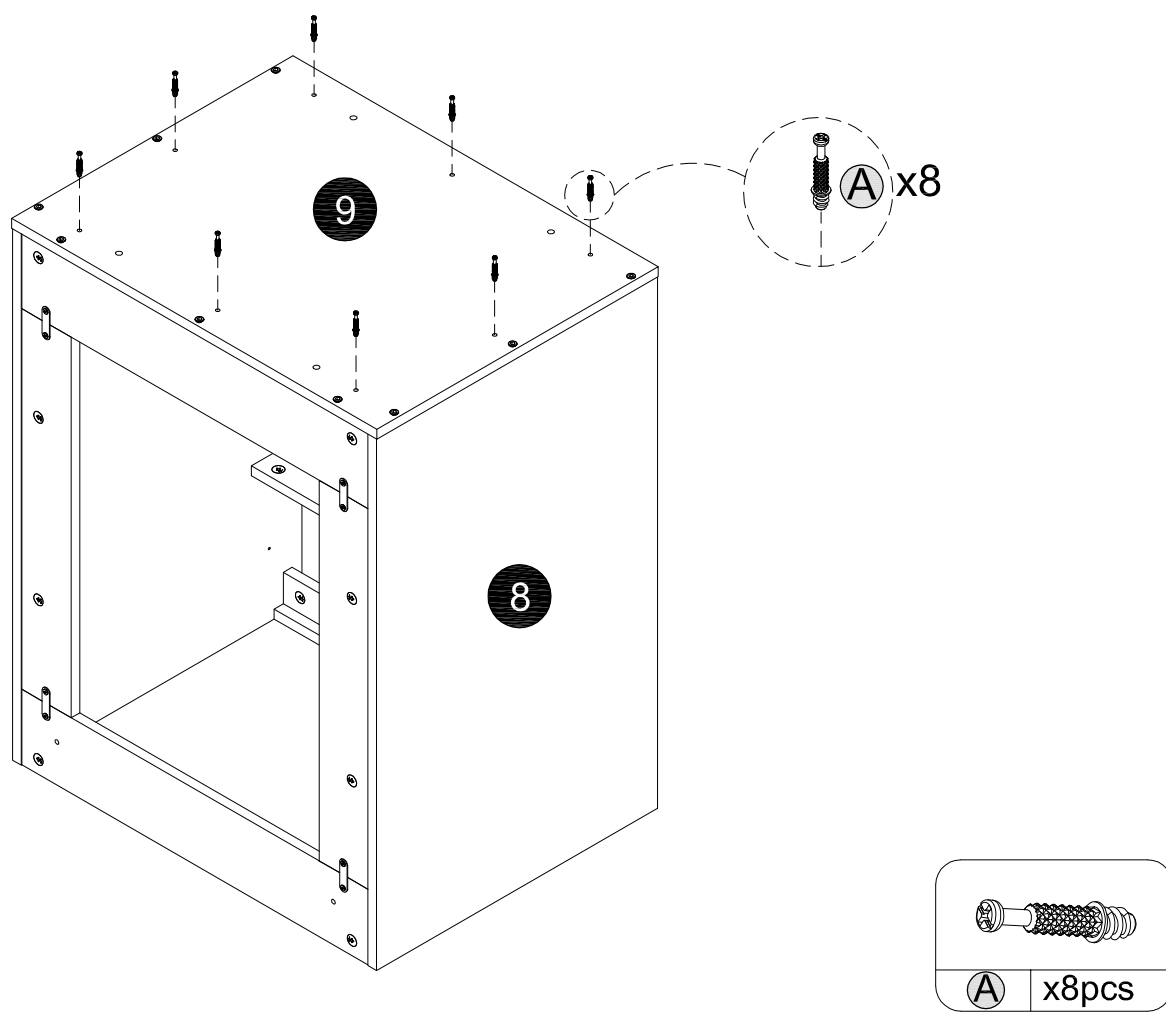


Step 11

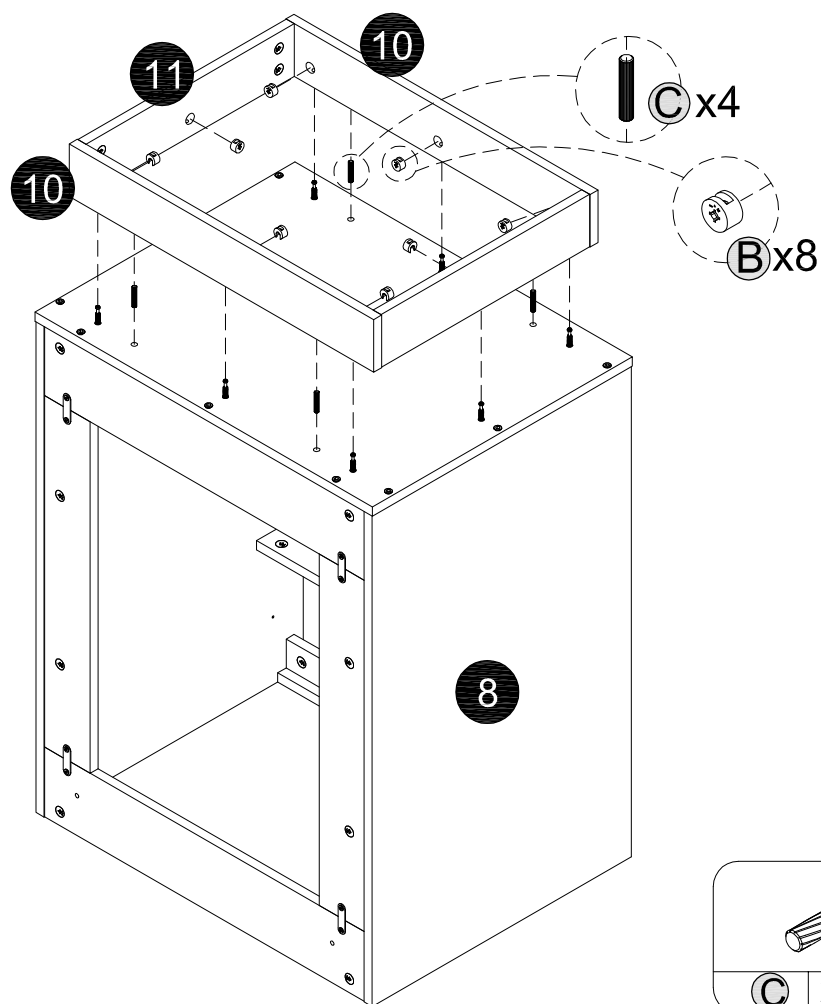


Step 12

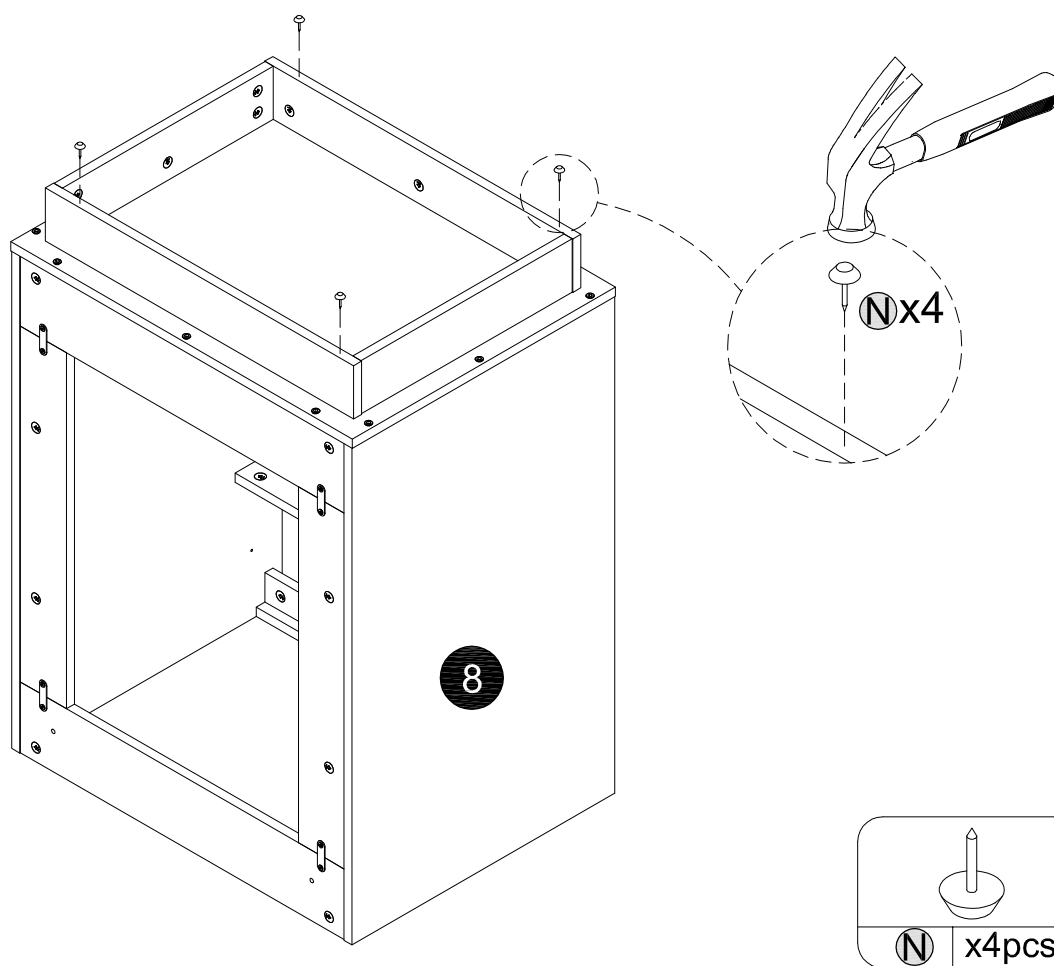


Step 13

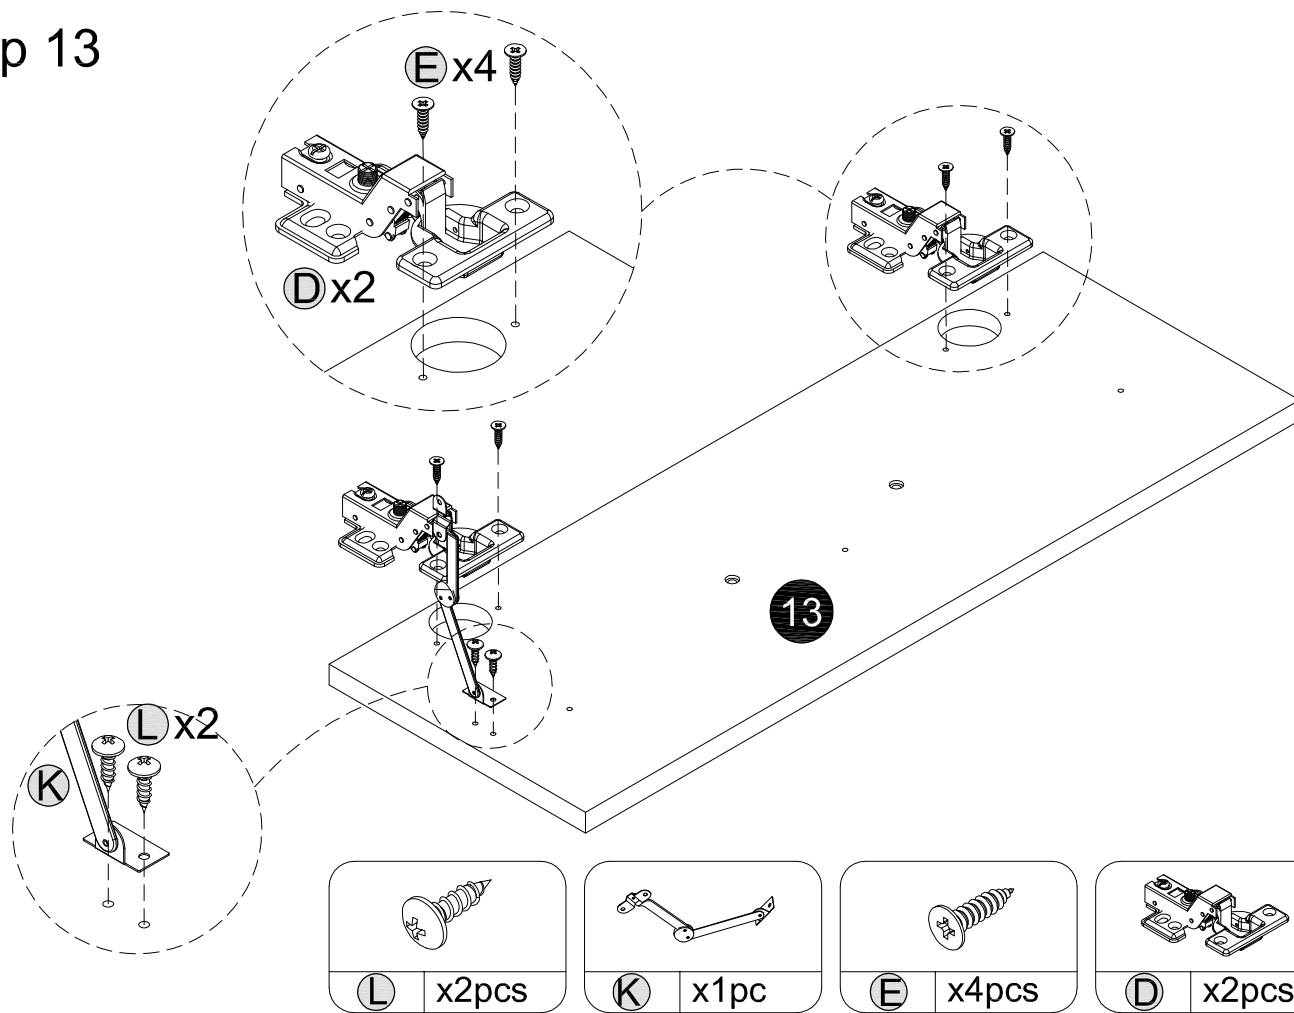


Step 14

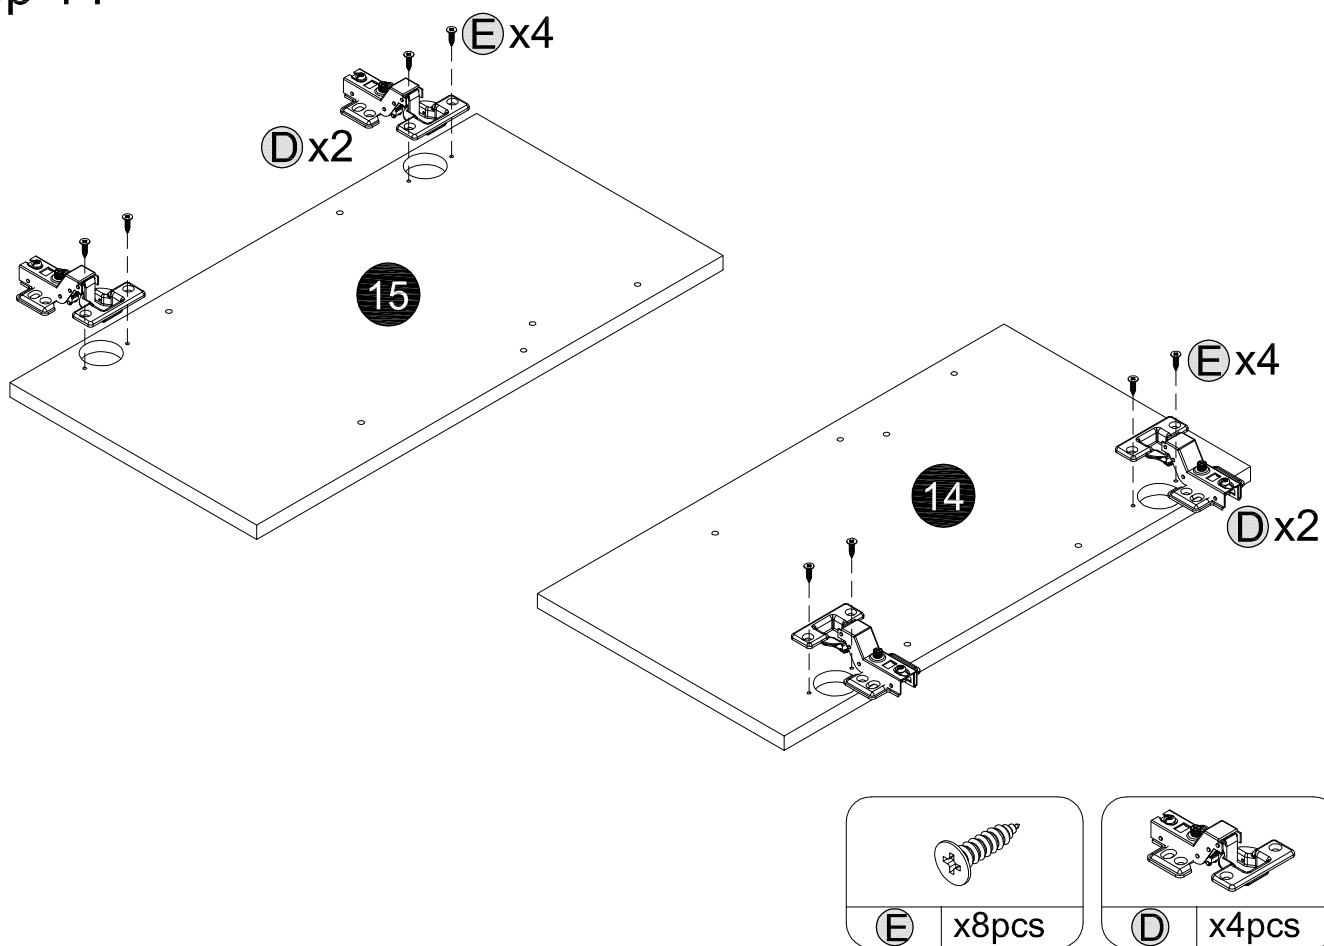

Step 15

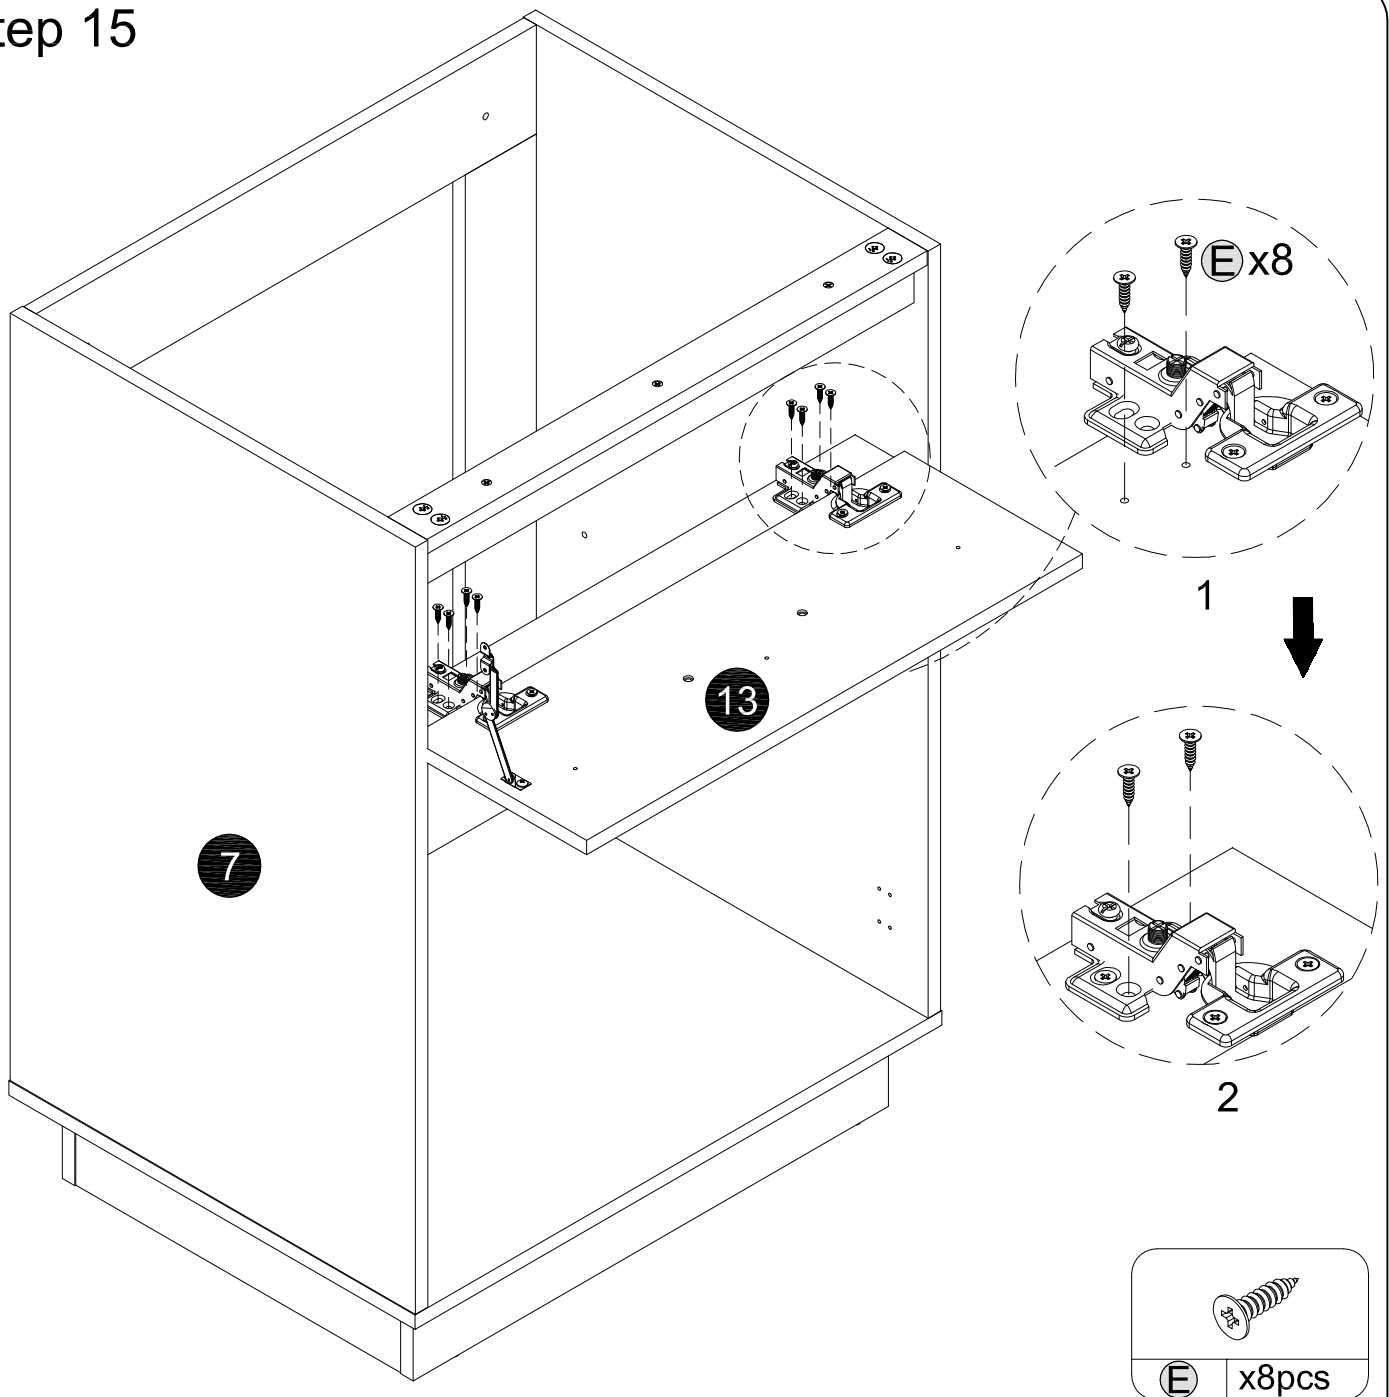


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

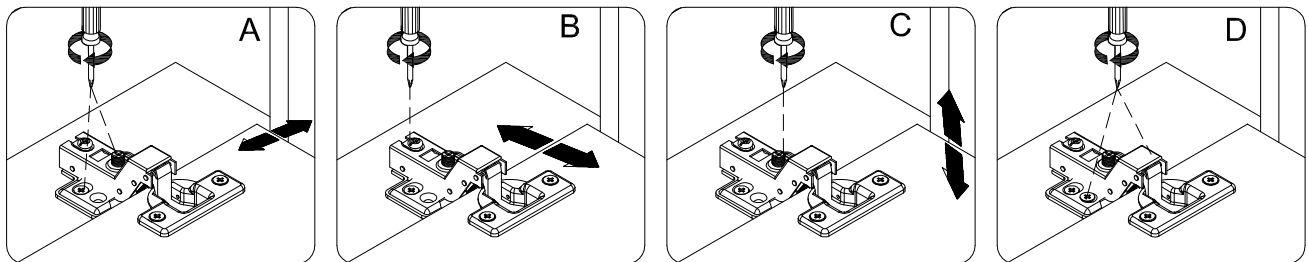


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)



Step 16

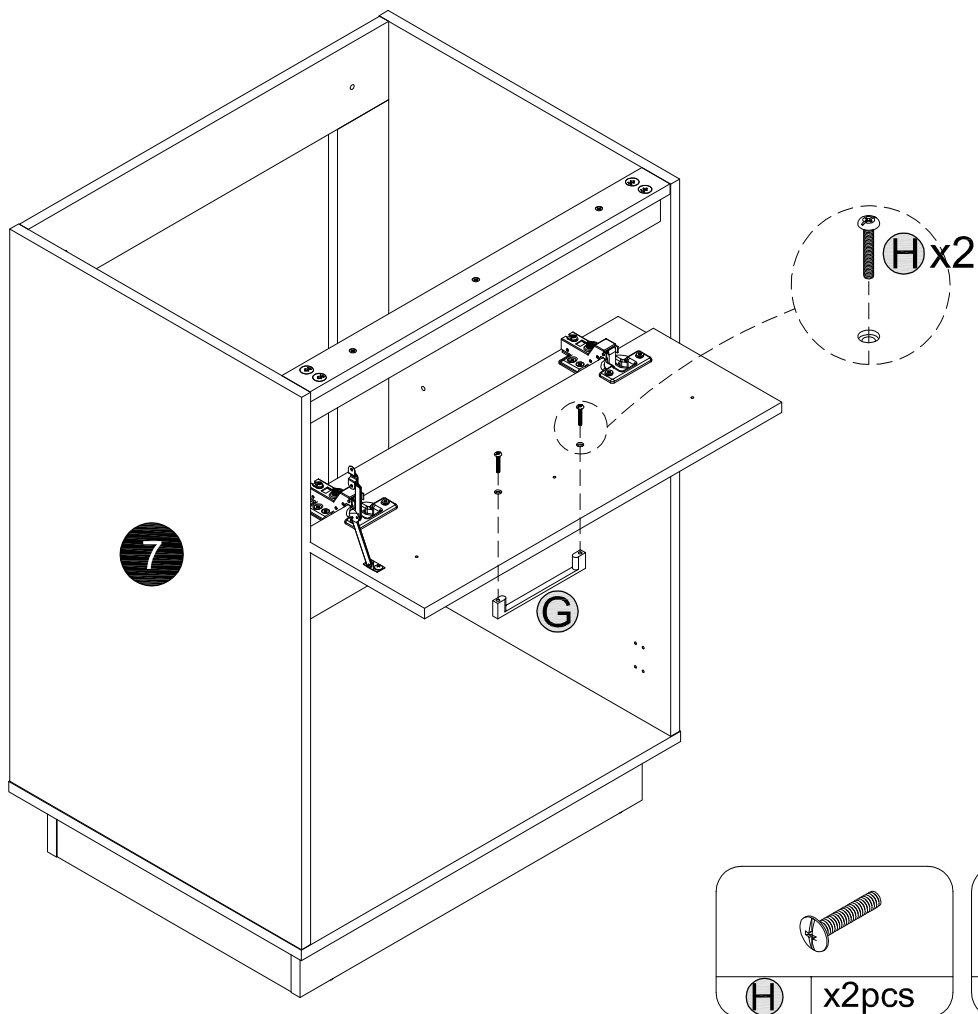



Step 17

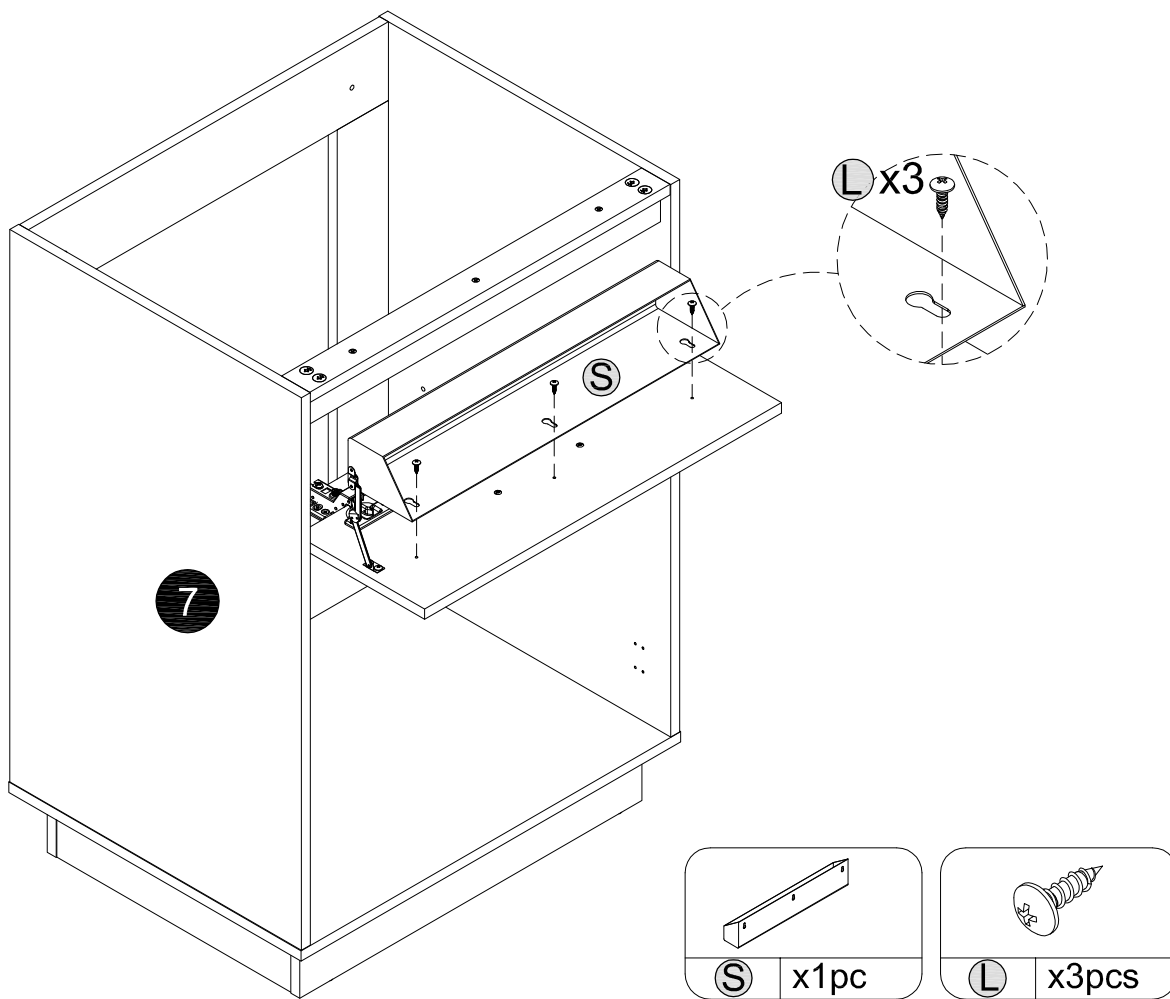




Step 18

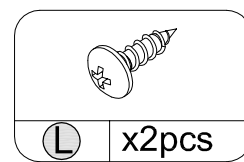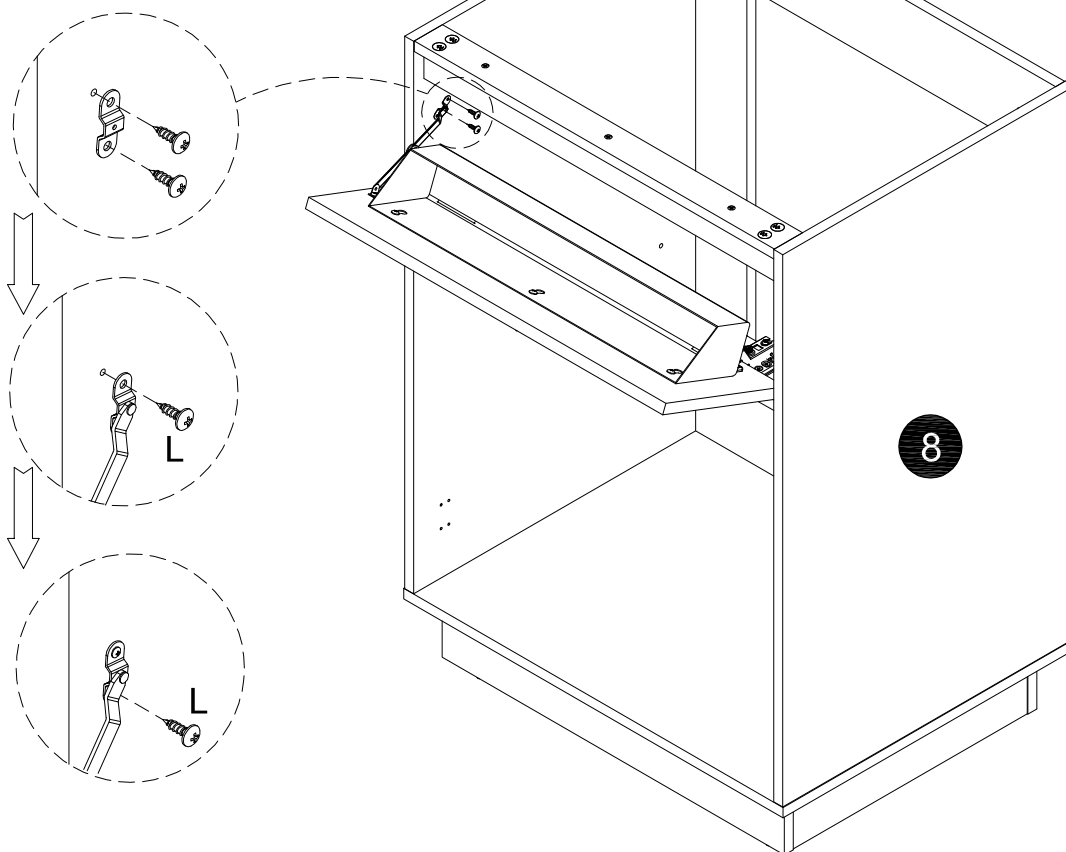



Step 19

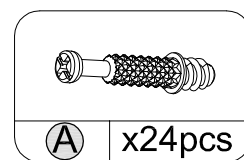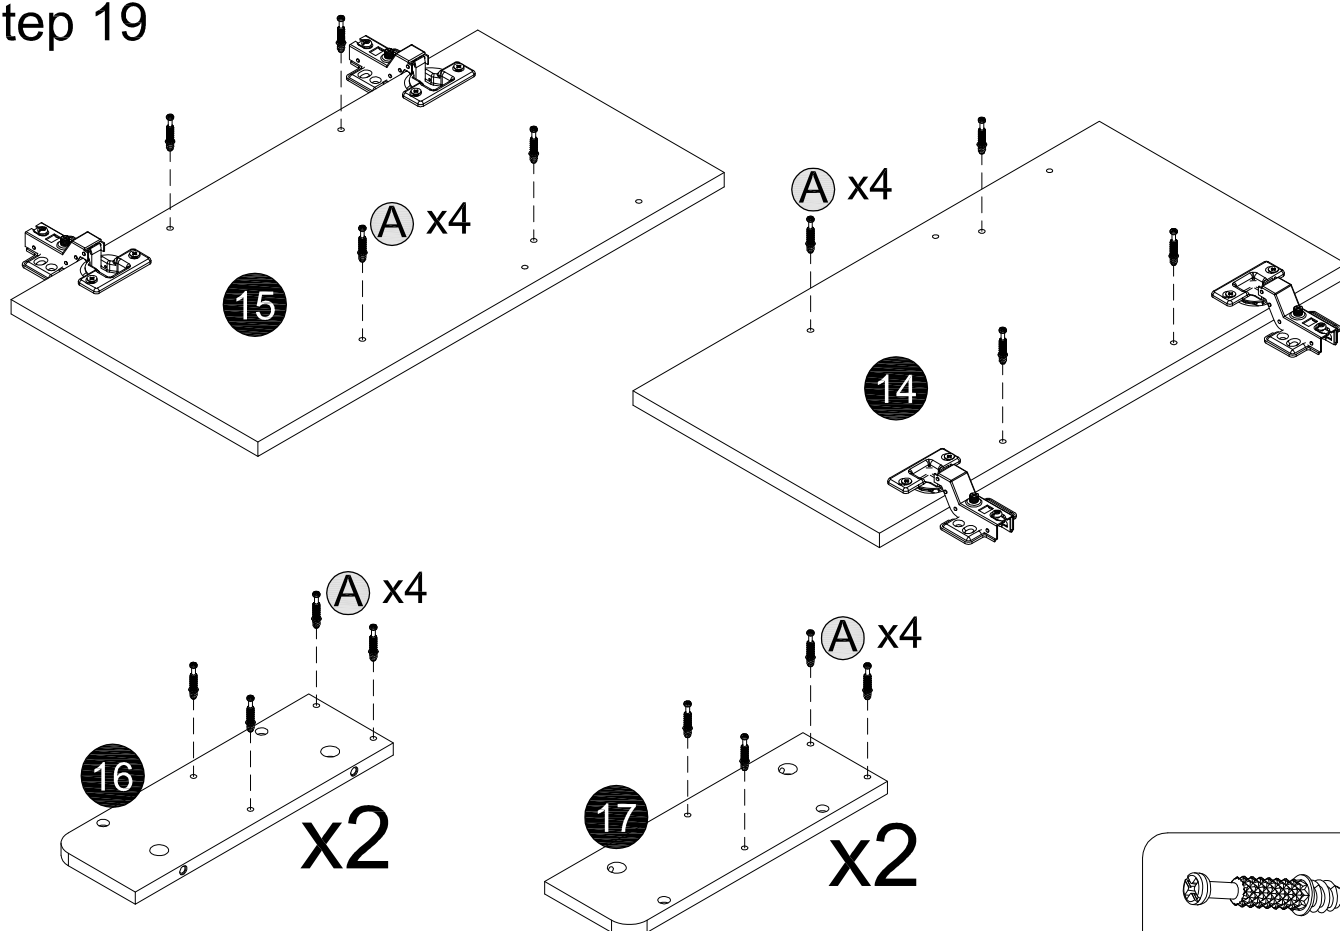



Step 20

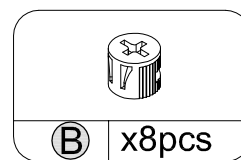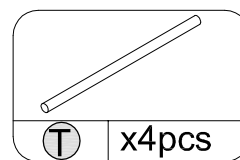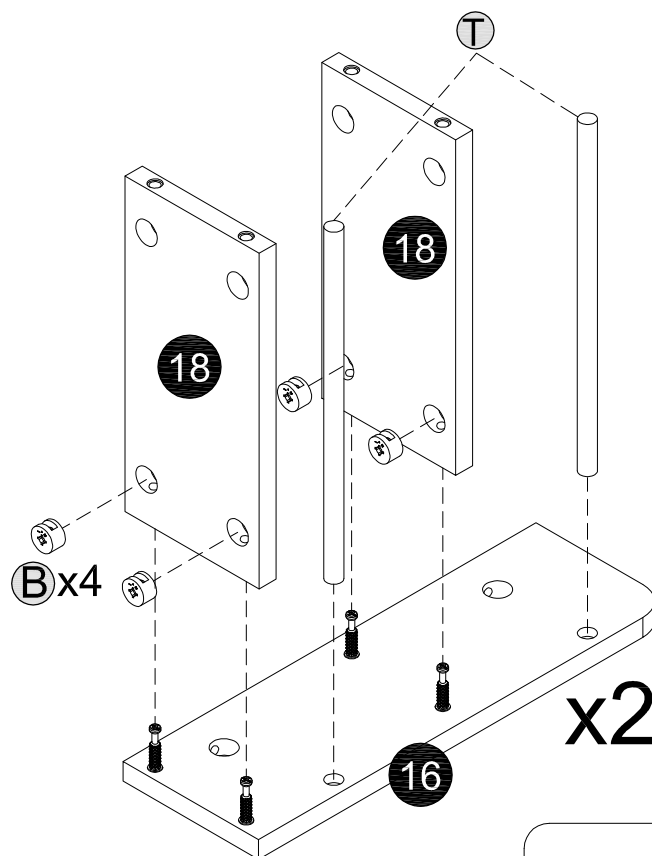



Step 21

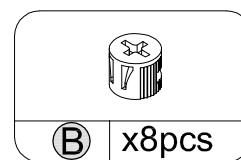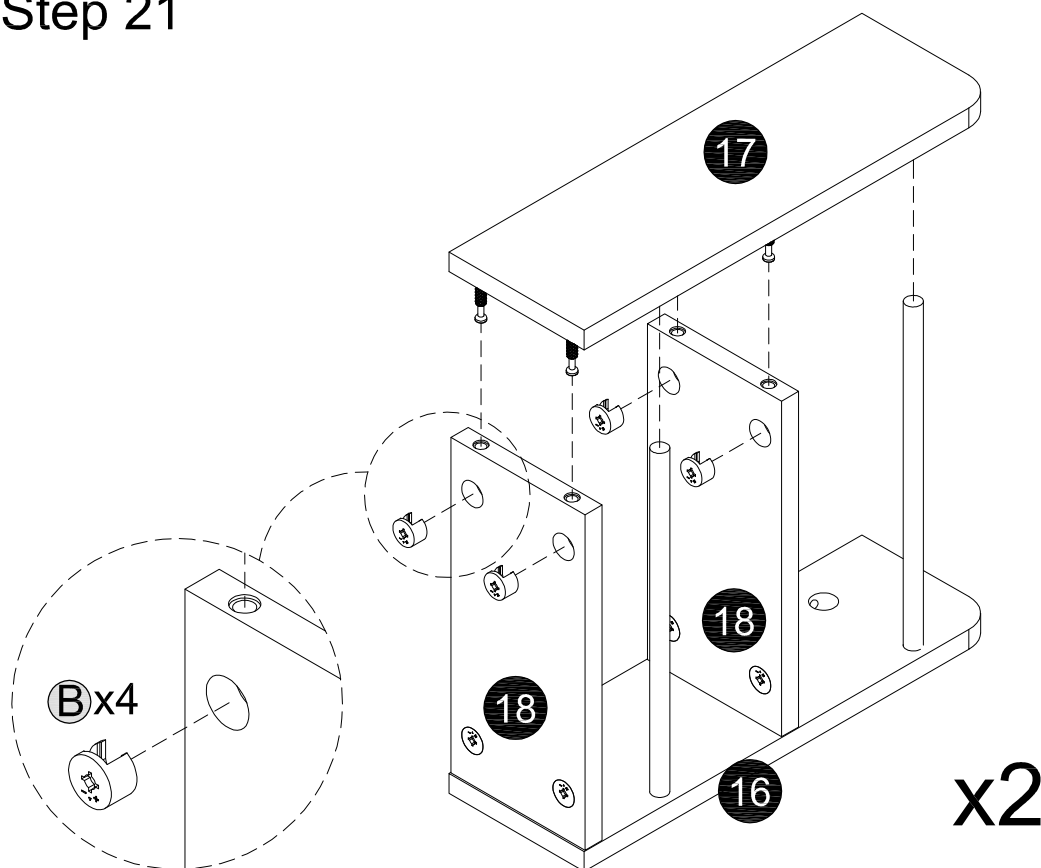


Step 22

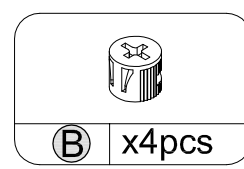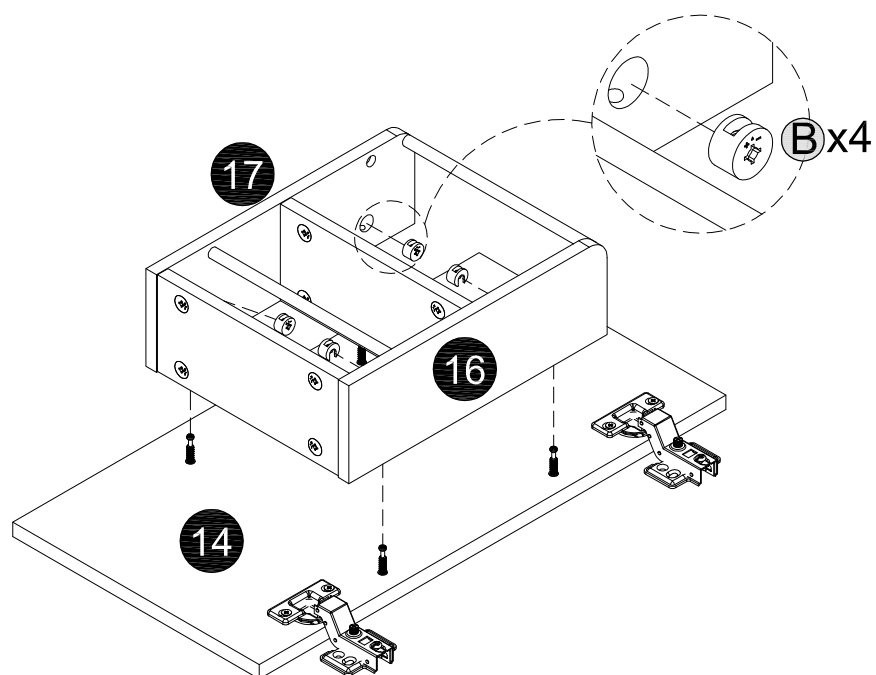


Step 23

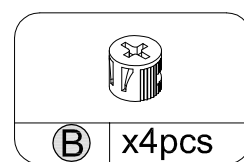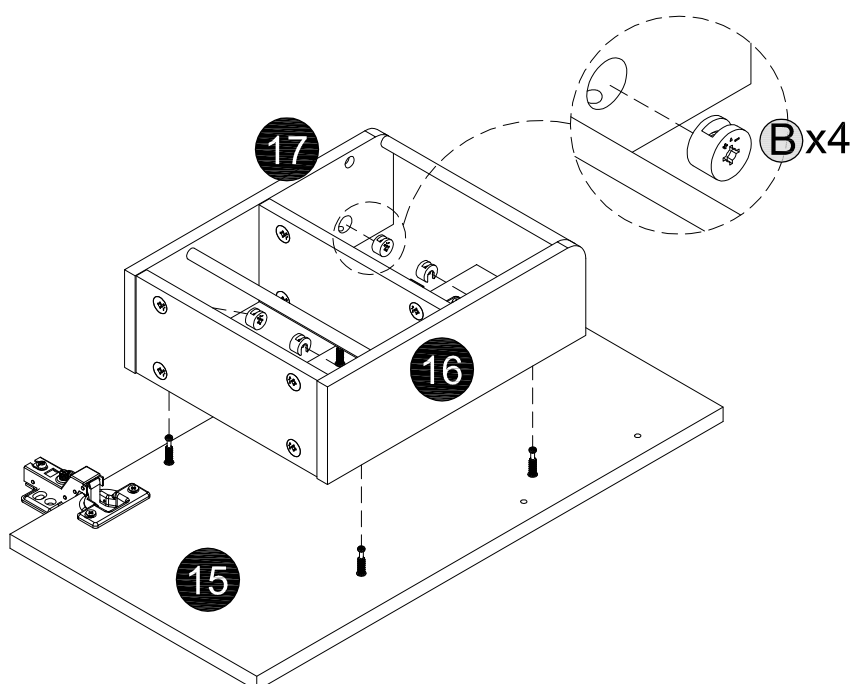

Step 24





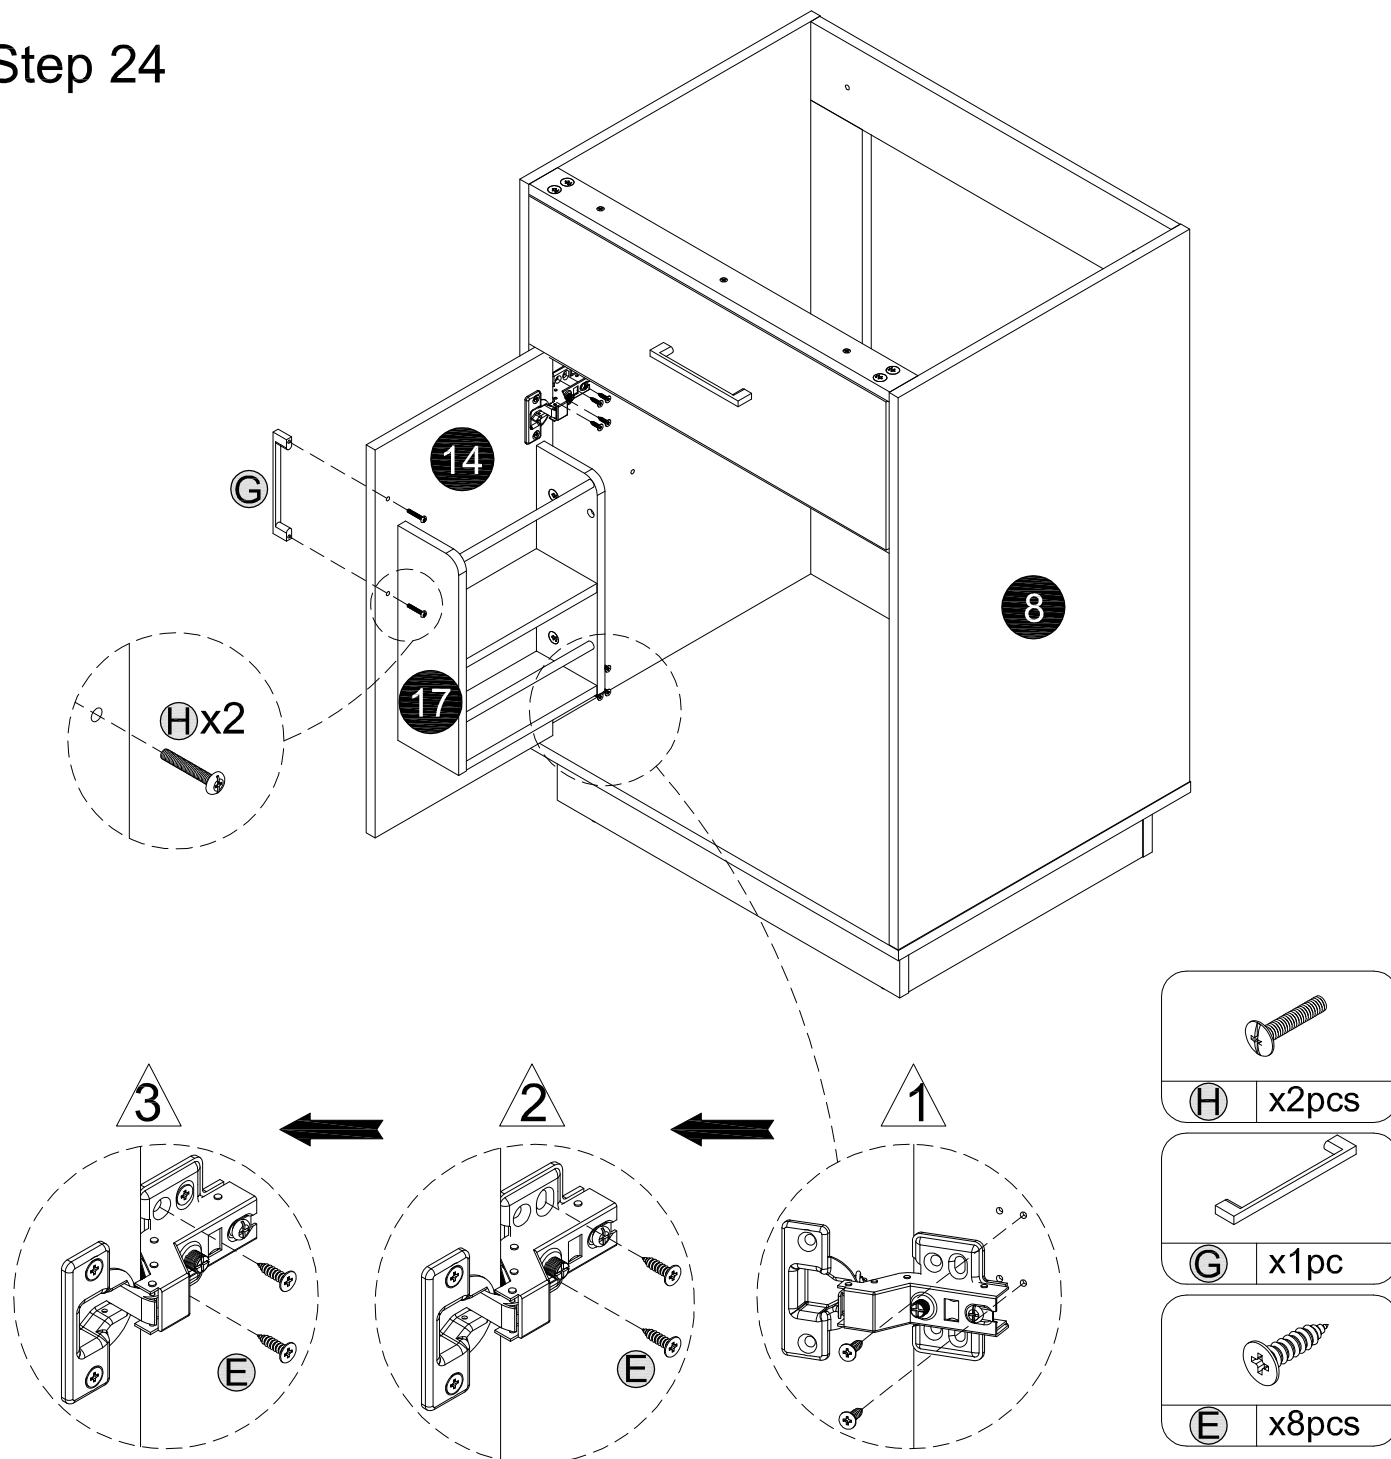


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect




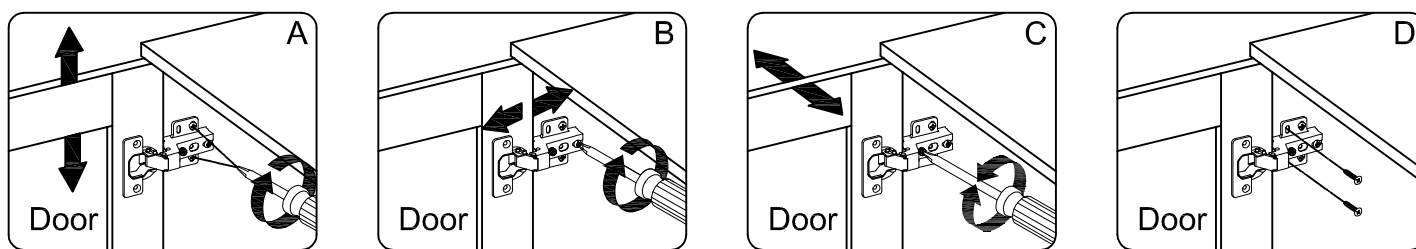


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)

Step 25

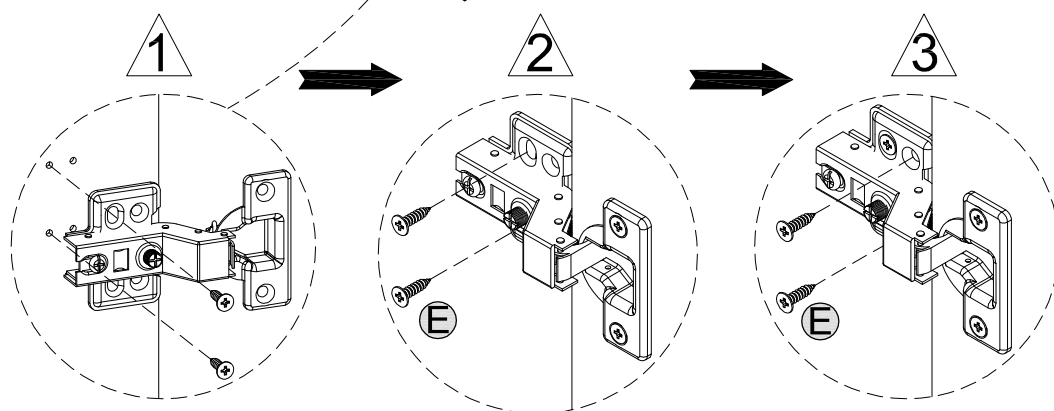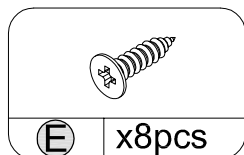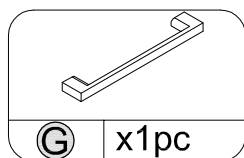
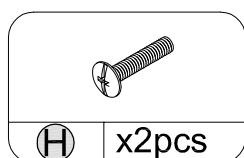
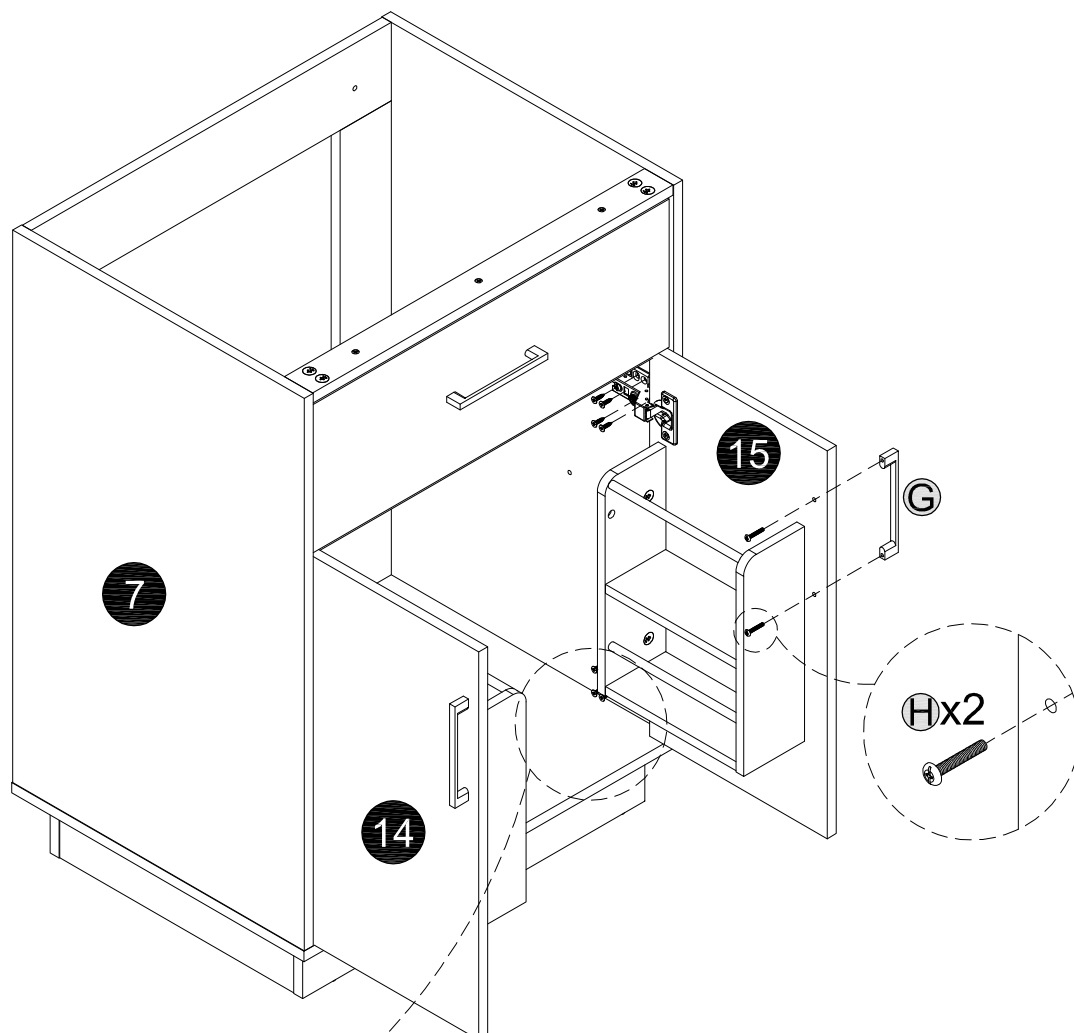


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

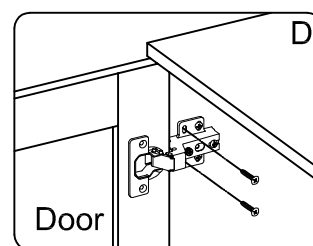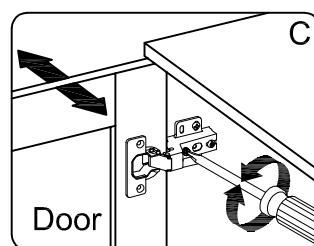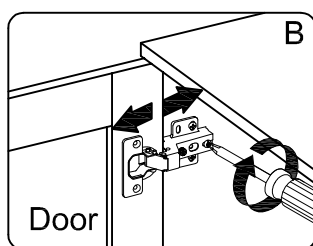
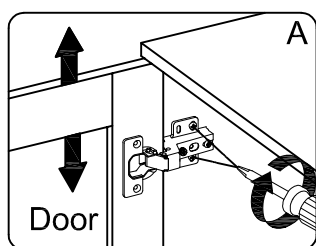


1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment finished, please tight the screws, refer to step (D)



Step 26

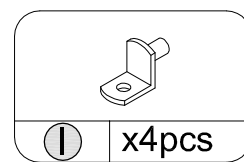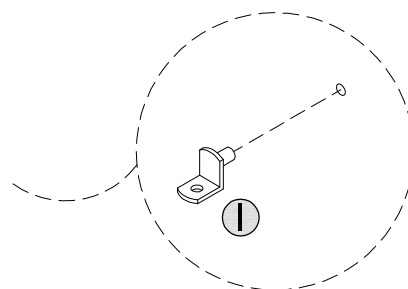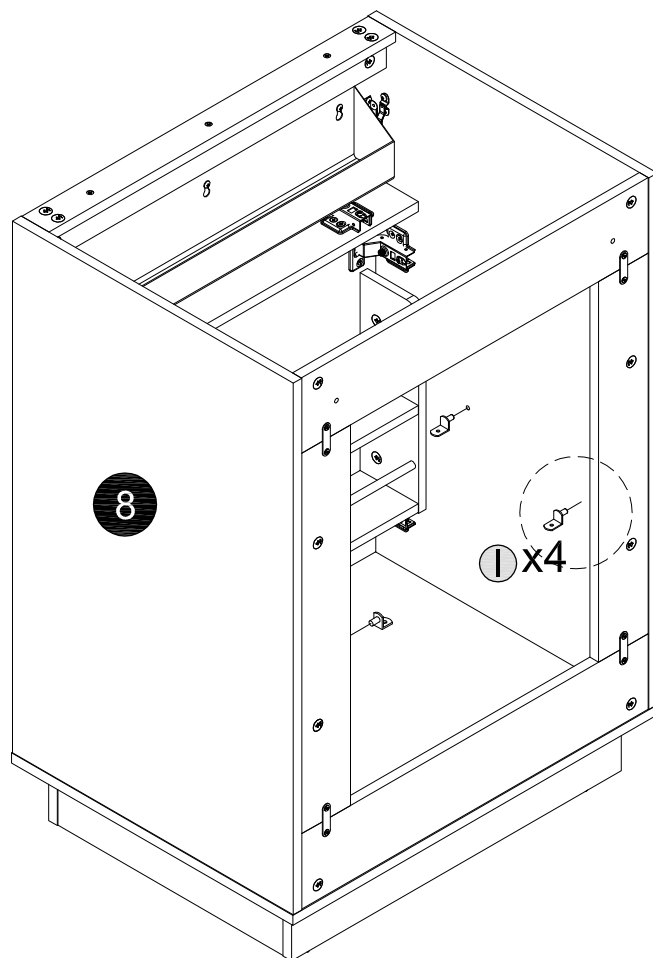

Step 27

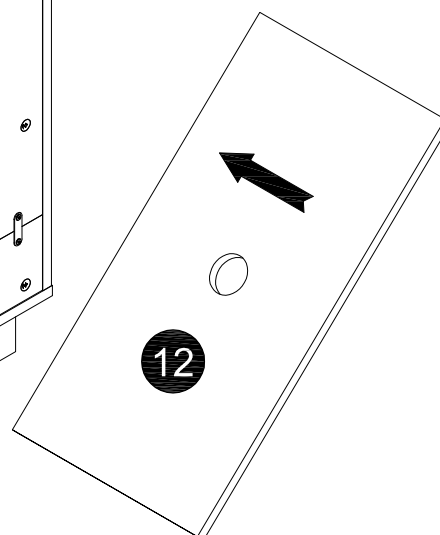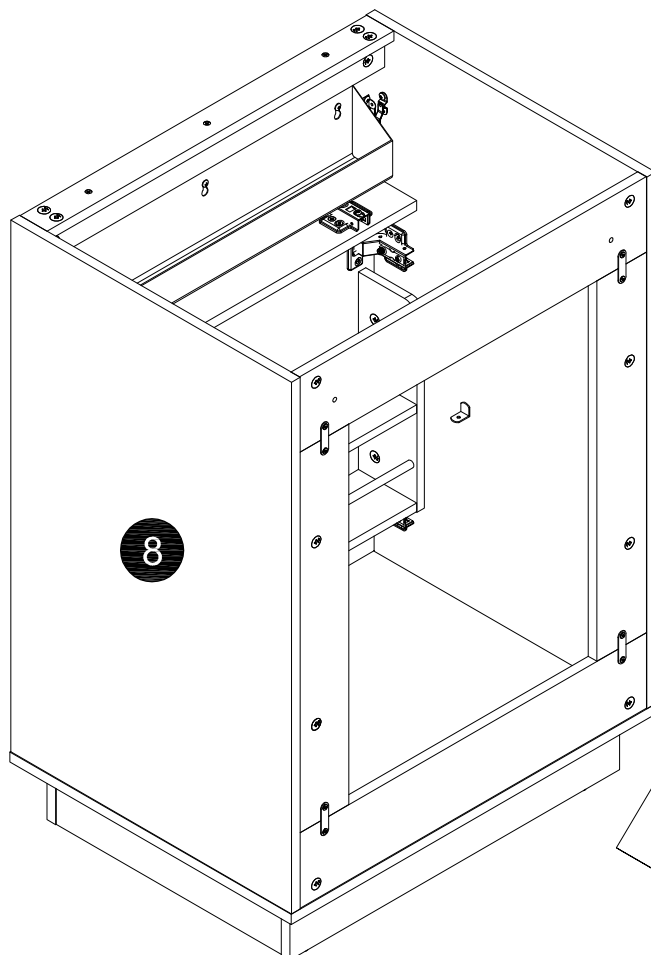

Step 28

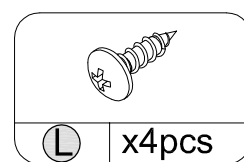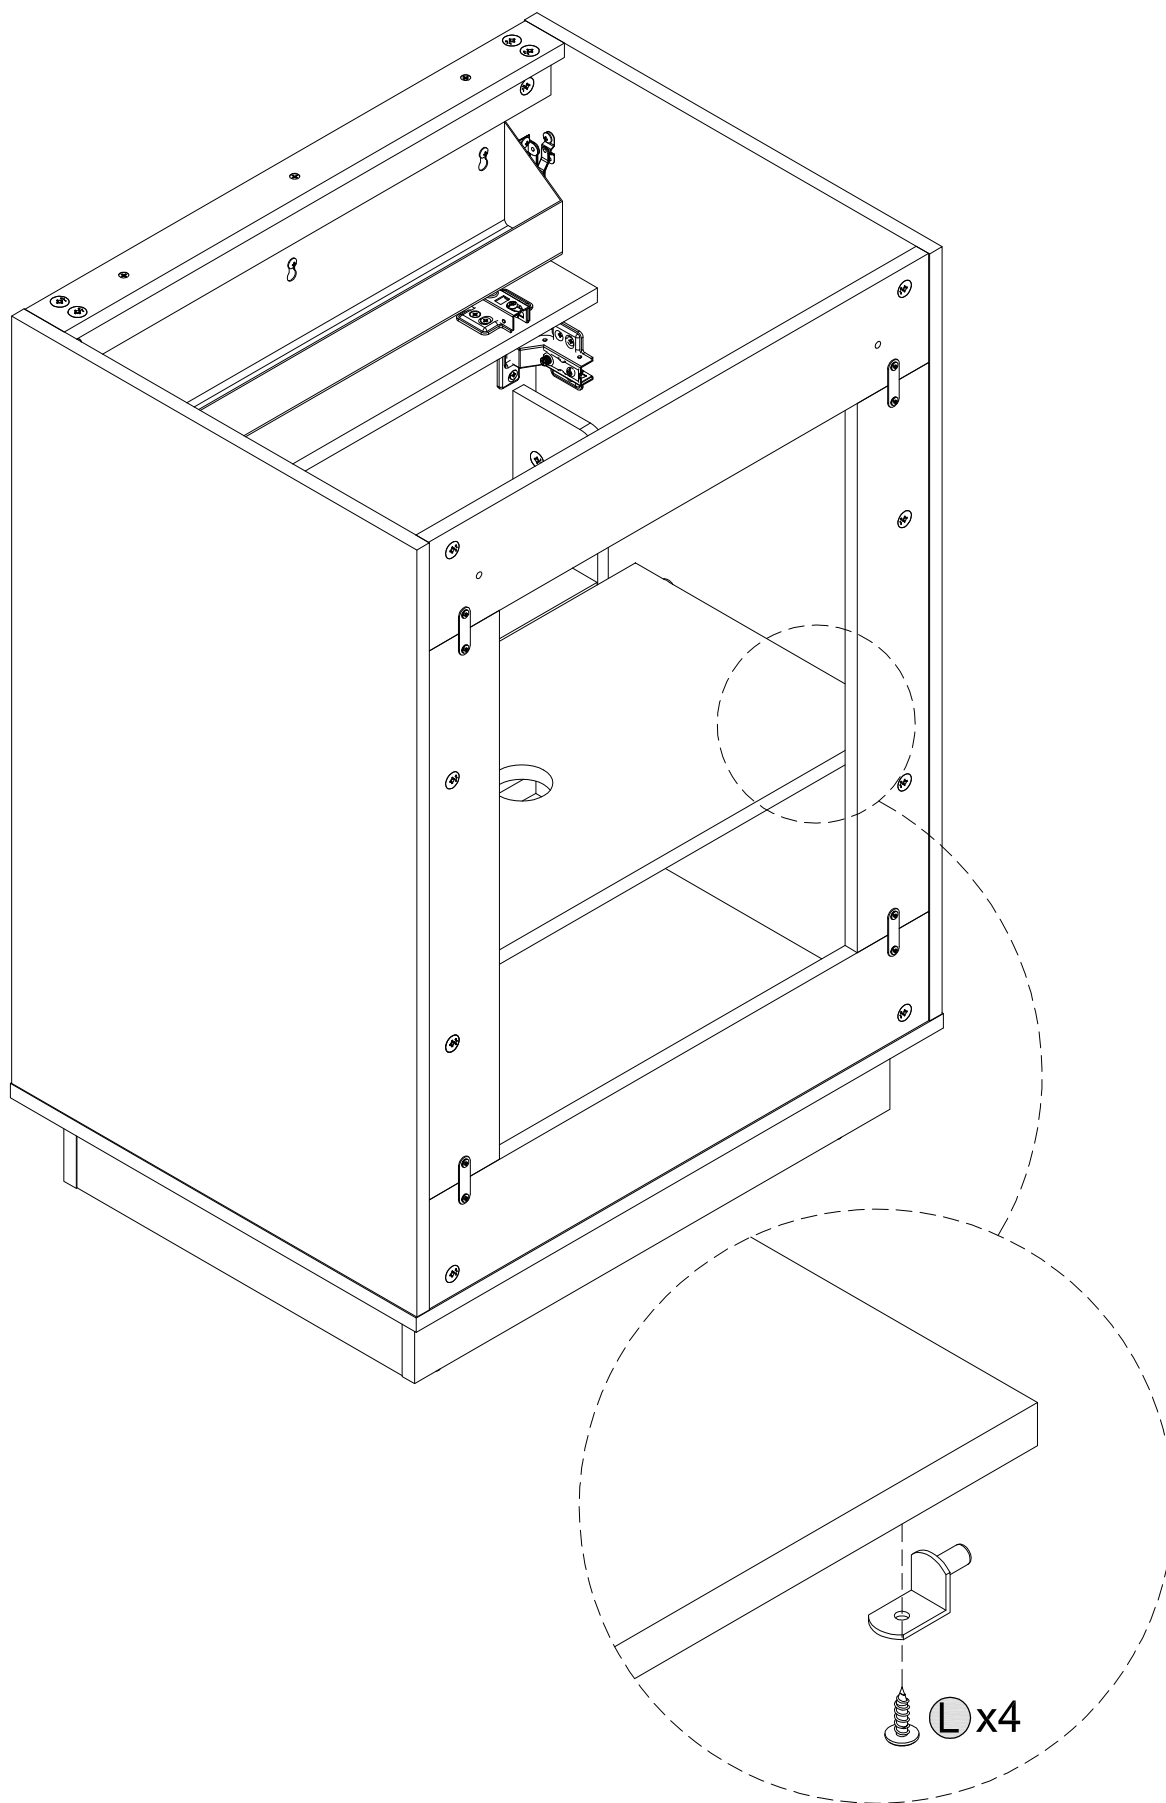




Step 29

***Note:** Clean area where the vanity will be permanently located prior to beginning installation, ensuring the vanity will not interfere with any water supply and drain lines once mounted.

*** With the help of another adult, carefully place vanity against the wall in its final location. From inside vanity, drill hole through vanity mounting area and into wall studs. Using mounting hardware (O) appropriate for your installation site, secure vanity to wall stud**

*** WARNING**


Vanity **MUST** be secured to wall

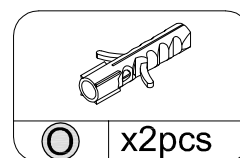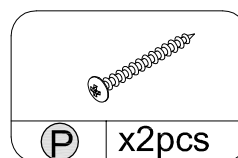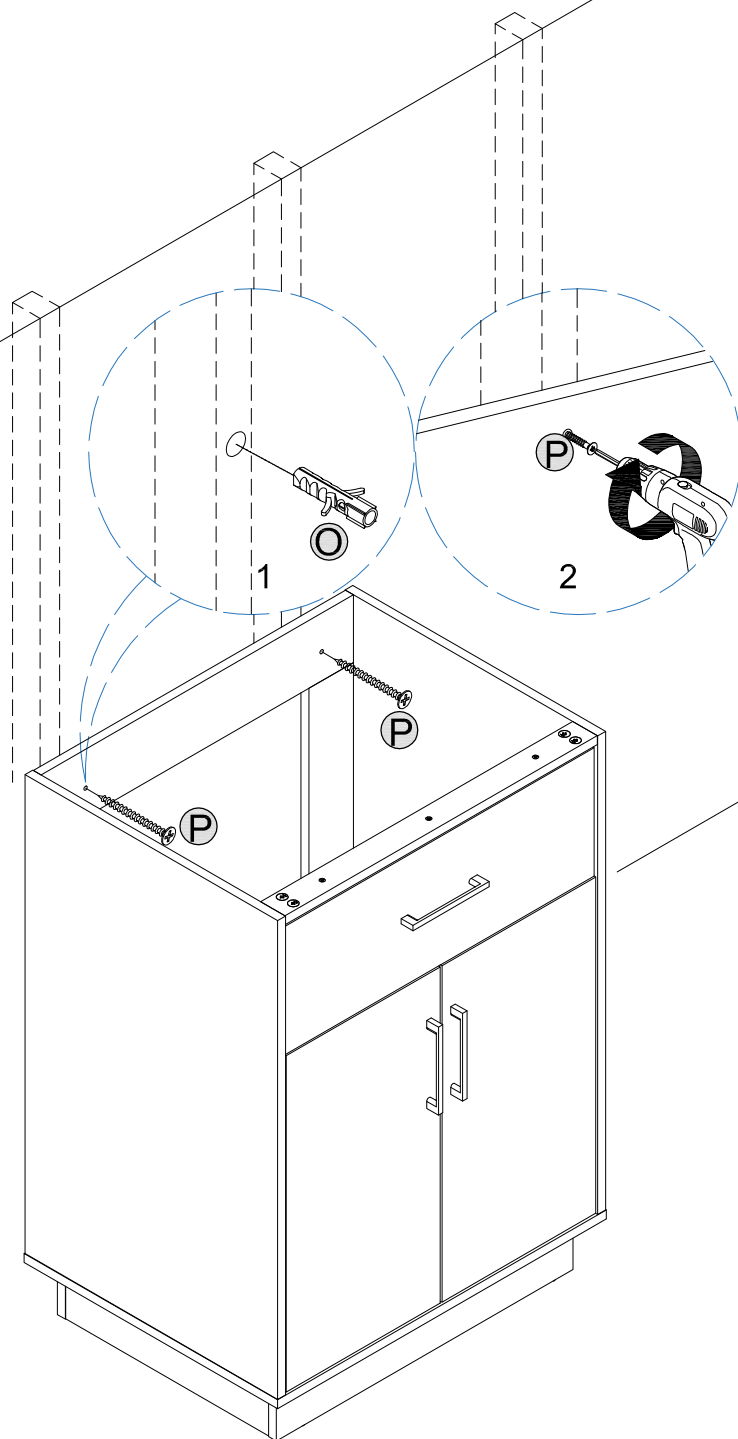



Step 30

Note: At this stage it may be easier to install the faucet and drain kit (not included) to top (19) per the manufacturer's instructions.


* Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top (19) onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

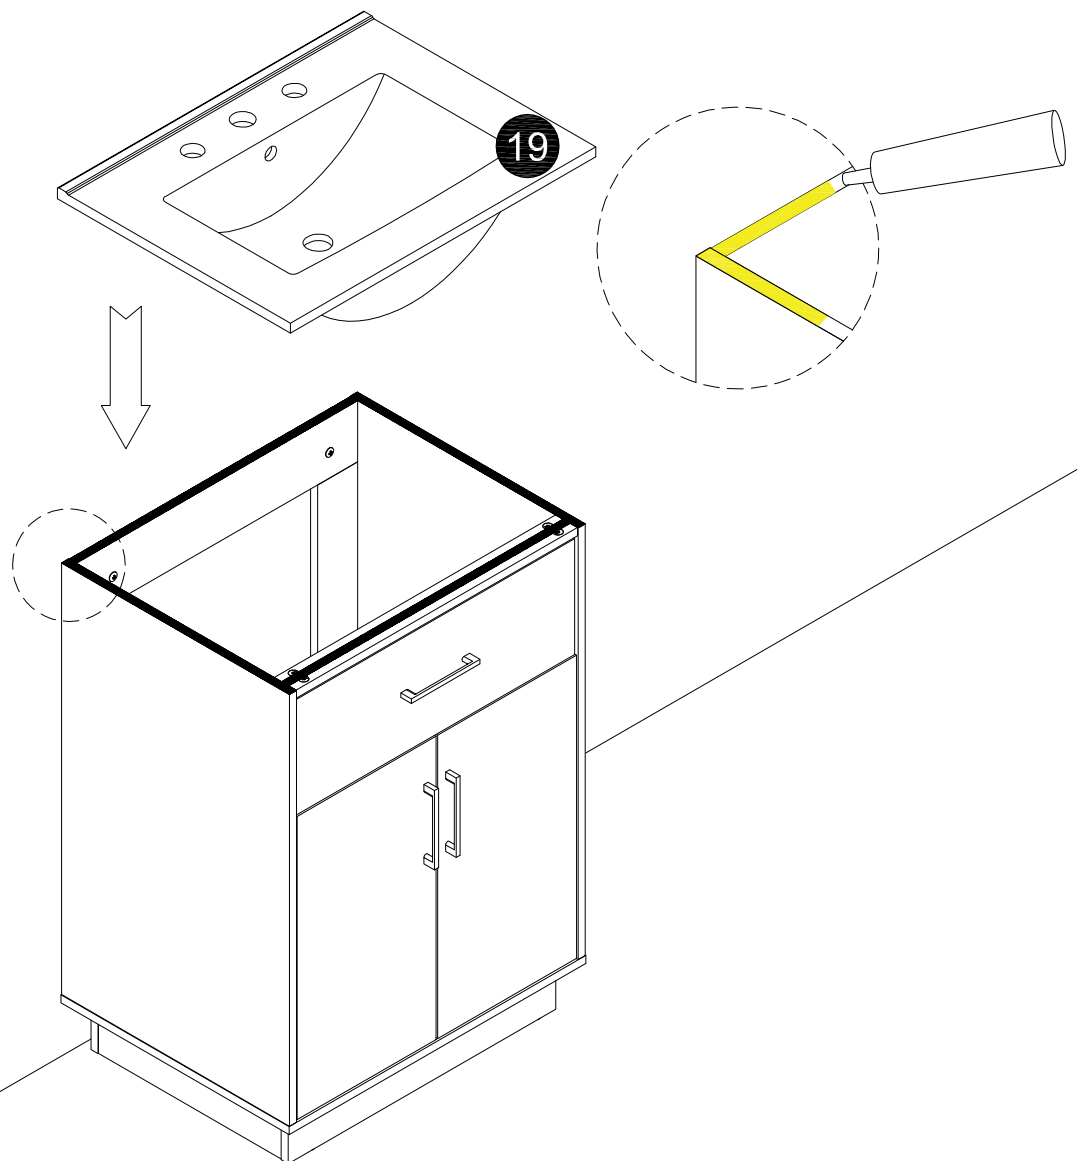

Step 31

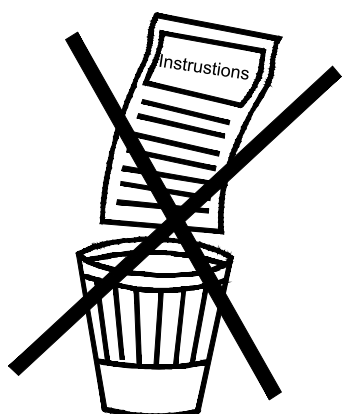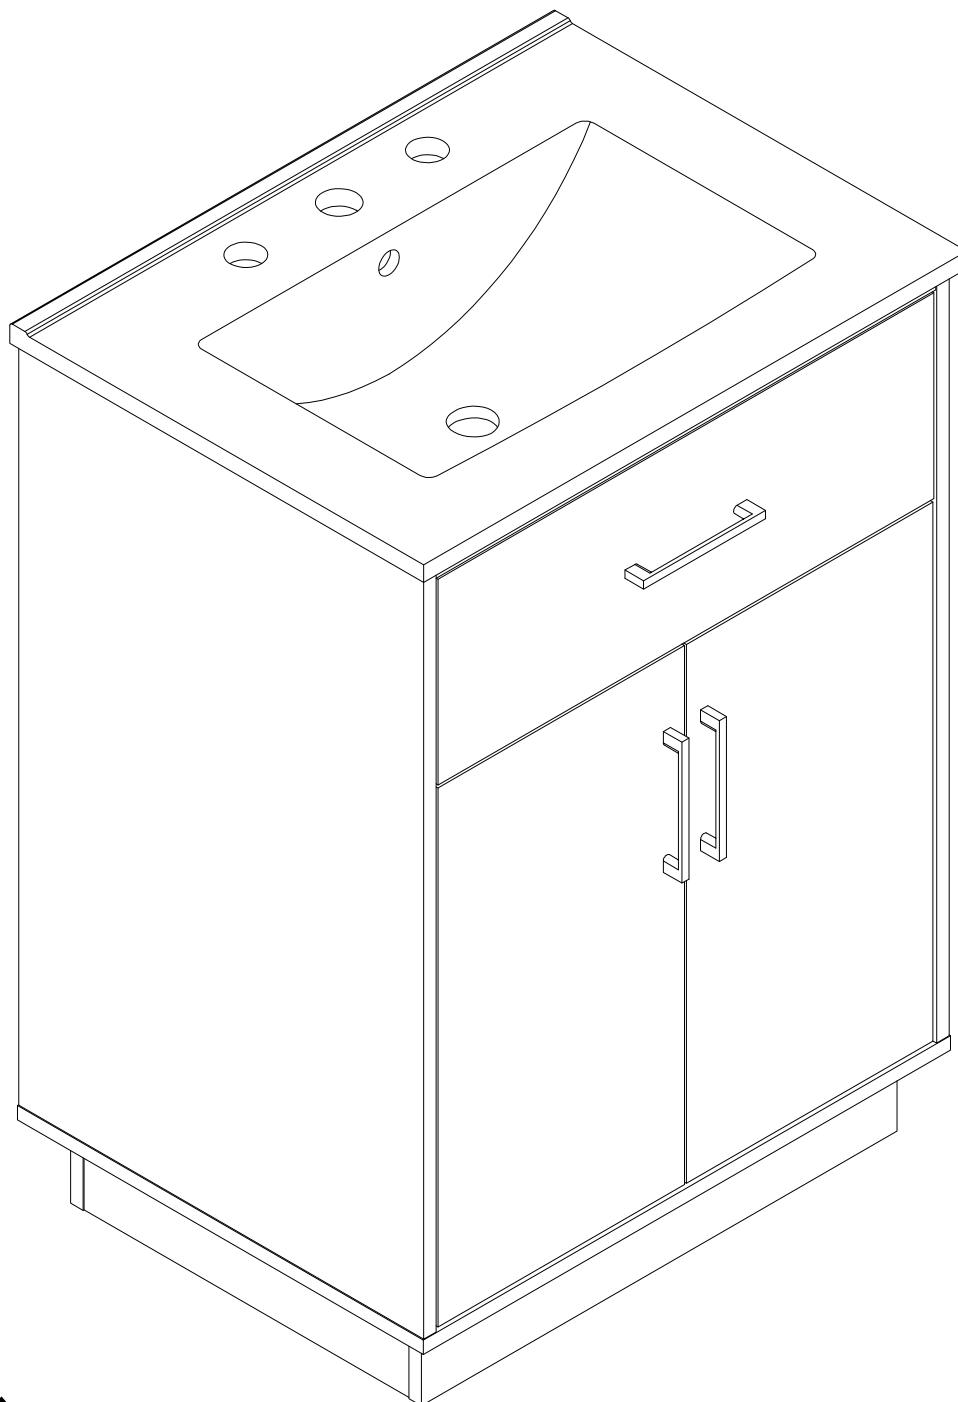


HINGE ADJUSTMENTS

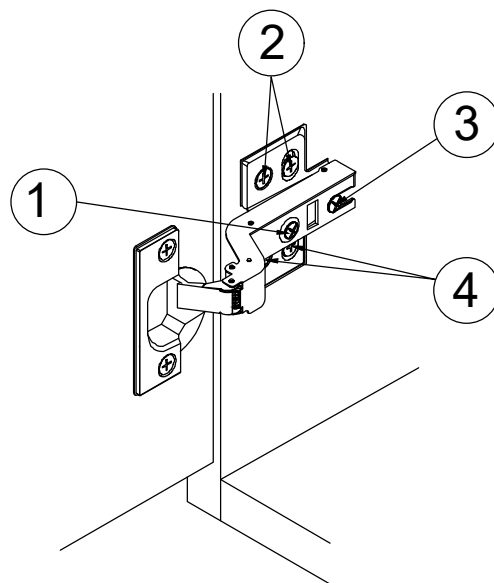


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

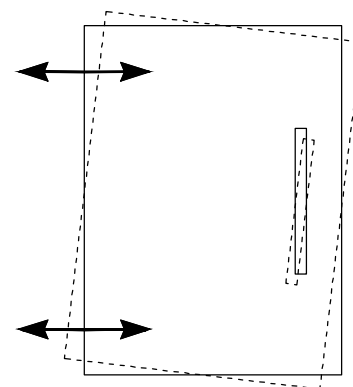

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

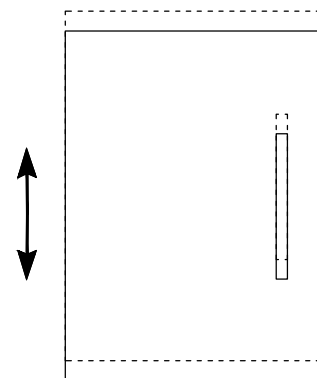

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

