


ASSEMBLY INSTRUCTION

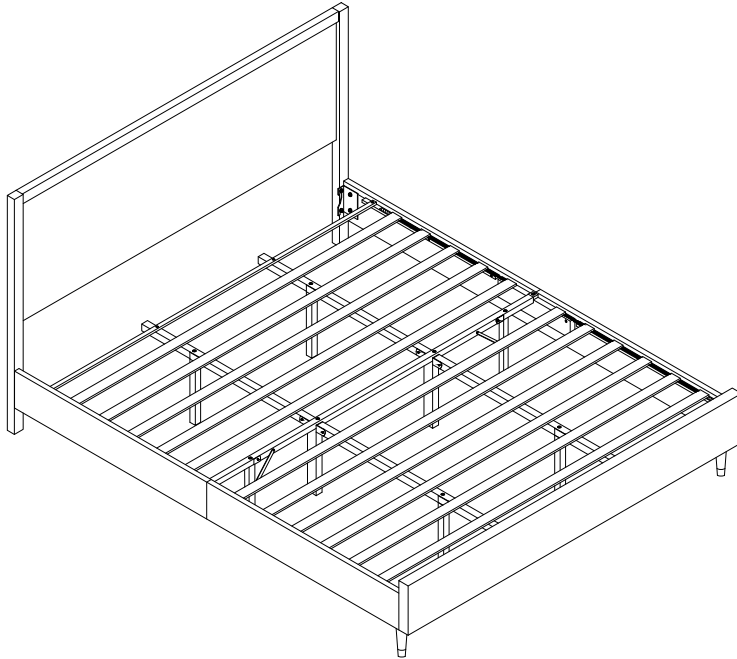

Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:M303

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email at fuwubumen@outlook.com




Minimum two
person assembly

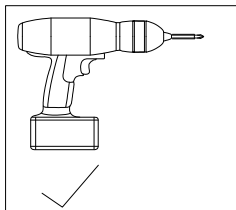


PART LIST

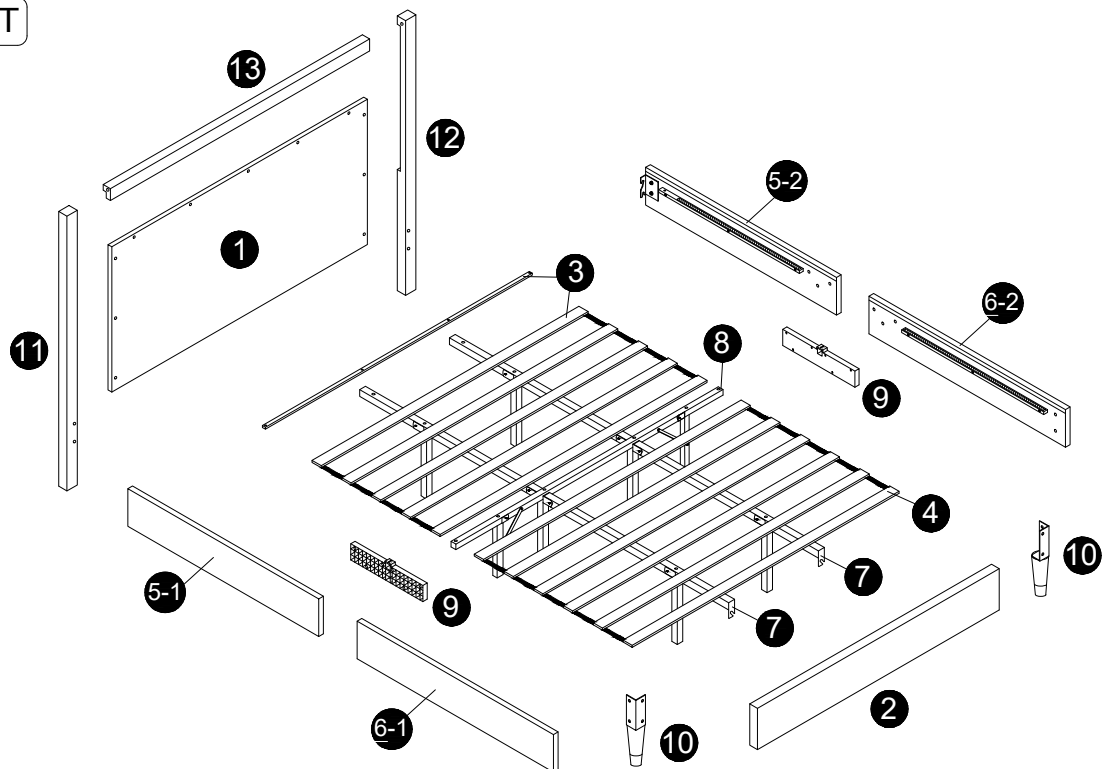


1 x 1pc

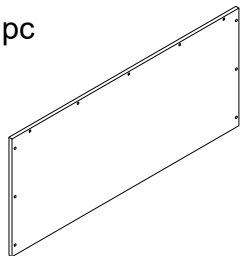


2 x 1pc

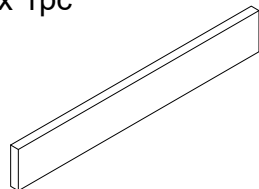


3 x 1pc

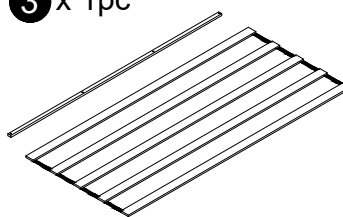


4 x 1pc

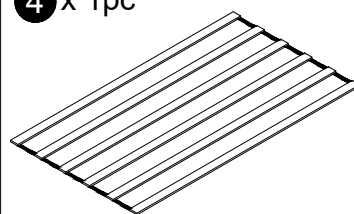


5-1 x 1pc

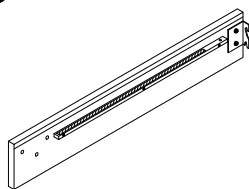


5-2 x 1pc

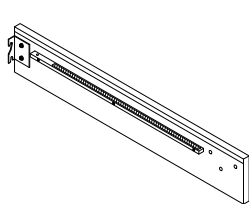


6-1 x 1pc

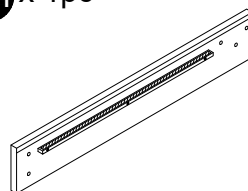


6-2 x 1pc

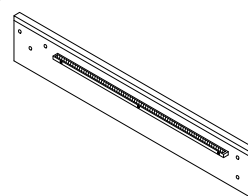


7 x 2pcs

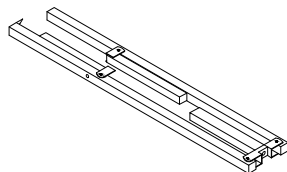

8 x 1pc

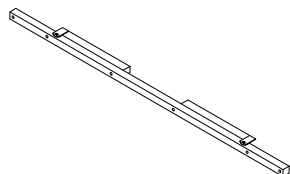

9 x 2pcs

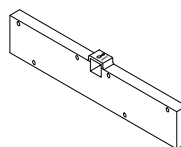

10 x 2pcs




11 x 1pc



12 x 1pc




13 x 1pc

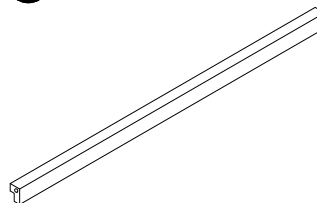


Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.

HARDWARE LIST


 H1 M5 x 1pc	 H2 M8x20mm x 14pcs	 H3 M6x30mm x 11pcs	 H4 M8x40mm x 22pcs
 H5 M8 x 4pcs	 H6 M8x22mm x 15pcs	 H7 M8x60mm x 2pcs	 H8 M8x50mm x 2pcs
 H9 M4 x 1pc	 H10 x 2pcs	 H12 x 2pcs	 H13 x 2pcs

1

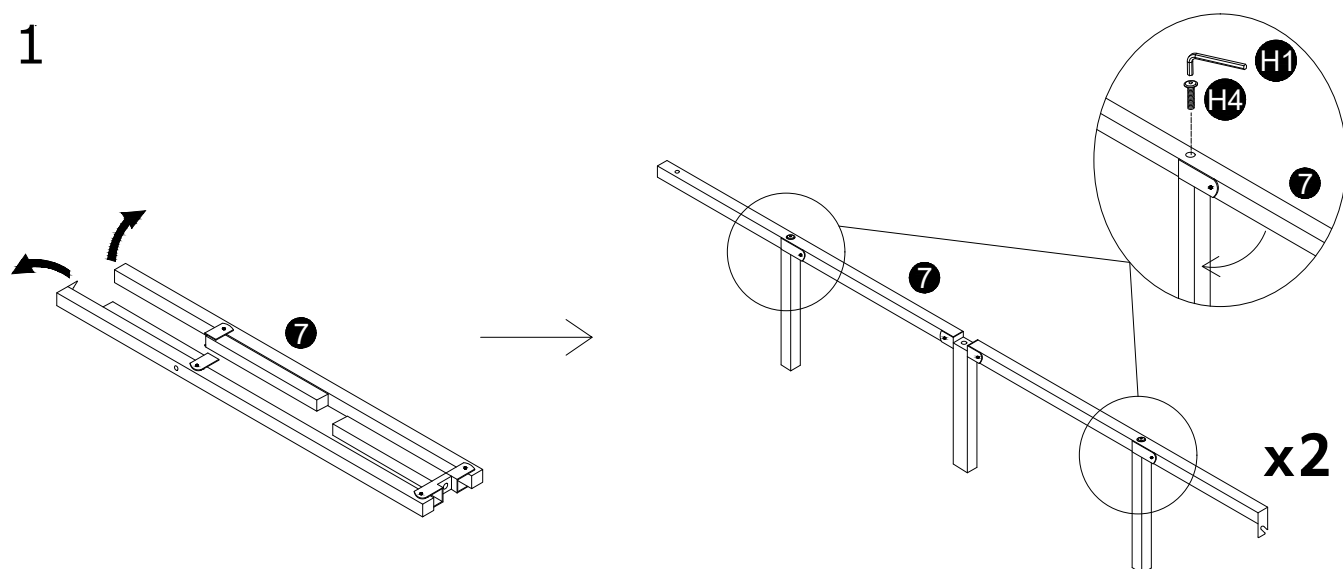


2


BEWARE OF CLAMP HAND

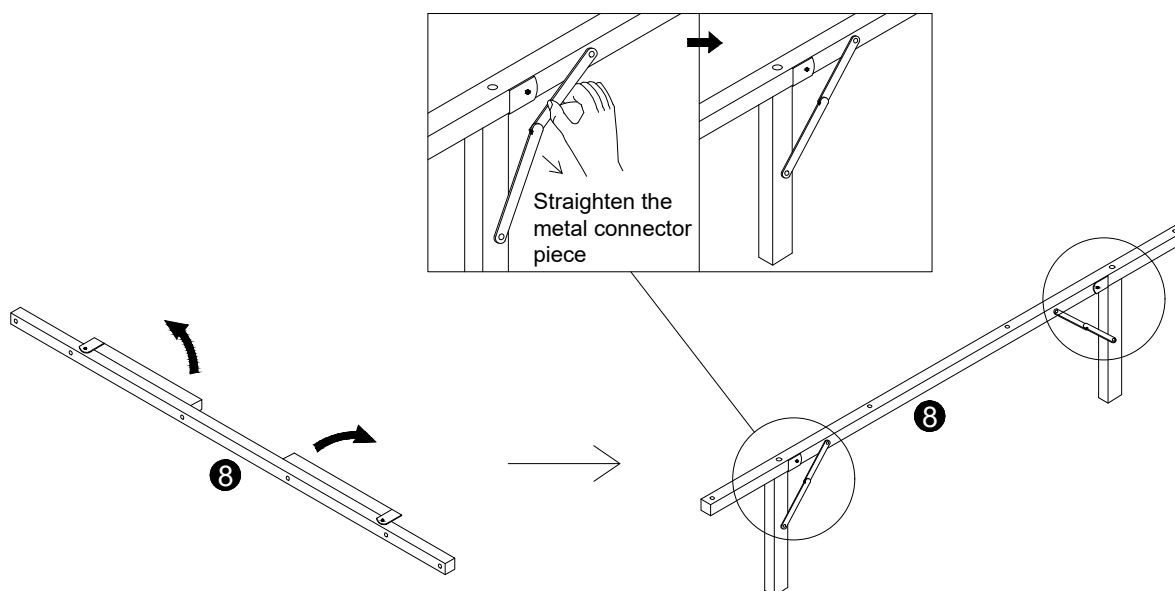

3

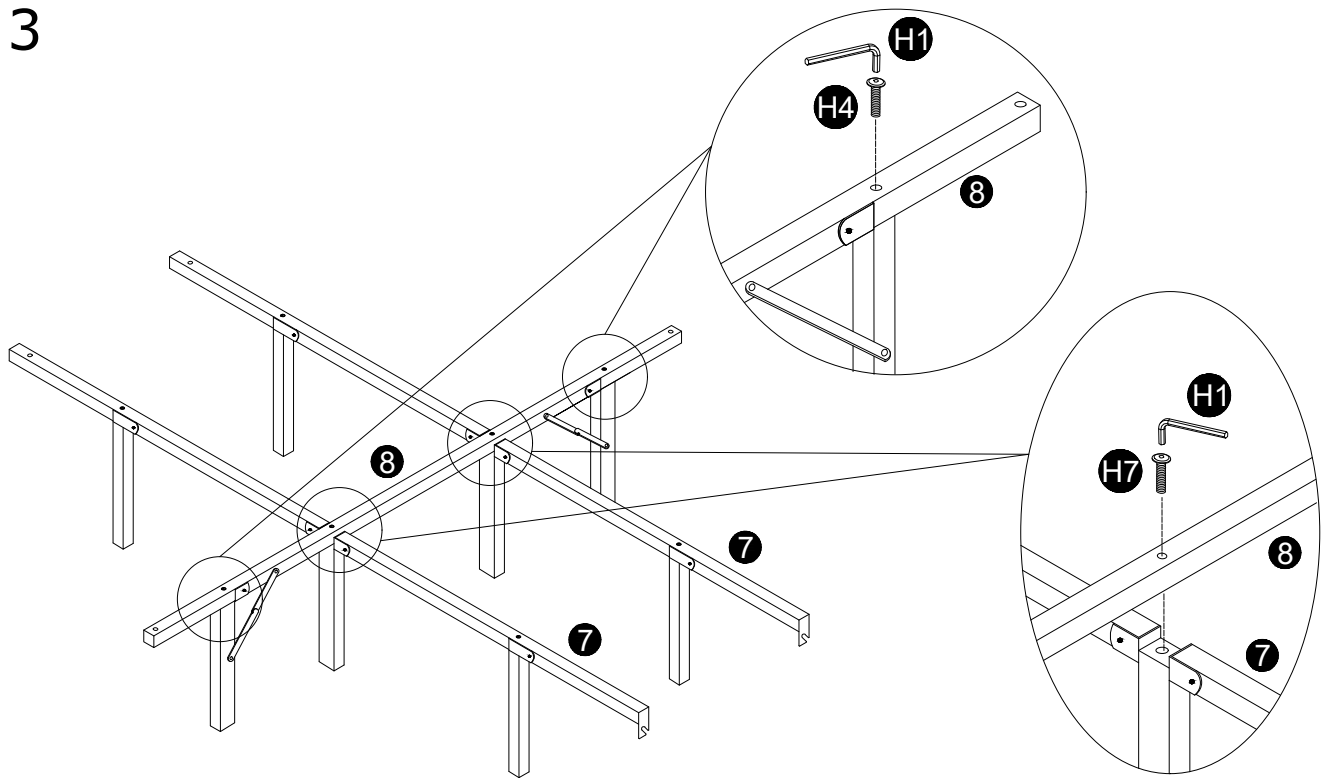


4

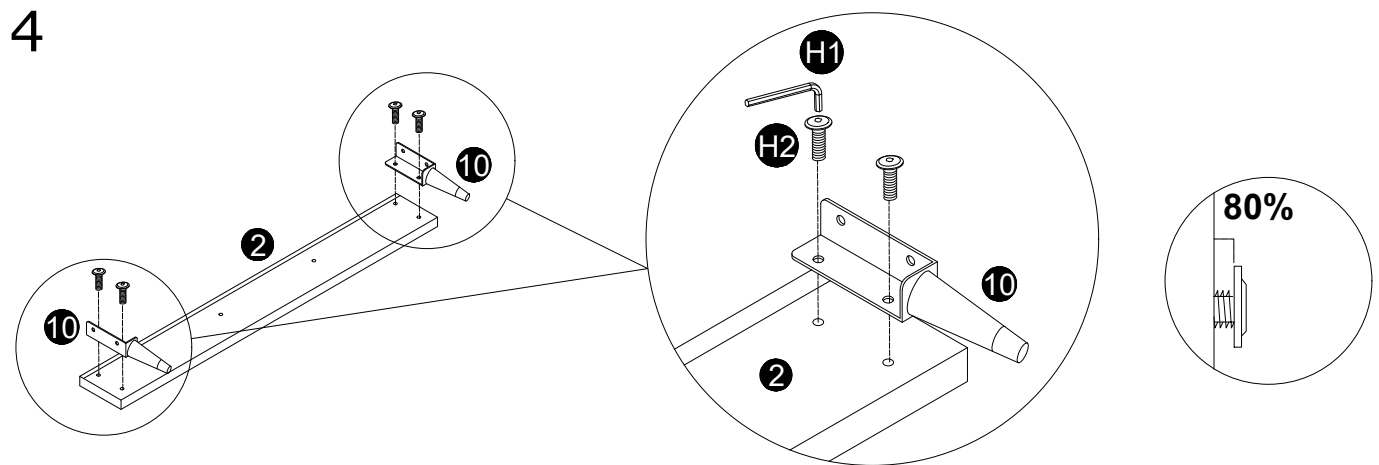


Do not fully tighten fixings!

5

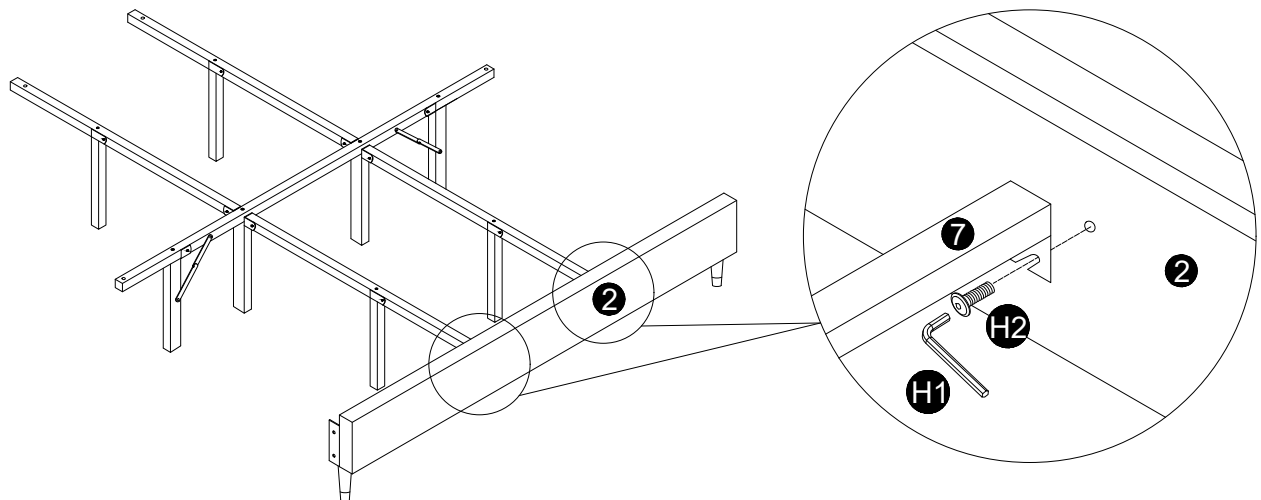


6

Important: part ⑨ , following the “INNER”

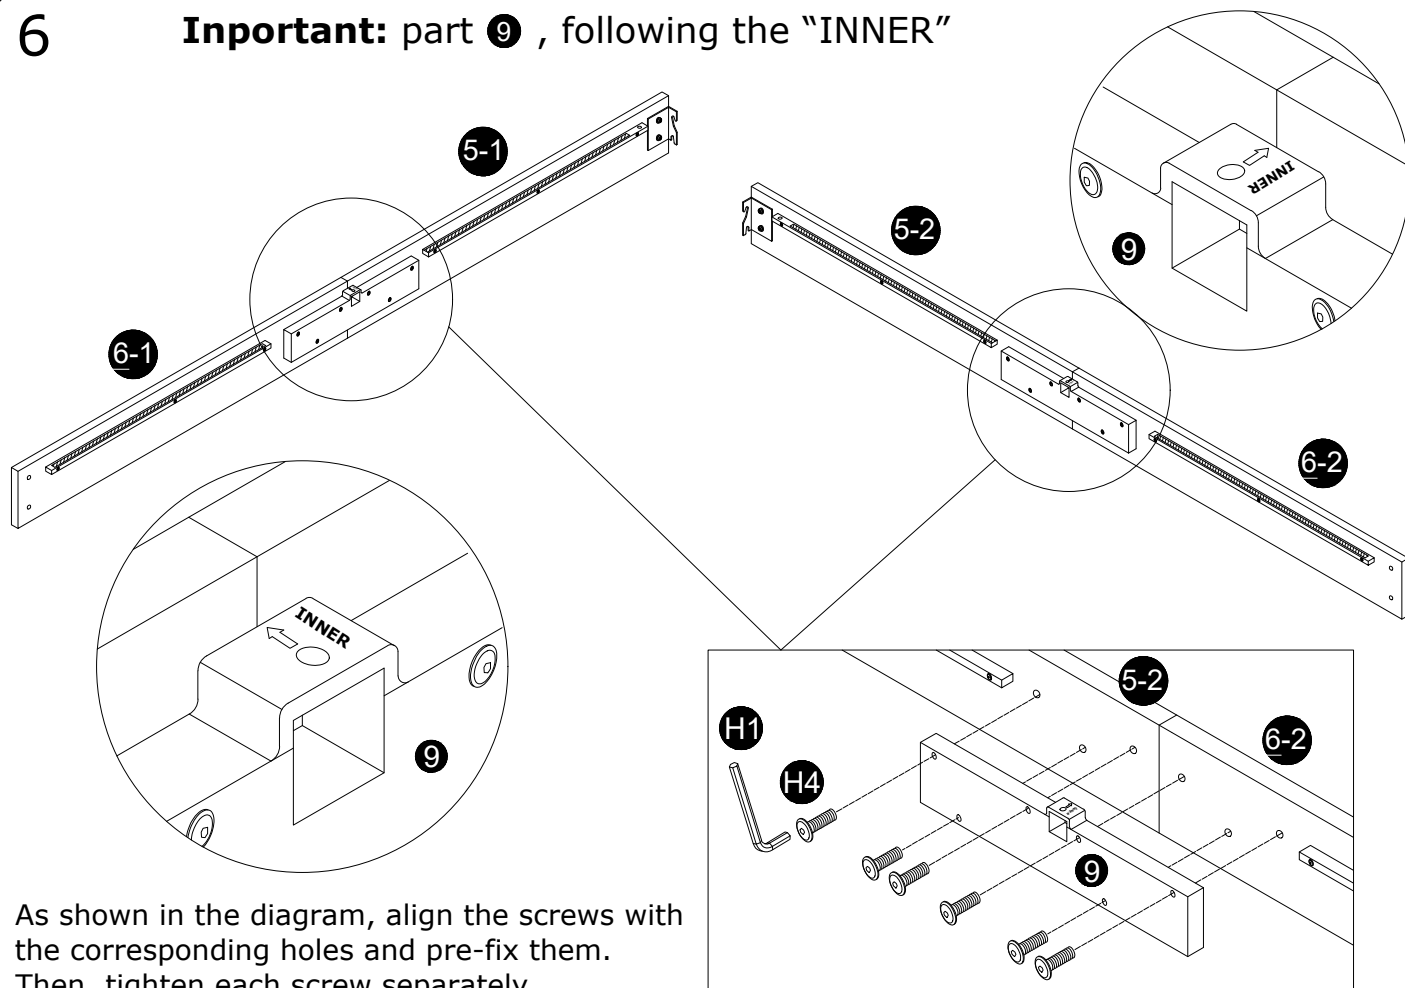


As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

7

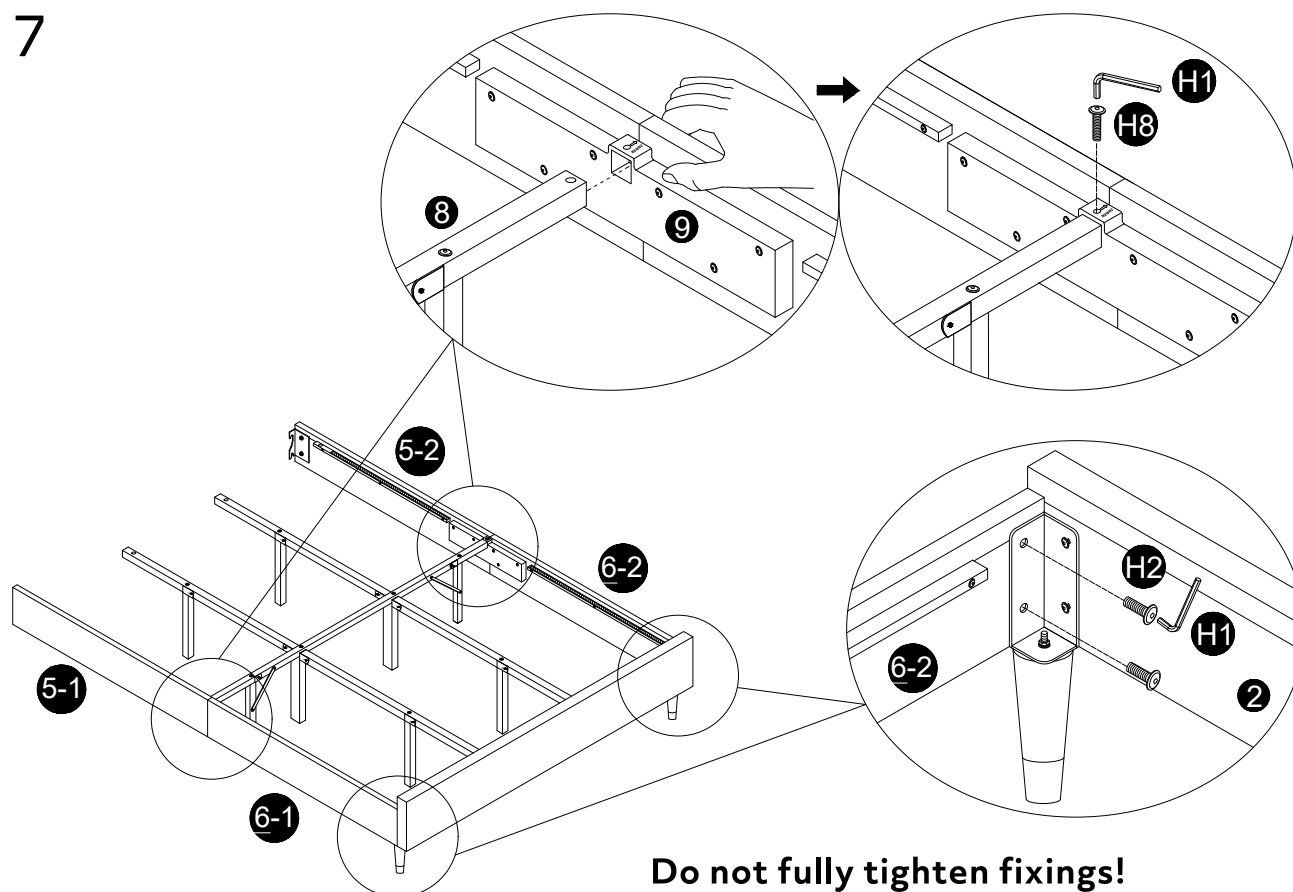


Do not fully tighten fixings!




8

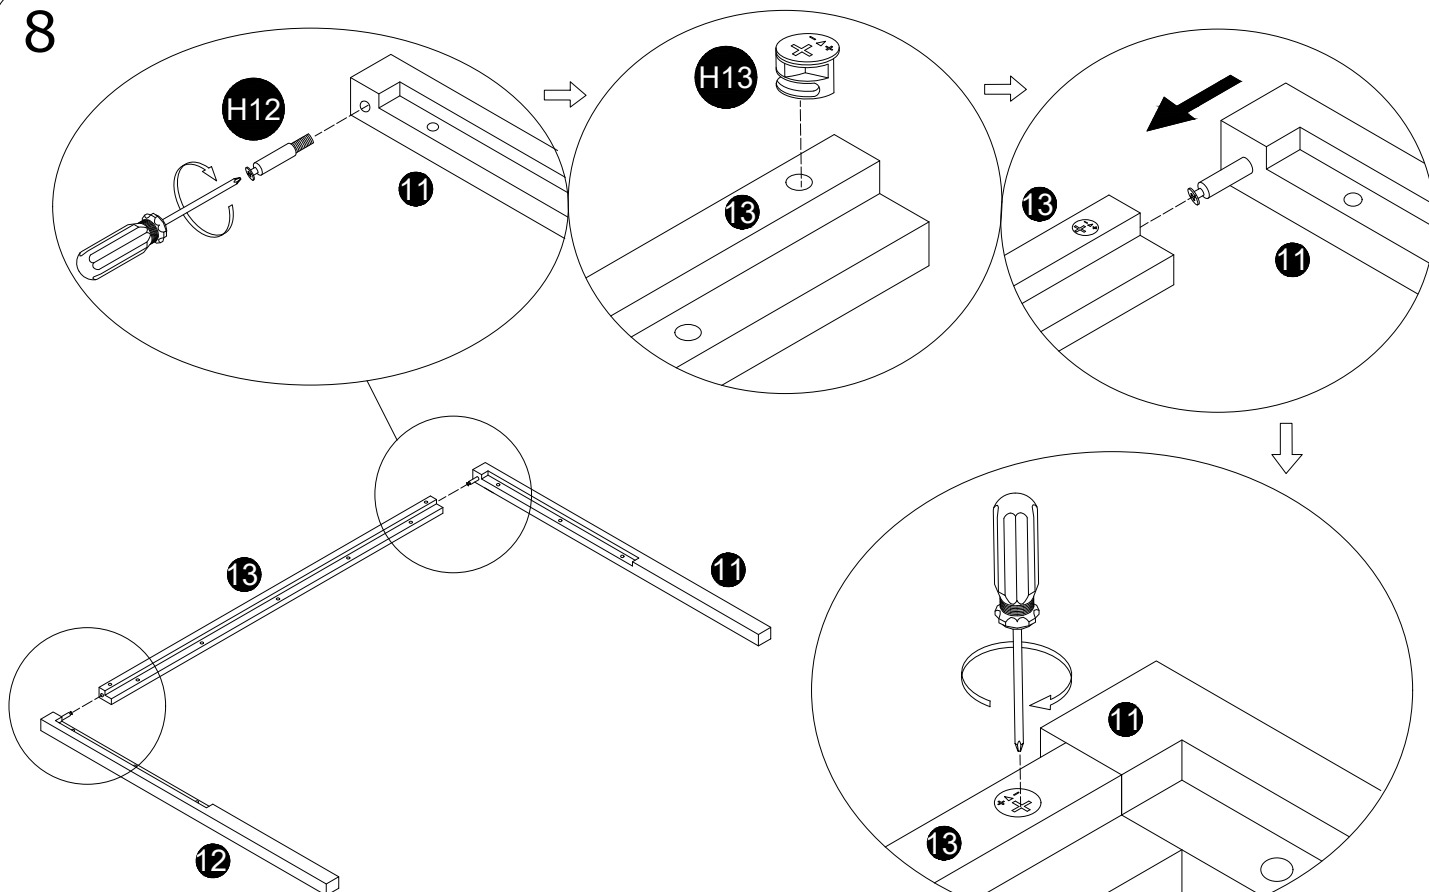


PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

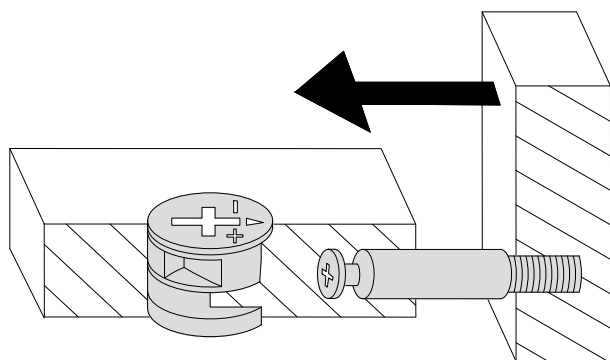


TURN THE CAM IN A CLOCKWISE DIRECTION

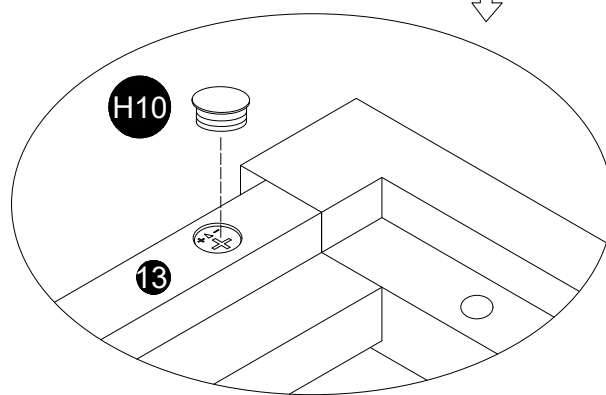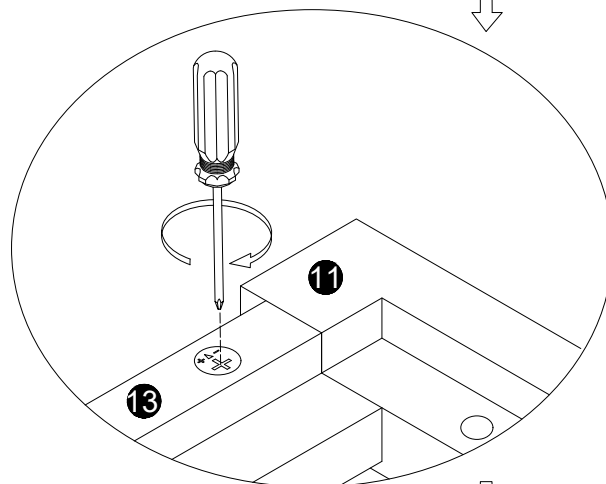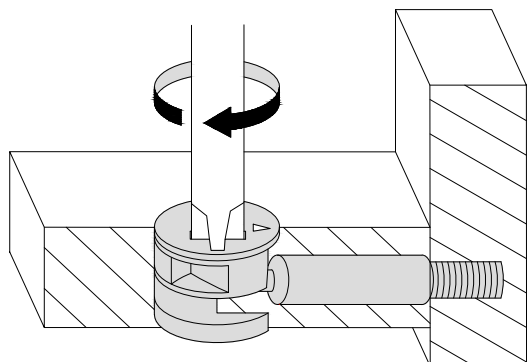

DON'T STOP UNTIL THE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

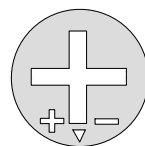




OPEN

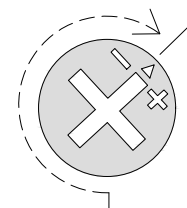


LOCKED

9

As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

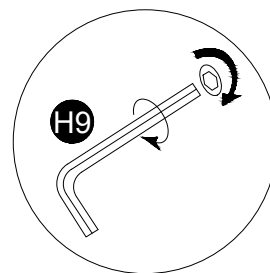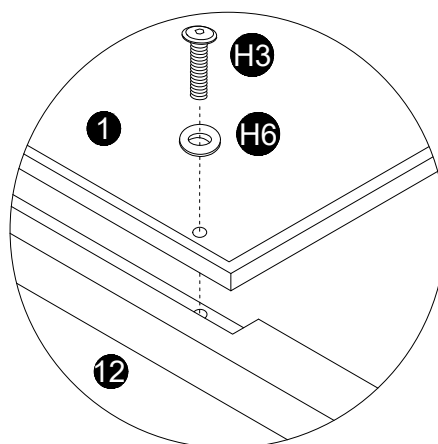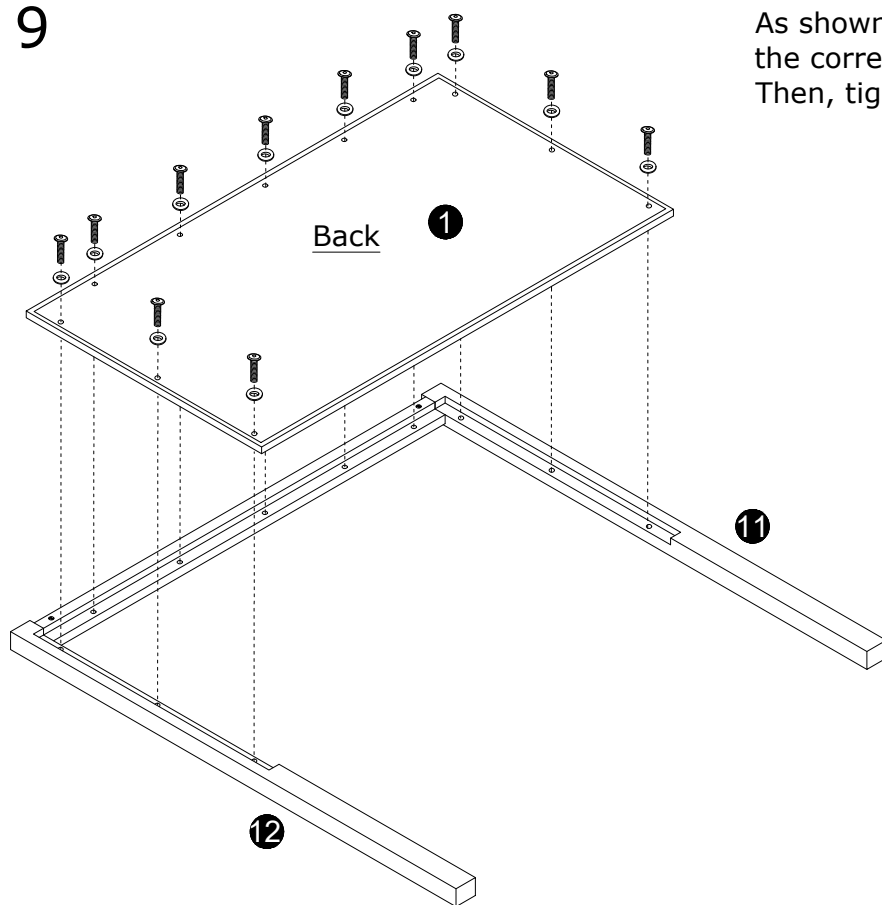

10

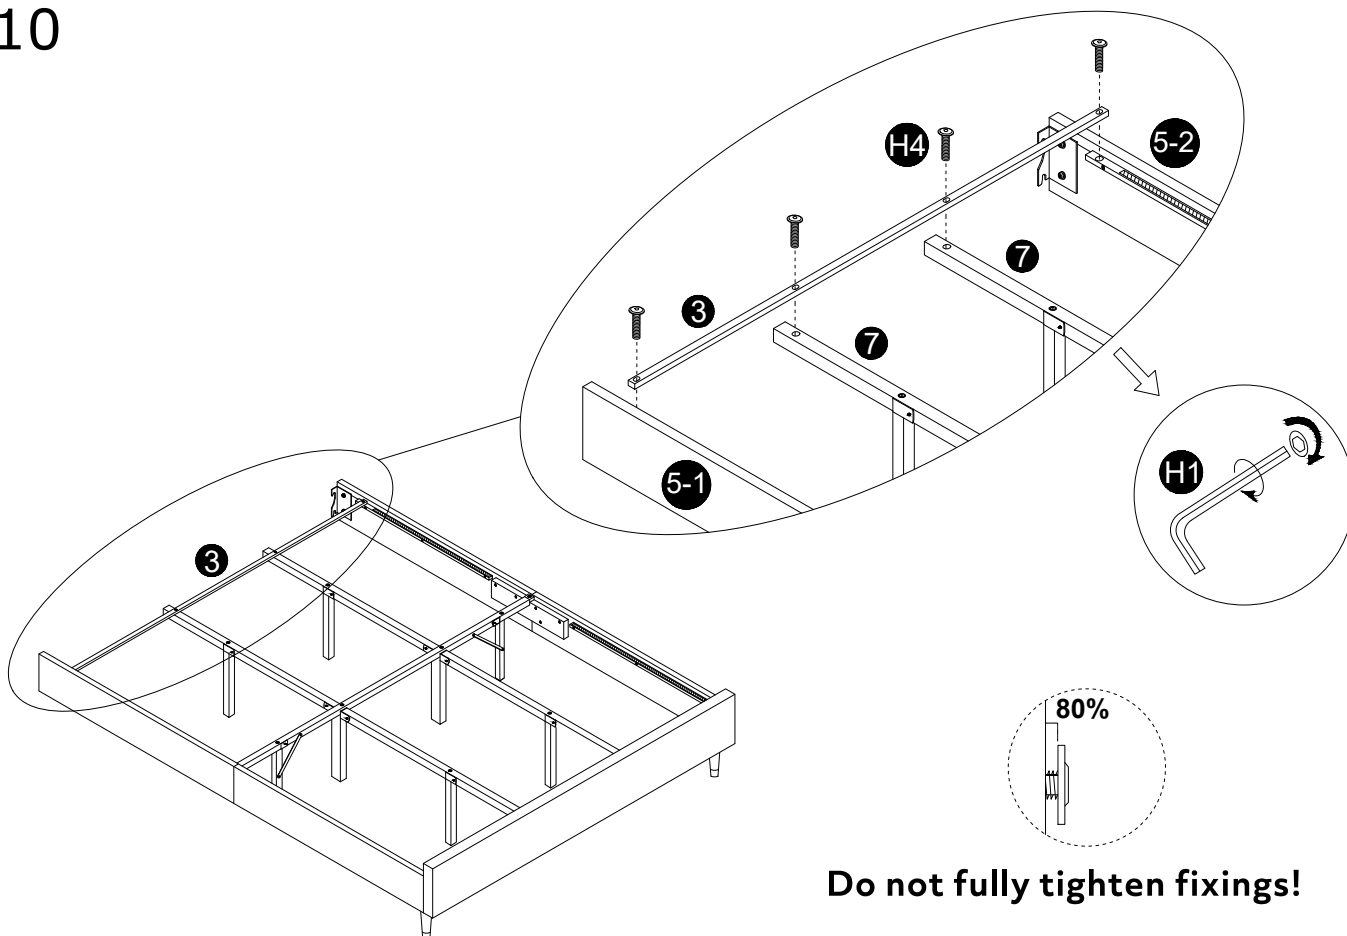

Do not fully tighten fixings!

11

0.5in

H6, H5, H2, H1

12, 5-2

Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

12

Diagram 12 illustrates the process of attaching slats 3 and 4 to the bed frame. The frame is shown with a headboard and a footboard. Two slats, labeled 3 and 4, are shown being inserted into the frame. An arrow points from the slats to the frame, indicating the direction of assembly. The slats are shown being inserted into the frame, which is already partially assembled.

In the interest of our environment please dispose of all packaging thoughtfully.