


Assembly Instructions

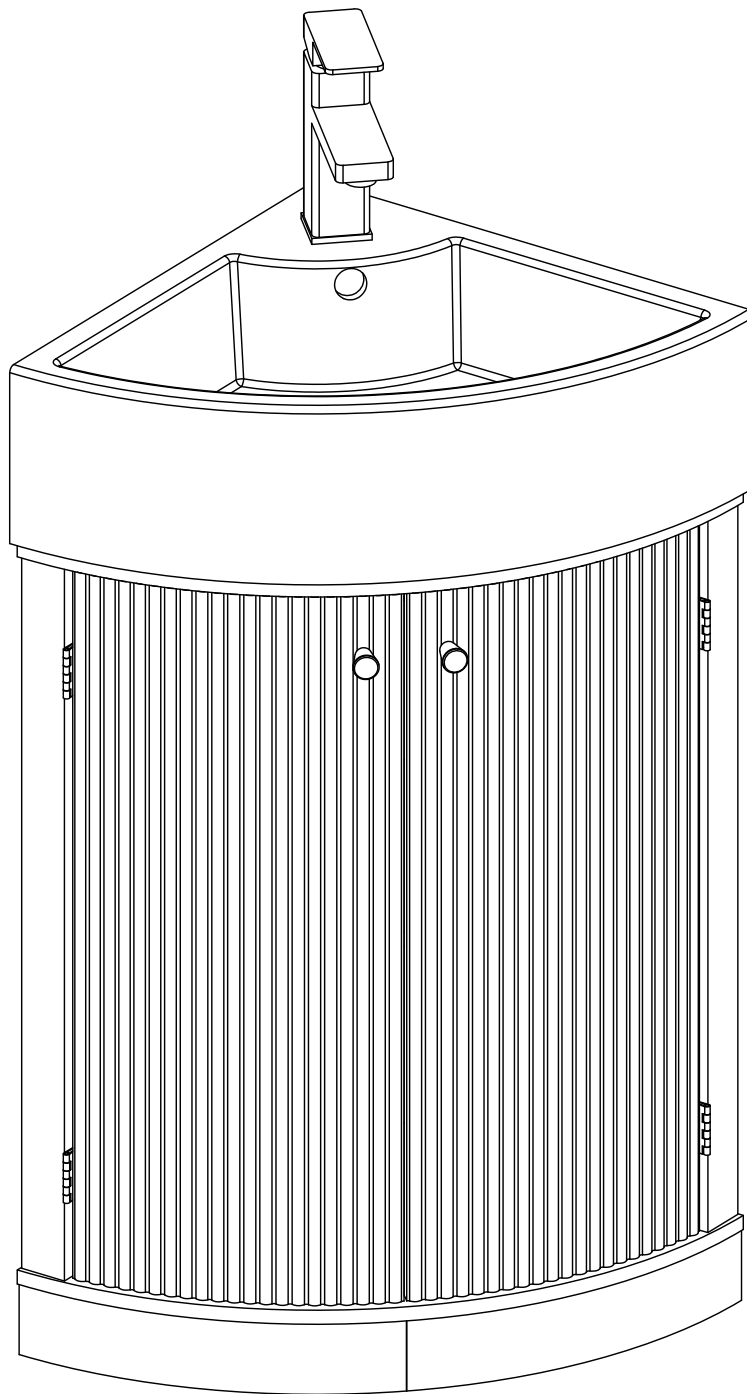


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

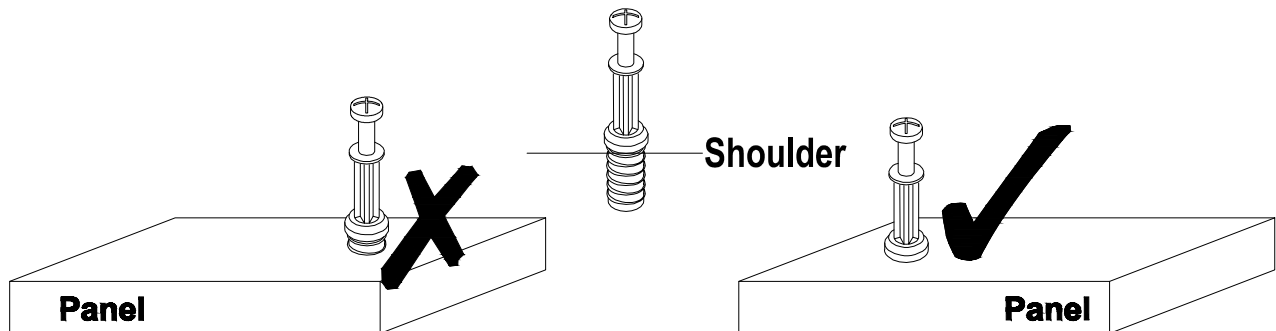

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

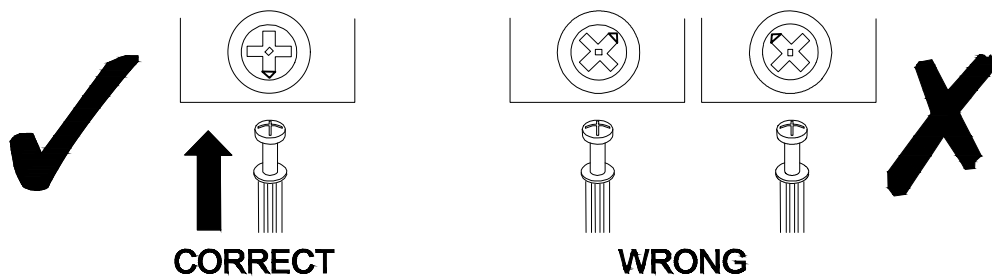

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

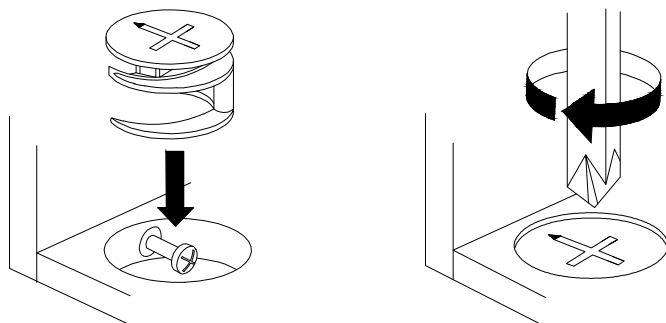


Turn cam lock clockwise to tighten.



Part List

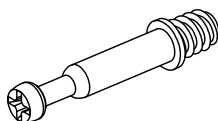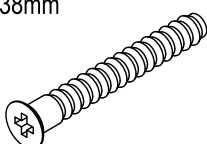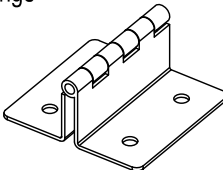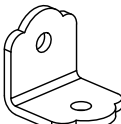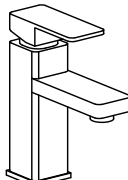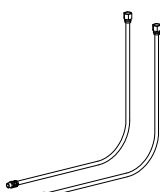No. A Quantity: 14+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 14+1 PCS Cam ø15x9.5mm 	No. C Quantity: 14+1 PCS Sticker ø20mm 	No. D Quantity: 24+2 PCS Dowel ø6x30mm 			
No. E Quantity: 32+2 PCS Screw ø3.5x12mm 	No. F Quantity: 2+1 PCS Screw ø3x14mm 	No. G Quantity: 2+1 PCS Bolt M4x20mm 	No. H Quantity: 15+1 PCS Screw ø5x38mm 			
No. I Quantity: 1 PCS Hex Key 4mm 	No. J Quantity: 2 PCS Handle ø20xø13x23mm 	No. K Quantity: 1 PCS Magnet 60x16*16mm  K-1  K-2	No. L Quantity: 4 PCS Hinge 			
No. M Quantity: 1 PCS Iron Plate 36x16mm 	No. N Quantity: 6 PCS Iron Plate 19x19*18mm 	No. O Quantity: 4+1 SET plastic plug : Ø8*40 screw : Ø4*55 Ø19*Ø6*1.5  O-1  O-2  O-3				
No. P Quantity: 1 SET 	P-1 Faucet	P-2 	P-3 	P-4 	P-5 Hot & Cold Water Supply Lines 	P-6 Drain Stopper & Tailpiece 


Product structure

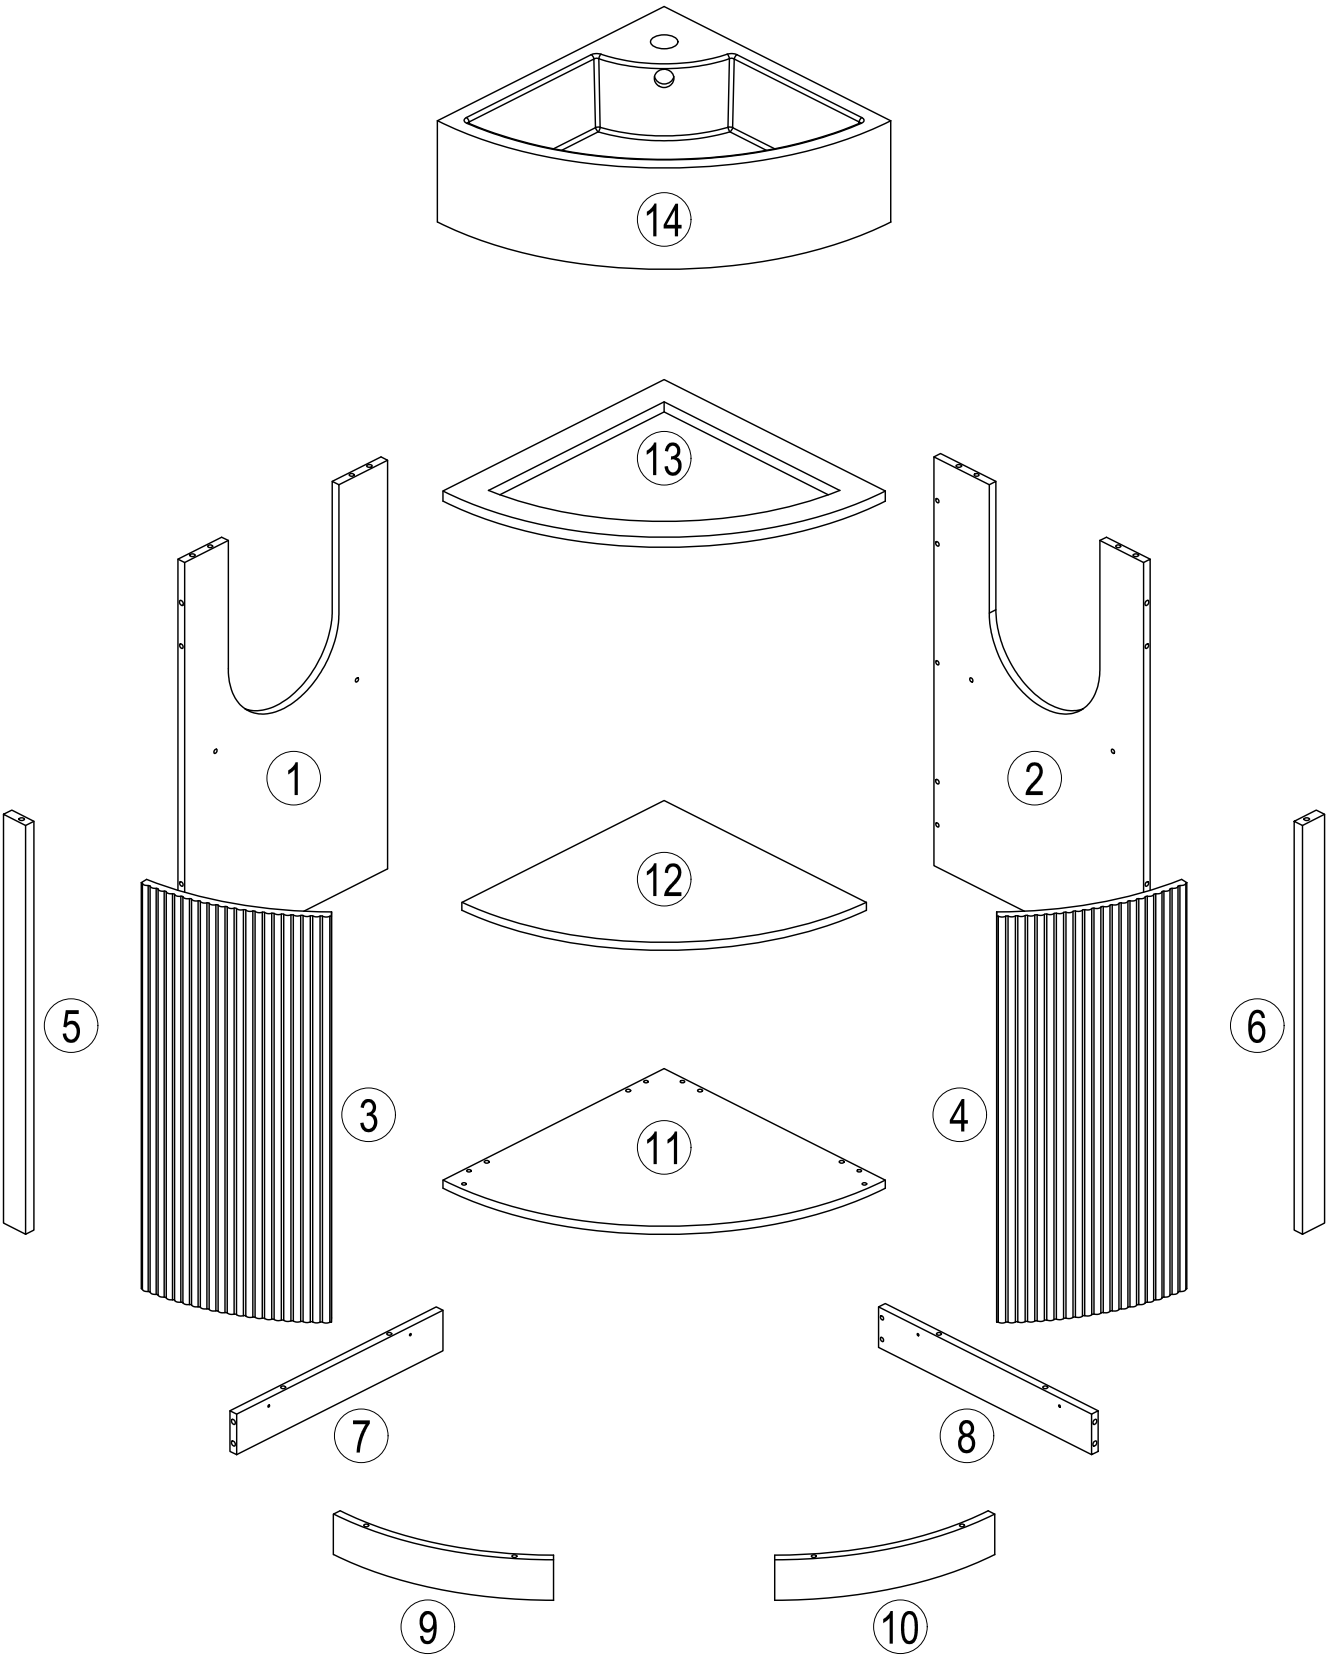


STEP 1

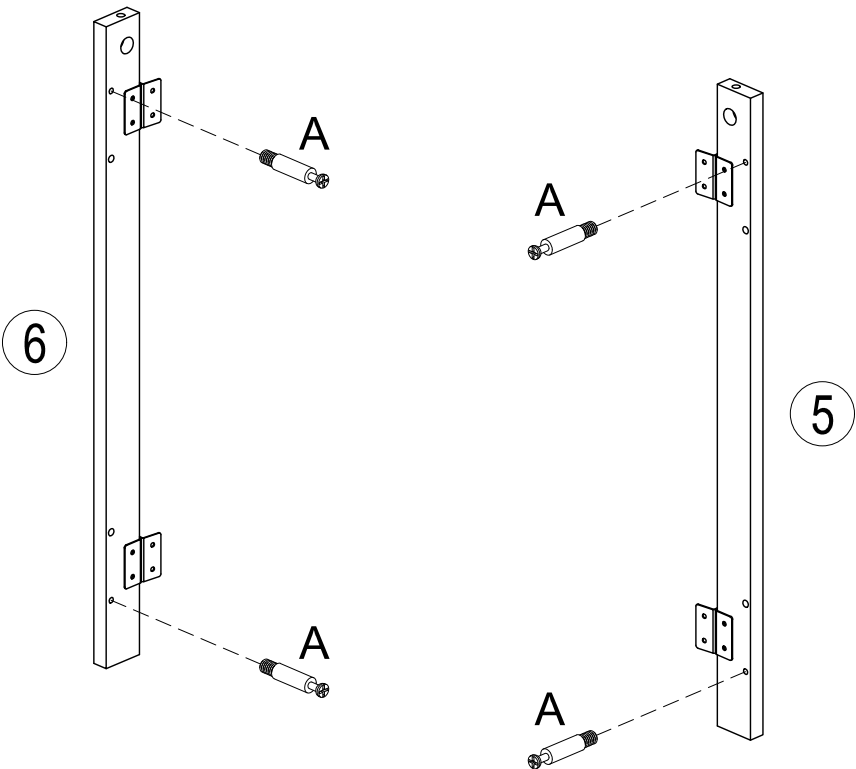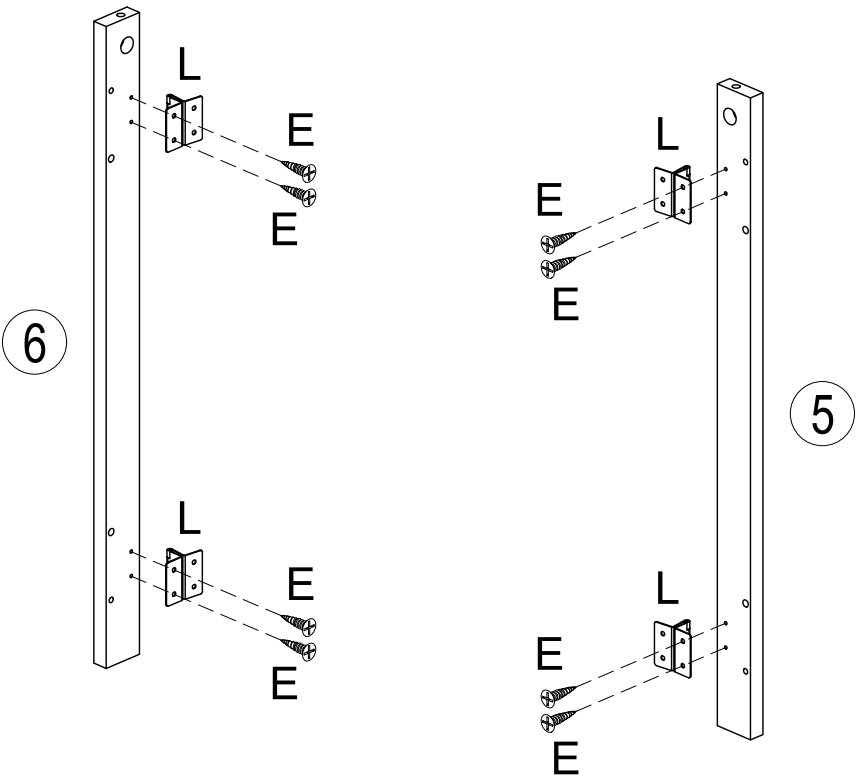


No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm





No. E
Quantity: 8 PCS
Screw
ø3.5x12mm



No. L
Quantity: 4 PCS
Hinge

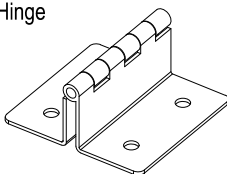

STEP 2

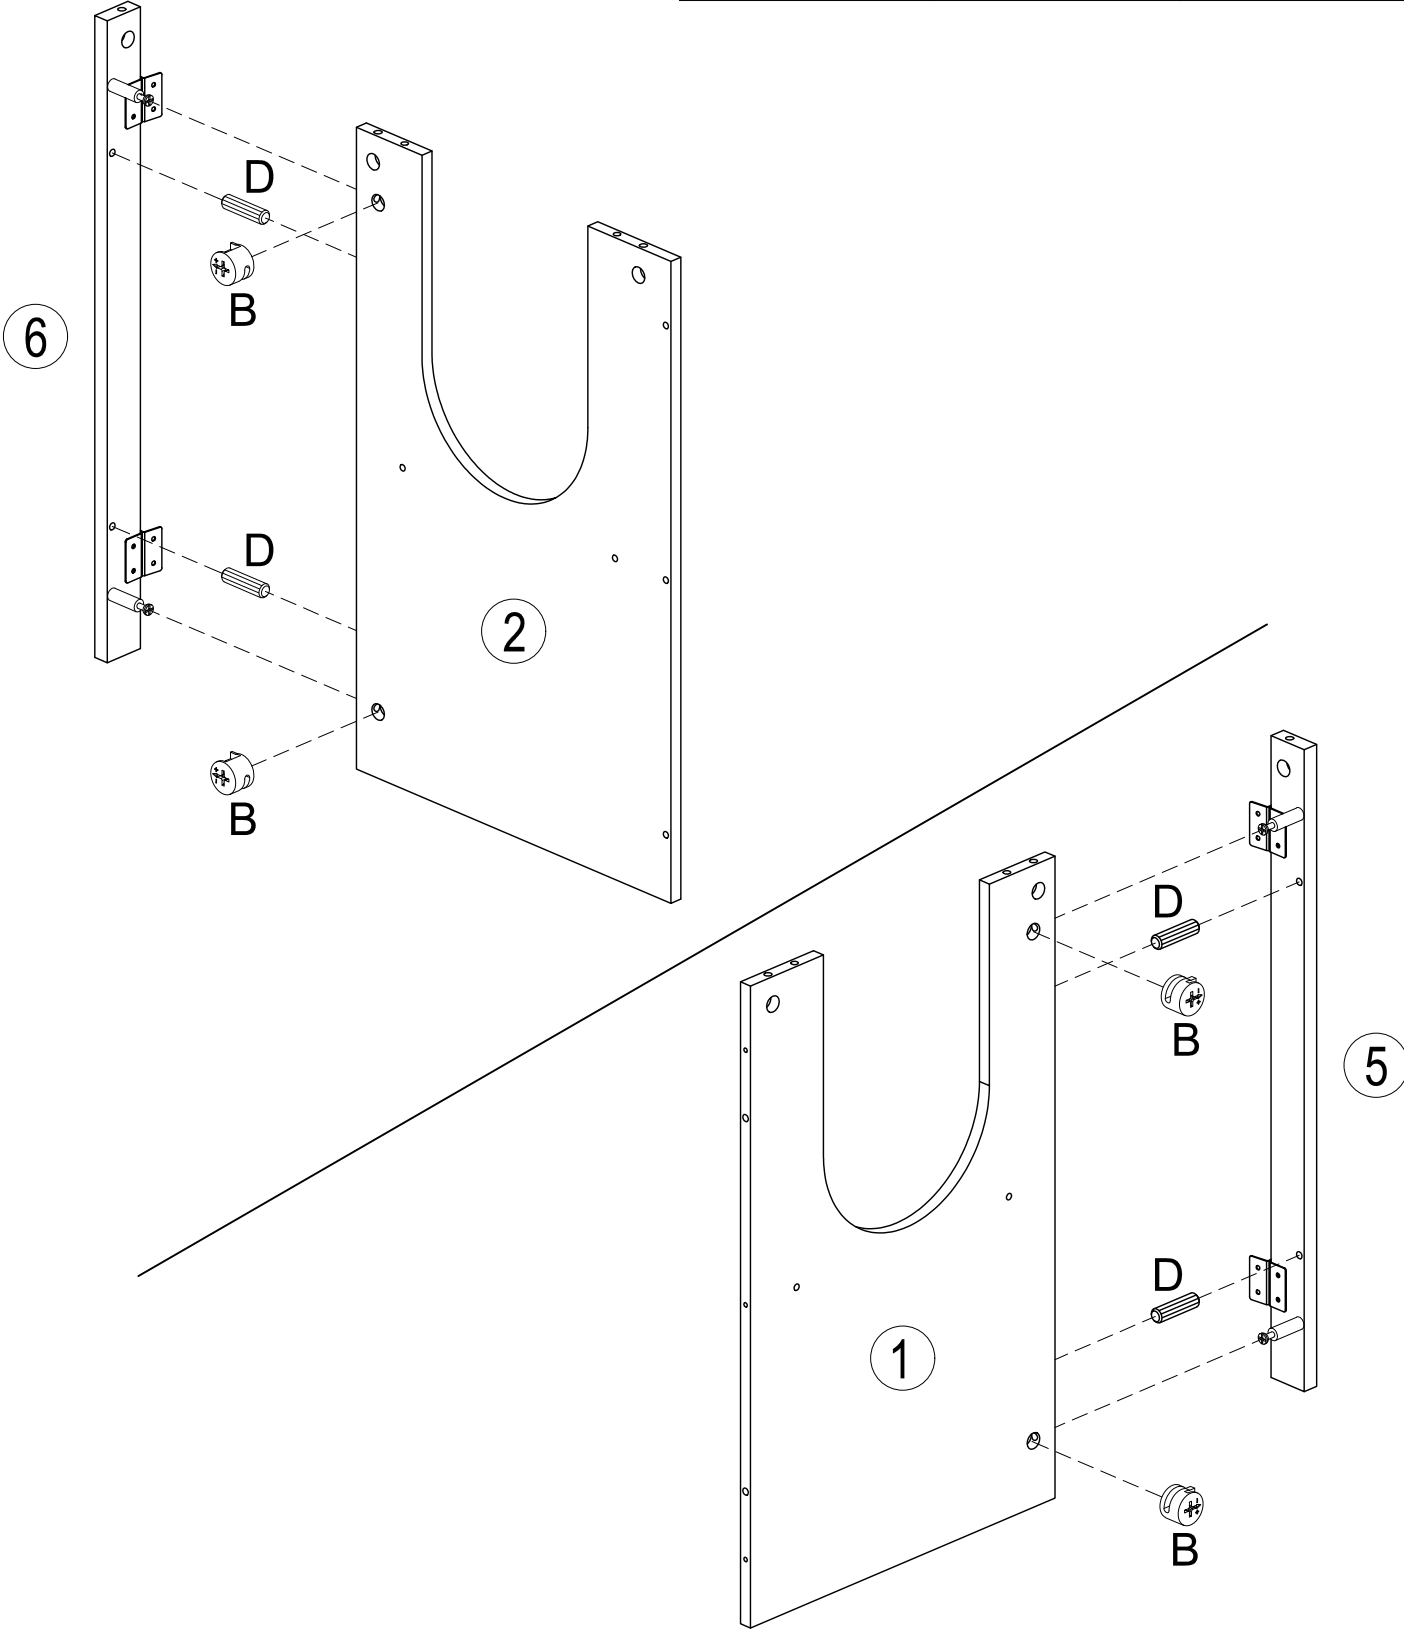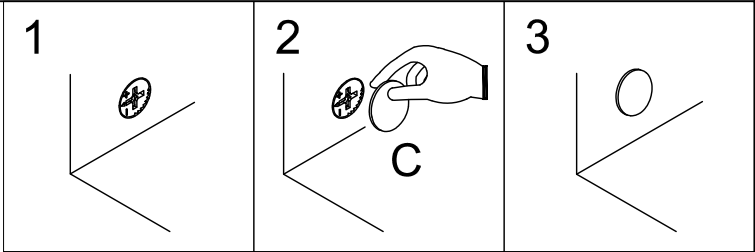

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. D


Quantity: 4 PCS
Dowel
ø6x30mm




STEP 3

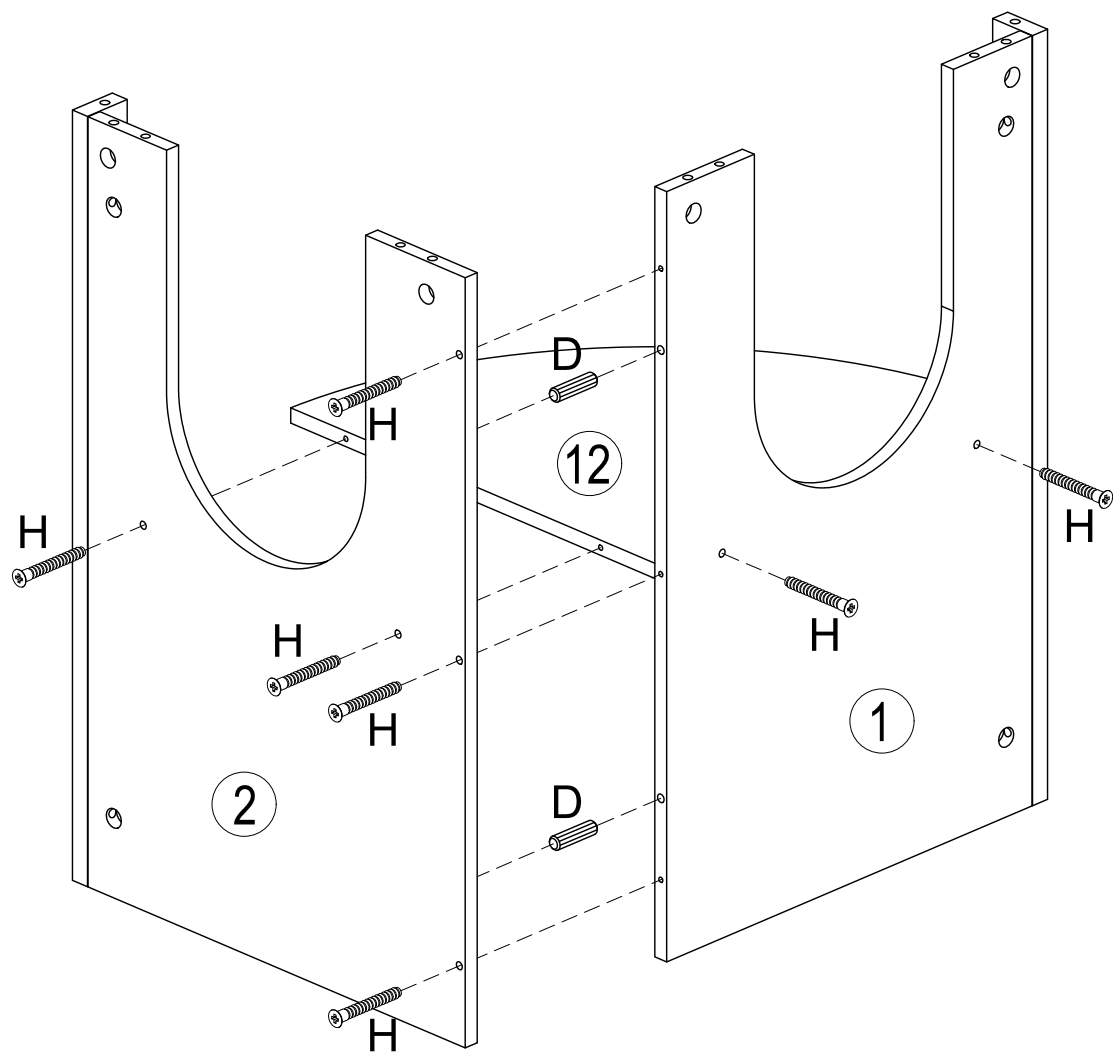


No. D
Quantity: 2 PCS
Dowel
ø6x30mm




No. H
Quantity: 7 PCS
Screw
ø5x38mm




STEP 4

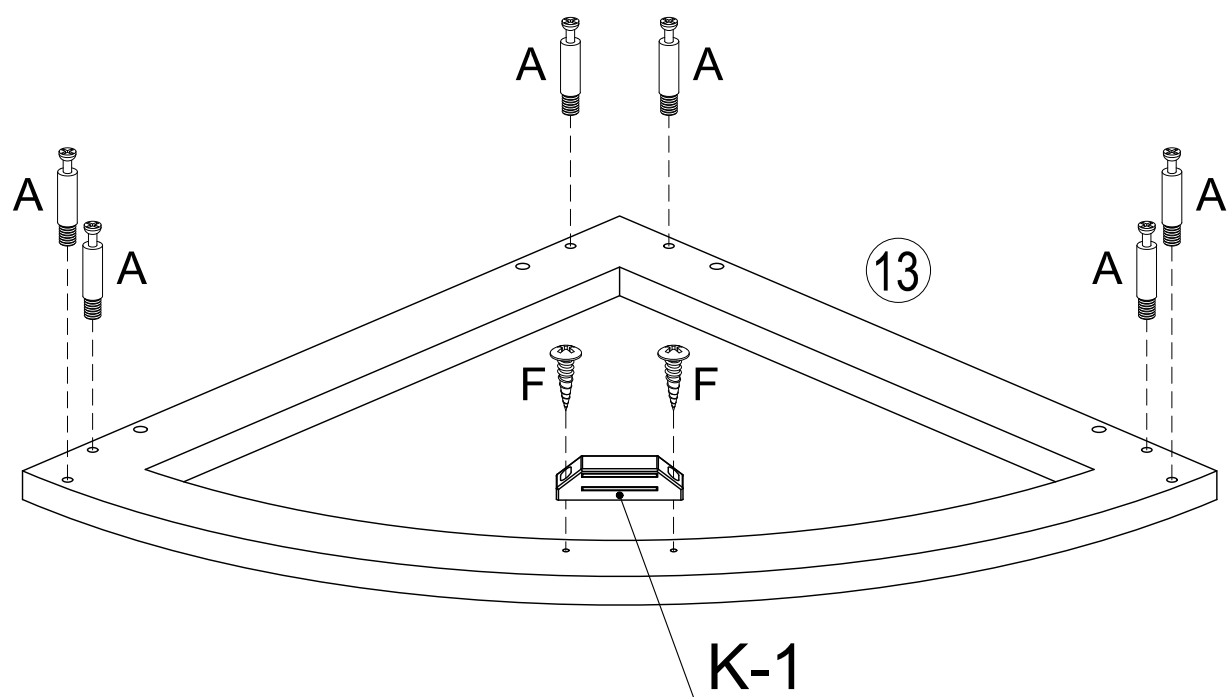


No. A
Quantity: 6 PCS
Cam Bolt
ø6x33.5mm





No. F
Quantity: 2 PCS
Screw
ø3x14mm



No. K
Quantity: 1 PCS
Magnet
60x16*16mm



STEP 5

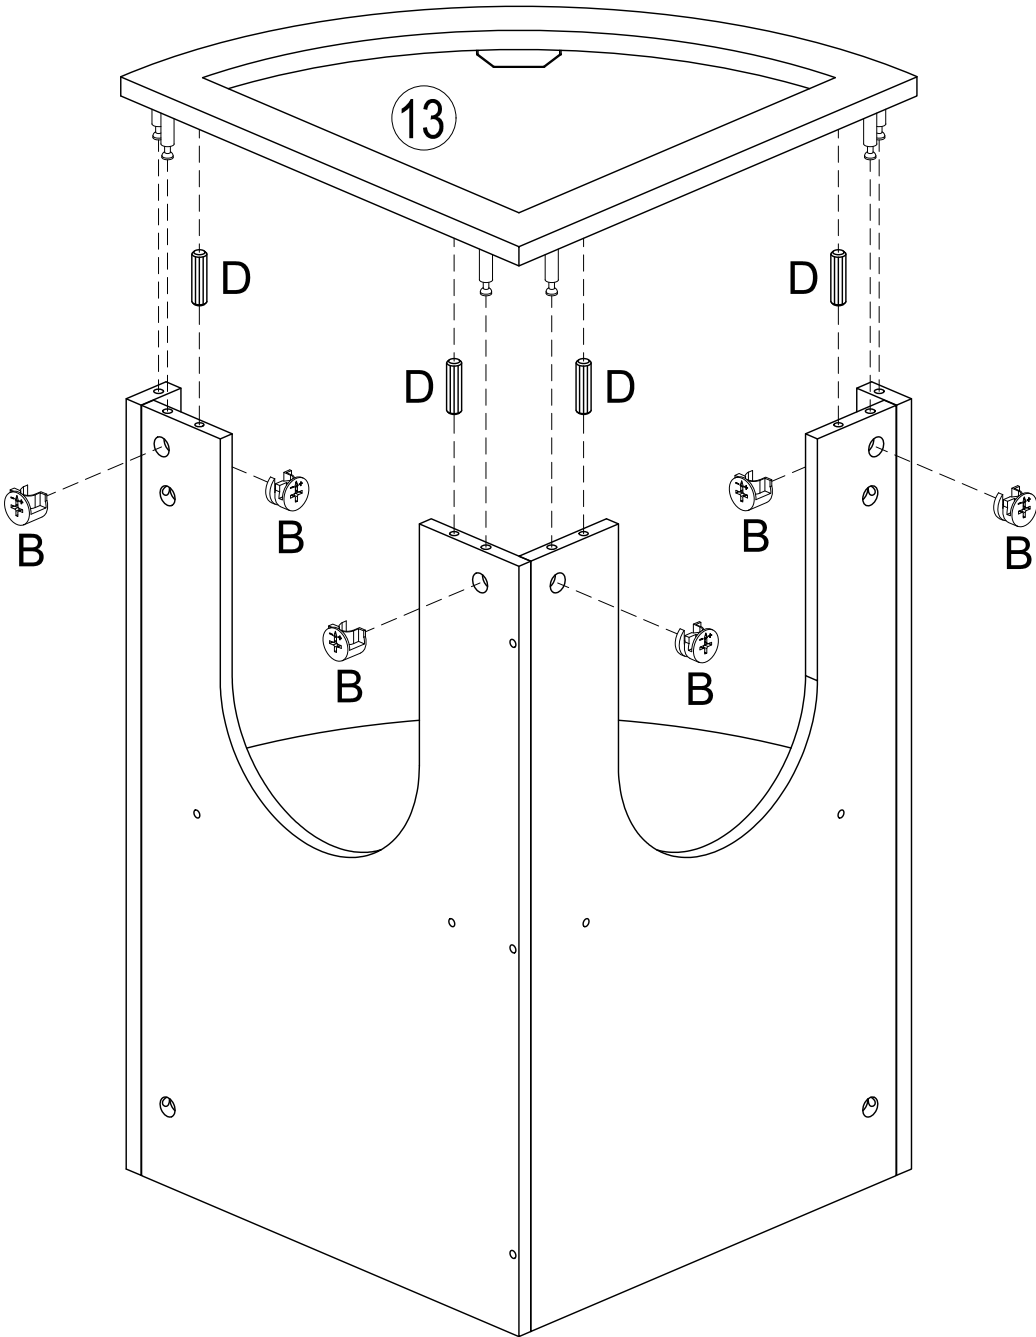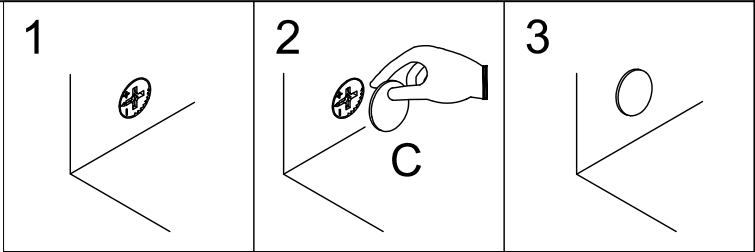

No. B

Quantity: 6 PCS
Cam
ø15x9.5mm




No. C

Quantity: 6 PCS
Sticker
ø20mm




No. D

Quantity: 4 PCS
Dowel
ø6x30mm




STEP 6

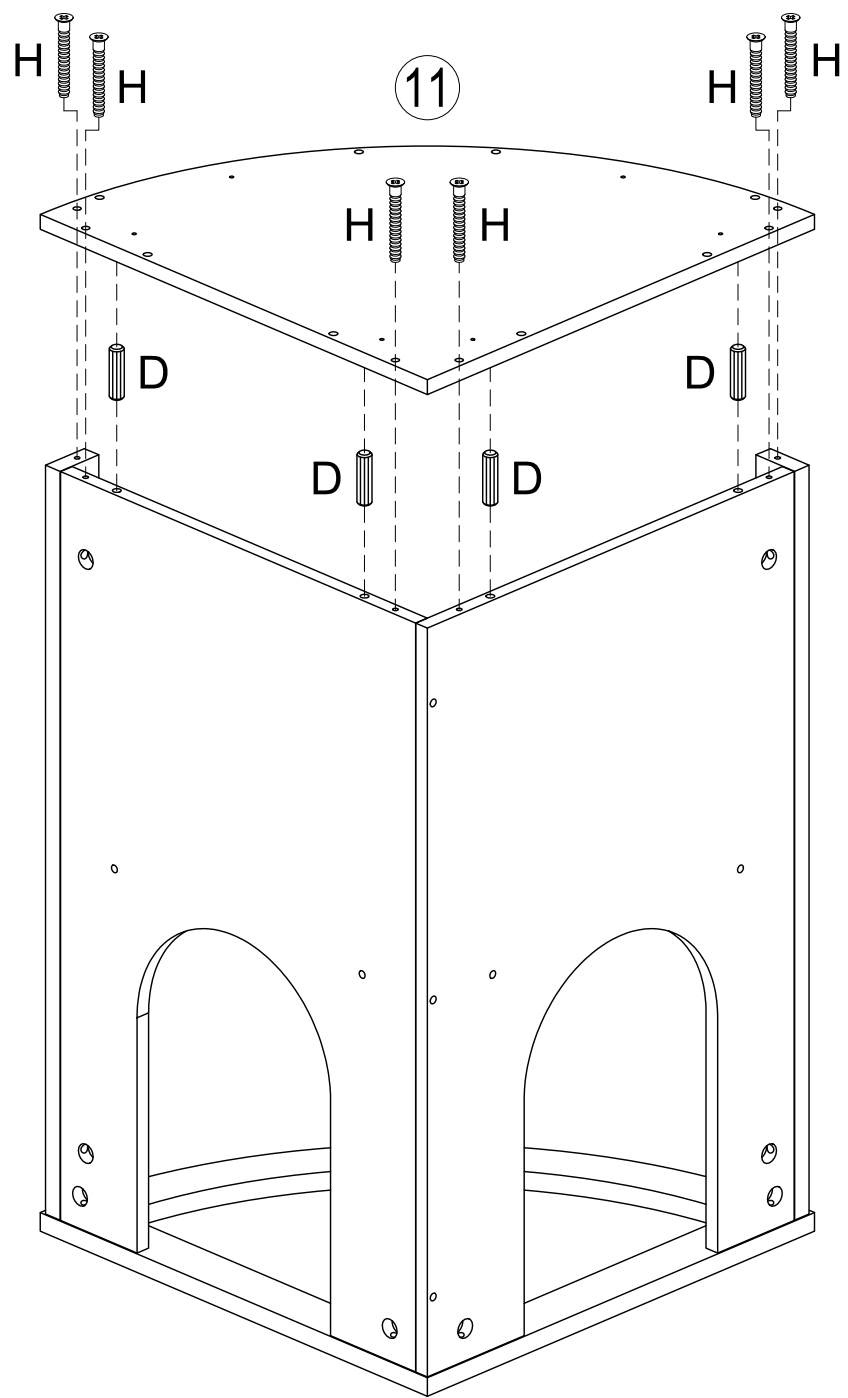


No. D

Quantity: 4 PCS
Dowel
ø6x30mm




No. H


Quantity: 6 PCS
Screw
ø5x38mm




STEP 7

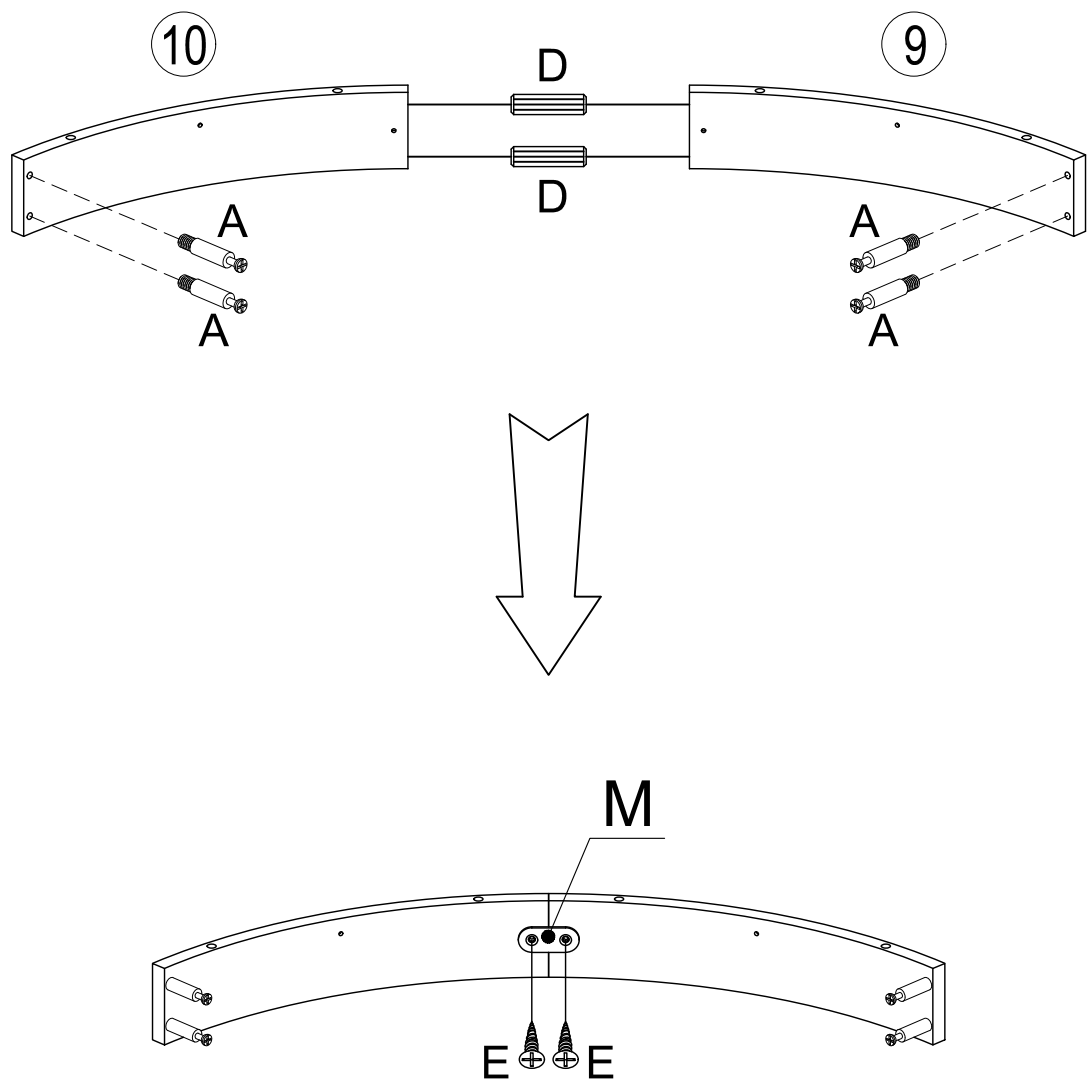


No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm




No. D
Quantity: 2 PCS
Dowel
ø6x30mm









No. E
Quantity: 2 PCS
Screw
ø3.5x12mm



No. M
Quantity: 1 PCS
Iron Plate
36x16mm



STEP 8

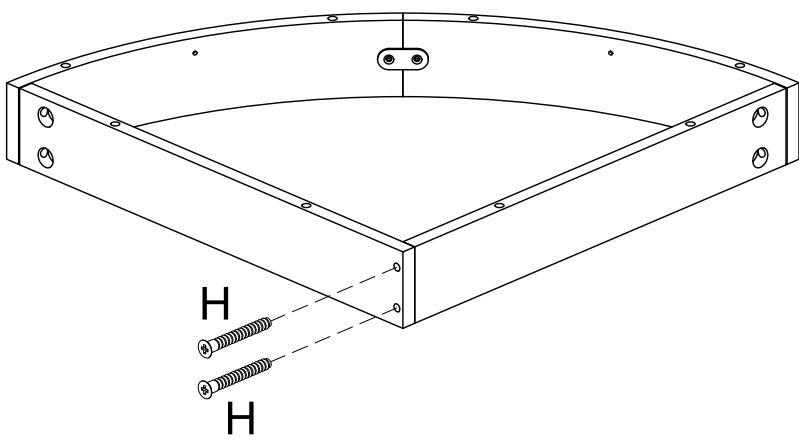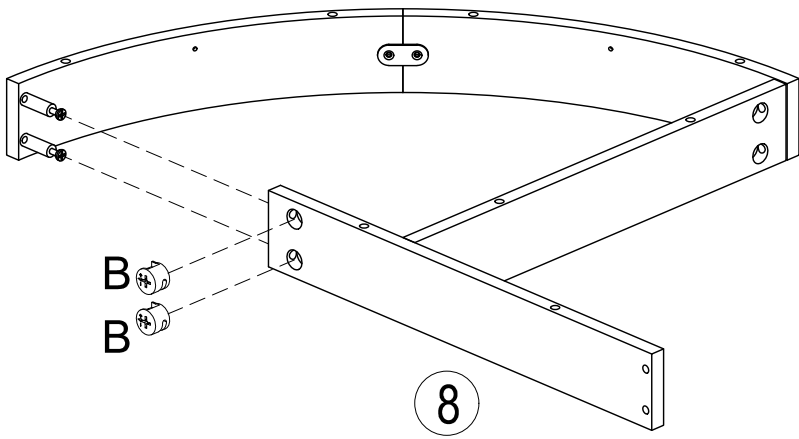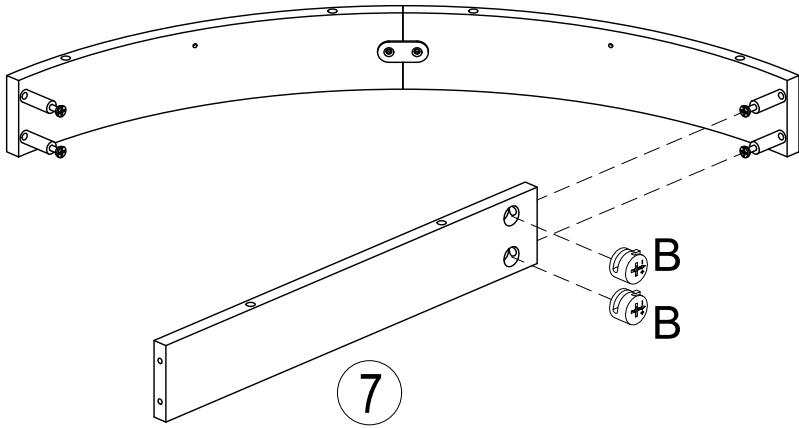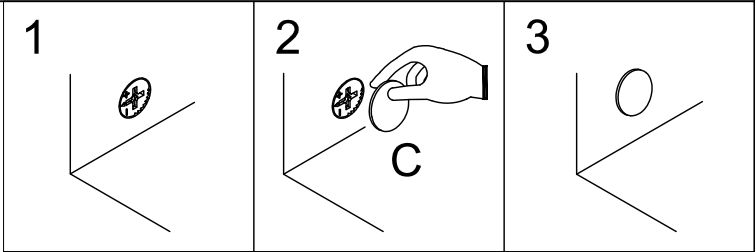

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. H


Quantity: 2 PCS
Screw
ø5x38mm





STEP 9

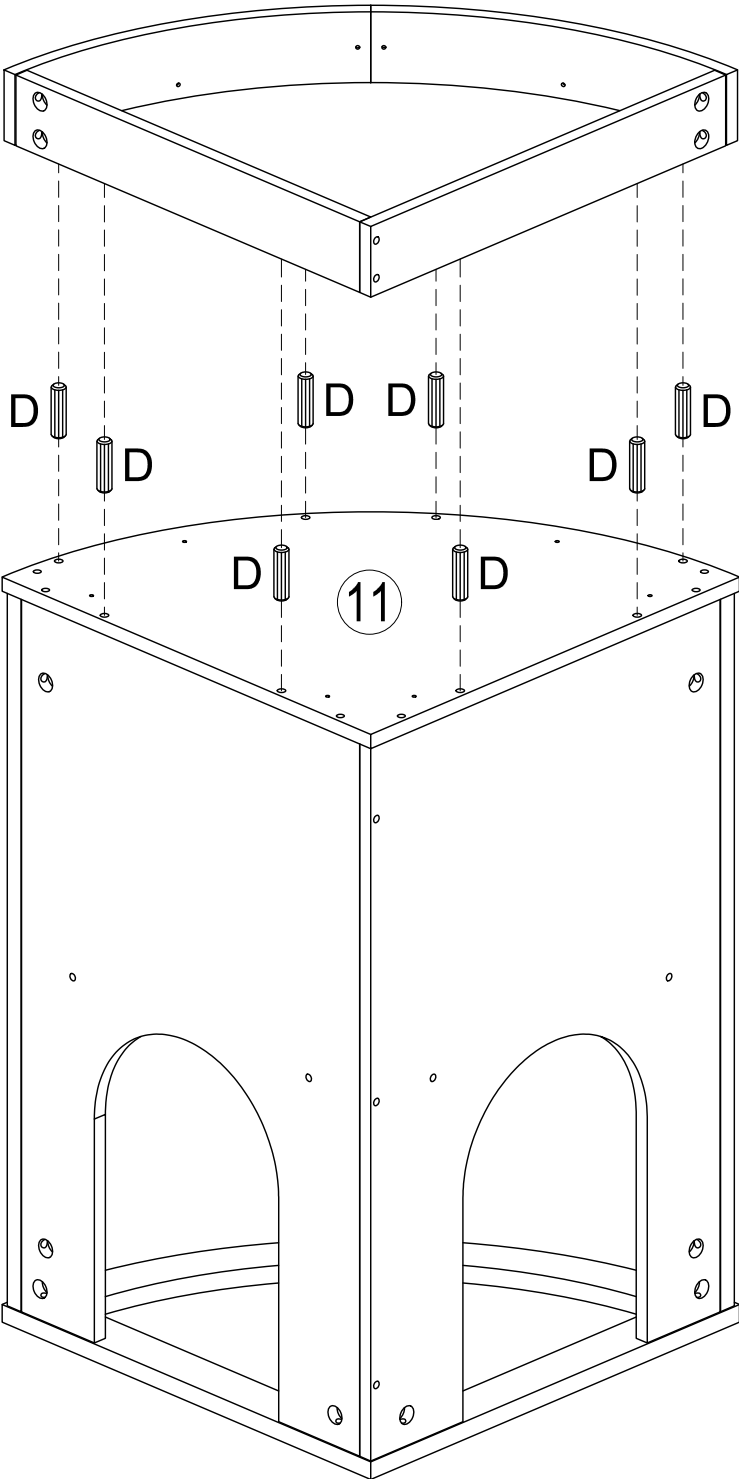


No. D
Quantity: 8 PCS
Dowel
ø6x30mm



STEP 10

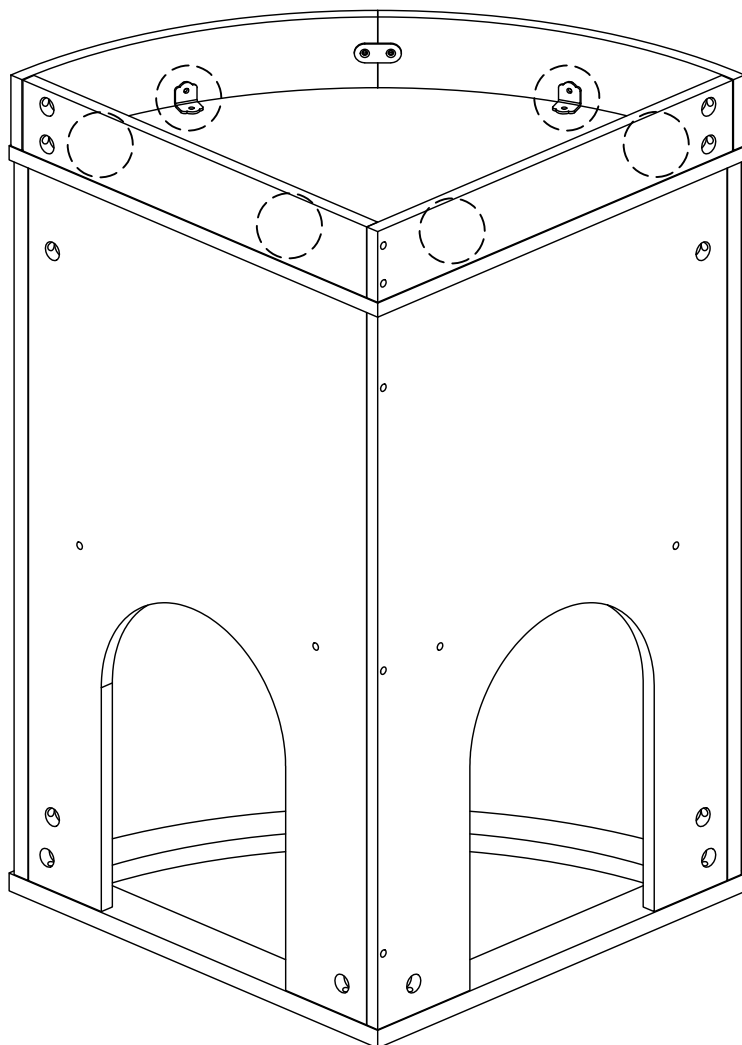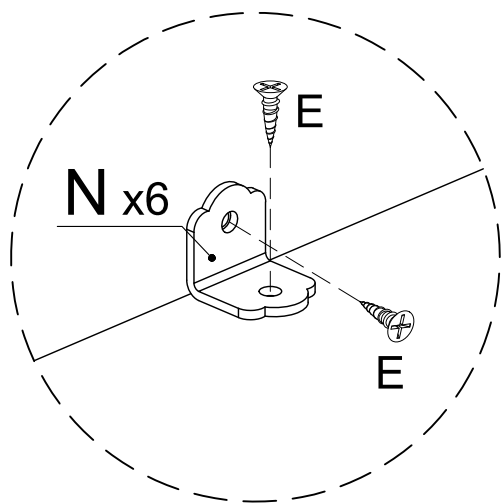


No. E
Quantity: 12 PCS
Screw
ø3.5x12mm




No. N
Quantity: 6 PCS
Iron Plate
19x19*18mm




STEP 11

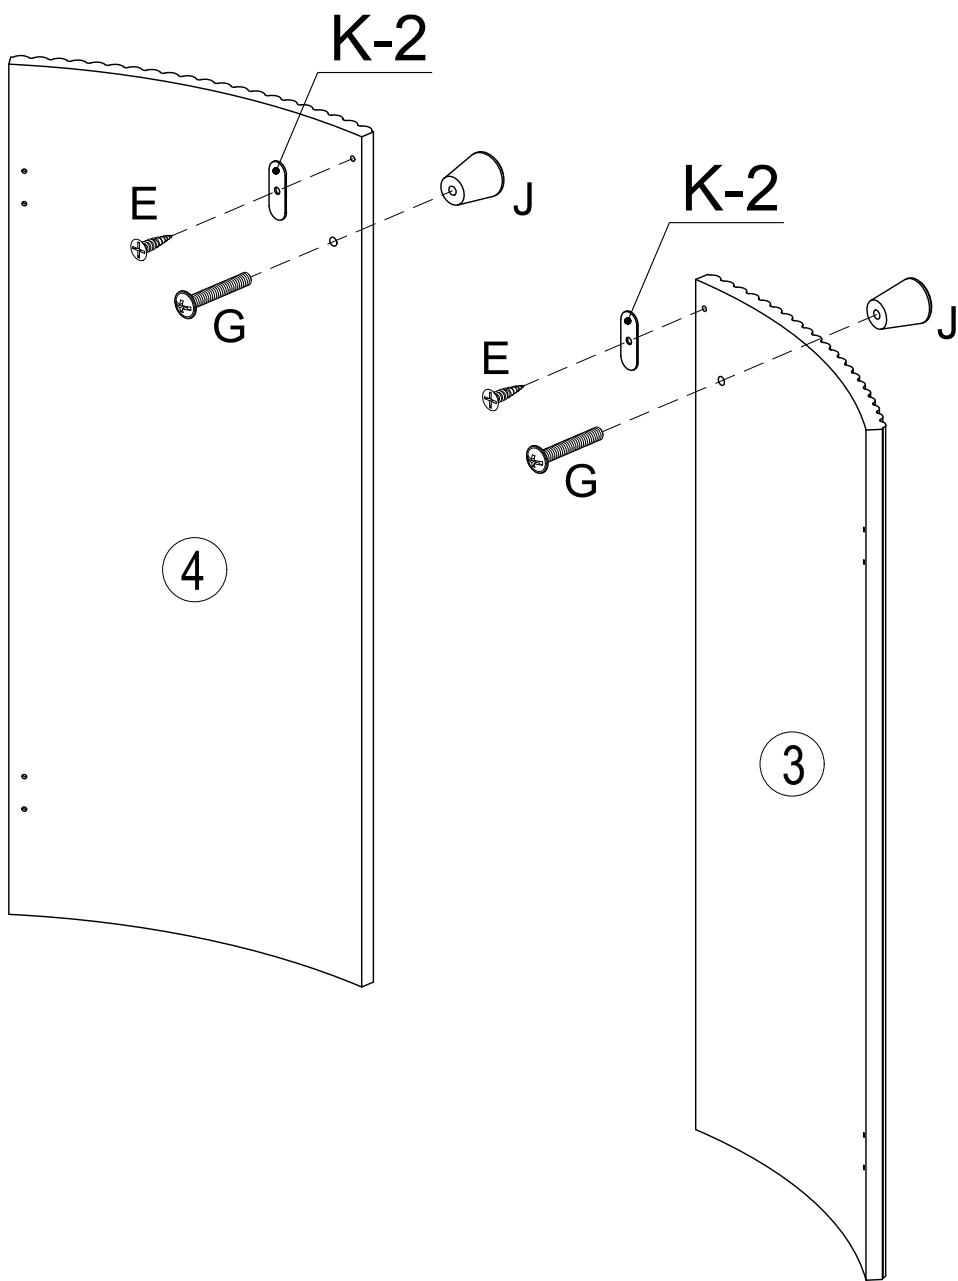


No. E
Quantity: 2 PCS
Screw
ø3.5x12mm




No. G
Quantity: 2 PCS
Bolt
M4x20mm




No. J
Quantity: 2 PCS
Handle
ø20xø13x23mm




No. K
Quantity: 1 PCS
Magnet
60x16*16mm





STEP 12

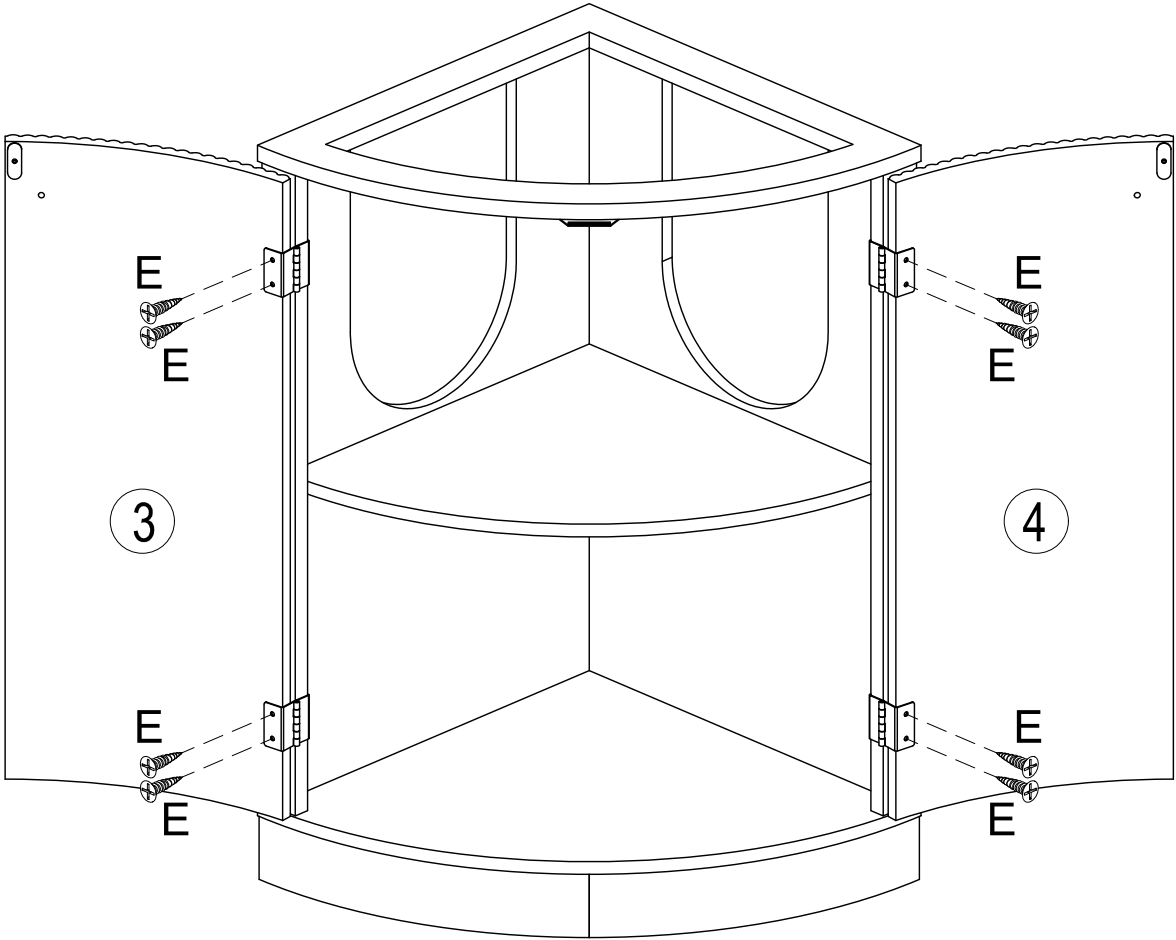


No. E
Quantity: 8 PCS
Screw
ø3.5x12mm



STEP 13

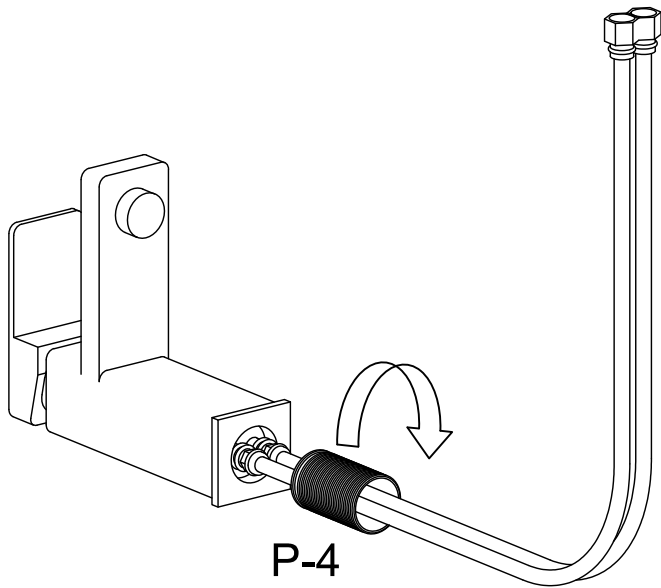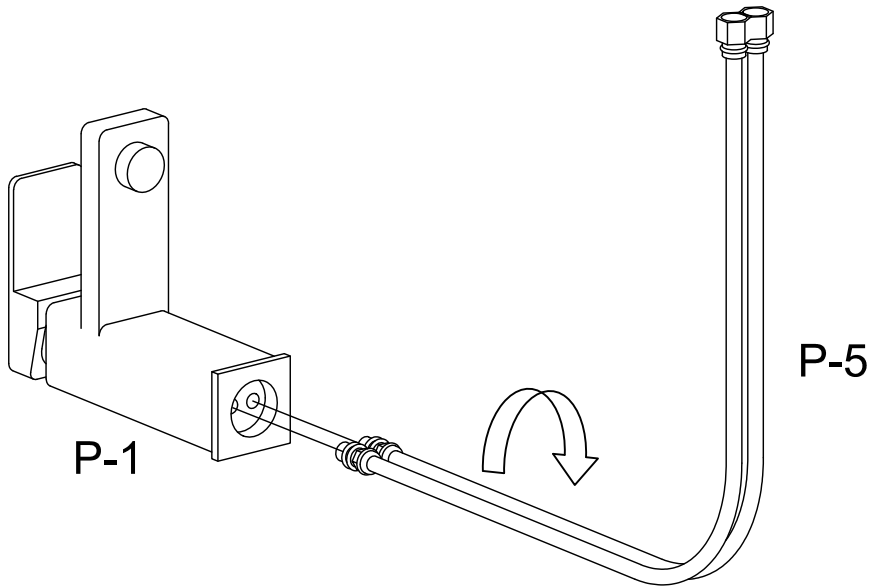


No. P-1
Faucet

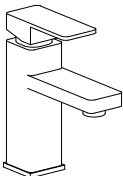


No. P-4



No. P-5
Hot & Cold Water
Supply Lines

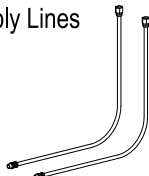

STEP 14

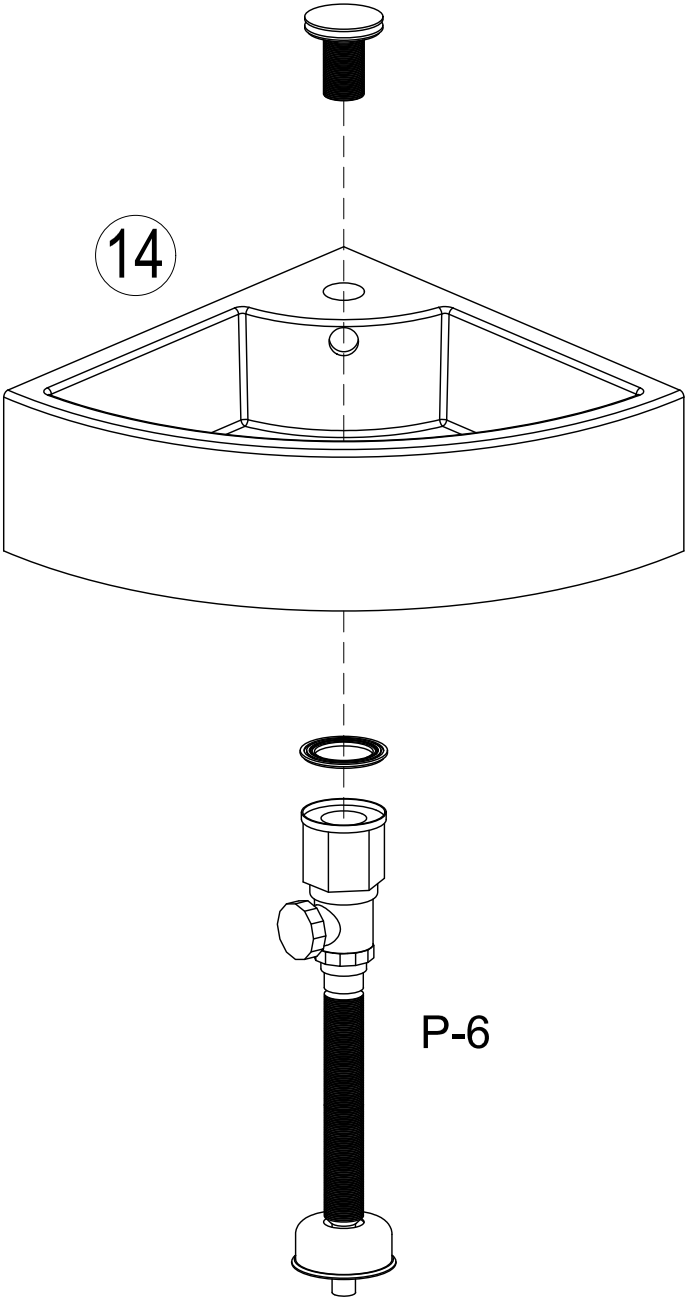


No. P-6
Drain Stopper &
Tailpiece




STEP 15


Tear the 3M adhesive paper during installation
The cabinet should be sealed with glass glass and basin.

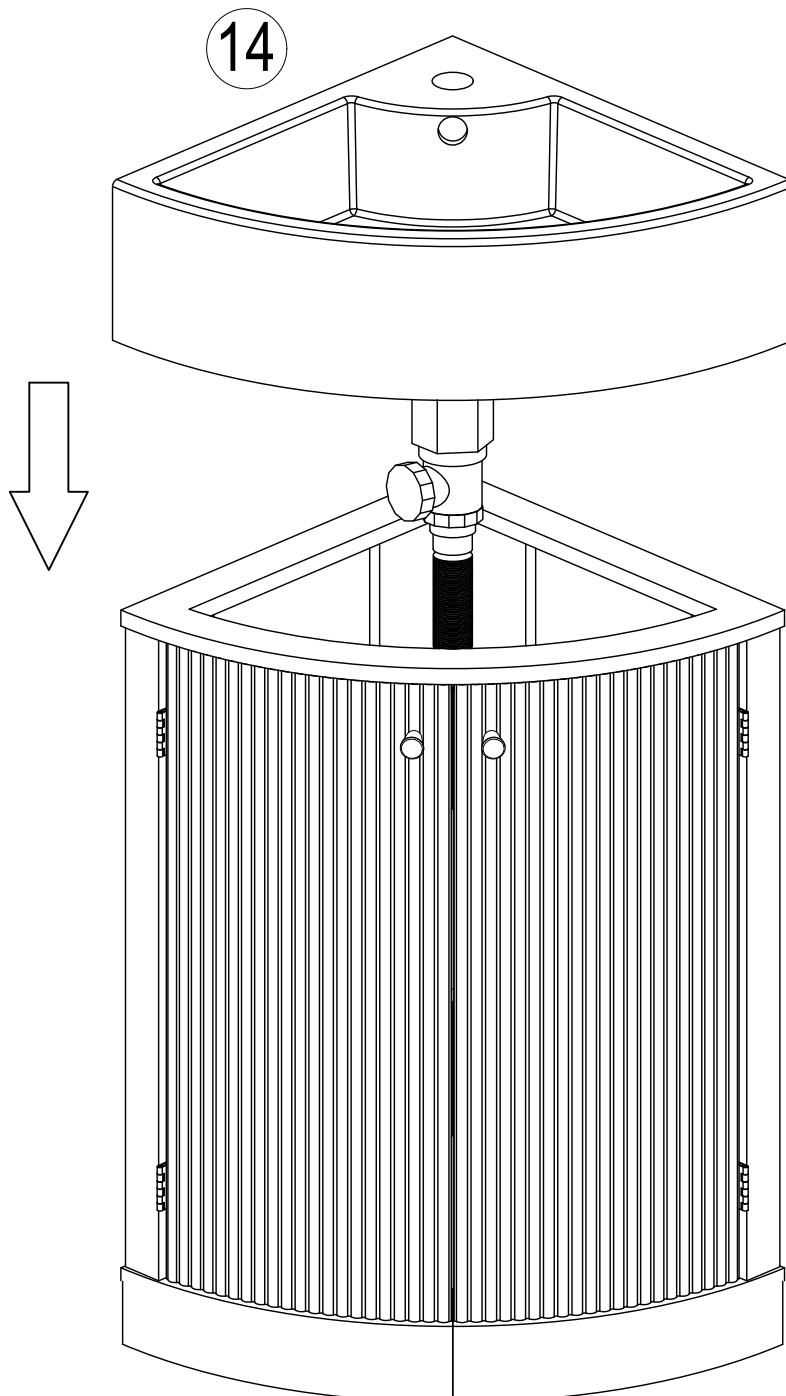

STEP 16

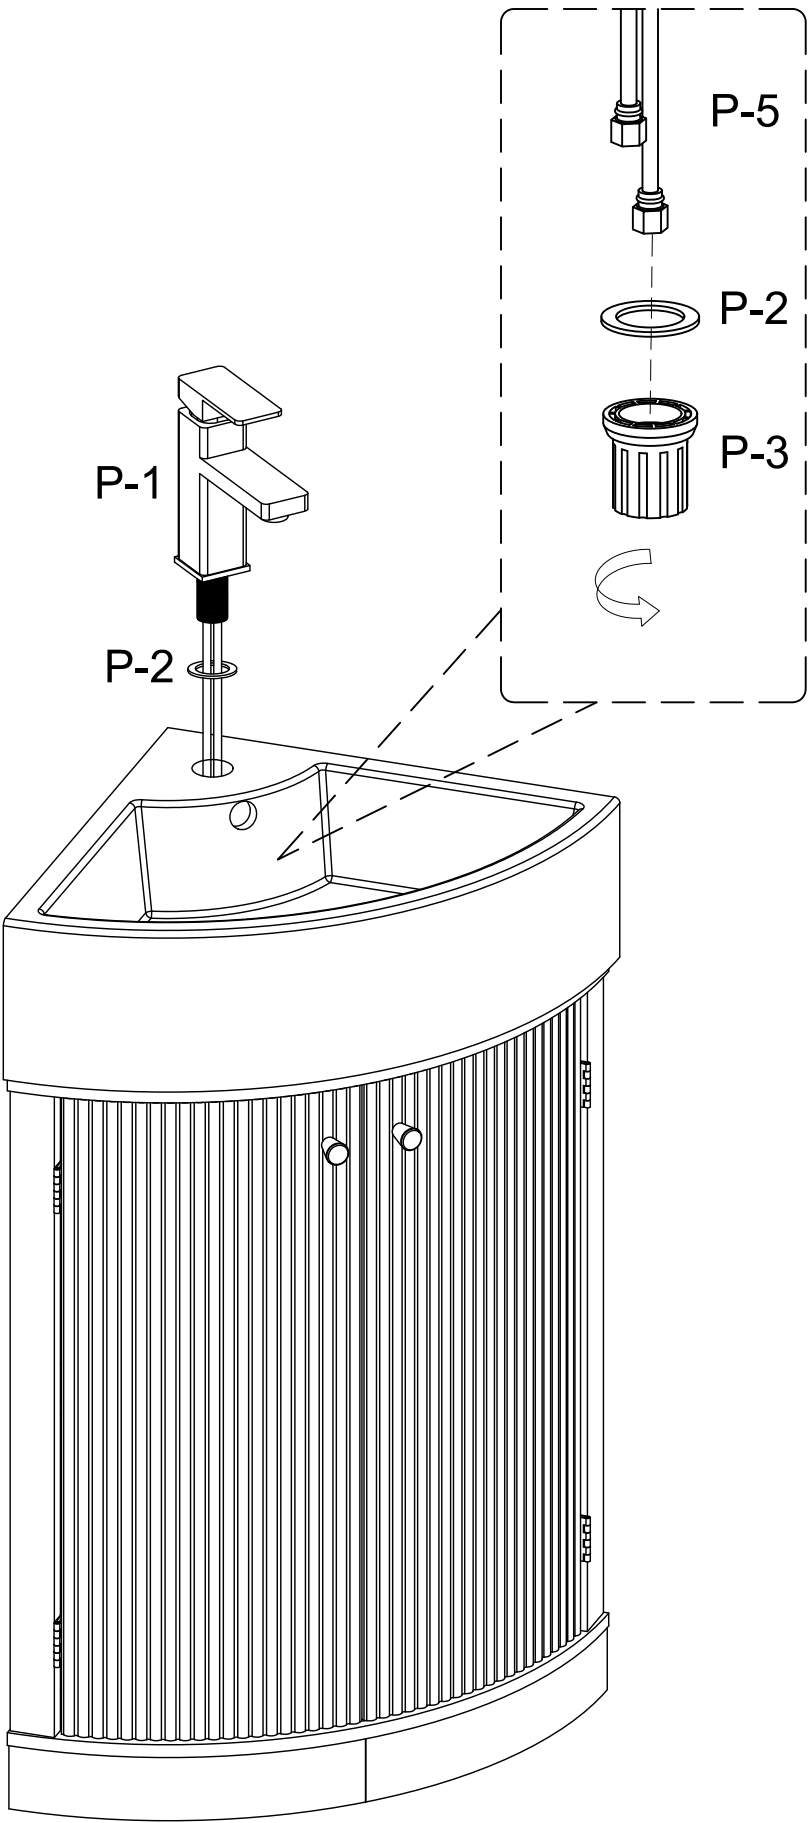




No. P-2




No. P-3




STEP 17

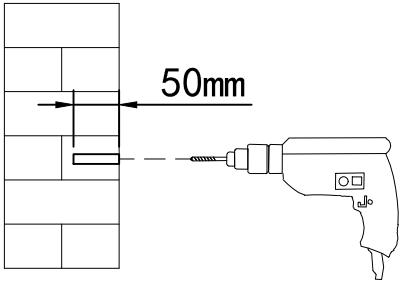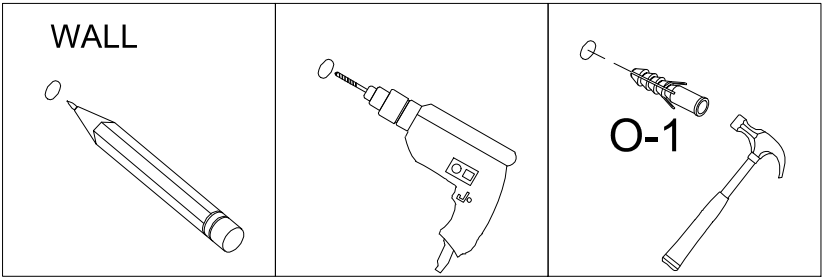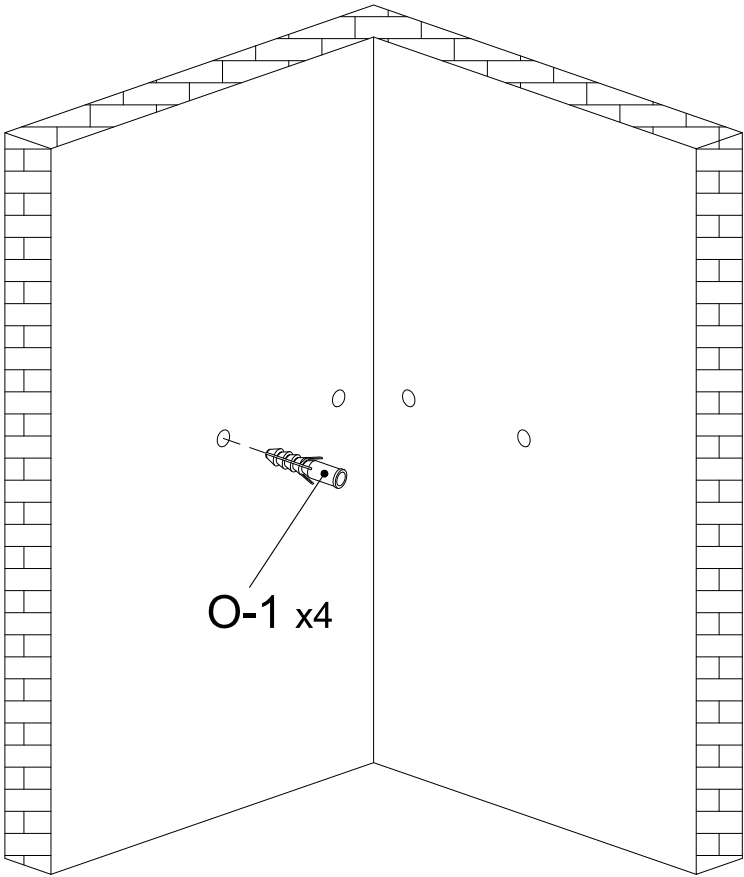

No. O-1
Quantity: 4 PCS
plastic plug
Ø8*40



STEP 18

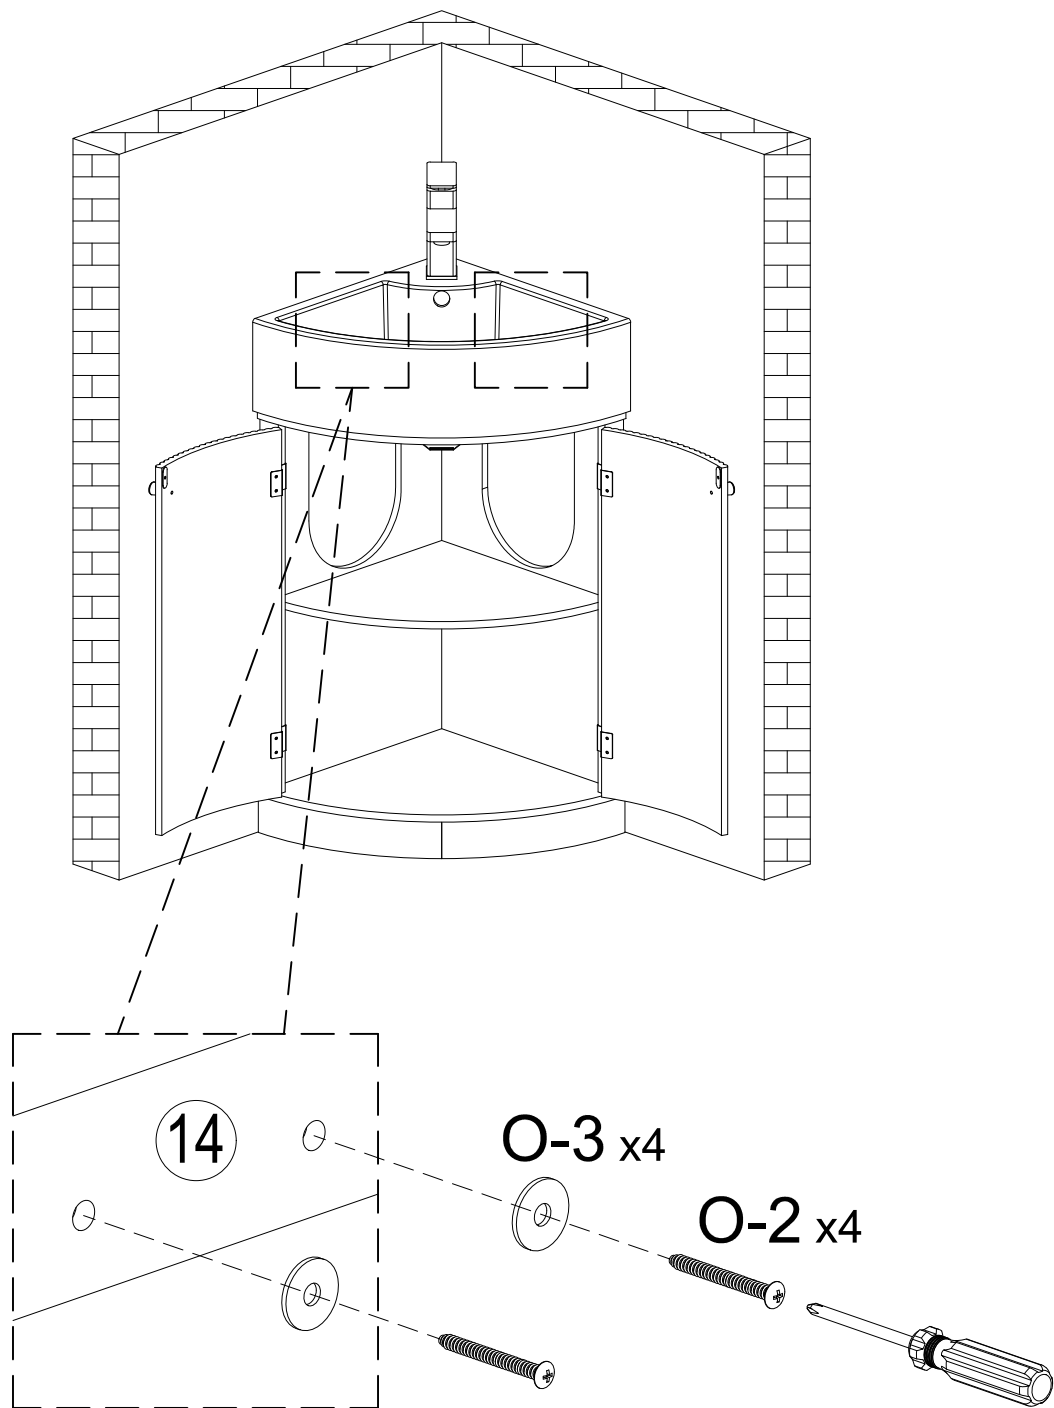

No. O-2 / O-3

Quantity: 4 PCS

screw : Ø4*55

Ø19*Ø6*1.5

